




Bookcase Storage Bed Frame Assembly Instructions

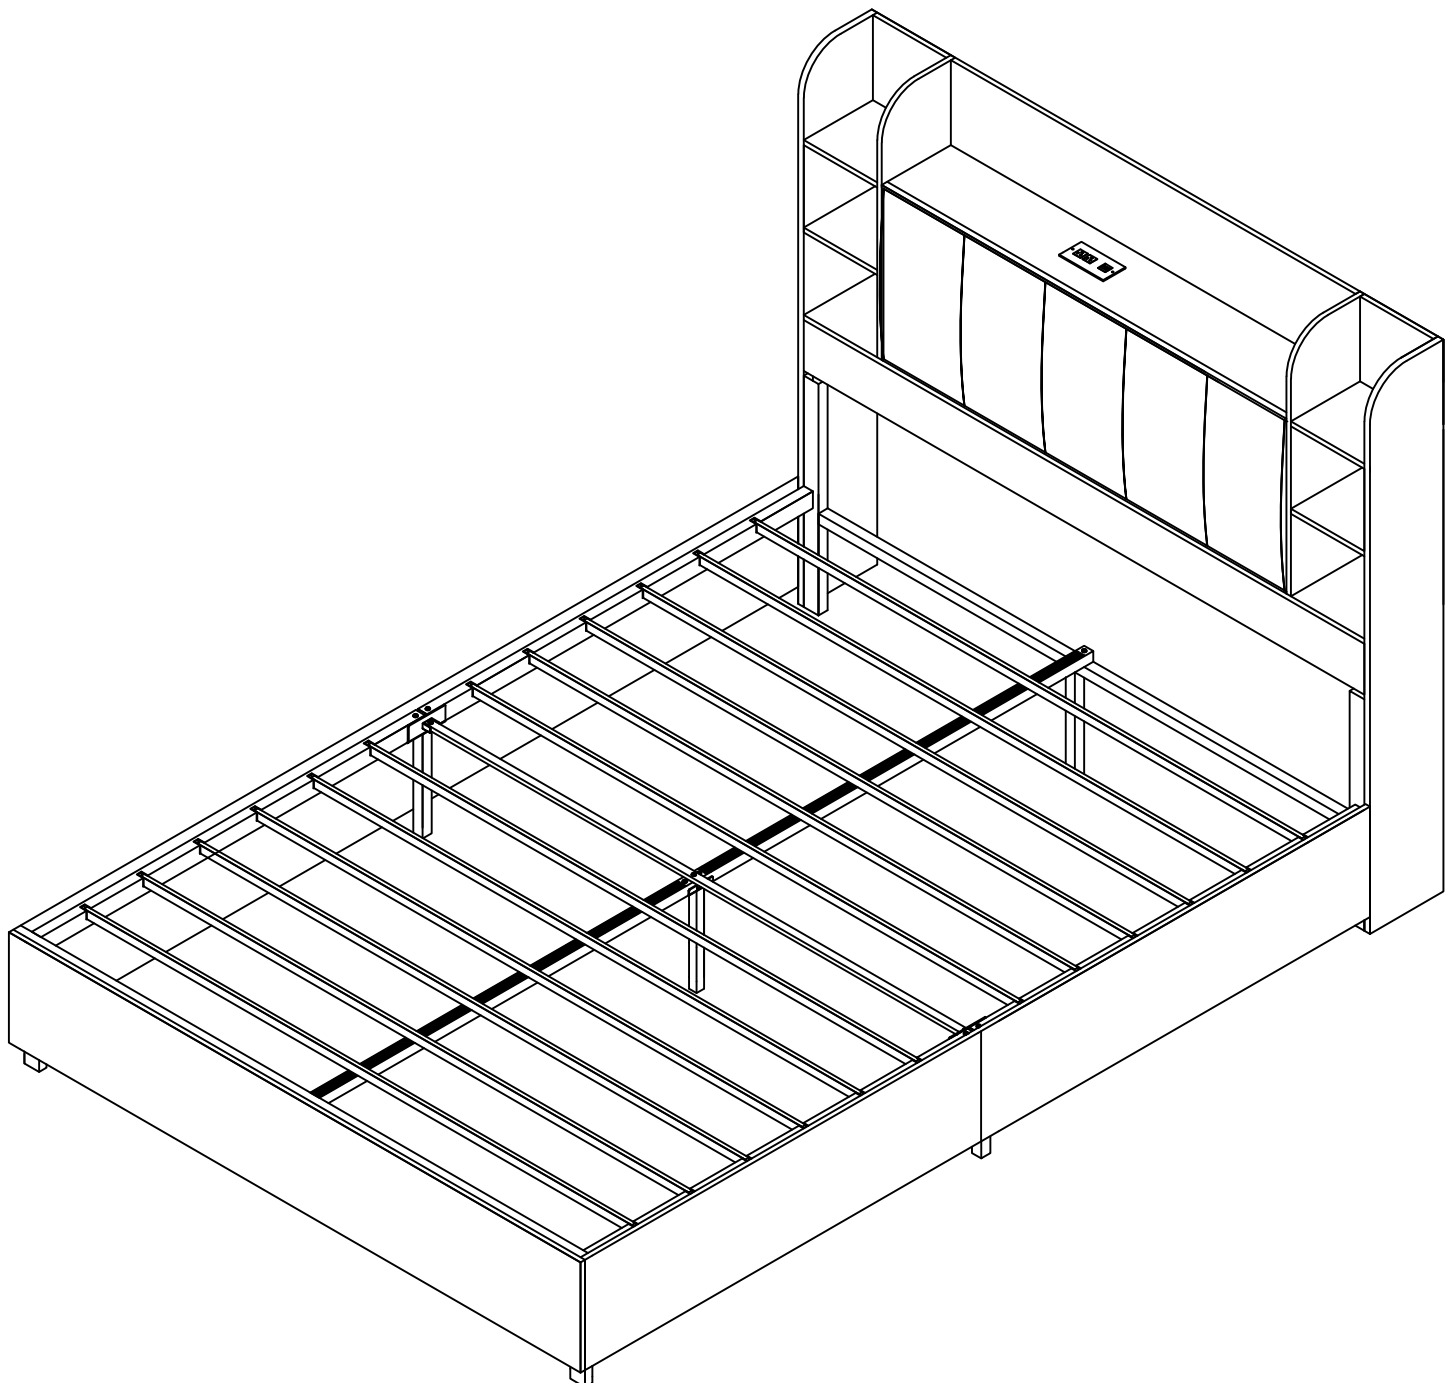

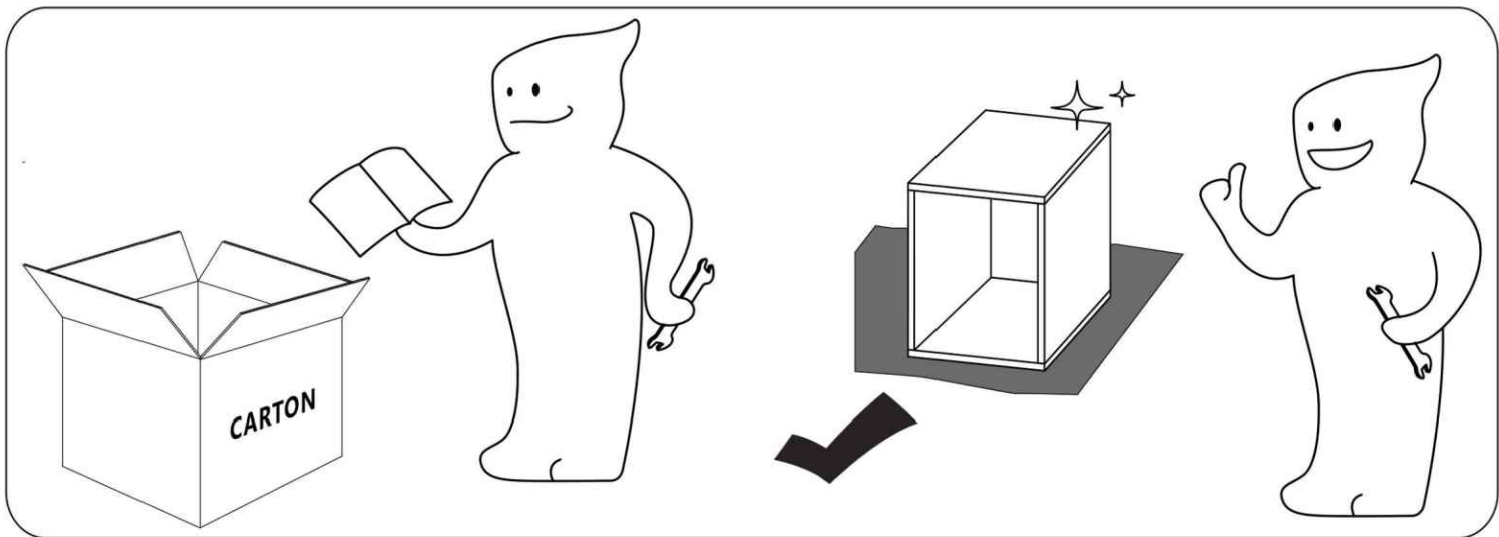


Please follow the instruction manuals and use a pad to protect the product during your assembly.

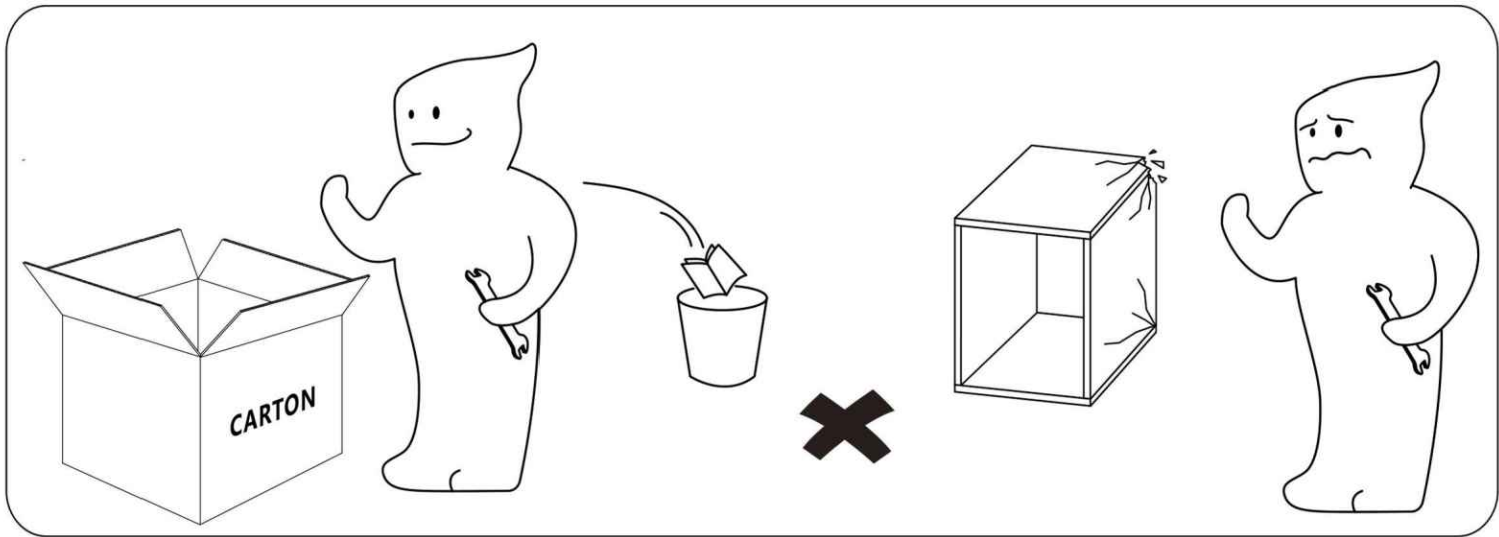

Note:

- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**

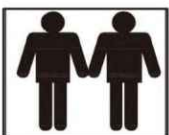

For easier and better assembly, **2** or more adults are required.



Safety and Care Advice

Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage/
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting .

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

- Regularly check and ensure that all bolts and fittings are tightened properly.


WARNING

In order to help prevent overturning- please follow these instructions







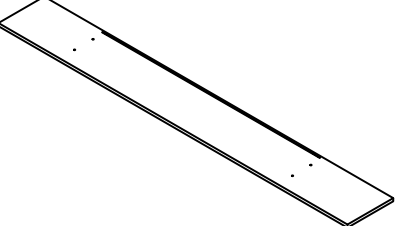
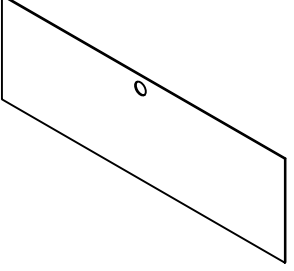
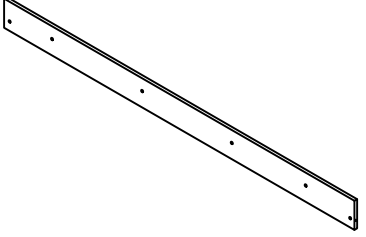


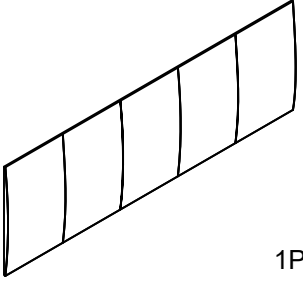


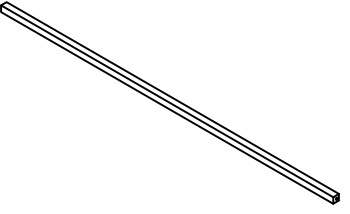
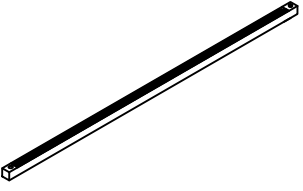
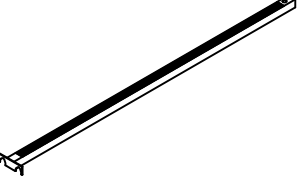
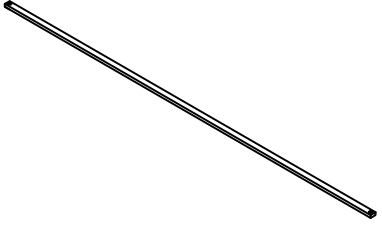
To help prevent product toppling over please follow the steps below:

- Must use the anti tip strap or wall fixing method provided (whichever applies).
- Do not allow children to climb or hang on the furniture.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose
- Installation shall be carried out exactly according to the instructions-otherwise a safety risk can occur
- In order to prevent falling down this product must be used with the wall attachment device provided














please note that only the wall attachment device is provided. You will need to supply wall plugs and screws applicable for your wall type.

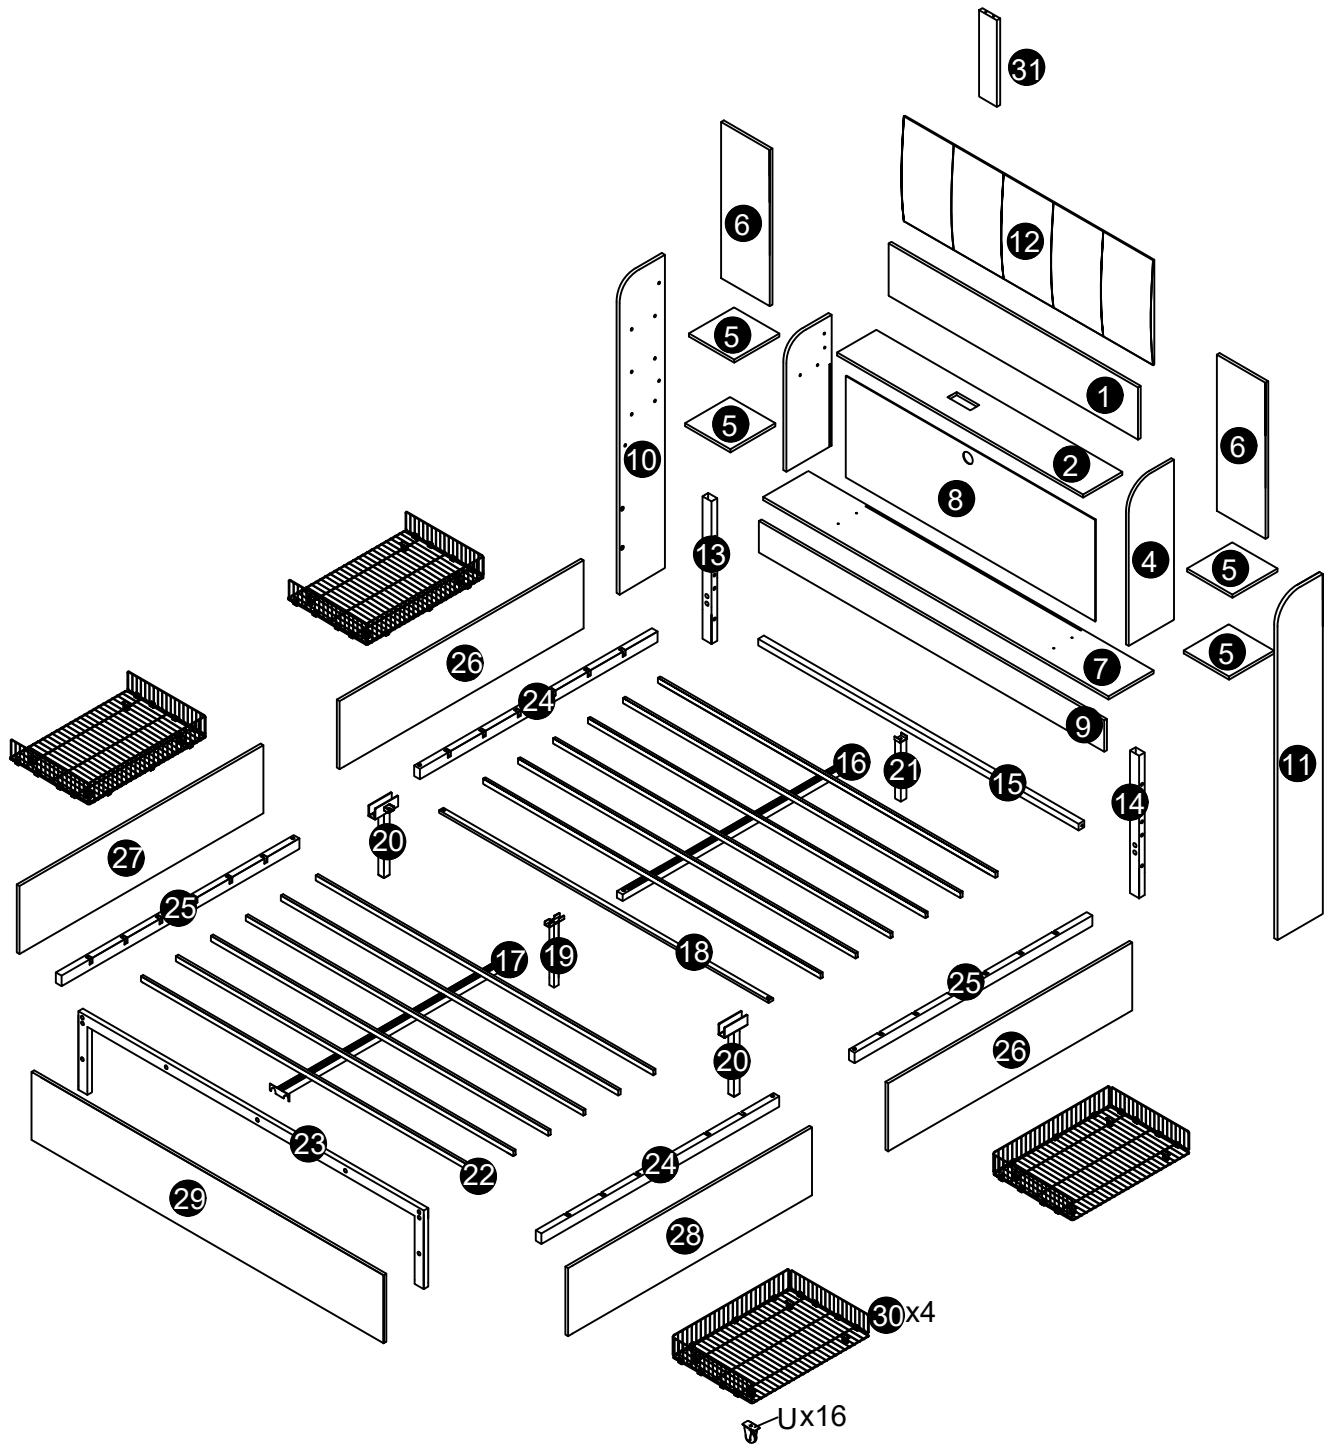


ASSEMBLY INSTRUCTIONS

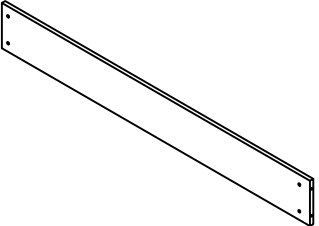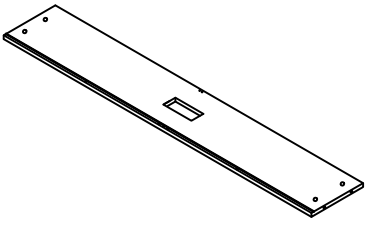 <p>1</p> <p>1PCS</p>	 <p>2</p> <p>1PCS</p>	 <p>3</p> <p>1PCS</p>
 <p>4</p> <p>1PCS</p>	 <p>5</p> <p>4PCS</p>	 <p>6</p> <p>2PCS</p>
 <p>7</p> <p>1PCS</p>	 <p>8</p> <p>1PCS</p>	 <p>9</p> <p>1PCS</p>
 <p>10</p> <p>1PCS</p>	 <p>11</p> <p>1PCS</p>	 <p>12</p> <p>1PCS</p>
 <p>13</p> <p>1PCS</p>	 <p>14</p> <p>1PCS</p>	 <p>15</p> <p>1PCS</p>
 <p>16</p> <p>1PCS</p>	 <p>17</p> <p>1PCS</p>	 <p>18</p> <p>1PCS</p>

ASSEMBLY INSTRUCTIONS

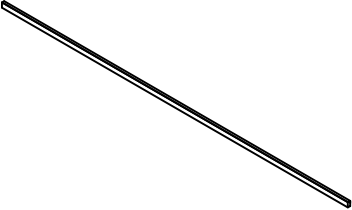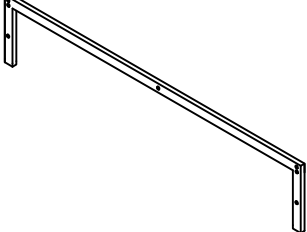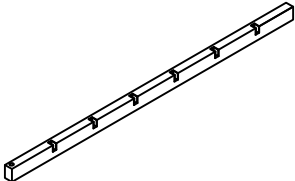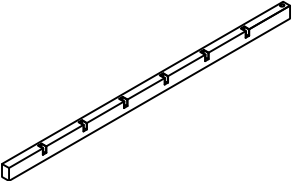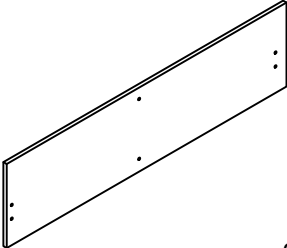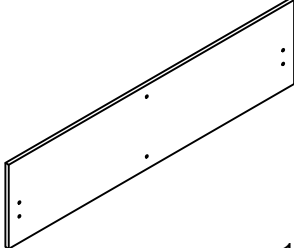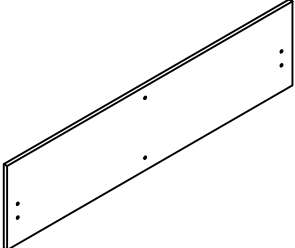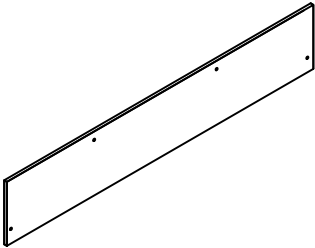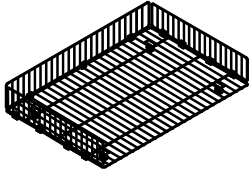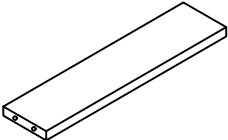

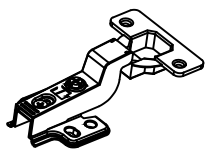











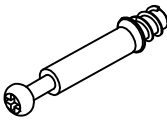

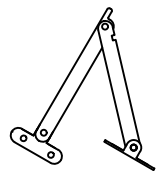



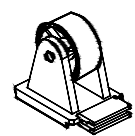
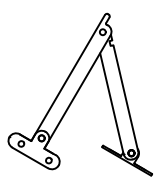
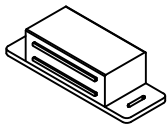

 <p>19</p> <p>1PCS</p>	 <p>20</p> <p>2PCS</p>	 <p>21</p> <p>1PCS</p>
 <p>22</p> <p>12PCS</p>	 <p>23</p> <p>1PCS</p>	 <p>24</p> <p>2PCS</p>
 <p>25</p> <p>2PCS</p>	 <p>26</p> <p>2PCS</p>	 <p>27</p> <p>1PCS</p>
 <p>28</p> <p>1PCS</p>	 <p>29</p> <p>1PCS</p>	 <p>30</p> <p>4PCS</p>
 <p>31</p> <p>1PCS</p>		

Ruler-Use this ruler to help correctly identify the screws.





The length of the screw is measured from the rod part excluding the screw cap (30mm screw shown).

ASSEMBLY INSTRUCTIONS


<p>(A)</p>  <p>Ø7*40</p> <p>46PCS</p>	<p>(B)</p>  <p>1PCS</p>	<p>(C)</p>  <p>3PCS</p>
<p>(D)</p>  <p>Ø15*10</p> <p>46PCS</p>	<p>(E)</p>  <p>M8</p> <p>8PCS</p>	<p>(F)</p>  <p>1PCS</p>
<p>(G)</p>  <p>M3</p> <p>1PCS</p>	<p>(H)</p>  <p>M4</p> <p>1PCS</p>	<p>(I)</p>  <p>M5</p> <p>1PCS</p>
<p>(J)</p>  <p>M3.5*12</p> <p>28PCS</p>	<p>(K)</p>  <p>M5*40</p> <p>7PCS</p>	<p>(L)</p>  <p>M6*15</p> <p>2PCS</p>
<p>(N)</p>  <p>M8*12</p> <p>4PCS</p>	<p>(M)</p>  <p>M8*15</p> <p>20PCS</p>	<p>(O)</p>  <p>M8*30</p> <p>6PCS</p>
<p>(P)</p>  <p>M8*40</p> <p>10PCS</p>	<p>(Q)</p>  <p>M8*50</p> <p>10PCS</p>	<p>(R)</p>  <p>M8*60</p> <p>4PCS</p>
<p>(S)</p>  <p>8PCS</p>	<p>(T)</p>  <p>4PCS</p>	<p>(U)</p>  <p>16PCS</p>
<p>(V)</p>  <p>1PCS</p>	<p>(W)</p>  <p>1PCS</p>	<p>(X)</p>  <p>M3*16</p> <p>2PCS</p>

01

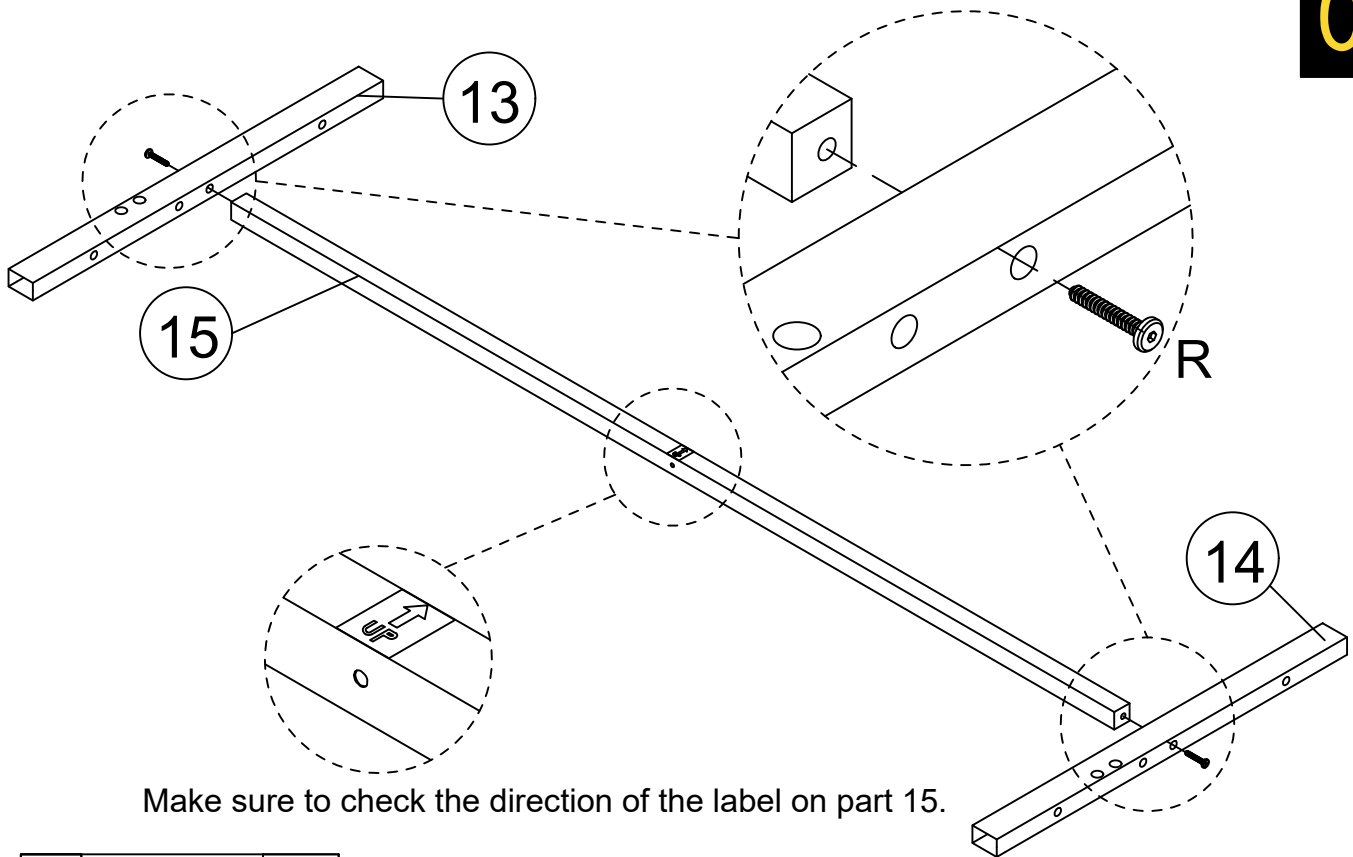


02


Ensure that parts 24 and 25 are installed exactly as shown in the diagram.

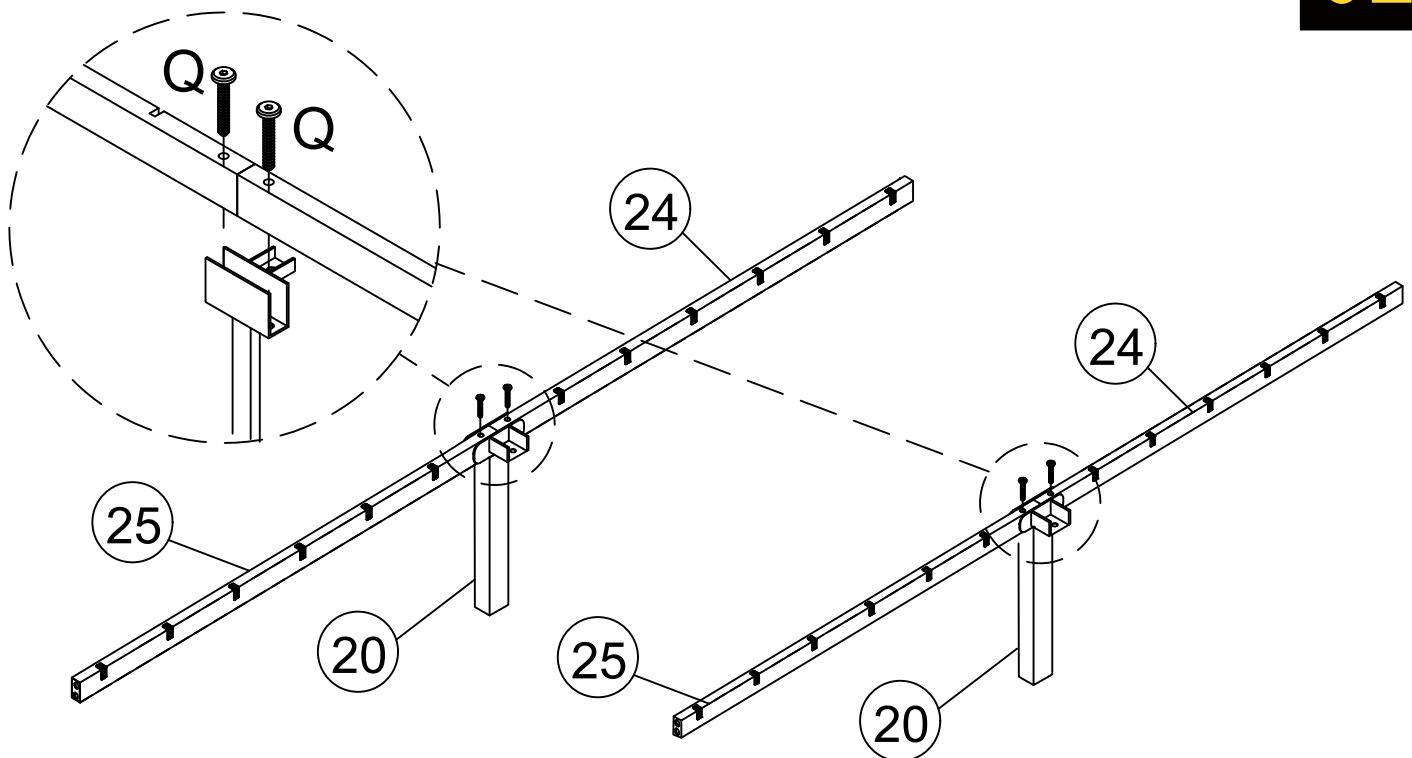


03

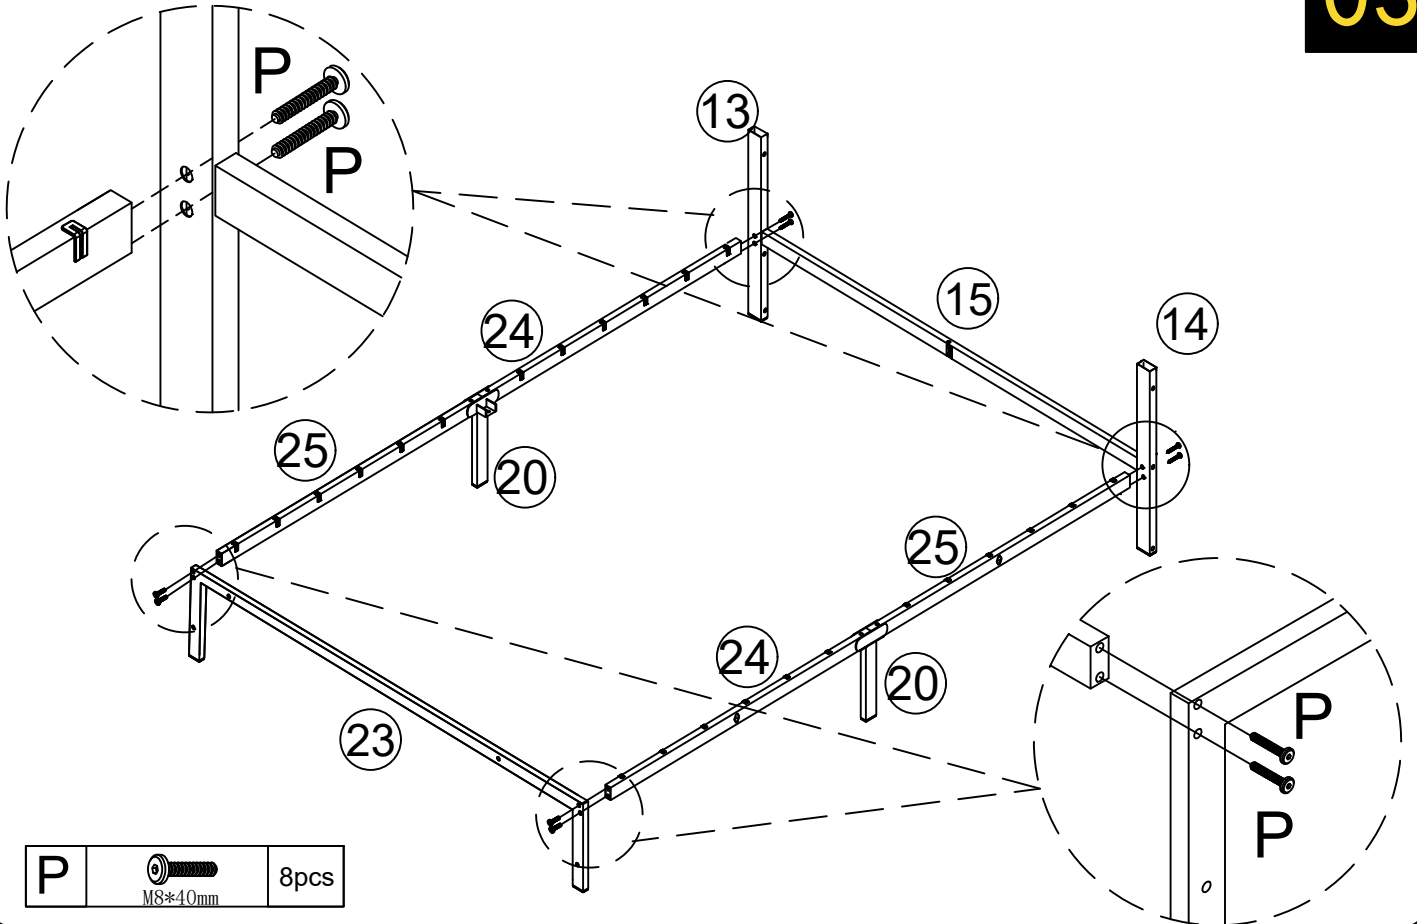

04

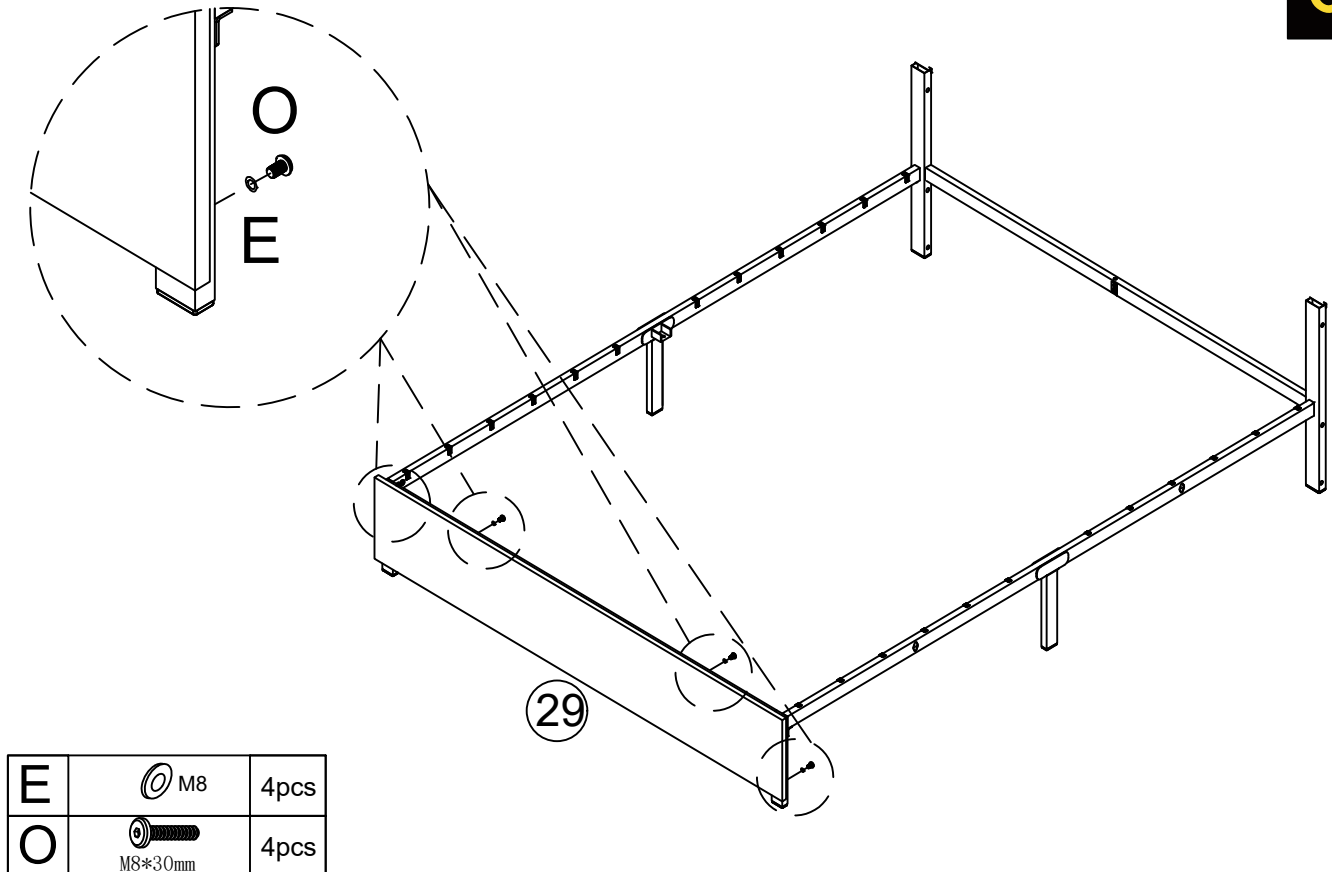


05

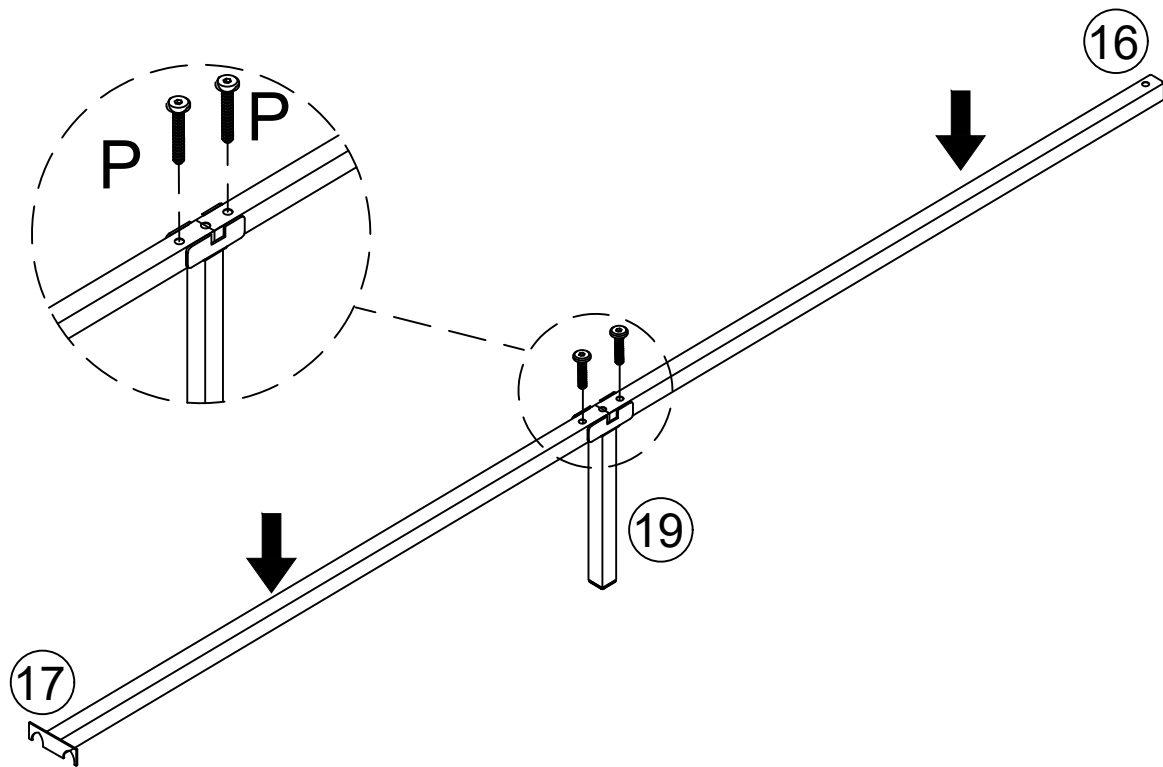



P		2pcs
	M8*40mm	


06

Do not tighten screw L at first, tighten screw L after the bracket is hung on it.

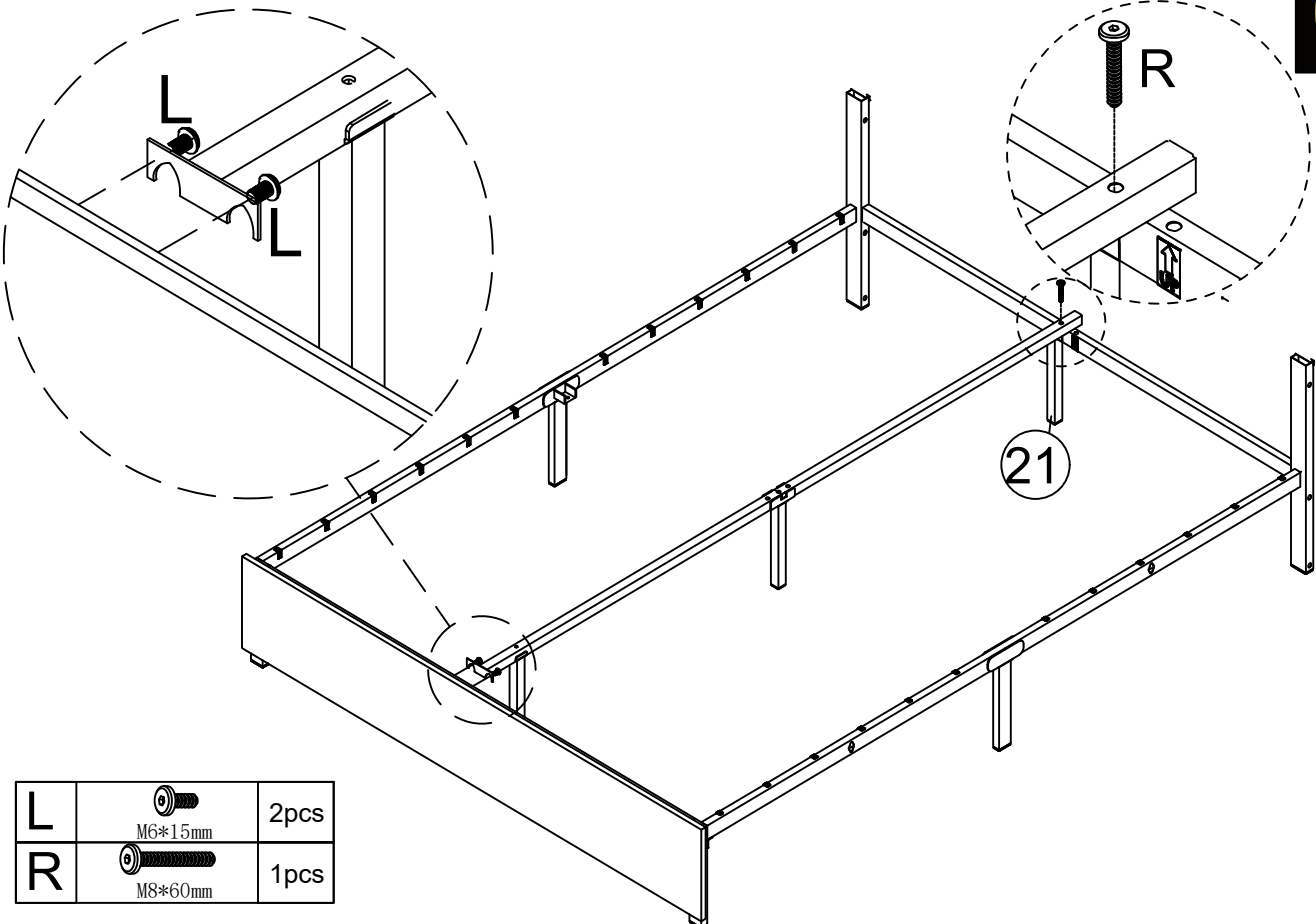


L		2pcs
	M6*15mm	
R		1pcs
	M8*60mm	


07

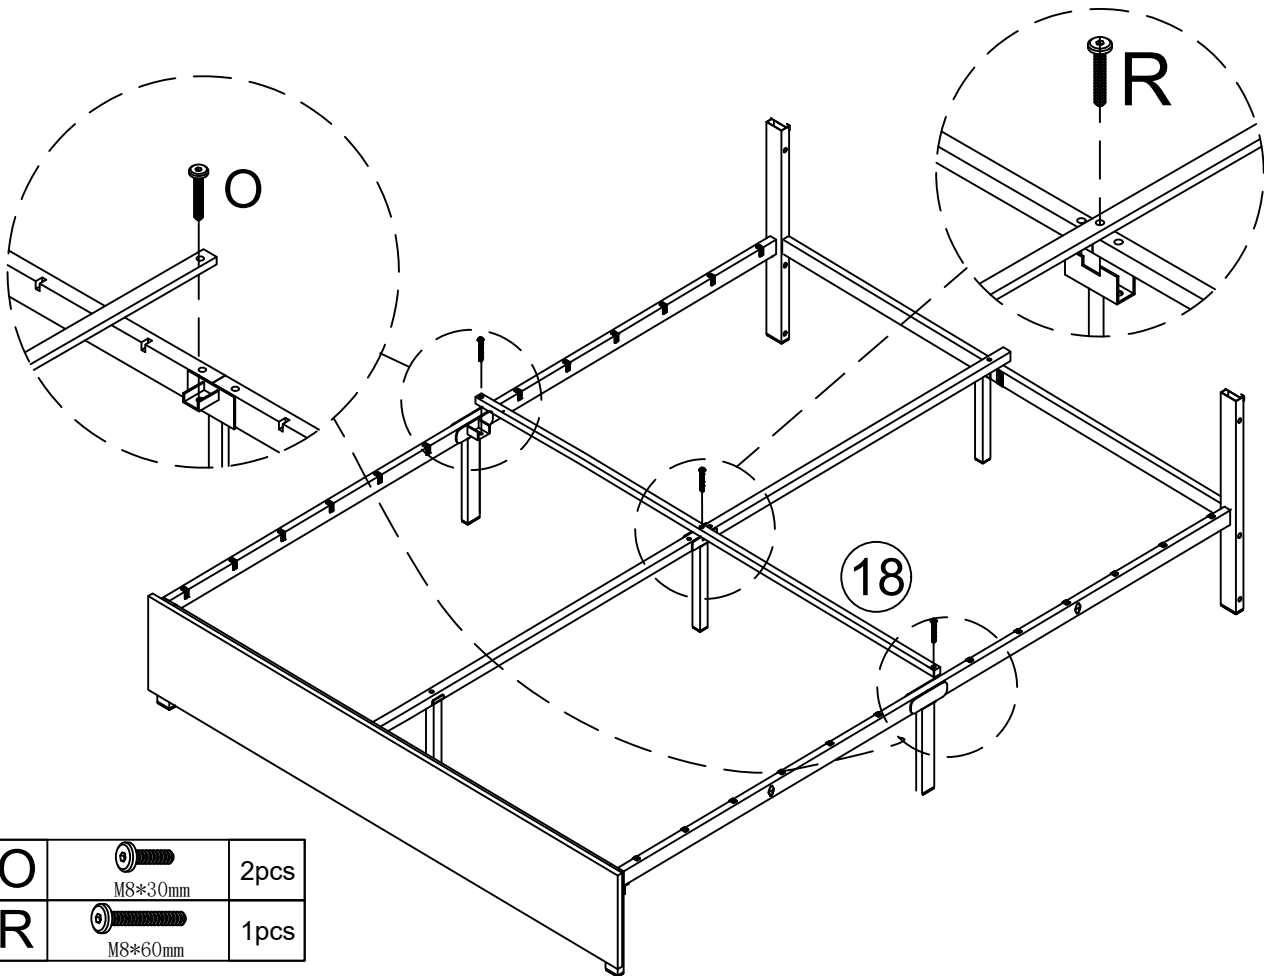


08

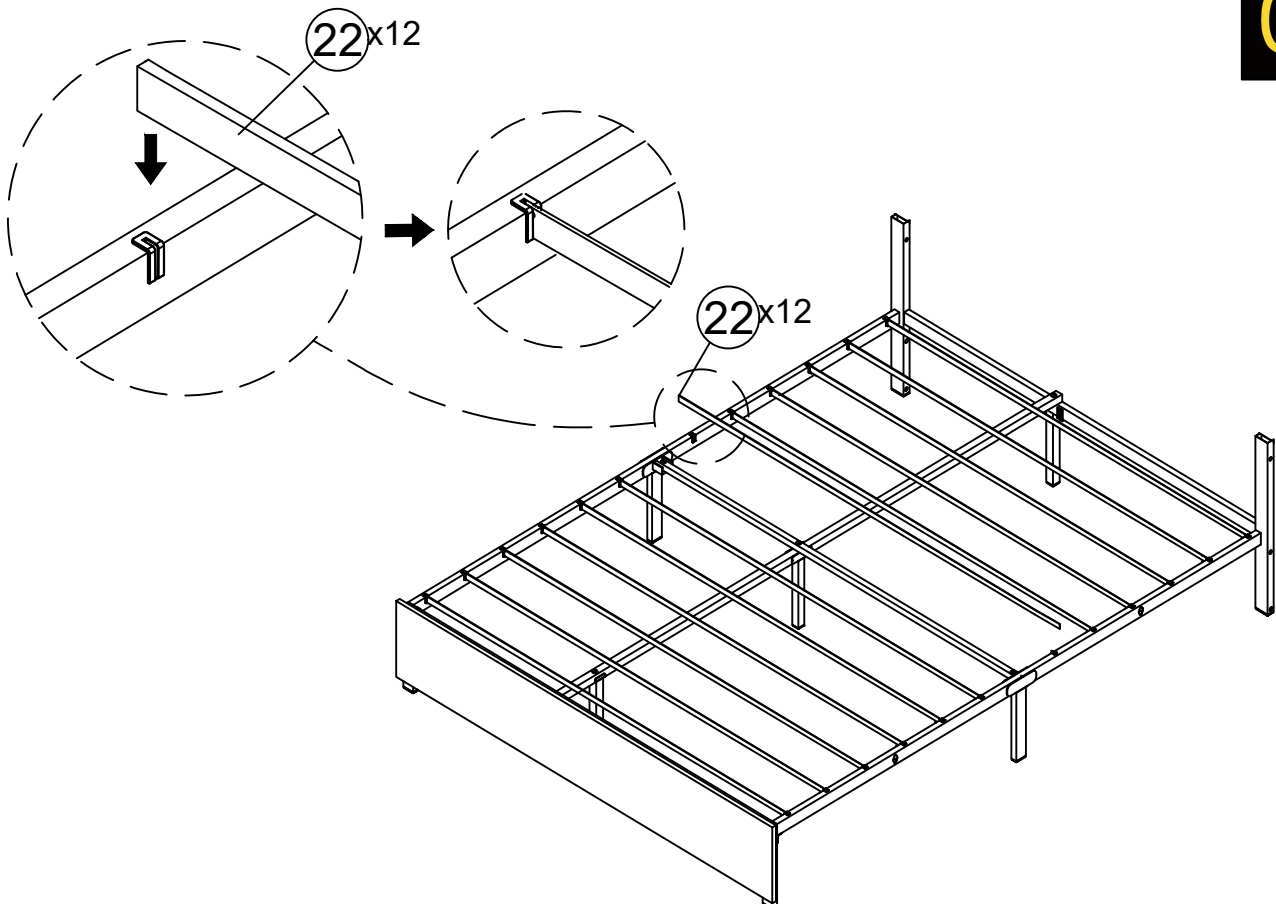

09

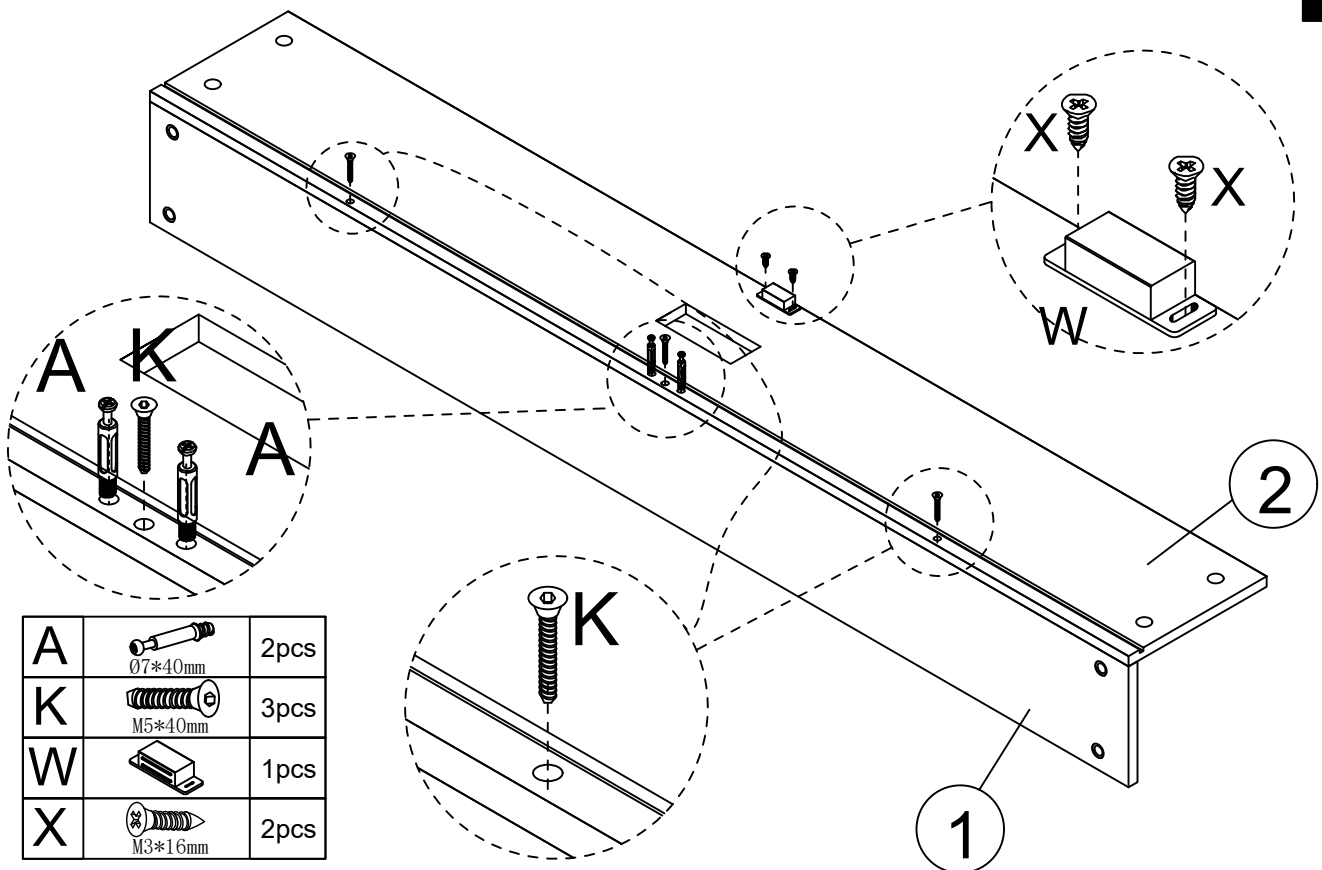



10

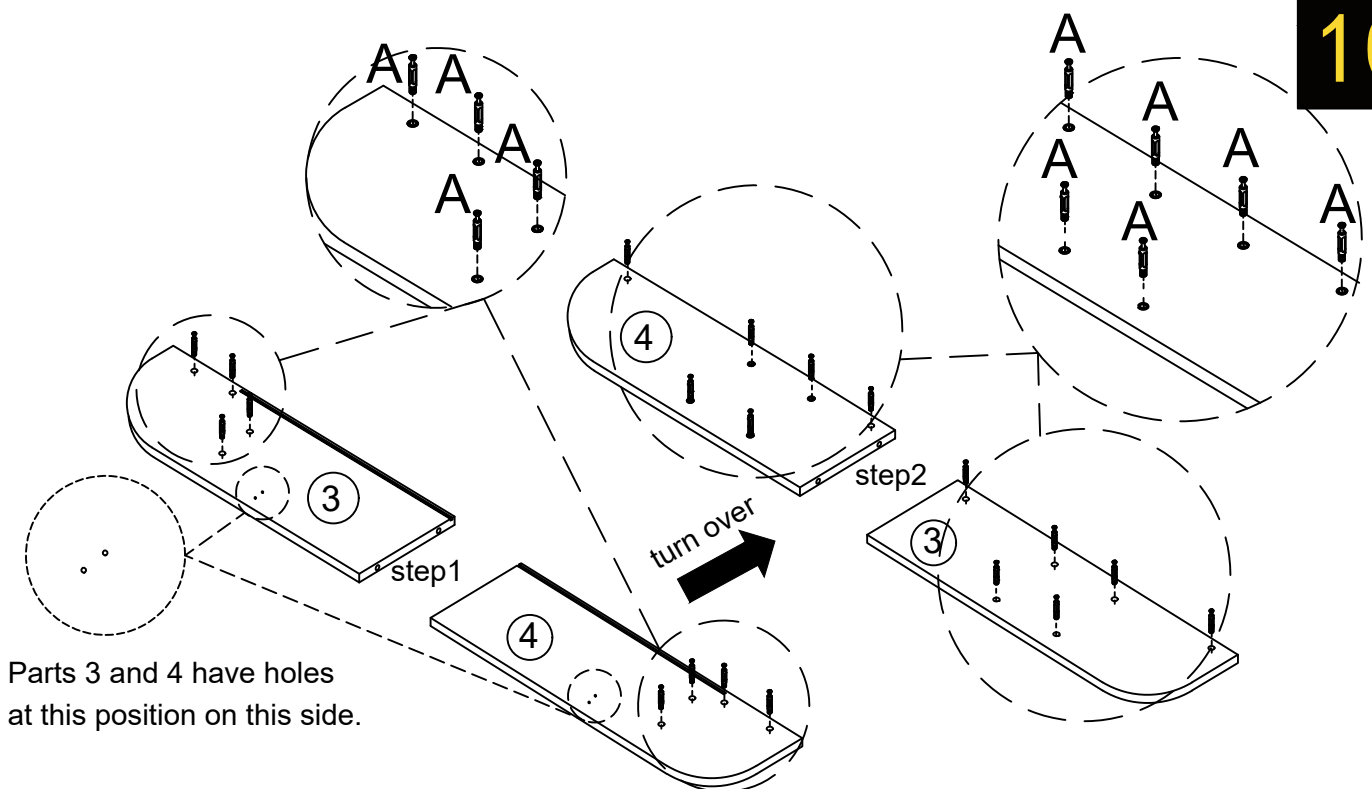


Bolts A need to be installed on both sides of parts 3 and 4.
After installing one side, please turn them over to install the other side.

A		20pcs
---	---	-------


11

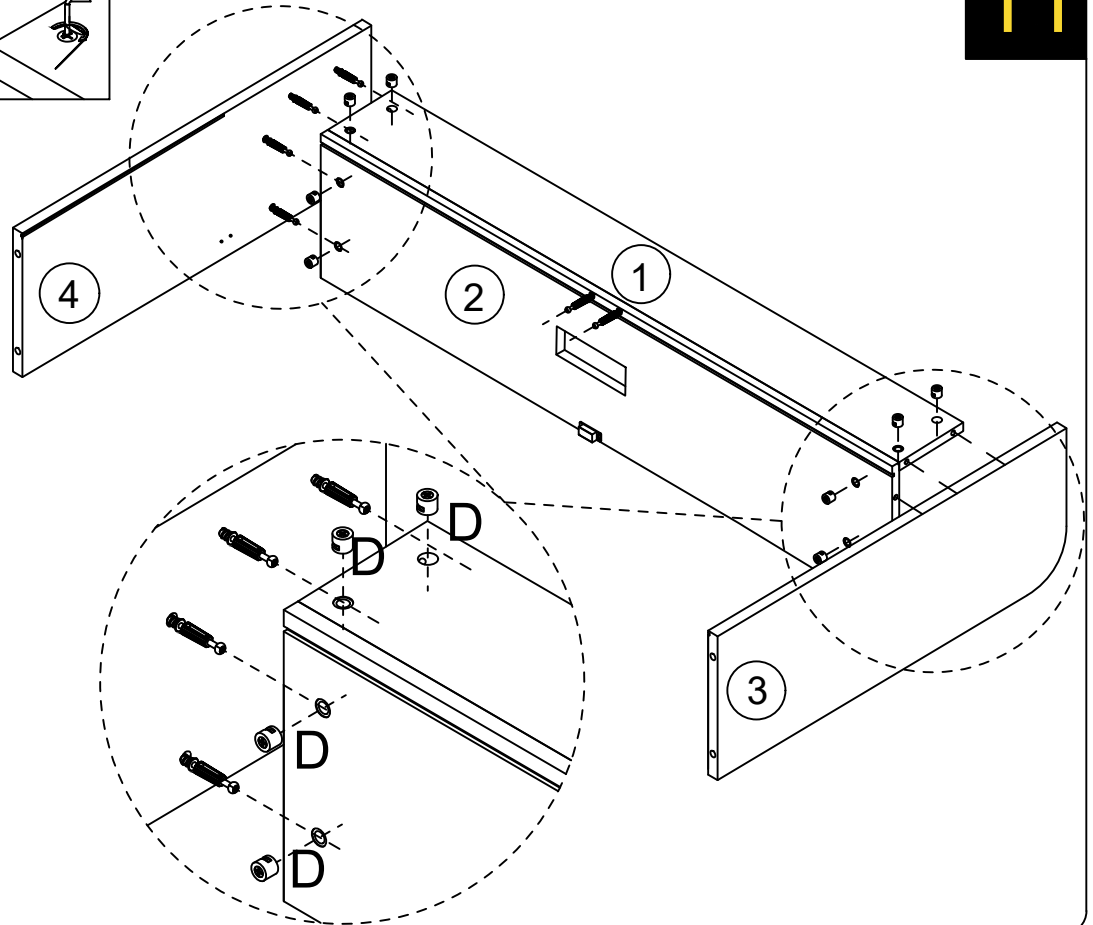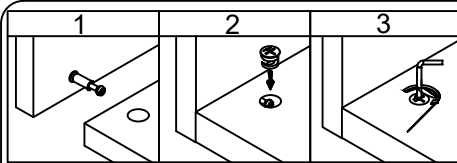


12


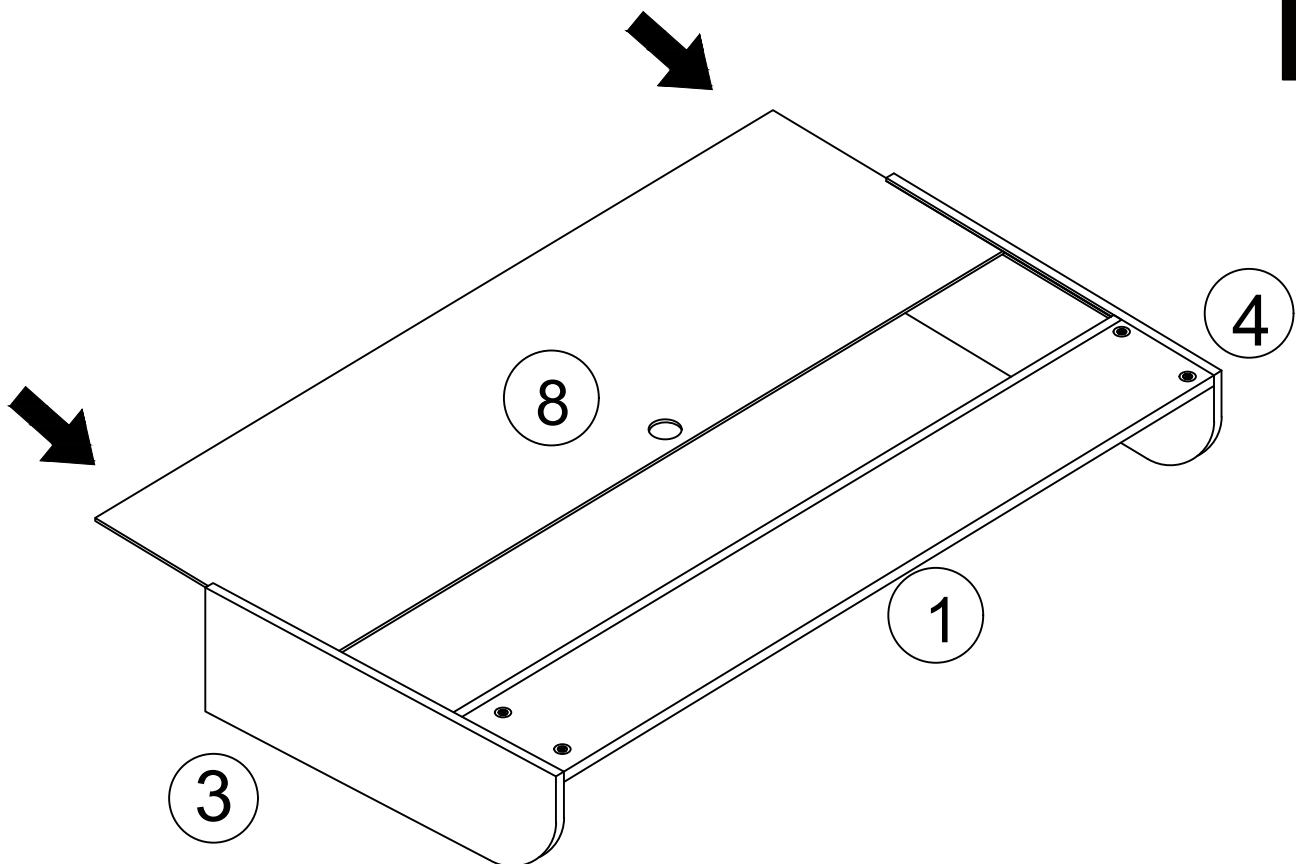




13

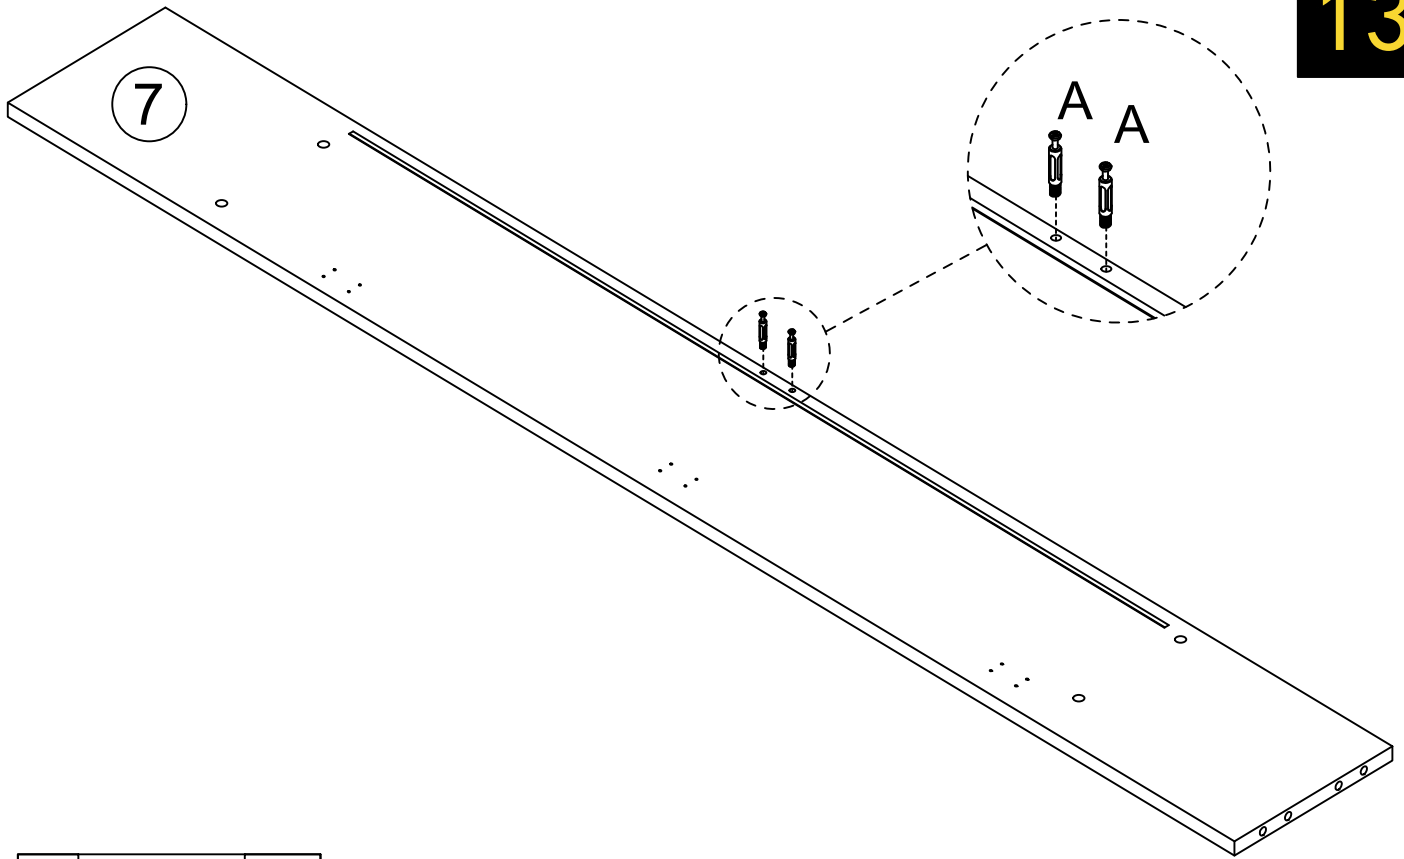


A		2pcs
Ø7*40mm		


14

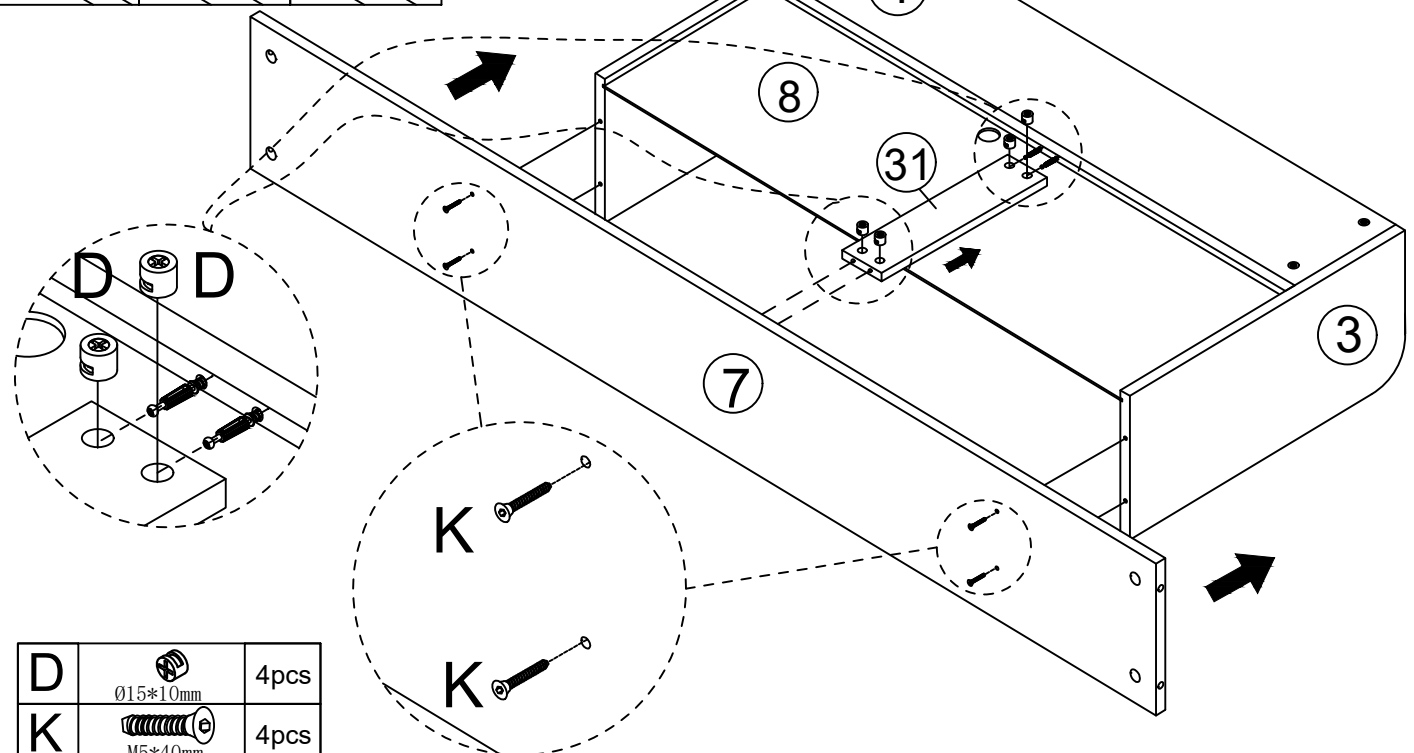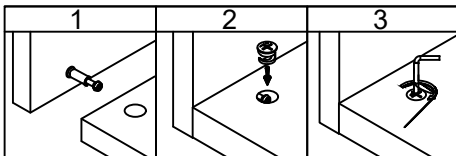



D		4pcs
Ø15*10mm		
K		4pcs
M5*40mm		

15


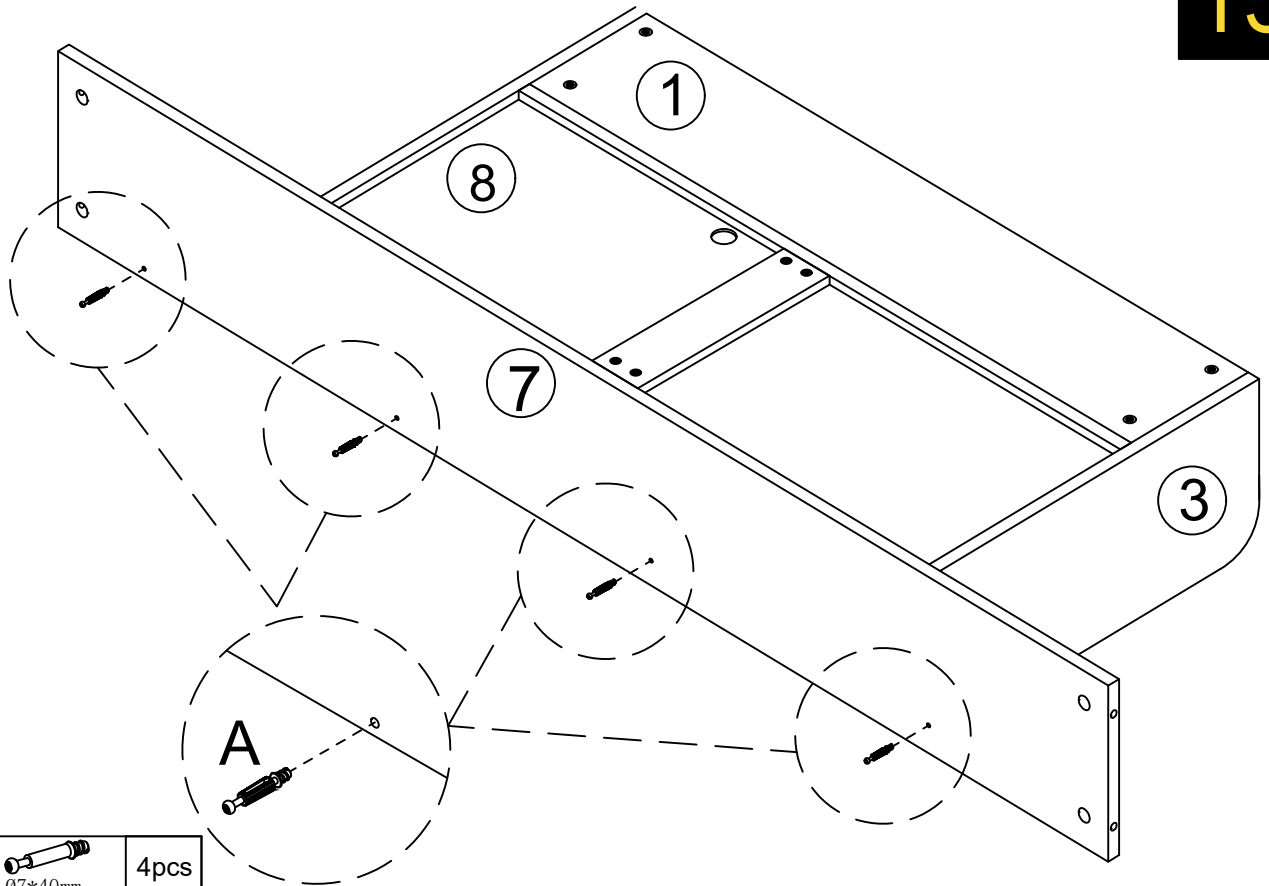


A  4pcs
Ø7*40mm


16

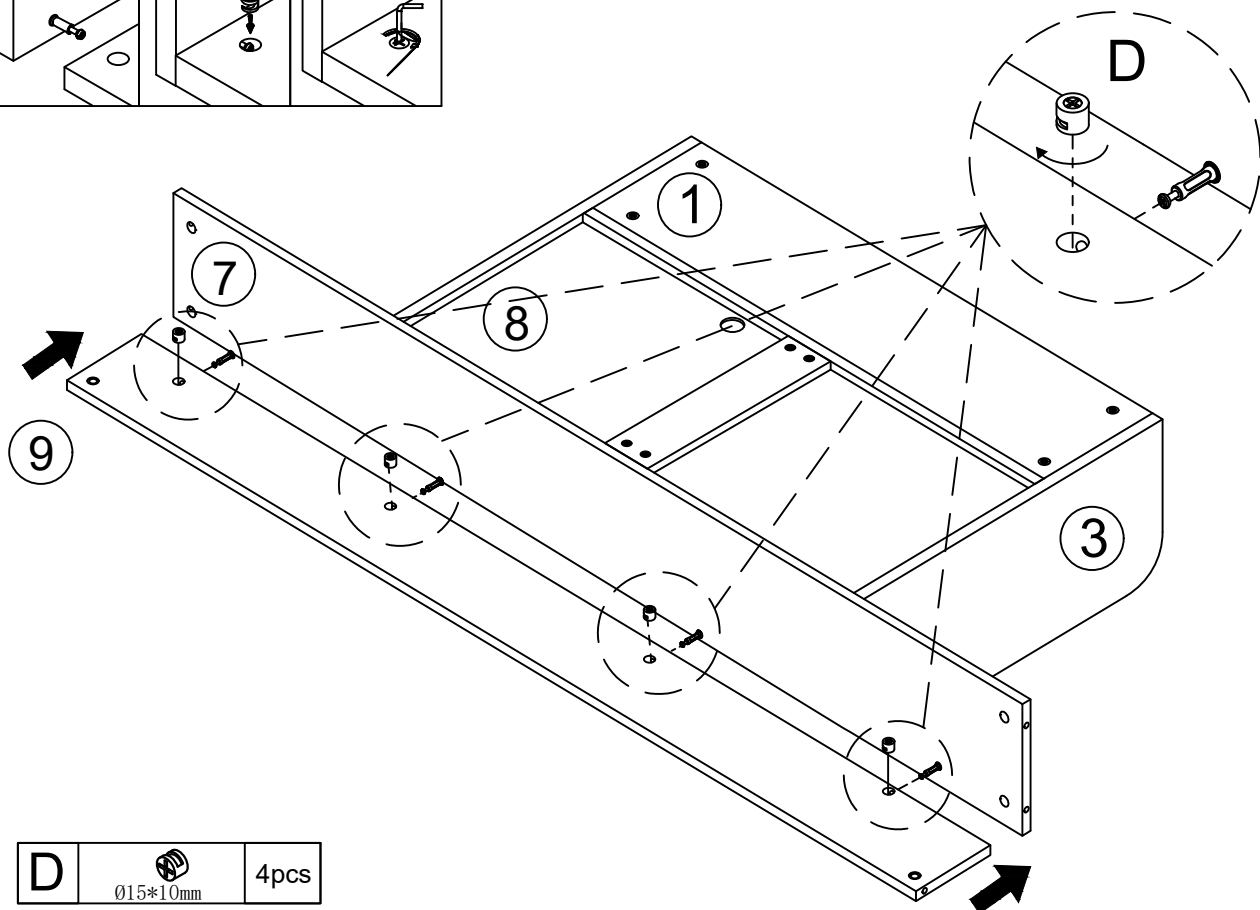
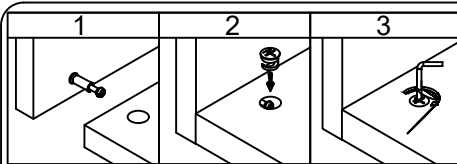


D  4pcs
Ø15*10mm

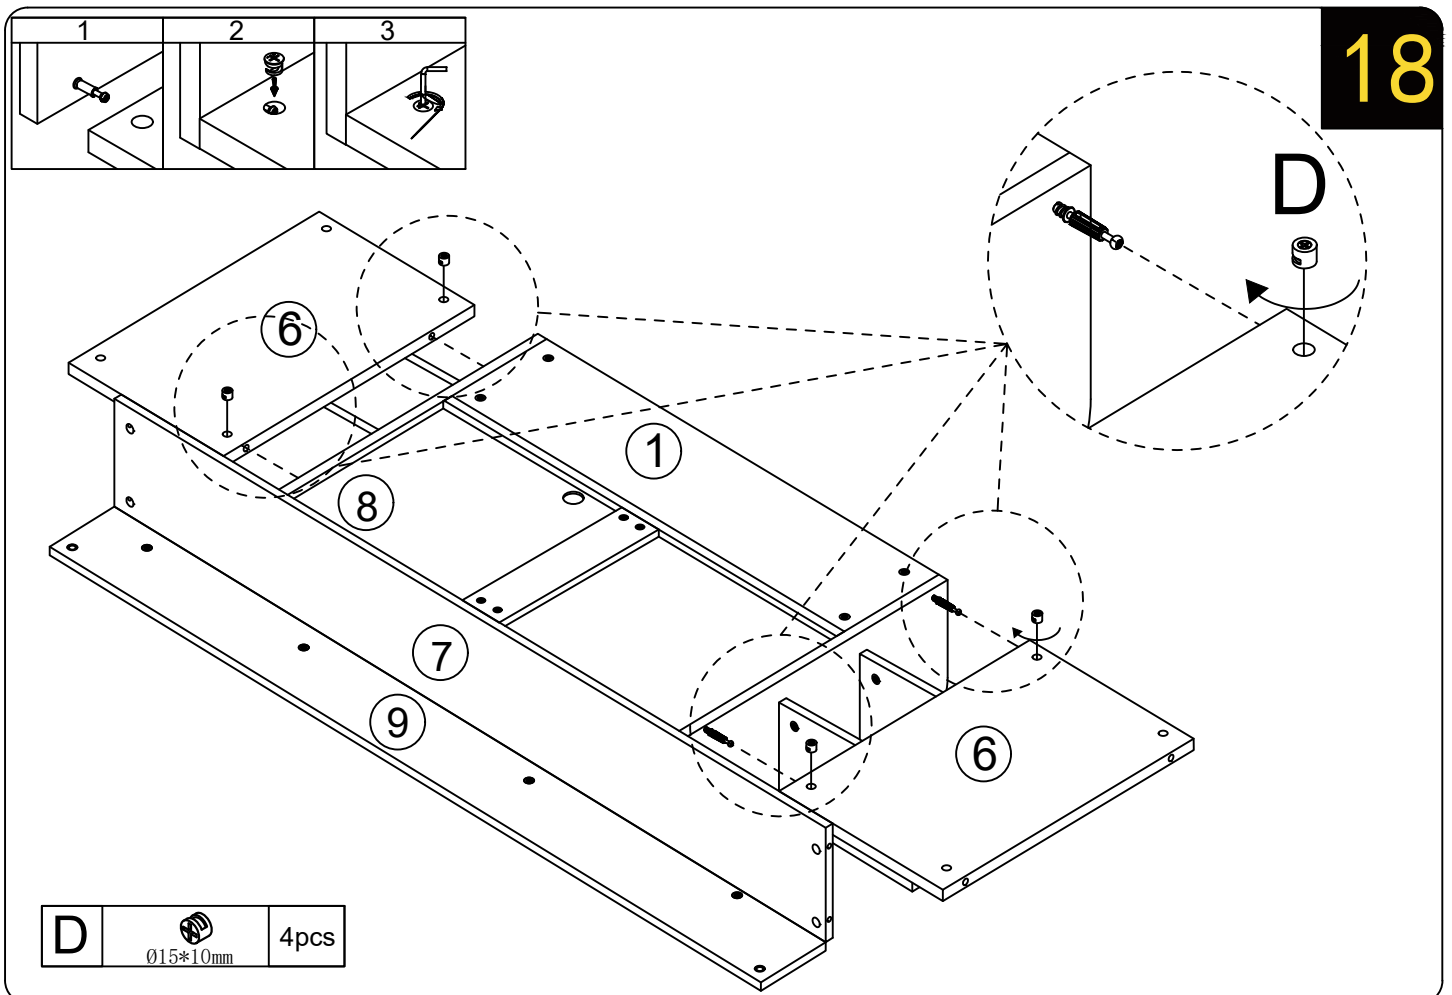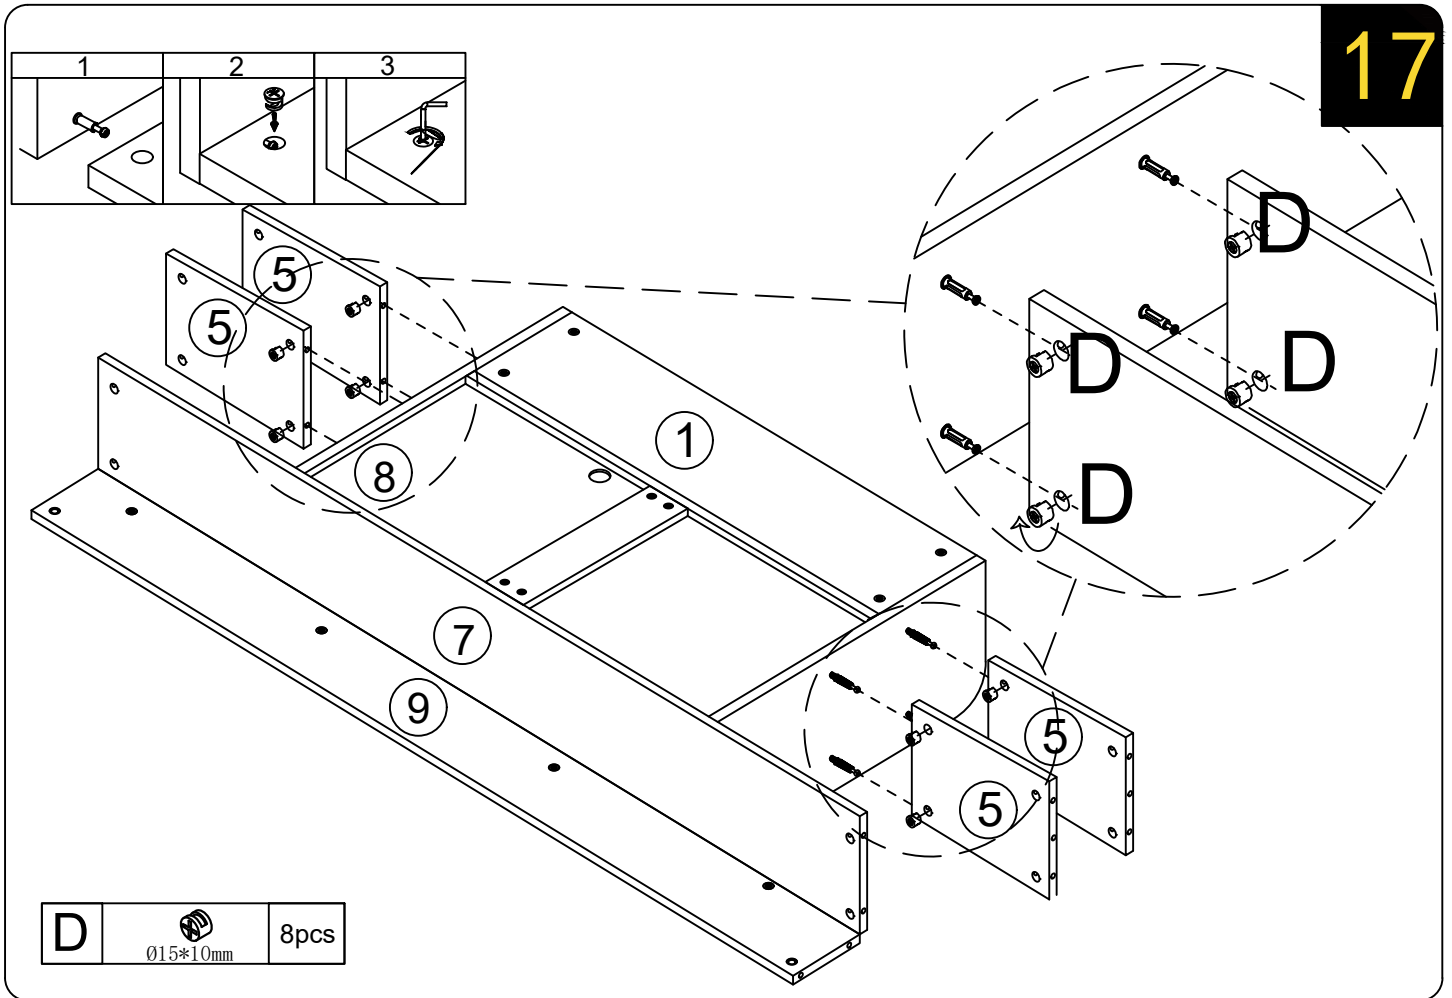

19

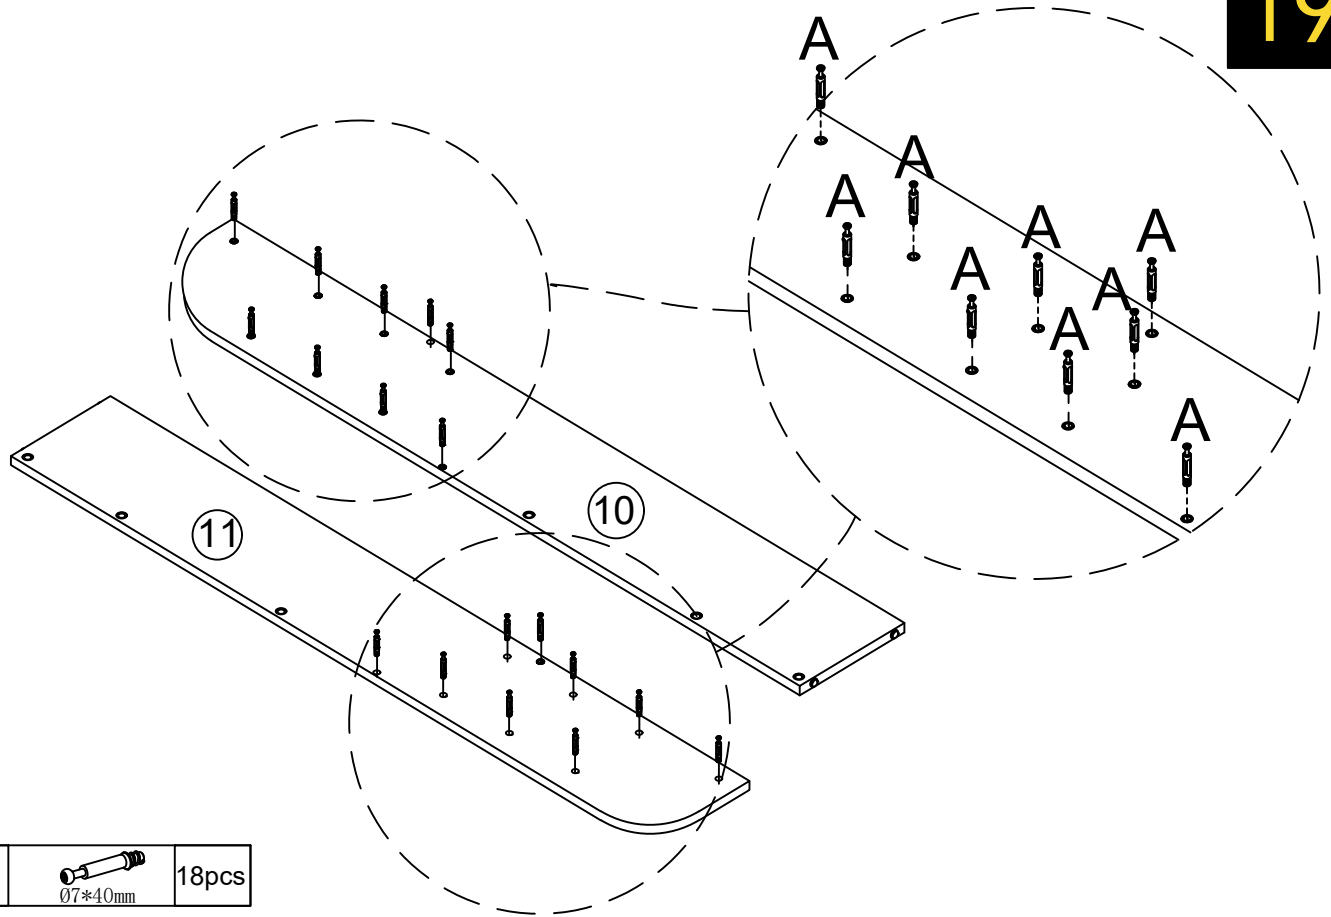

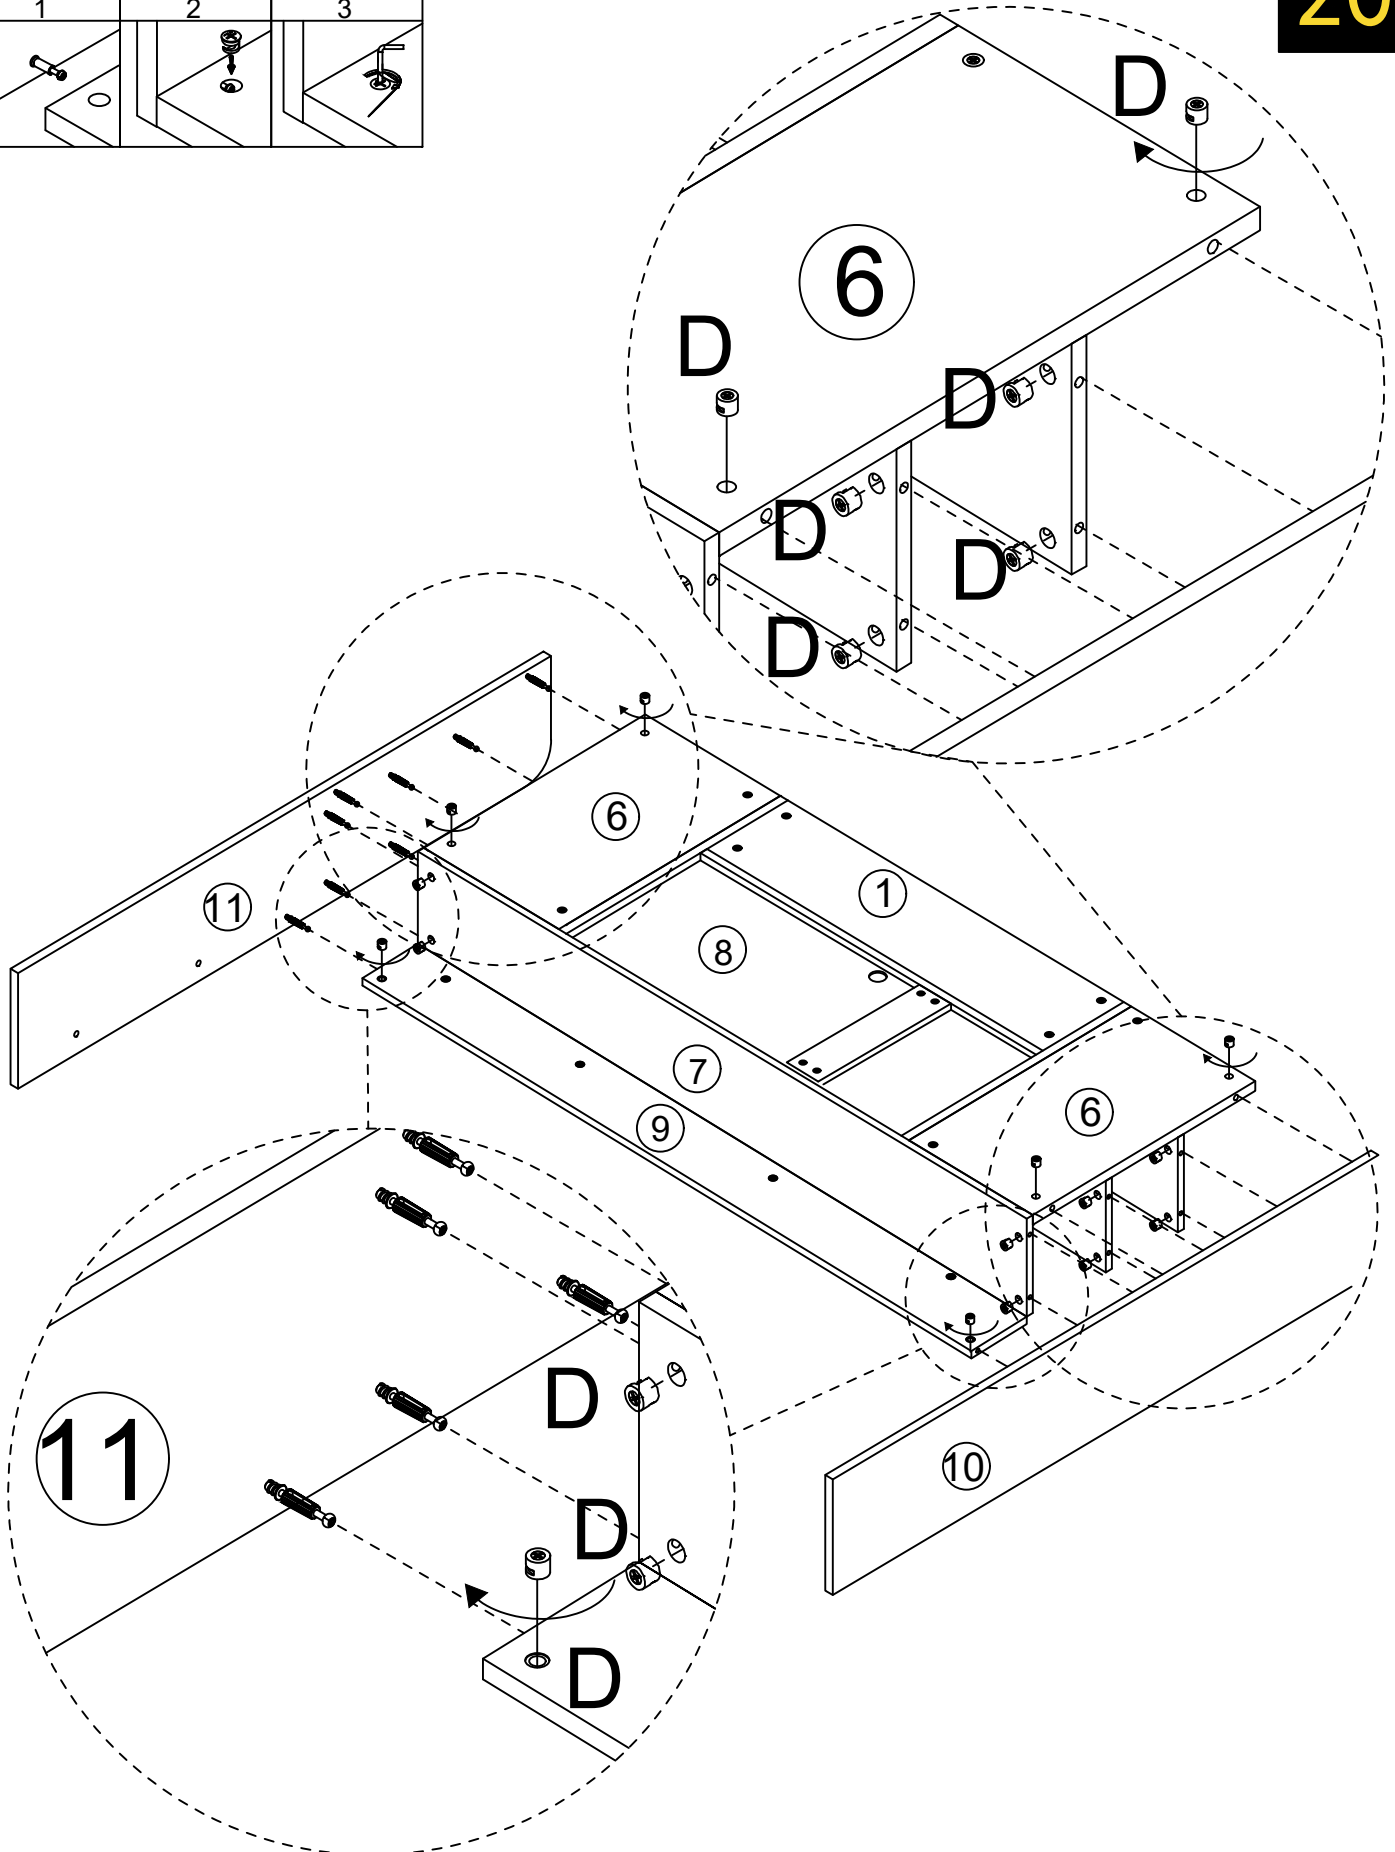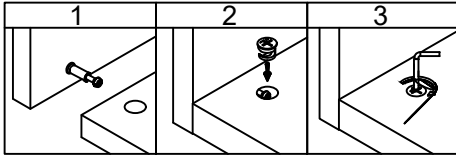

D		18pcs
Ø15*10mm		




21

⚠ Make the following adjustments to component C before installing Step 15


Loosen the screw first

Then push the part to the bottom end of the strip hole

Finally, tighten the screw

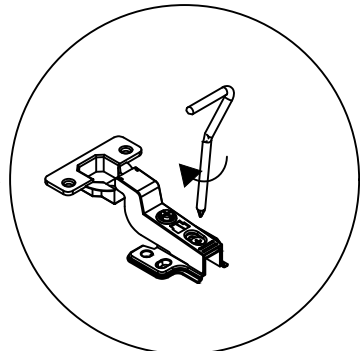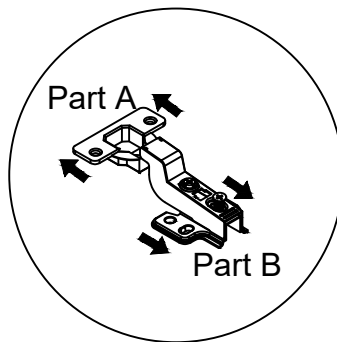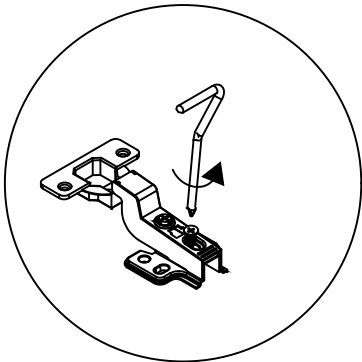

22

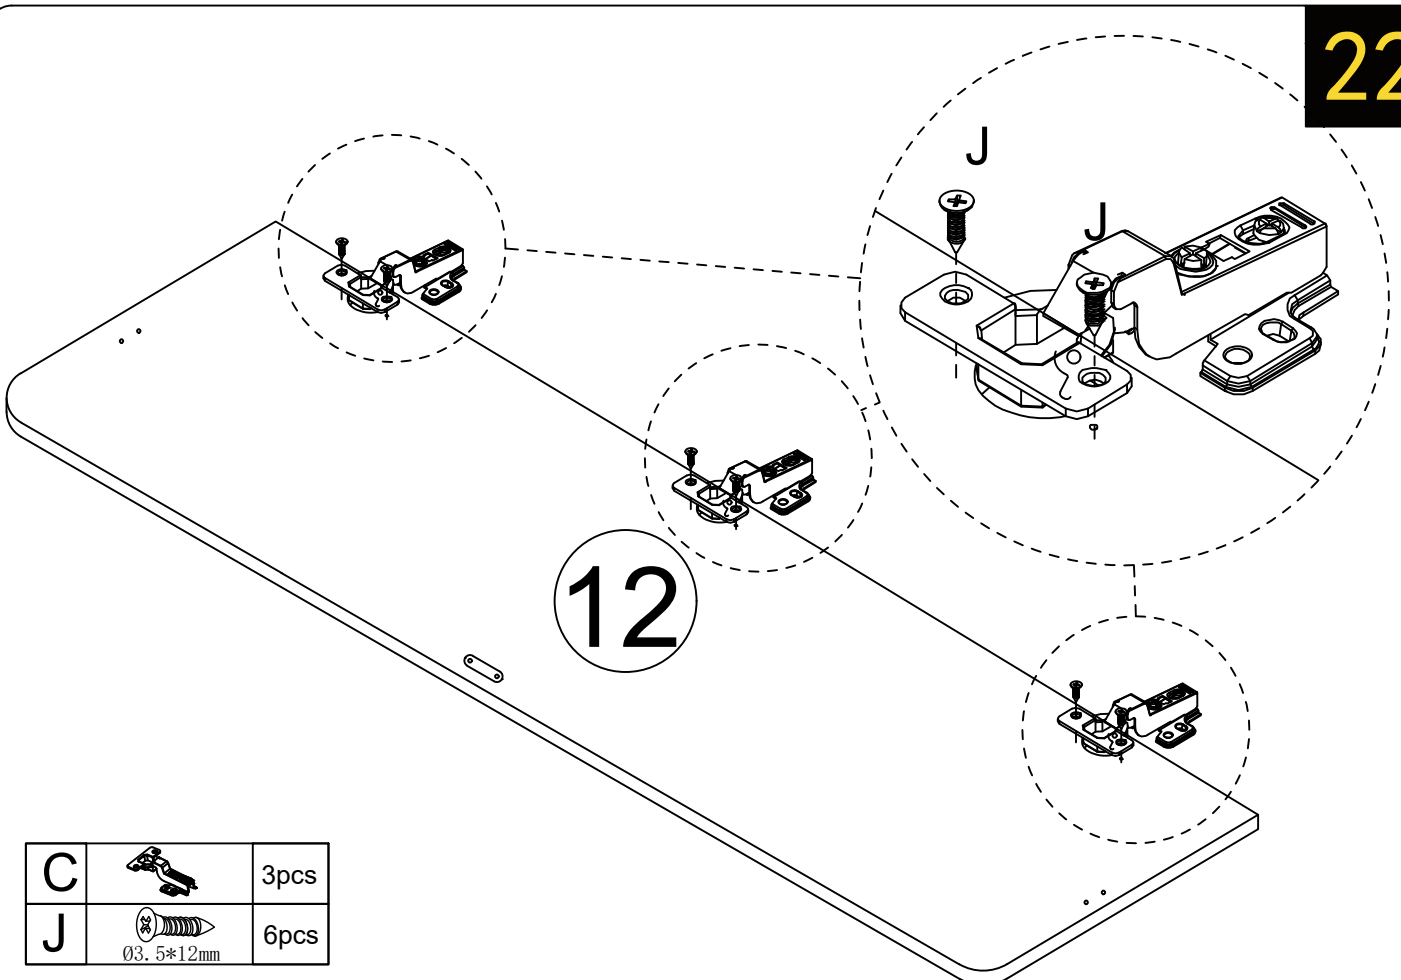


C		3pcs
J	 Ø3.5*12mm	6pcs



23

Kind reminder in step 24


Tighten this screw to ensure that part 12 can be pushed into the right position smoothly.
Adjust the tightness of this screw (tighten or loosen) in case part 12 is not align with the top of part 2 when it's closed.

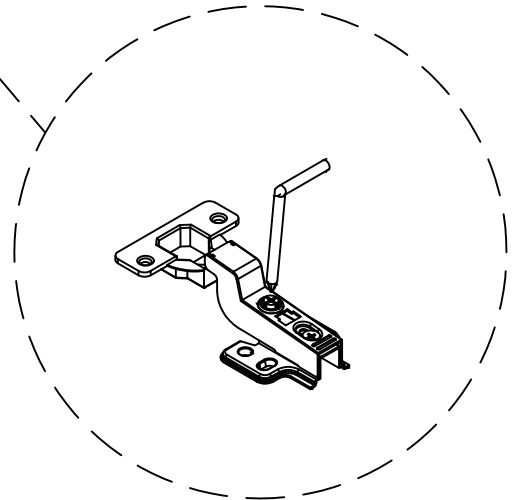


24

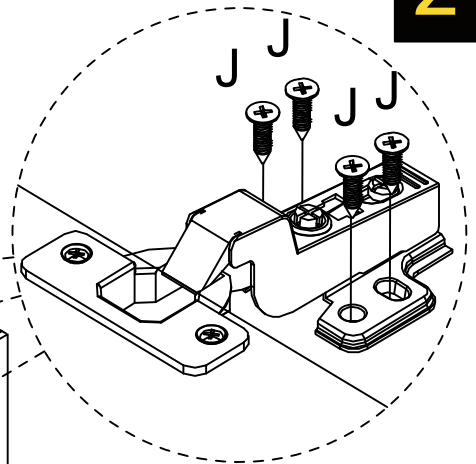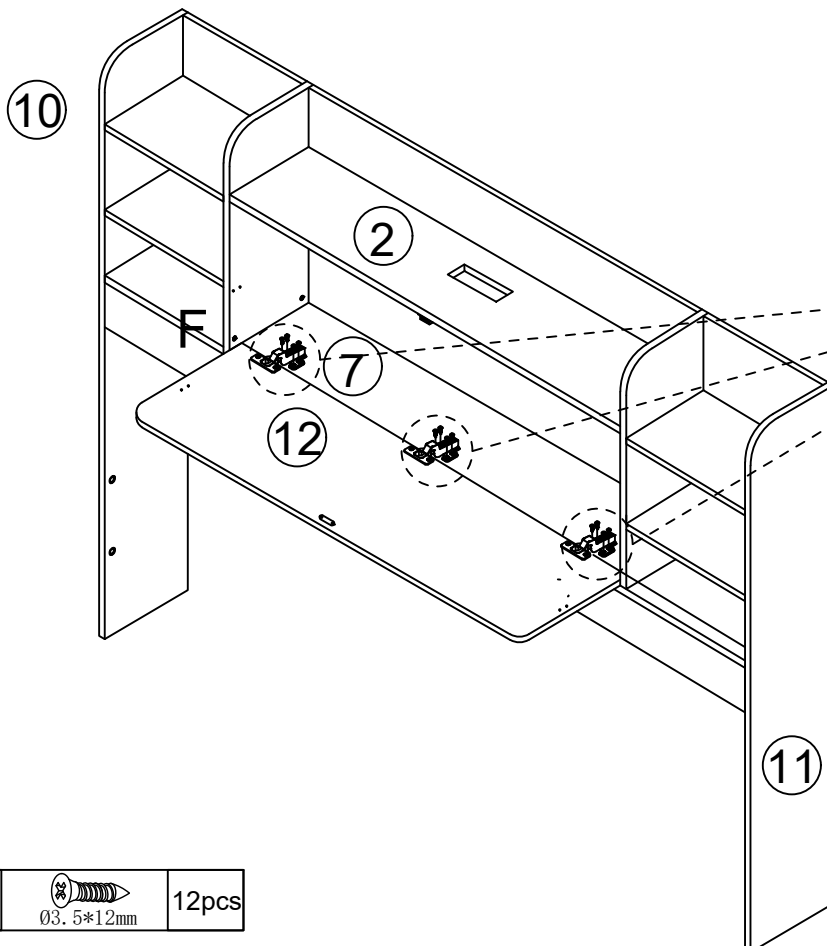



J		12pcs
	Ø3.5*12mm	

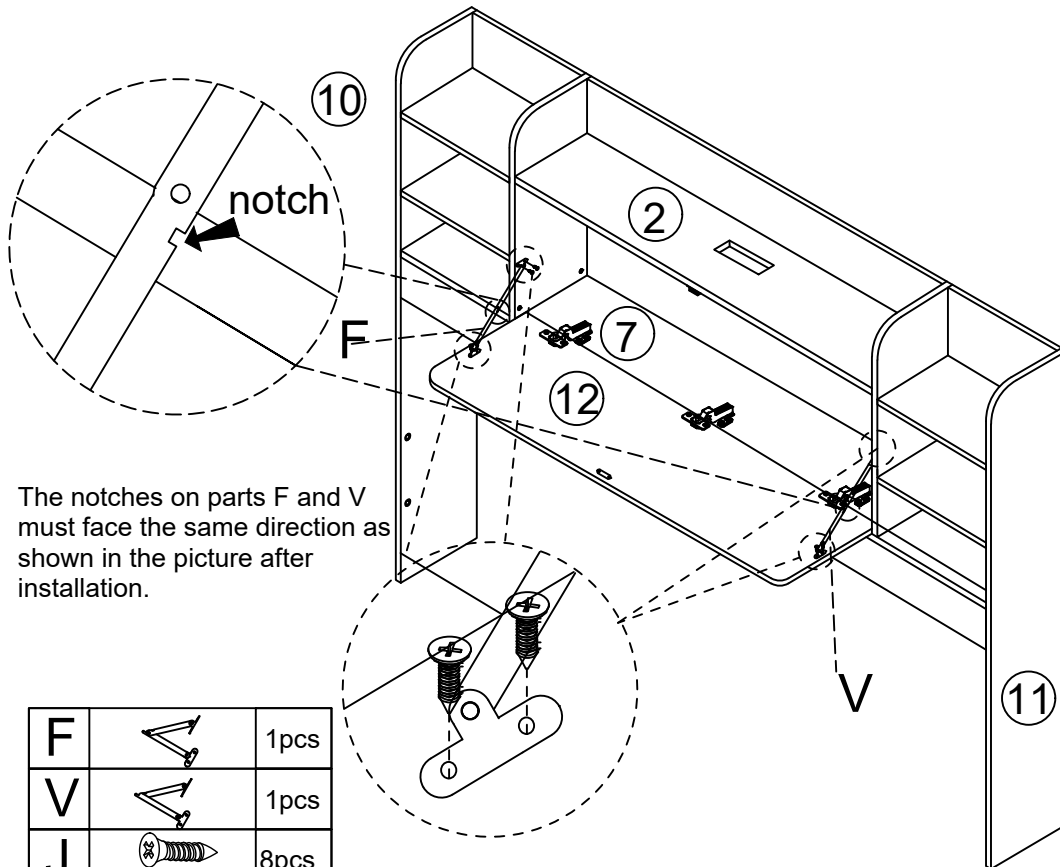

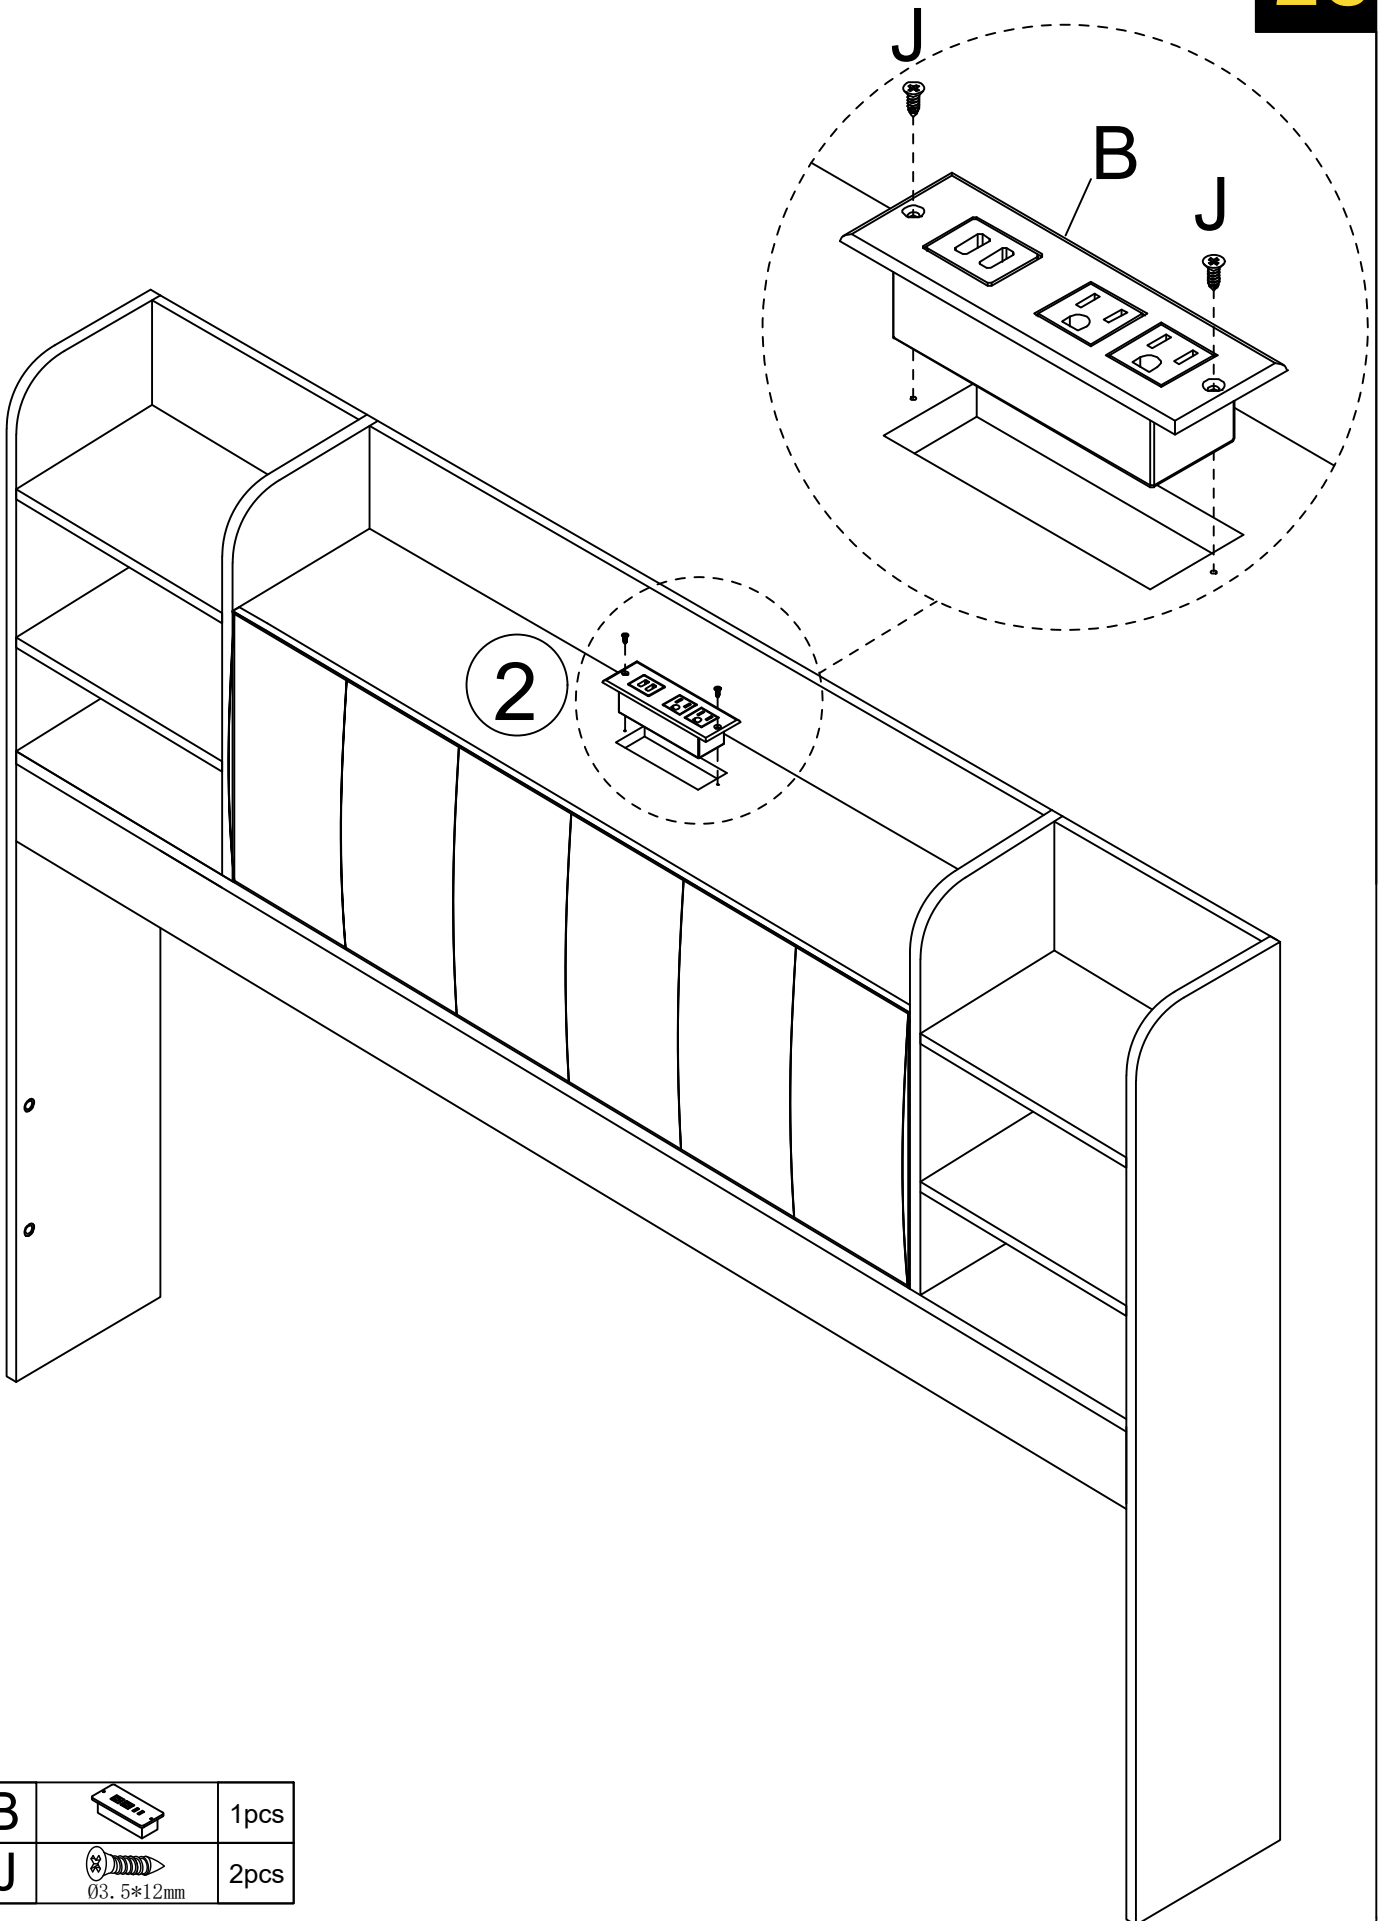


B		1pcs
J	 03. 5*12mm	2pcs

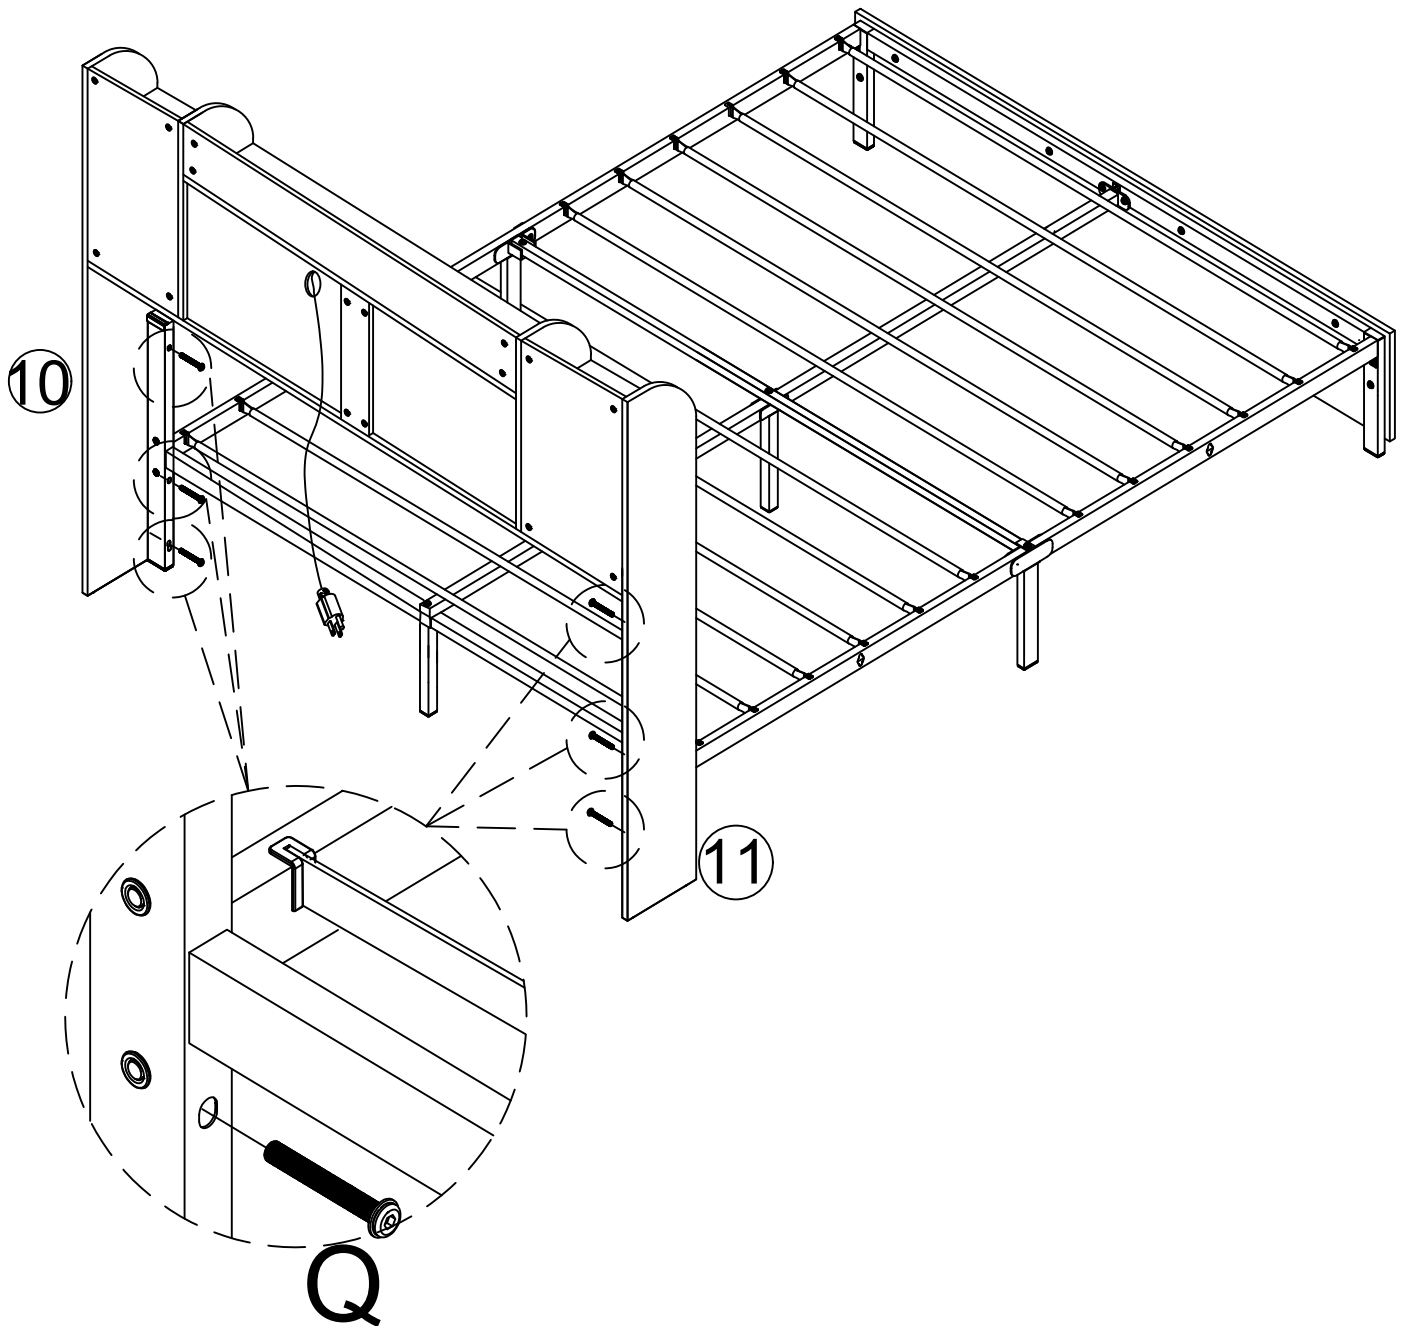


Q	 M8*50mm	6pcs
---	--	------

28



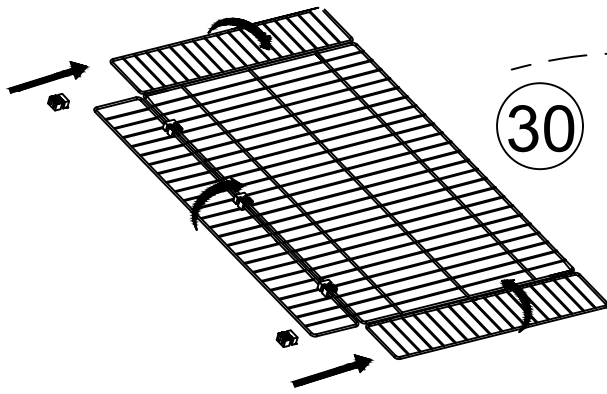


30

The plastic buckle is placed between the two wires as shown.


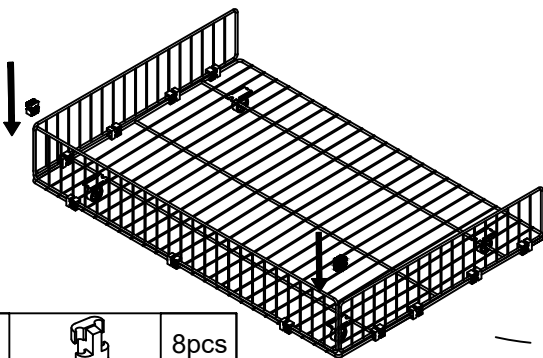


The plastic buckle rotates into wires

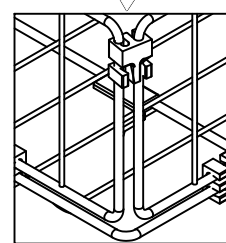
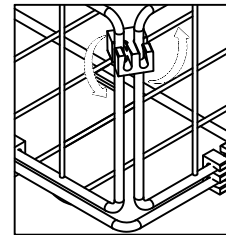
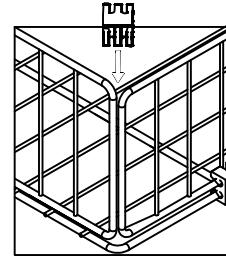


S  8pcs

29

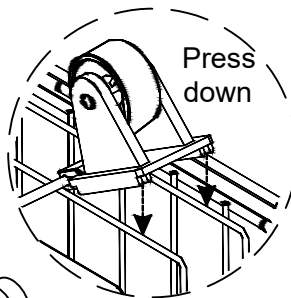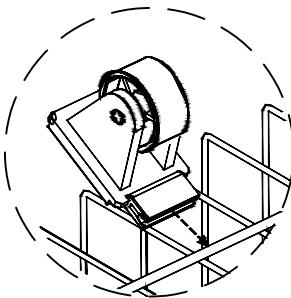


Press down

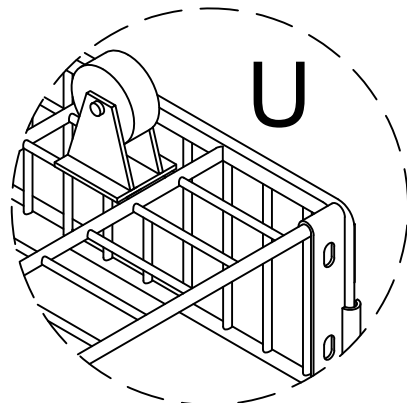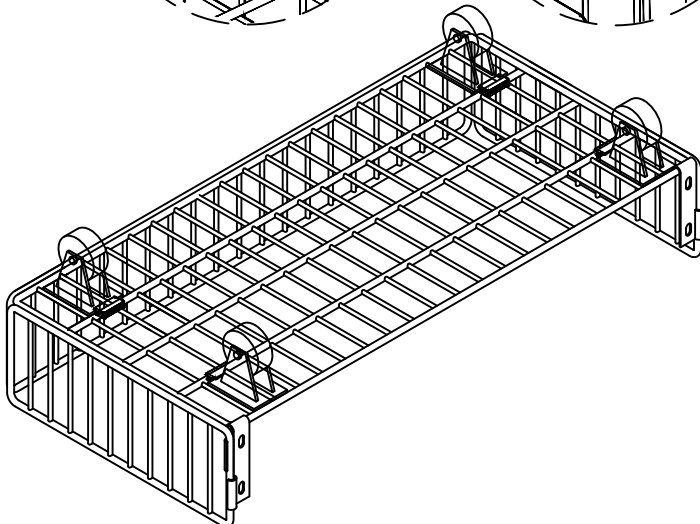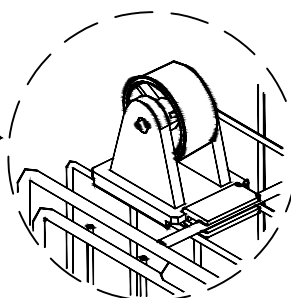

U

U  16pcs

30

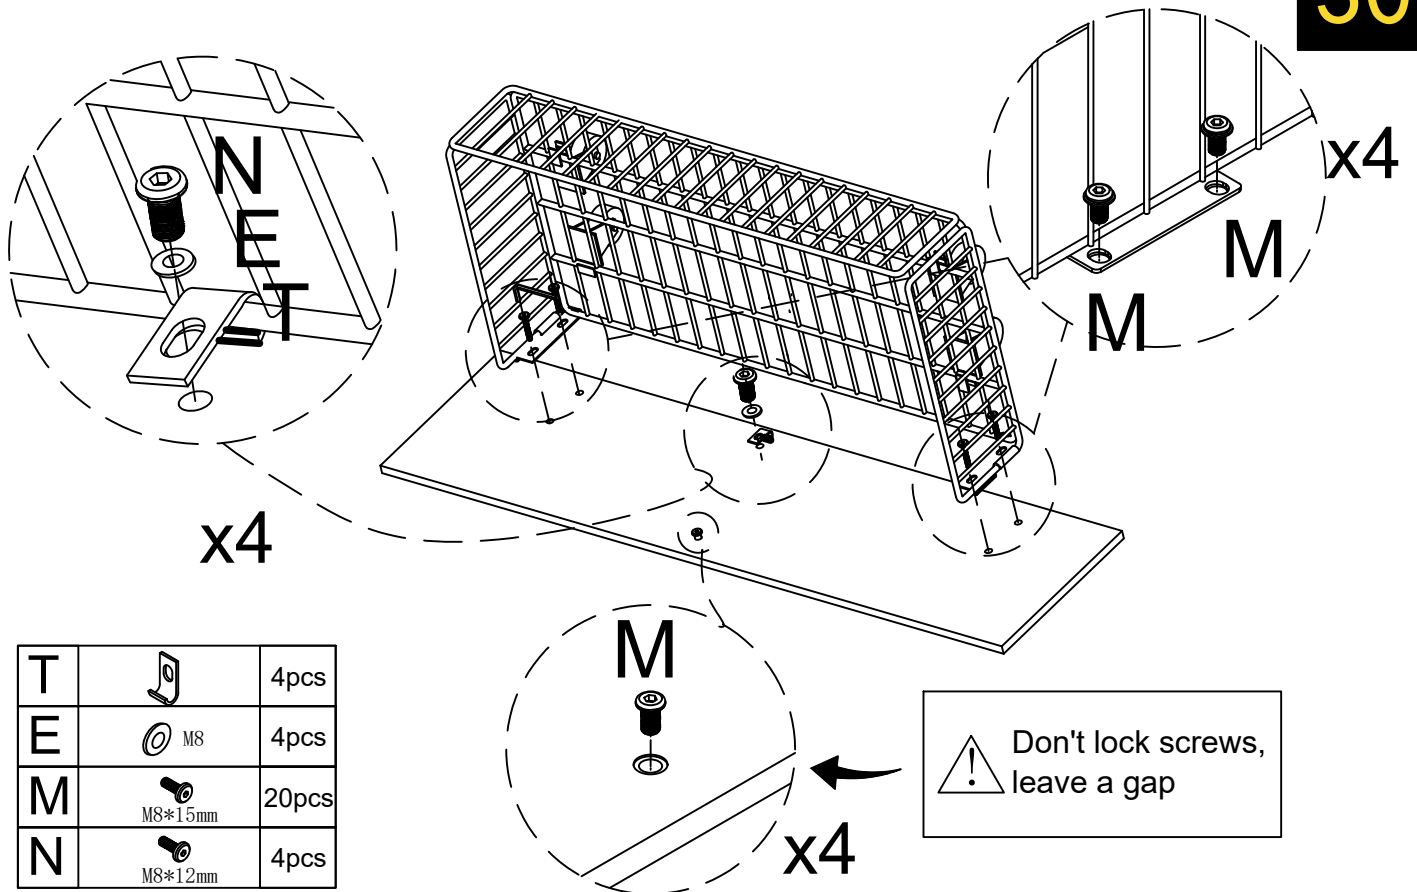

31

Gently lift the drawer, align the screw with the gourd-shaped hole, and then snap it in

