






















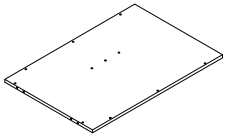

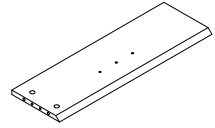
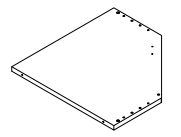
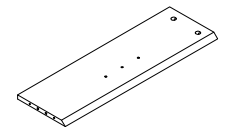


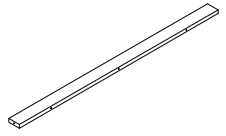
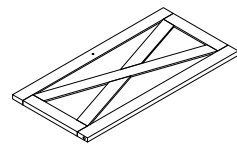
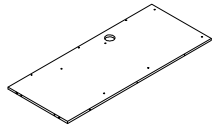
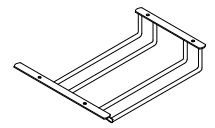
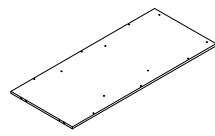

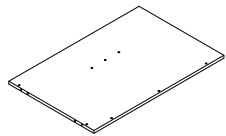


BOOKSHELF



Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.



Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
(A)	 M5*35mm	x 8	(K)		x 1
(B)	 Ø15*10mm	x 8	(L)		x 1
(C)	 Ø5*48mm	x 46	(M)	 M6*35mm	x 5
(D)	 Ø3.5*14mm	x 10	(N)		x 1
(E)	 Ø6*30mm	x 12	(O)	 M4*22mm	x 1
(F)	 Ø3.5*12mm	x 2	(P)		x 4
(G)		x 1	(Q)	 Ø4*35mm	x 4
(H)		x 1	(R)		x 4
(I)		x 1	(S)		x 4
(J)		x 1	(T)	 Nylon Cable Tie	x 2
			(-)	  M3 M4	x 1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
(1)		x 1	(9)		x 1
(2)		x 1	(10)		x 1
(3)		x 1	(11)		x 1
(4)		x 2	(12)		x 1
(5)		x 2	(13)		x 1
(6)		x 1	(14)		x 1
(7)		x 1	(15)		x 5
(8)		x 1			


Explosion Diagram

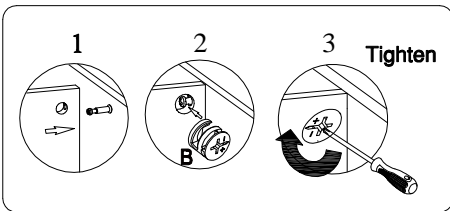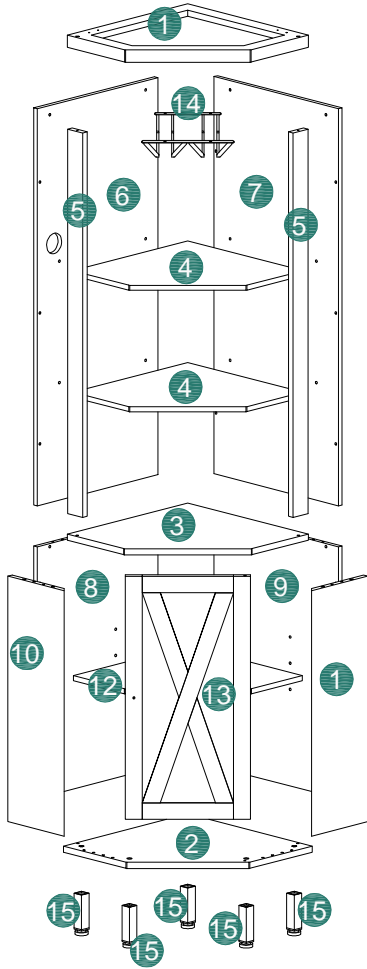



3

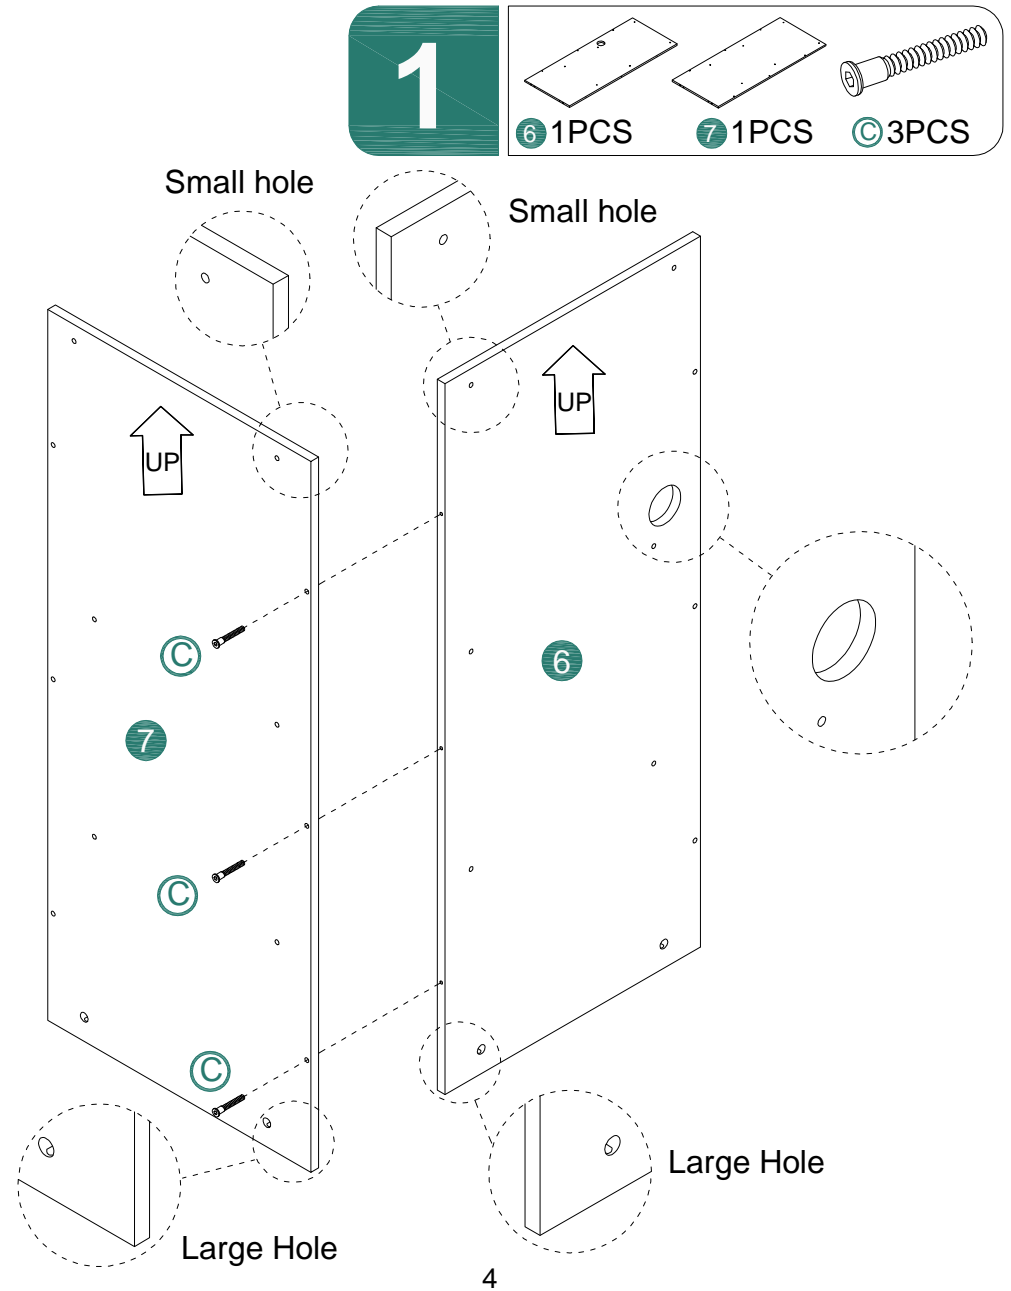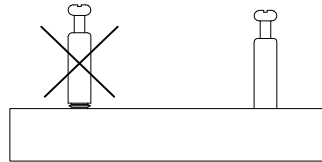


4


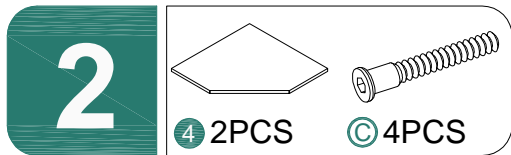


Mind the hole spacing when installing the plate No. 4.

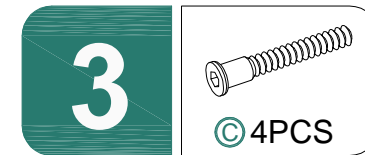
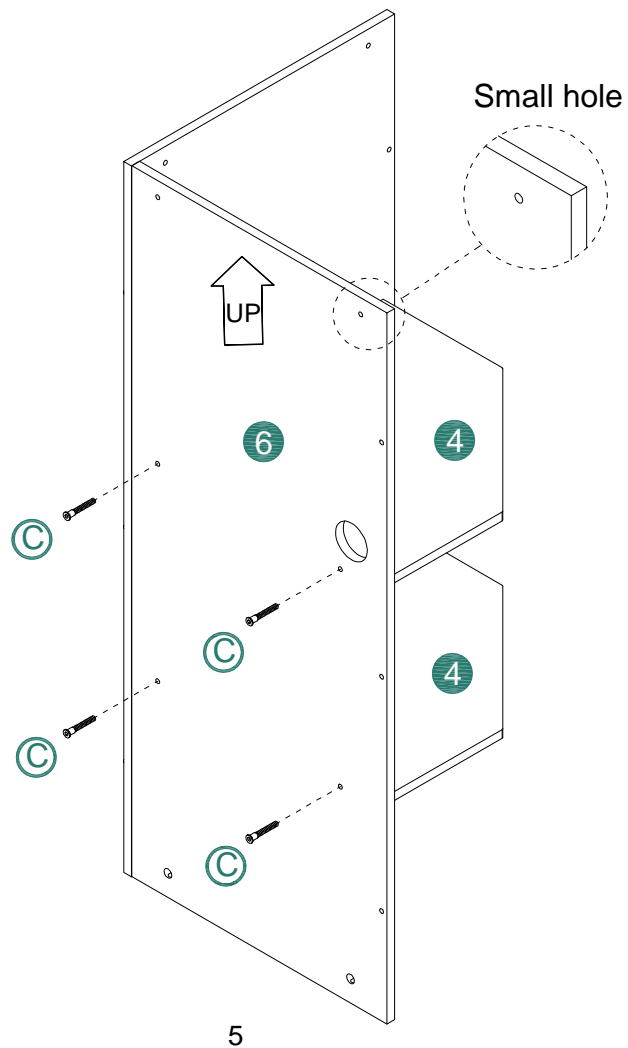


Mind the hole spacing when installing the plate No. 4.

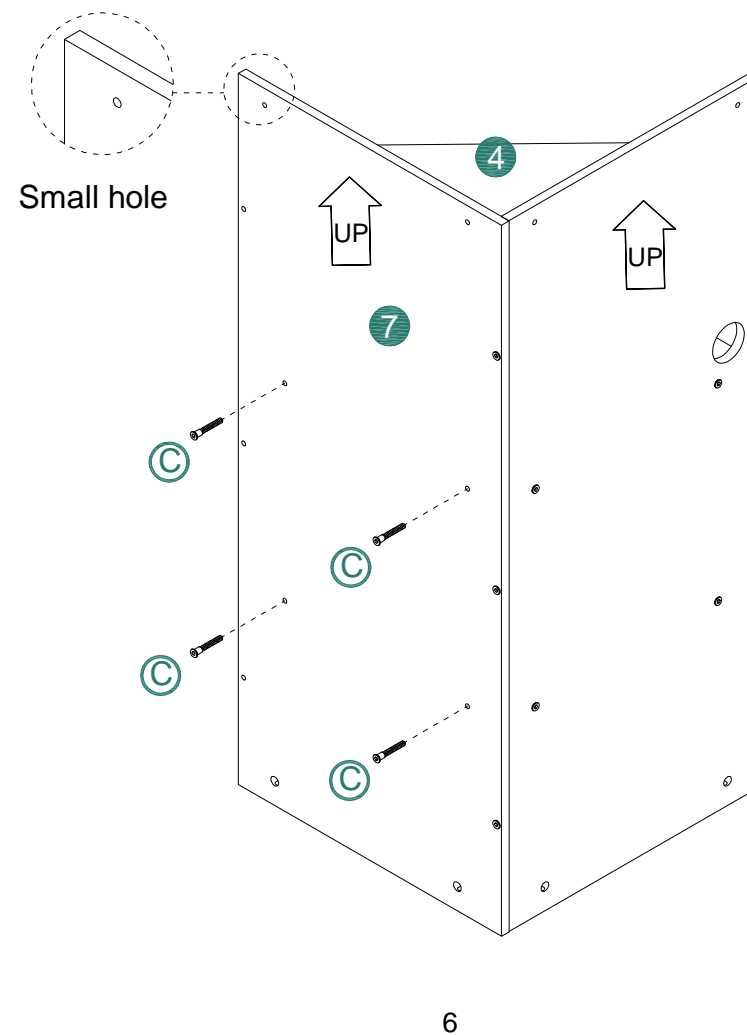

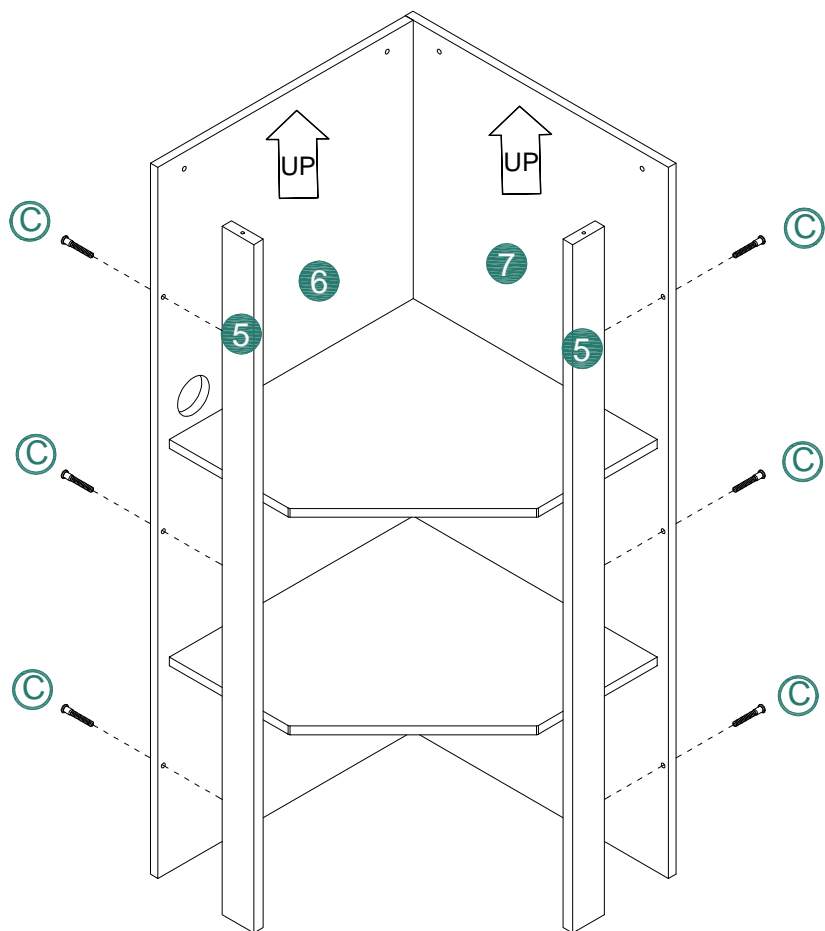
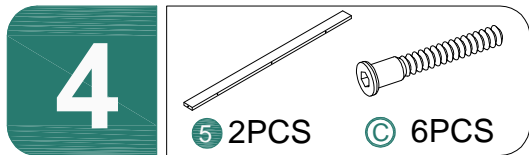


7

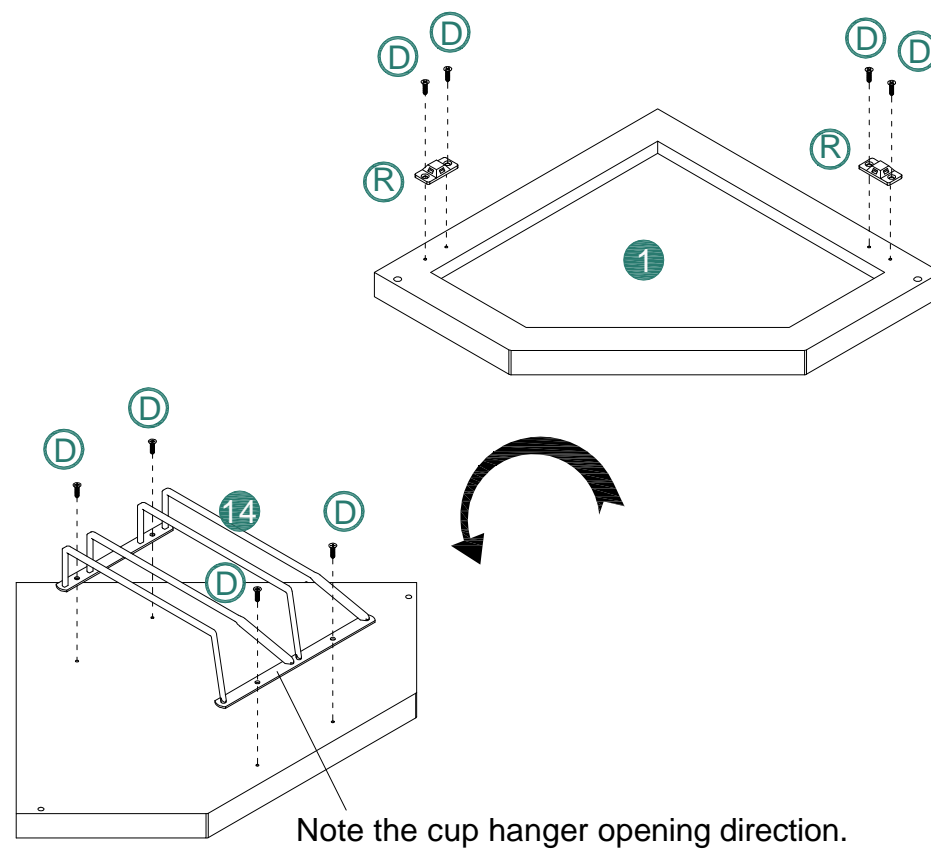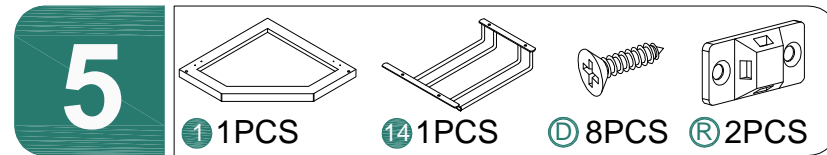



8

6

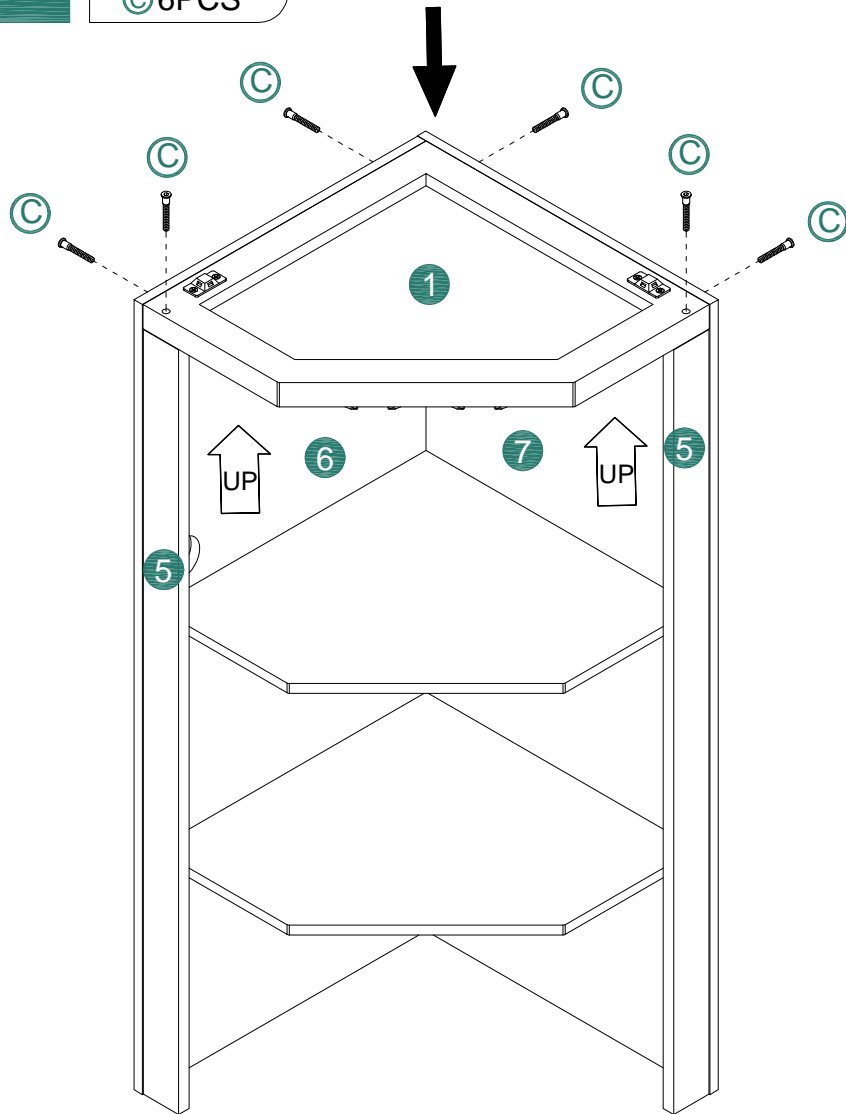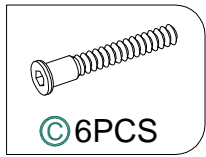


9

7

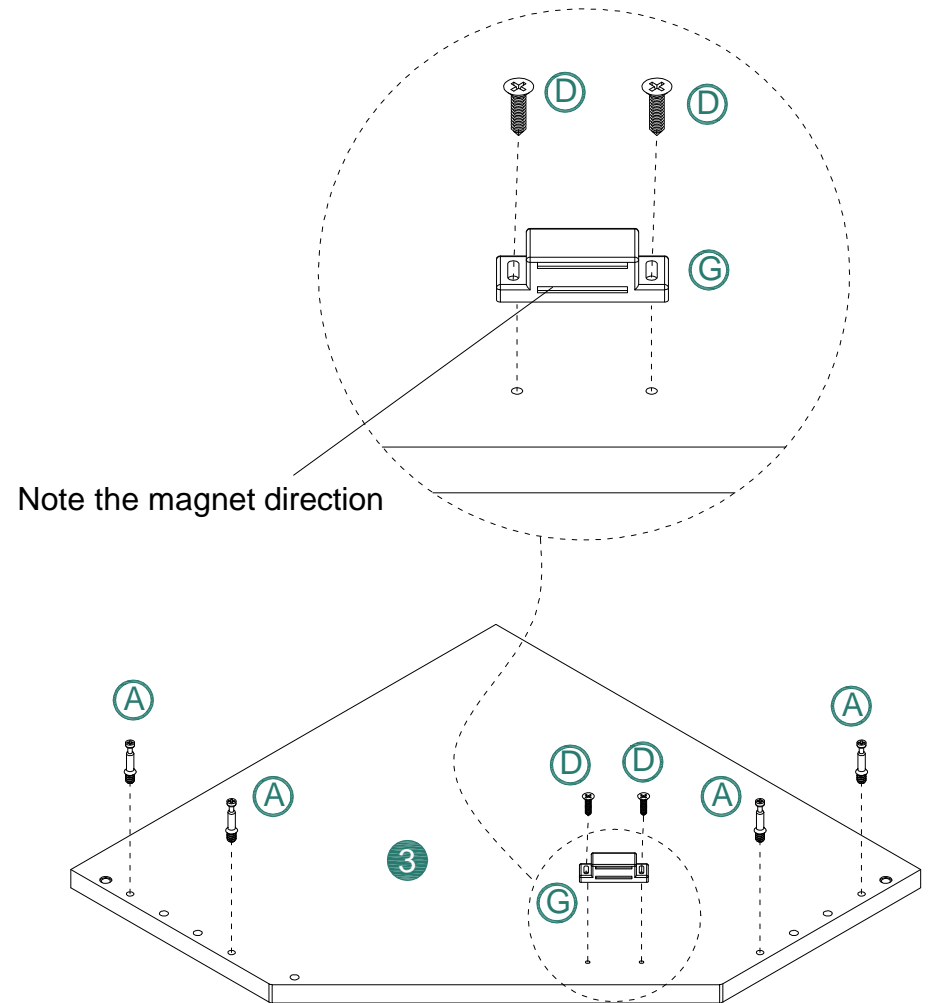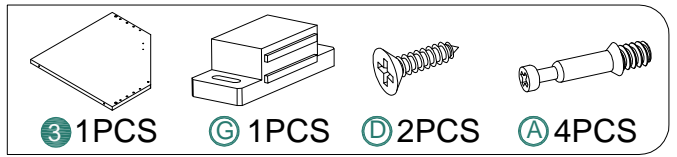


10

8




© 2PCS

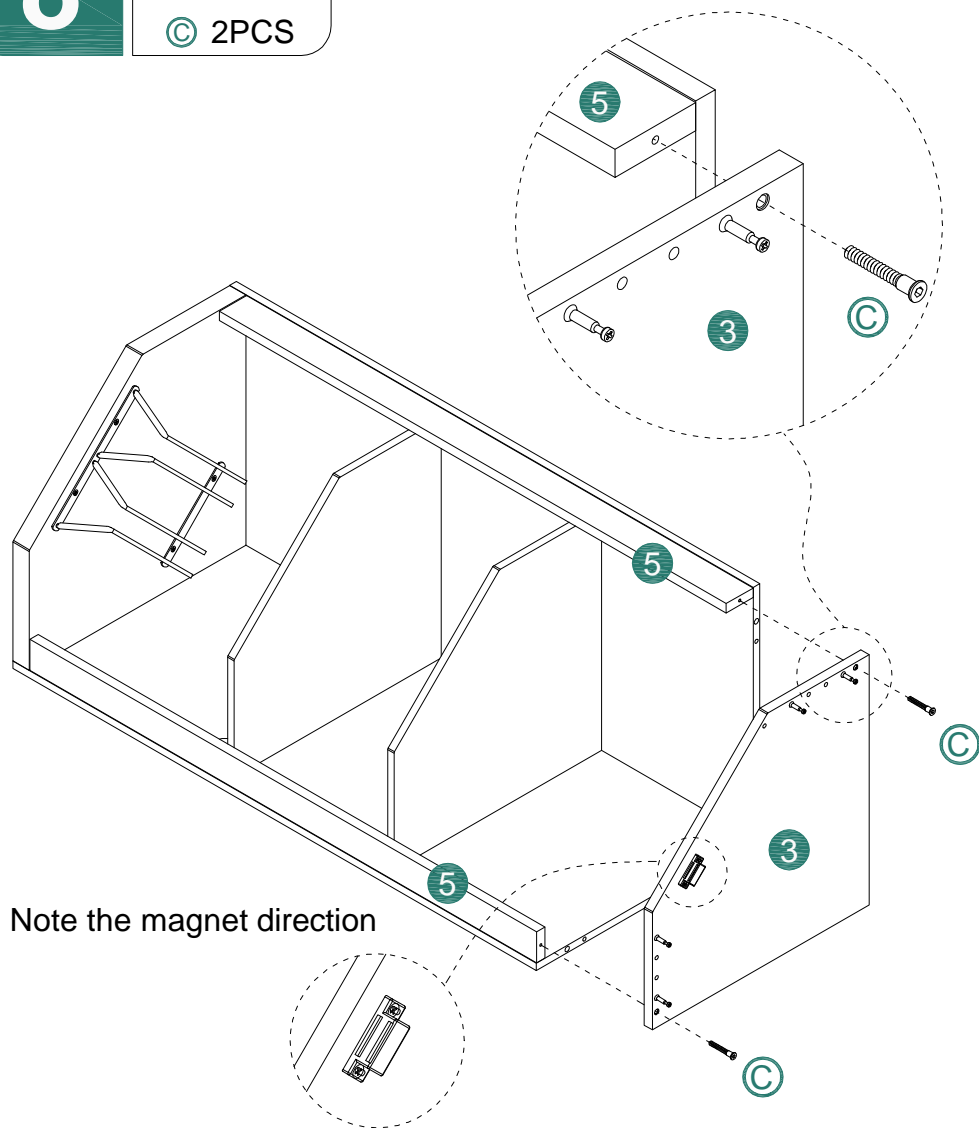


Note the magnet direction


9




8 1PCS





9 1PCS





© 3PCS

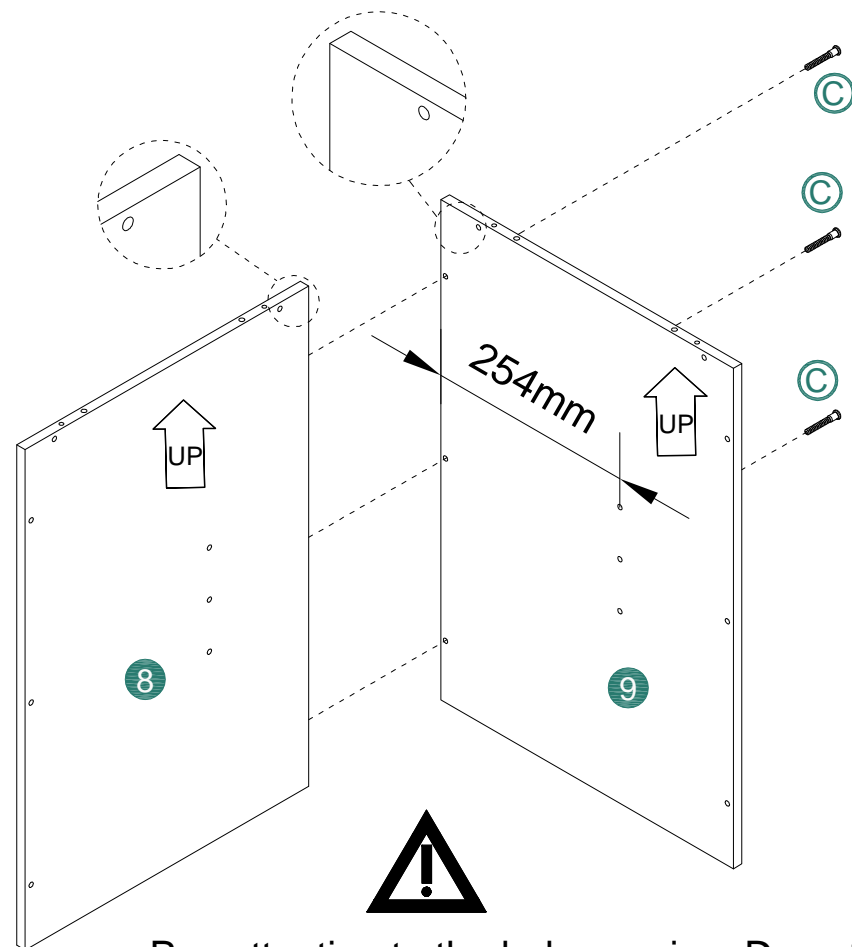



Pay attention to the hole spacing. Do not install it , otherwise it will be impossible to assemble.

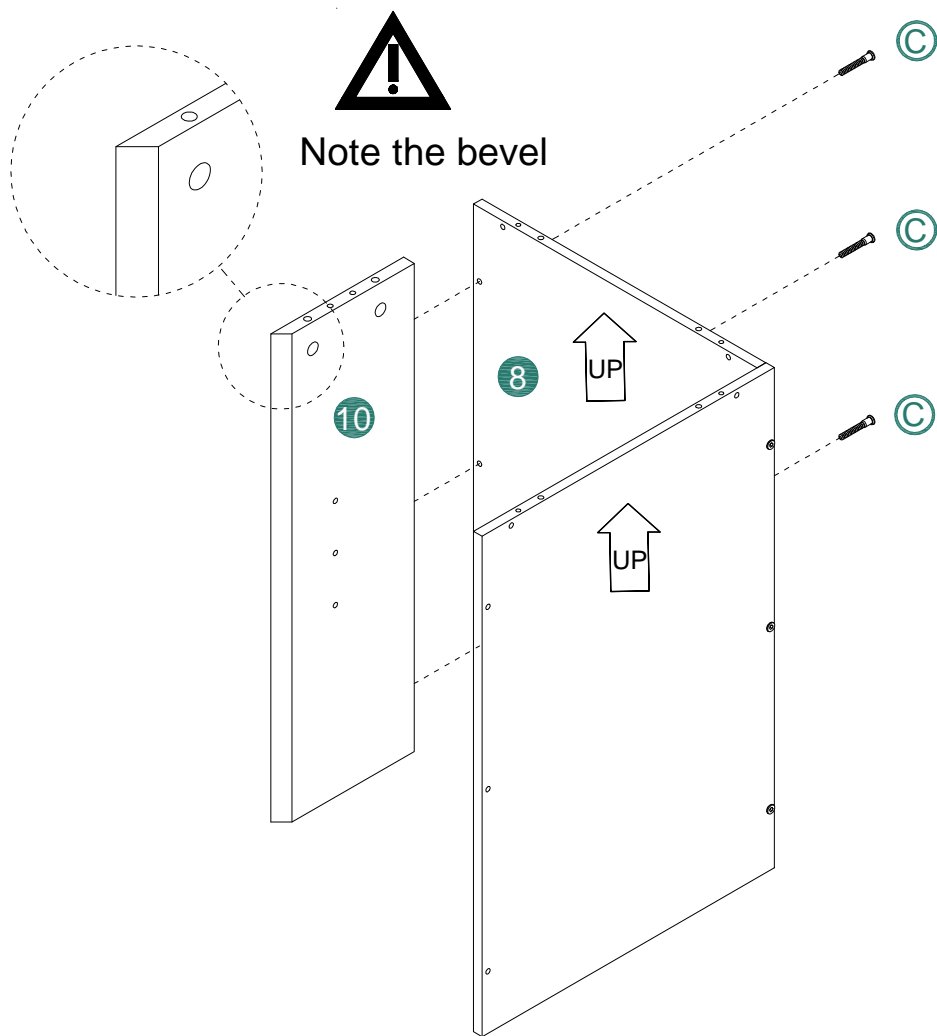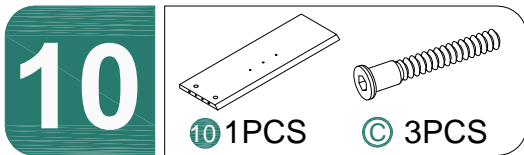


13

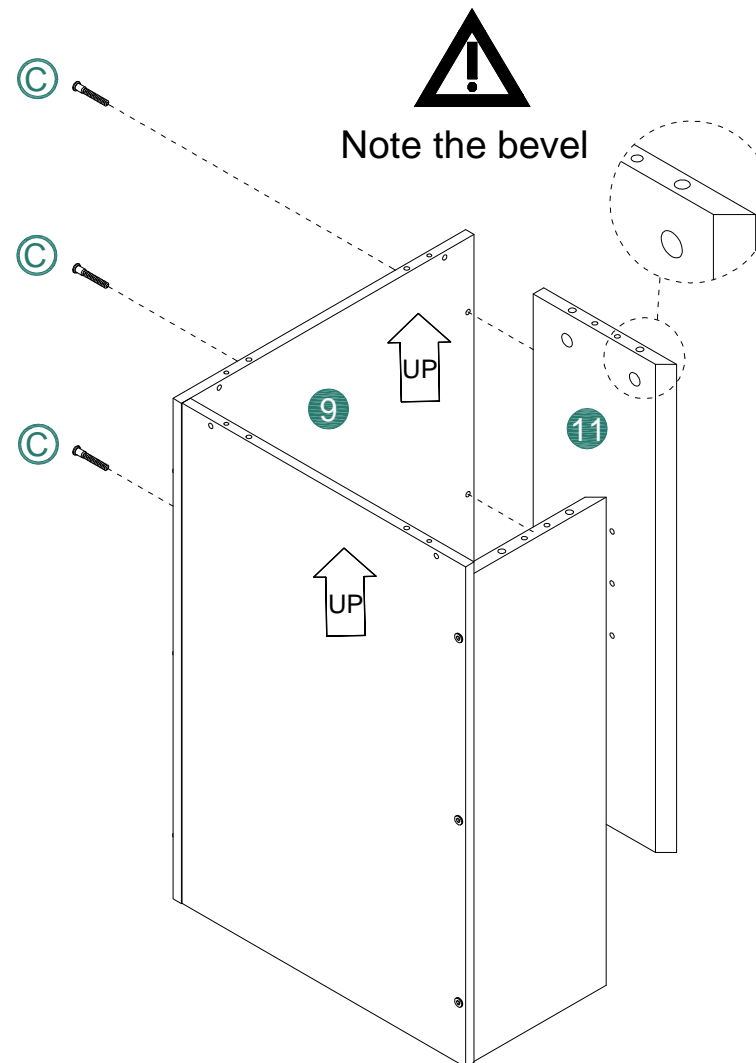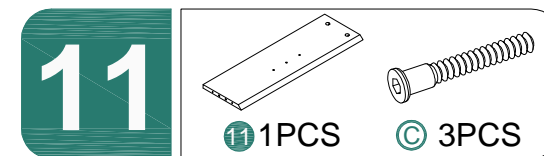


14

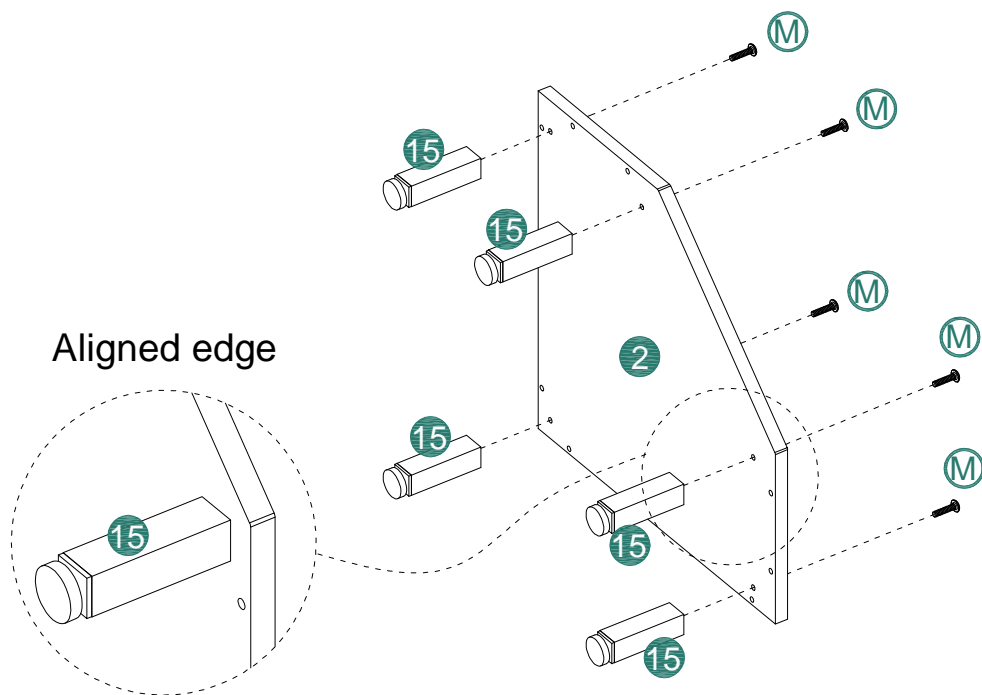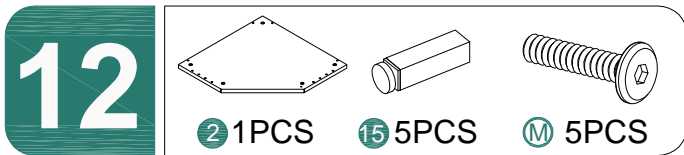



15

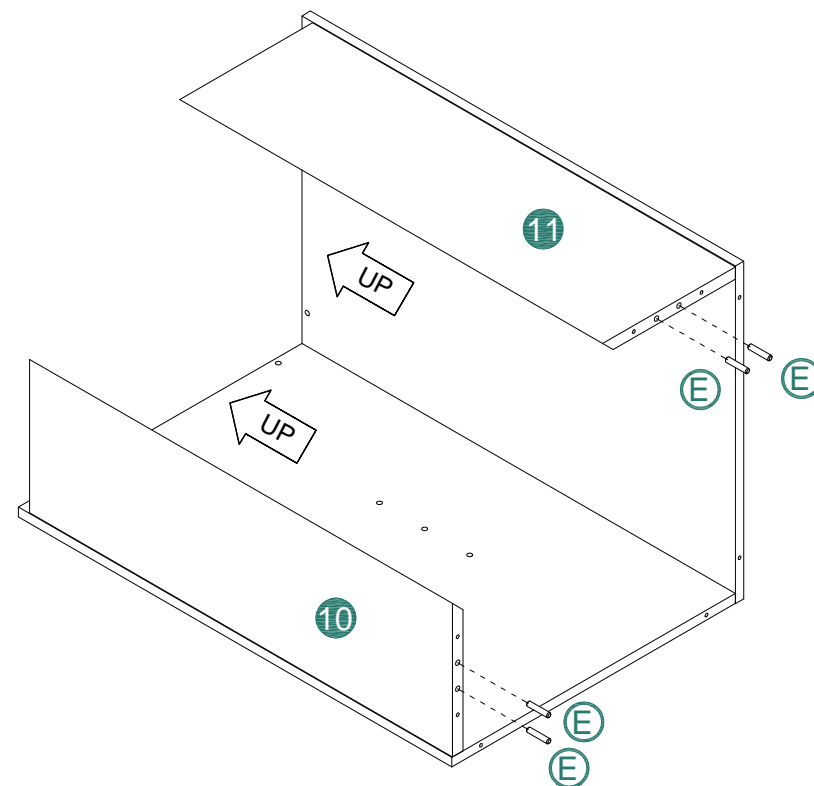

16

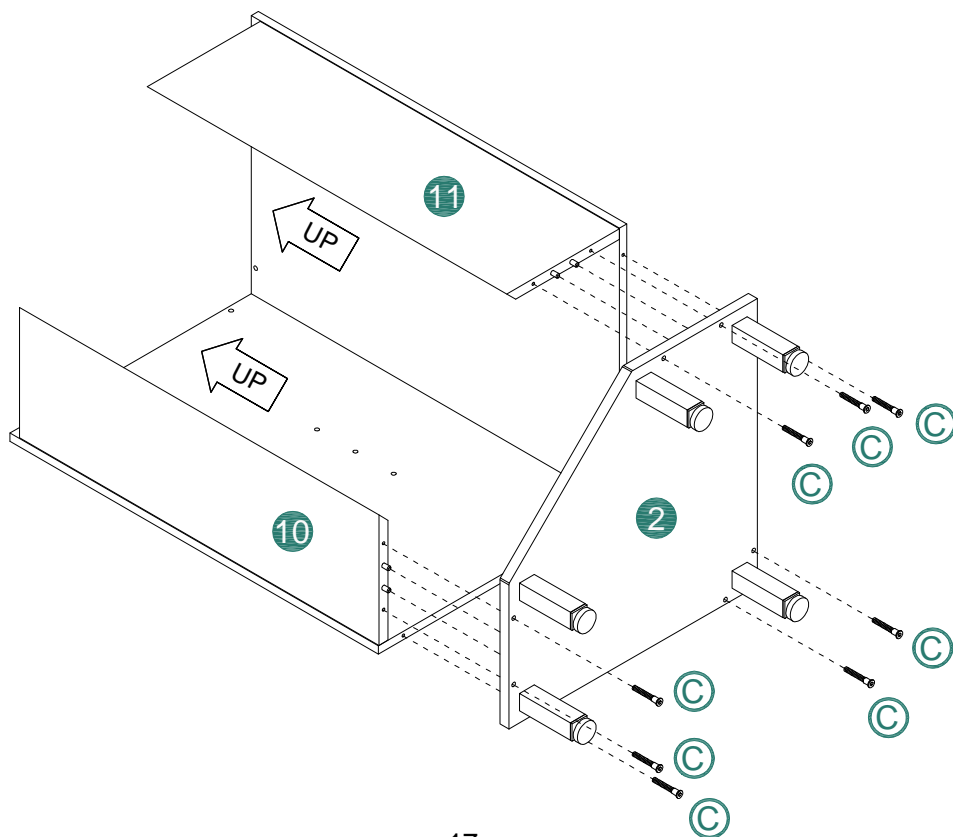

17

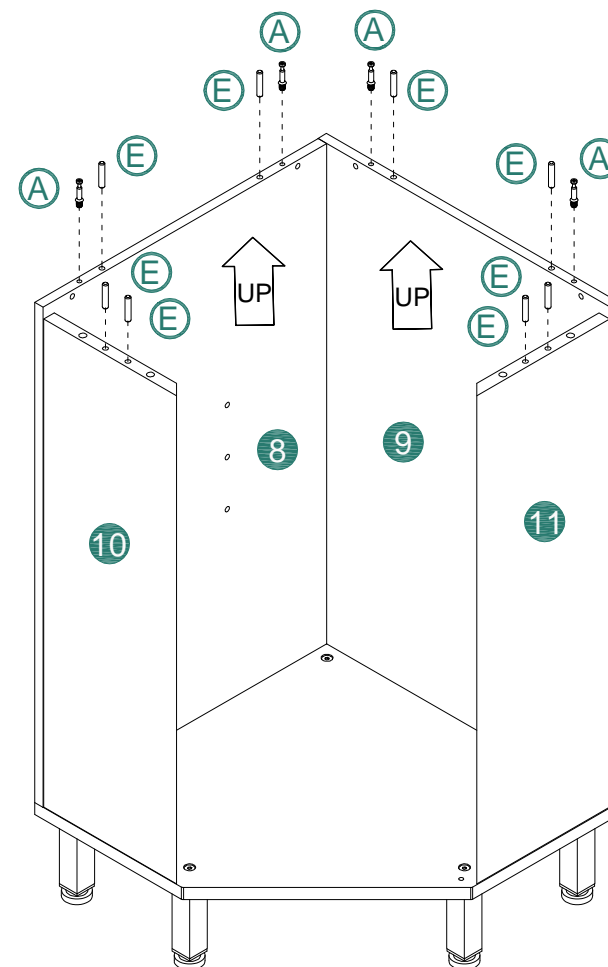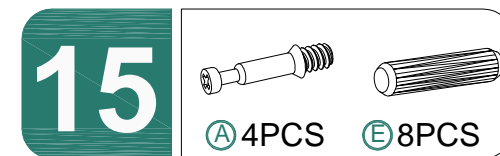


18

16



(B) 4PCS

An assistant is required.

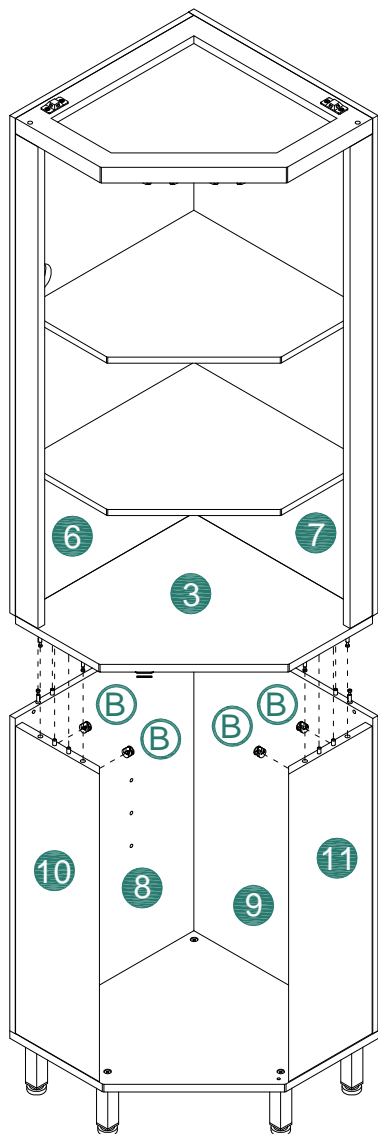


19



17




(B) 4PCS

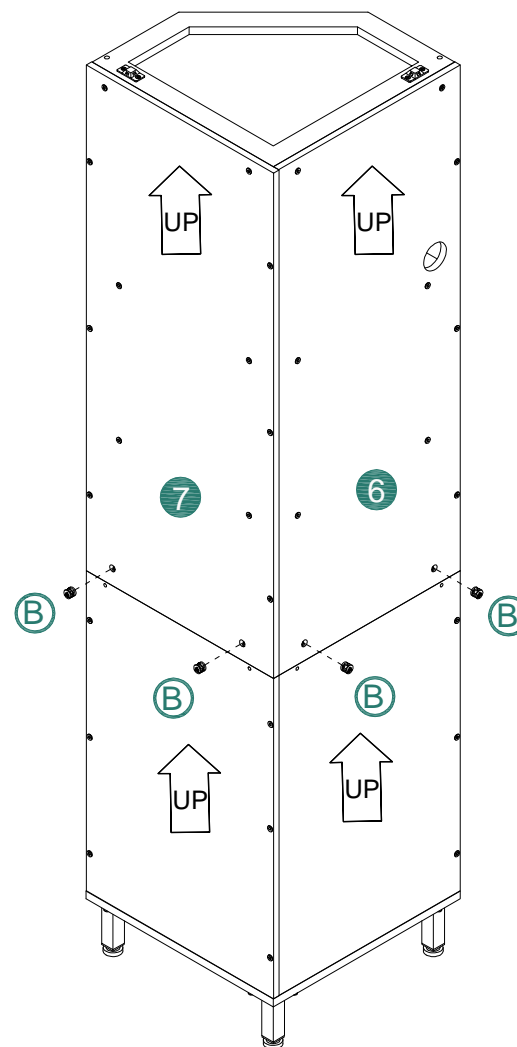

20

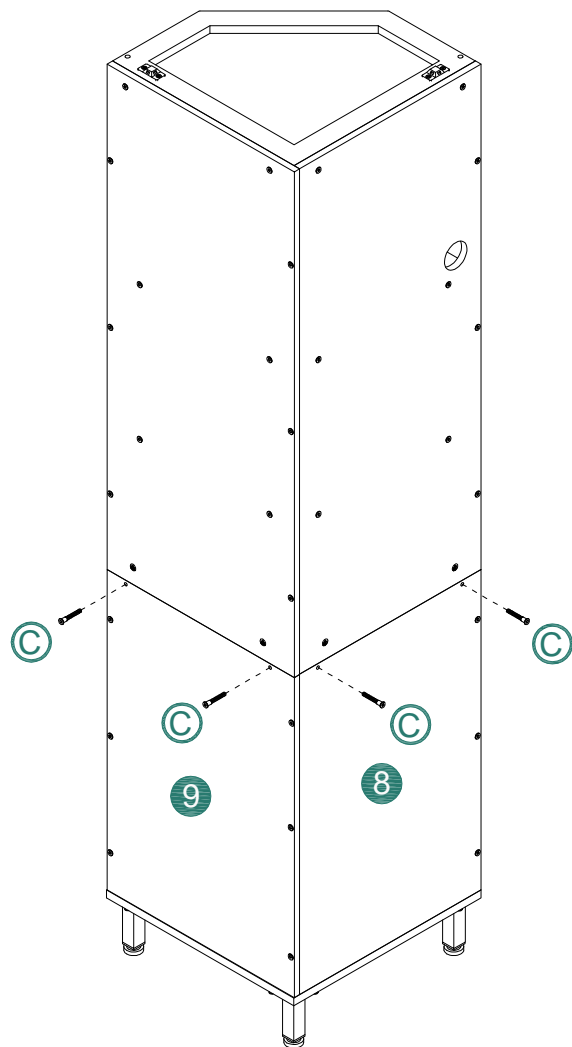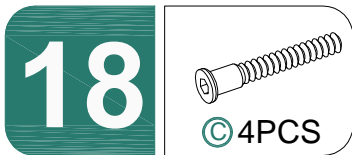

21

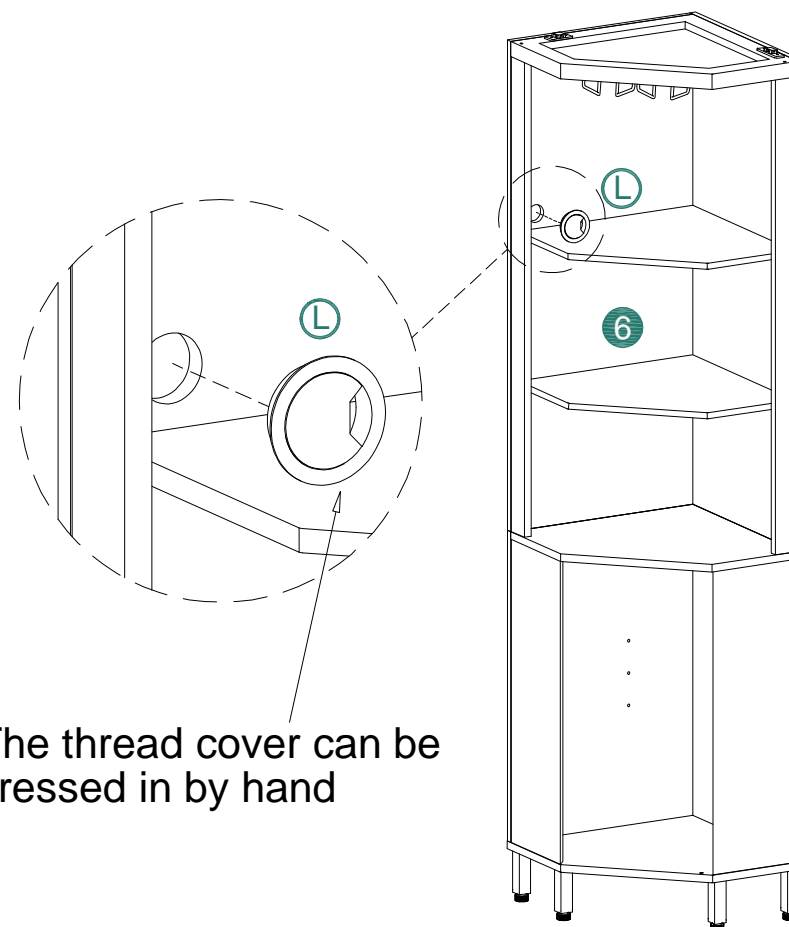


22

20

(N) 1PCS


The lamp band plug can be pulled out through the wire cover





Tape the lamp to the top of the ceiling position 90° bend to the top of the ceiling

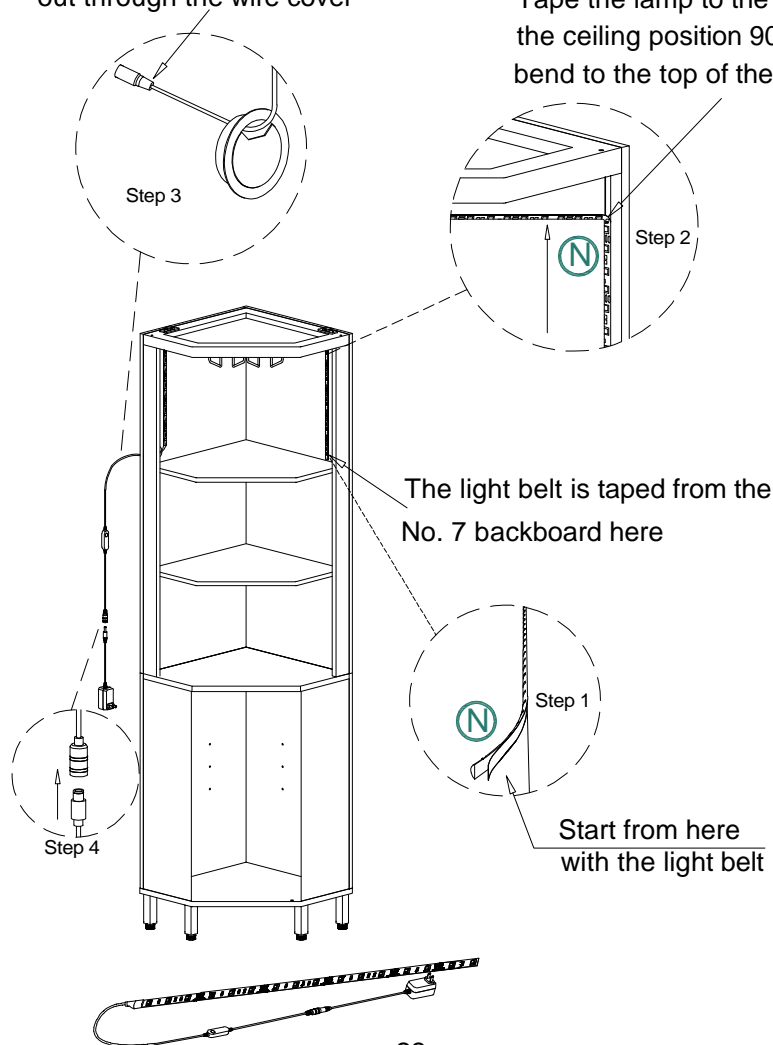


21

(P) 4PCS

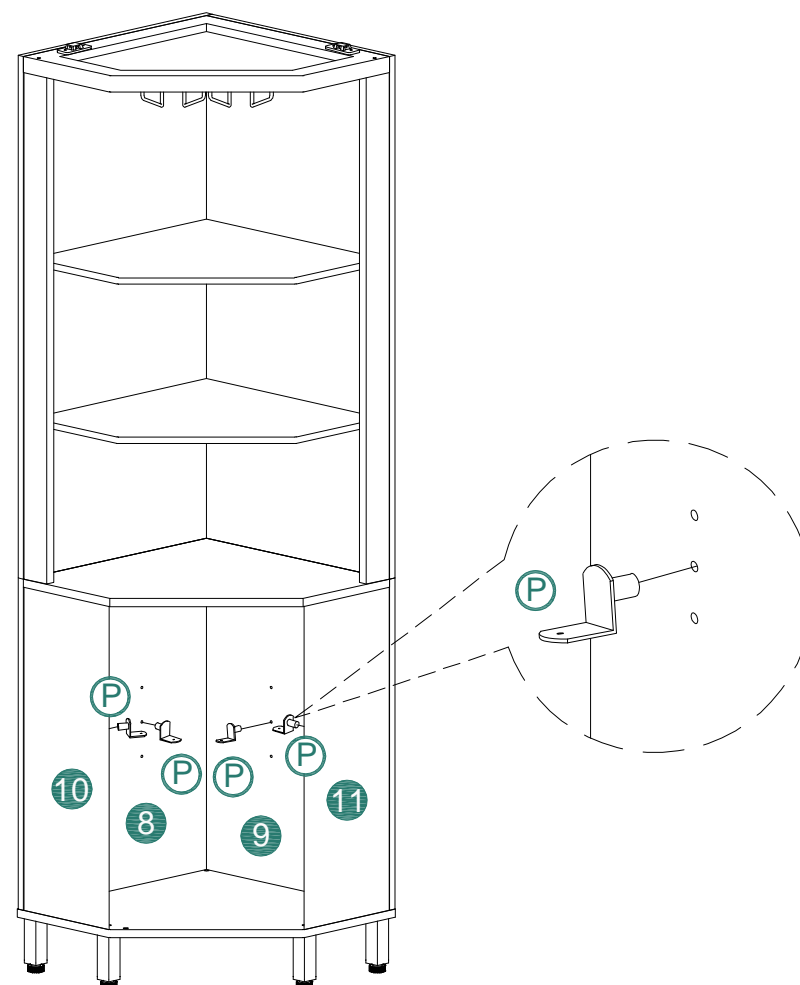

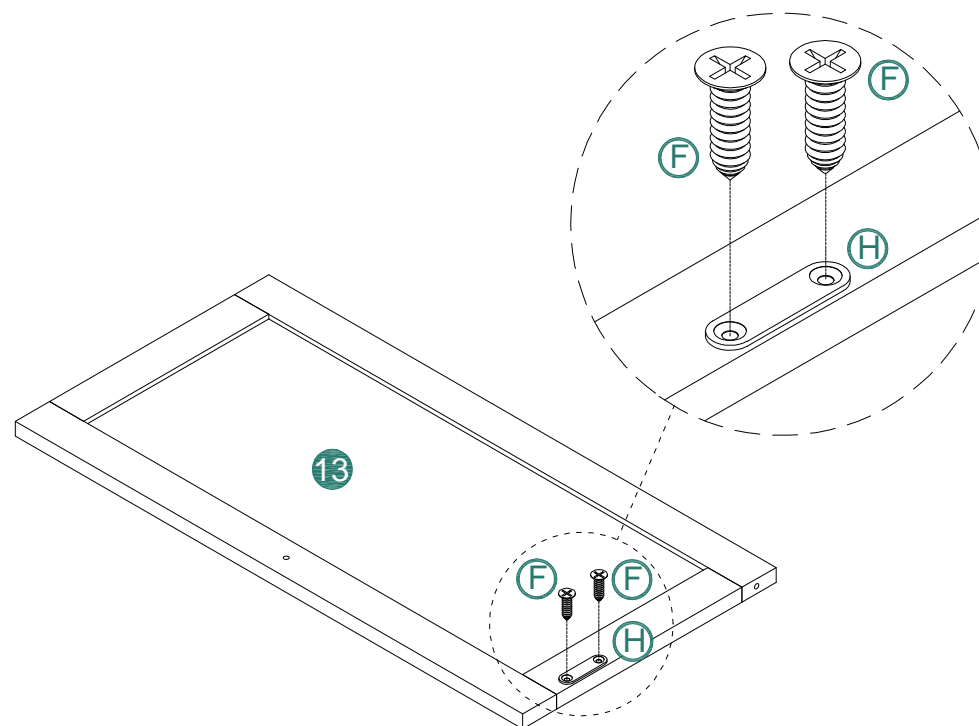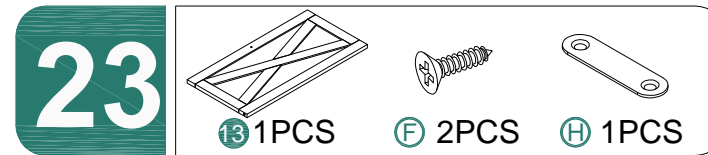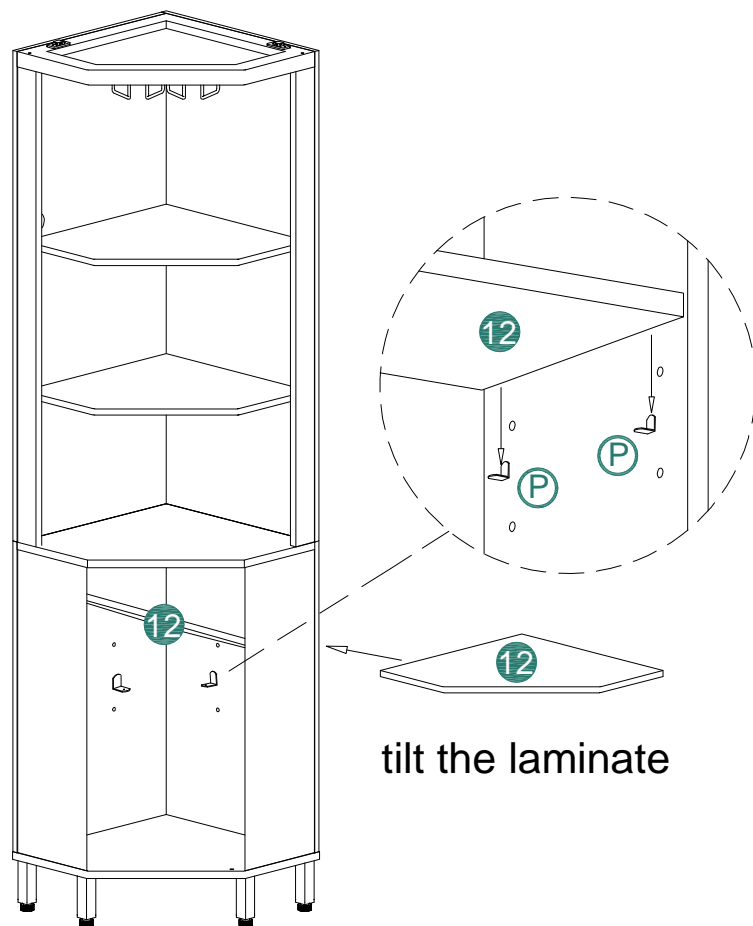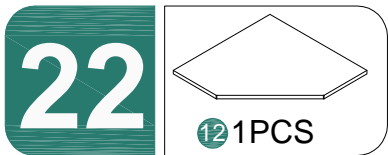

24





27


25



26

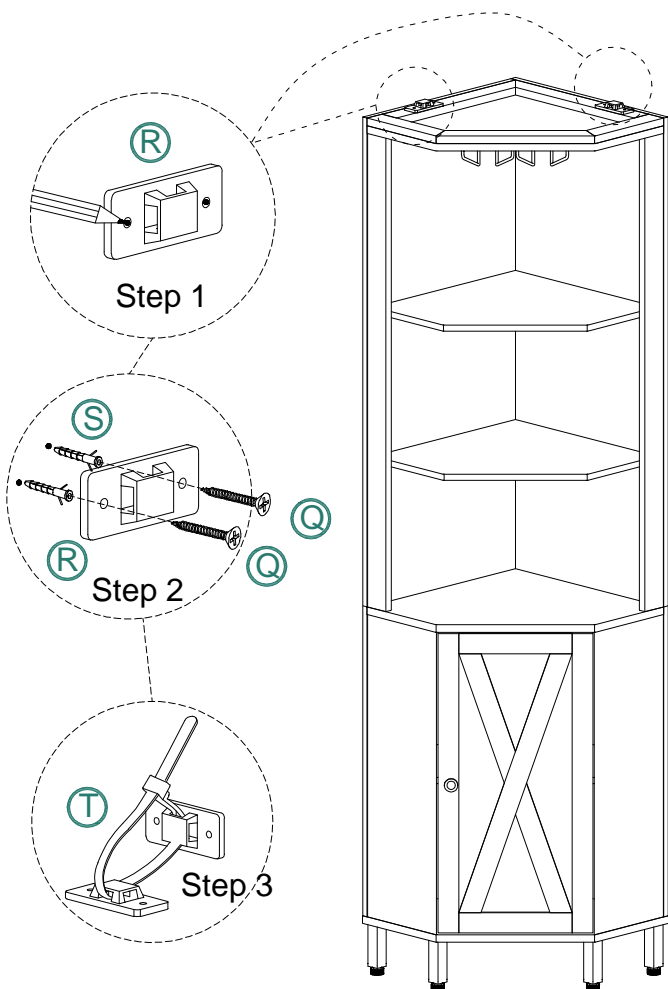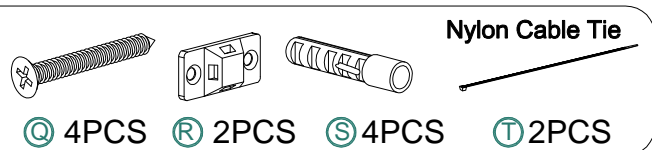

27

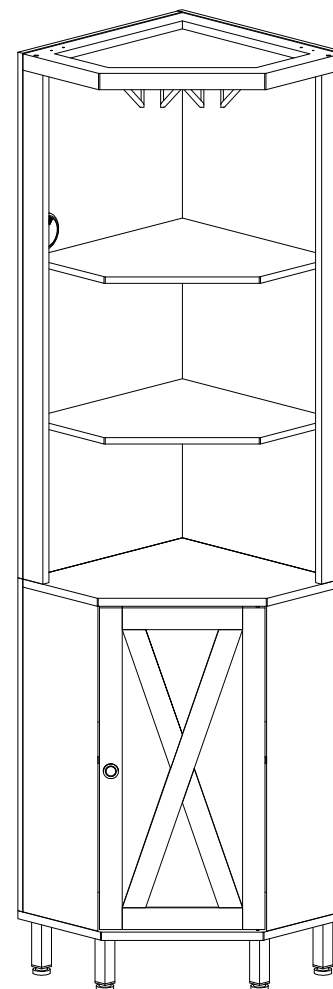

Final Assembly