



SAFETY AND CARE ADVICE

SAFETY

Please scan the QR code or enter the following youtube link for assembly video:



PLEASE SCAN QR CODE FOR ASSEMBLY VIDEO

This video is to assist you for easier installation somehow Please ensure to counter check each installation steps against assembly instructions provided.


- A.) This bed is to be operated by adults only. This is not a toy, children and pets should not be placed in the storage compartment. Ensure children and pets are kept away from the bed when operating the lift mechanism.
- B.) Before placing any items in the storage compartment, ensure that the compartment is fully opened. Additionally, confirm that the compartment is fully closed after storing items. Do not overload the storage area.
- C.) Prior to closing or operating the storage compartment, please thoroughly check to ensure that no person, pet, or any part of the body is inside or in close proximity to the storage compartment.
- D.) If you suspect any malfunction with the gas lift piston, please contact your retailer for assistance.

ASSEMBLY INSTRUCTIONS

WOOD-OTT-NAT-60

WOOD-OTT-60

Thank you for purchasing the WOOD OTTOMAN BED.
Please read the instructions carefully to ensure safe operation of the product.

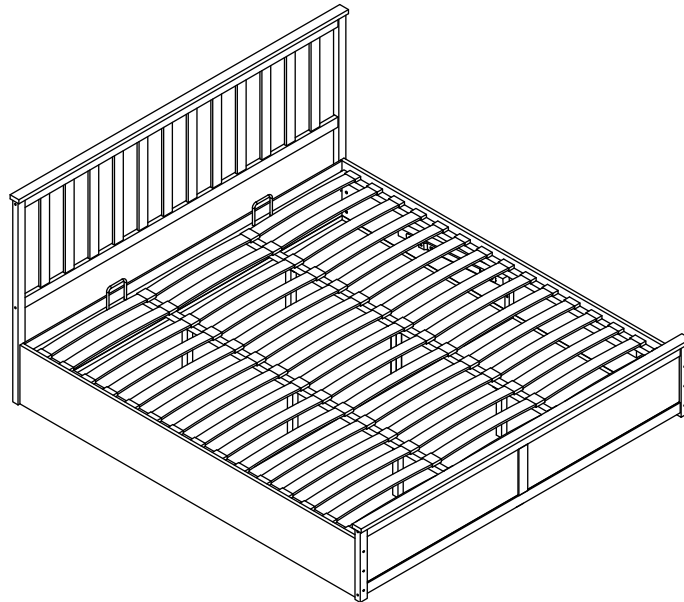

6ft O KING BED - SIZE:2100X1900x1020mm




Approx.90 minutes
Set Up Times

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.


Tools Required




5mm Allen key x 1



4mm Allen key x 1



Spanner x1



Screwdriver
(Not Provided)

ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is intended for a maximum person's weight of 110kg per side. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Please dismantle for transportation
- Tools are included.


WARNINGS

- Only use the storage compartment when the frame is fully raised in the up position.
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO use caution when operating, this bed uses a pressured mechanism.
- DO keep hands and fingers clear of the mechanism when opening and closing the bed for use.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT stand on the product.
- DO NOT remain on the bed whilst the lifting mechanism is in use.
- DO NOT expose this product to dripping or splashing, rain or areas with heavy moisture.
- DO NOT place any objects filled with liquids, such as vases, on the product.
- DO NOT insert foreign objects into the product or attempt to repair this unit by yourself.
- DO NOT place the product in direct sunlight, open flames such as candles or heat, such as radiators. Keep away from temperatures over 35°C.








CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

COMPONENTS/PARTS








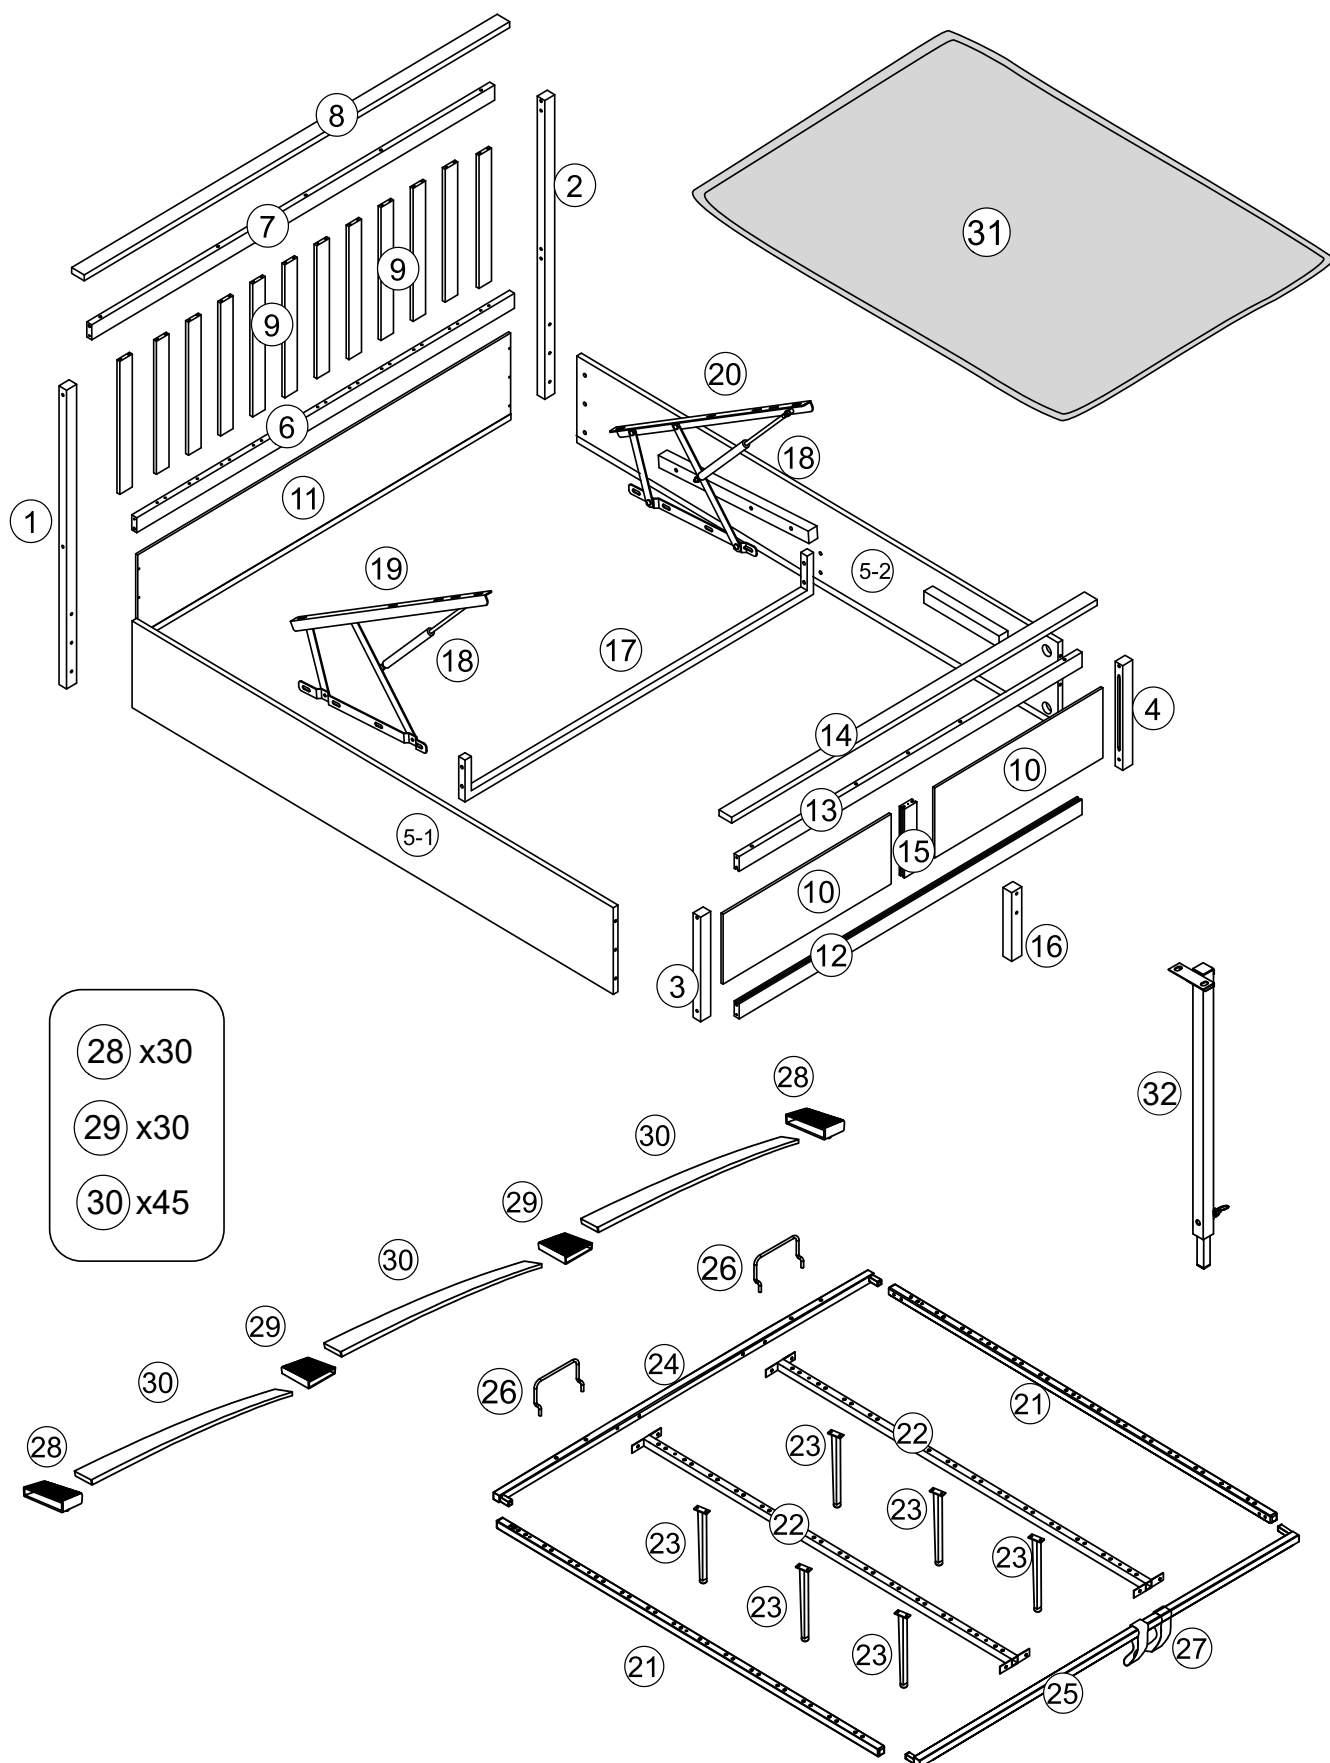


COMPONENTS / PARTS

1  HEADBOARD POST (LEFT) QTY: 1 PC Carton No:	2  HEADBOARD POST (RIGHT) QTY: 1 PC Carton No:	3  FOOTBOARD POST (LEFT) QTY: 1 PC Carton No:
4  FOOTBOARD POST (RIGHT) QTY: 1 PC Carton No:	5-1  LEFT SIDE RAIL QTY: 1 PC Carton No:	5-2  RIGHT SIDE RAIL QTY: 1 PC Carton No:
6  HEADBOARD BOTTOM HORIZONTAL RAIL QTY: 1 PC Carton No:	7  HEADBOARD TOP HORIZONTAL RAIL QTY: 1 PC Carton No:	8  HEADBOARD TOP CROWN QTY: 1 PC Carton No:
9  HEADBOARD VERTICAL SLAT QTY: 12 PC Carton No:	10  FOOTBOARD PANEL BOARD QTY: 2 PCS Carton No:	11  HEADBOARD BOTTOM PANEL BOARD QTY: 1 PC Carton No:
12  FOOTBOARD BOTTOM HORIZONTAL RAIL QTY: 1 PC Carton No:	13  FOOTBOARD TOP HORIZONTAL RAIL QTY: 1 PC Carton No:	14  FOOTBOARD TOP CROWN QTY: 1 PC Carton No:
15  FOOTBOARD CENTRE PANEL RAIL QTY: 1 PC Carton No:	16  METAL FRAME SUPPORT WOOD BLOCK QTY: 1 PC Carton No:	17  SIDERAIL STRETCHER RAIL QTY: 1 PC Carton No:
18  GASLIFT PISTON QTY: 2 PCS Carton No:	19  FOLDING MECHANISM (LEFT) QTY: 1 PC Carton No:	20  FOLDING MECHANISM (RIGHT) QTY: 1 PC Carton No:
21  FRAME SIDE BAR (LEFT & RIGHT) QTY: 2 PCS Carton No:	22  CENTRE SUPPORT RAIL QTY: 2 PC Carton No:	23  CENTRE SUPPORT LEG QTY: 6 PCS Carton No:
24  HEADBOARD FRAME BAR QTY: 1 PC Carton No:	25  FOOTBOARD FRAME BAR QTY: 1 PC Carton No:	26  MATTRESS STOPPER QTY: 2 PCS Carton No:
27  FABRIC STRAP HANDLE QTY: 1 PCS Carton No:	28  END SLAT CAP QTY: 30 PCS Carton No:	29  CENTRE SLAT CAP QTY: 30PCS Carton No:
30  WOOD SLAT QTY: 45 PCS Carton No:	31  NON WOVEN FABRIC QTY: 1 PC Carton No:	32  SAFETY SUPPORT ARM QTY: 1 PC Carton No:

FITTINGS

NOTE the quantities below are the correct amount to complete the assembly in some cases more fittings may be supplied than required


A x4  Wood Dowel $\Phi 8 \times 30 \text{mm}$	B x56  Wood Dowel $\Phi 6 \times 30 \text{mm}$	C x8  Bolt $\Phi 6 \times 70 \text{mm}$	D x9  Bolt $M6 \times 65 \text{mm}$	E x6  T-Nut
F x6  Bolt $M6 \times 50 \text{mm}$	G x4  Bolt $M6 \times 35 \text{mm}$	H x6  Stud $M6 \times 60 \text{mm}$	J x6  Nut $M6$	K x6  Half Moon Washer
L x1  Spanner $M6$	M x1  Allen Key $M4$	N x8  Bolt & Washer $\Phi 8 \times 20 \text{mm}$	O x37  Bolt $\Phi 8 \times 15 \text{mm}$	P x4  Nut $M8$
Q x1  Spanner $M10$	R x1  Allen Key $M5$	S x6  Screw $\Phi 4 \times 50 \text{mm}$	T x1  Wood Glue	U x6  Screw $\Phi 4 \times 20 \text{mm}$
I x1  Screw driver (not provided)	V x1  Hook	 Gloves (Not Provided)		



RULER / MEASURE TAPE (not provided)

RULER - USE THIS RULER TO HELP CORRECTLY IDENTIFY THE BOLTS & FITTINGS



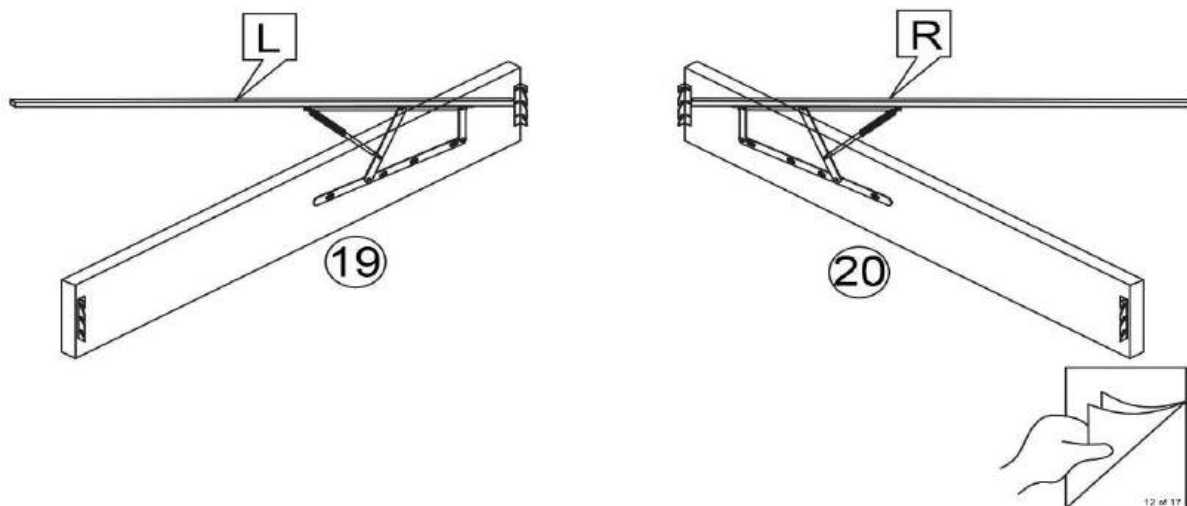


Turn to page 12 for fitting the hinges

! IMPORTANT PISTON INFORMATION

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All pistons are tested in the factory for correct pressure and operation before use.

Initially it might appear that the pistons are very stiff when opening and closing the ottoman frame, THIS IS NORMAL.

After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.

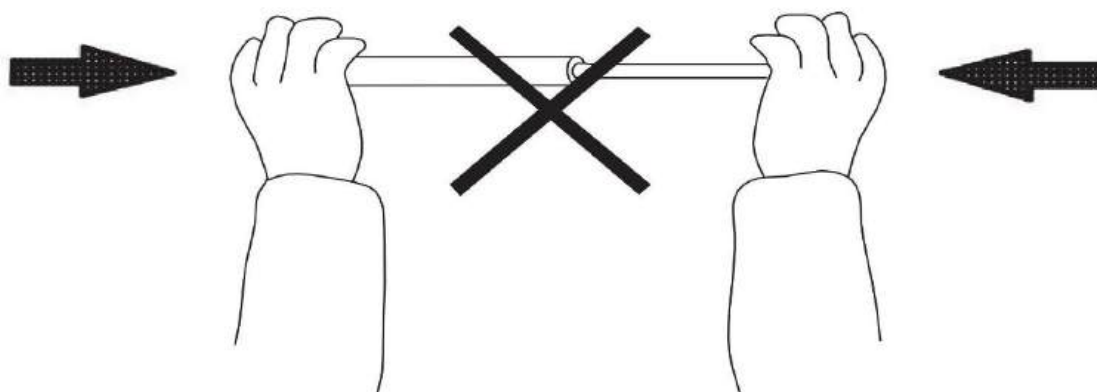


Hints and Tips

To operate the ottoman, always use 2 hands at arm's length and only where illustrated on this product. You must ensure the mattress is on the bed frame before lifting the mechanism.

Failure to do so may result in injury.

To ensure your safety please do not stand too close in case the frame bounces up. The weight of the mattress loaded on the frame will keep the frame in a lower position until it is pulled upwards by the user.

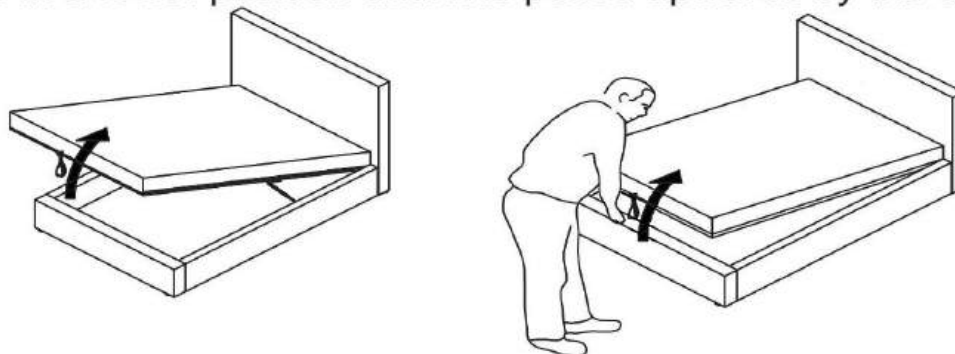

If removing the mattress, make sure the frame is secured so it does not flip open. When lifting the bed frame, remove pillows and covers.



PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman - **THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT** - and the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut, it will close completely under its own weight.

When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the Side Rail. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the Footboard of the bed slightly to the left or right whilst leaving the headboard of the bed frame stationary.

Tip for difficulty with compression:



If you are experiencing difficulty with the initial compression try fitting one piston at a time (following the Assembly Instructions) then press down on the side of the frame with the piston fitted - this acts like a big lever (The weight of the mattress can be used to supplement the load exerted). Effectively you are doubling the amount of force applied, because you have halved the resistance offered by the pistons. It can take slightly more effort than you might feel comfortable applying to the bed frame at first.

**DO NOT ATTEMPT TO MOVE THE BED WHILST THE METAL BED FRAME IS IN THE UPRIGHT POSITION.
DO NOT DRAG, PULL OR PUSH THE BED WHEN RELOCATE THE BED, PLEASE LIFT THE BED.**

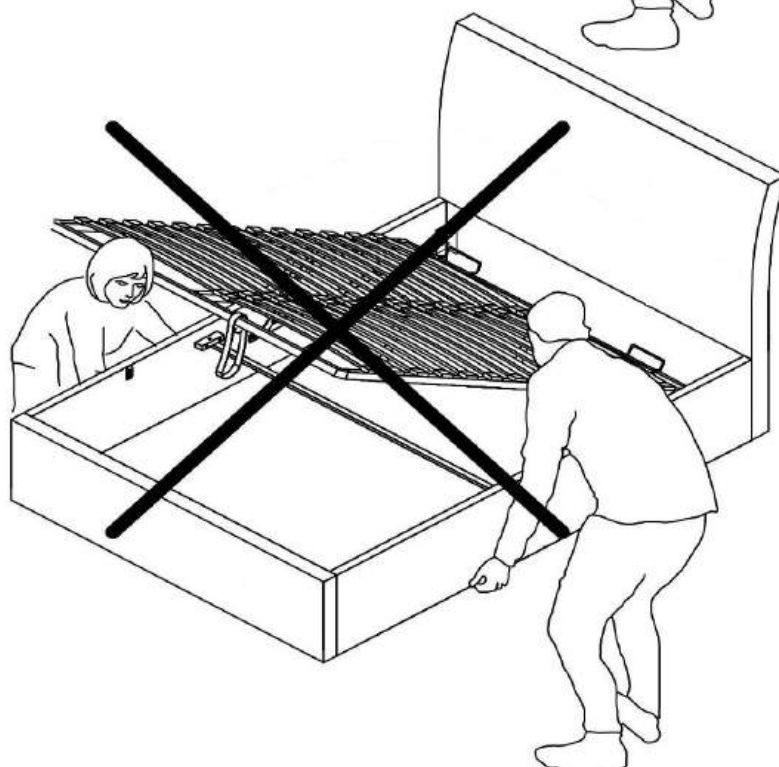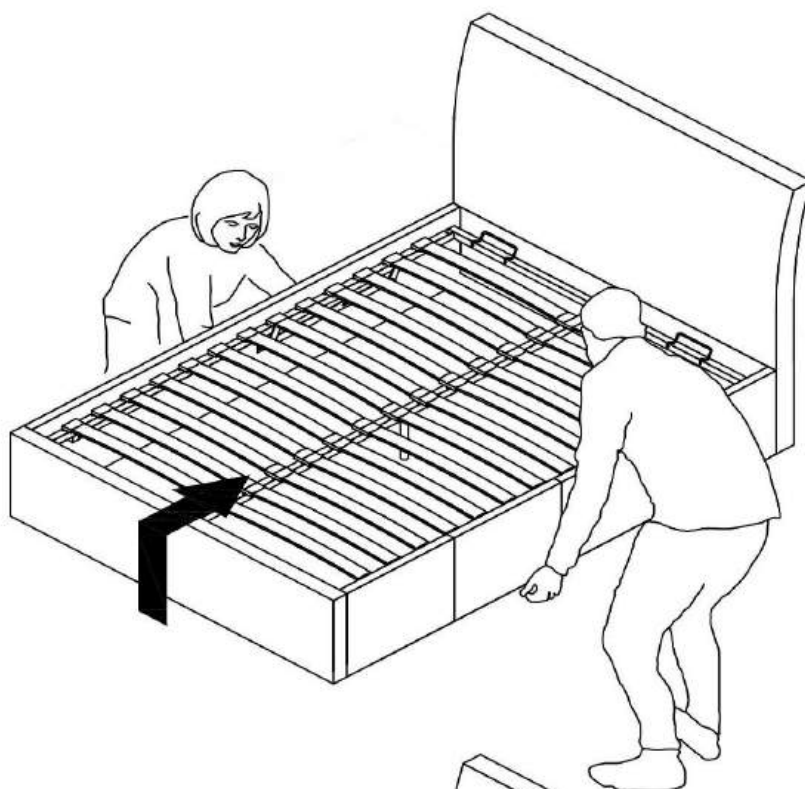


Hints and Tips


Failure to do so may result in injury.

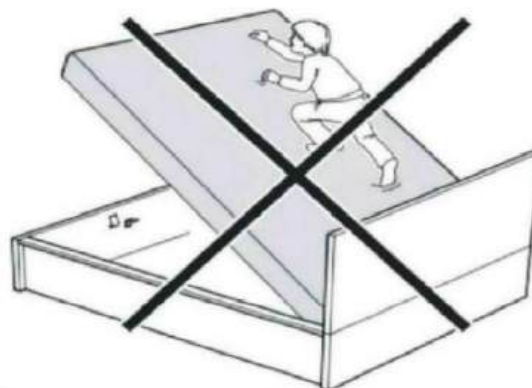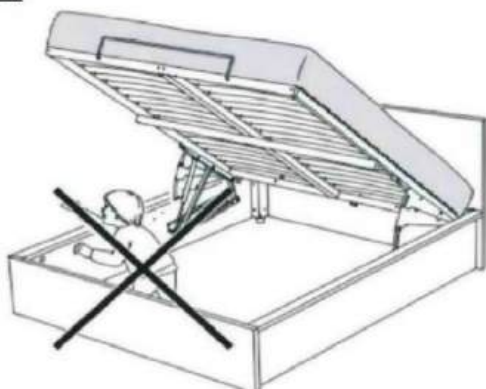

Bed frame must be CLOSED when moving the bed.

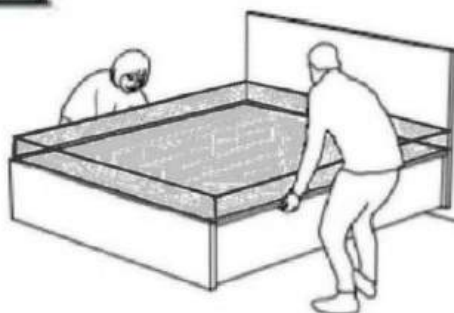


Layout Parts on Soft Surface

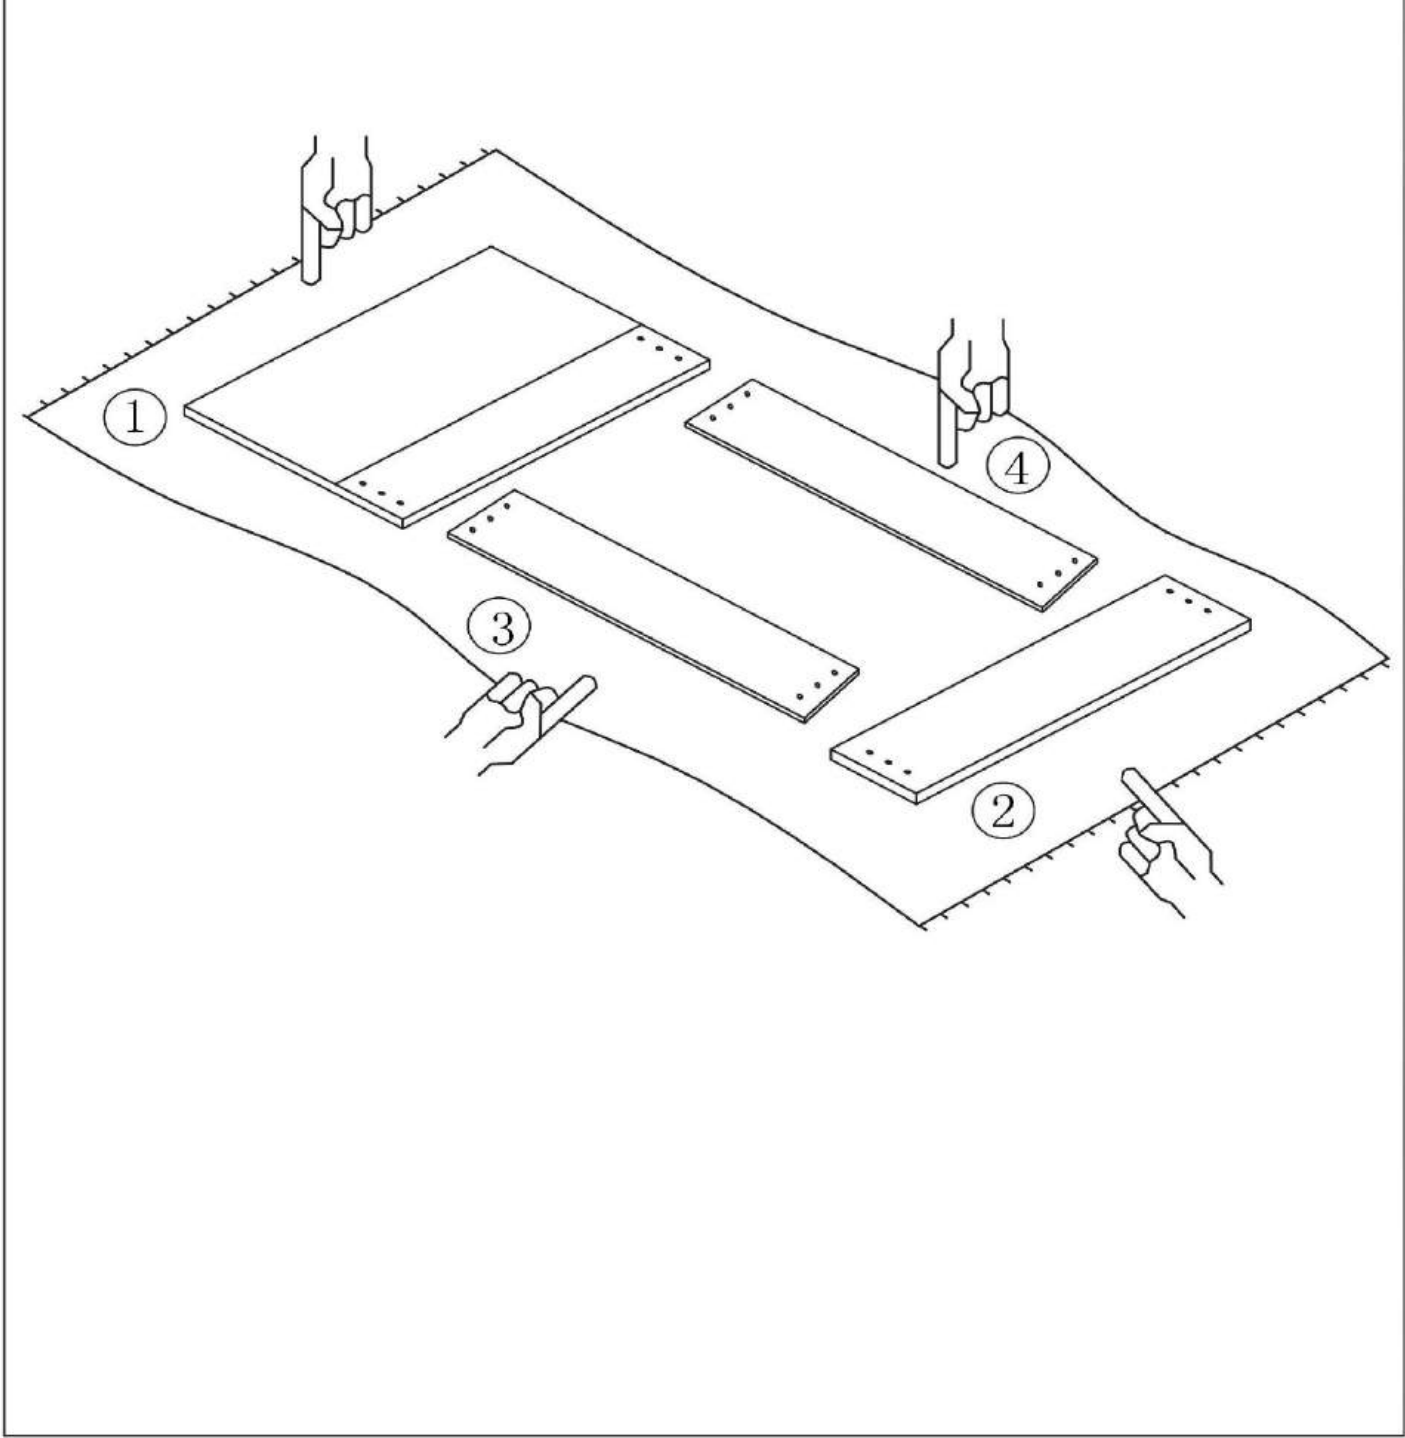

PARTS REQUIRED			
⑥ Headboard Bottom Horizontal Rail 1x	A x4	B x 48	S x4
⑦ Headboard Top Horizontal Rail 1x			
⑨ Headboard Vertical Slats 12x	Wood Dowel Φ8x30mm	Wood Dowel Φ6x30mm	Screw Φ4x50mm

Step 1 Attaching Headboard Panel


Insert Wood Dowel **B** to all the 10 pcs of Headboard Vertical Slats (⑨) and then slot them to Headboard Top (⑦) & Bottom (⑥) Horizontal Rail and secure with Screw **S** using Screwdriver **I**

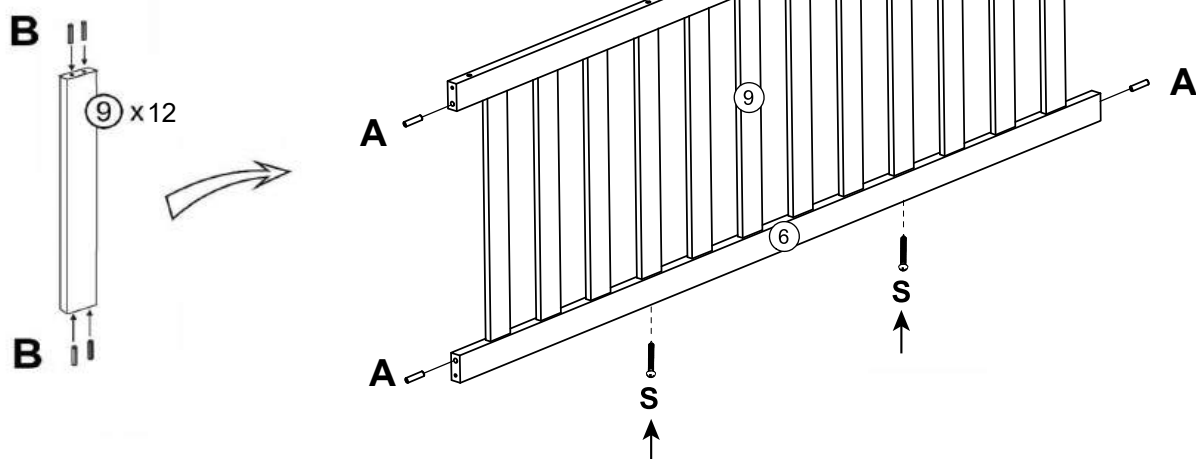

Step 2 Attaching Headboard post

Secure Headboard Post (Left) ① and Headboard Post (Right) ② to the Headboard Panel with Bolt **C** using Allen Key **M**

PARTS REQUIRED		C x4
① Headboard Post (Left) 1x	② Headboard Post (Right) 1x	
		Bolt Φ6x70mm

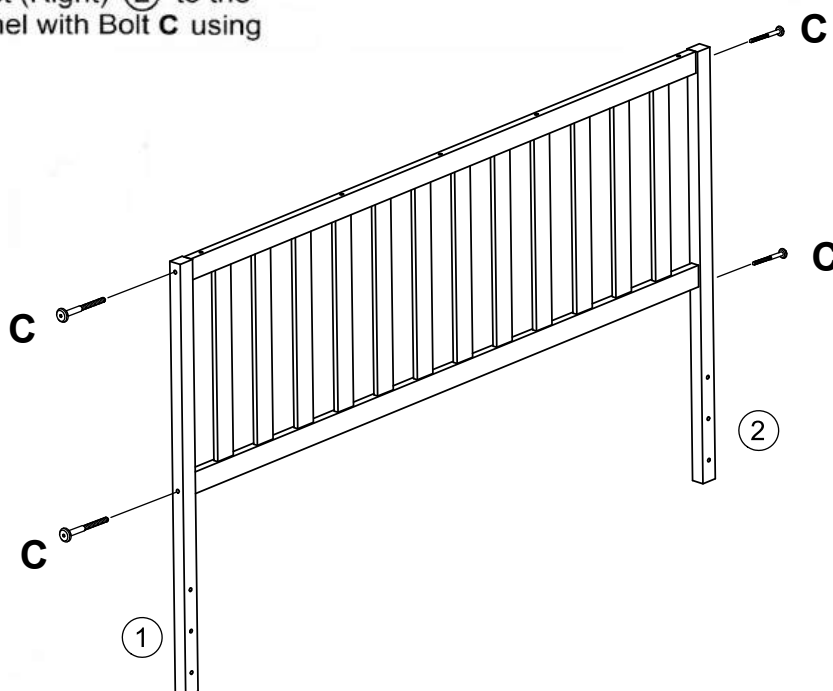

Step 3 Attaching Headboard Top Crown

Attach Headboard Top Crown ⑧ to the Headboard with Bolt **D** and tighten using Allen Key **M**


PARTS REQUIRED

⑧ Headboard Top Crown 1x

D x3



Bolt
M6x65mm

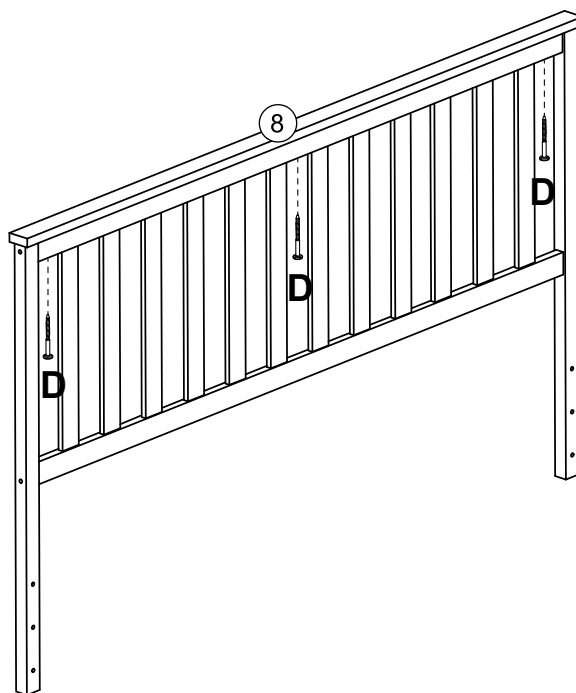

Step 4 Footboard Panel Frame

Insert Wood Dowel **B** to Footboard Centre Panel Rail ⑮ and attach it to Footboard Top Horizontal Rail ⑬ with Screw **S** using Screwdriver **I**

PARTS REQUIRED

⑬ Footboard Top Horizontal Rail 1x

⑮ Footboard Centre Panel Rail 1x

B x4




Wood Dowel
Φ6x30mm

S x1



Screw
Φ4x50mm

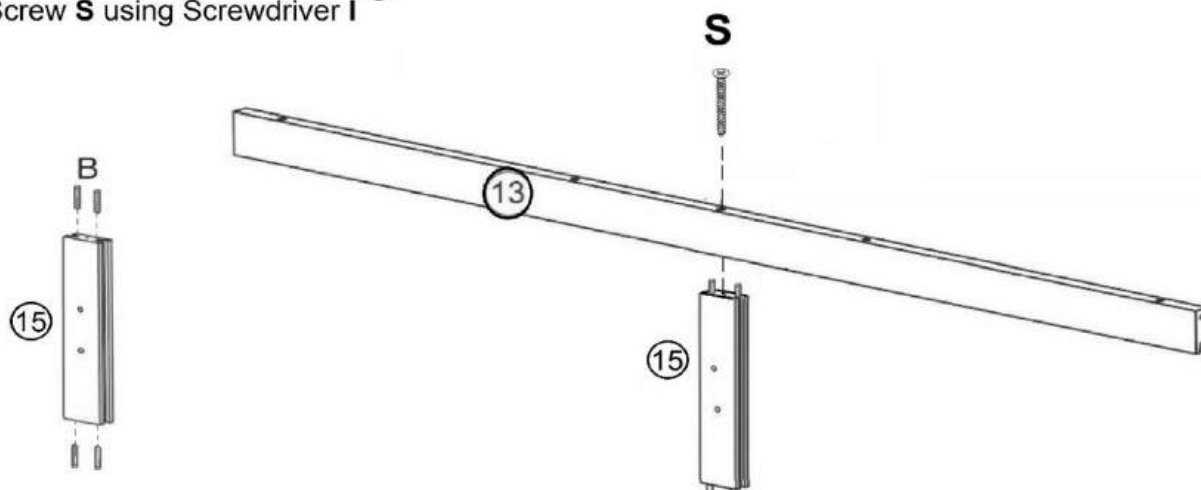

Step 5



PARTS REQUIRED

(14) Footboard Top Crown 1x

F x4


Bolt
M6 x 50mm

Please Ensure to use Bolt **F** to attach the Footboard Top Horizontal Rail (13) to Footboard Top Crown (14) as Wrong Size Bolt will Protrude and damage the Footboard Top Crown.

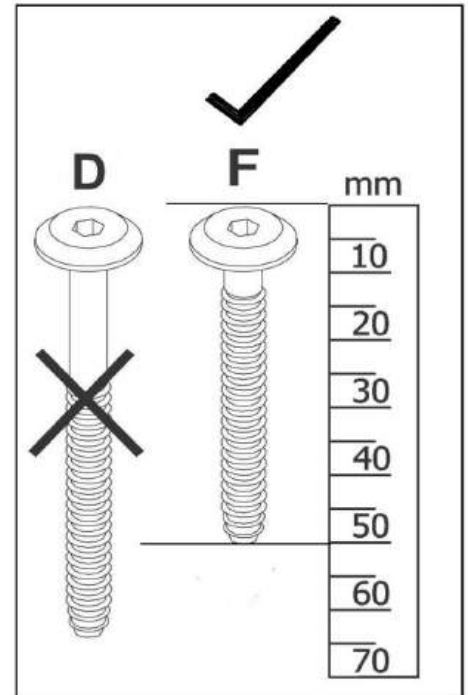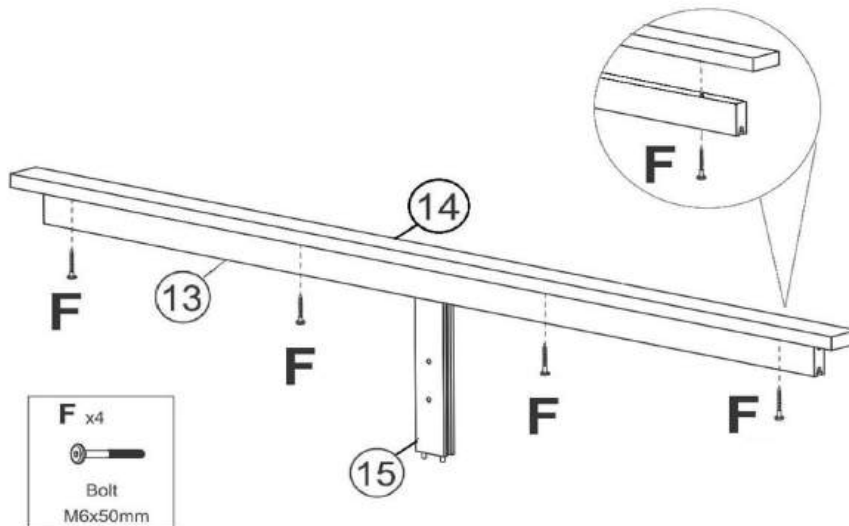

Step 6

PARTS REQUIRED

(12) Footboard Bottom Horizontal Rail 1x

B x4


Wood Dowel
Φ6x30mm

S x1




Screw
Φ4x50mm

Step 6a

Attach Footboard Bottom Horizontal Rail (12) with Screw **S**, using Screwdriver **I**. Insert Wood Dowel **B** to Footboard Top & Bottom Horizontal Rail (12) & (13)


Step 6b

Apply just a small amount of Wood Glue **T** to the groove line of Footboard Top & Bottom Horizontal Rail (12) & (13) as shown. Applying Excessively will cause Smearing.

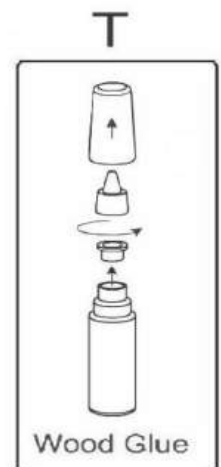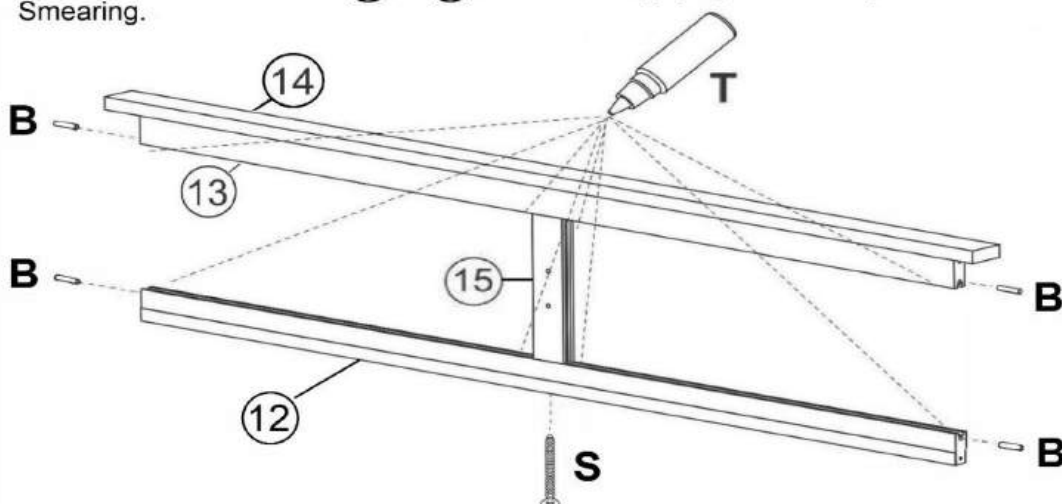

PARTS REQUIRED**⑩** Footboard Panel Board 2x**Step 7**


Slot in Footboard Panel Board **⑩** to the groove of Footboard Top & Bottom Horizontal Rail **⑫** & **⑬**

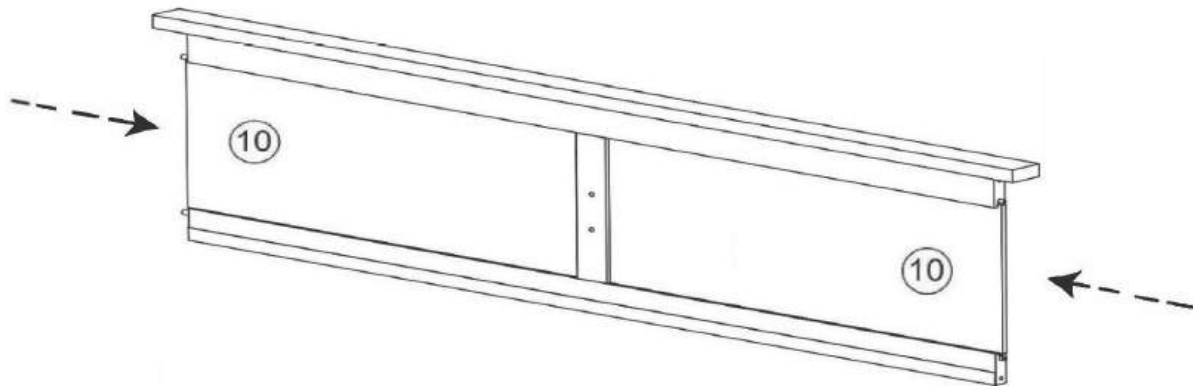**Step 8****PARTS REQUIRED****③** Footboard Post (Left) 1x**④** Footboard Post (Right) 1x**C** x4
Bolt
Φ6x70mm**H** x6
Stud
M6x60mm**Step 8a**

Attach Footboard Post (left) **③** and Footboard Post (Right) **④** to complete the Footboard with Bolt **C** and tighten with Allen key **M**.

Step 8b

Attach Stud **H** to the Footboard post **③** & **④** as shown.

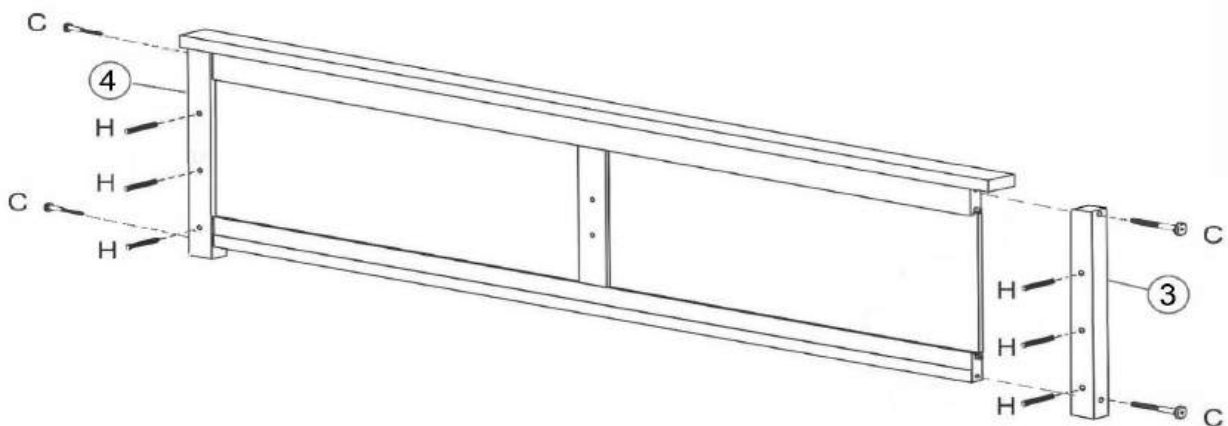

Step 9

Attach Nut **P** to Gaslift Piston (18) and to Folding Mechanism (Left) (19) & Folding Mechanism (Right) (20) using Spanner **Q**.


PARTS REQUIRED

- (18) Gaslift Piston 2x
- (19) Folding Mechanism (Left) 1x
- (20) Folding Mechanism (Right) 1x

P x4



Q x1

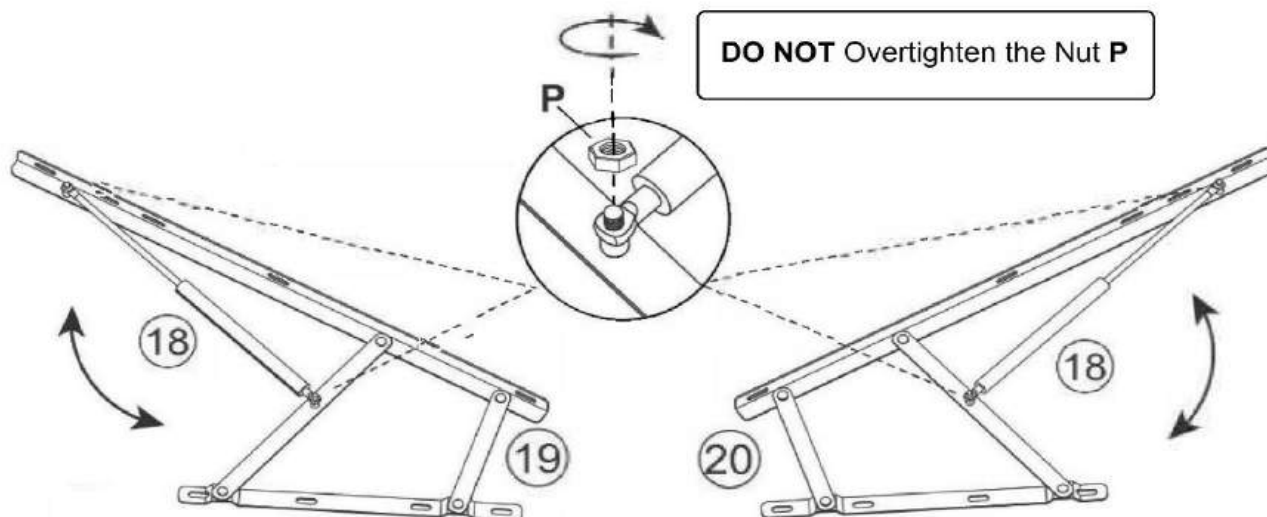


Step 10

Attach Folding Mechanism (19) & (20) to Siderail (Left) (5-1) and Siderail (Right) (5-2) with Bolt & Washer **N** using Allen Key **M** to tighten.

PARTS REQUIRED



- (5-1) Left Side Rail 1x
- (5-2) Right Side Rail 1x
- (19) Folding Mechanism (Left) 1x
- (20) Folding Mechanism (Right) 1x

N x8

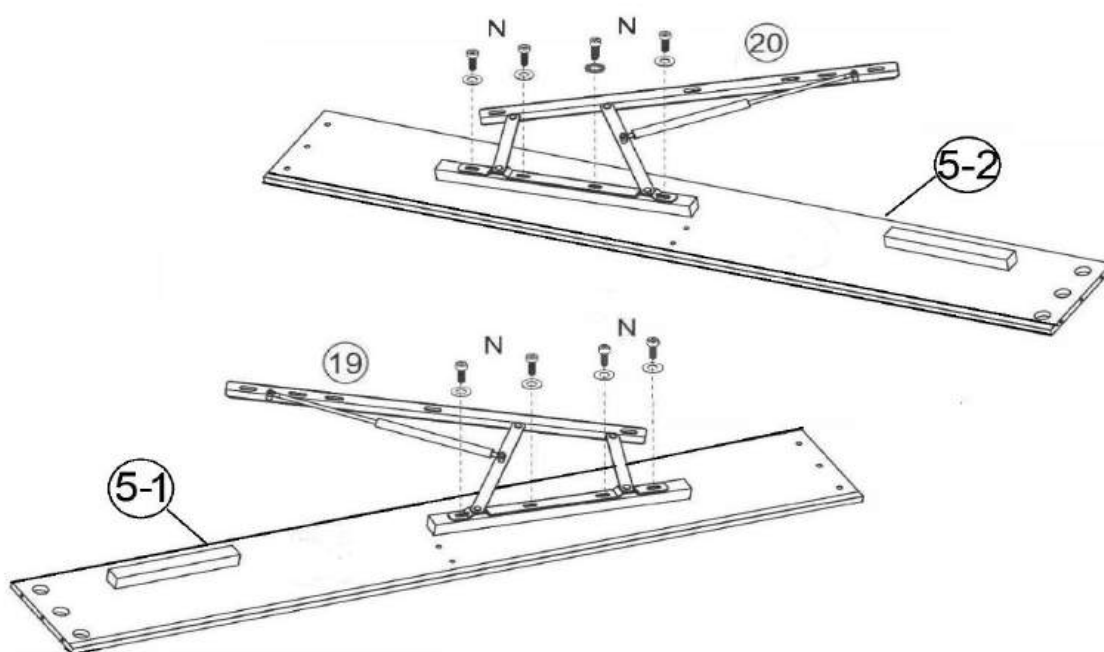


Step 11

Attach the Left & Right Siderail to the Headboard assembly with Bolt **D** and T-Nut **E** using Allen Key **M** to tighten.

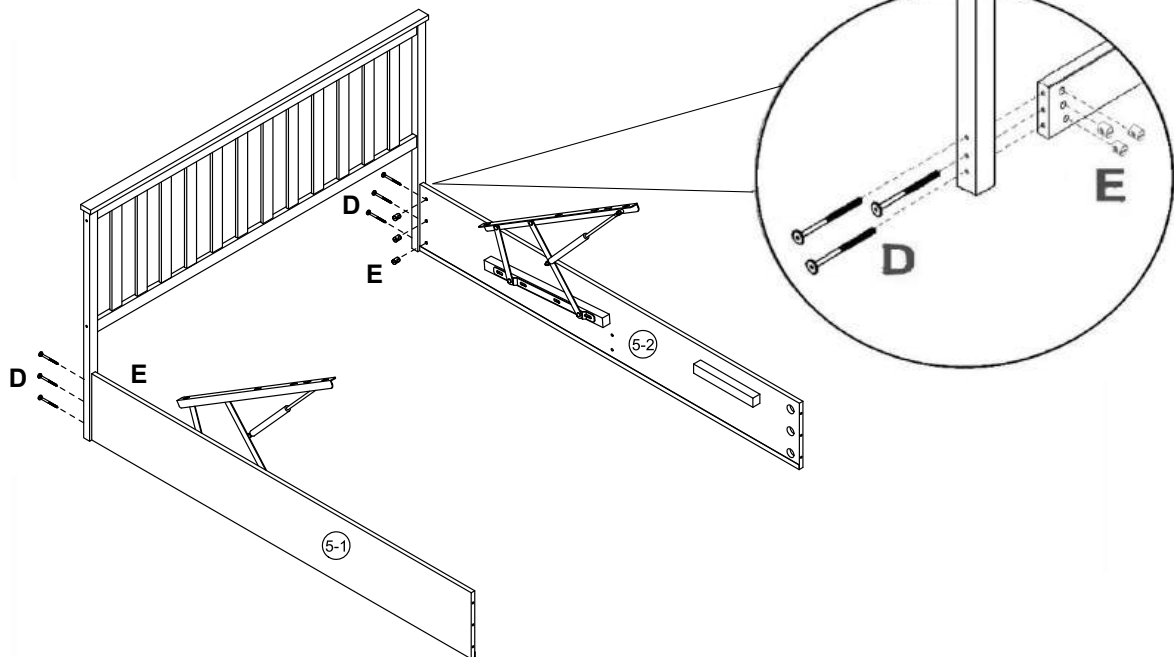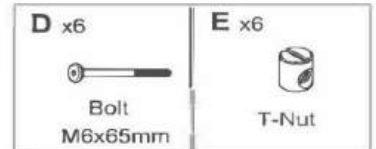

Step 12

Attach the Left & Right Siderail to the Footboard assembly with Half Moon Washer **K** and Nut **J**, using Spanner **L** to tighten.

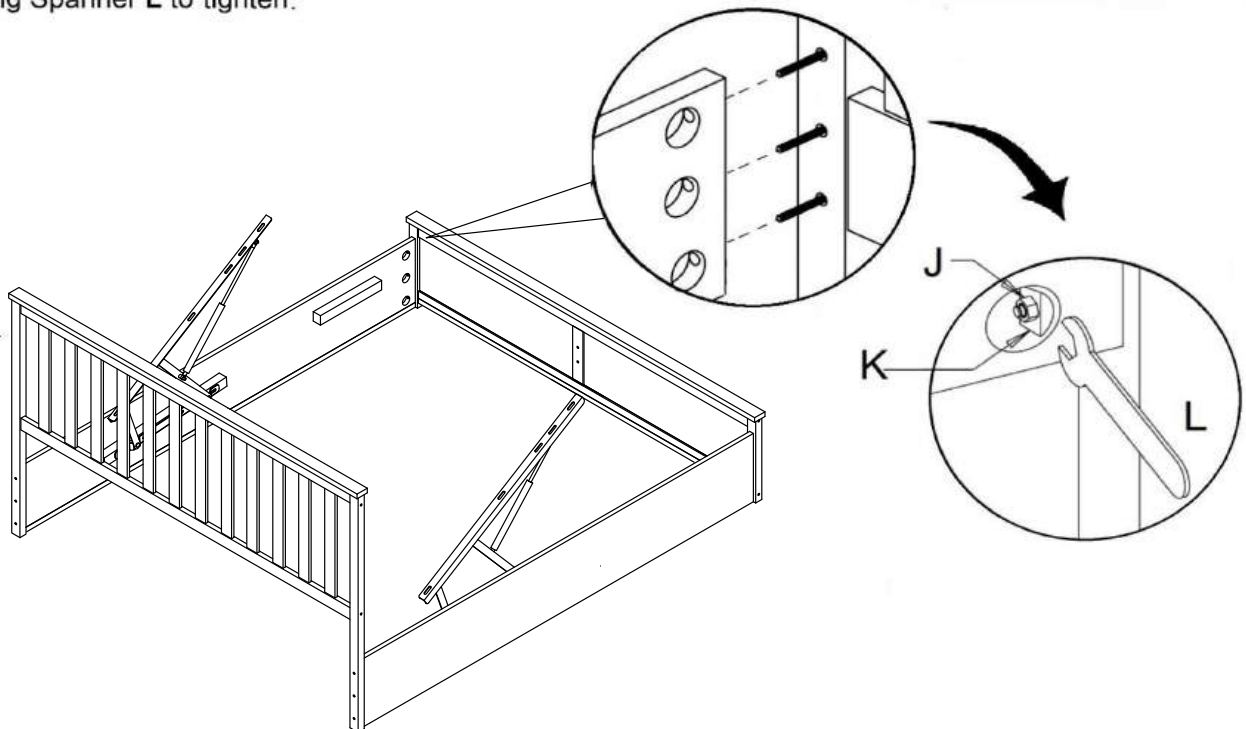

Step 13

Attach Headboard Bottom Panel Board (11) to headboard with Screw U using screwdriver.


PARTS REQUIRED

(11) Headboard Bottom Panel Board 1x

U x6



Screw
Φ4x20mm

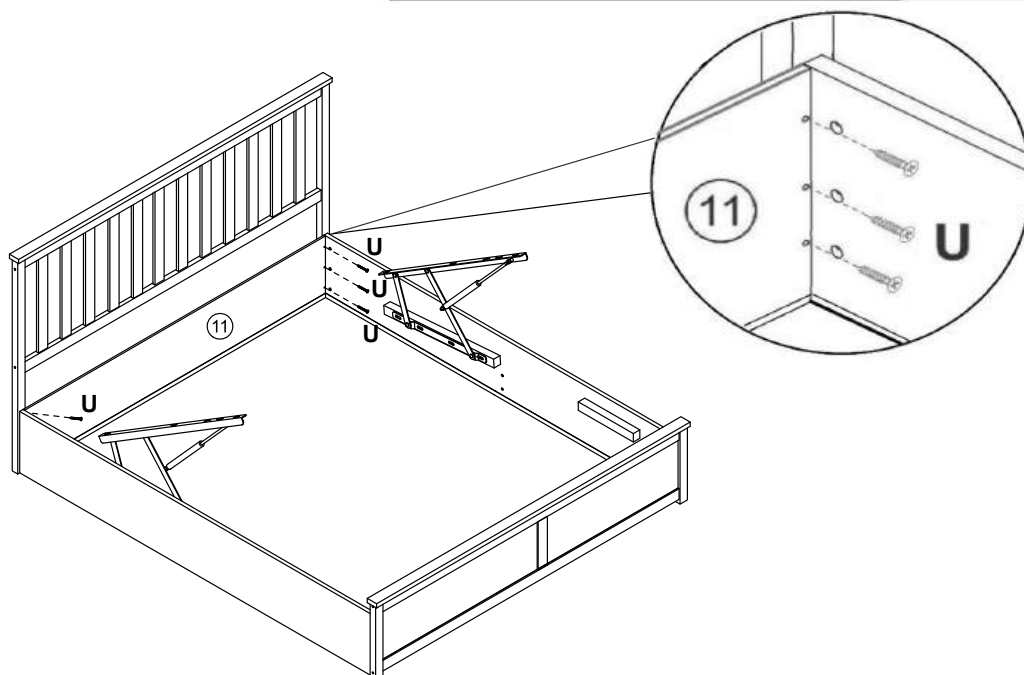


Step 14

Attach the Non Woven Fabric (31) Velcro Tape on to the bed base.

PARTS REQUIRED

(31) Non-Woven Fabric 1x

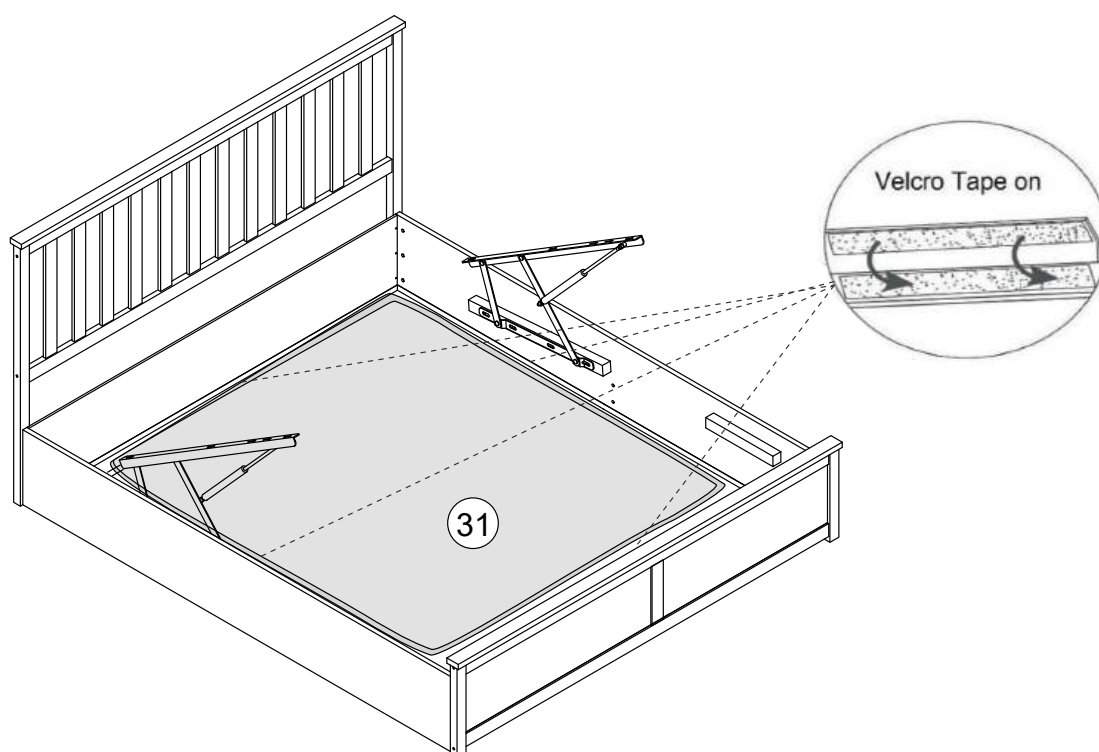

Step 15

PARTS REQUIRED

- (16) Metal Support Wood Block 1x
- (17) Siderail Stretcher Rail 1x

G x4



Bolt

M6x35mm

F x2




Bolt

M6x50mm

Step 15a Attach Metal Support Wood Block (16) to Footboard assembly with Bolt F, using Allen Key M.

Step 15b Attach Siderail Stretcher Rail (17) to Left & Right Siderail with Bolt G, using Allen Key M.

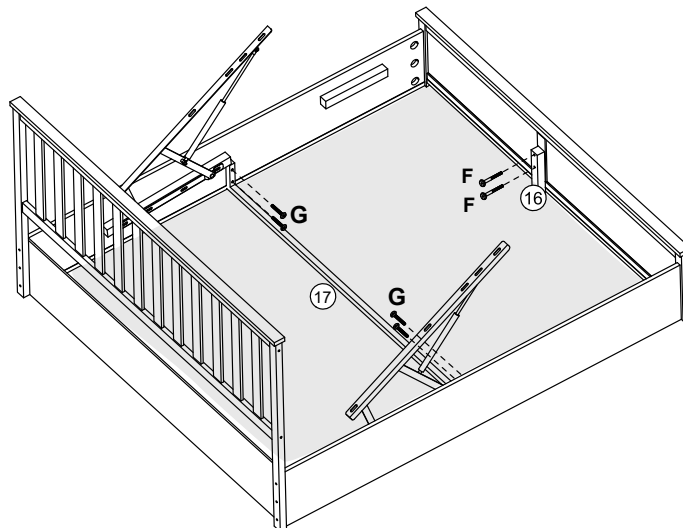

Step 16

PARTS REQUIRED


- (21) Frame Side Bar (Left & Right) 2x
- (22) Centre Support Rail 2x
- (24) Headboard Frame Bar 1x
- (25) Footboard Frame Bar 1x
- (27) Fabric Strap Handle 2x

O x 16



Bolt

Φ8x15mm

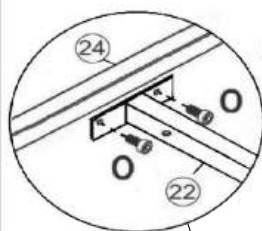


Step 16c


Attach Centre Support Rail (22) to Headboard Frame Bar (24) and secure with Bolt O using Allen Key R. Repeat the same for Footboard Frame Bar (25).

Step 16b

Insert Footboard Frame Bar (25) to Frame Side Bar (21) and secure with Bolt O using Allen Key R. Repeat the same for Headboard Frame Bar (24).

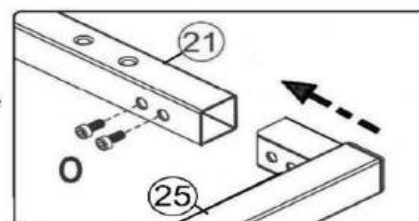

Step 16a

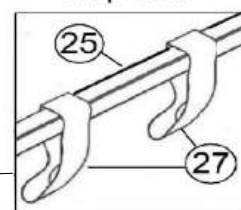

Slot in Fabric Strap Handle (27) to Footboard Frame Bar (25)

HEADBOARD
←
HEADBOARD
ORIENTATION


Step 17

Step 17a

Slot in Wood Slat **30** to End Slat Cap **28** and Centre Slat Cap **29**. Align and Push in the Slat Caps into the metal frame slat holes.


PARTS REQUIRED

- 28** End Slat Cap
- 29** Centre Slat Cap
- 30** Wood Slat
- 26** Mattress Stopper

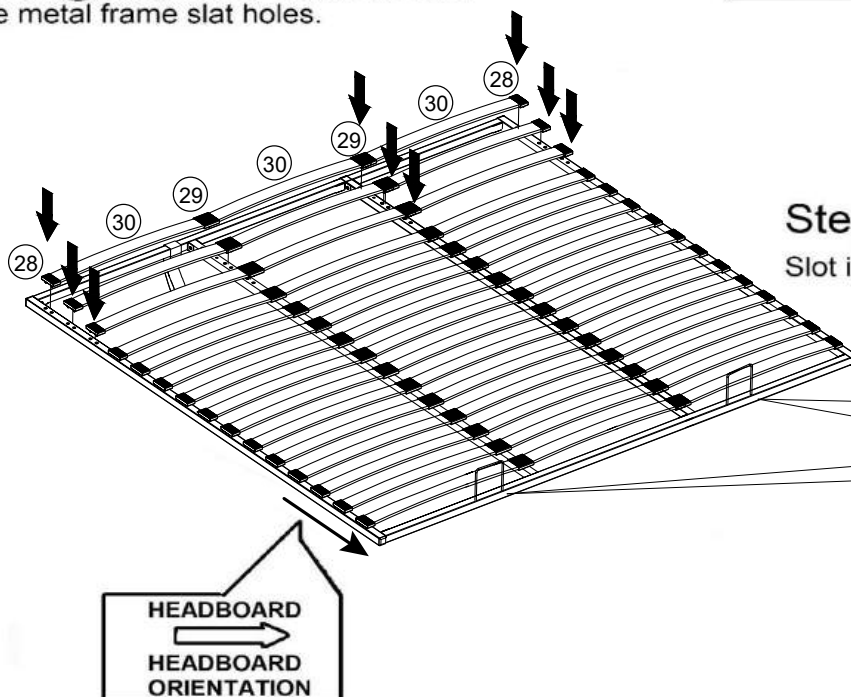


Step 17b

Slot in the Mattress Stopper

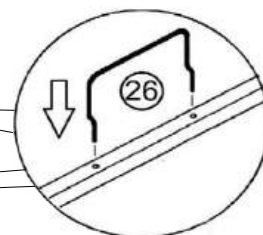

Step 18

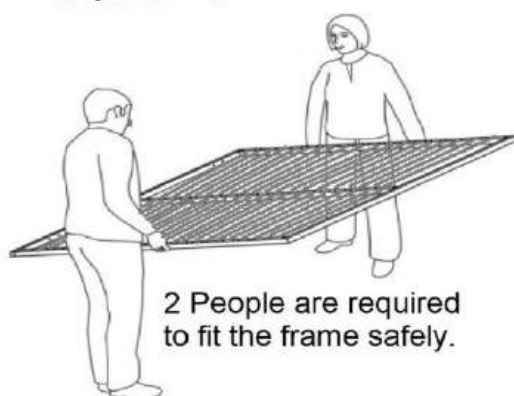


Lift the Slat Frame and place in position on top of the Gas Lift Struts so that the holes on the Gas Lift Struts lineup with the locator holes along the sides of the Slat Frame.

Secure the Slat Frame onto the Struts with Bolt **O** using Allen Key **R**.

O x6



Bolt
Φ8x15mm

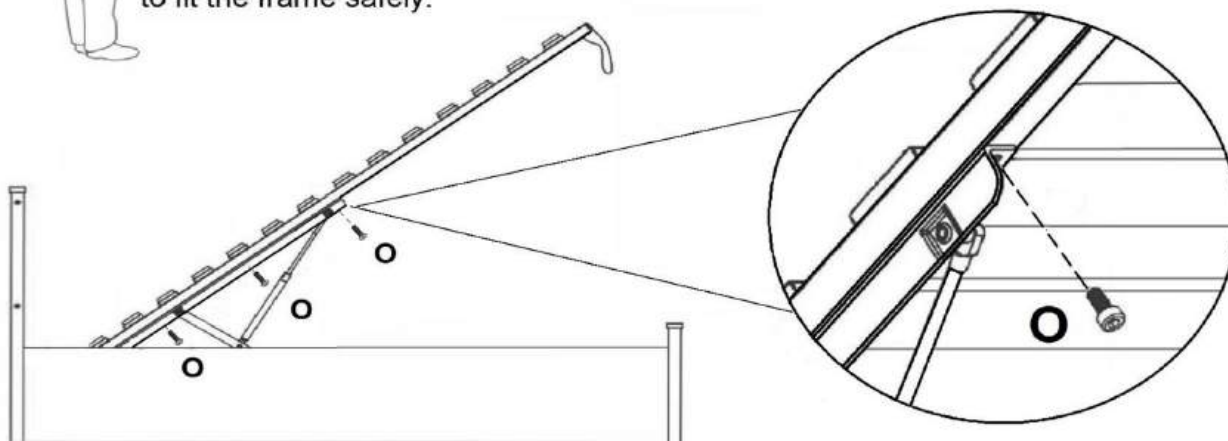

Step 19

Attach Centre Support Leg **(23)** to Slat Frame with Bolt **O** using Allen Key **R**.


PARTS REQUIRED

(23) Centre Support Leg 3x

O x12




Bolt
Φ8x15mm

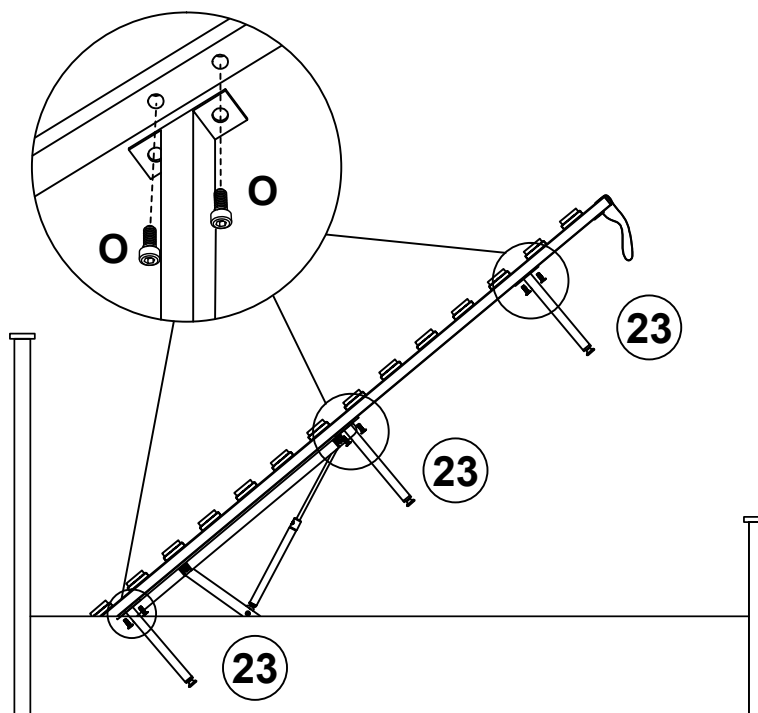

Step 20-1

PARTS REQUIRED

(32)




Safety Support Arm

O x3



Bolt
Φ8x15mm

V x1





Hook

IMPORTANT: Safety Support Arm Must be Installed.

STEP 20-1


Attach Hook **V** to Frame Side Bar **(21)** with Bolt **O**.

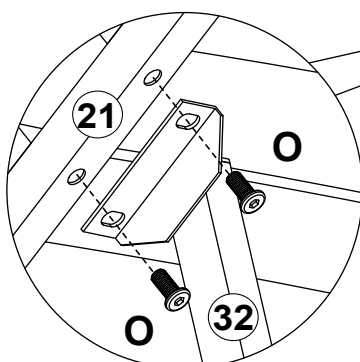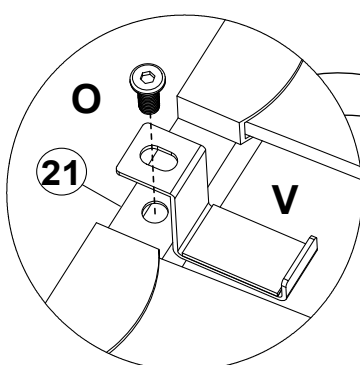

Step 20-2


STEP 20-2

Attach Safety Support Arm **(32)** to Frame Side Bar **(21)** with Bolt **O**.

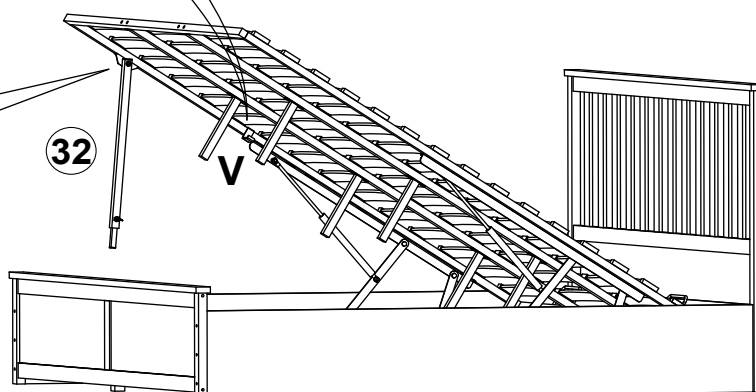


Step 20-2a

Safety Support Arm can be installed on the Right Side of the Frame Side Bar **(21)** at User's choice and convenience.

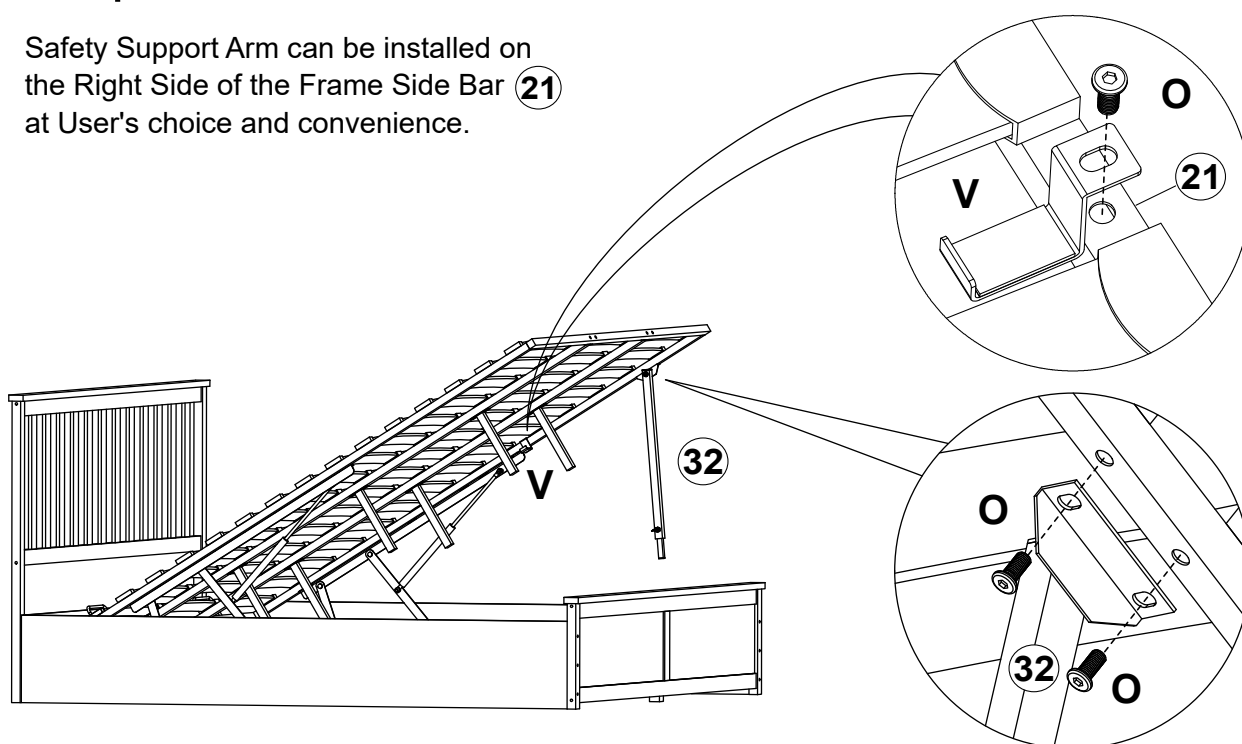


Step 21

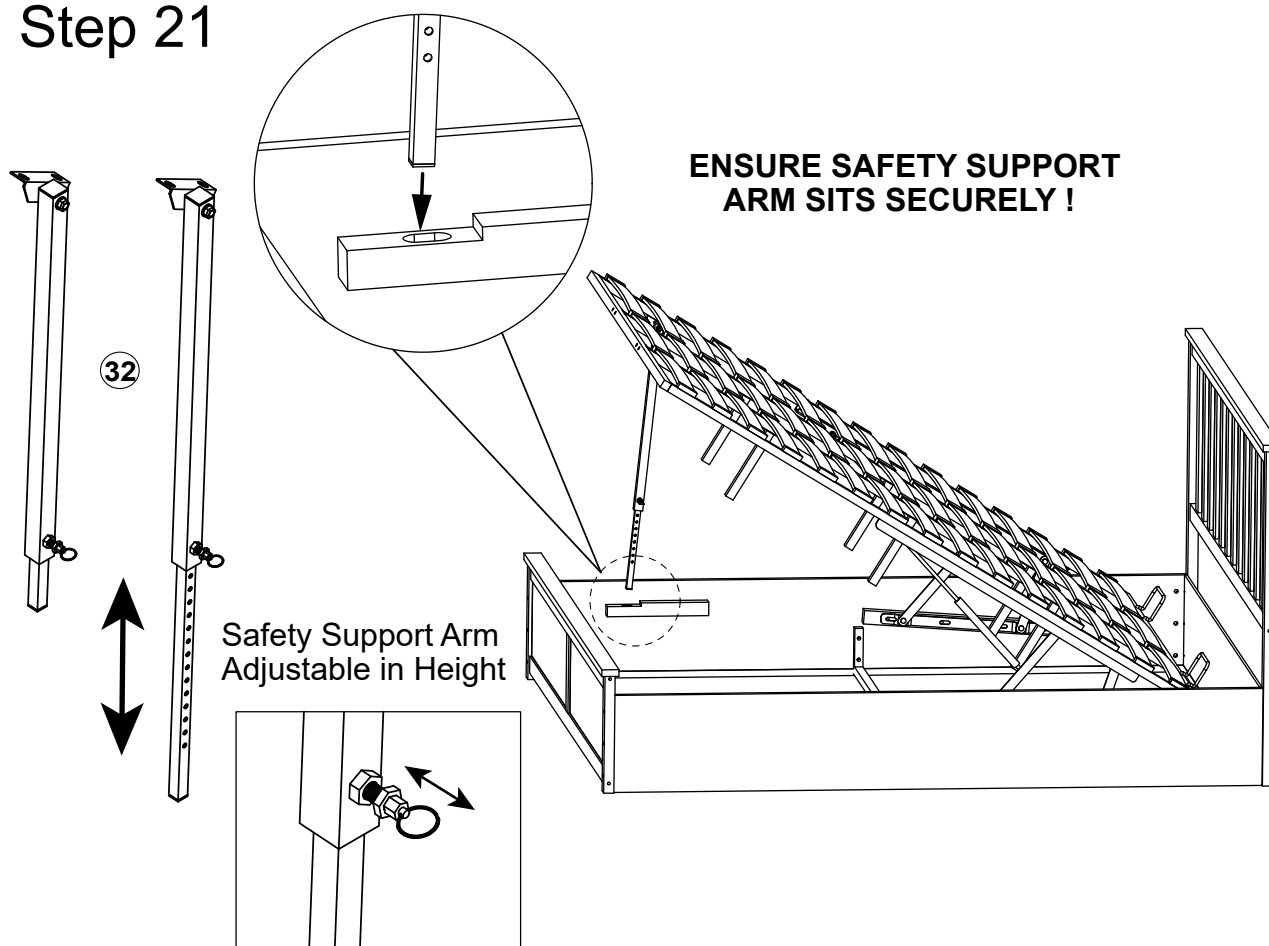


Step 22

Lift Parked Safety Support Arm **32**
from Hook to sit securely into the slot hole

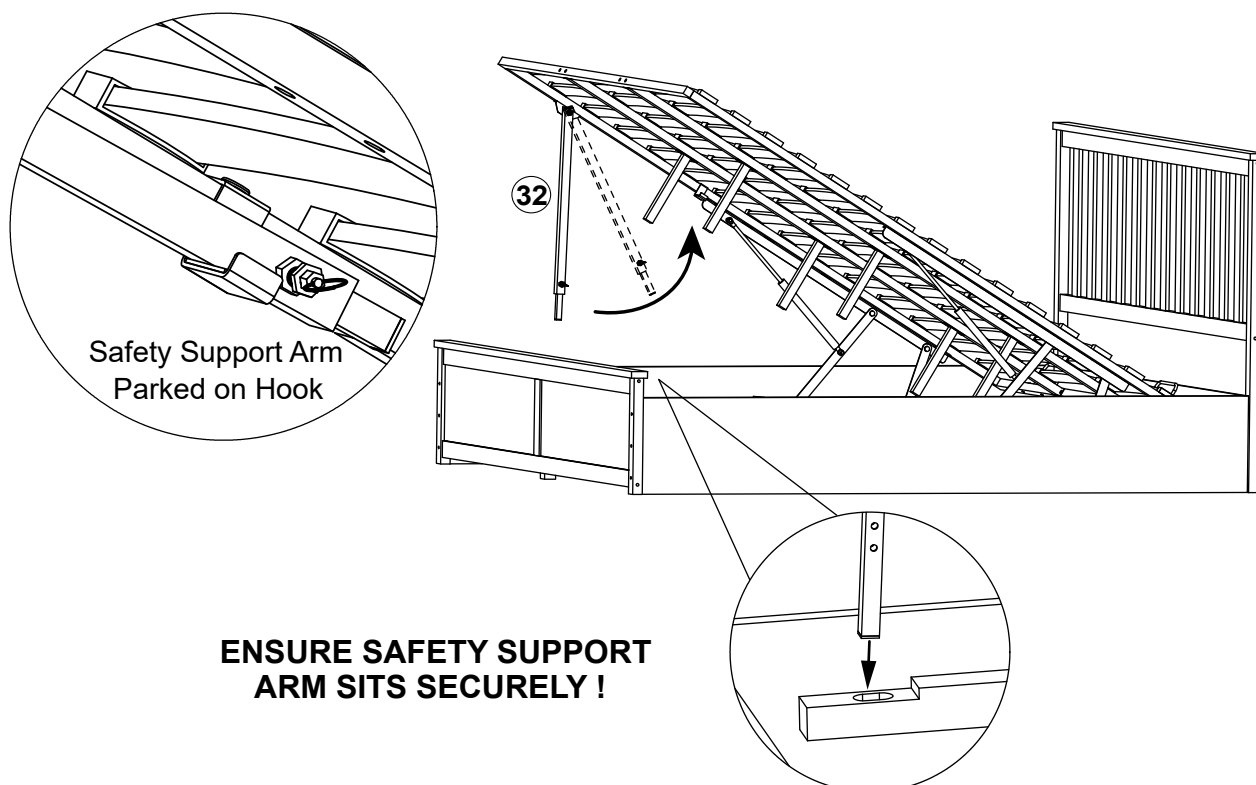

Step 23

Assembly Complete

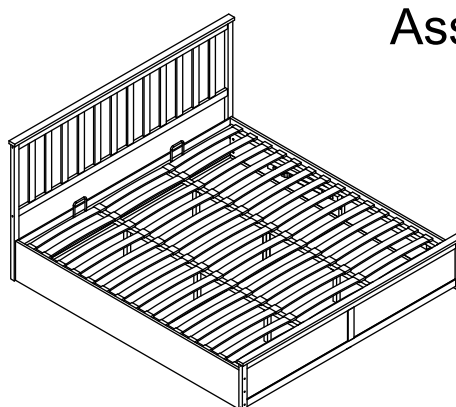

HOW TO USE BED

When the bed is fully assembled, Lift the frame up using the nylon strap. To close the frame you will need to place both hands on the metal bar that is in the air and Apply pressure to close the bed. The bed will only work if this done centrally. Please also note the lift arms do not move up and down on their own and only work if the bed is fully assembled and is assembled correctly and will only work normally with the mattress on the frame. Depending on the weight of the mattress, the speed of the lift will vary so be careful until you get used to the speed. **CAUTION:** Keep fingers well away from the moving parts.

WARNING: Should one of the side of the gaslift struts failed / lost of pressure or suspected to be failed or lost of pressure. Please Stop using the Ottoman Storage function and contact the Retailer you bought your bed from.