
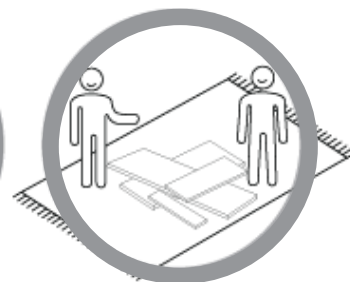
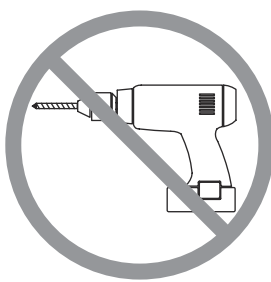


ASSEMBLY INSTRUCTIONS

HOPPER STUDIO


PRODUCT NAME : Delancey 2-door Cabinet
 DIMENSIONS : 34" L x 15" W x 34" H
 ITEM NO. : 7161LN586CUV69
 7161BK586CUV69
 7161BR5818BCT99
 7161BM581ACV59

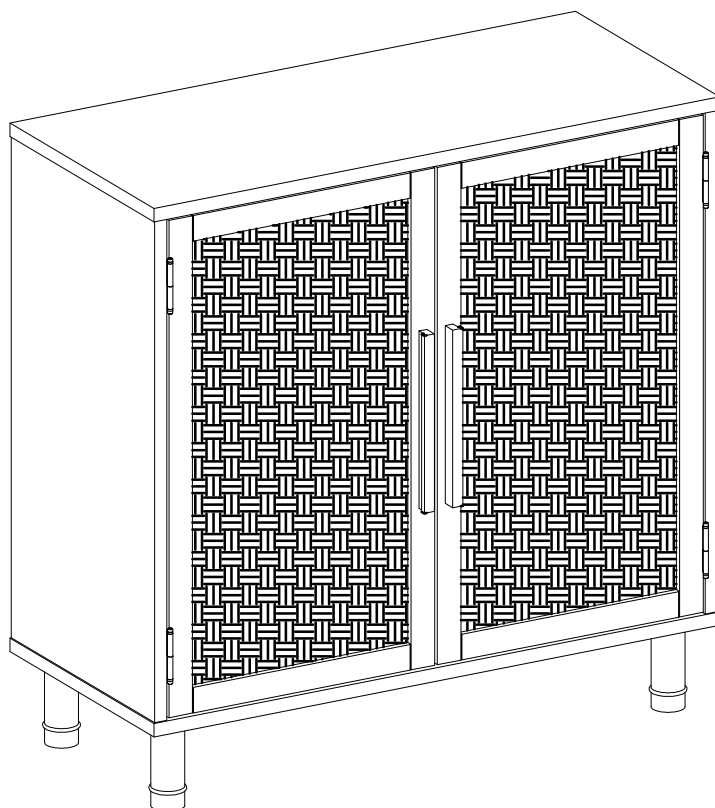


1. Check for damaged or missing parts . Call 1-800-696-8446 to order missing supplies.
2. Use a soft surface or the carton as a working surface to prevent damage during assembly.
3. It is recommended to have 2 adults on hand for assembly.
4. Gather all tools prior to assembly.
5. **WARNING!** When included, anti-tipping hardware **MUST** be installed for your safety.

how to use cam lock system


1.

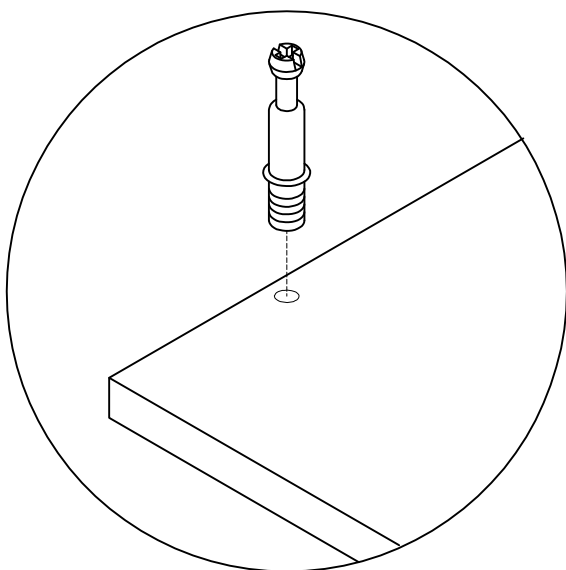


2.

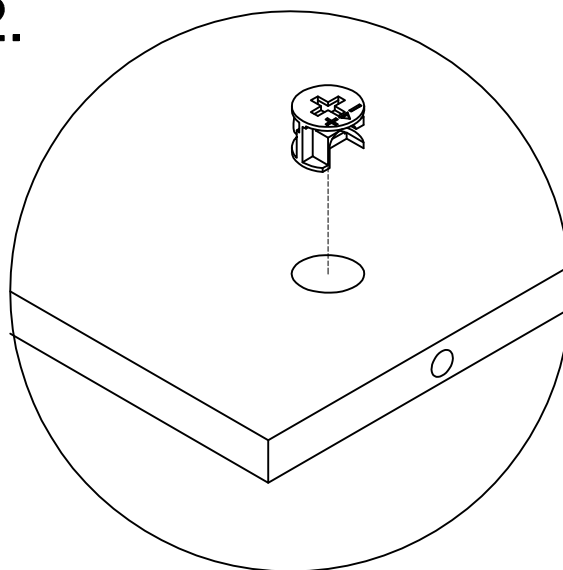


3.

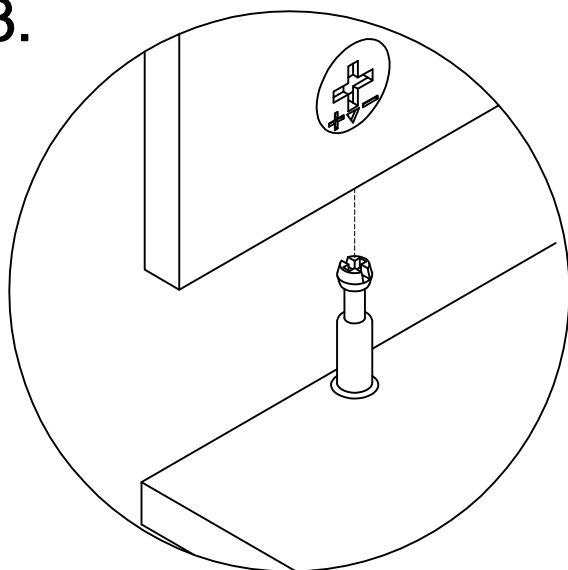







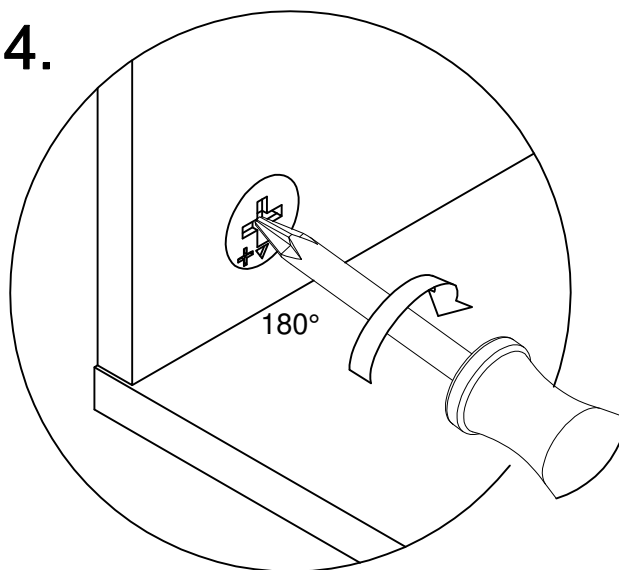










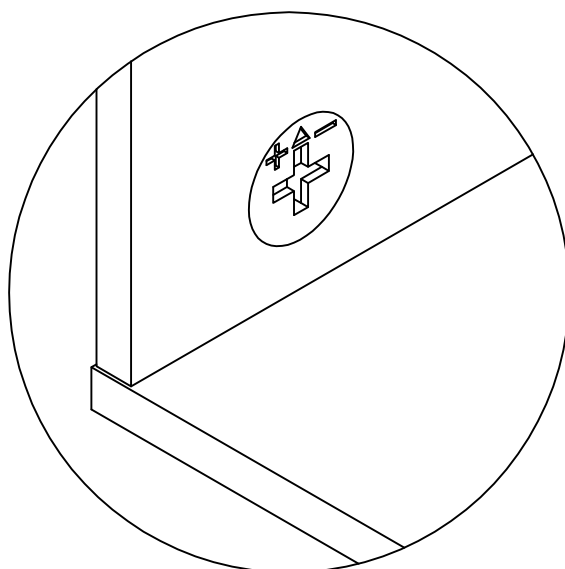


4.




5.




PARTS LIST:			QTY
A	Top Panel		1pc
B	Left Side Panel		1pc
C	Right Side Panel		1pc
D	Back Rail		2pcs
E	Bottom Panel		1pc
F	Leg		4pcs
G	Back Panel		1pc
H	Shelf Panel		1pc
I	Left Door		1pc
J	Right Door		1pc
K	Handle		2pcs
HARDWARE :			QTY
L	Wooden Dowel Ø8x40mm		16pcs
M	Cam Lock Bolt		16pcs
N	Cam Lock		16pcs
O	Screw with Washer Ø5/32" x 5/8"		18pcs
P	Shelf Pin		4pcs
Q	Umbrella Machine Screw Ø5/32" x 1"		4pcs
R	Tipping Restraint		1set
S	Door Catcher		4set
T	Umbrella Screw Ø5/32" x 5/8"		16pcs


STEP 1

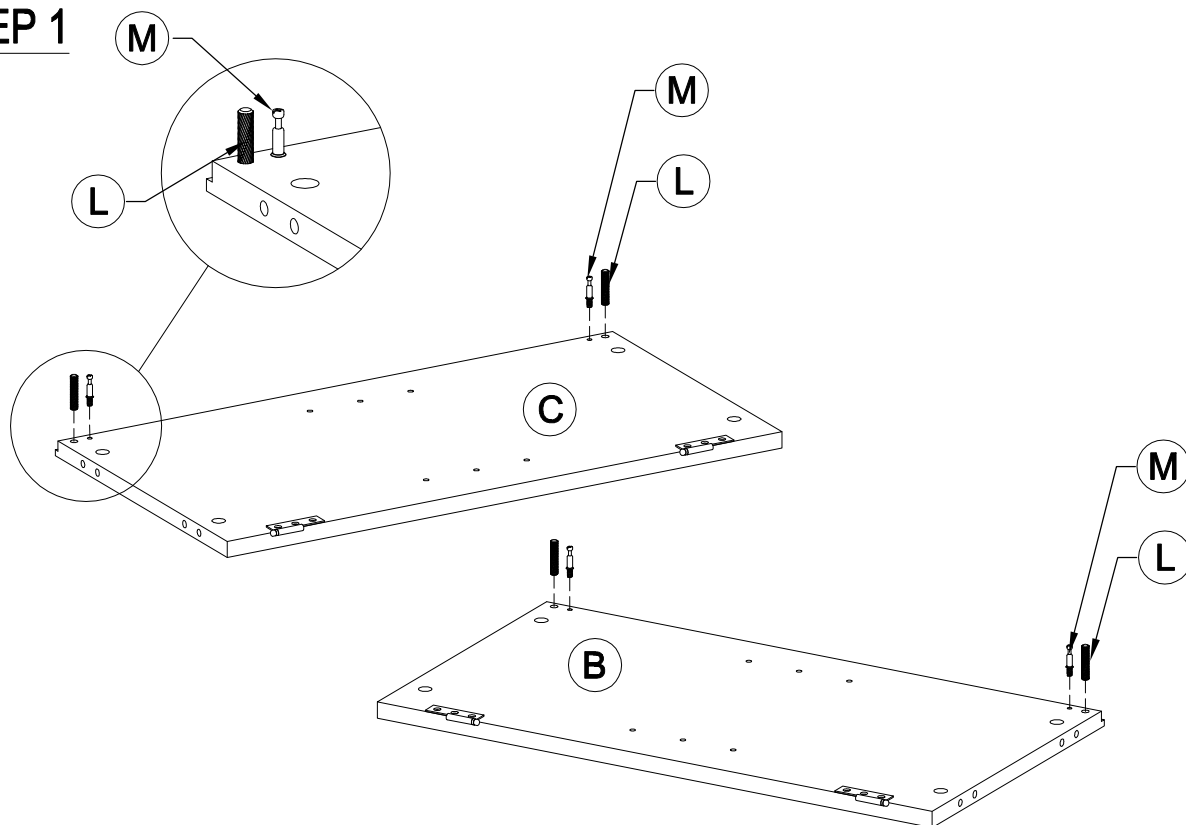


STEP 2

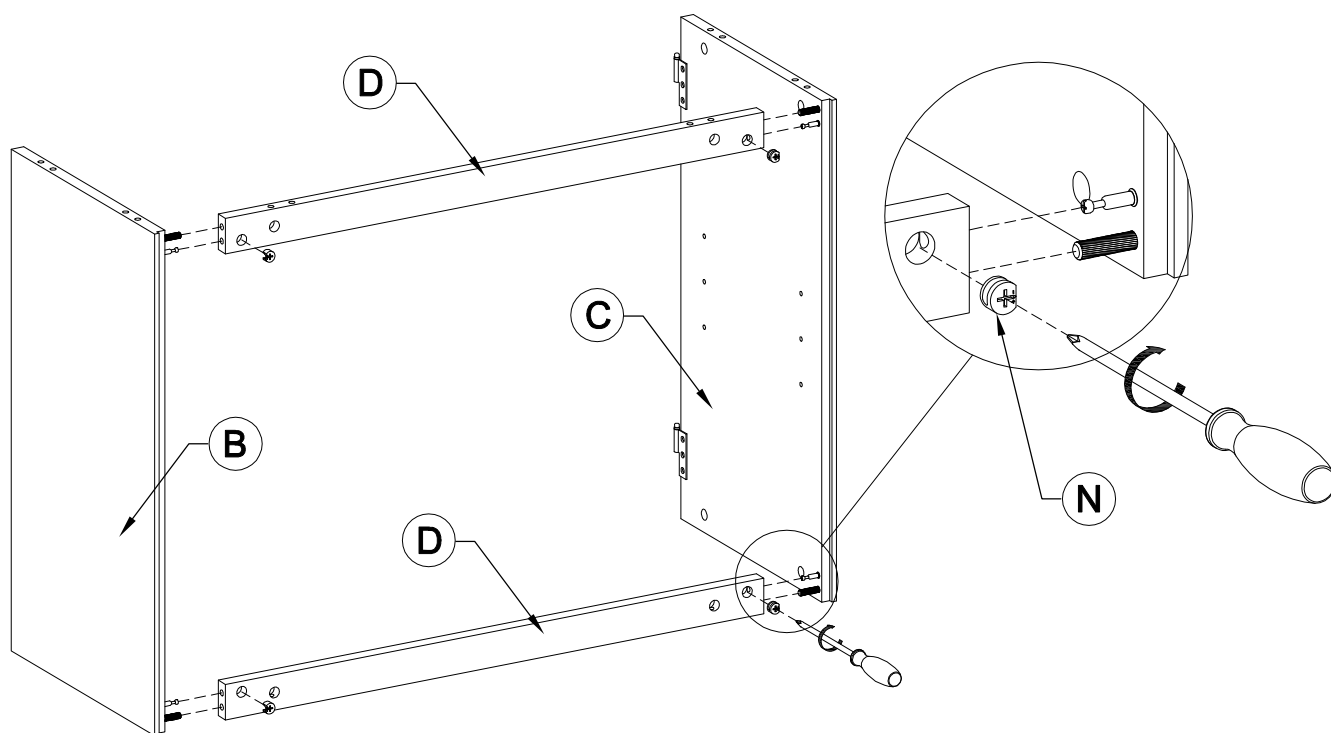



STEP 3

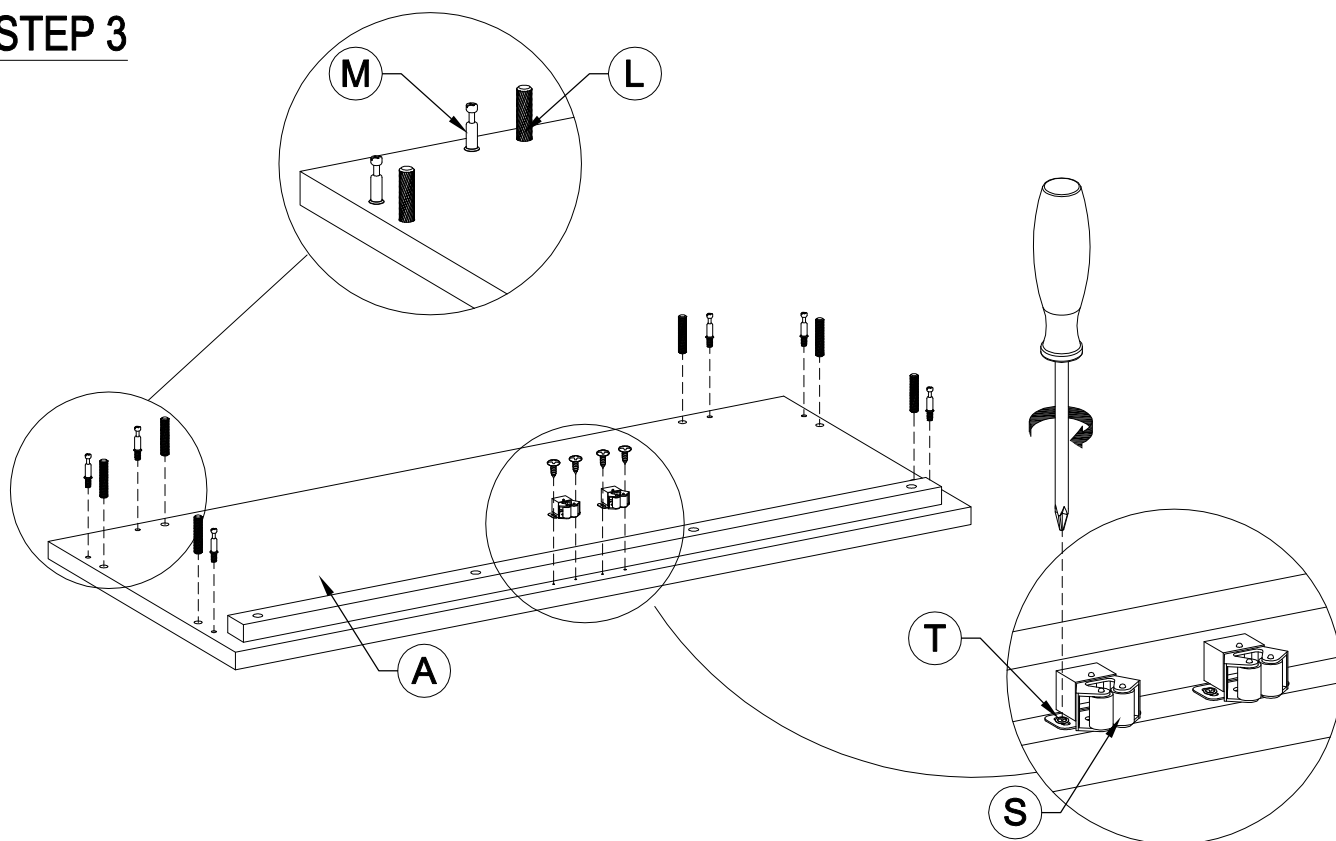


STEP 4

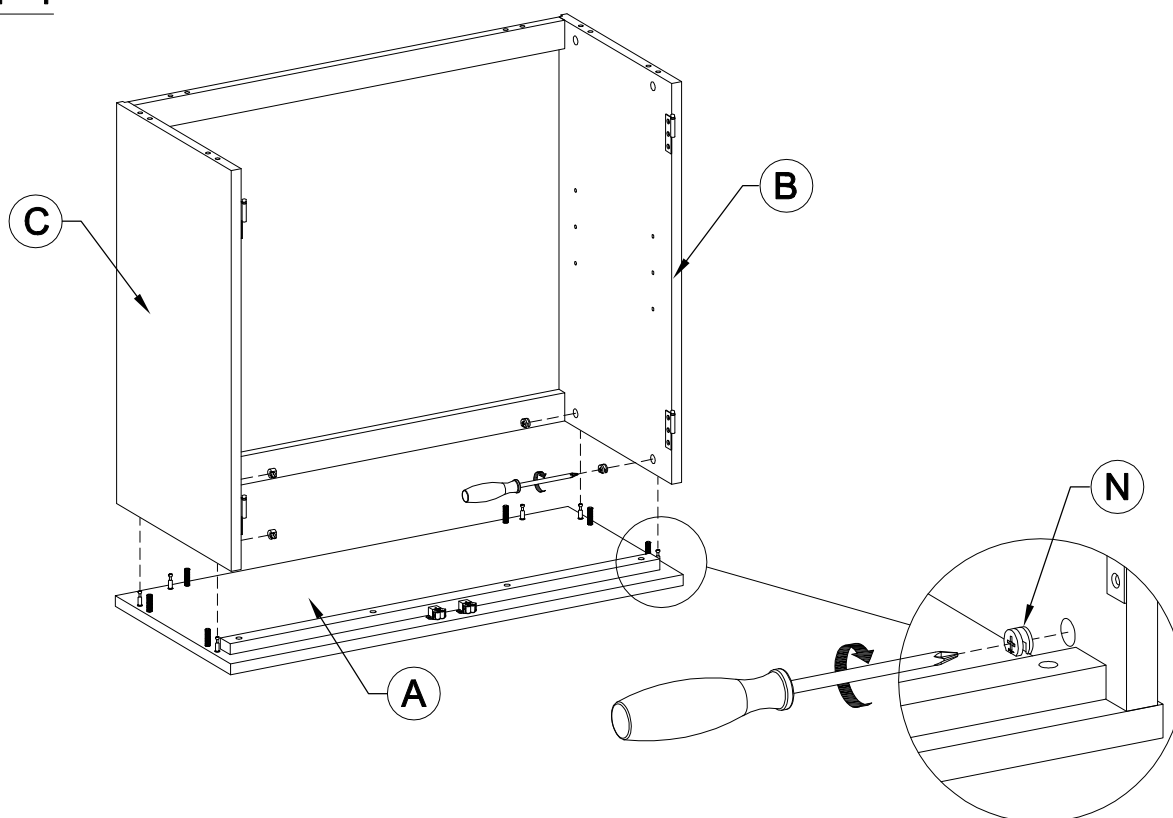


STEP 5

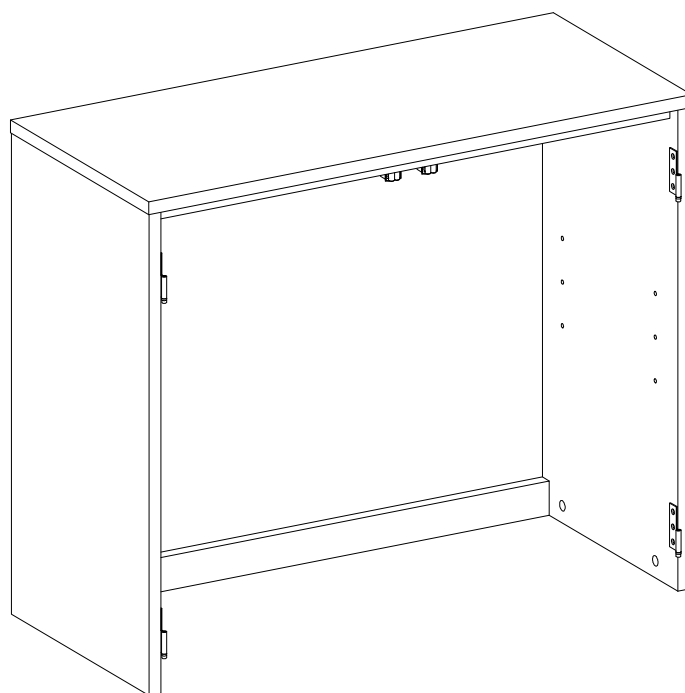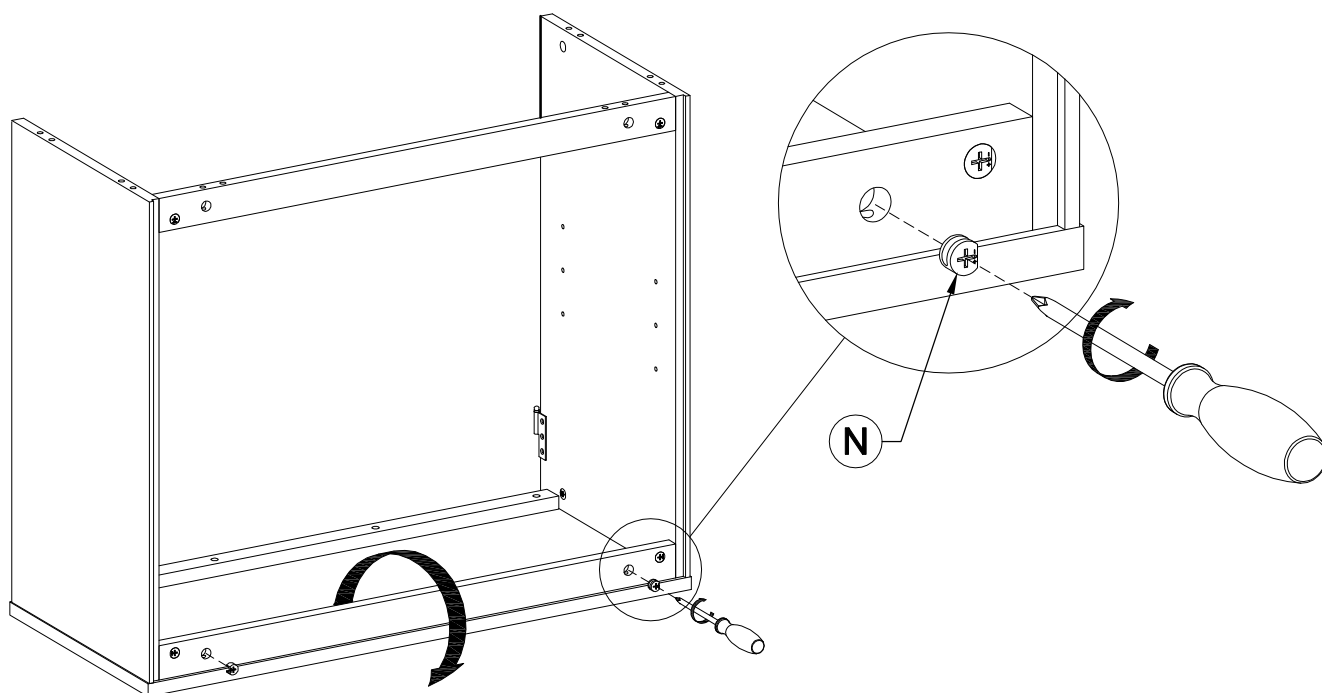


STEP 6

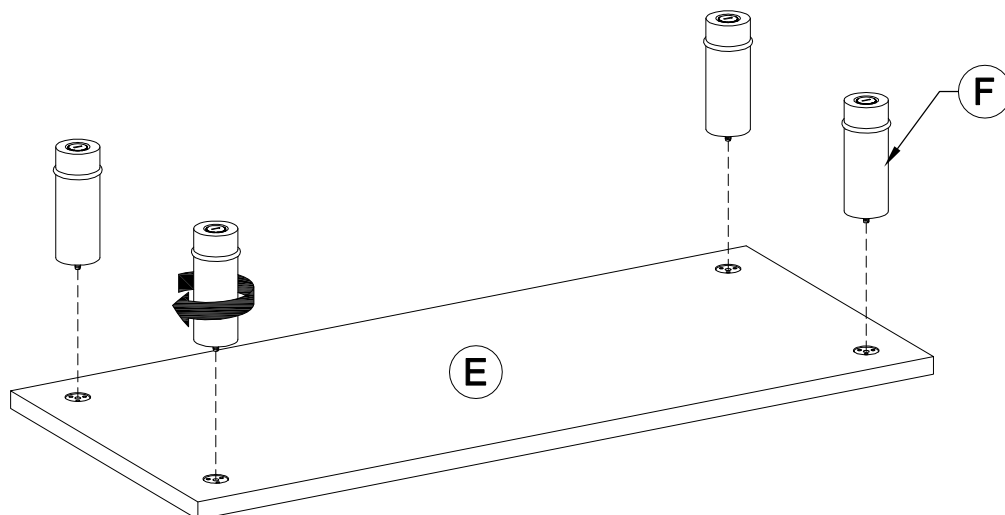


STEP 7

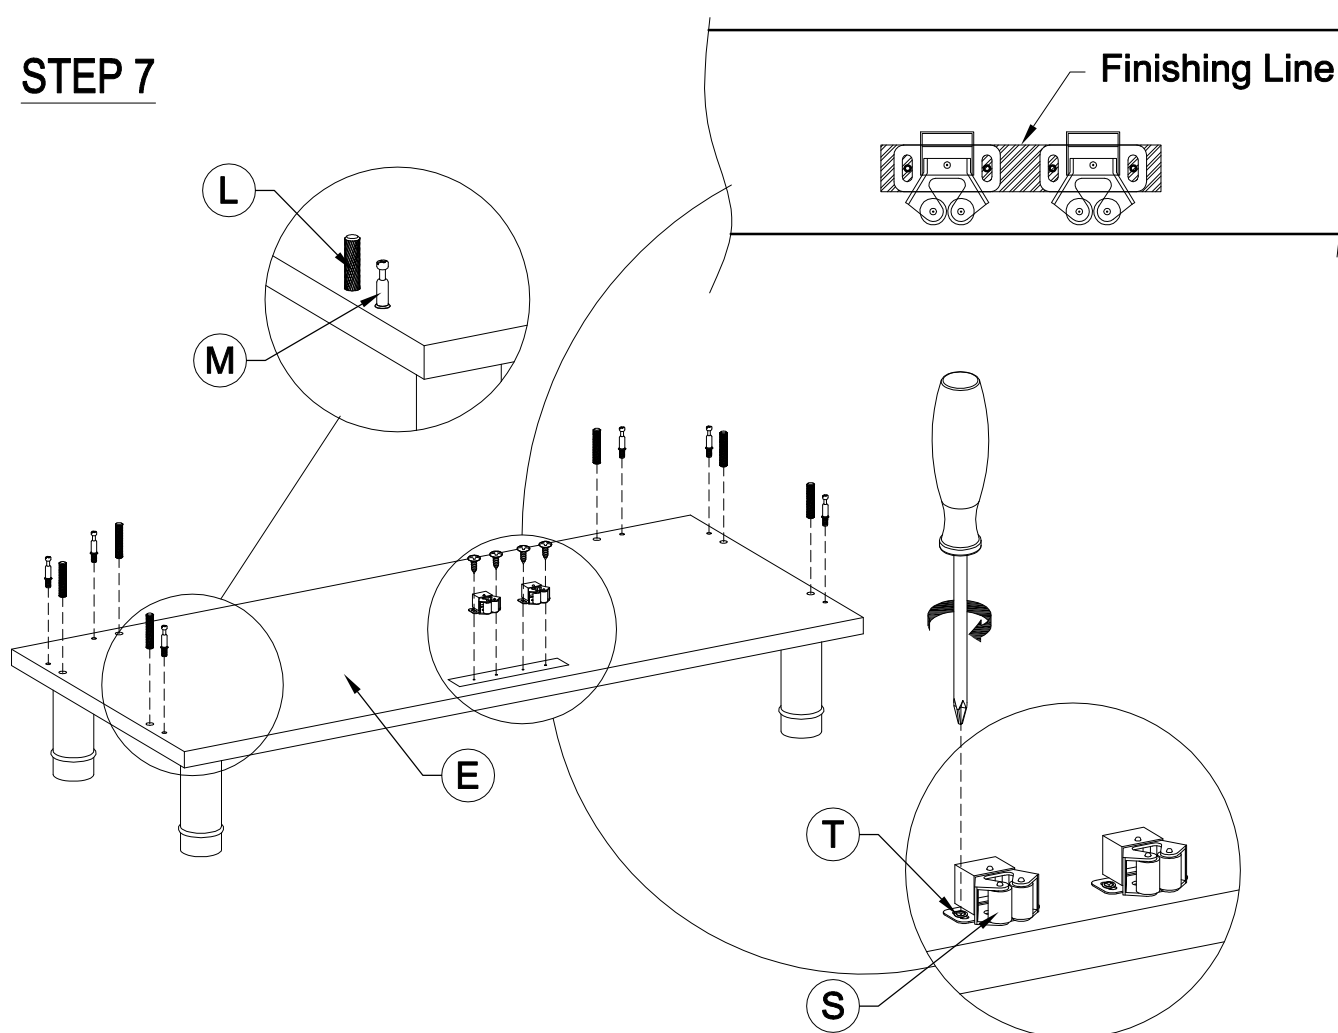


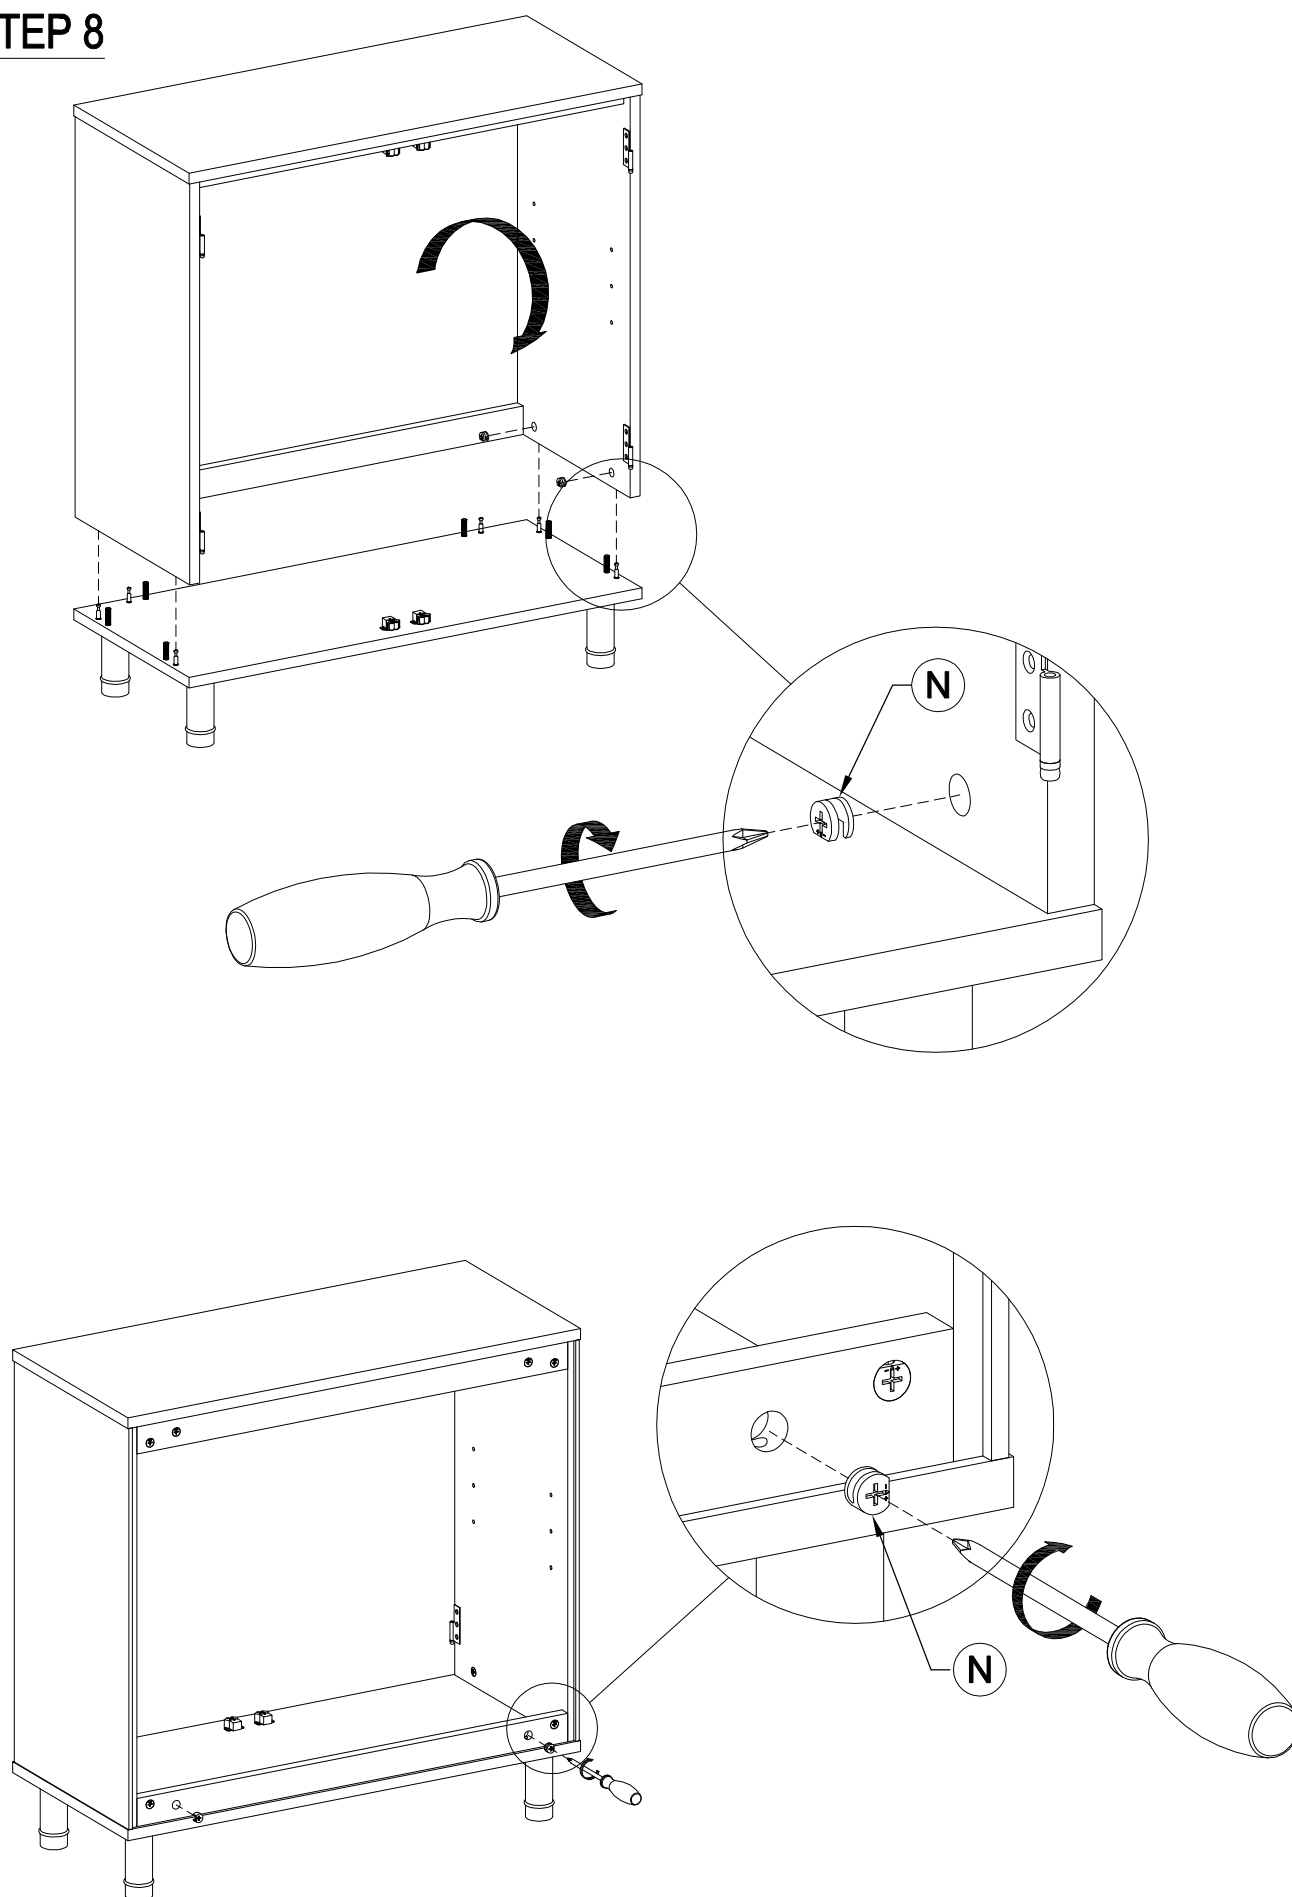STEP 8


STEP 9

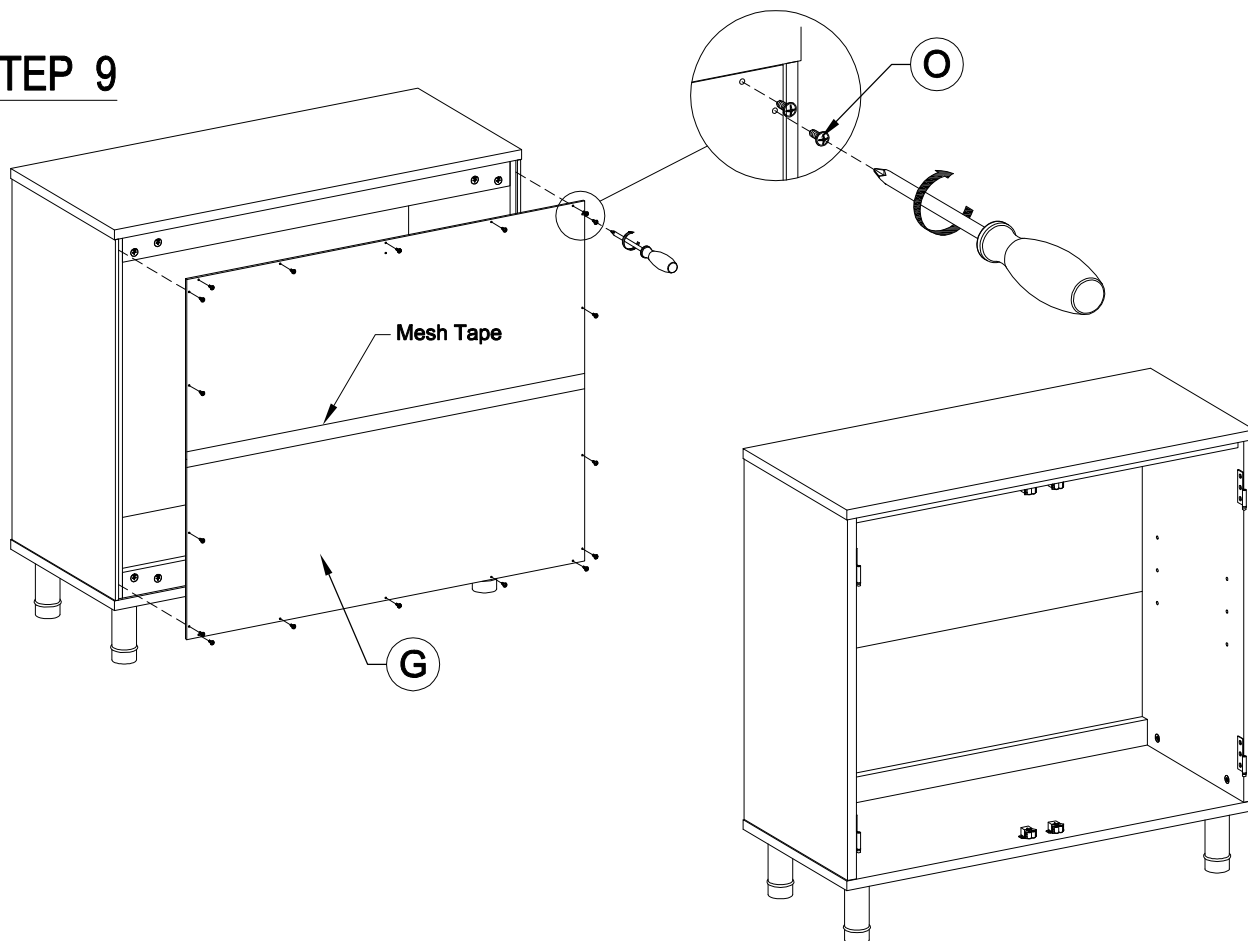


STEP 10

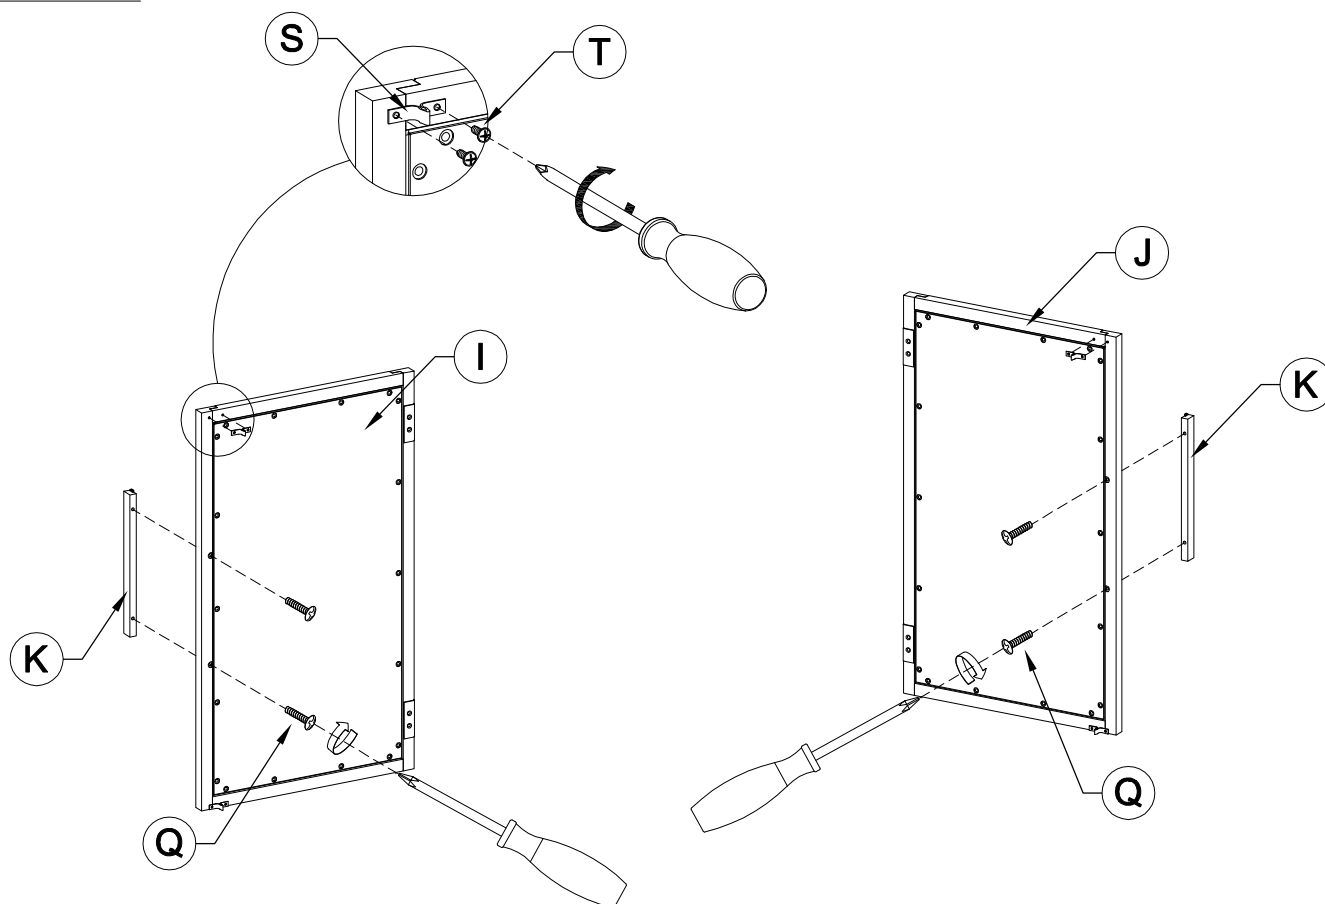


STEP 11

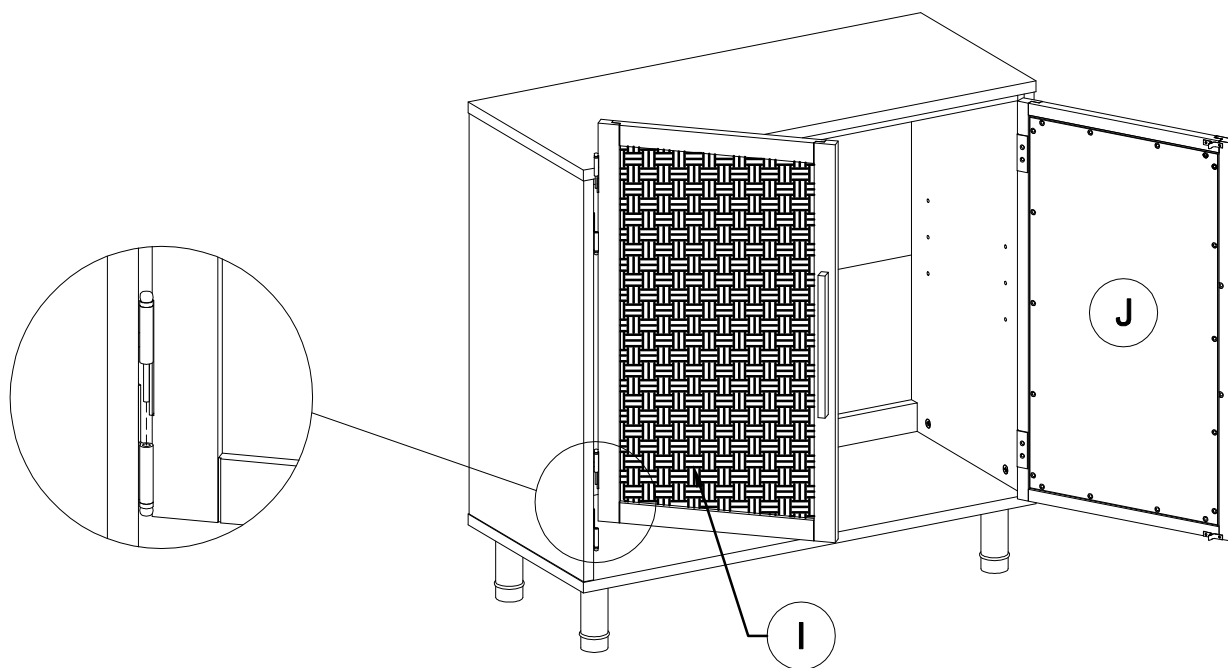

STEP 12

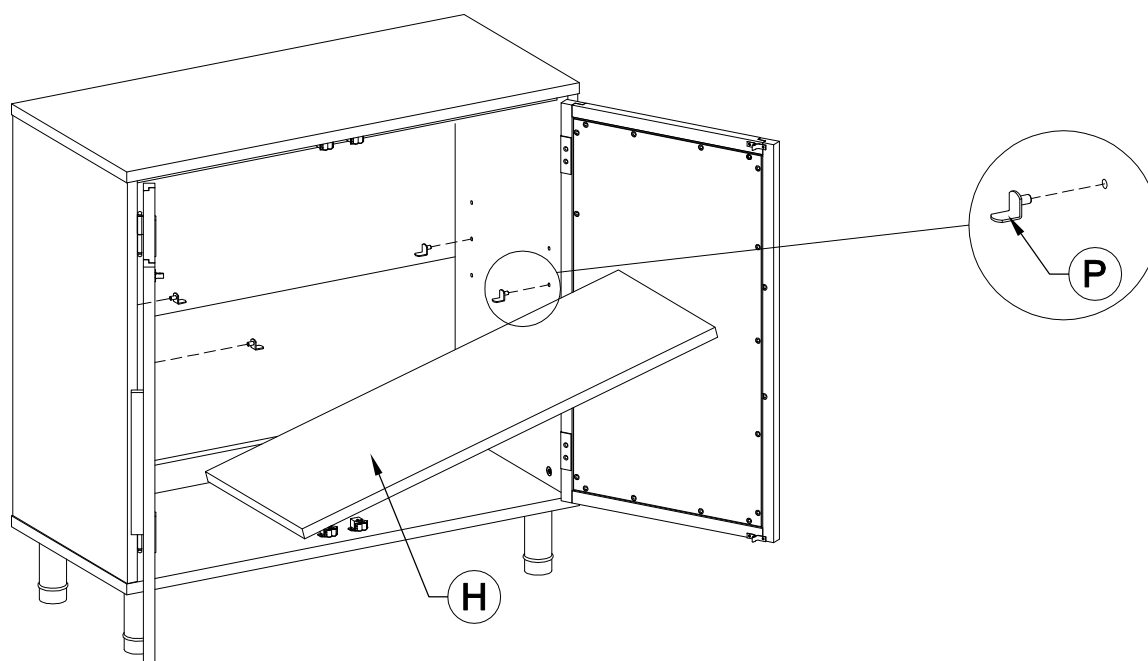

STEP 13

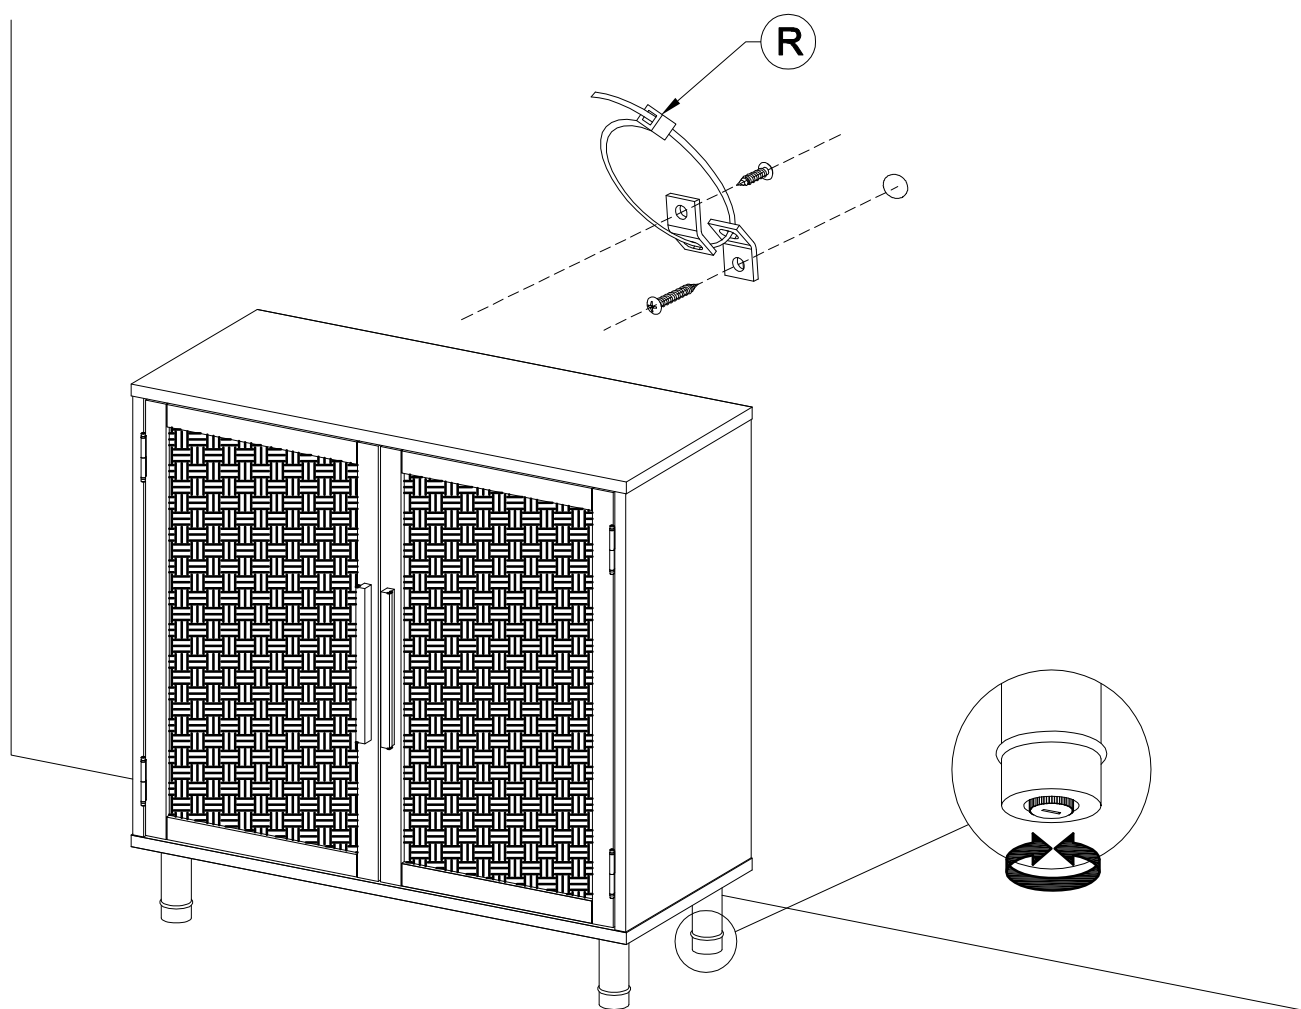

Note: The long screw included is suitable for most wall situations.

Use appropriate screw for your application. Do not overtighten the cable.

WARNING! Anti-tipping hardware **MUST** be installed for your safety.