

Pedicure Chair Instruction




Part List						
						
A.1PC	B.1PC		C.1PC		D.1PC	
						
E.1PC	F.1PC		G.1PC		H.1PC	
						
I.1PC	J.1PC		K.1PC		L.1PC	
						
M.1PC	N.1PC	O.4PCS	P.6PCS	Q1PC	R.6PCS	S.1PC
						
T.1PC	U.2PCS		V.4PCS	W.4PCS	X.4PCS	


Step 1: Insert "U" into the base "E" by screws "V" and gaskets "W", tighten (pay attention to the direction of part "U")




Step 2: Insert plank "T" into the base "E" by screws "X", tighten. (Please tighten the screws after you align the plank "T")

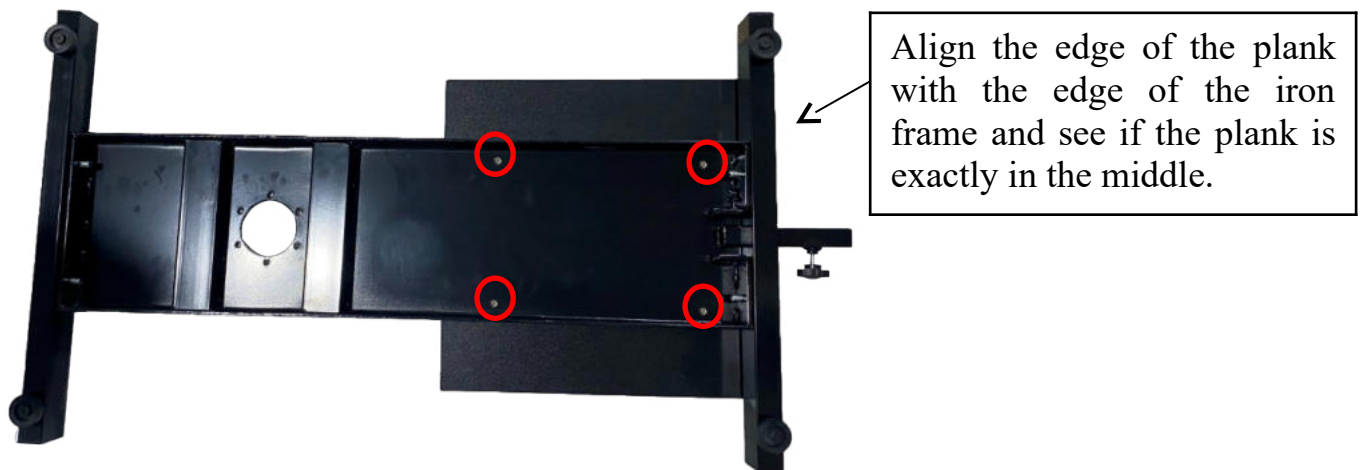


Step 3: Insert "N" into the holes on top of "E". Tighten and locking by "R".

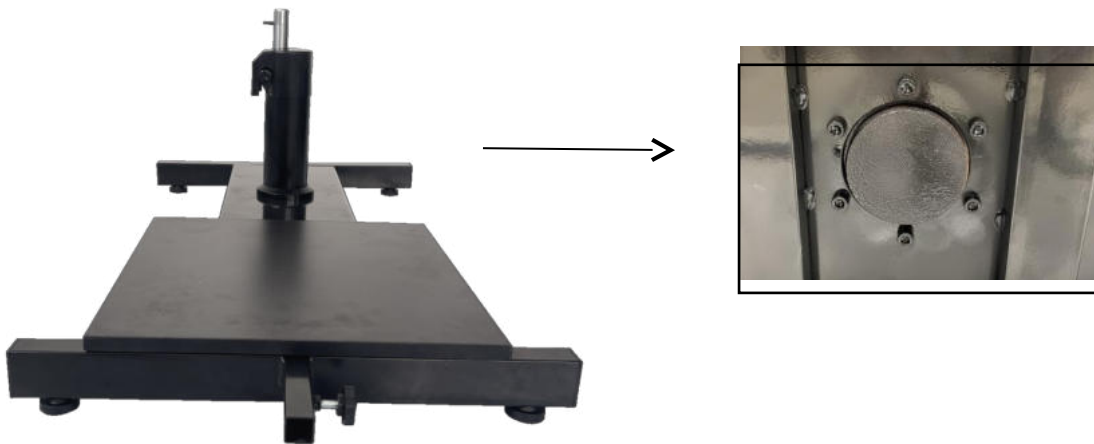

Step 4: Insert "K" into "N", tighten the screws on the both sides. (please noted the direction of "K").

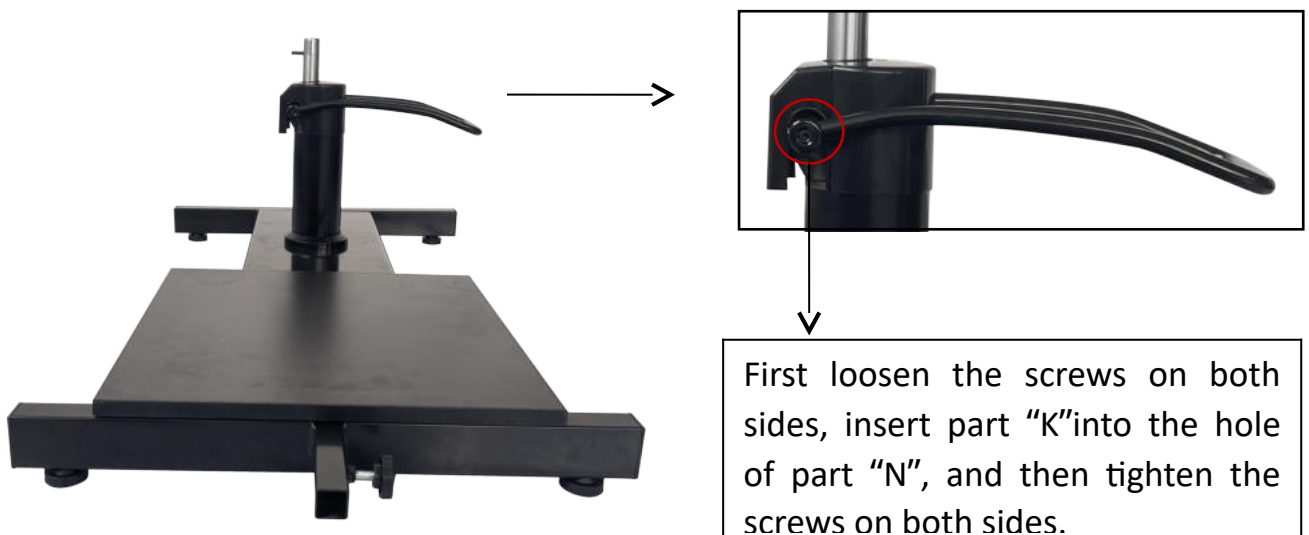

Step 5: Attach Parts P (5 pcs.) onto the five feet on the back of Part L (1 pc.). Insert the Part S (1 pc.) and Part Q (1 pc.) into Part L (1 pc.).

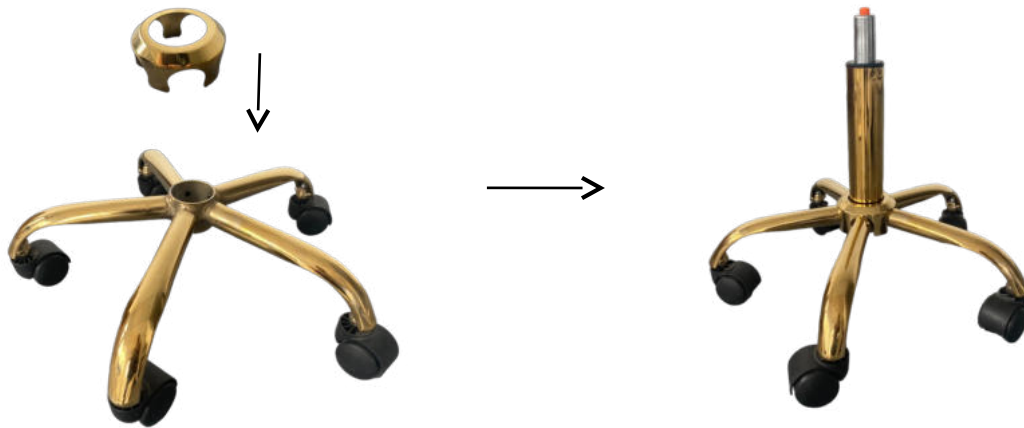

Step 6: Unscrew 2 screws on the “J”, assemble the backrest “I” to “J” by those screws, tighten.



Step 7: Put the assembled cushion “J” on the “Q” .



Step 8: Unscrew 4 screws on both sides of the armrests “C” and “D”, assemble connecting iron “O” to armrests by those screws. Tighten. (Noted : The direction of connecting iron)



Step 9: Unscrew 8 screws on the seat cushion “B”, assemble the armrests “C” and “D” to seat cushion by those screws, tighten. (Please pay attention to the direction of the armrests and install it exactly as shown in the picture)



Please pay attention to the direction of the armrest, you can judge the direction according to the zipper.




Step 10:

Firstly: Loosen the 4 embedded black screws on the round tube of the backrest “A” under the bottom of the backrest iron, attach the backrest to the assembled seat of chair, make sure the angle of backrest correct, Tighten. Photo ① for reference

Secondly: Loosen nut and bolt on the iron of backrest, Link gas pump and the iron on backrest by the nut and bolt, tighten. Photo ② for reference

If the hole between the gas rod and the backrest is not aligned, you can loosen the screw and tighten the screw after installing the gas rod. Please notice that the more you tighten the screw in, the greater the Angle between the back and the seat cushion; When you loosen this screw outward, the smaller the angle between the back and the seat cushion (closer to 90 degrees).

Noted: Please push the reclining lever back wards make the backrest reclining a litte bit ,then the iron on the backrest will much closer to the gas pump. When you felt it's hard to link the gas pump and the iron of backrest.

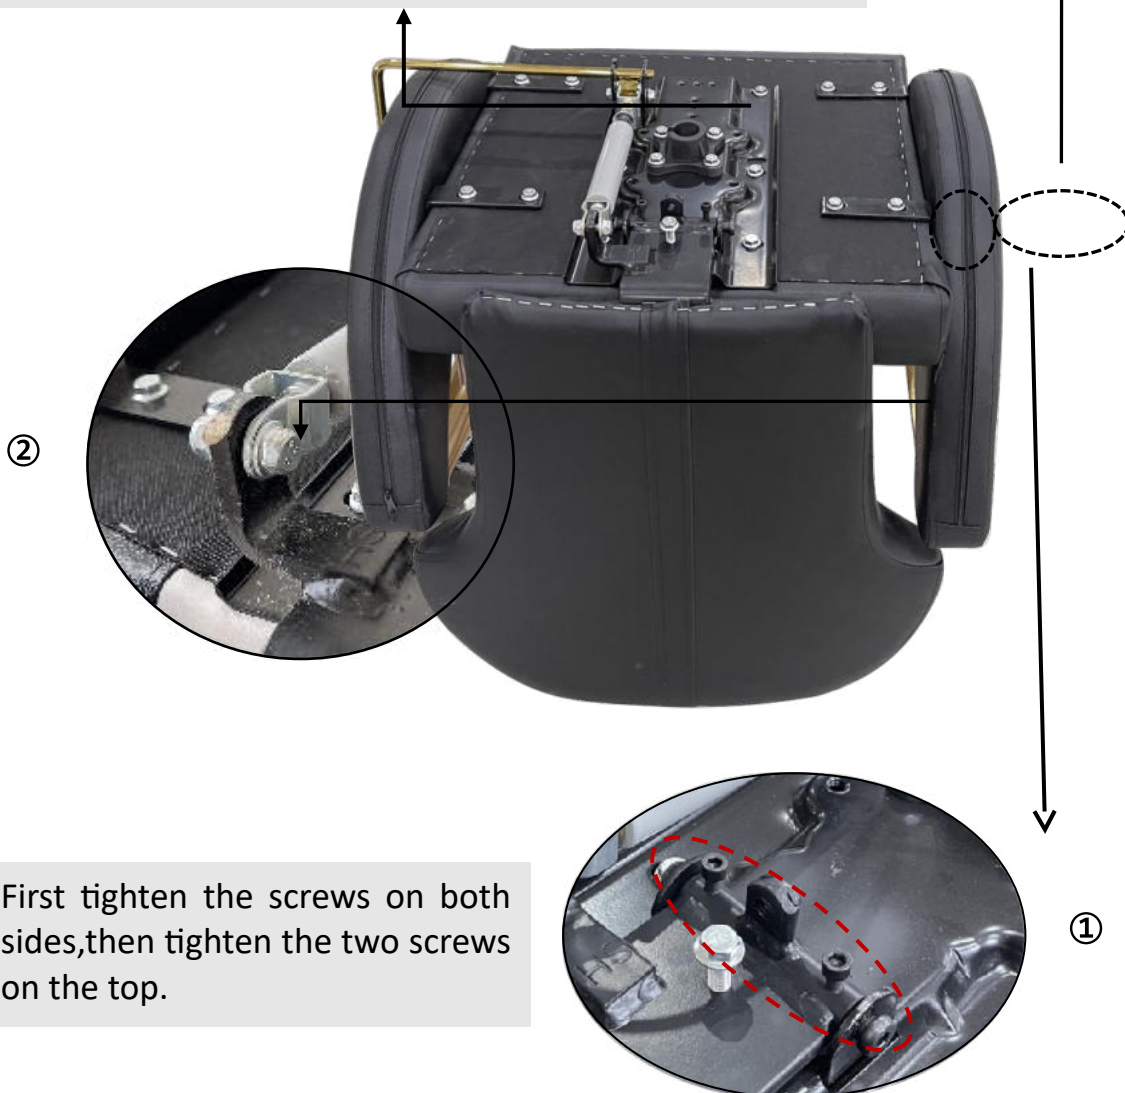

First tighten the screws on both sides, then tighten the two screws on the top.

Step 11:Put the assembled seat to the hydraulic pump.insert pillow “M”into backrest.



Noted:the tray on the set plate must be aligned with the black pin of hydraulic pump.

Step 12:Insert “F” into the hole of “E”,then insert “G” into the hole of “F”.



Through this adjust the height of cushion

Through this adjust the distance between “F”and “E”.