



Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as item list shows.

***2 adults or more** are recommended to install your gazebo.*

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts ensure your gazebo works properly.

Some parts might have sharp edges/corners. Please follow basic safety precautions to reduce the risk of hurts.

*Maximum weight capacity is **1000 pounds**.*


*It is essential to place the gazebo on level ground and not less than **6 feet** from any obstruction such as fences, garages, the house, overhanging branches, laundry lines, or electrical wires.*

If you have questions or concerns.

*Please contact us via email at **service@domioutdoorliving.com***

Domi outdoor living

domi
outdoor living

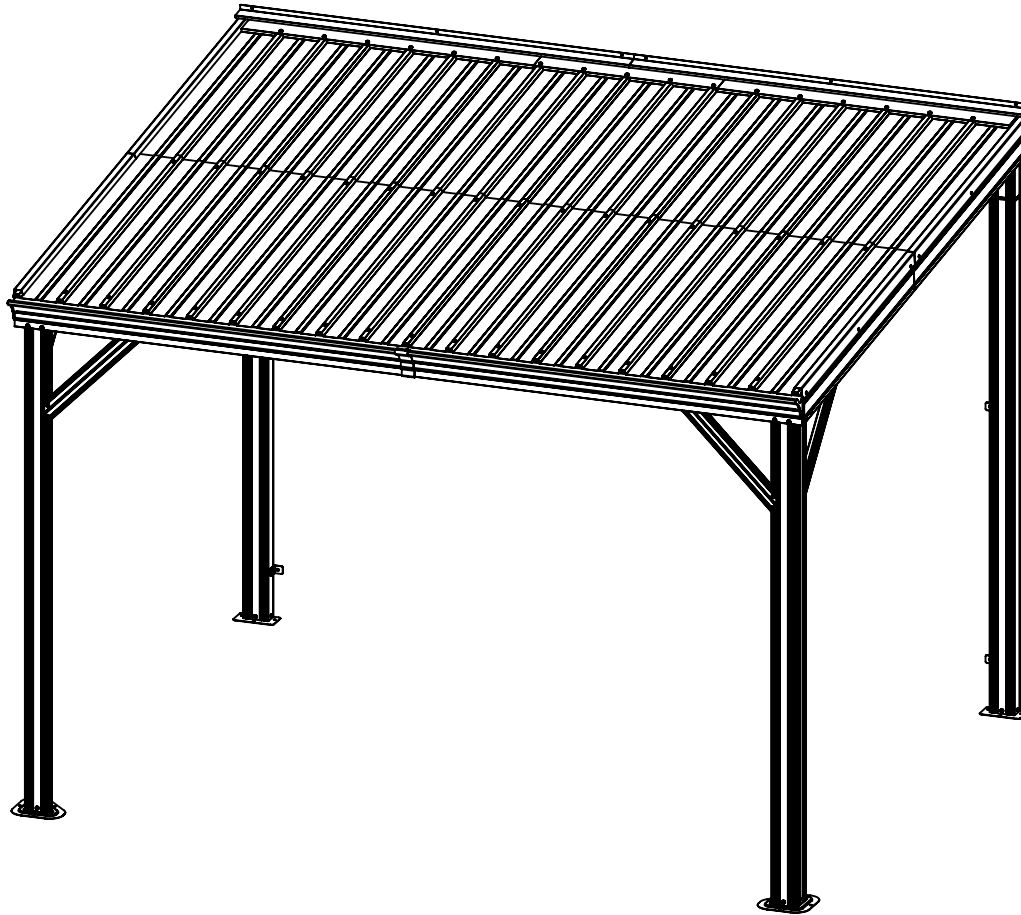

8'x10'

SKU:LGCF1695

WALL MOUNT GAZEBO

Assembly Manual

Thank you for your purchase of

Domi outdoor living's Gazebo

Read and follow this assembly and operation guide.

To reduce personal injury and damage to your gazebo

We recommend a **two-person team** for assembly and disassembly.

If you like our products, please tell other customers

If you have prbblem with our products, please tell us

Please feel free to contact us.

DOMI OUTDOOR LIVING




Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

*NOTE: Tools / equipment are not shown to actual size and scale.



LEVEL




RUBBER Mallet




PHILLIPS SCREW



DRILL



ALLEN KEY



ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

*NOTE: Equipment are not shown to actual size and scale.



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

Matters needing attention




1. Two or more people are required for assembly.





2. Do not fully tighten screws prior to complete assembly.

IMPORTANT

The construction of a gazebo may require a municipal permit or be subject to specific building codes. It is the responsibility of the consumer to check and ensure compliance with any local regulations or restrictions before proceeding with assembly.

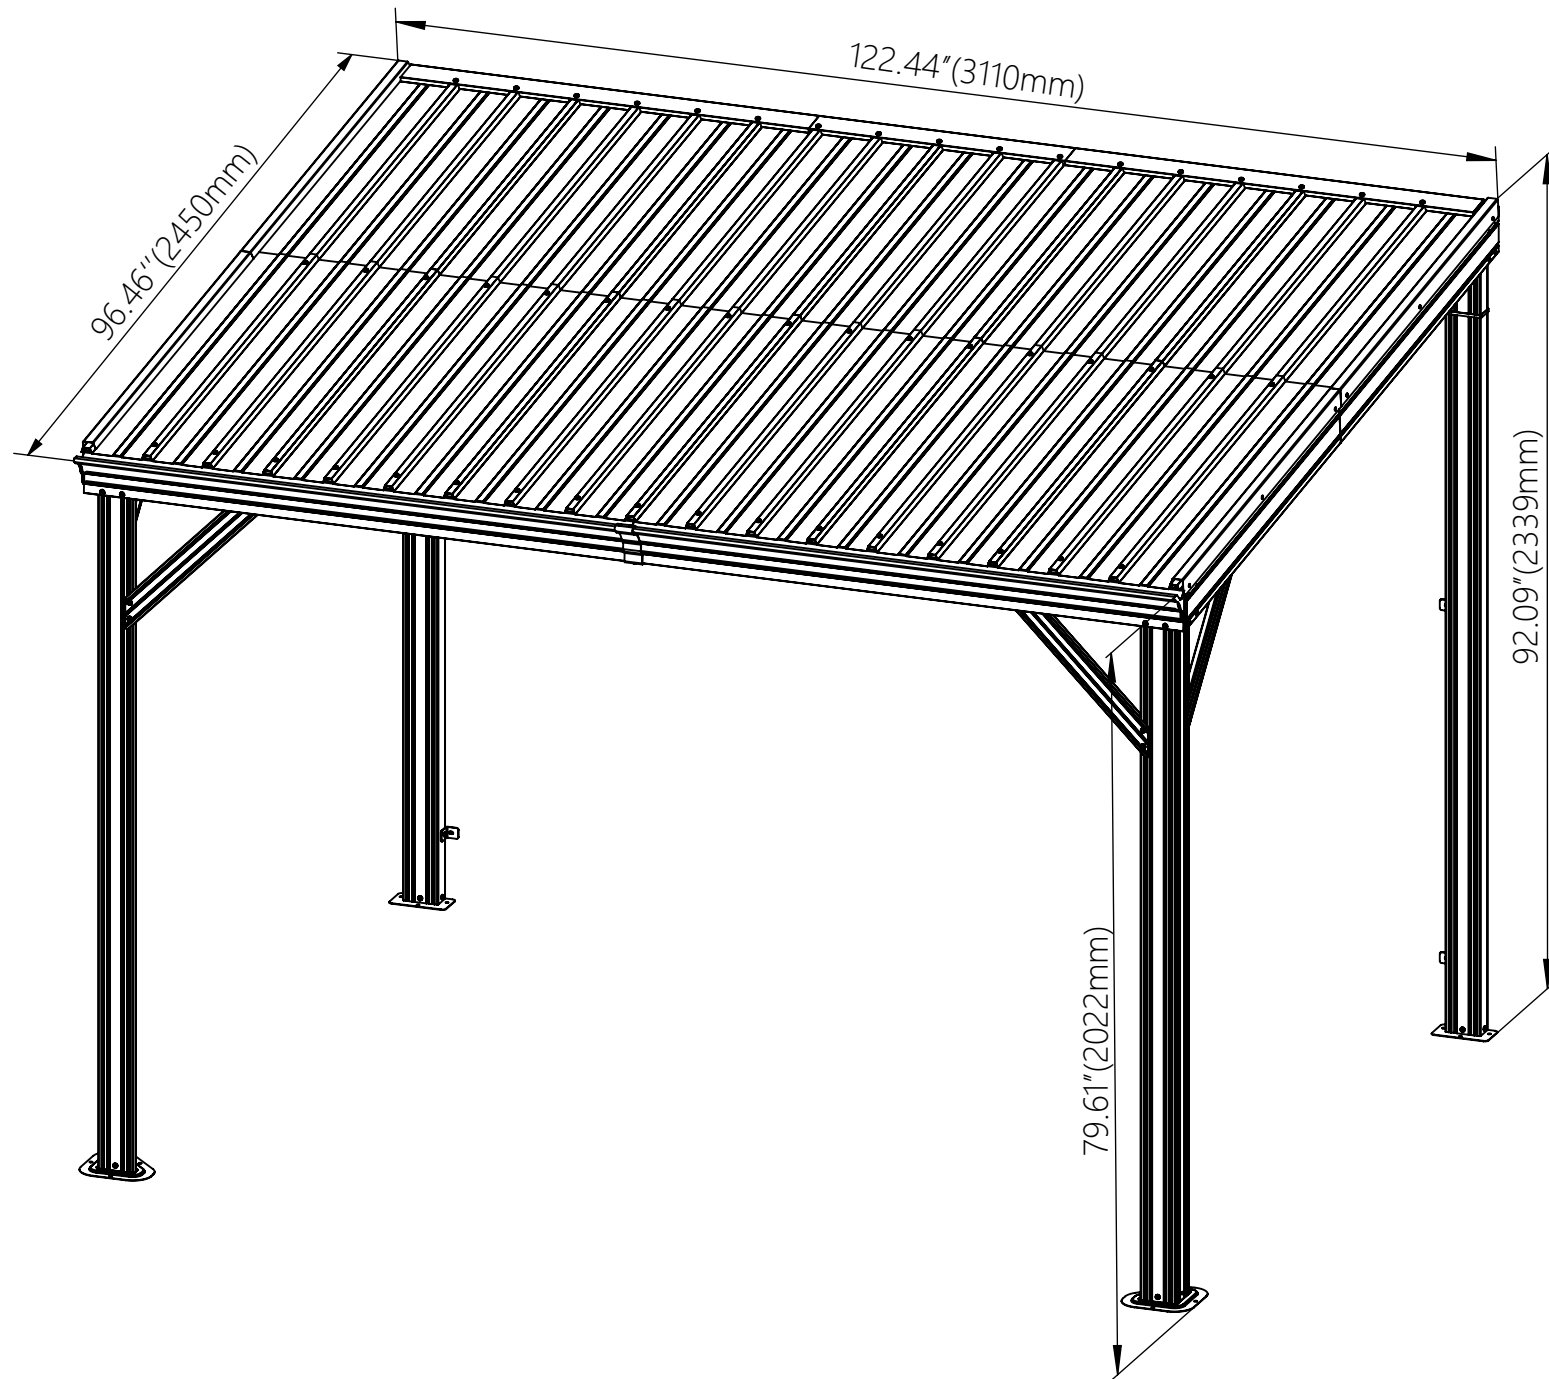

121.14"(3077mm)

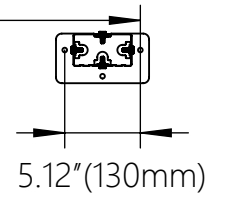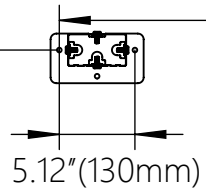



BLUE PRINT




88.90"(2258mm)

122.95"(3123mm)



113.15"(2874mm)

116.02"(2947mm)

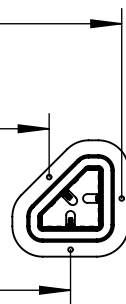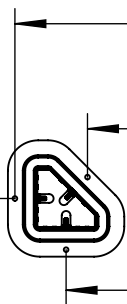

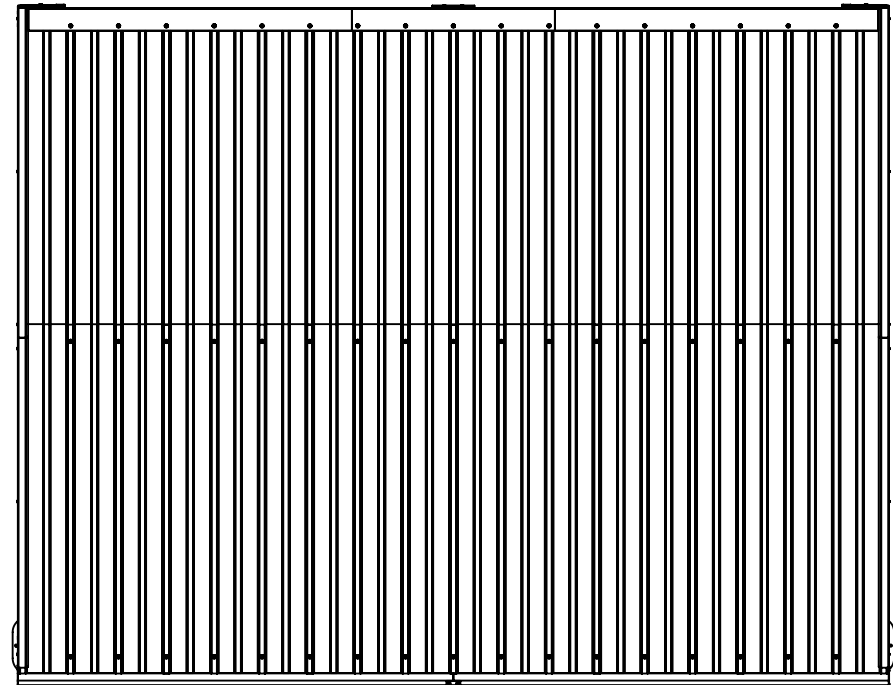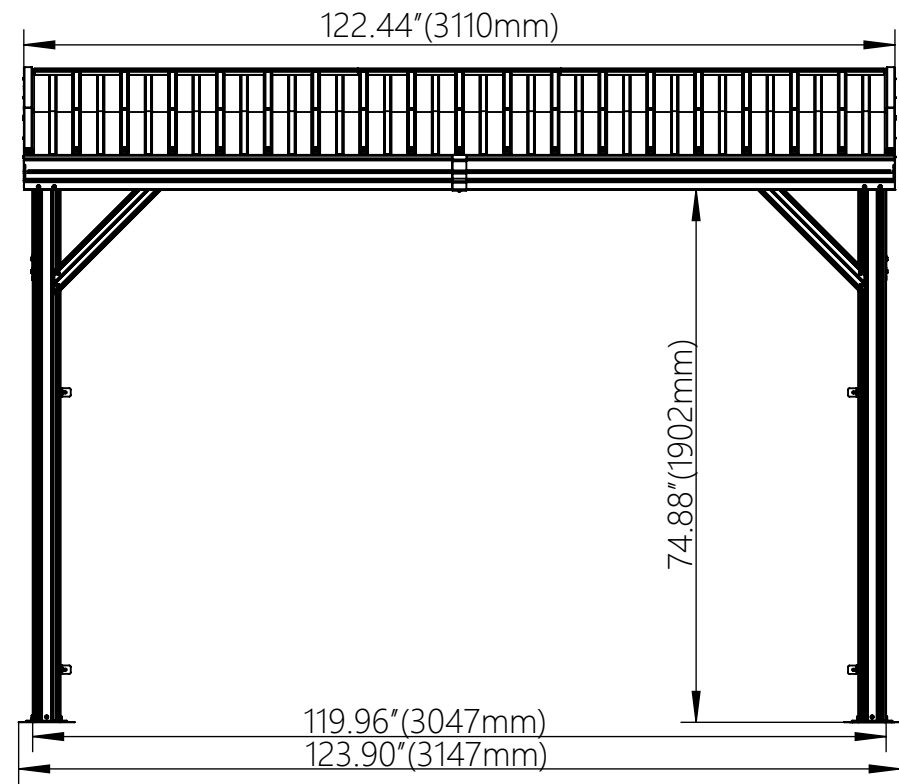
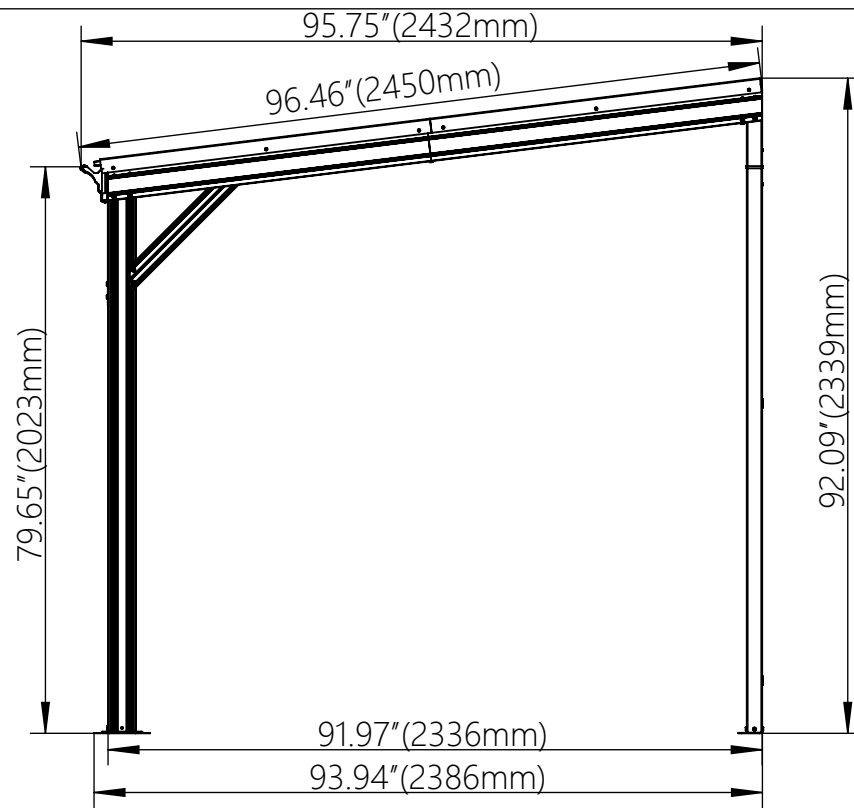


1


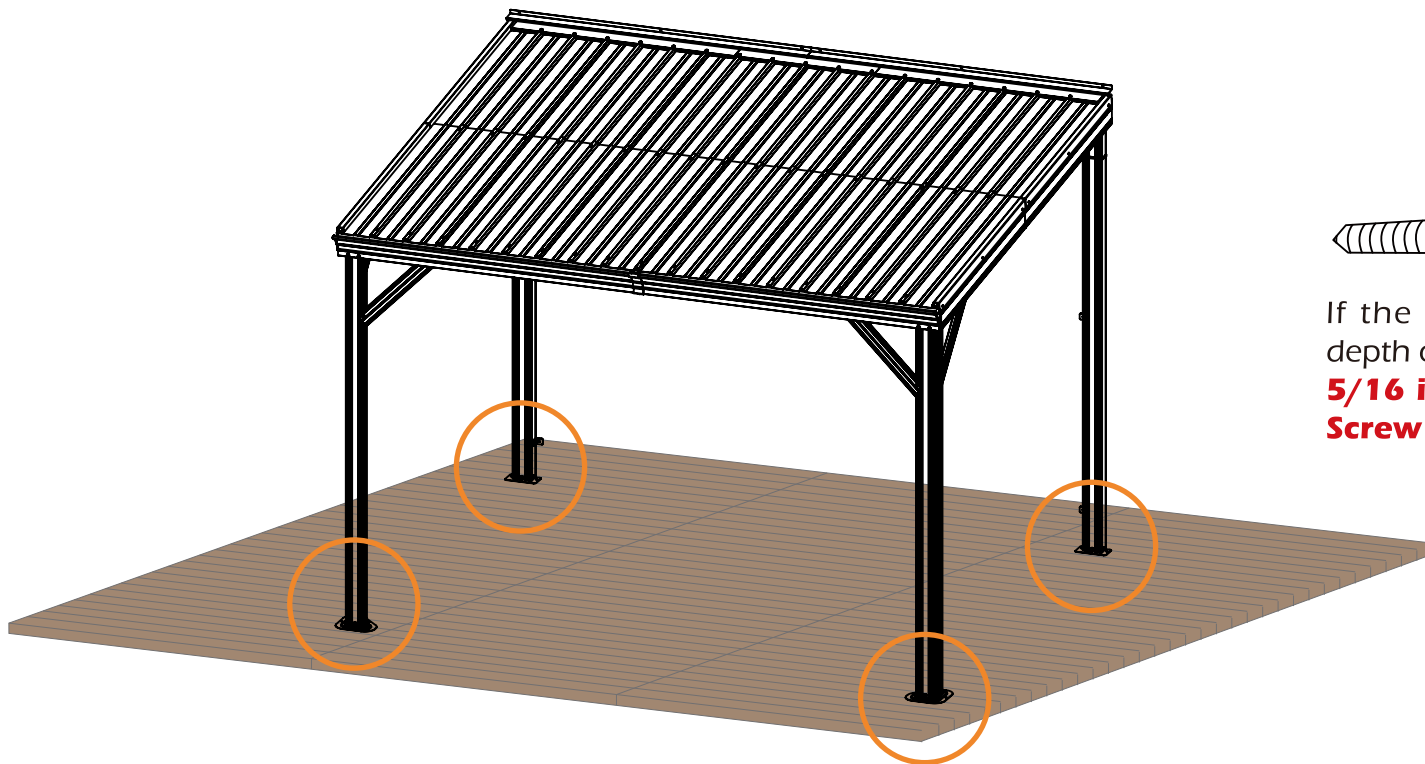


× 12














If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. × 4 in. Structural Wood Screw** to mount the pergola.

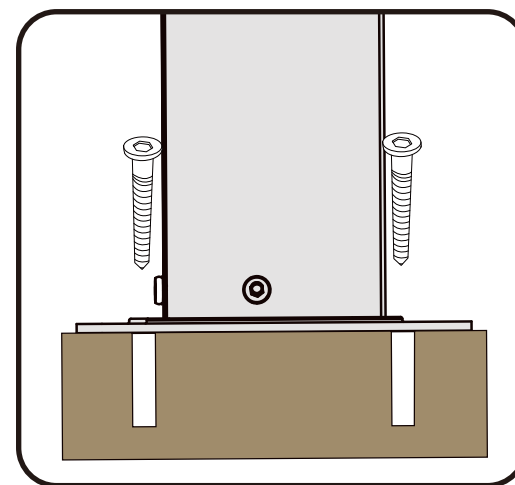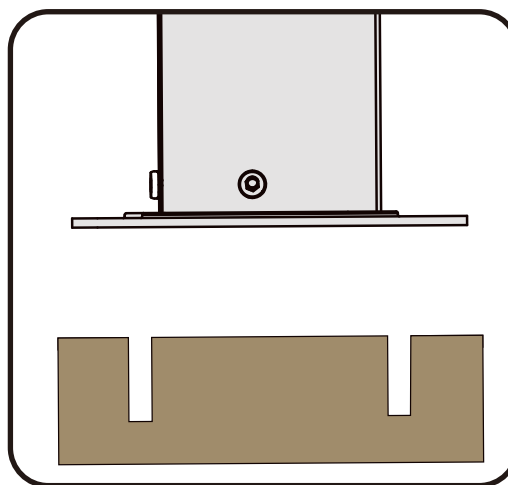











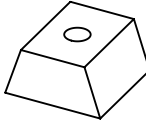
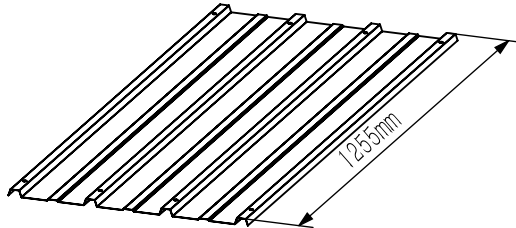
2

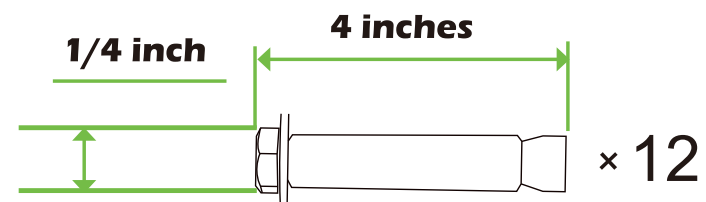
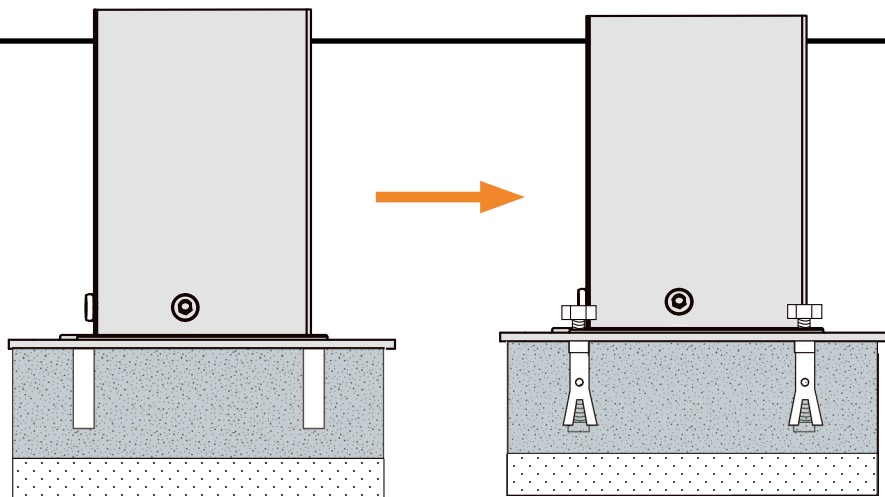

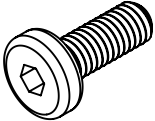

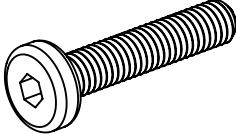

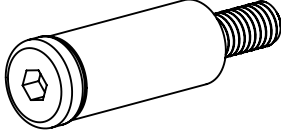

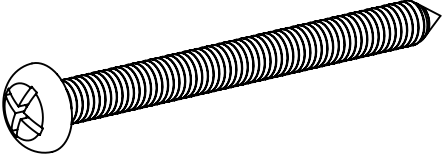
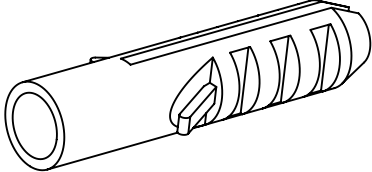

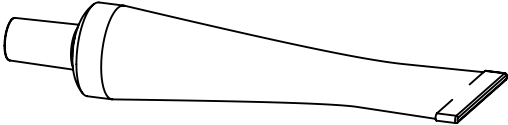
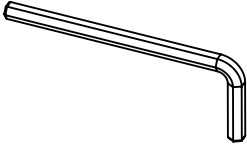



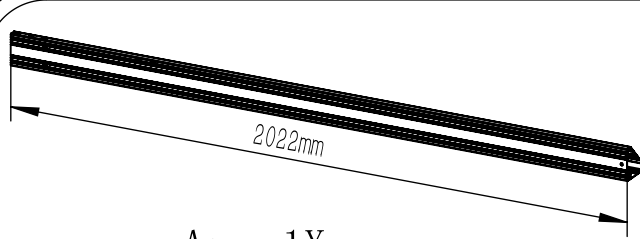
If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the pergola

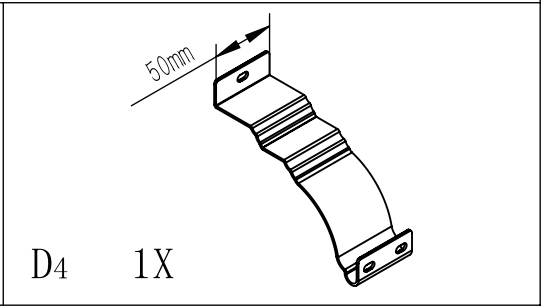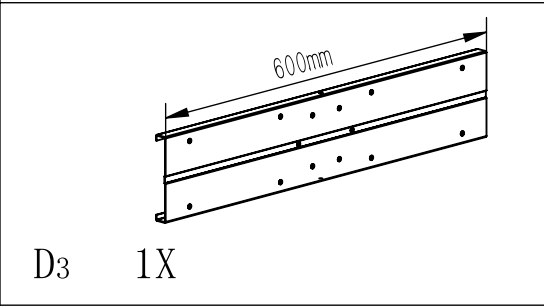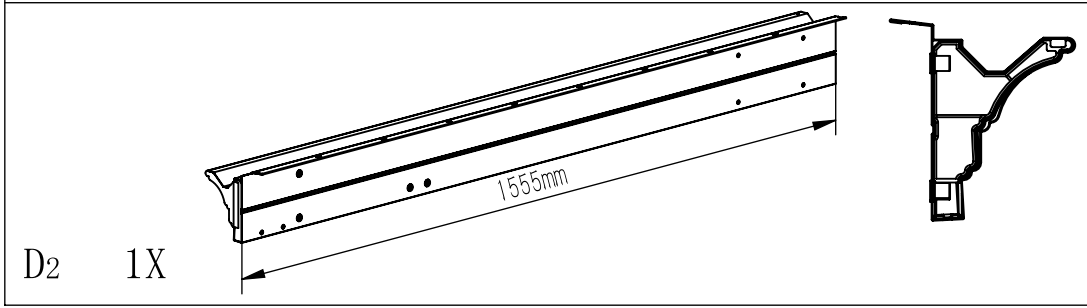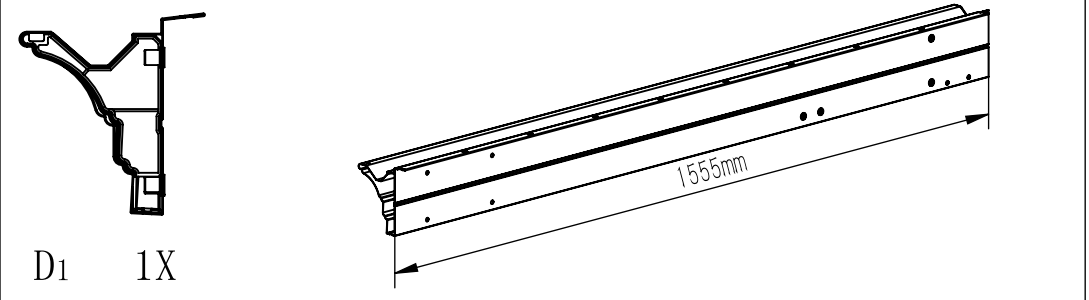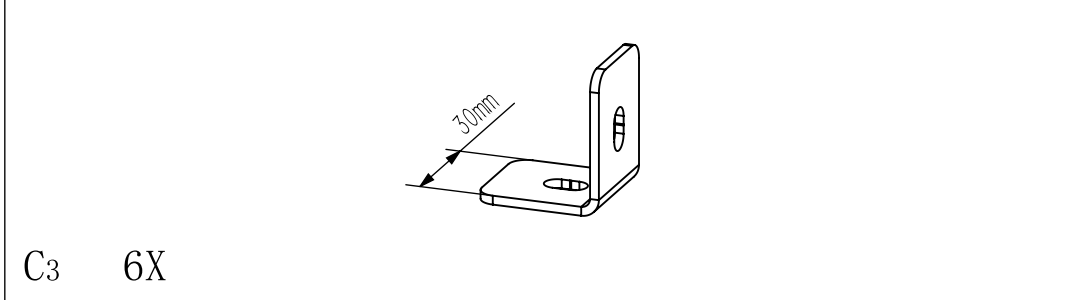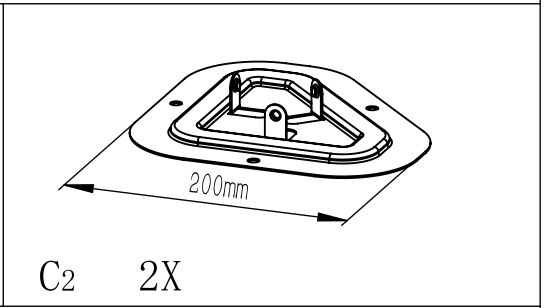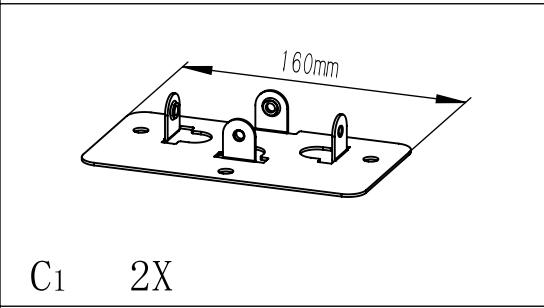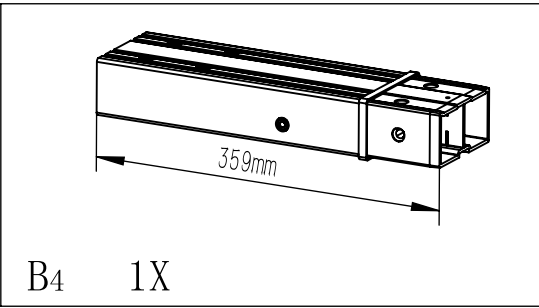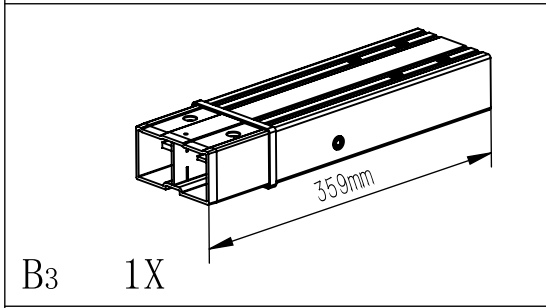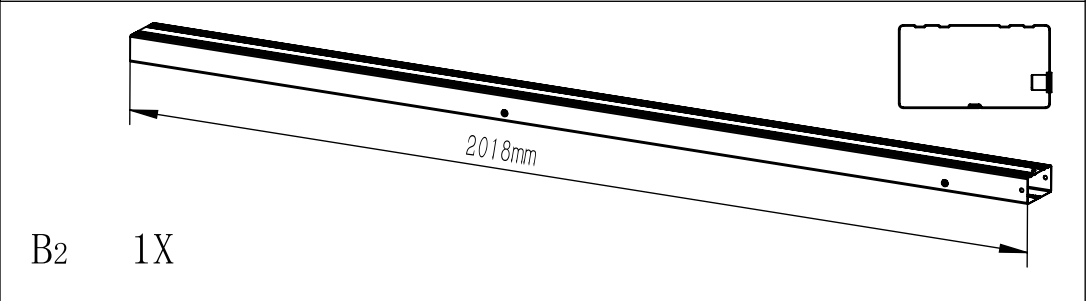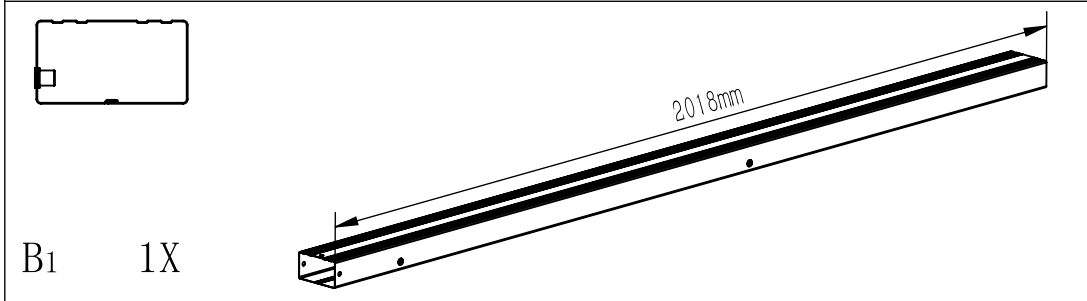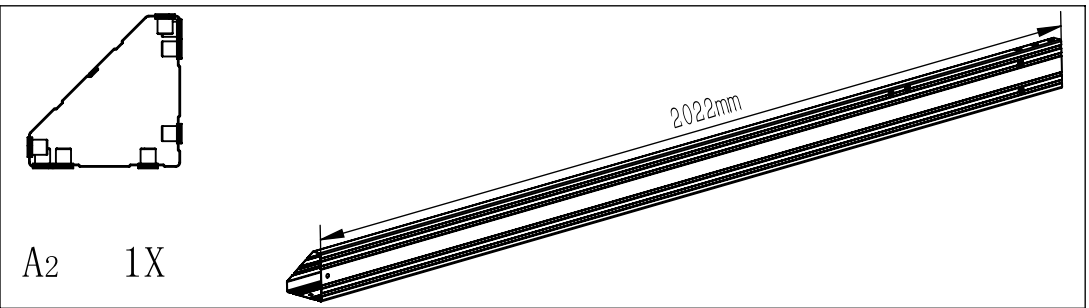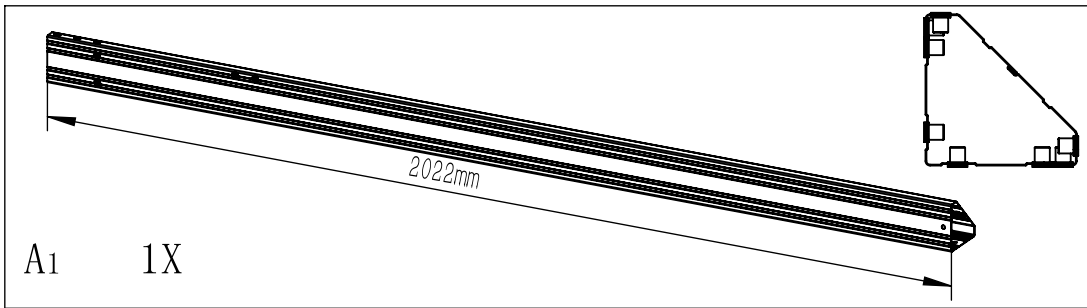


<div data-bbox="264 44 1052 331"> </div> <div data-bbox="73 277 219 319"> <p>E₁ 1X</p> </div>	<div data-bbox="1395 51 2150 322"> </div> <div data-bbox="1151 277 1296 319"> <p>E₂ 1X</p> </div>
<div data-bbox="248 357 1059 635"> </div> <div data-bbox="60 580 219 622"> <p>F₁ 1X</p> </div>	<div data-bbox="1368 351 2154 628"> </div> <div data-bbox="1137 580 1296 622"> <p>F₂ 1X</p> </div>
<div data-bbox="203 673 1059 903"> </div> <div data-bbox="60 890 219 932"> <p>G₁ 1X</p> </div>	<div data-bbox="1261 676 2141 909"> </div> <div data-bbox="1137 890 1296 932"> <p>G₂ 1X</p> </div>
<div data-bbox="203 976 1066 1209"> </div> <div data-bbox="60 1181 219 1222"> <p>H₁ 1X</p> </div>	<div data-bbox="1279 979 2150 1203"> </div> <div data-bbox="1144 1181 1303 1222"> <p>H₂ 1X</p> </div>
<div data-bbox="147 1276 1003 1484"> </div> <div data-bbox="69 1487 208 1528"> <p>I₁ 2X</p> </div>	<div data-bbox="1346 1283 2065 1506"> </div> <div data-bbox="1151 1487 1290 1528"> <p>I₂ 2X</p> </div>

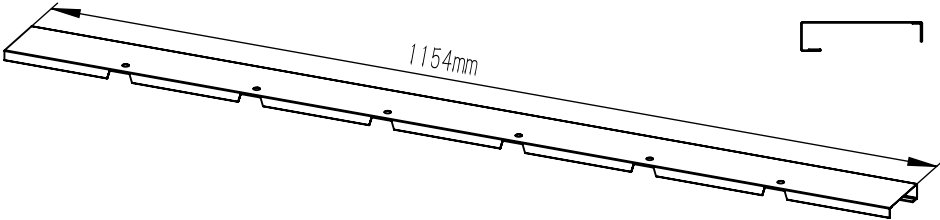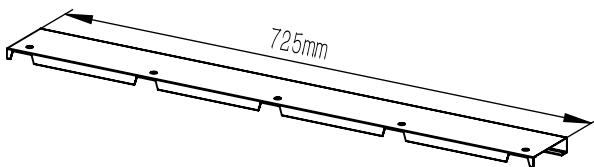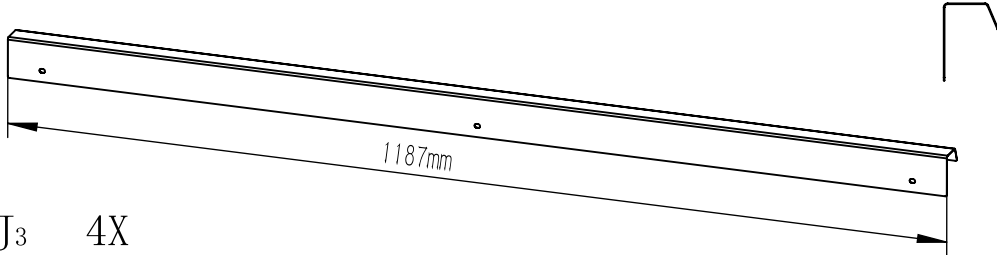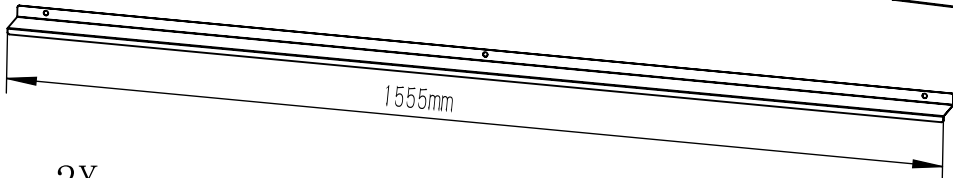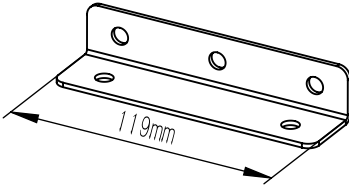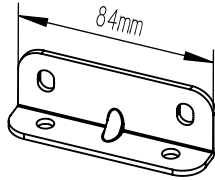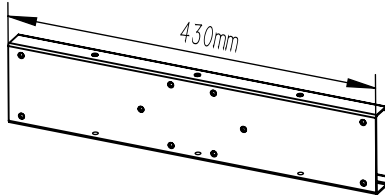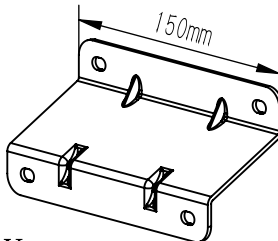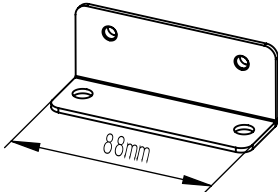 <p>J₁ 2X</p>	 <p>J₂ 1X</p>		
 <p>J₃ 4X</p>	 <p>J₄ 2X</p>		
 <p>K₁ 2X</p>	 <p>K₂ 2X</p>	 <p>K₃ 4X</p>	 <p>K₄ 1X</p>
 <p>K₅ 4X</p>	 <p>L₁ 57X D12/d6. 2*H2</p>	 <p>L₂ 57X</p>	 <p>M₁ 12X</p>


 1# 2X ST4. 8*13	 2# 2X ST5*16	 3# 12X ST4. 2*10 (B型)
 4# 100X M6*16	 5# 8X M6*12	 6# 57X M6*30
 7# 4X M6*30	 8# 24X M6*40	 9# 53X M6
 10# 14X ST6*70	 11# 14X	 12# 1X M5*12
 13# 1X	 14# 1X S4	 15# 1X S13




A1 1X

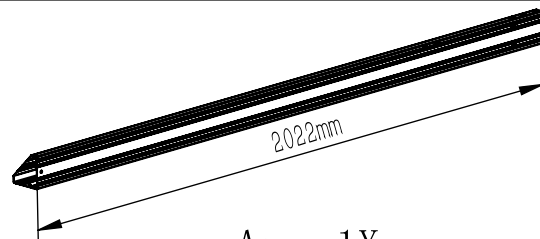

A2 1X

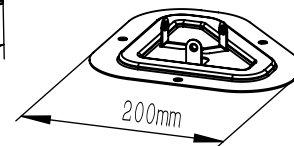


C2 2X

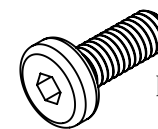


M6*16



4# 6X

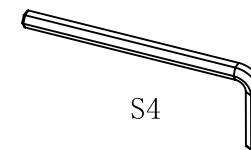


S4


14# 1X

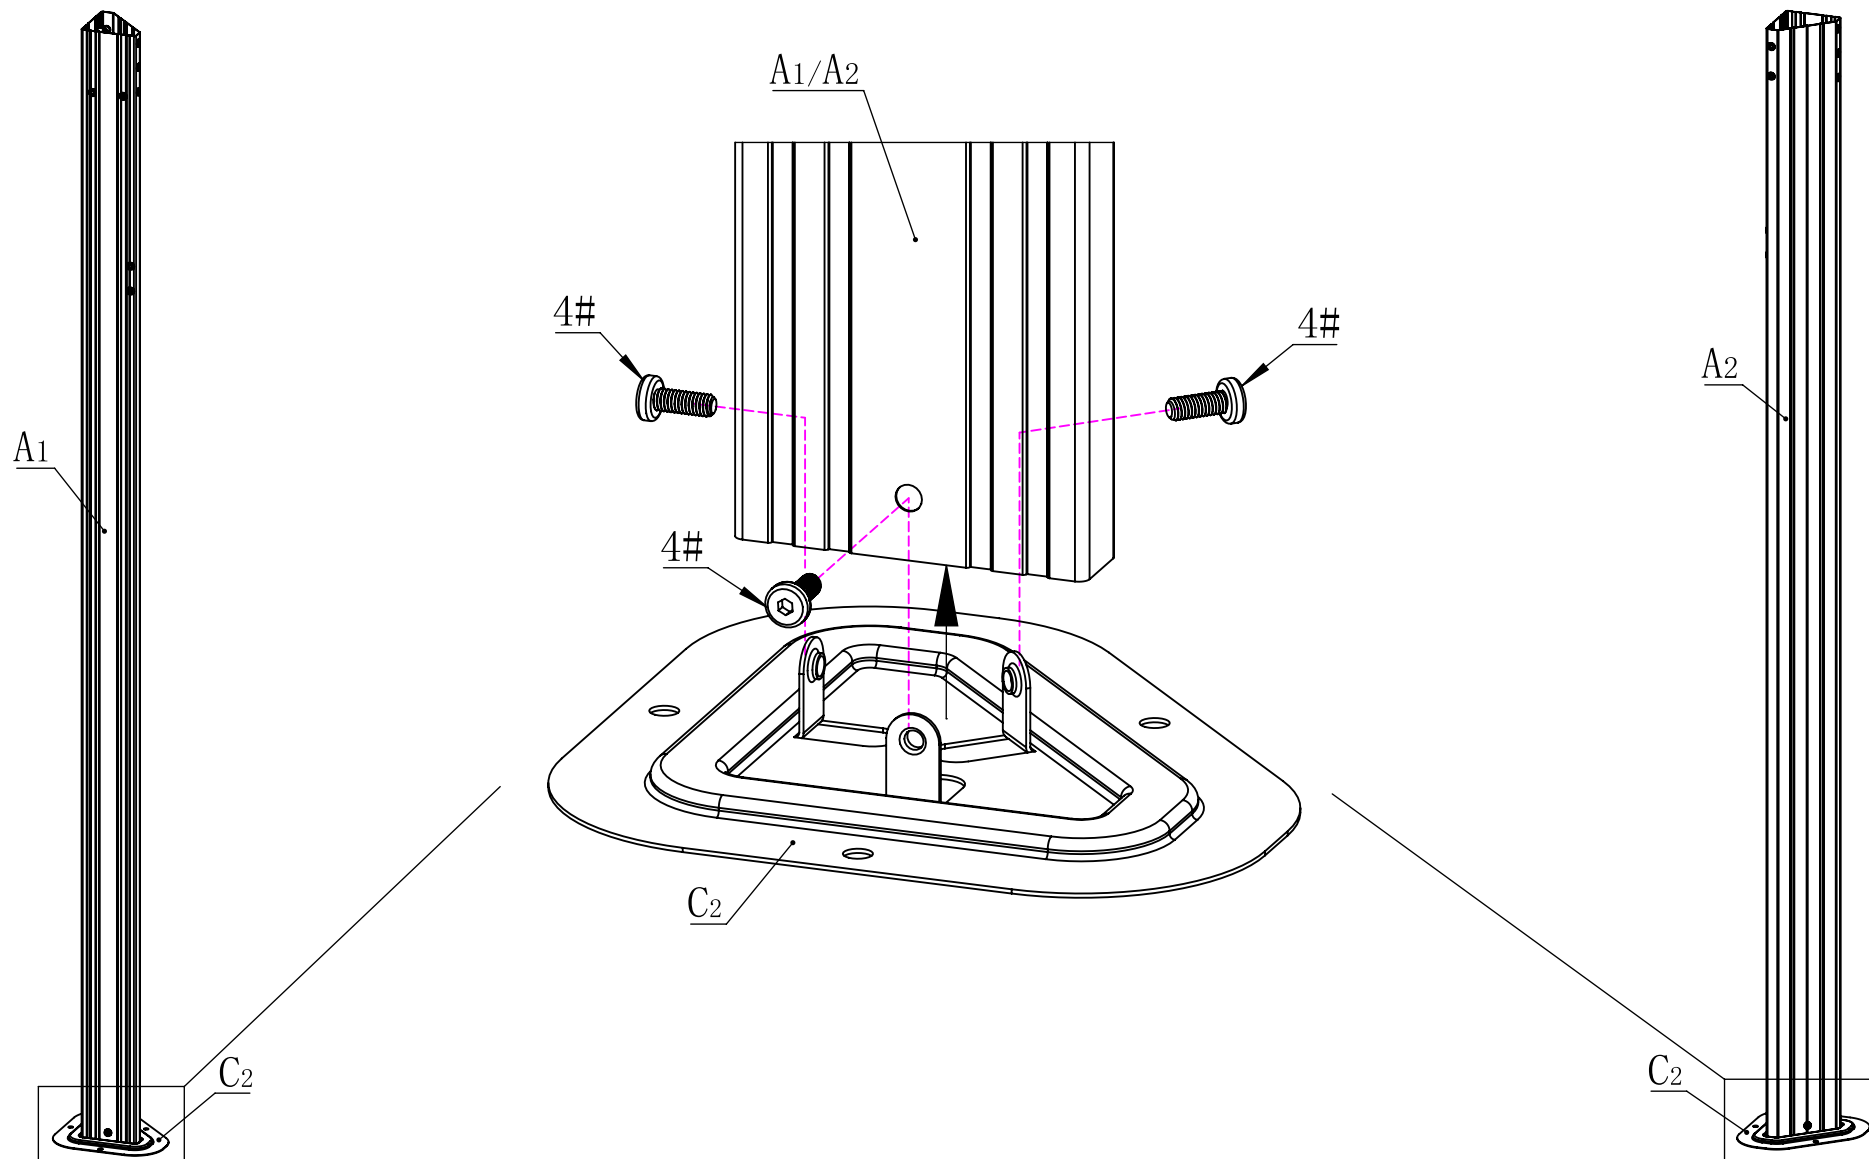

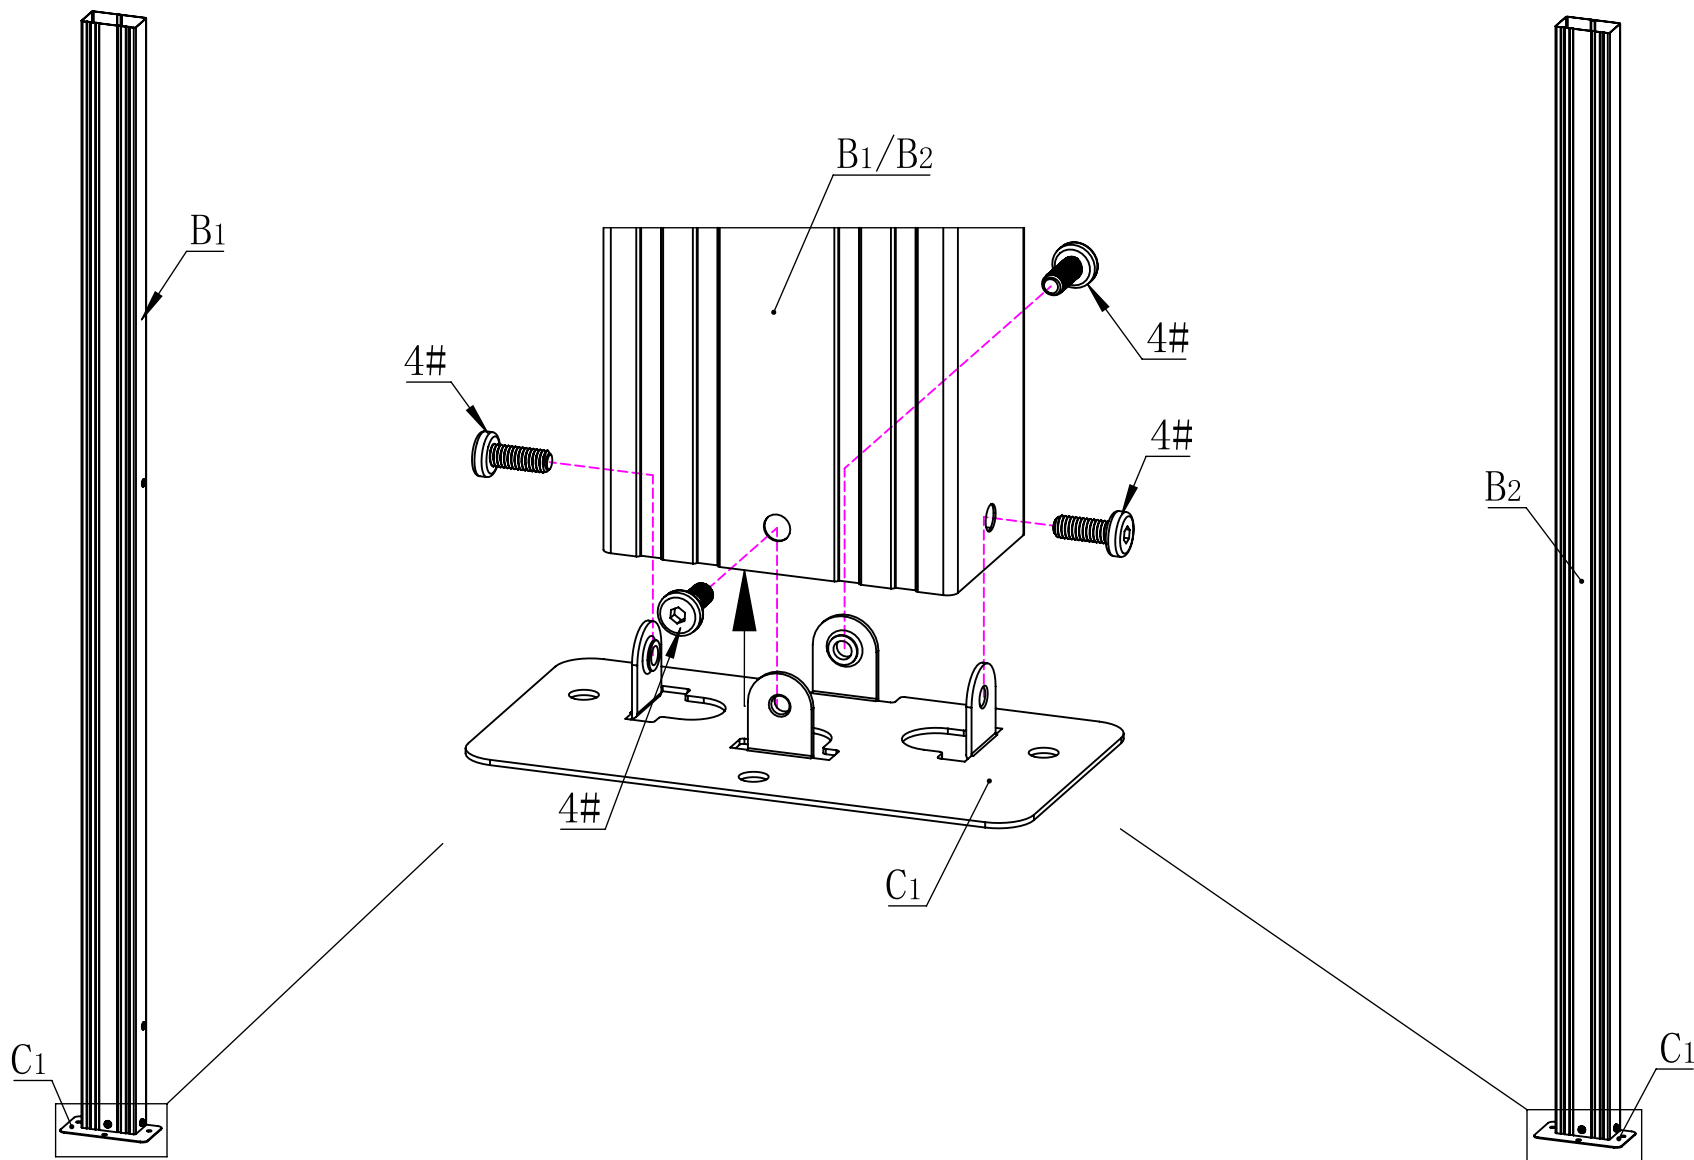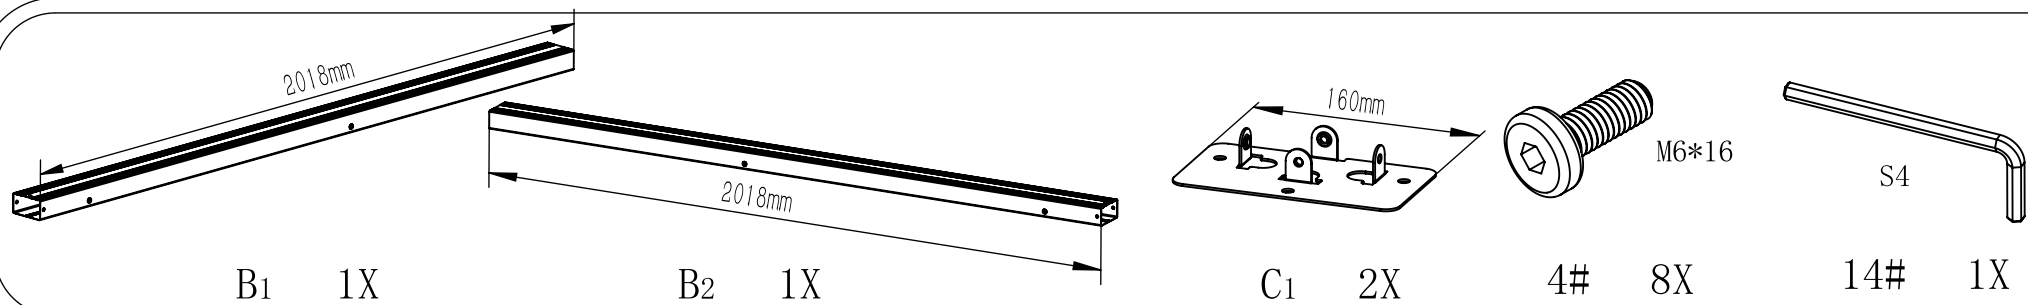


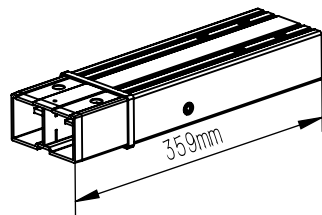

B3 1X

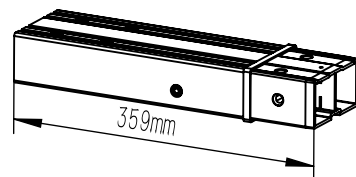



B4 1X




ST5*16

2# 2X

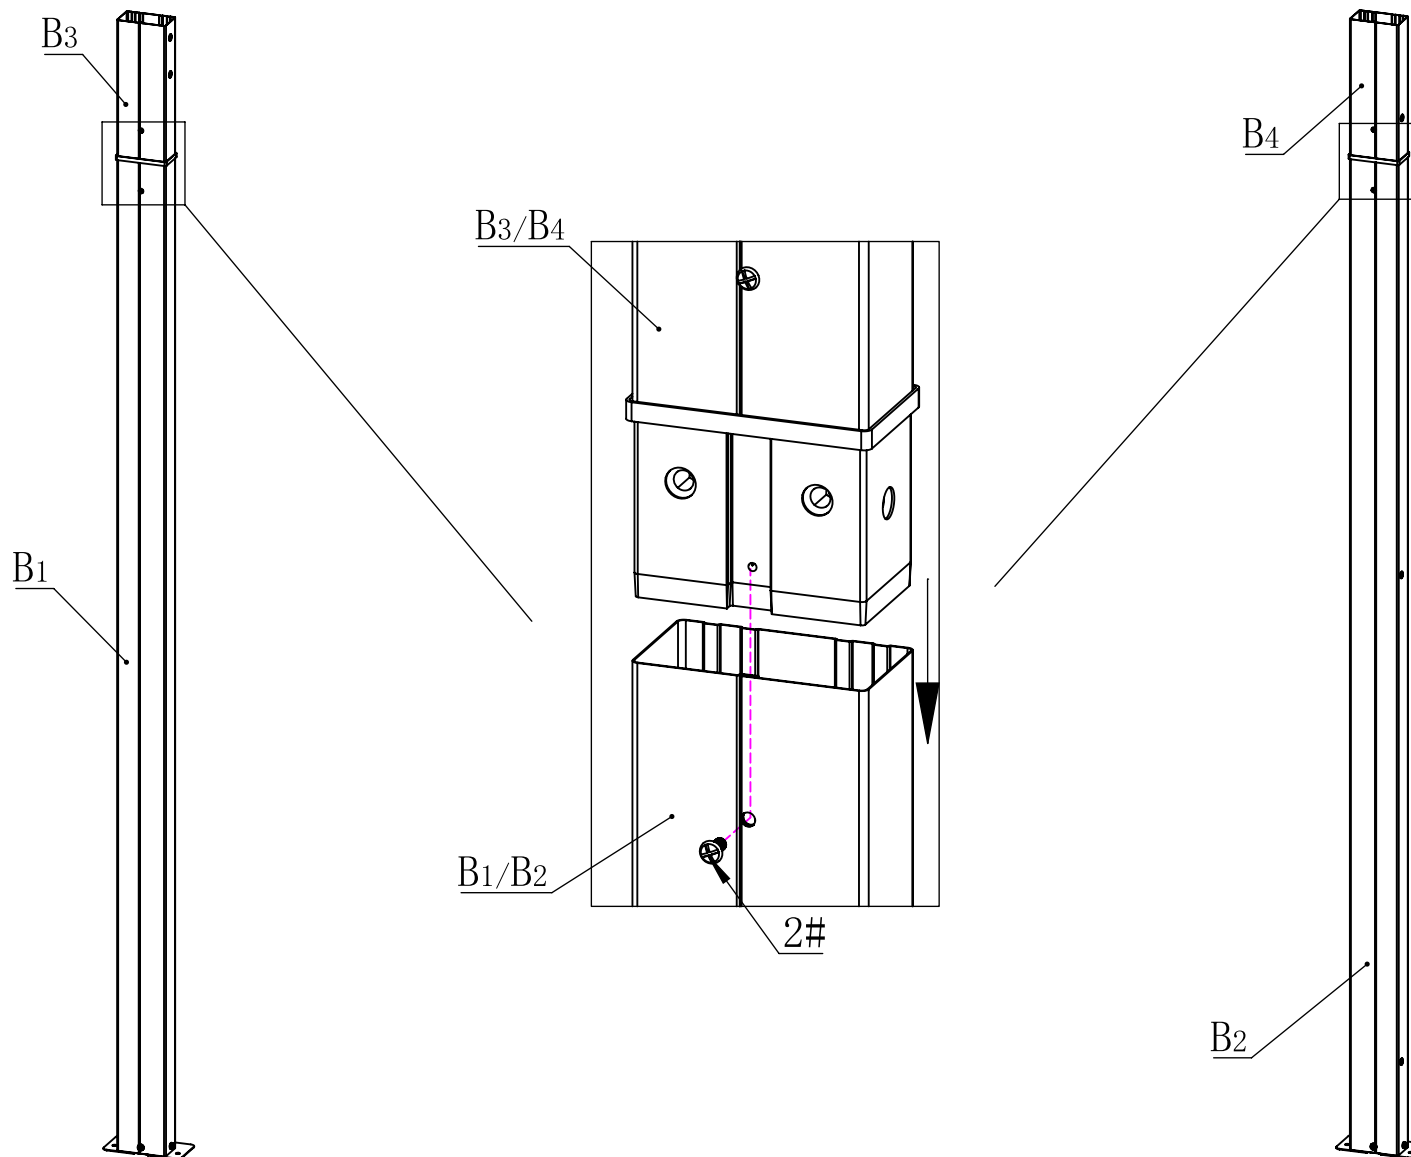


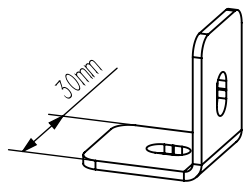

C3 6X

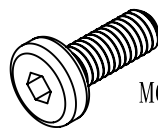




4# 6X

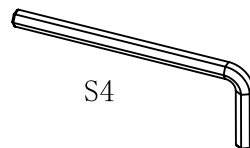


14# 1X


- ⚠ (1) If you don't consider fixing it to the wall, you can skip this step.
 (2) The bracket #C3 is used to fix the post against the wall. You can assemble only 2 pieces for each post according to the actual installation situation.

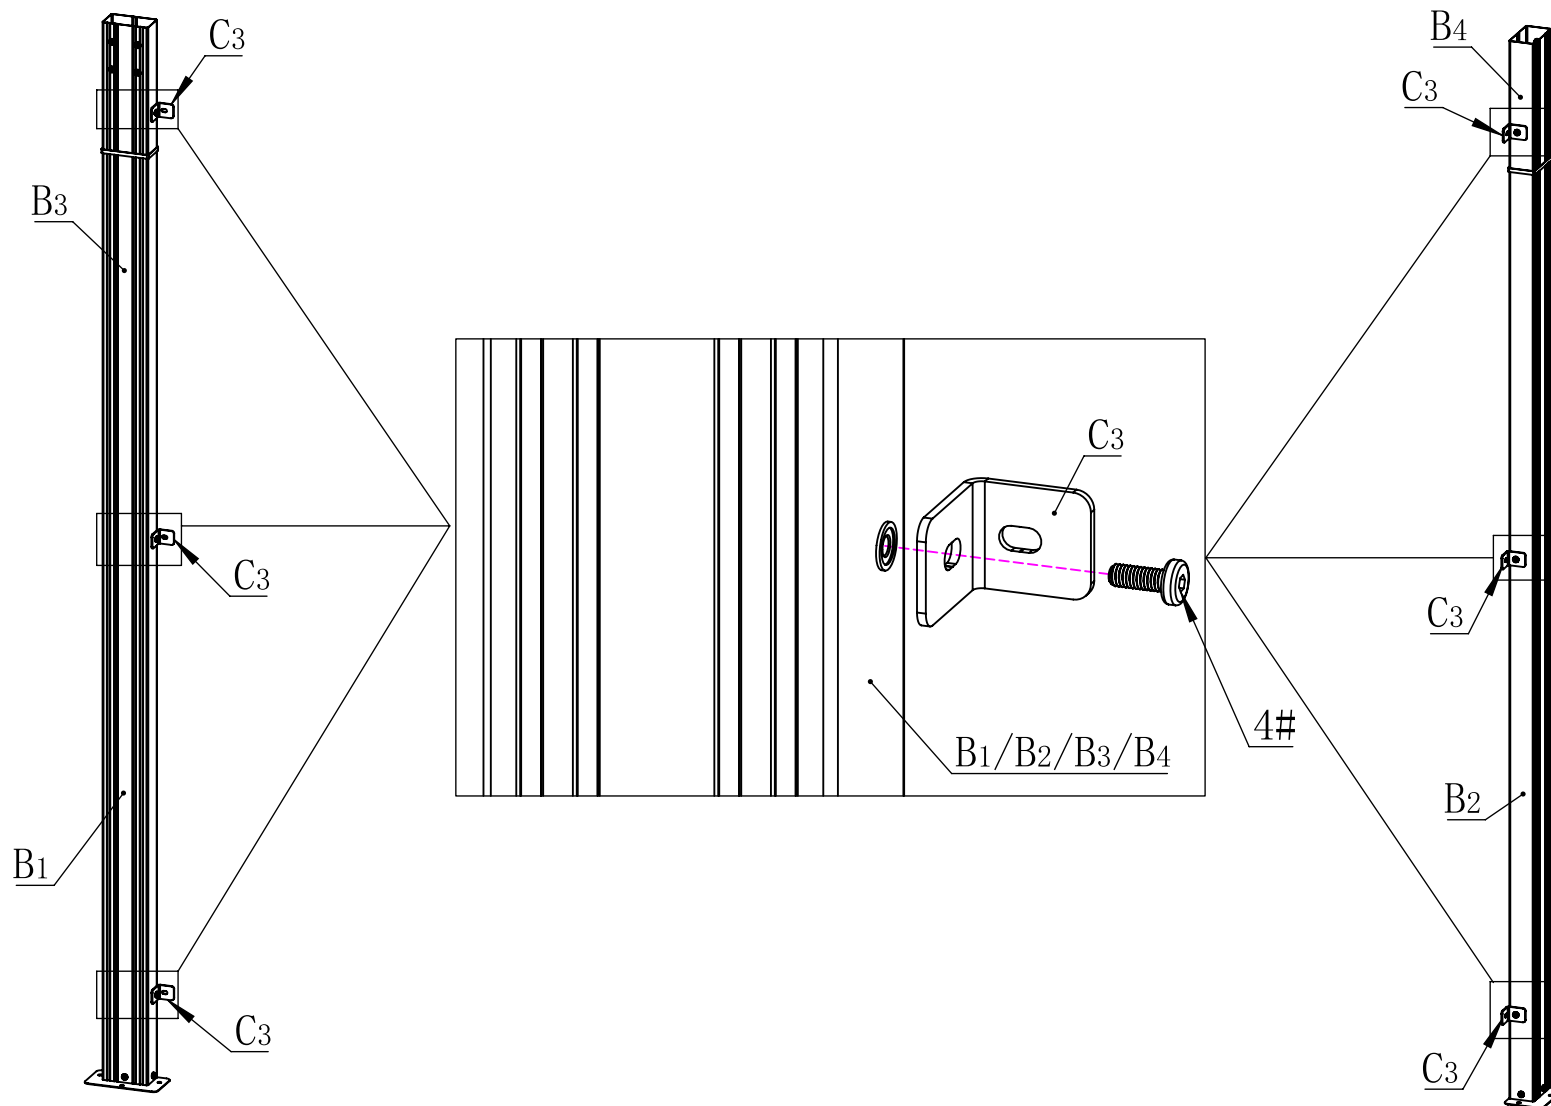

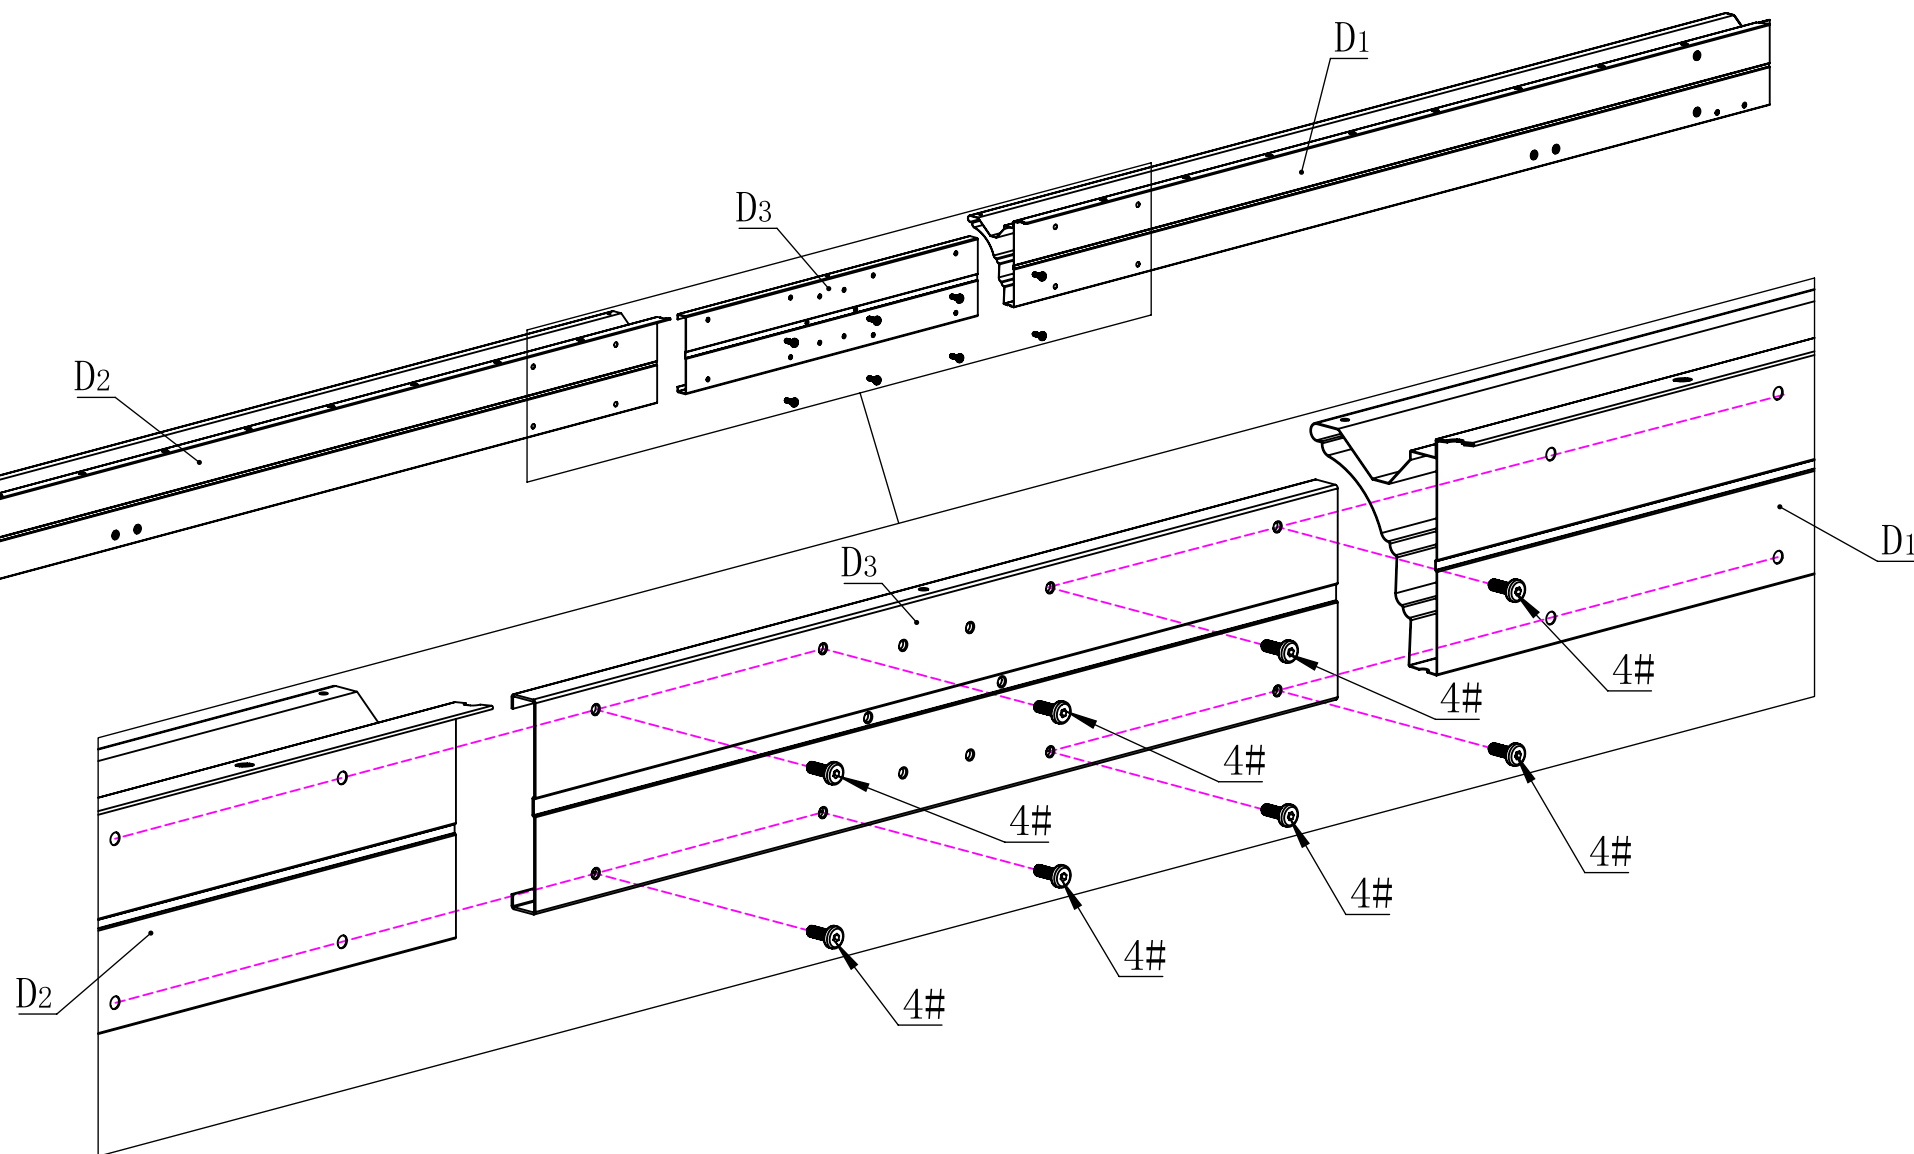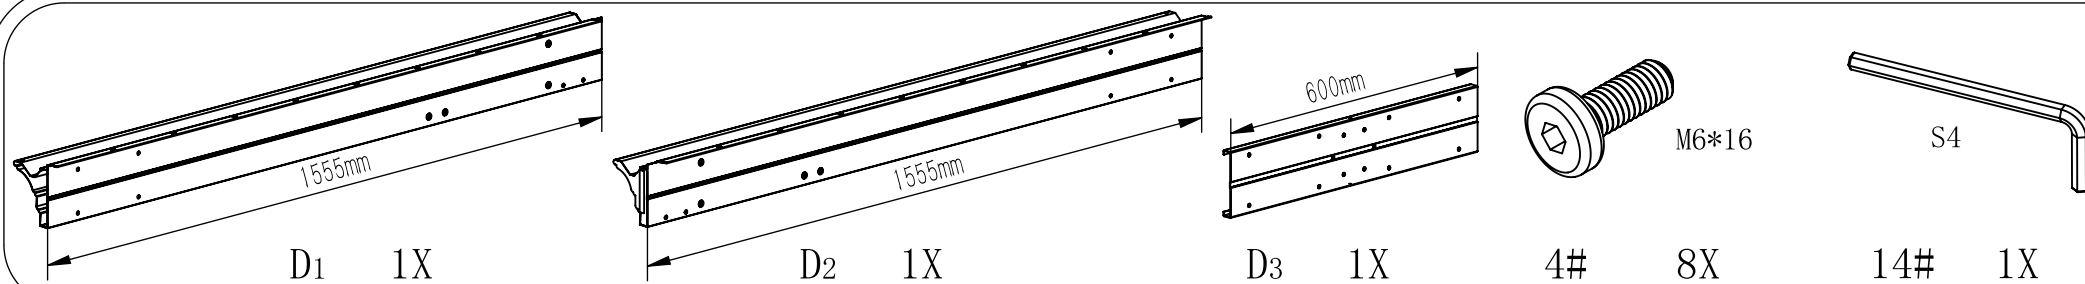

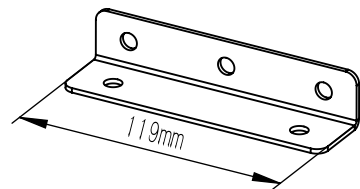


K1 2X

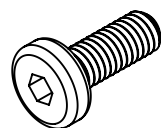




M6*16


4# 4X

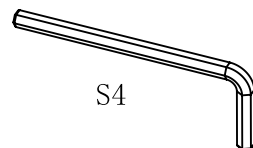

S4


14# 1X


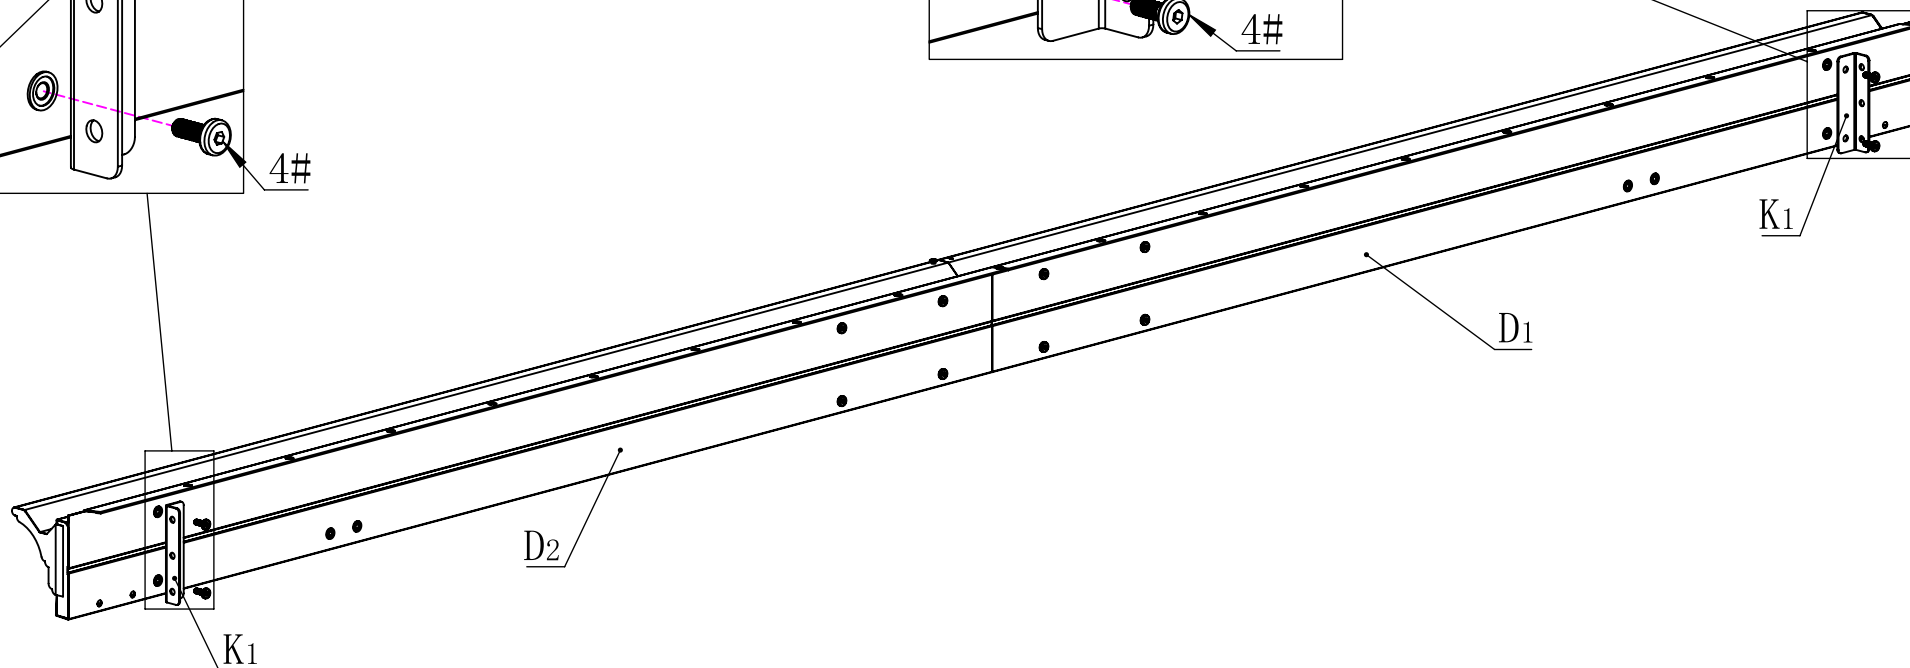
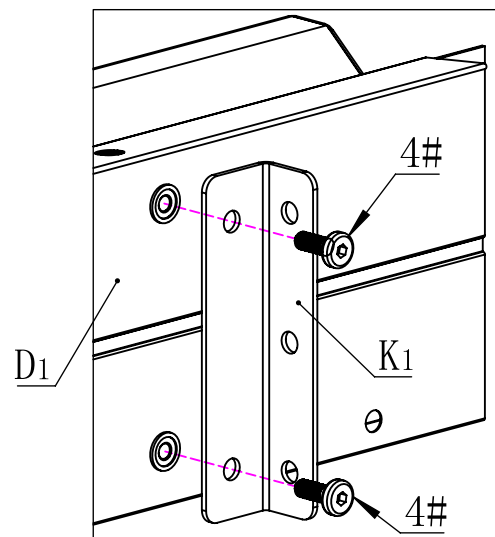
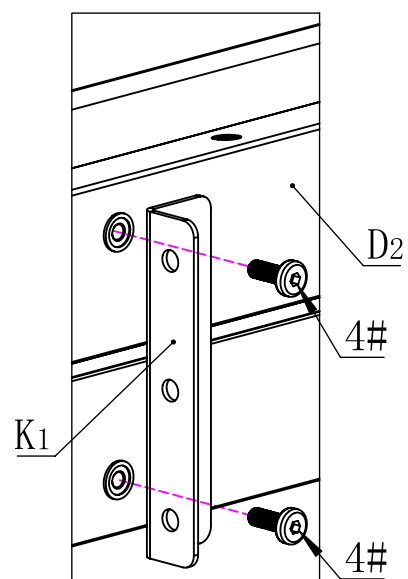


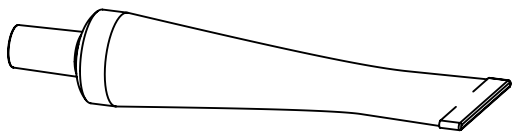


13# 1X


Use silicone sealant (part #13) to affix the gap between the Beams.

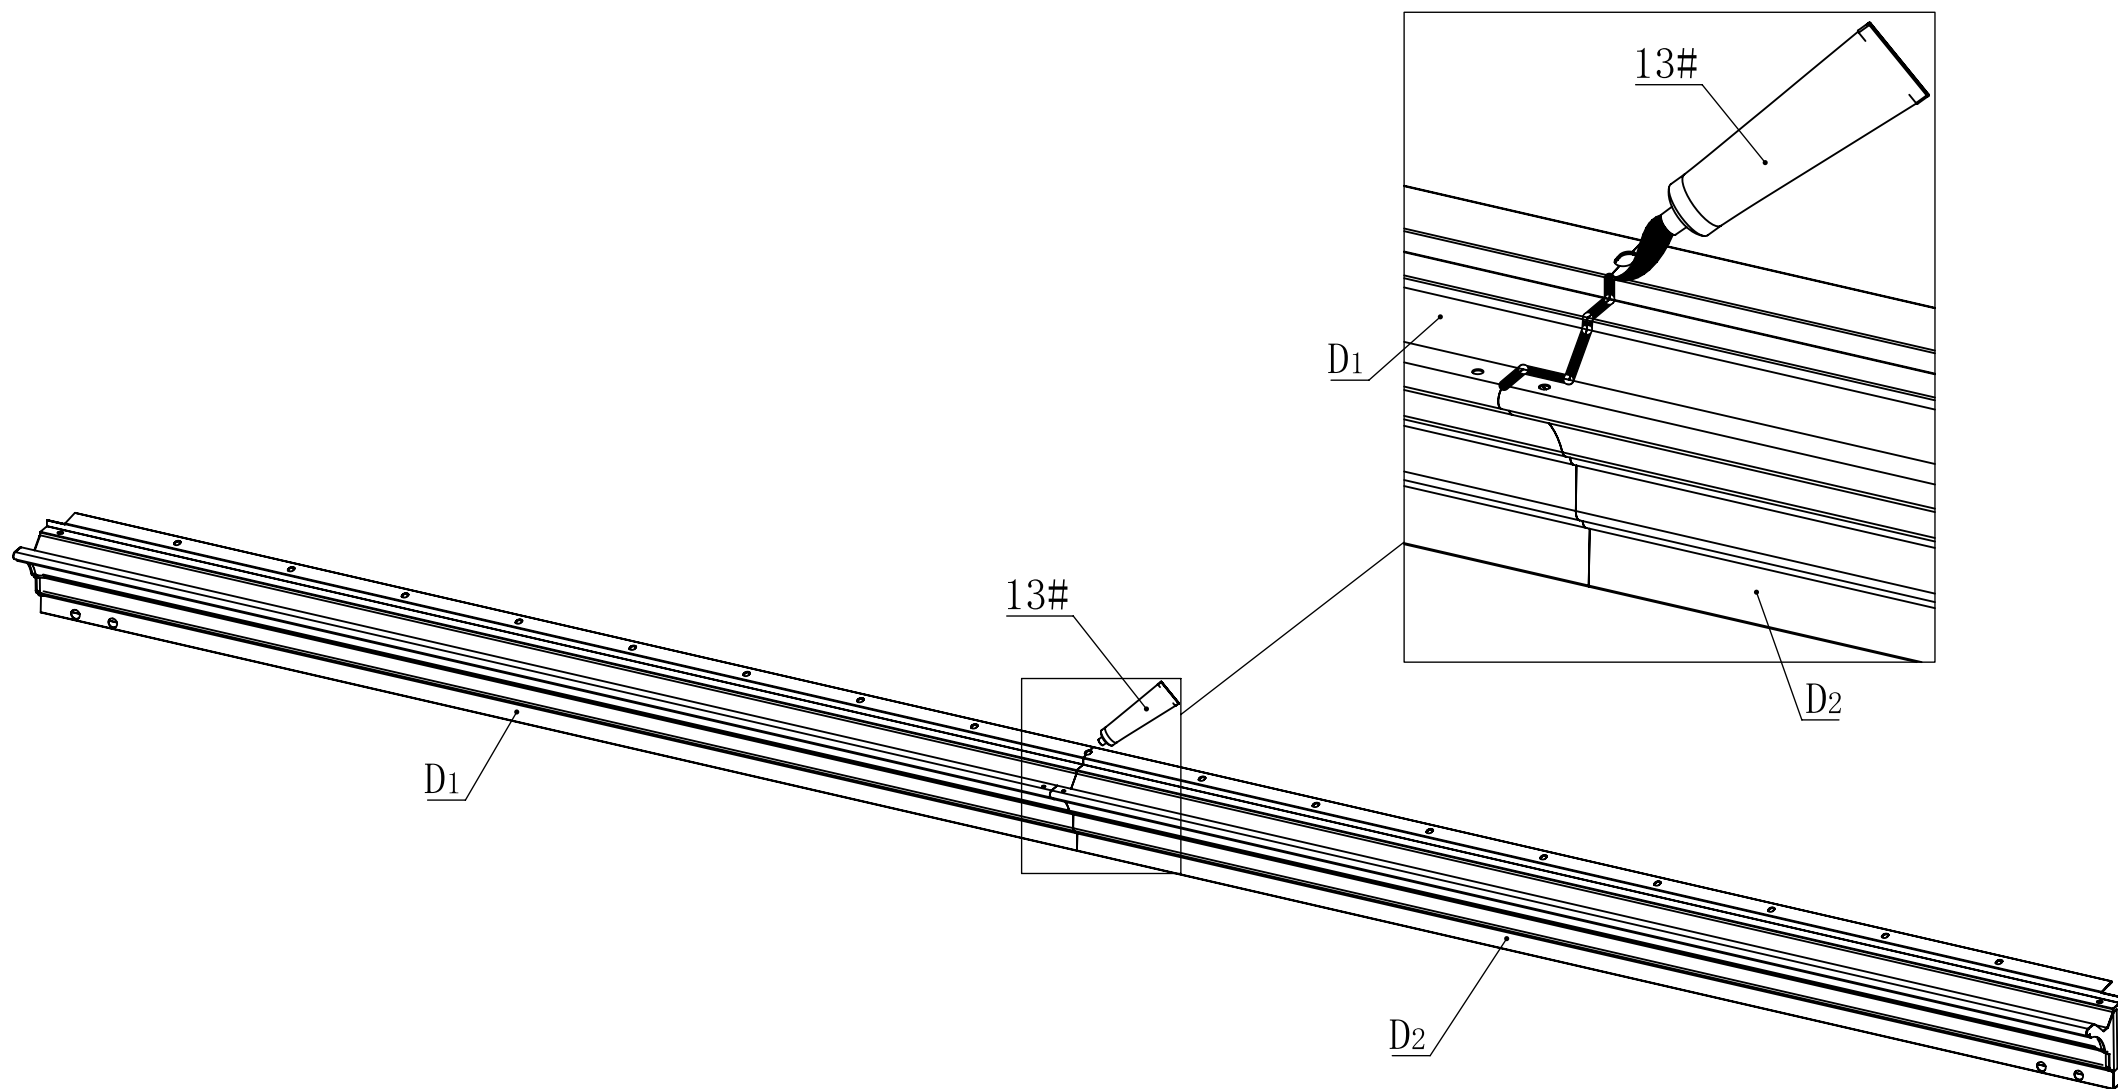

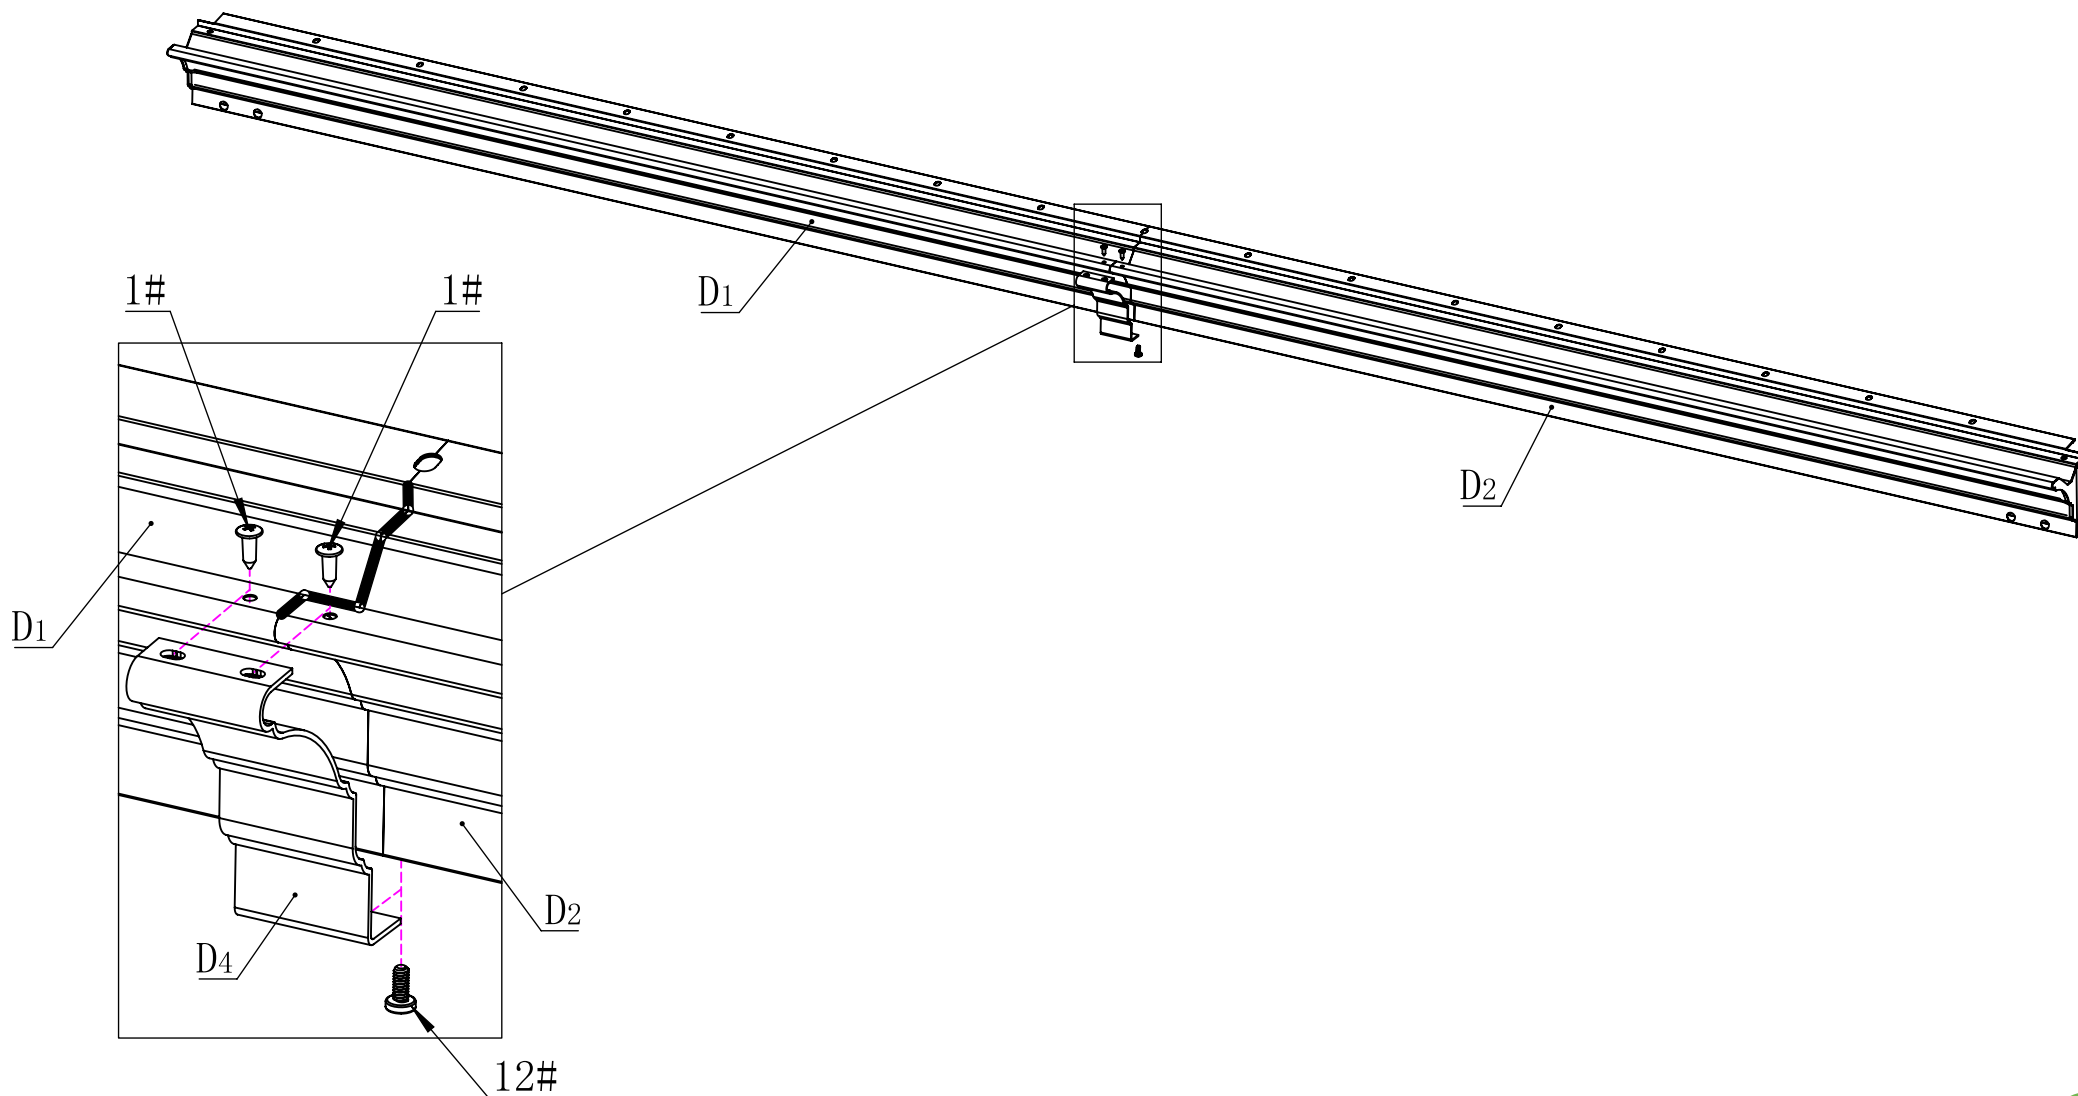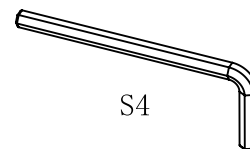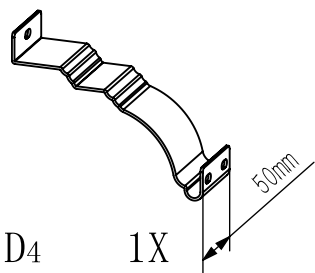


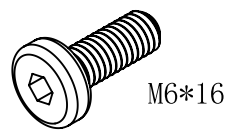

M6*16

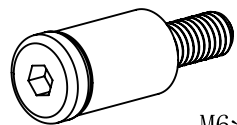

M6*30

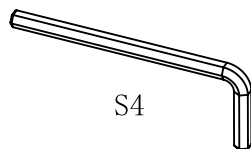

S4

4#


6X


7#

4X


14#

1X

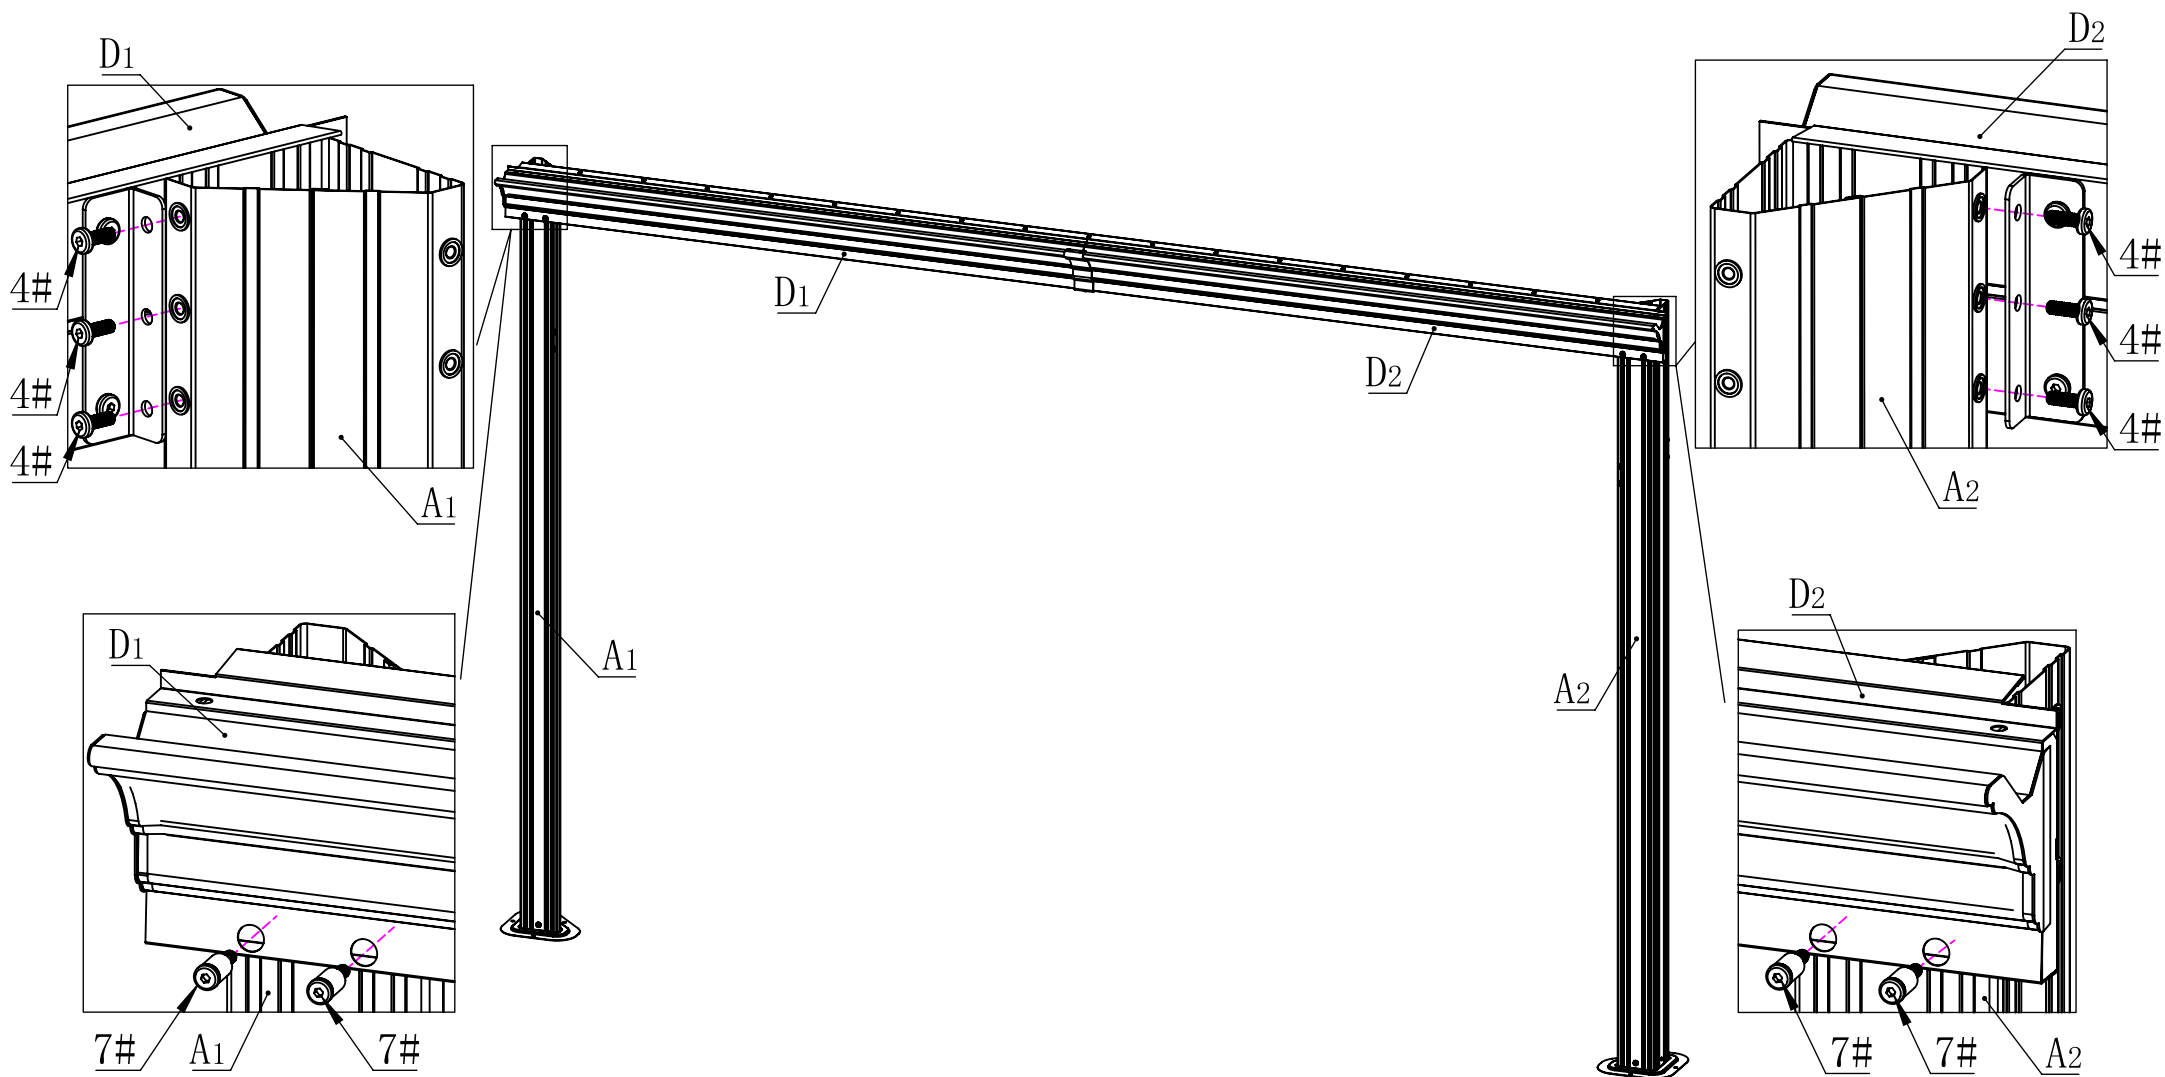


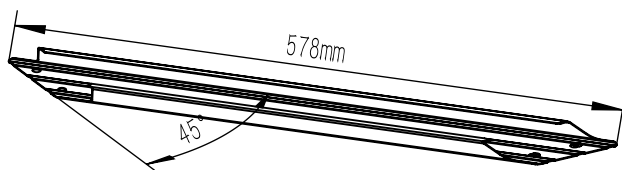


I₁ 1X

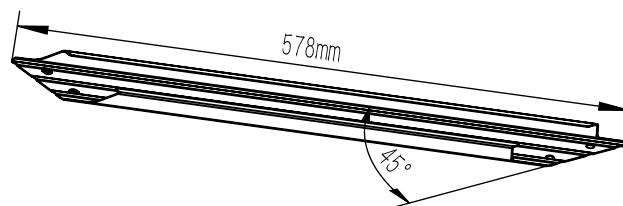


I₂ 1X



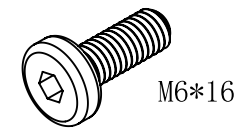



4# 8X

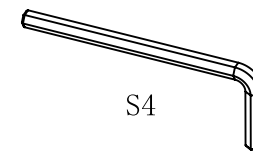

14# 1X

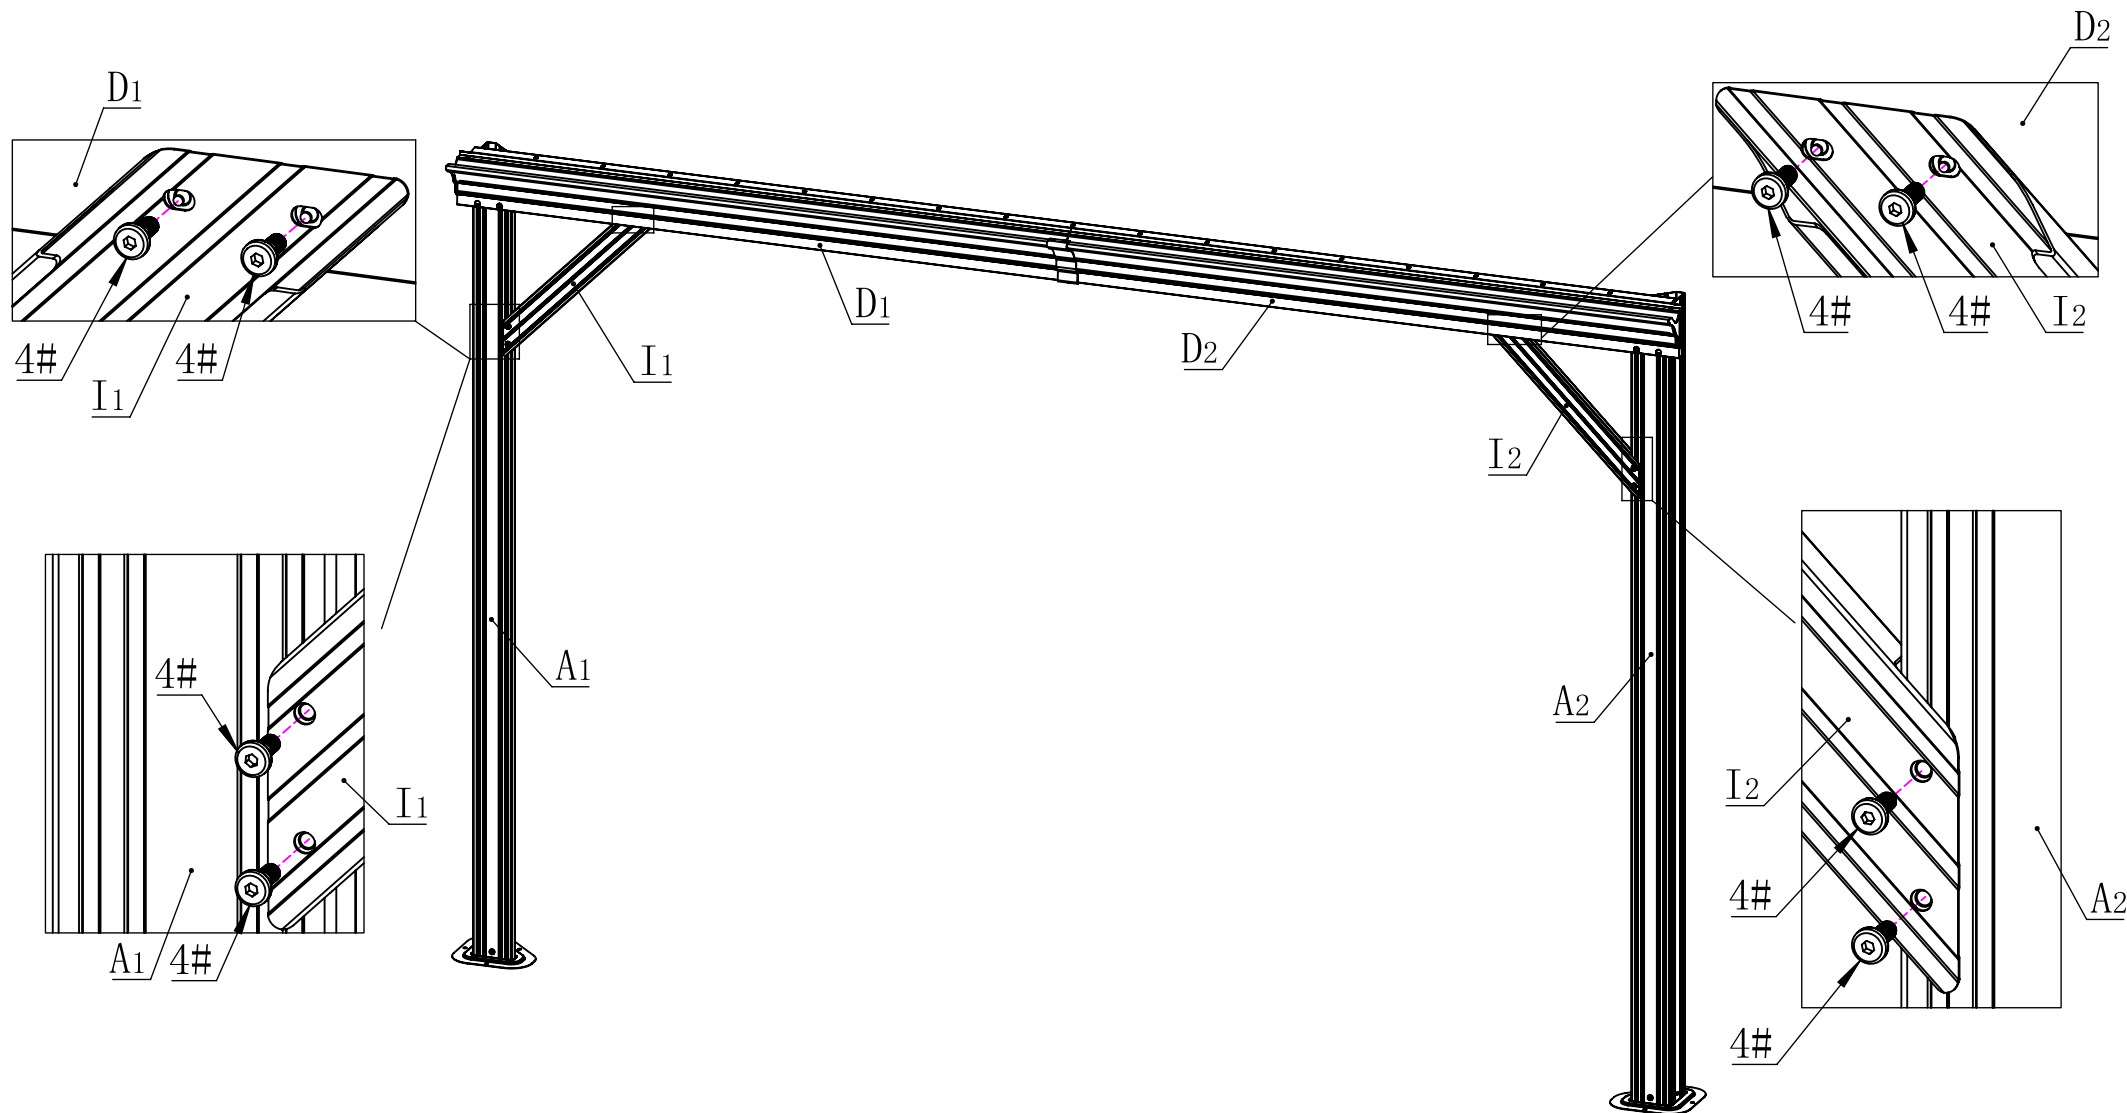


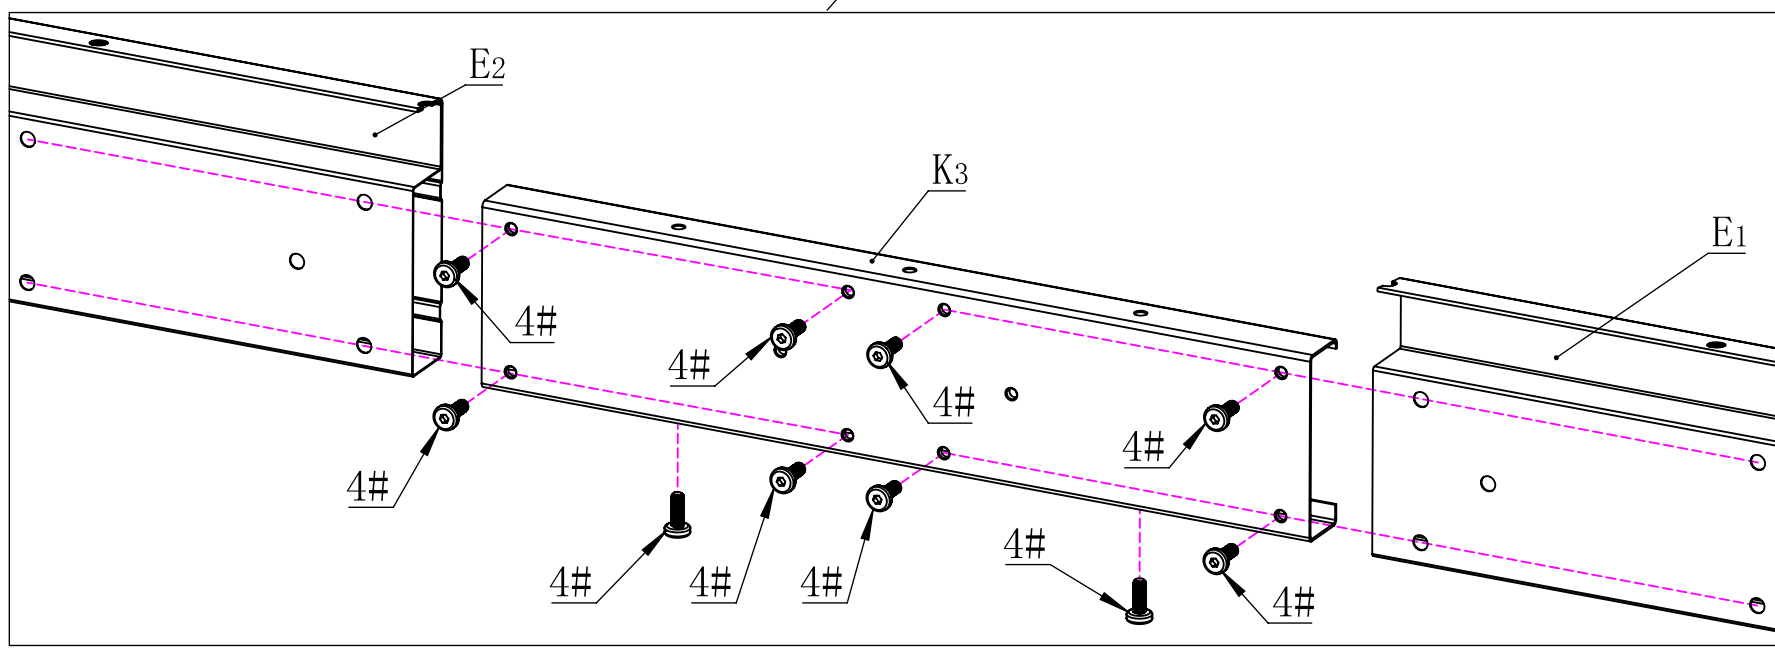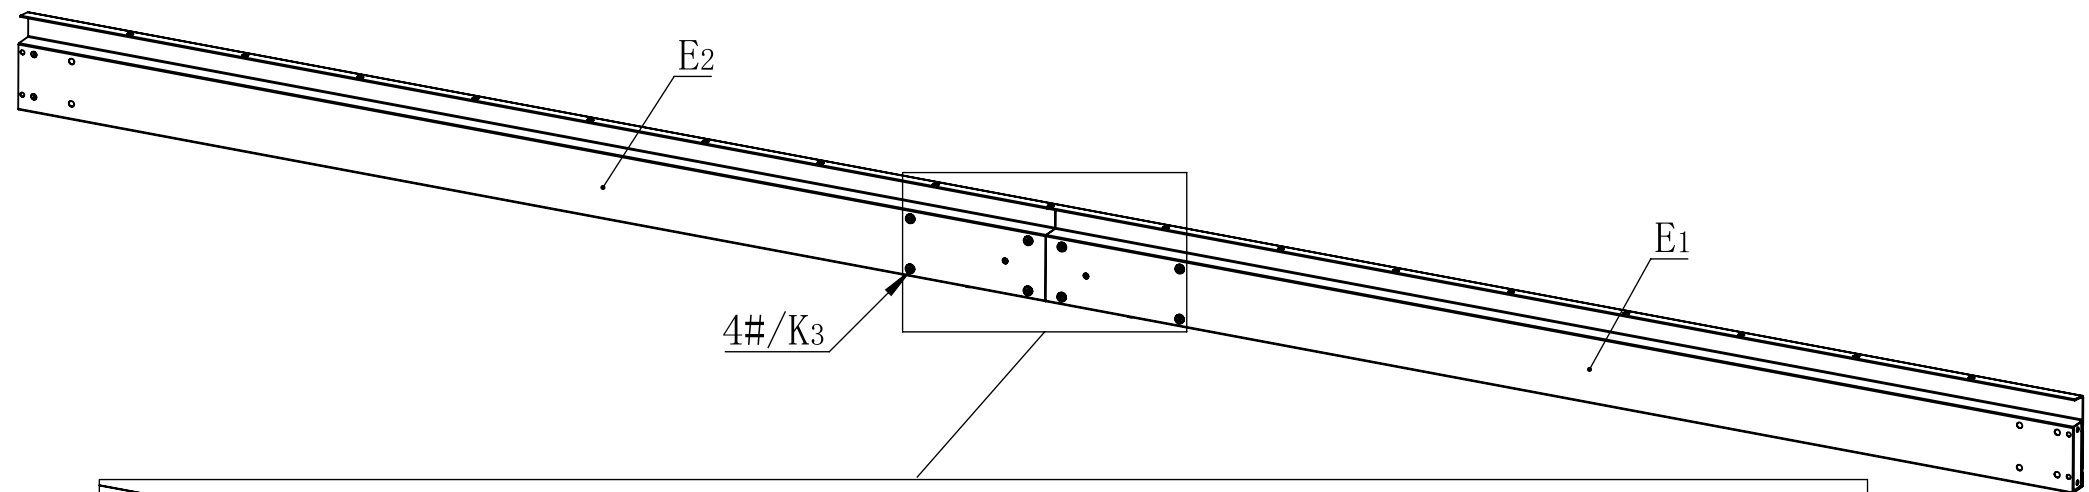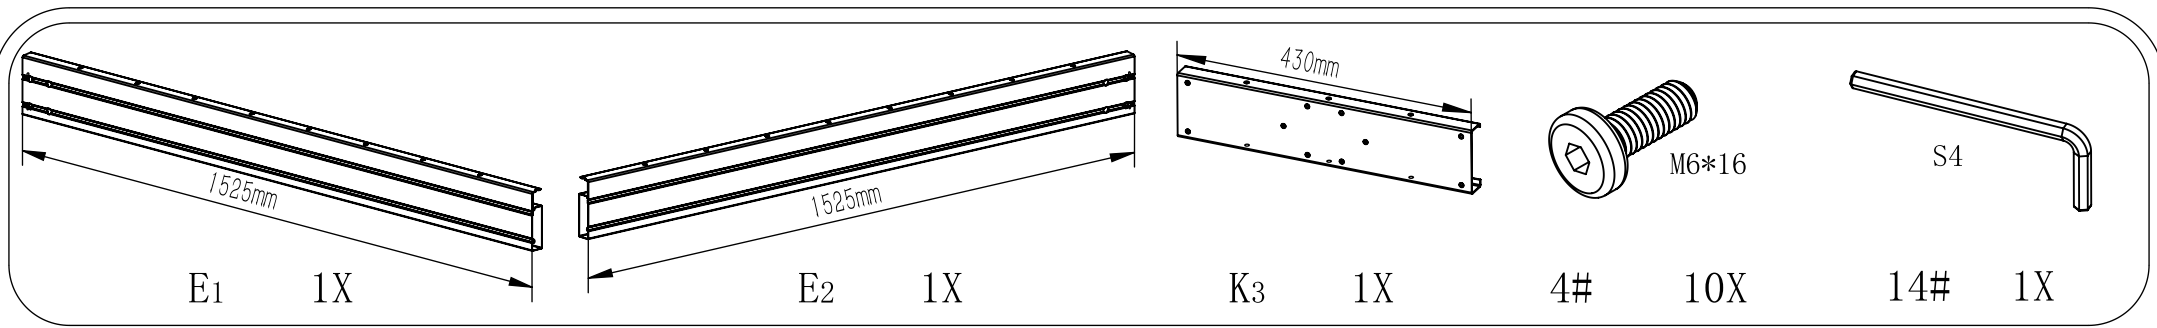

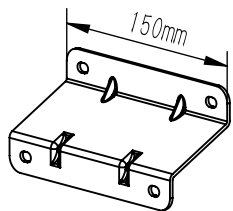

K4


1X

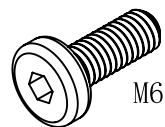

M6*16

4#


2X

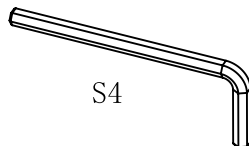


S4


14#

1X

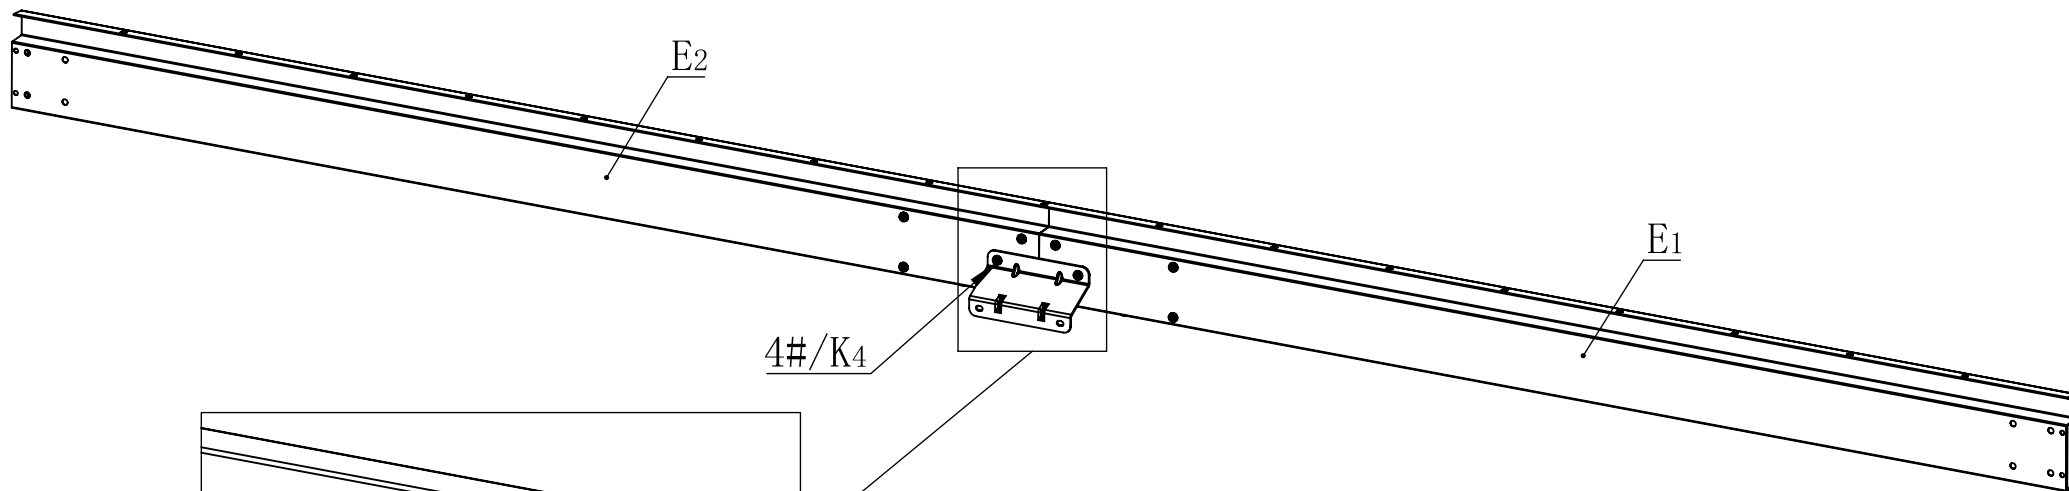

4#/K4

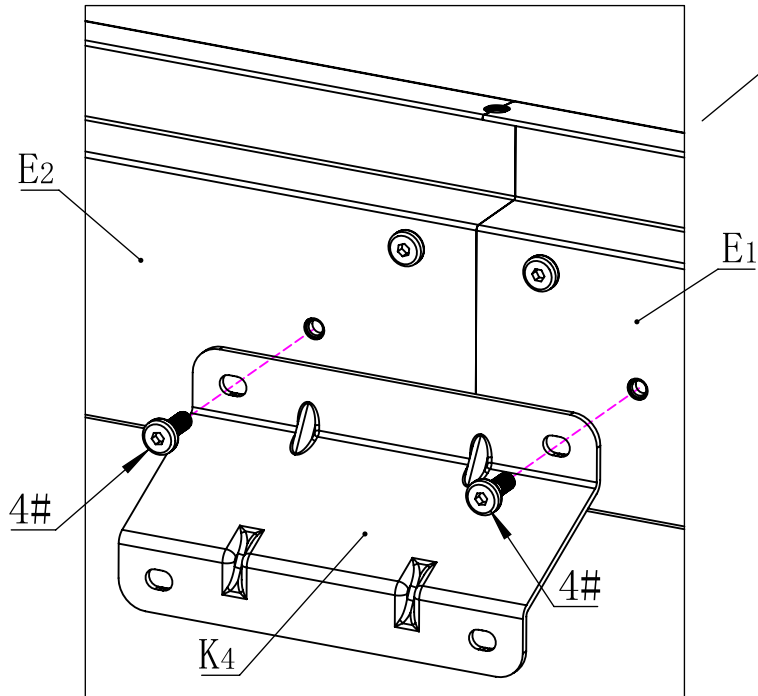


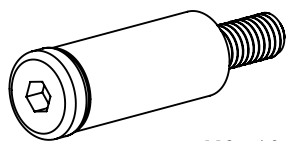

M6*40

8#


8X



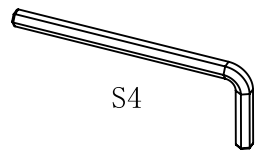



S4

14#

1X

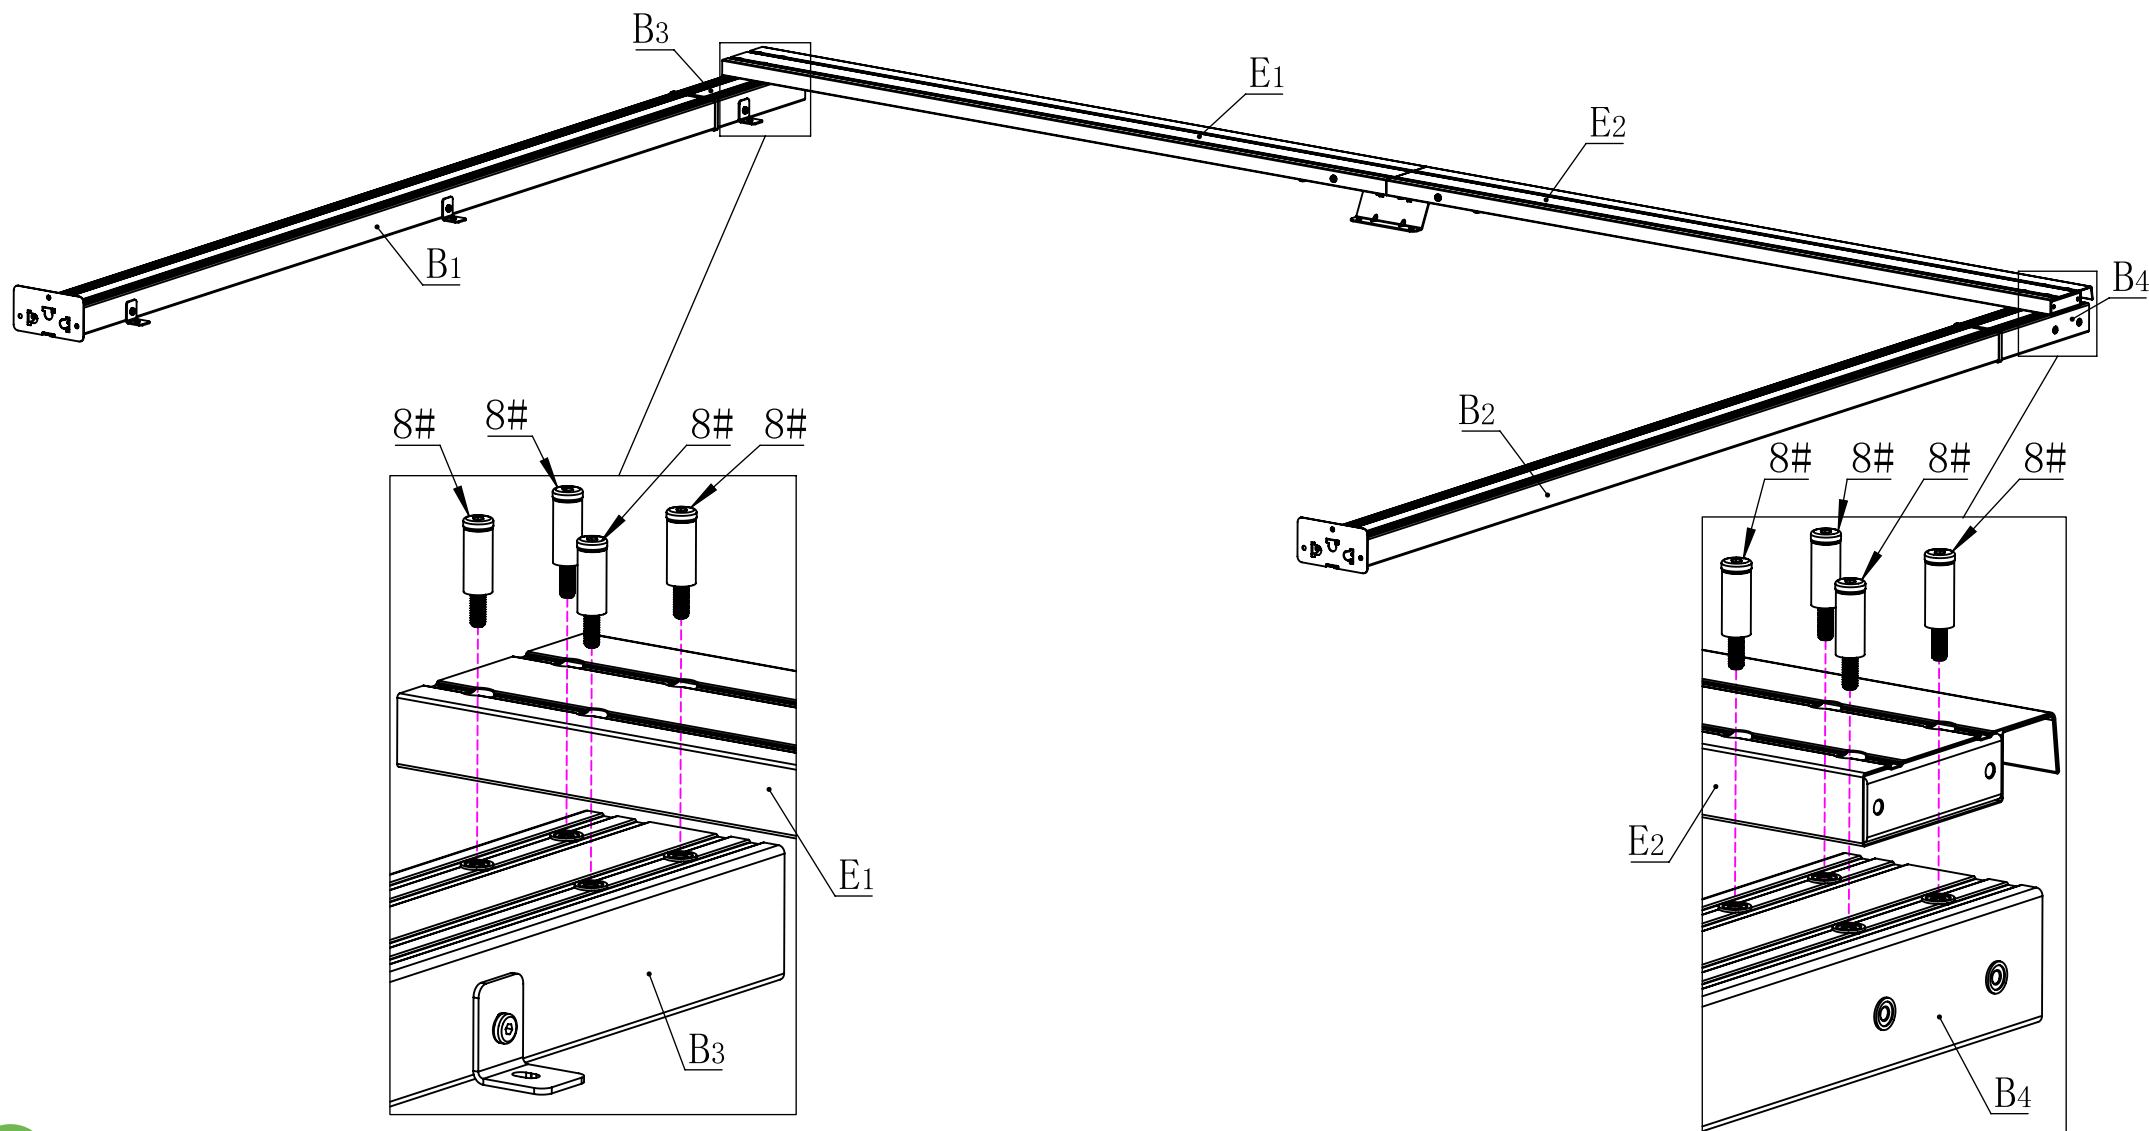


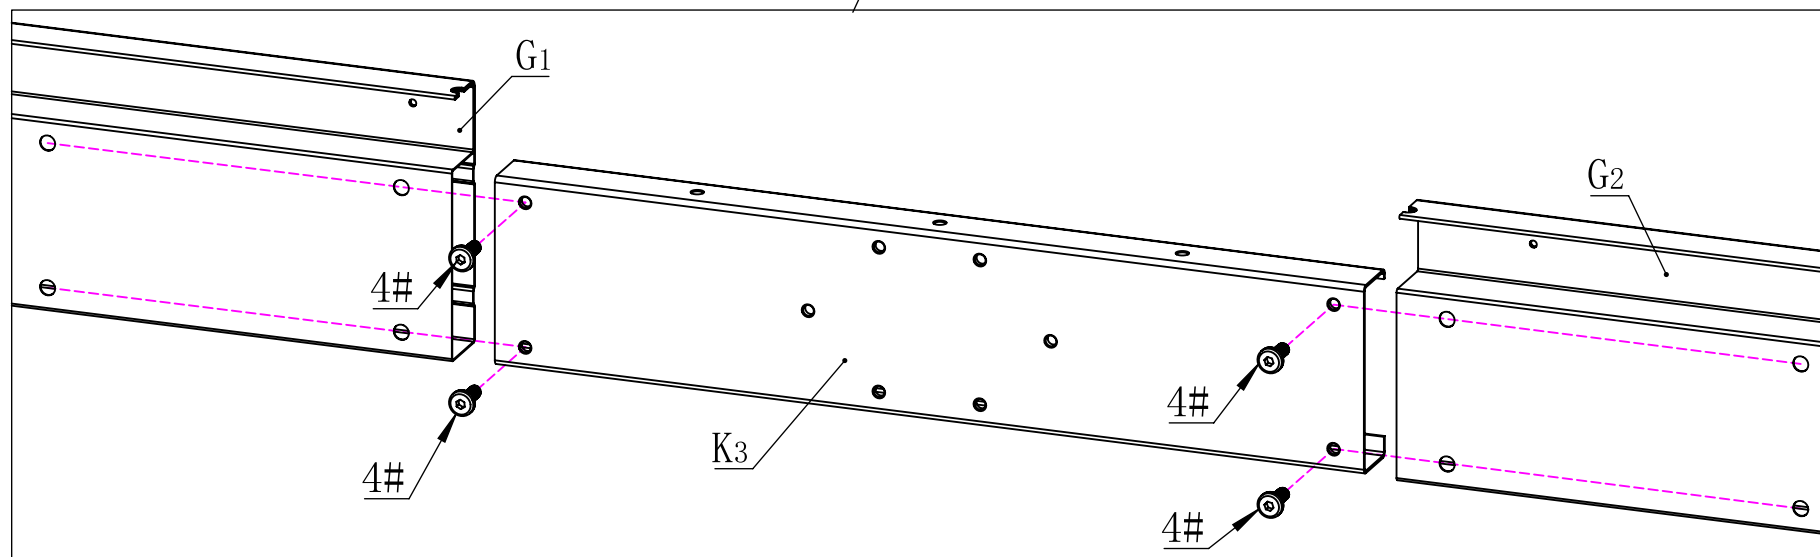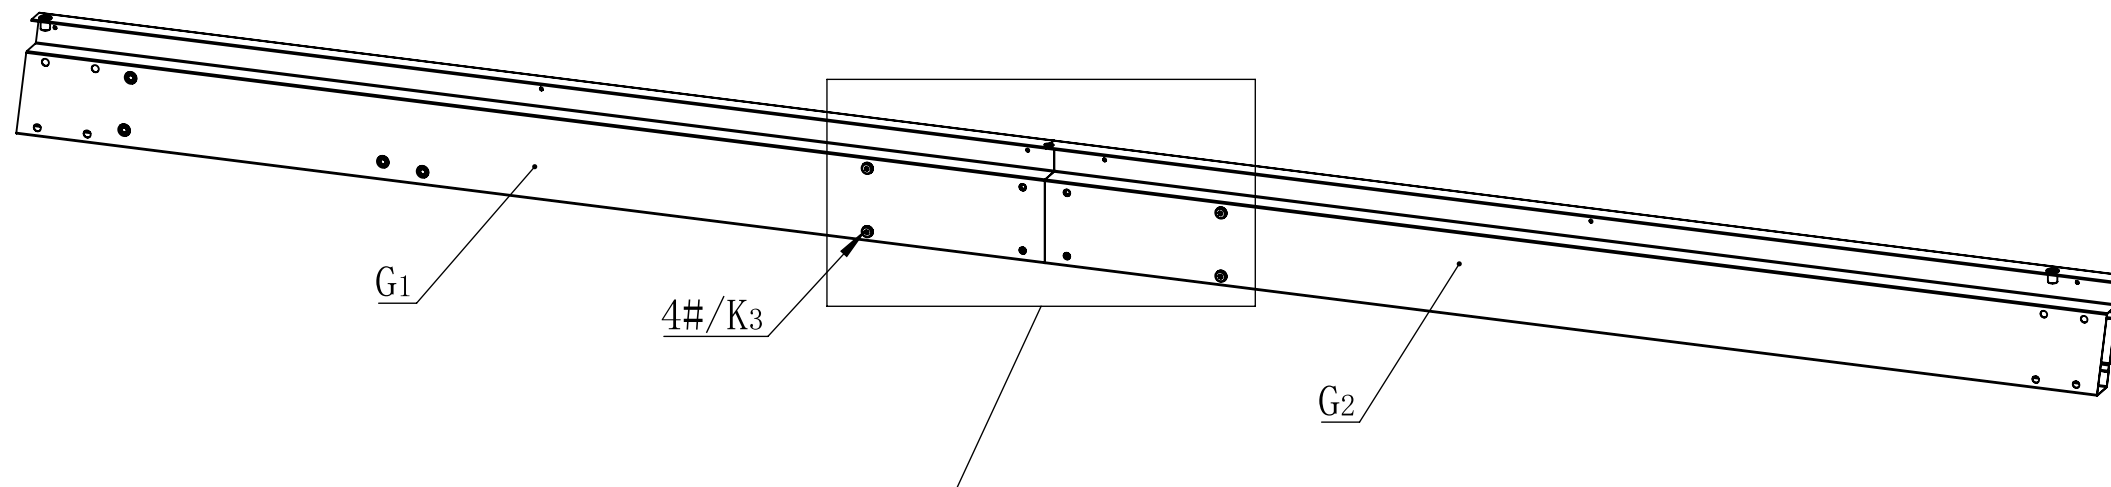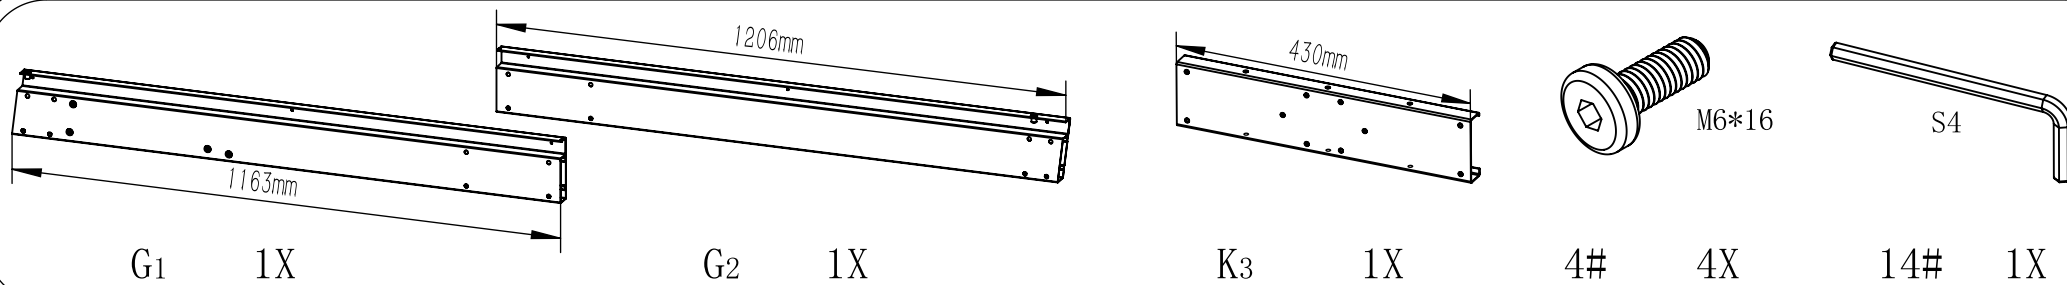

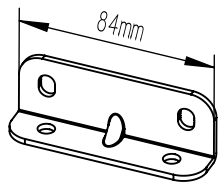

K₂


1X

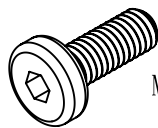

M6*16

4#



2X



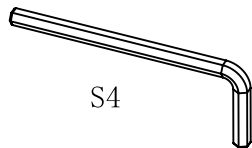



S4

14#

1X

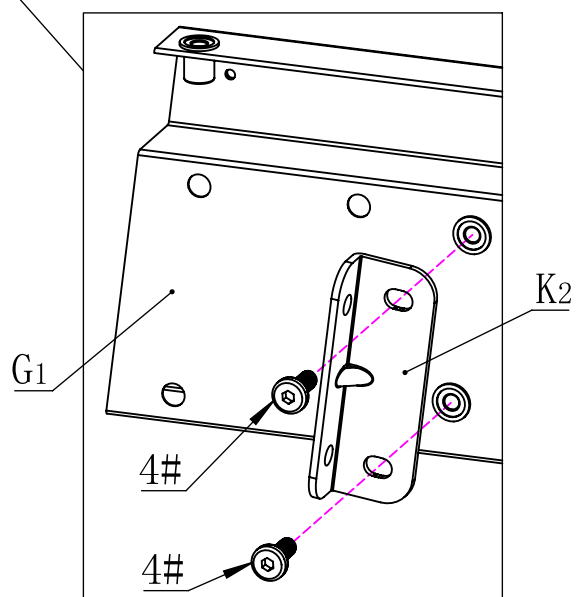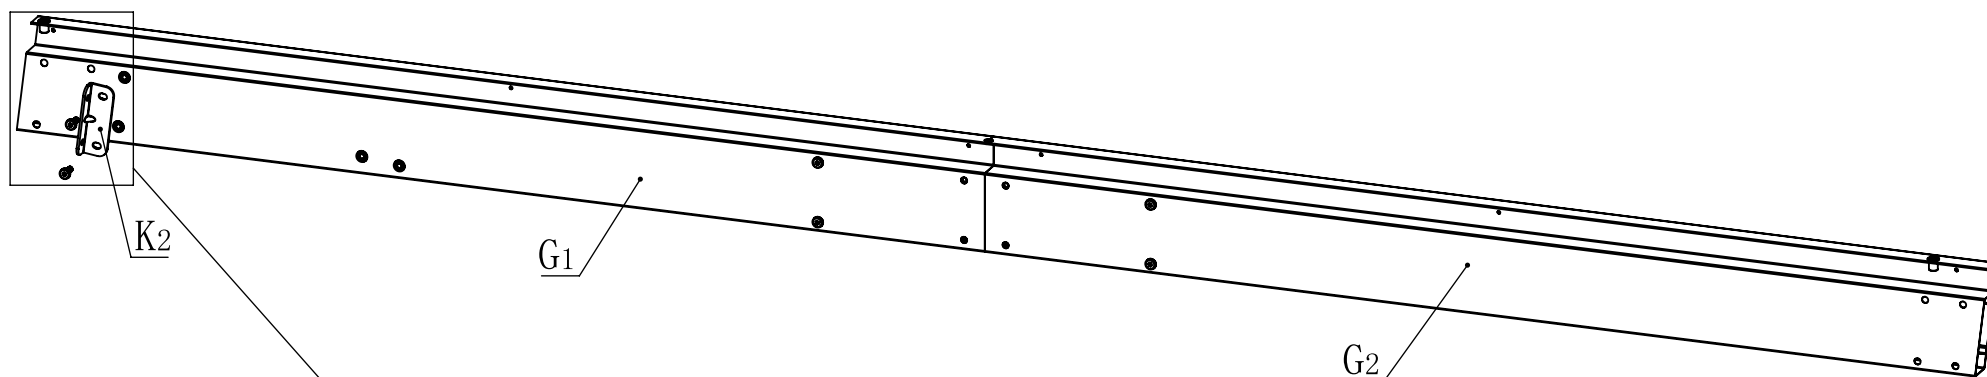


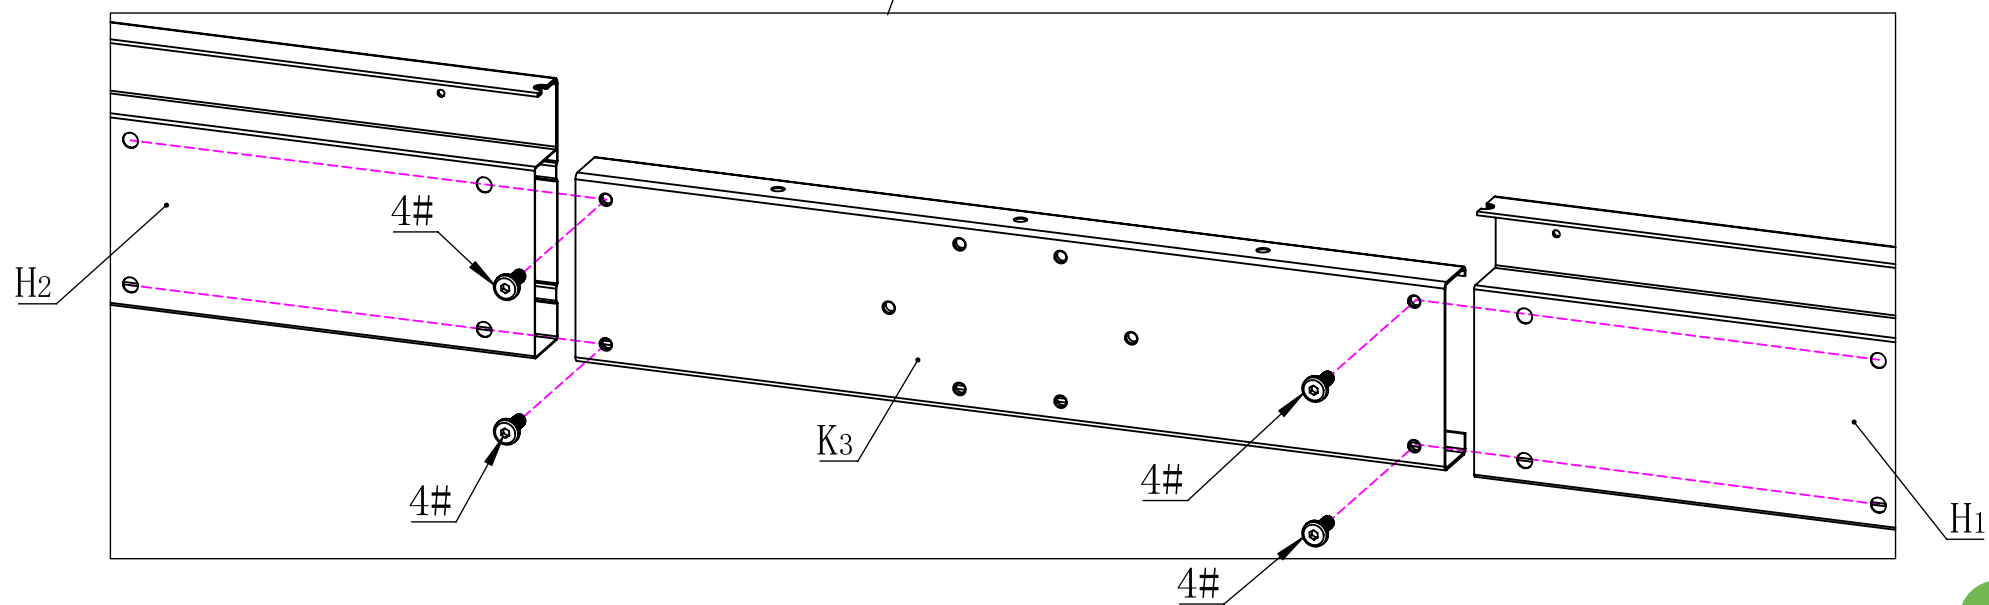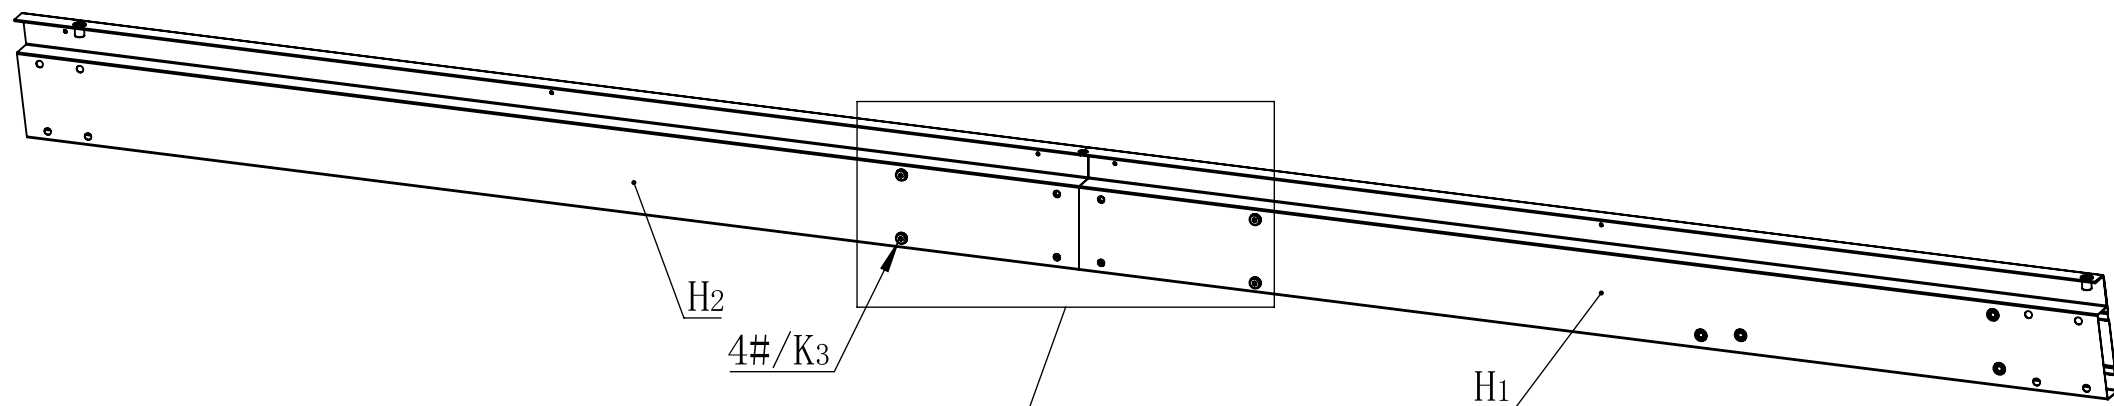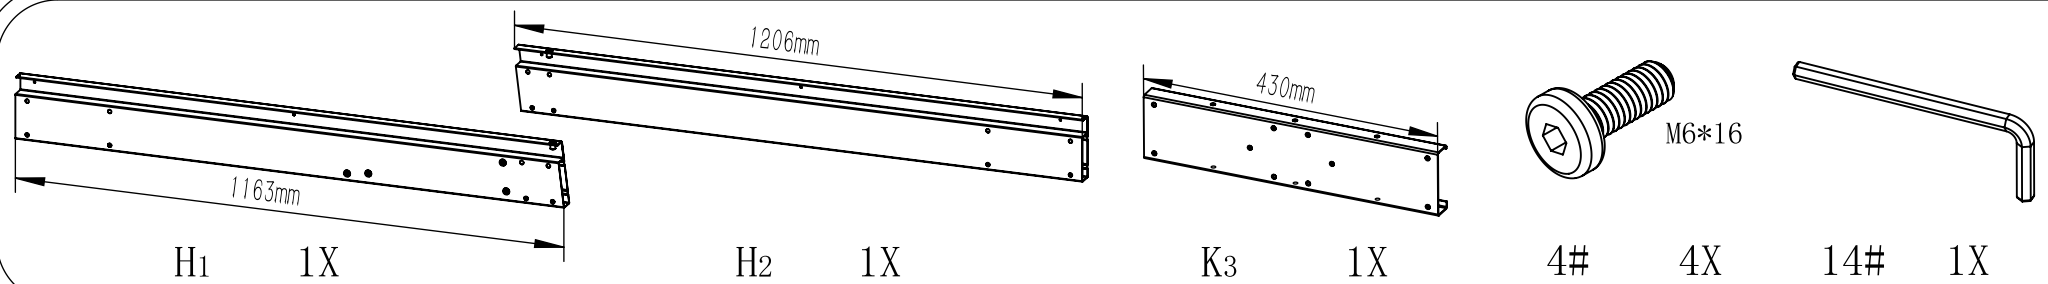

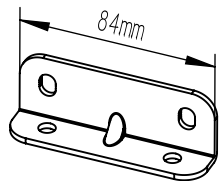

K₂


1X

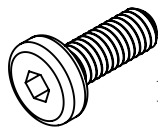

M6*16

4#



2X

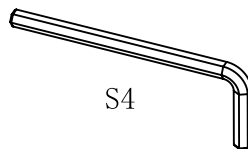


S4

14#

1X

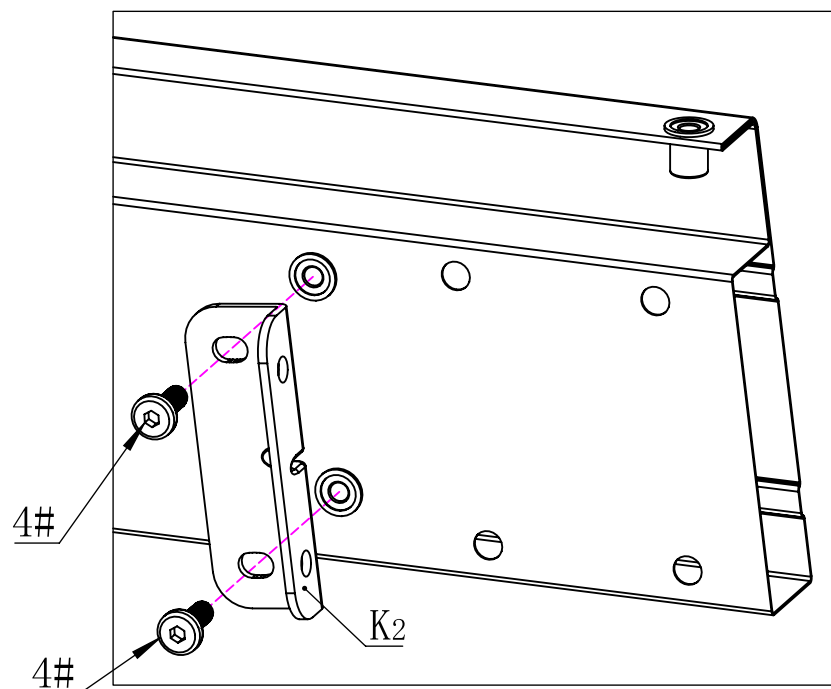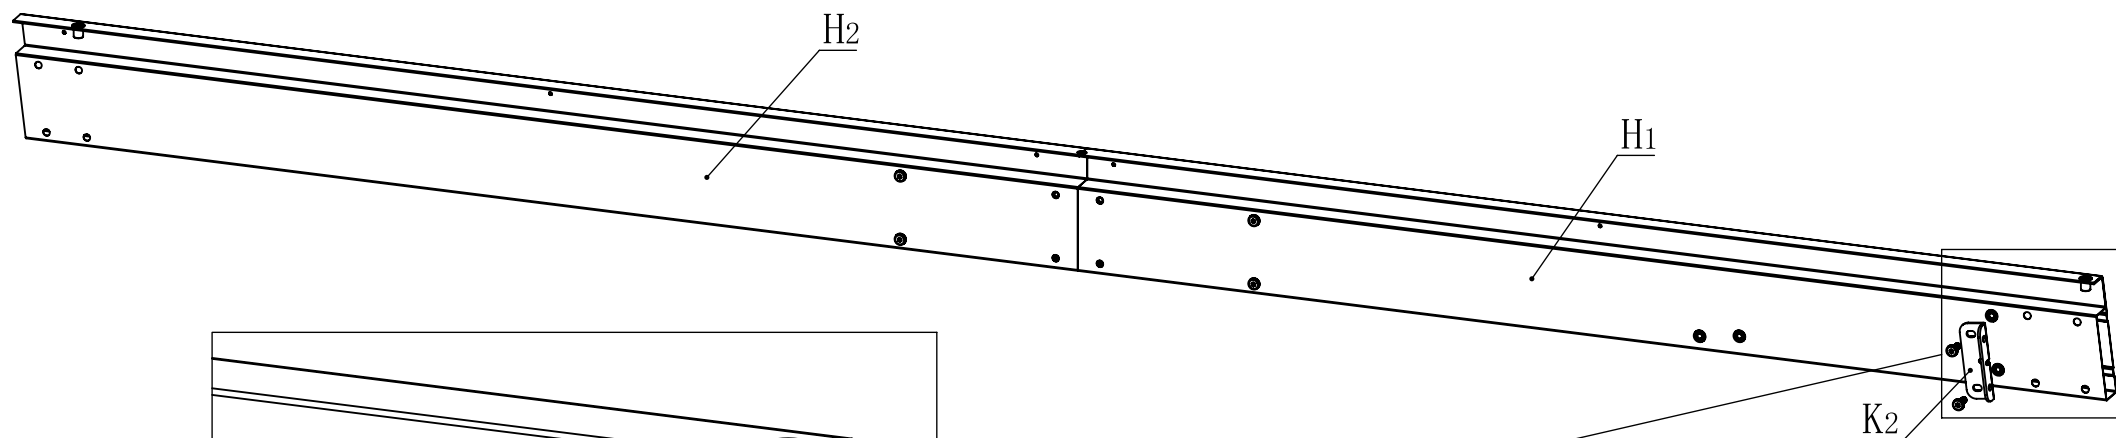


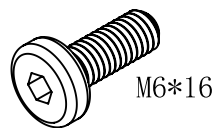

M6*16

4#


4X

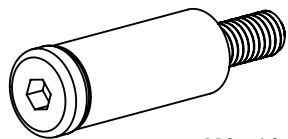

M6*40

8#


16X

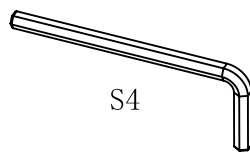


S4


14#

1X

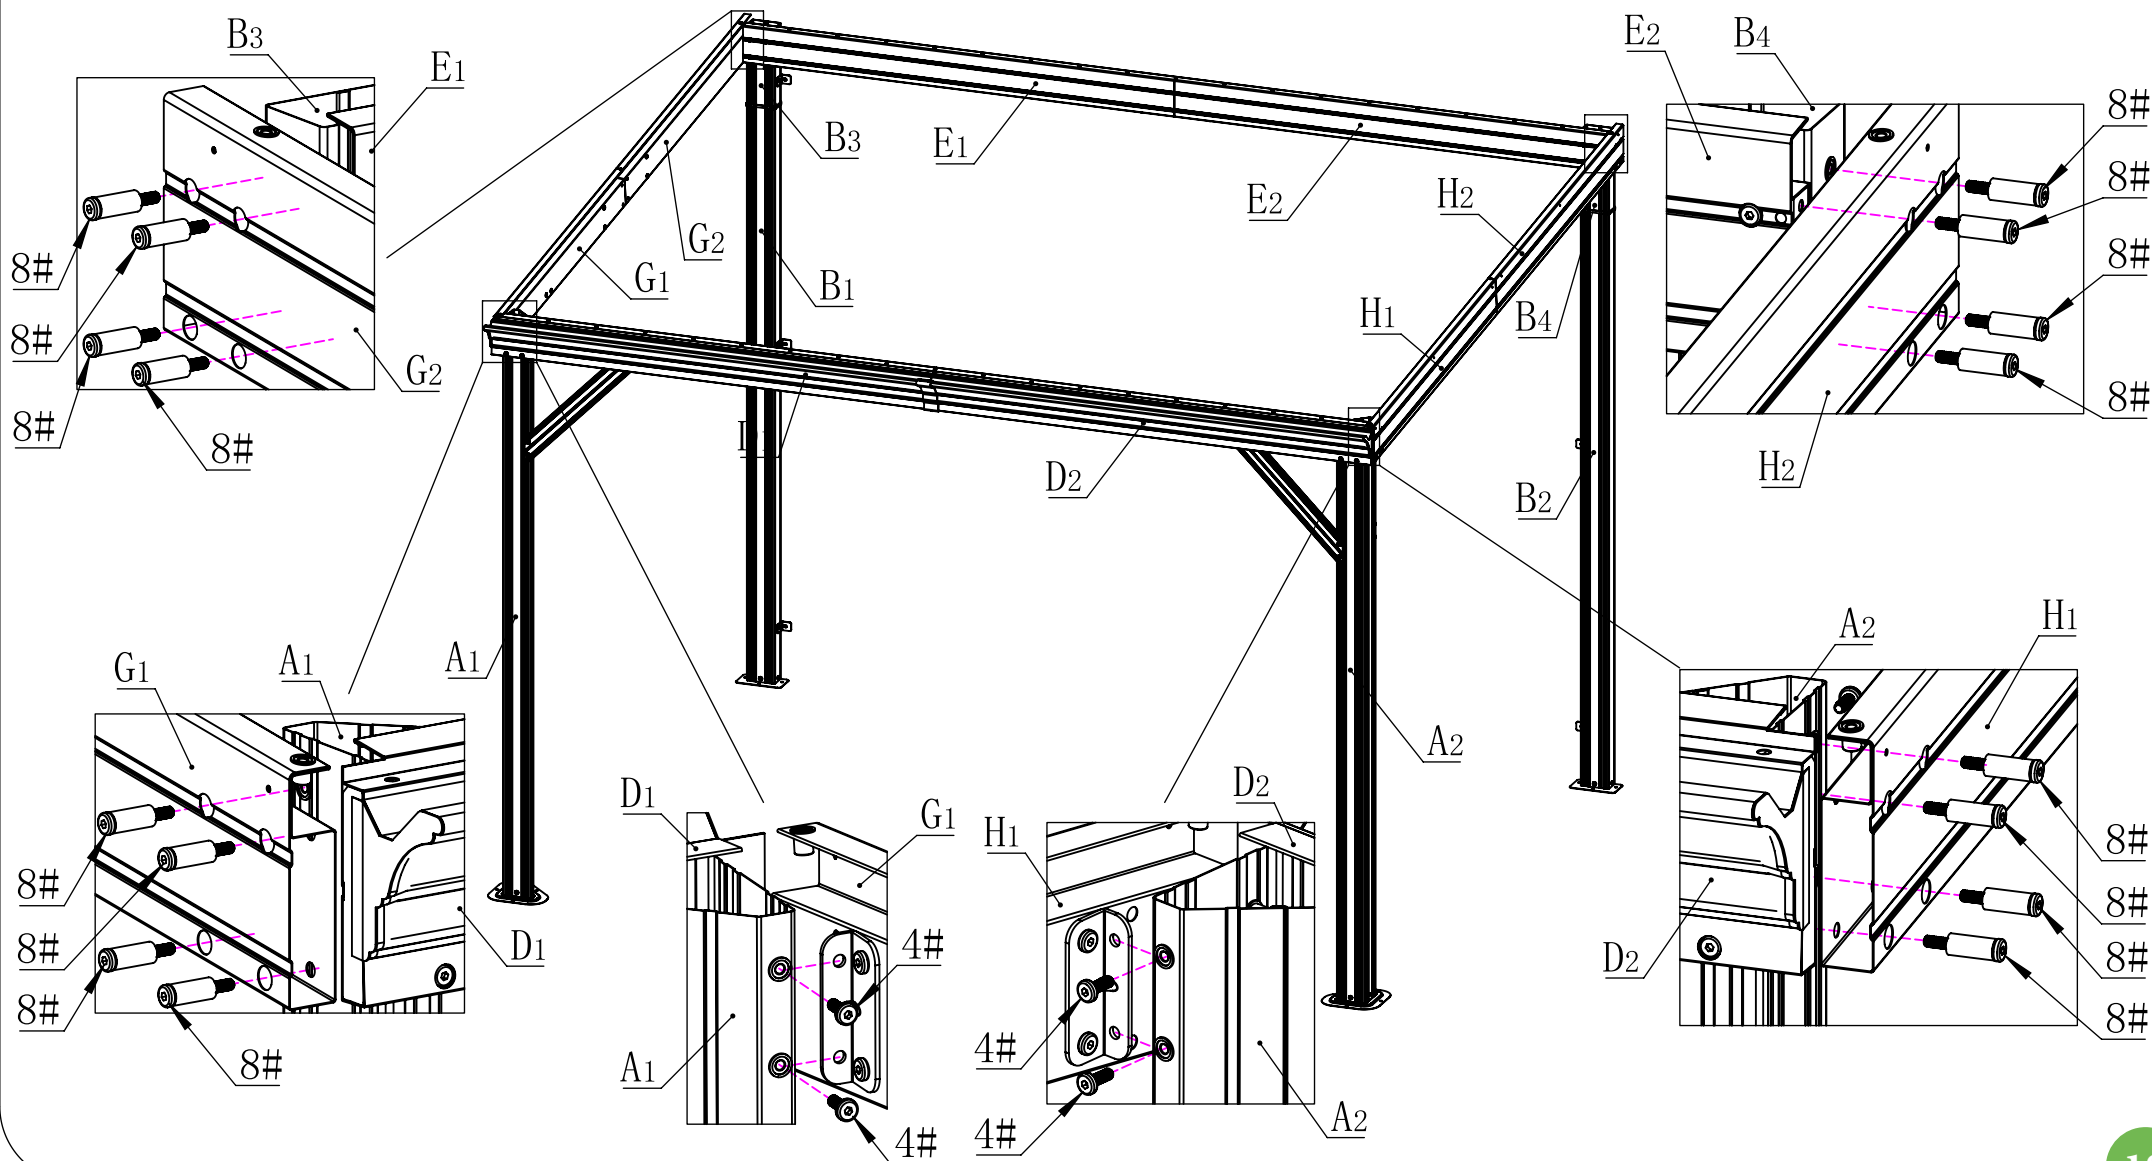


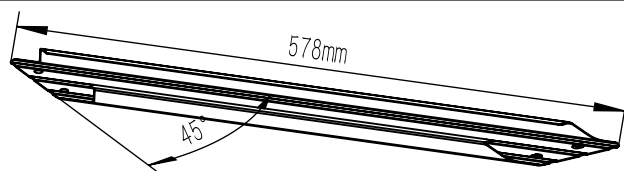


I₁ 1X

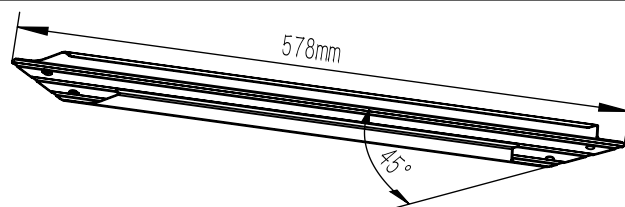


I₂ 1X



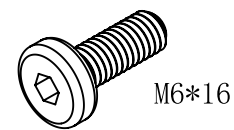



4# 8X

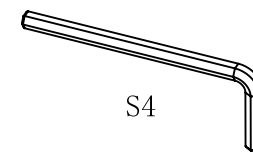


14# 1X

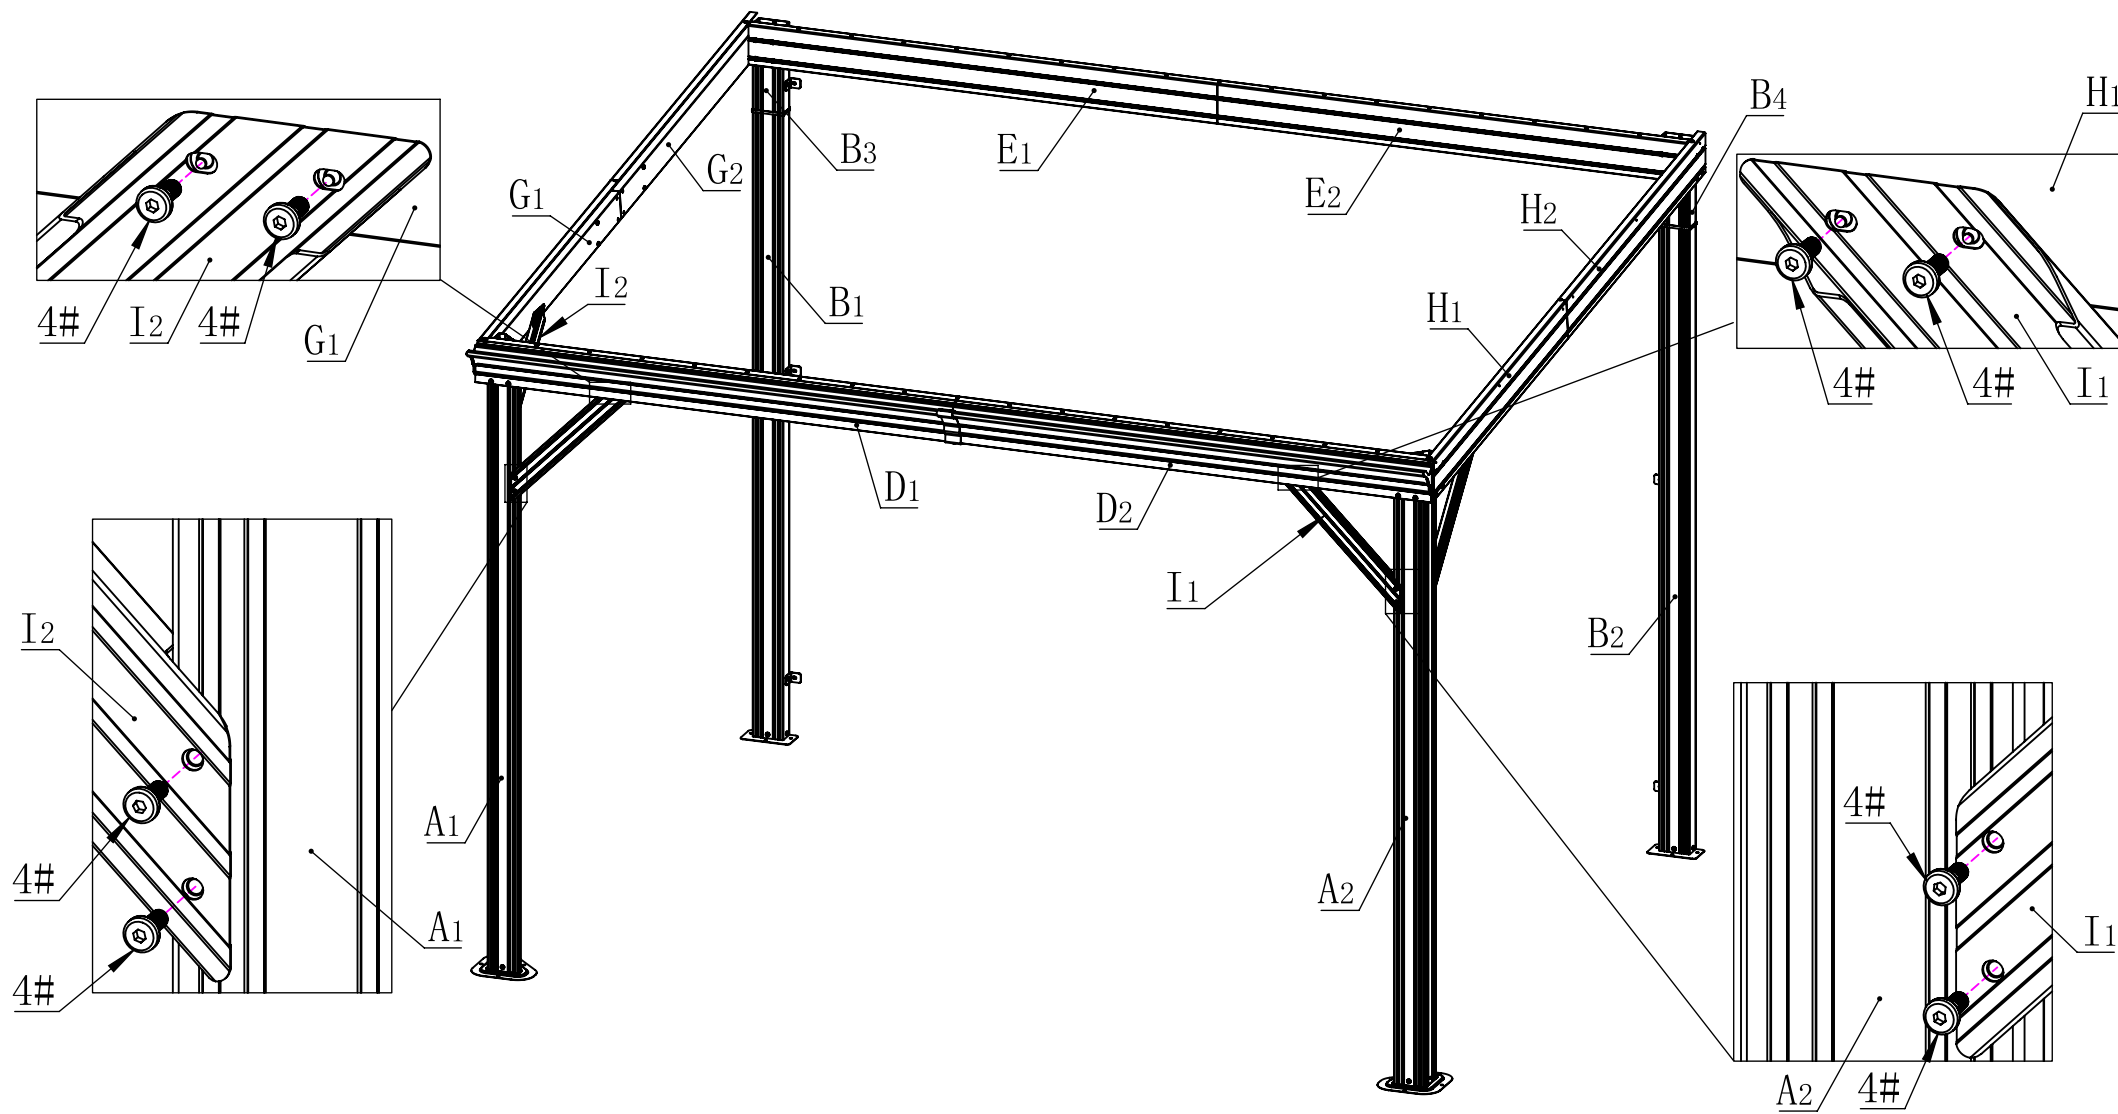

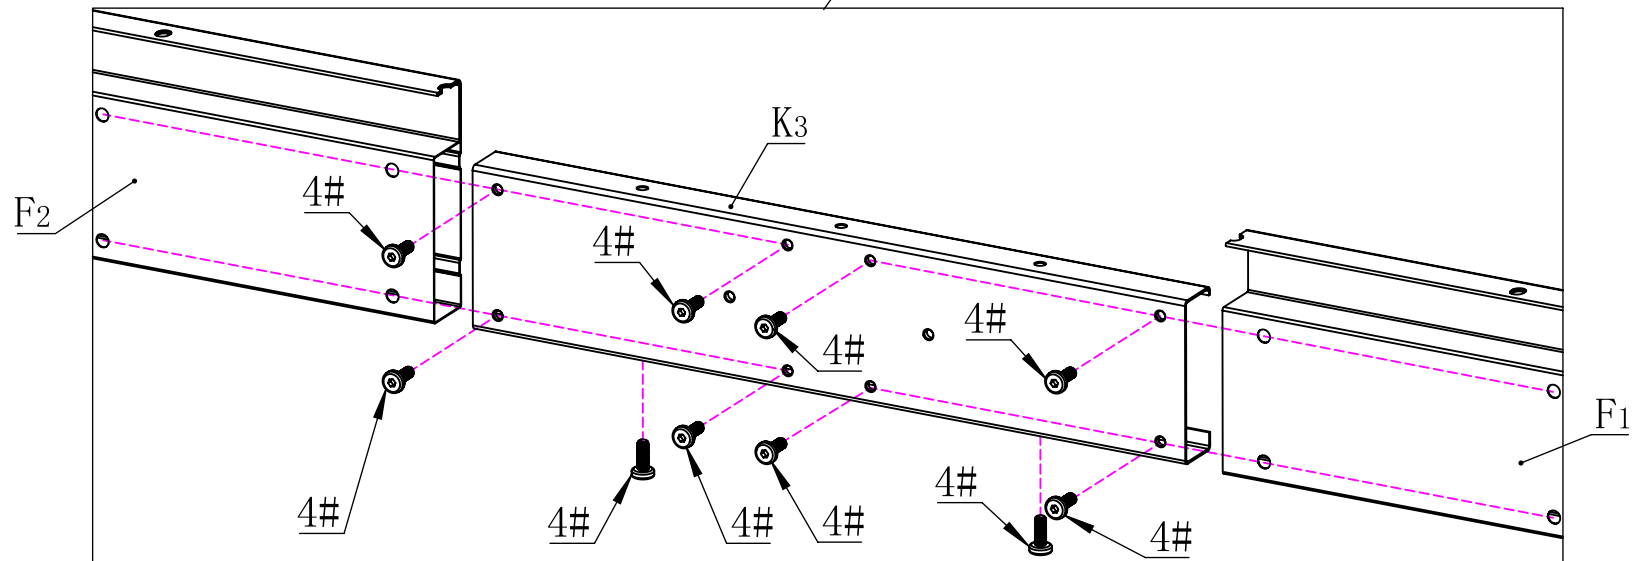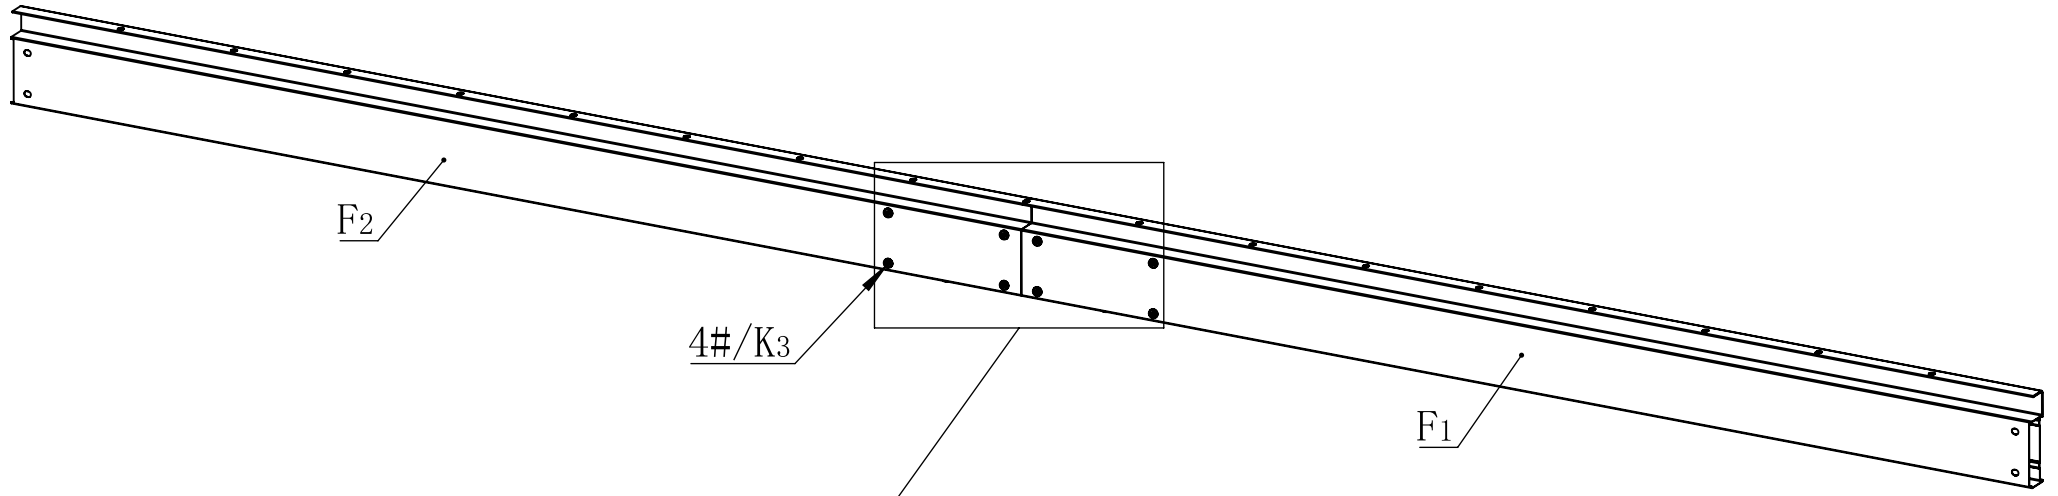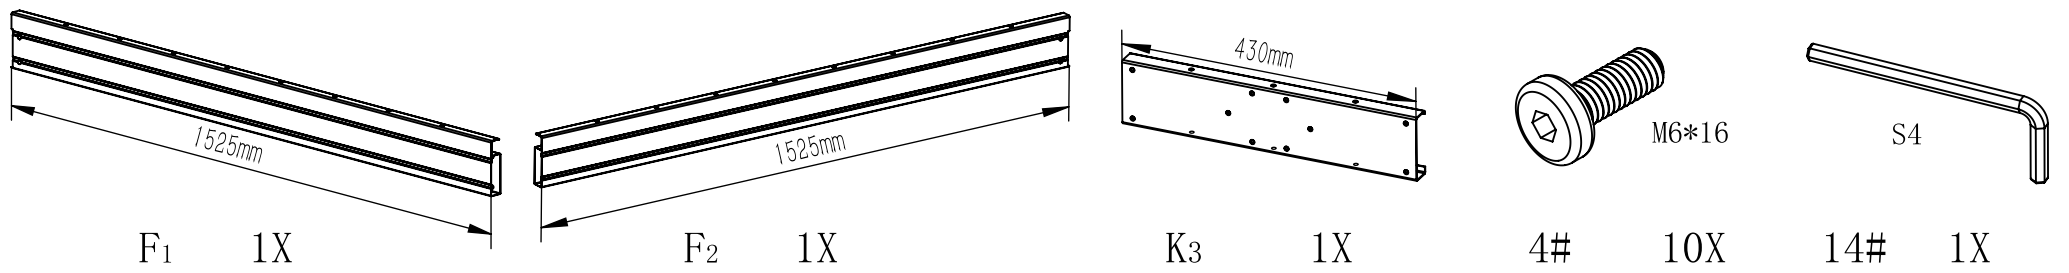


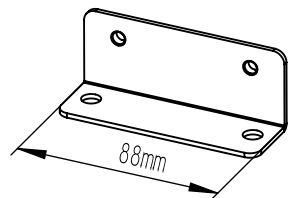


K5 4X




5# 8X

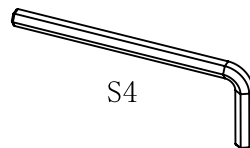


14# 1X

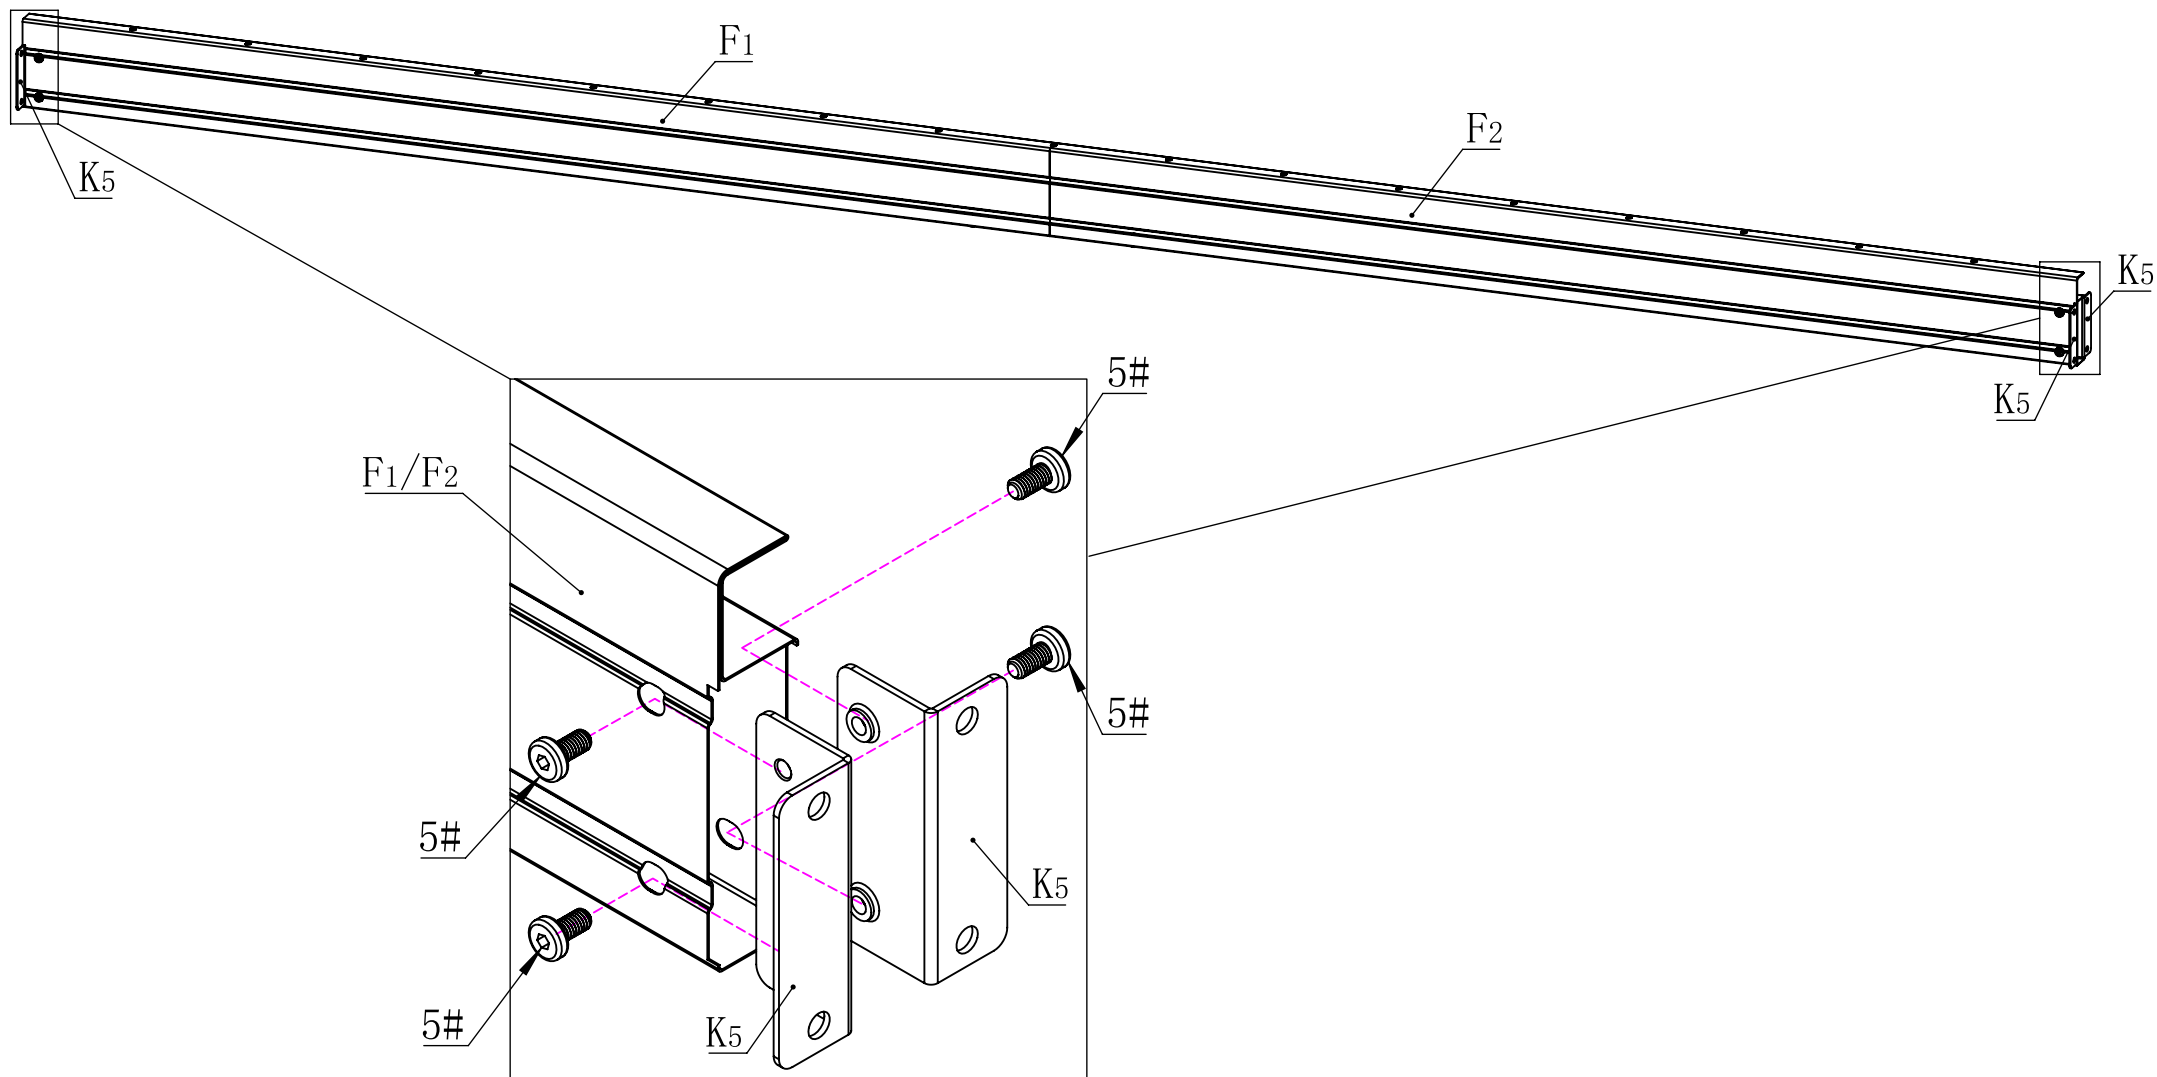

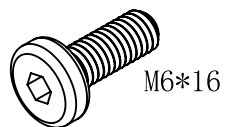

M6*16

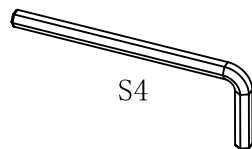


S4


4#

8X

14#


1X

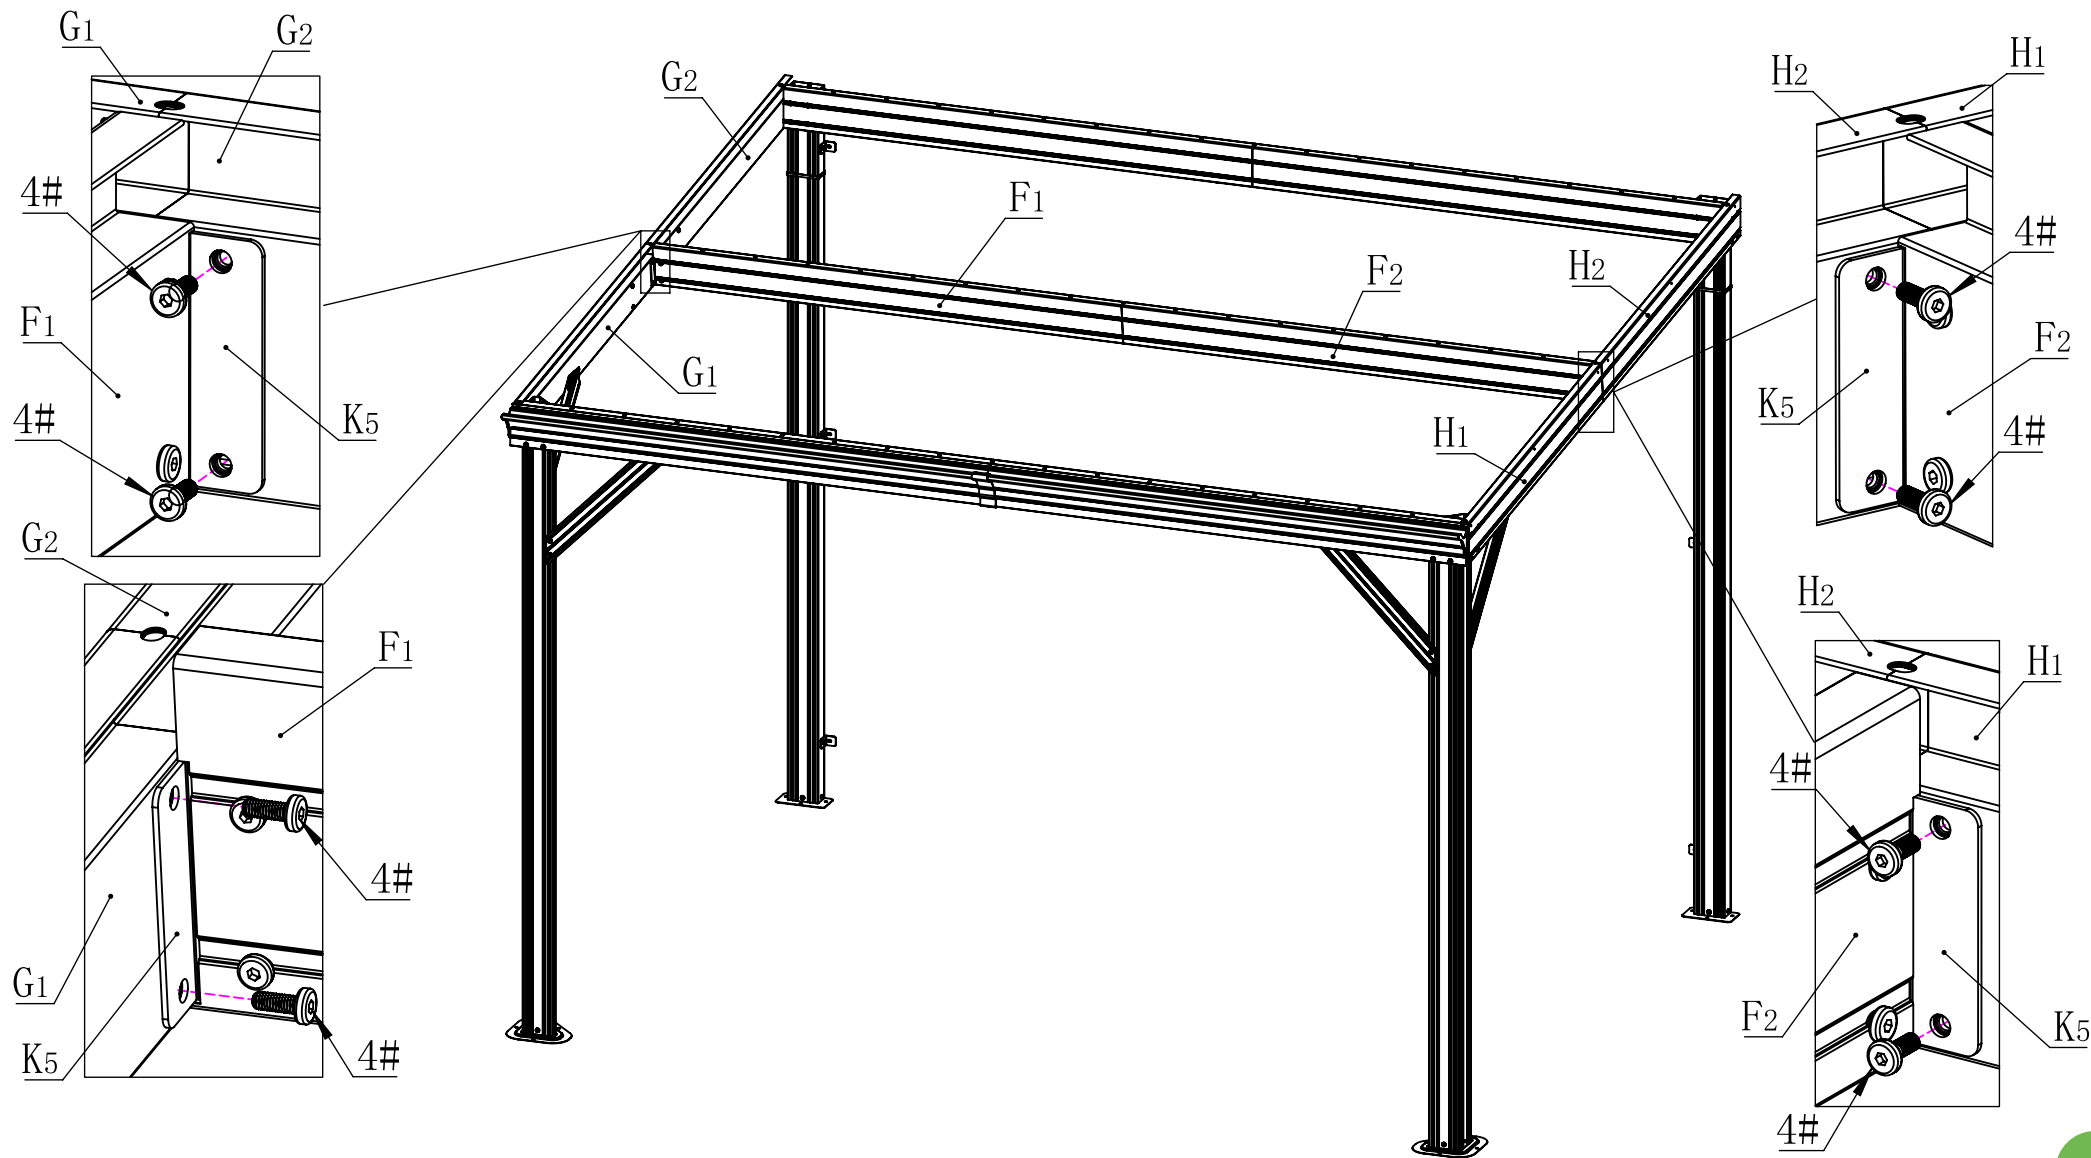



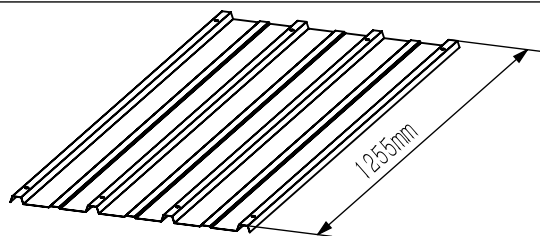


M₁ 12X


⚠ Remove the protective film of the panels before installing the roofing panels.

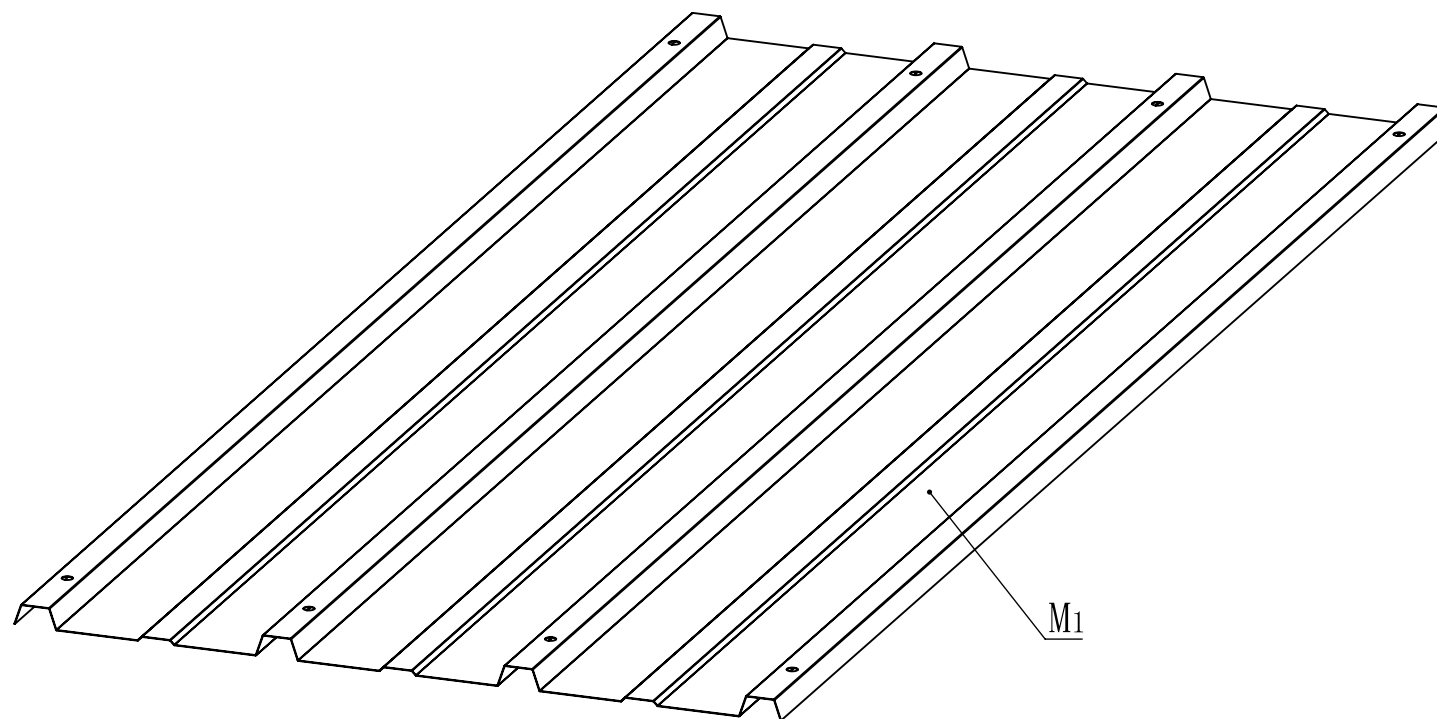

12X

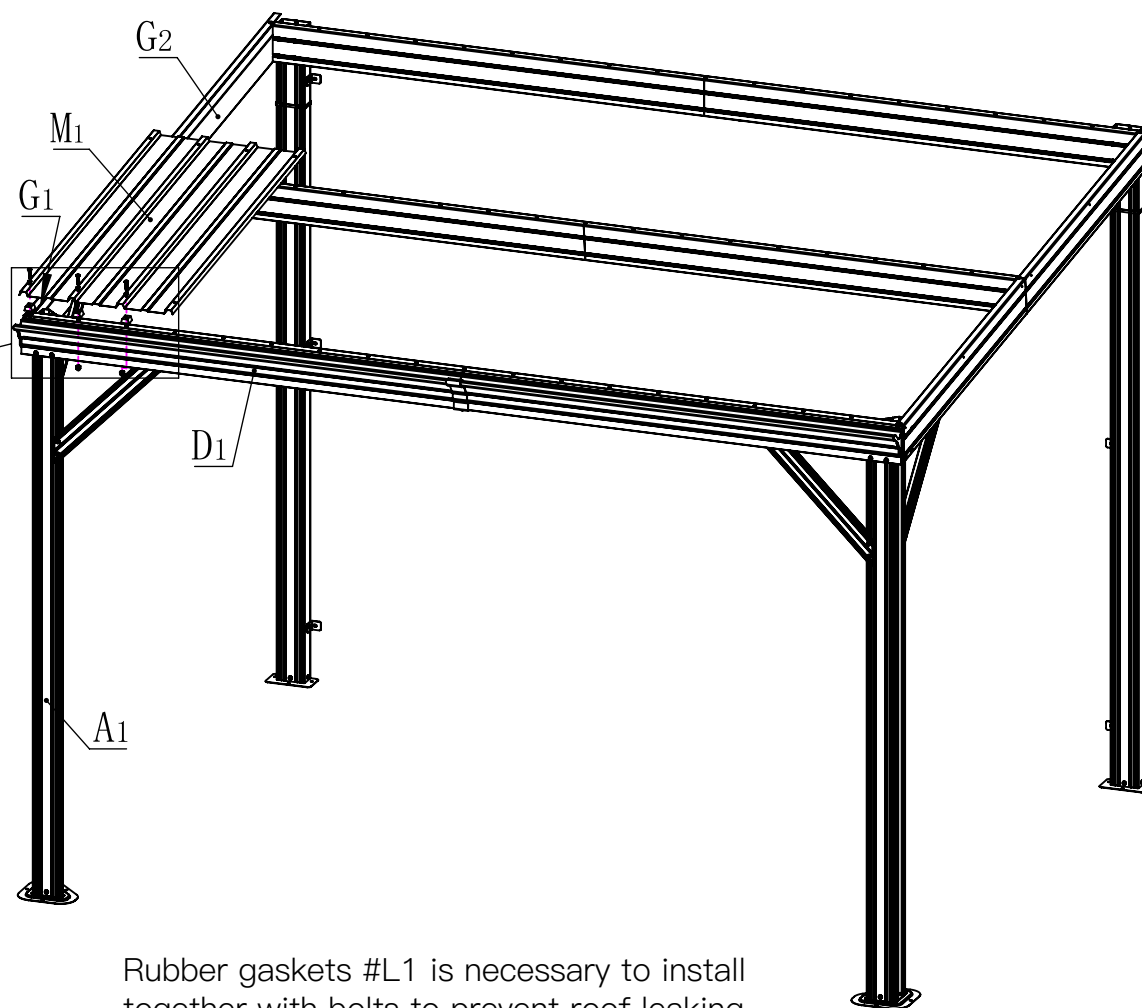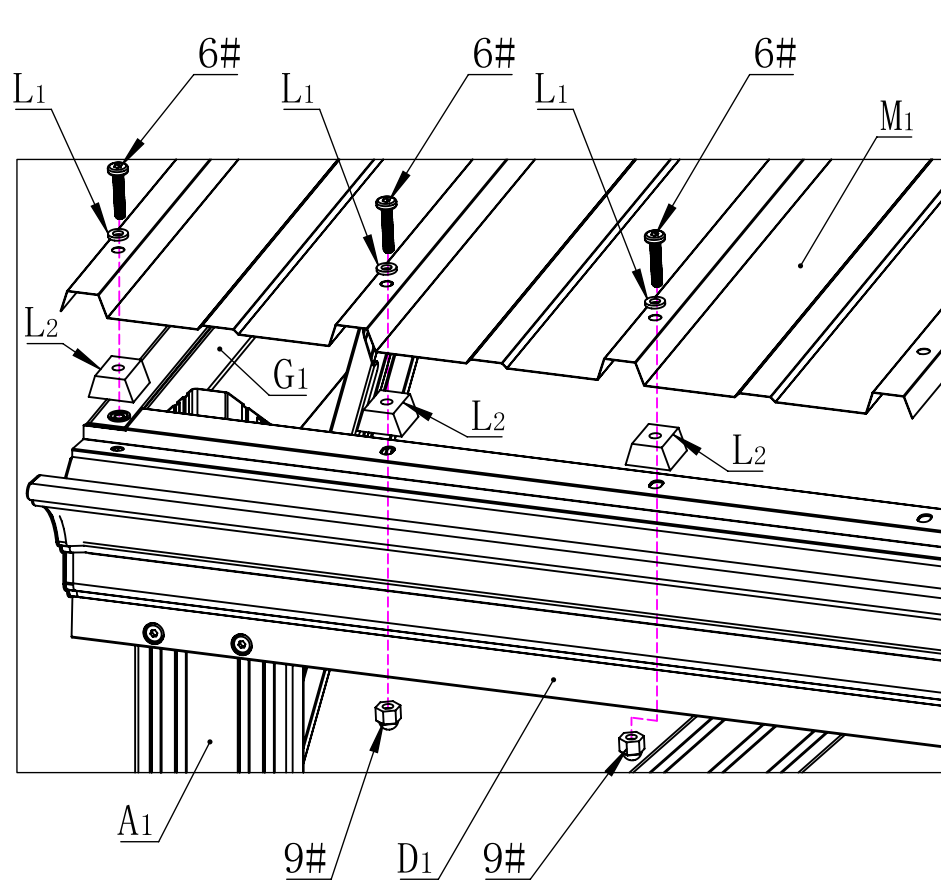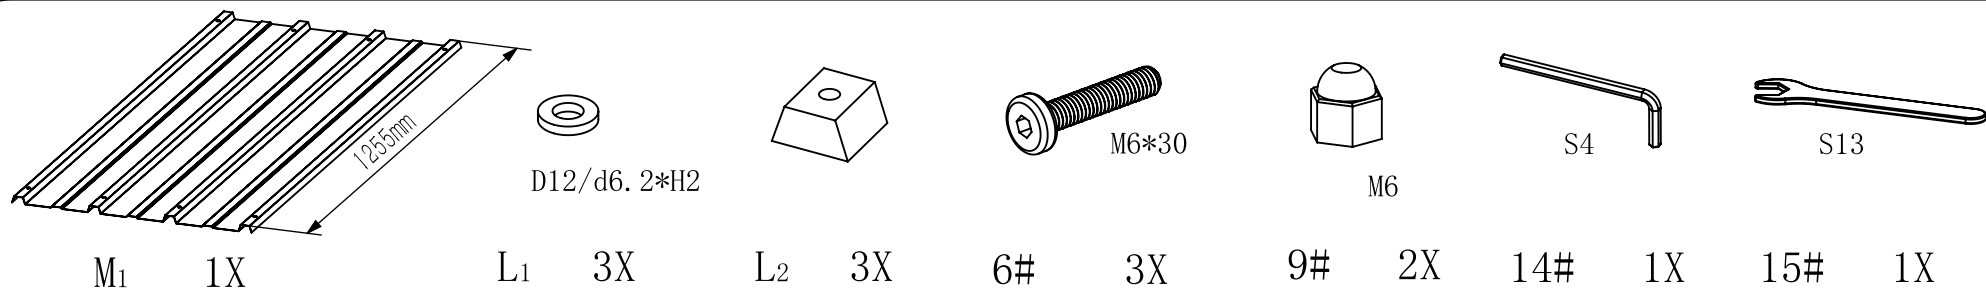

Rubber gaskets #L1 is necessary to install together with bolts to prevent roof leaking.

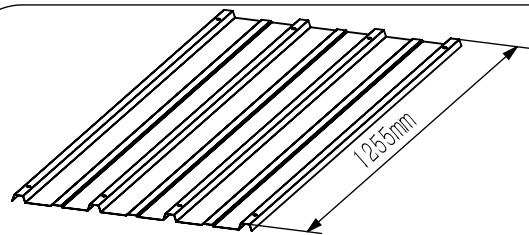


M1 5X




D12/d6. 2*H2

L1 16X



L2 16X



M6*30

6#


16X



M6

9#

15X



S4

14#



1X




S13


15#

1X

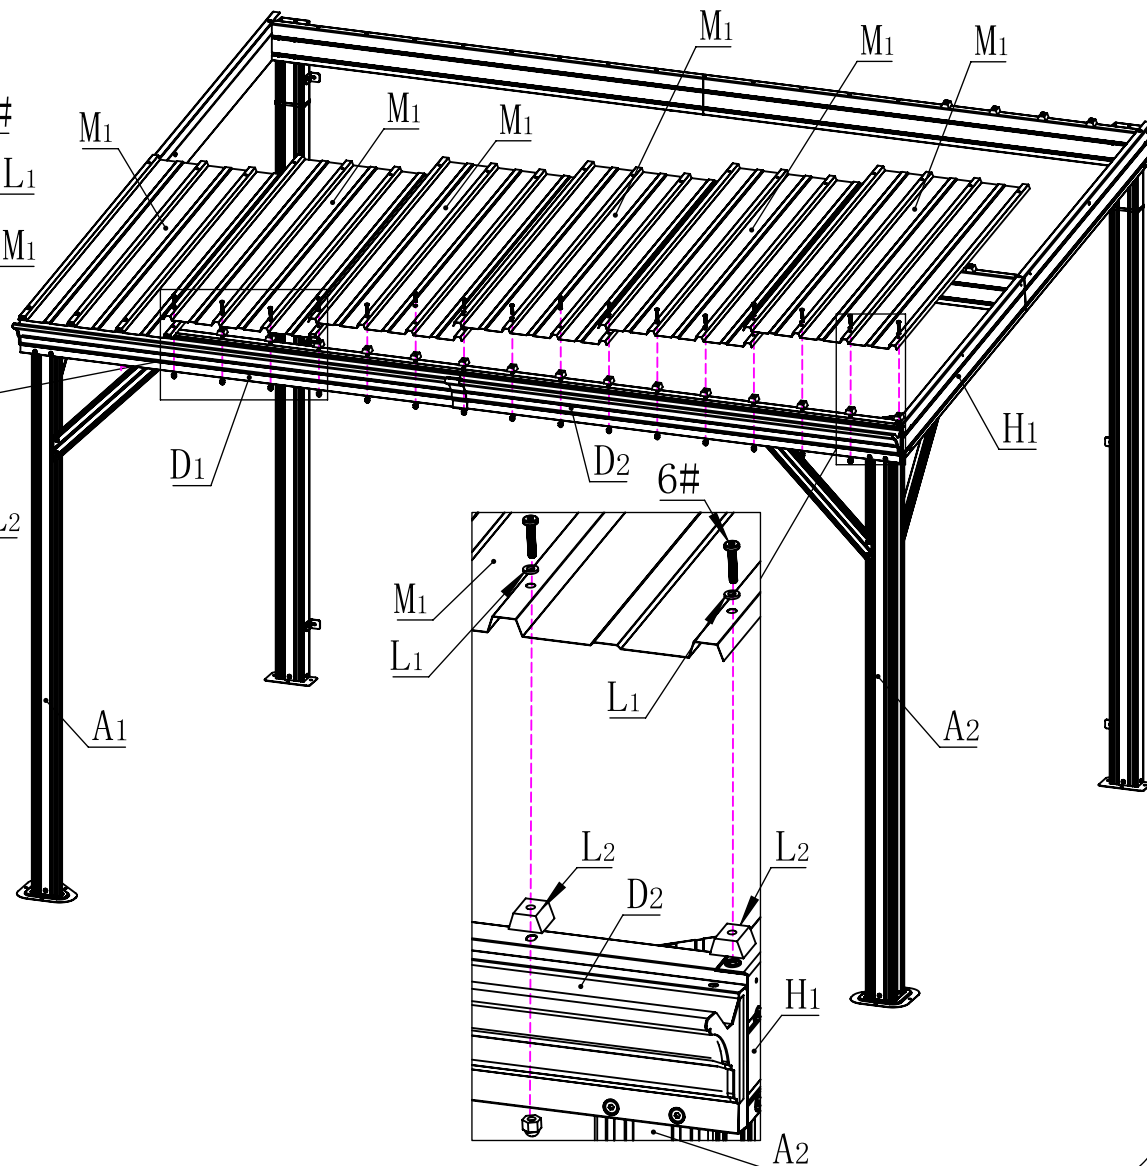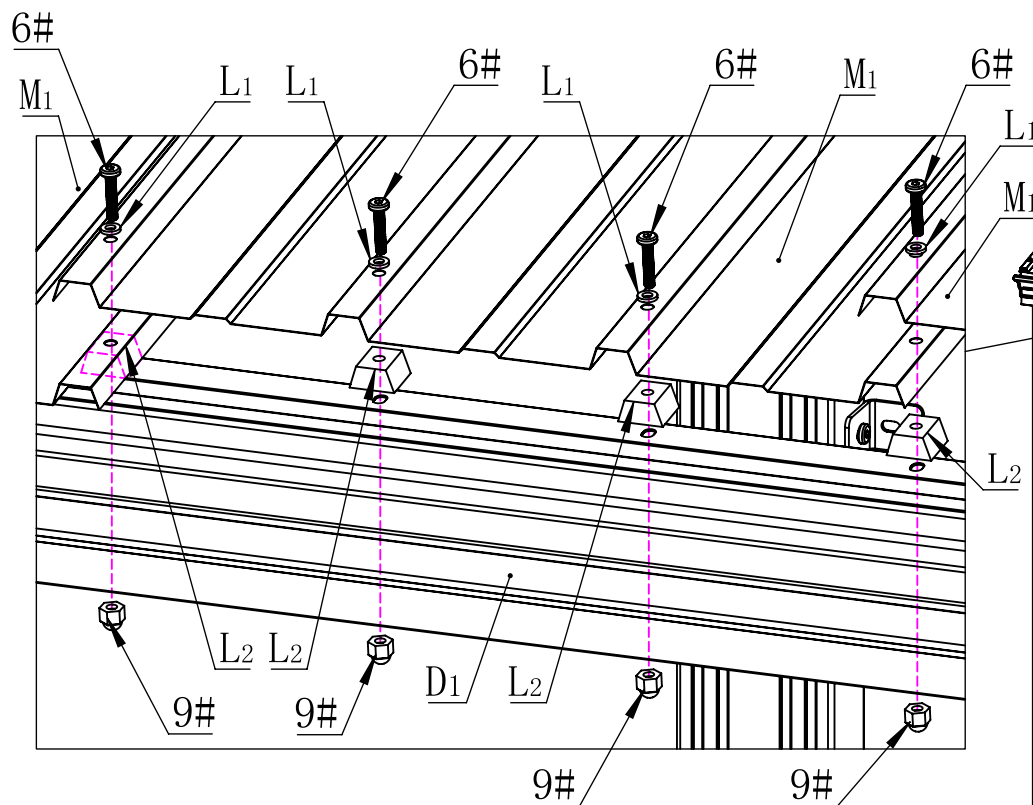

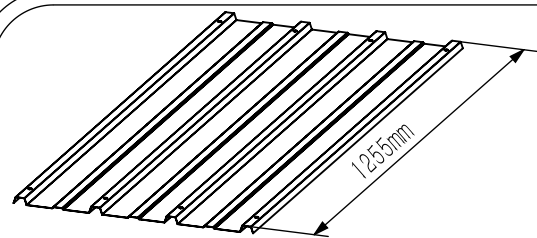

D12/d6. 2*H2



L2 19X




M6*30



M6


9#

19X



13#

1X



S4






S13

14#


1X

15#


1X

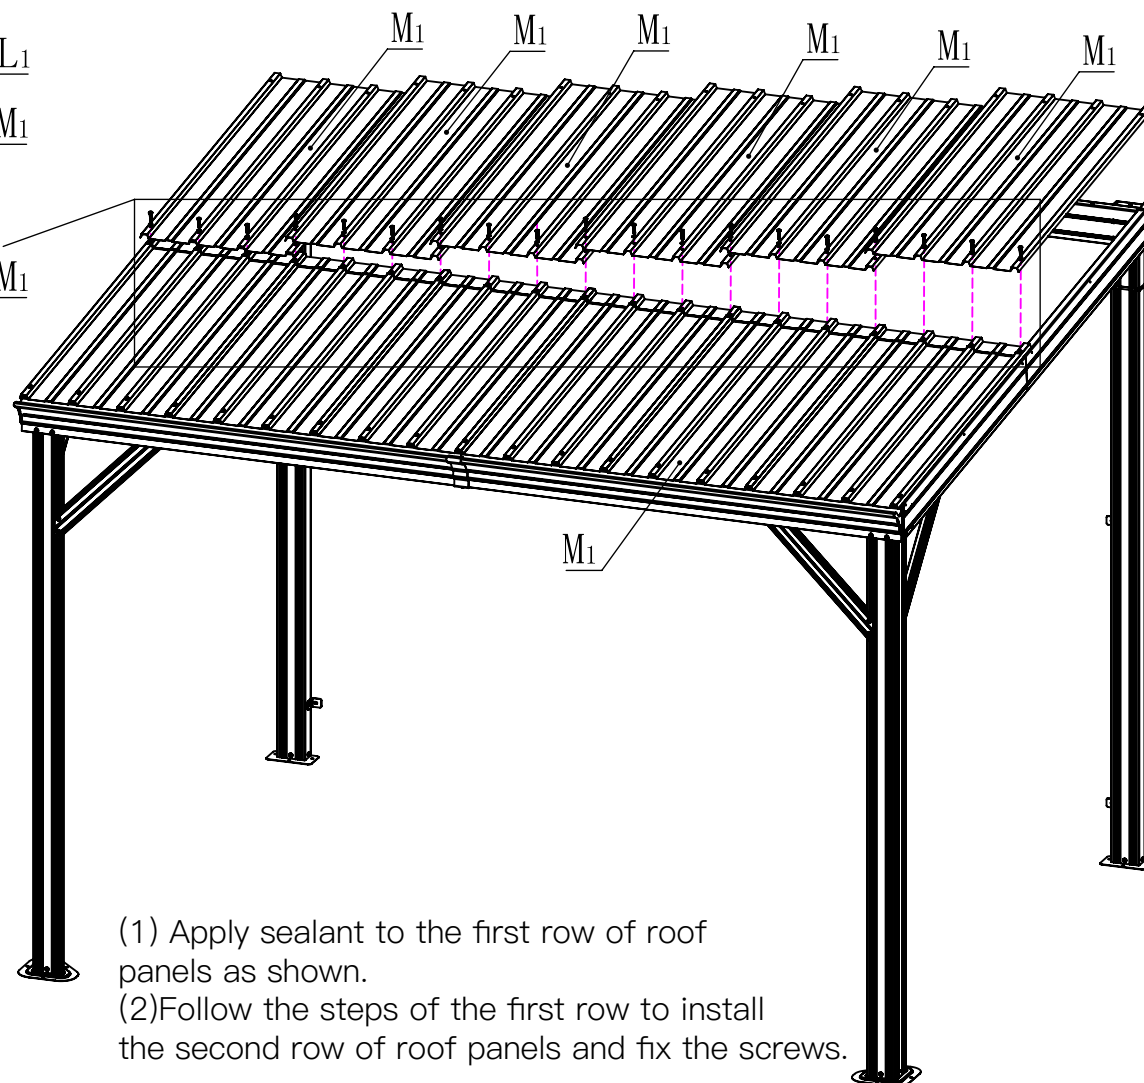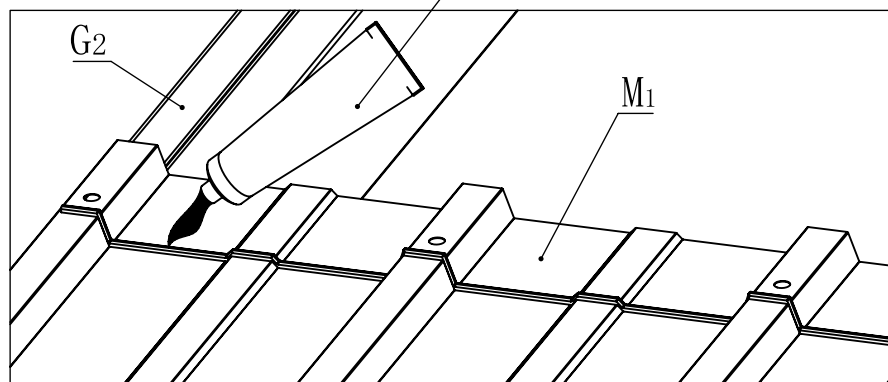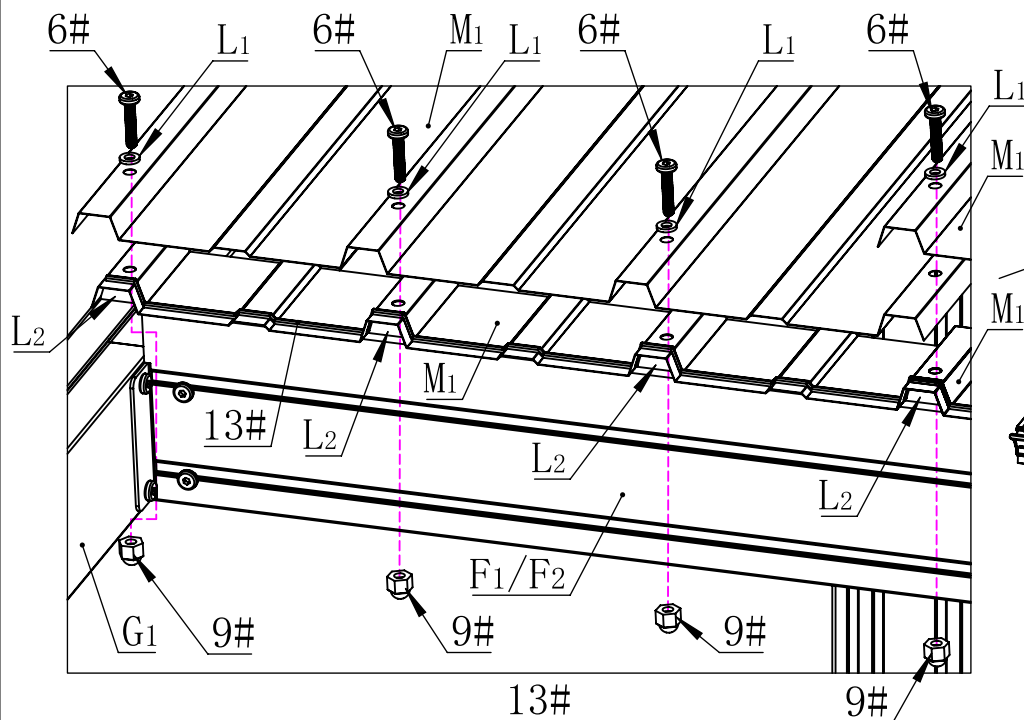

- (1) Apply sealant to the first row of roof panels as shown.
- (2) Follow the steps of the first row to install the second row of roof panels and fix the screws.

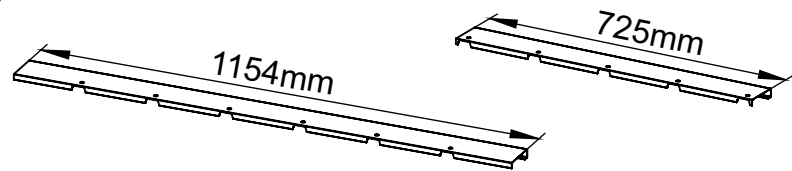


D12/d6. 2*H2




M6*30



M6



17X



S4



S13

J₁ 2X

J₂ 1X

L₁ 19X


L₂ 19X
6#

9# 19X


13# 1X


14# 1X

15# 1X

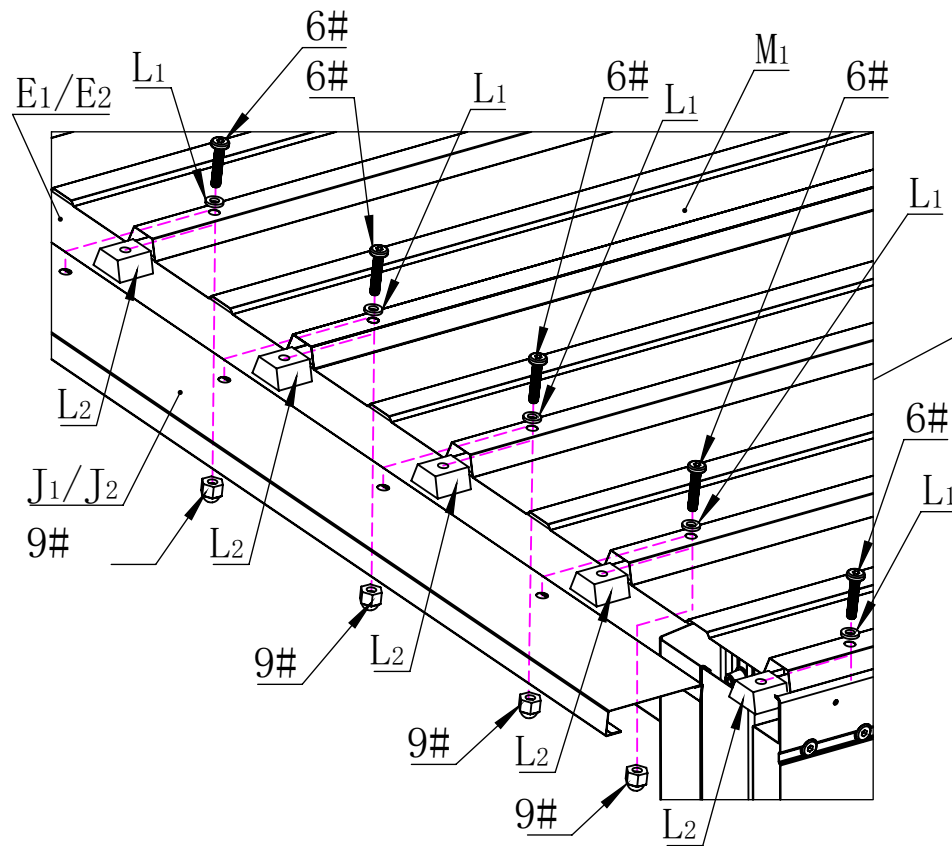

Use silicone sealant (part #13) to affix the gap between the finishing bars.



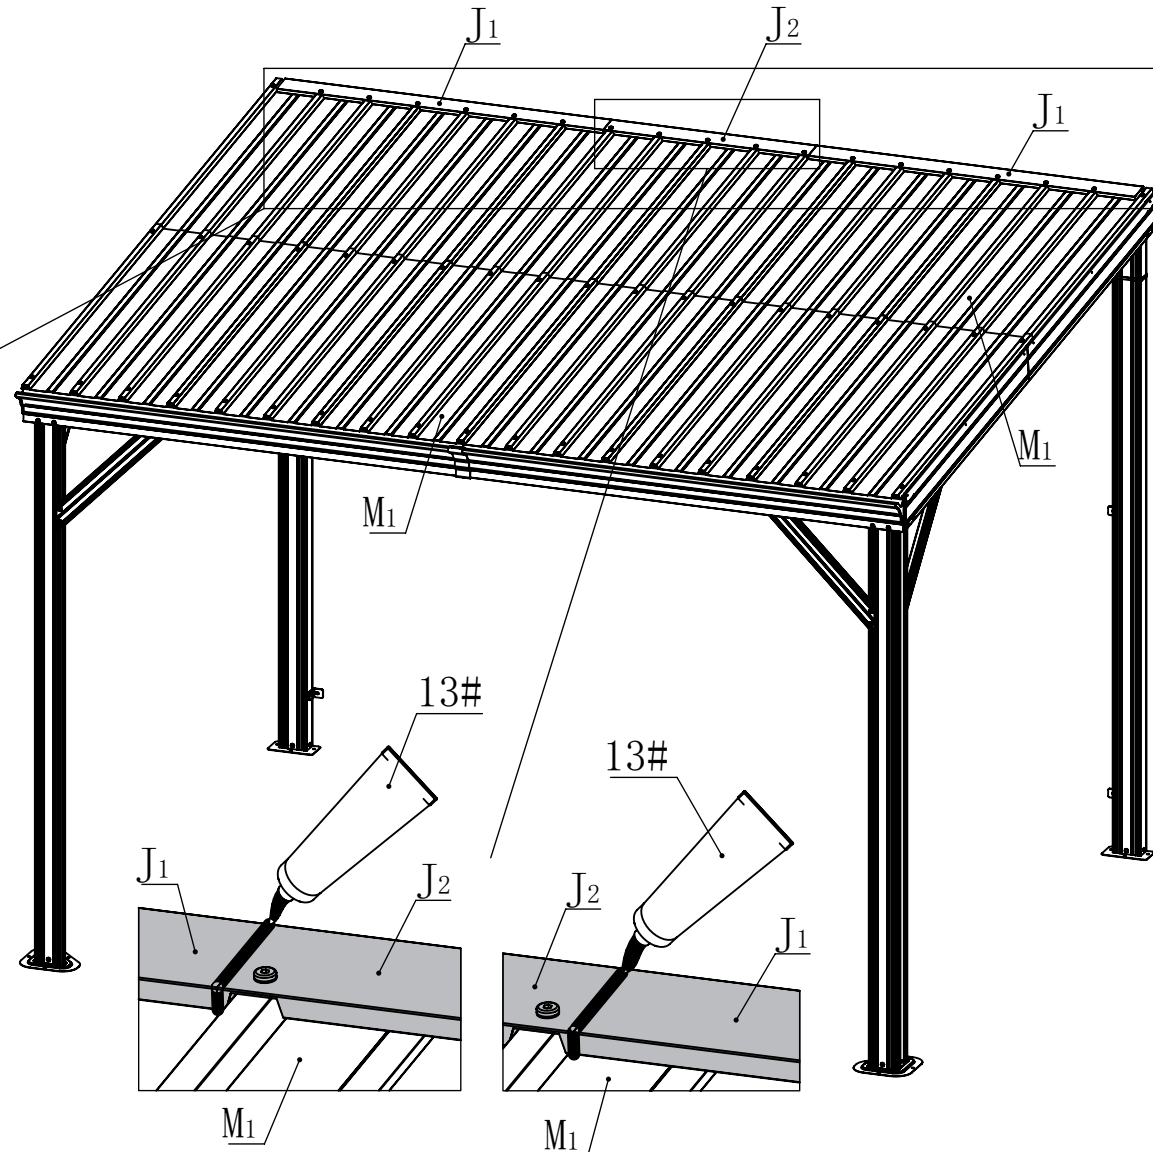


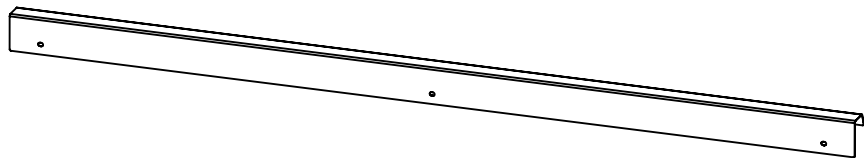


ST4. 2*10 (B型)

J₃ 4X


3# 12X

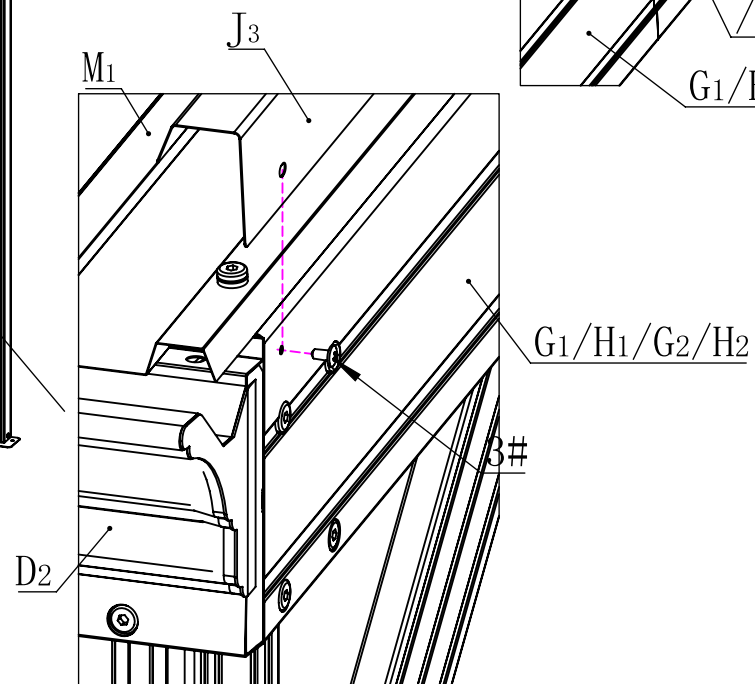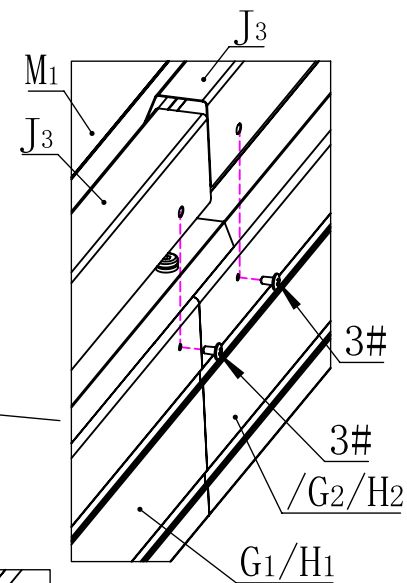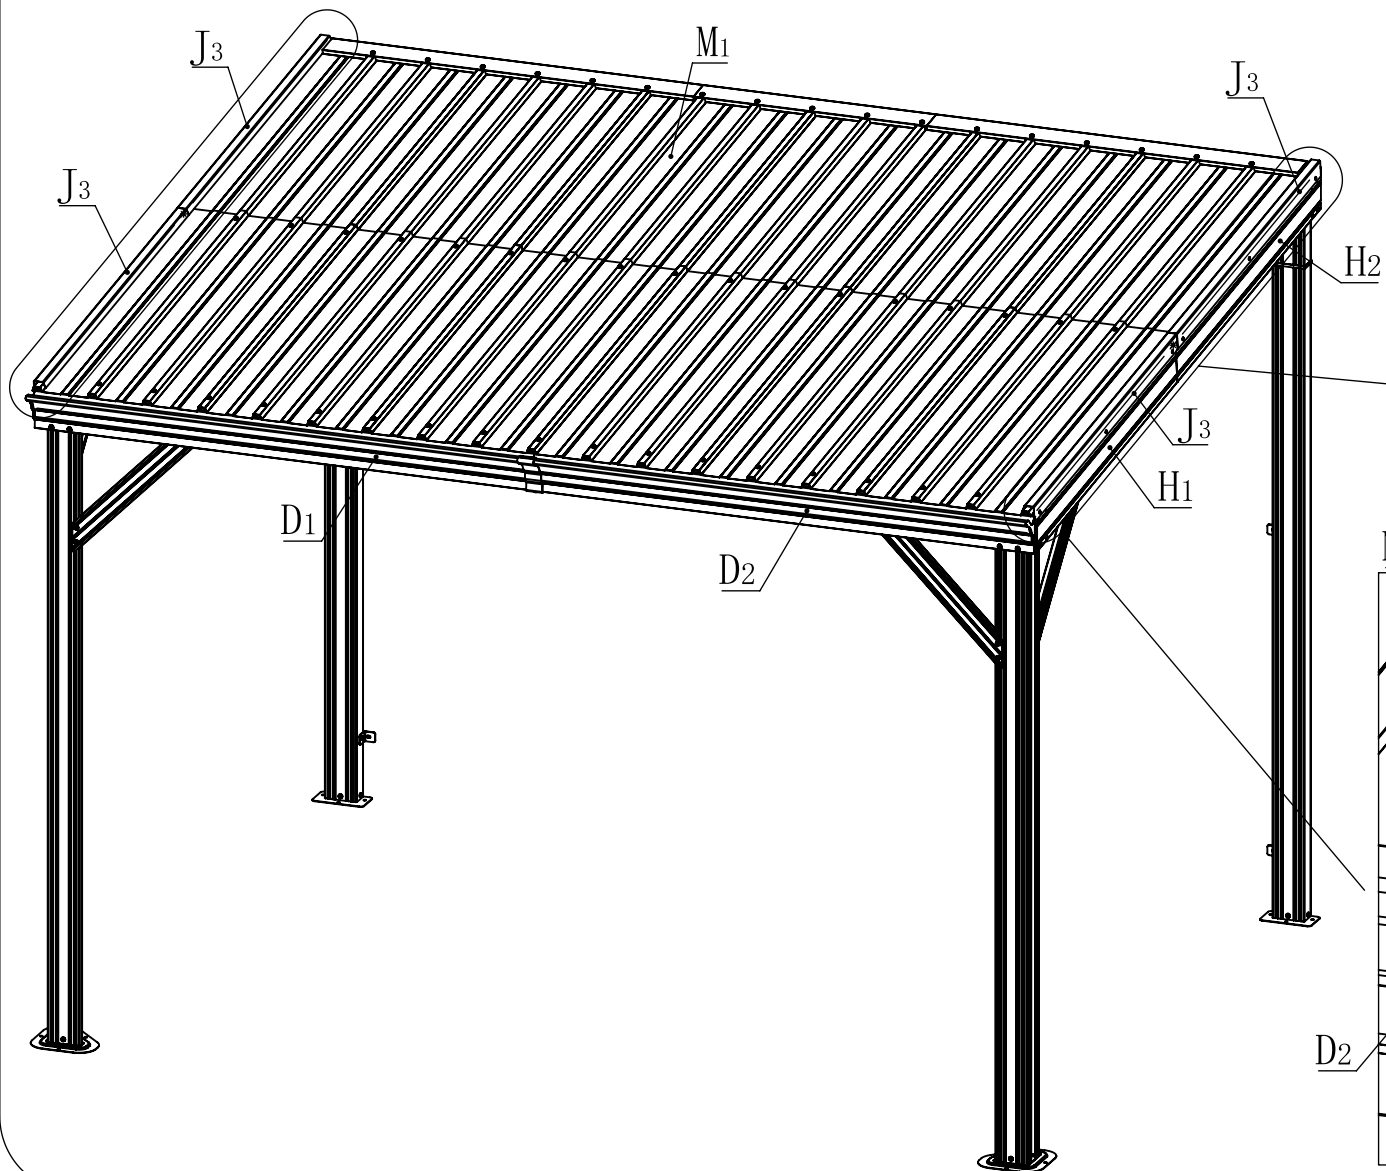





13# 1X

Use silicone sealant (part #13) to affix the gap between the finishing Bars.

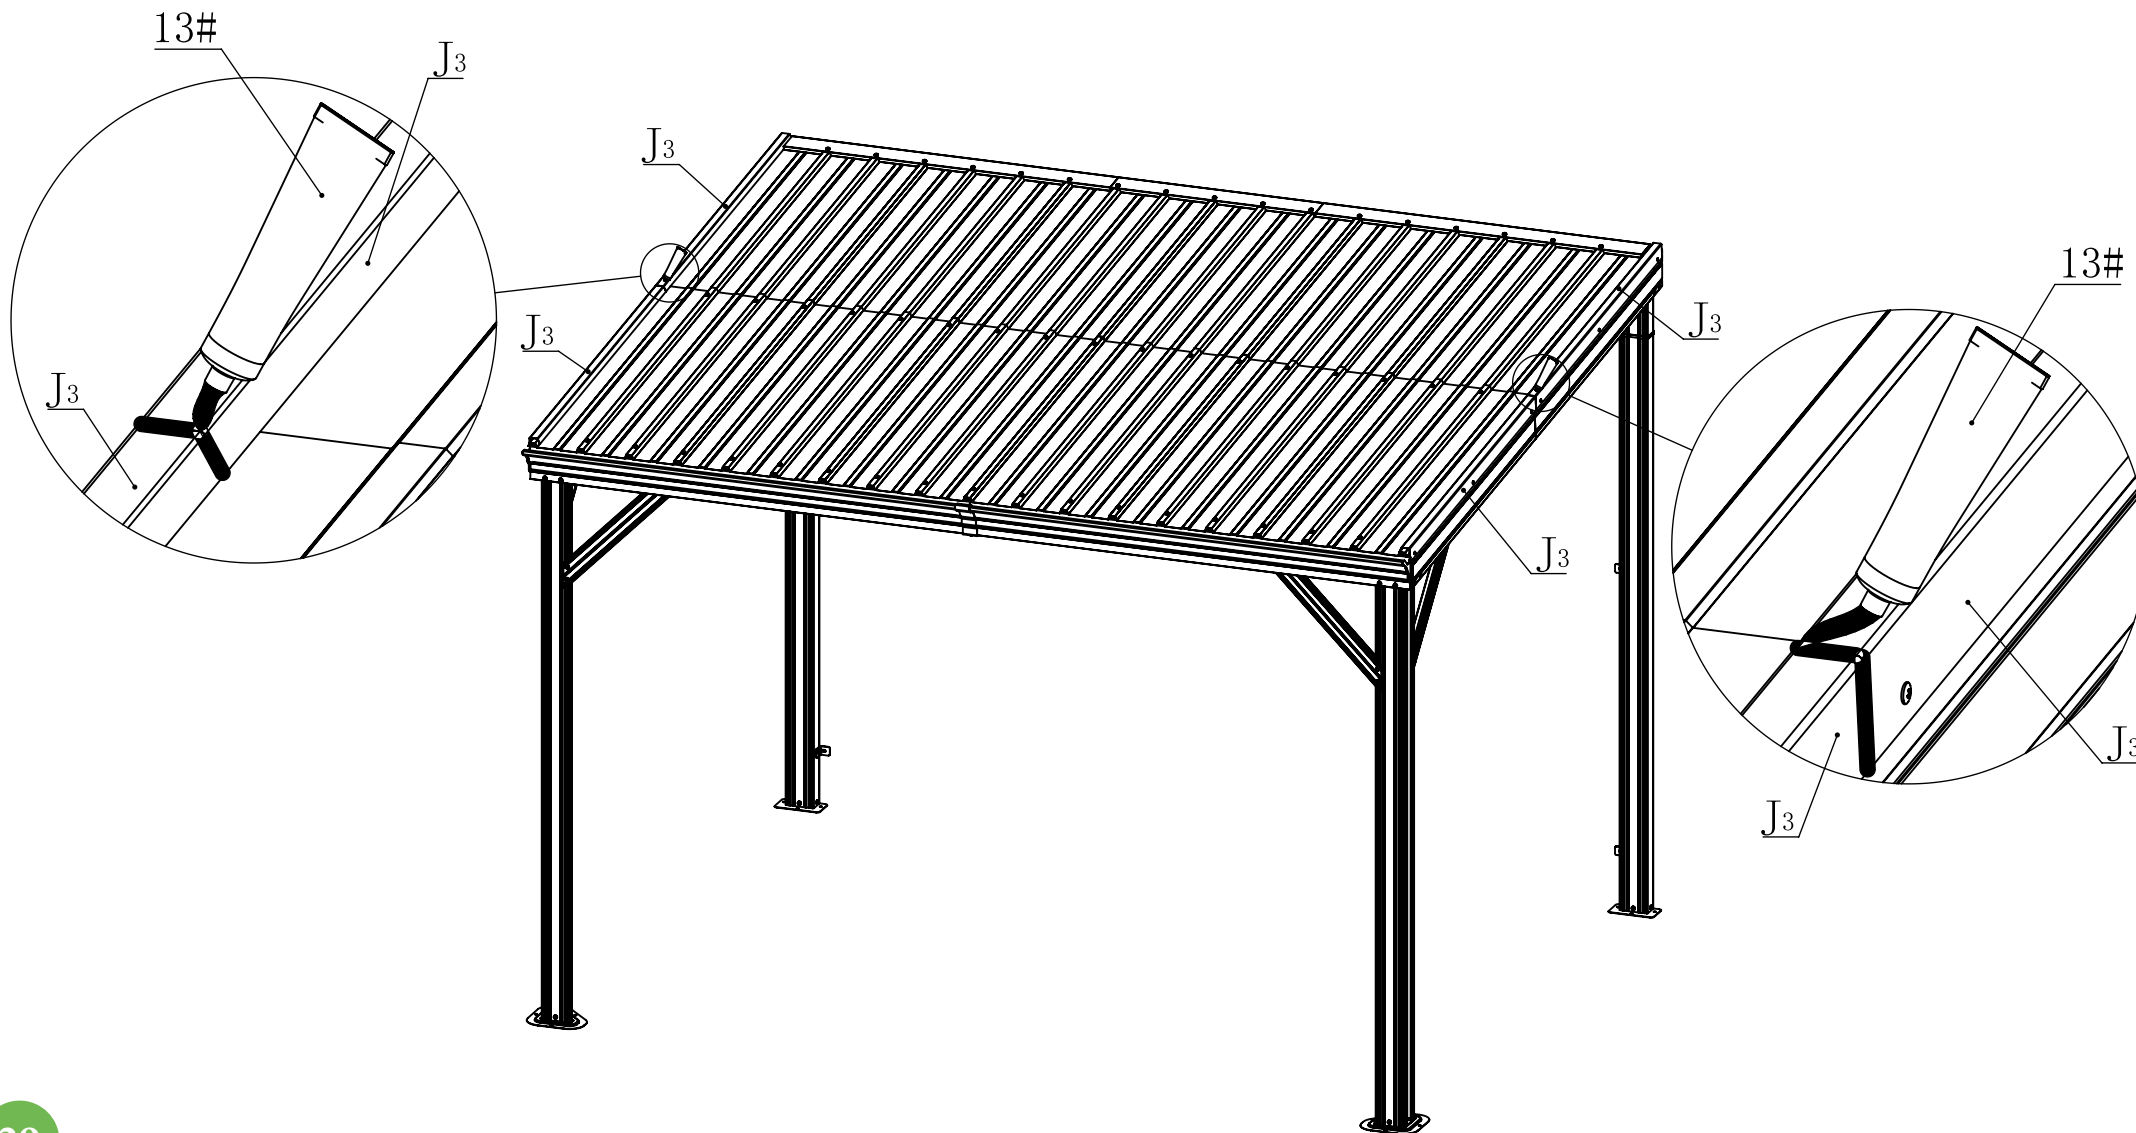


- (1) Install this step if you need fix the canopy to the wall. Otherwise please skip this step.
- (2) In this step, you are required to drill the corresponding bottom holes for the expansion screws on the wall. It is recommended to drill the holes at the positions of the fixing holes according to the actual height and dimensions of the site and the tent.

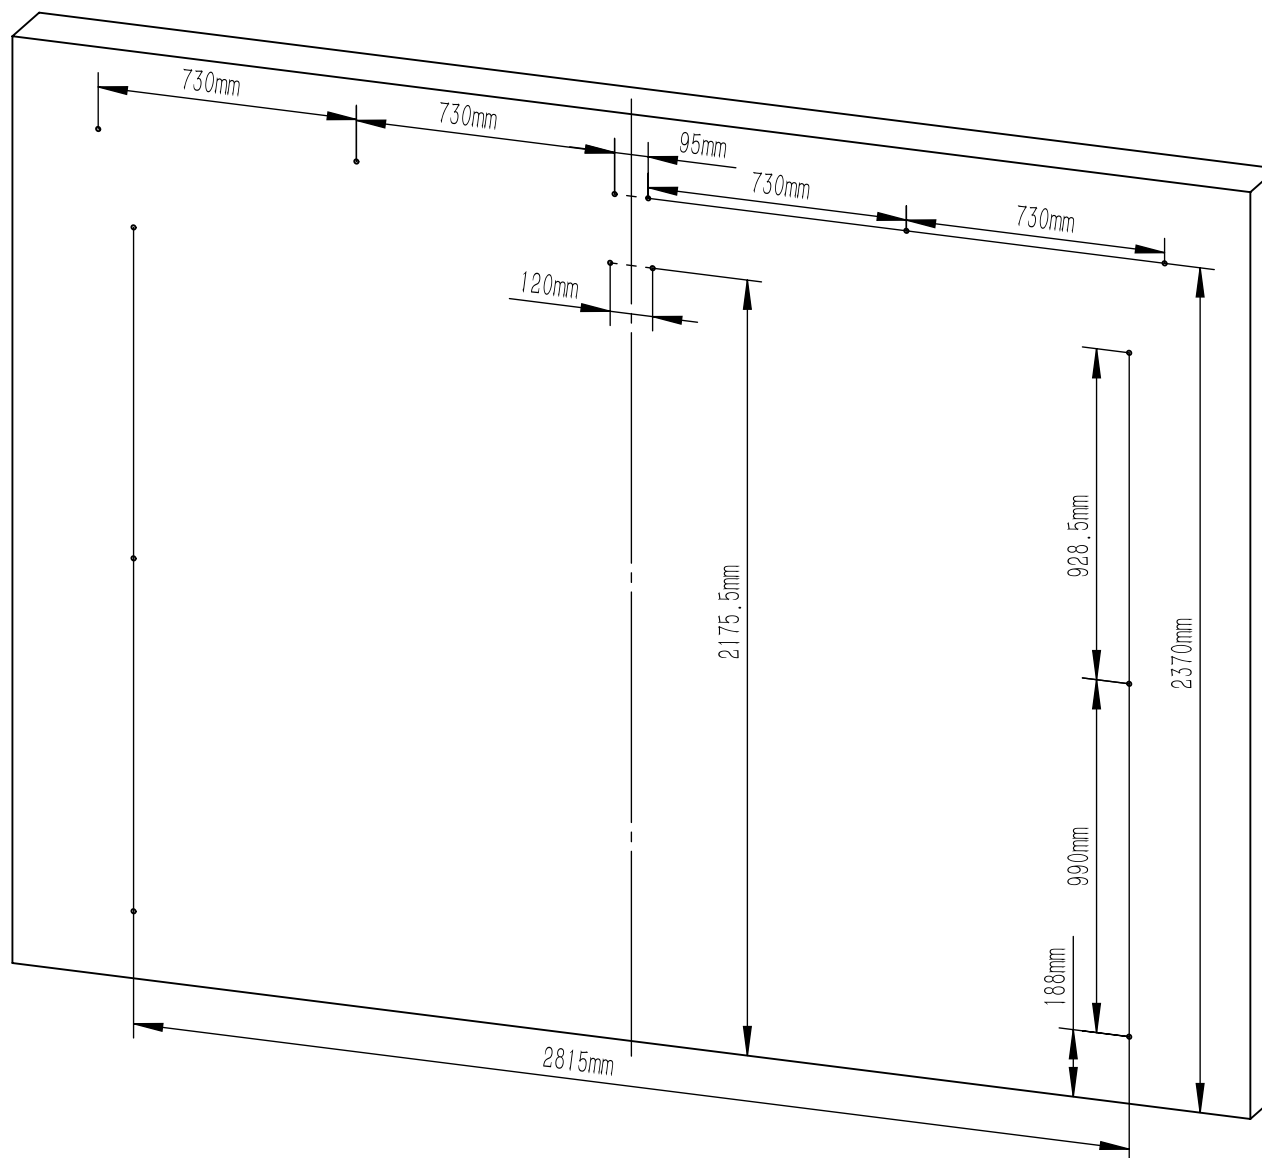

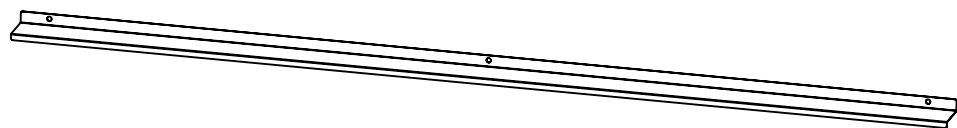


J₄ 2X



ST6*70





10# 6X



11# 6X




13# 1X

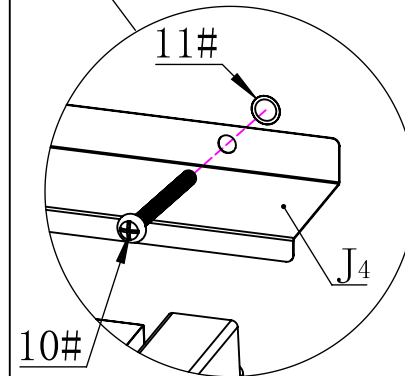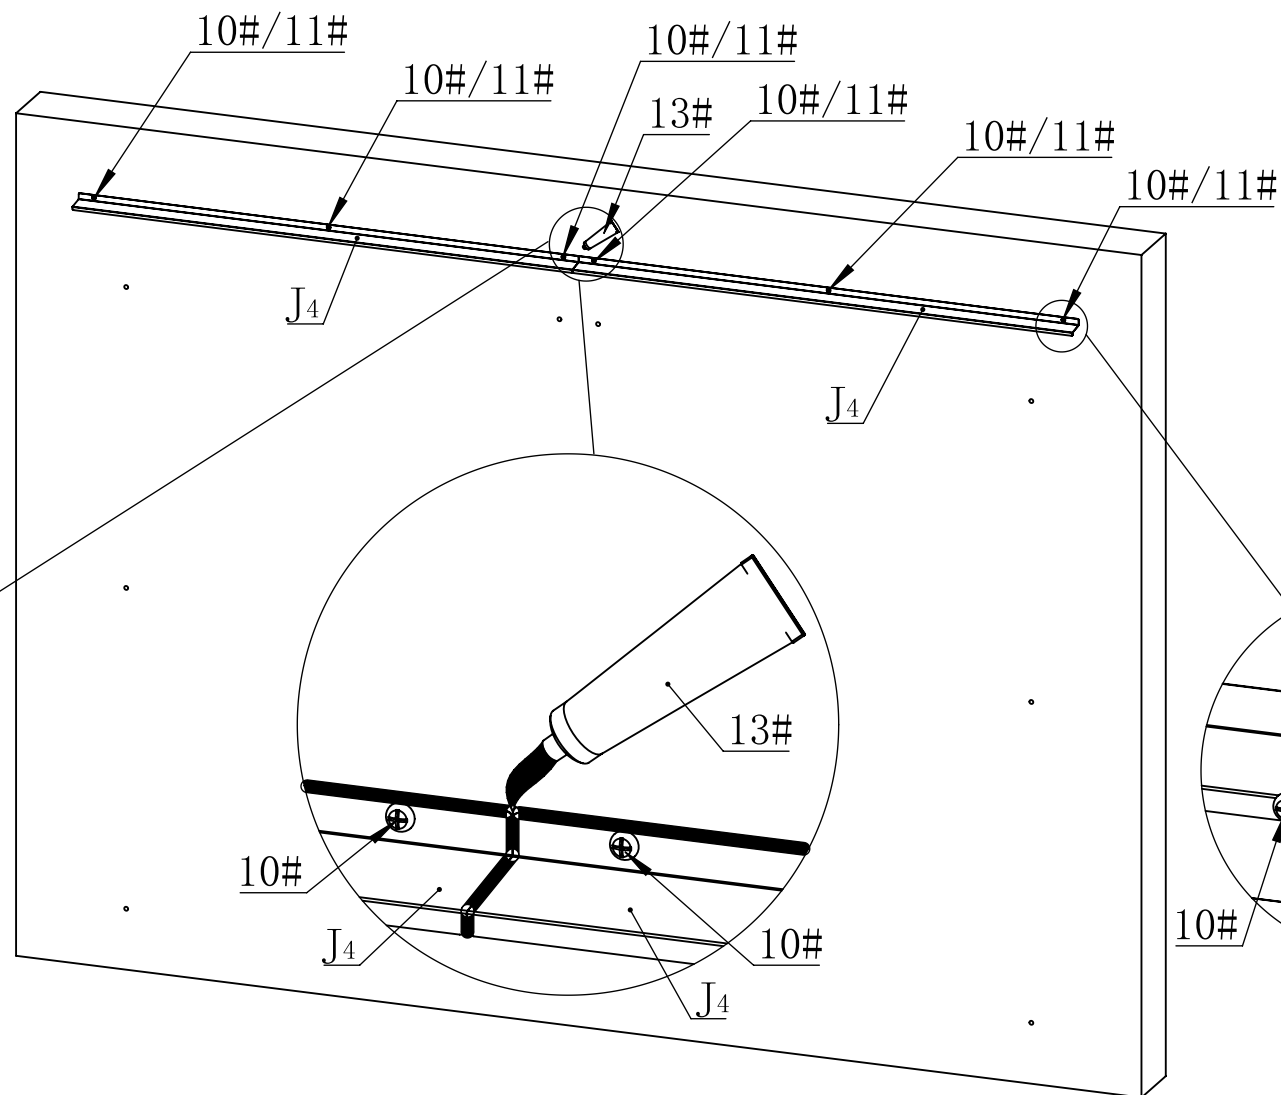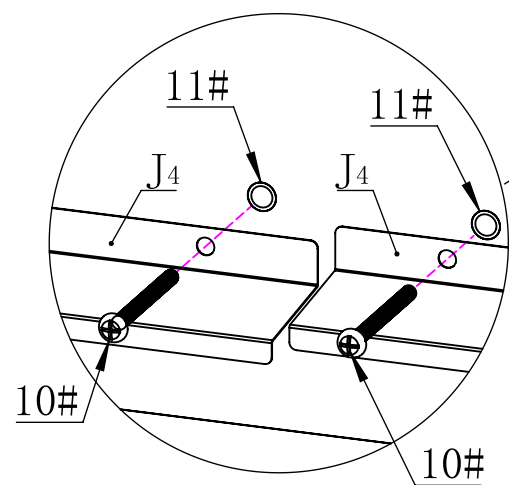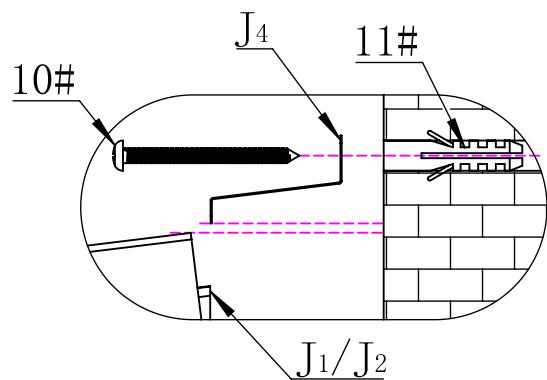




ST6*70




10# 8X



11# 8X

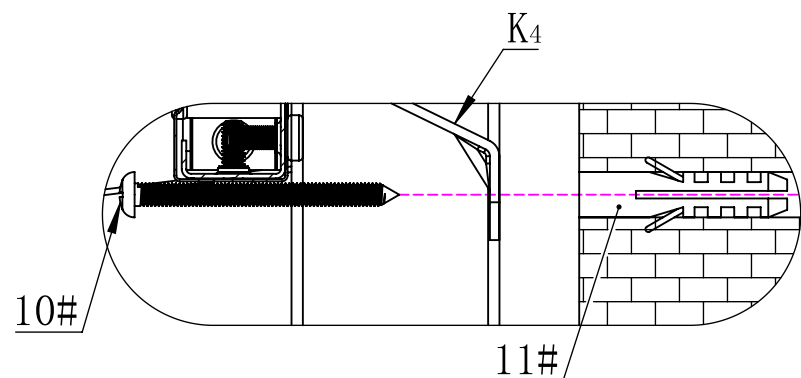

2X

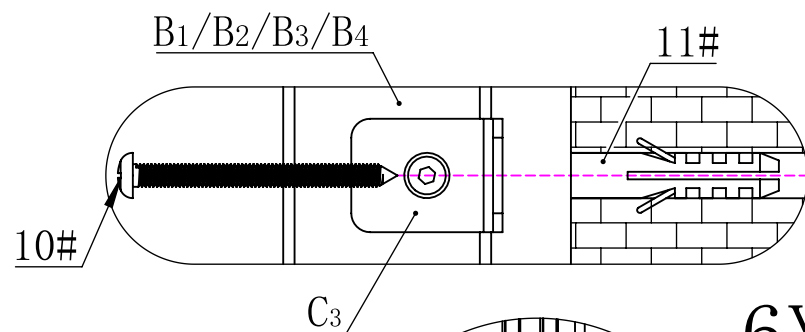

6X

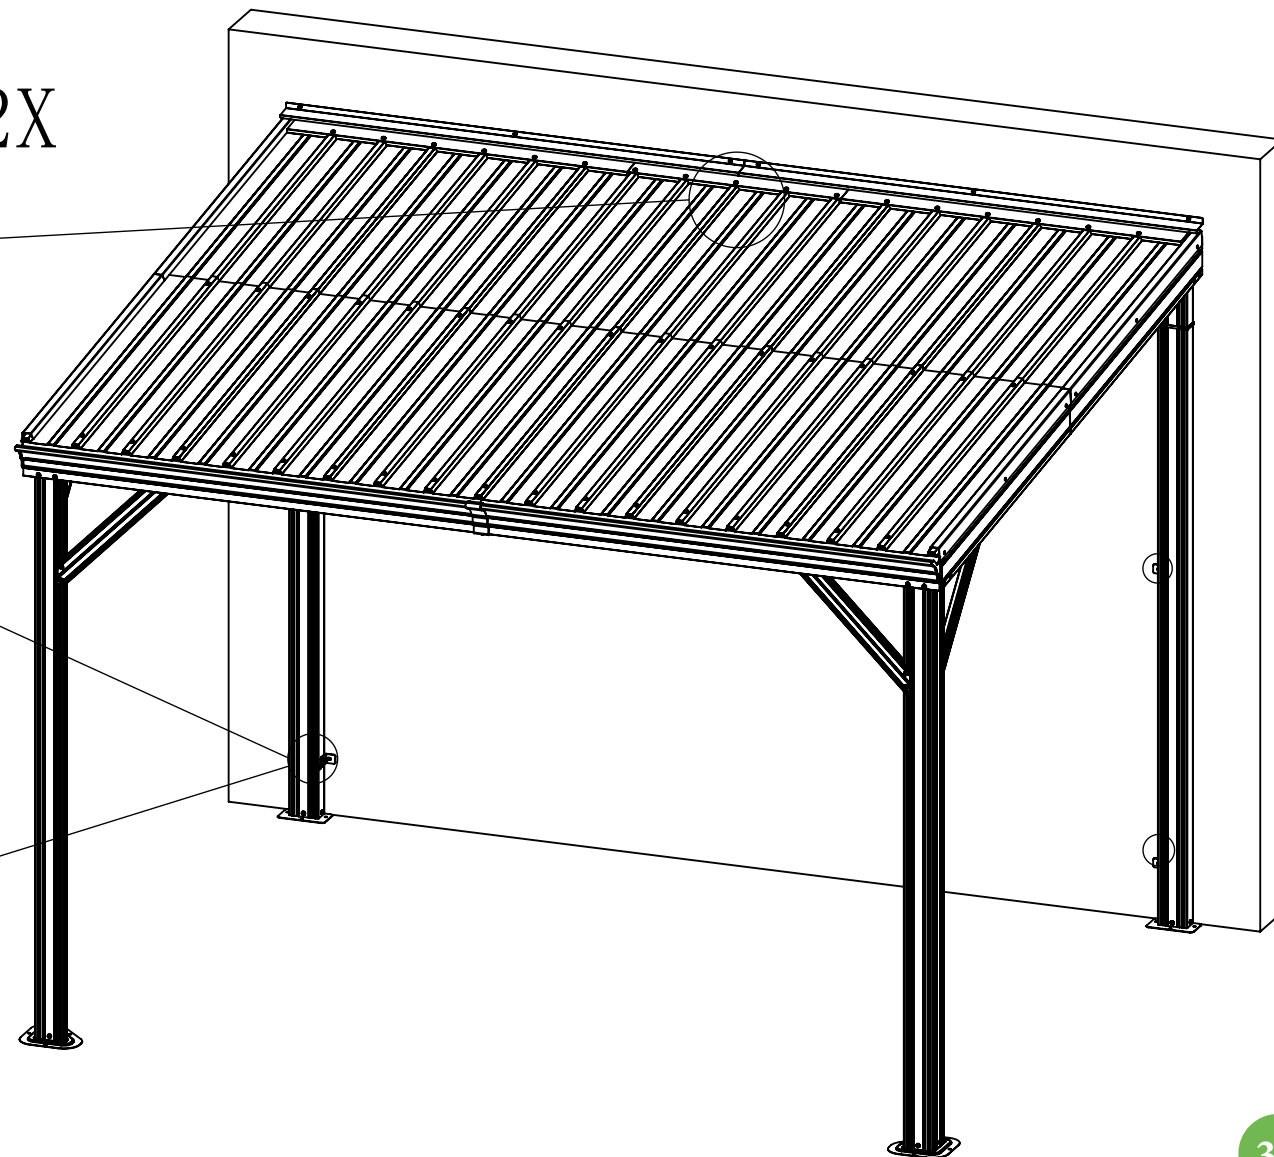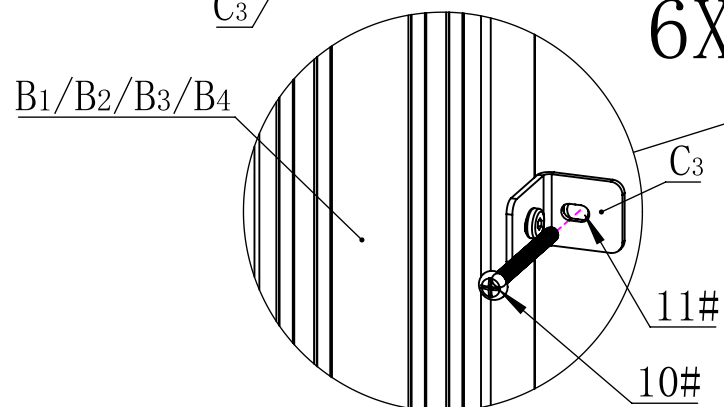

Care and Cleaning

Wash frame parts with mild soap and water, rinse thoroughly.

Do not use bleach, acid, or other solvents on the frame parts.

Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your gazebo.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



RESORT COMFORT IN YONR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.