

















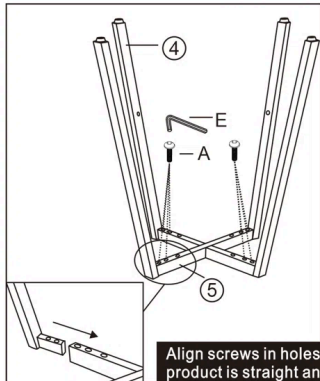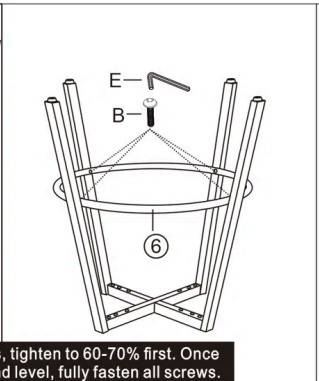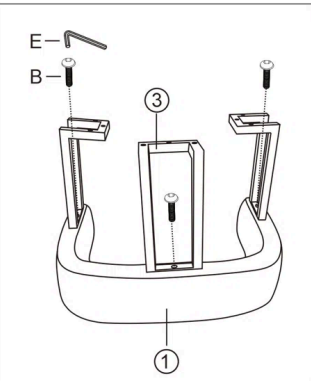

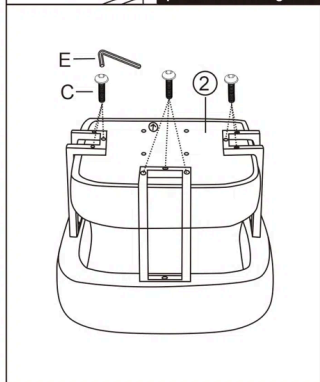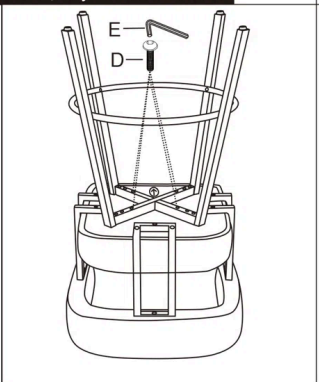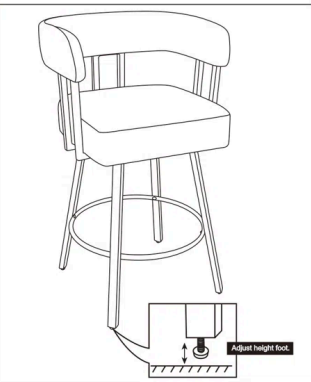


ASSEMBLY INSTRUCTION

① × 1 	Ⓐ × 8  M6*16MM			
② × 1 	Ⓑ × 7  M6*30MM			
③ × 3 	Ⓒ × 9  M6*35MM			
④ × 4 	Ⓓ × 4  M6*45MM			
⑤ × 1 	Ⓔ × 1  M6	<p>Align screws in holes, tighten to 60-70% first. Once product is straight and level, fully fasten all screws.</p>		
⑥ × 1 	Reserve  × 1  × 1  × 1  × 1			

Reminder: When installing the product, place it on a clean surface such as a carpet or carton to avoid dirt or scratches.

PROBLEM WITH YOUR PURCHASE? Contact Us First!
E-mail us at: after-sales@163.com