

ASSEMBLY INSTRUCTIONS



Fine Furniture for every stage of life

Daybed

REVISION 0 : 12/21/2021
REVISION 1 : 01/01/2026

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

AN LEFT SIDE PANEL




1PC

BN RIGHT SIDE PANEL



1PC

CN ROLL SLAT (13PCS)



2SETS

DN LEG



4PCS


B2 (BOX 2)

EN TRUNDLE FRONT
PANEL WITH CASTER




1PC

FN TRUNDLE BACK
PANEL WITH CASTER



1PC

GN BACK PANEL




1PC

HN BED RAIL



2PCS

IN TRUNDLE SIDE
PANEL



2PCS

JN CENTER RAIL



1PC

KN TRUNDLE CENTER
RAIL



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED

1	LONG FLAT HEAD SCREW (#8 x 2" - RBW)		16PCS
2	SHORT BOLT (5/16" x 3/4" - RBW)		8PCS
3	MEDIUM BOLT (5/16"x 1-1/2" - RBW)		8PCS
4	LONG BOLT (5/16" x 2-1/2" - RBW)		4PCS
5	LOCK WASHER (5/16" - RBW)		20PCS
6	FLAT WASHER (5/16" x 22mm - RBW)		20PCS
7	SHORT FLAT HEAD SCREW (#8 x 1-1/4" - RBW)		78PCS
8	ALLEN WRENCH (M5 - RBW)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

STEP 1




STEP 3

STEP 3

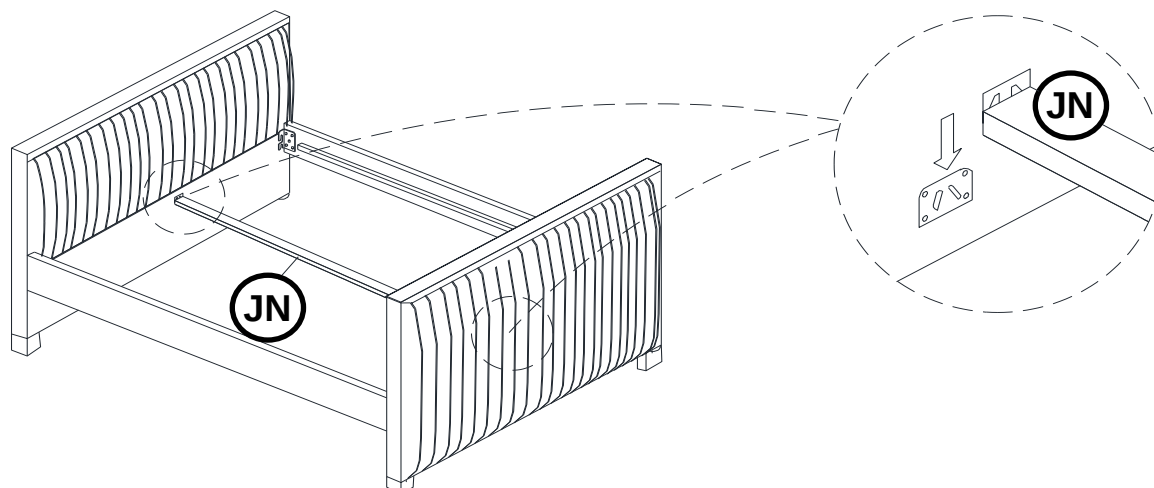


STEP 4

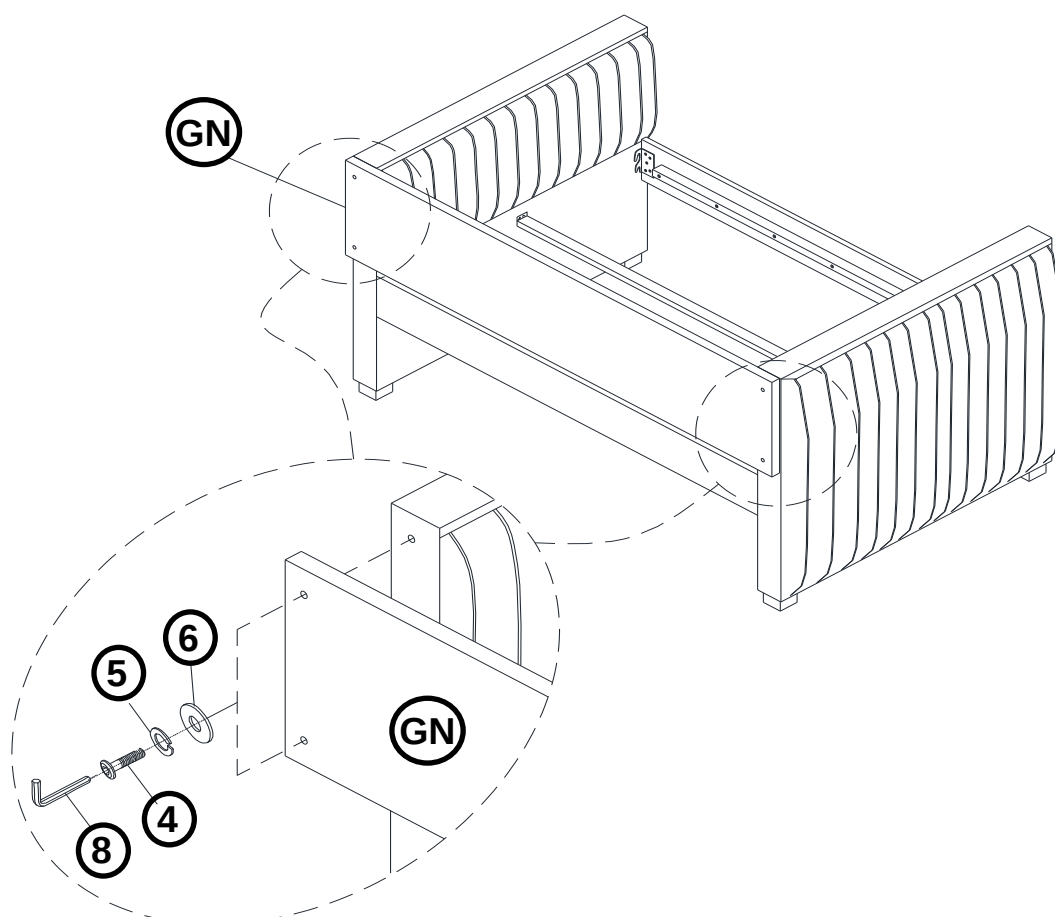


ASSEMBLY INSTRUCTIONS

STEP 5

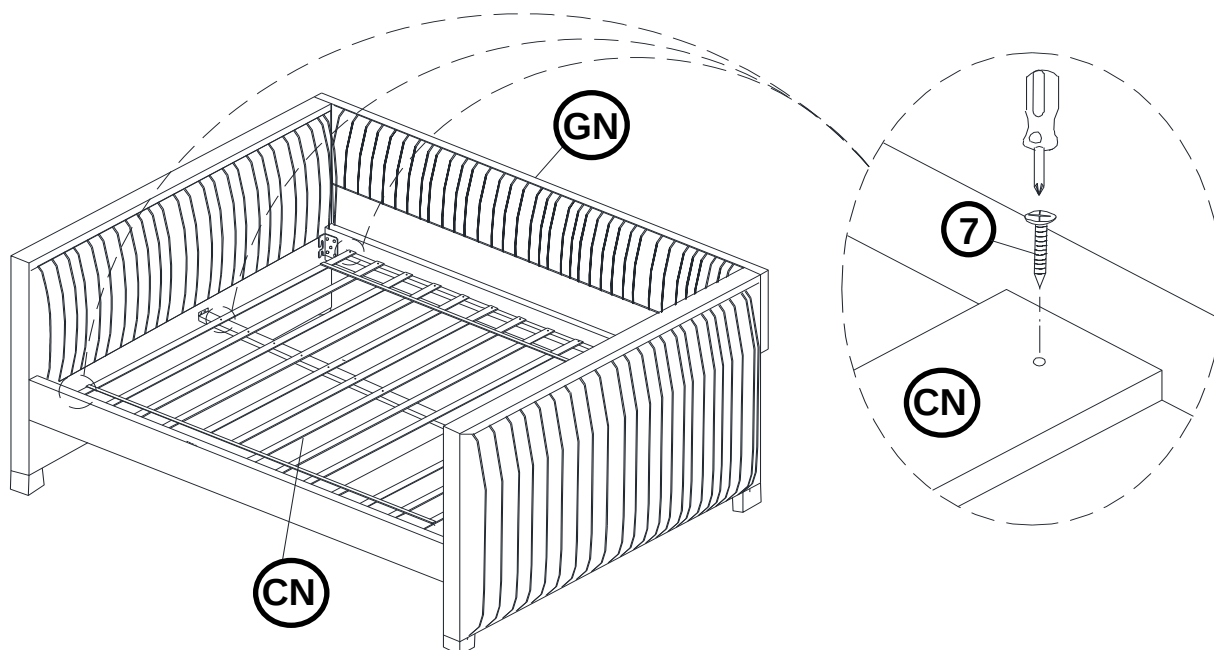


STEP 6

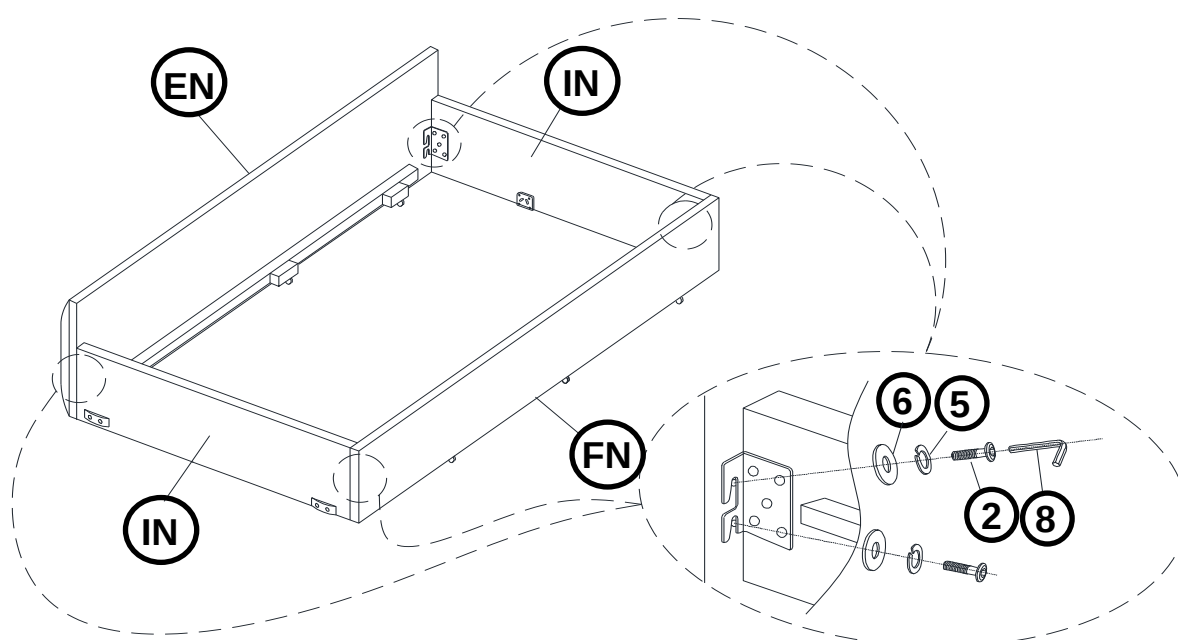


ASSEMBLY INSTRUCTIONS

STEP 7

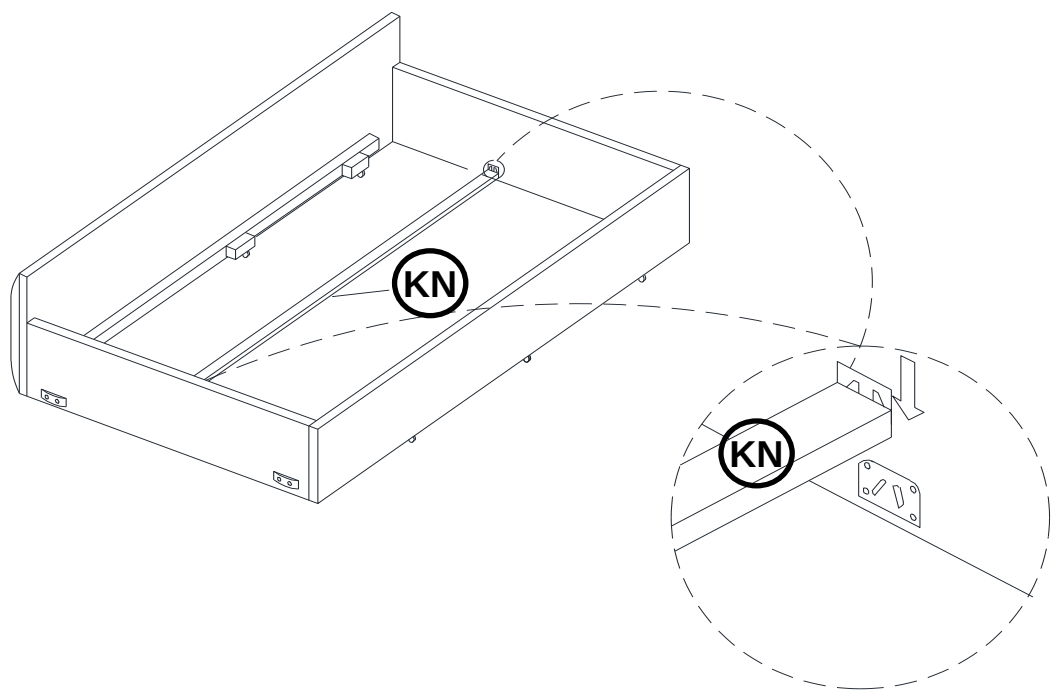


STEP 8

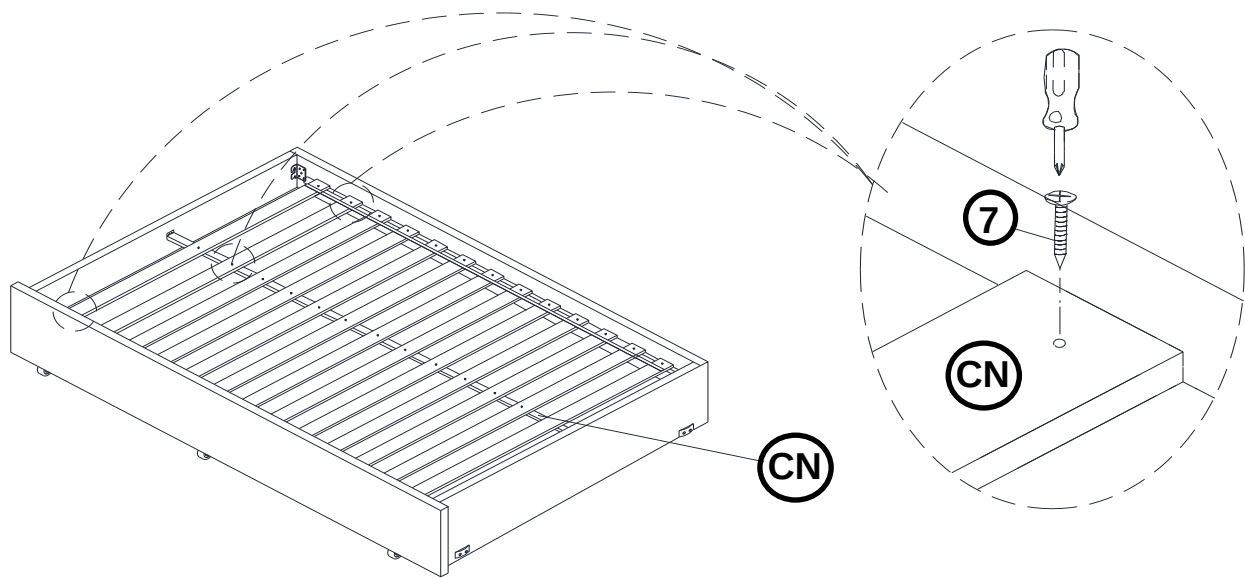


ASSEMBLY INSTRUCTIONS

STEP 9 COMPLETE

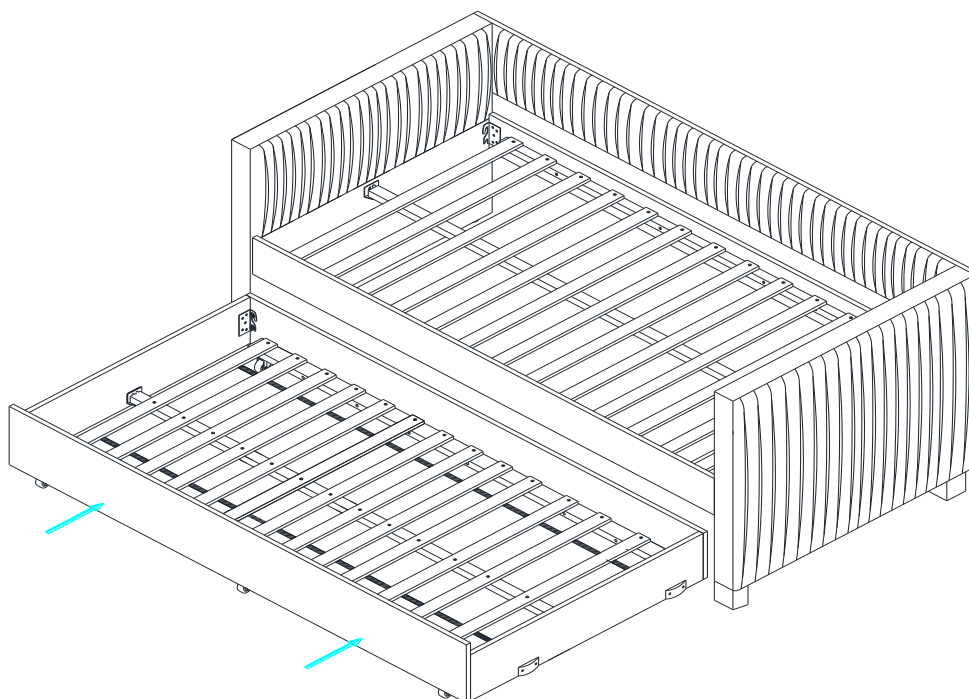

Daybed Inner Size: 78.25"W X 39.75"D
Trundle Inner Size: 75.25"W X 39.25"D

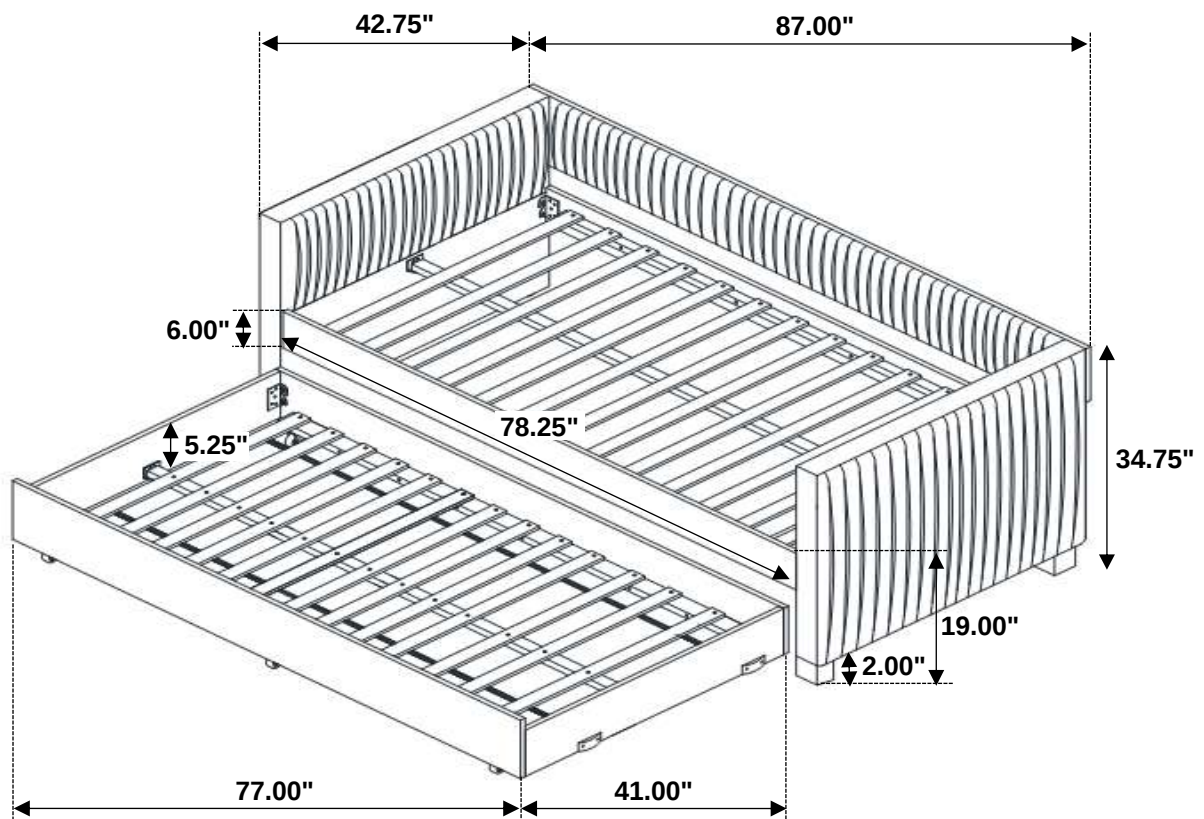

Note: Dimension tolerance $\pm 5\%$