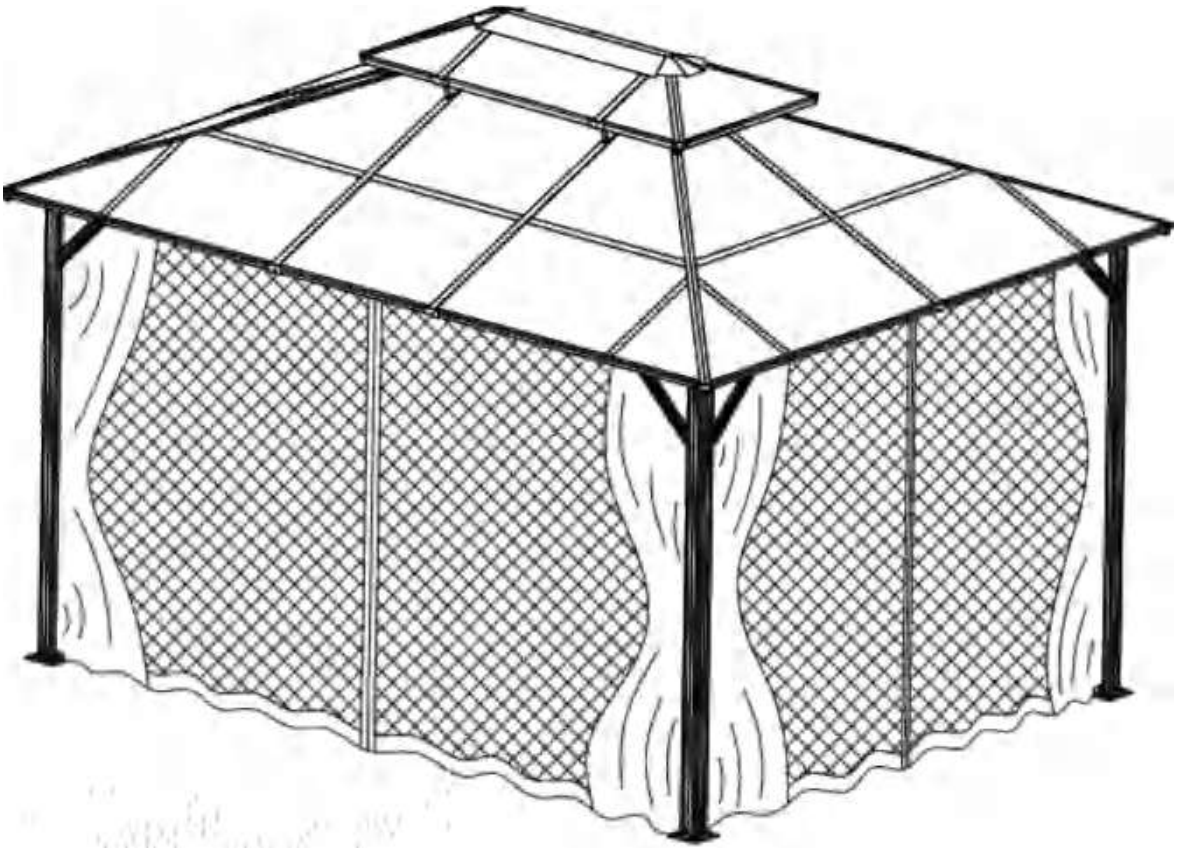
MANUAL INSTRUCTION

GAZEBO WITH SIDEWALL CURTAINS

WQSP255TN



PC ROOF GAZEBO

Part 1: Precautions and Preparations---------- 1 - 2

Part 2: Packing List ---------- 3 - 10

Part 3: ---------- 11 - 16




Part 4: ---------- 17 - 23



Part 5: ---------- 24 - 29



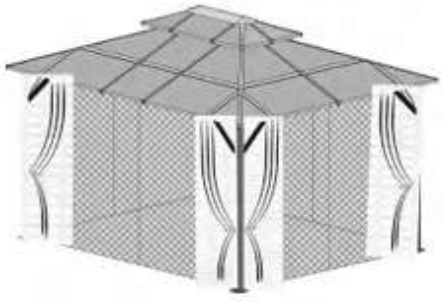Part 6: ---------- 30 - 33



WARNING

·During windy weather,please avoid standing inside the gazebo.
·Avoid standing under the gazebo during heavy snowfall.
·For safety,please use expansion screws to reinforce the posts around the gazebo.
·During windy weather,tighten the fence and netting to prevent tearing in high winds.
·In extreme weather conditions,you can use a rope to pull the four corners of the gazebo to keep it stable.
·Please clear the snow off the roof in time for heavy snowfall.
·Make sure all screws are tightened before use.
·Periodically check and confirm the tightness of all screws,buckles,and straps every 90 days.
·Please keep all screws loose during the assembly process and tighten them after completing the installation.
·Do not use or store near an open flame or flammable chemicals.
·Please note that some parts have sharp edges and should be handled with gloves.
·If any parts are missing,broken,damaged,or worn,discontinue use of the product until repairs are made or factory replacement parts are installed.
·Installation of the product ina manner that does not conform to the manufacturer's instructions may result in the loss of the warranty policy for this product.
·Consult your local authorities to determine if permits are required for erecting the shed.

TOOLS REQUIRED

EQUIPMENT REQUIRED(Not included in boxes)

**NOTE:Tools / equipment are not shown to actual size and scale.*



LEVEL



RUBBER MALLET



DRILL



ALLEN KEY



SAFETY HAT



GLOVES



STEPLADDER
(6.5Ft Or More)

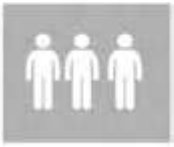


SAFETY GOGGLES



PHILLIPS SCREW

Matters needing attention



Three or more people are required for assembly



Do not fully tighten screws prior to complete assembly

PACKING LIST Serial number

Box A

Part name	C	C1	D1	D4	E	E1	E2
Qty	4	4	4	4	4	4	4

Part name	E3	E4	F2	G	H	H1	I
Qty	4	2	4	2	1	1	2

Part name	J	J1	J2	J3	K	K1	K2
Qty	4	4	4	4	4	4	4

Part name	K3	L	L1	L2	Q	Q1	Q2
Qty	2	2	2	2	1	8	2

Part name	S	T	T1	M	N	N1	O
Qty	4	4	1	4	4	4	8

Part name	O1	O2	O3	P	P1	P2	R
Qty	8	4	6	8	10	3	4

Part name	U	Z1	Z2	Z3	Z	Y	Y2
Qty	80	1	1	1	12	12	3

Part name	X	X1	W	W1	V	U1	F1
Qty	8	16	146	18	32	8	4







PACKING LIST Serial number

Box B







Part name	A	B	B1	B2	B3	B4	B5
Qty	4	2	2	2	2	2	2

Part name	B6	B7	D	F	D2	G1	D3
Qty	2	2	4	8	4	2	2








ASSEMBLY Instruction

	A x4
	B x2
	B1 x2
	B2 x2
	B3 x2
	B4 x2
	B5 x2
	B6 x2
	B7 x2
	C x4
	C1 x4
	D x4
	D1 x4
	D2 x4
 	D3 x2








ASSEMBLY Instruction

	D4 x4
	E x4
	E1 x4
	E2 x4
	E3 x4
	E4 x2
	F x8
	F1 x4
	F2 x4
	G x2
	G1 x2

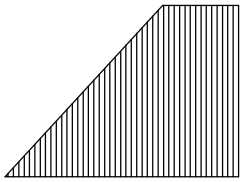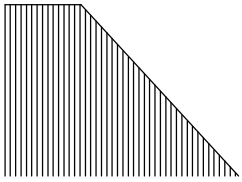
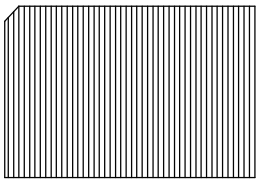
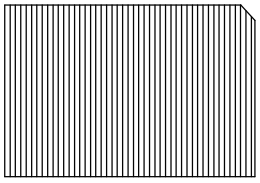
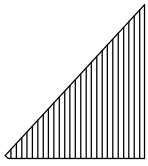
ASSEMBLY Instruction

	H x1
	H1 x1
	I x2
	J x4
	J1 x4
	J2 x4
	J3 x4
	K x4

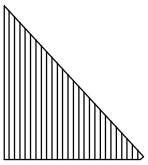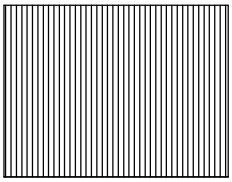




ASSEMBLY Instruction


	K1 x4
	K2 x4
	K3 x2
	L x2
	L1 x2
	L2 x2
	M x4
	N x4
	N1 x4

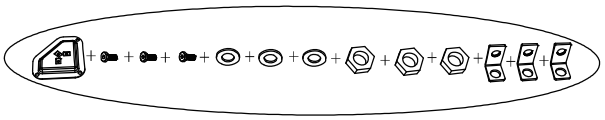ASSEMBLY Instruction


	O x8
	O1 x8
	O2 x4
	O3 x6
	P x8
	P1 x10
	P2 x3
	Q x1
	Q1 x8
	Q2 x2
	R x4
	S x4
	T x4

ASSEMBLY Instruction

		T1 x1
		U x80
	Ø11 * Ø6* 20mm	U1 x8
		V x32
	M6 * 15 mm	W x146
	M6 * 20mm	W1 x18
	M6 * 35 mm	X x8
	M4 * 12 mm	X1 x16
	ST4.8* 12 mm	Y x12
	M6	Y2 x3
		Z x12
		Z1 x1
		Z2 x1
		Z3 x1


No.	Qty	Picture	No.	Qty	Picture
A	4		W	12	 M6 * 15 mm
R	4				

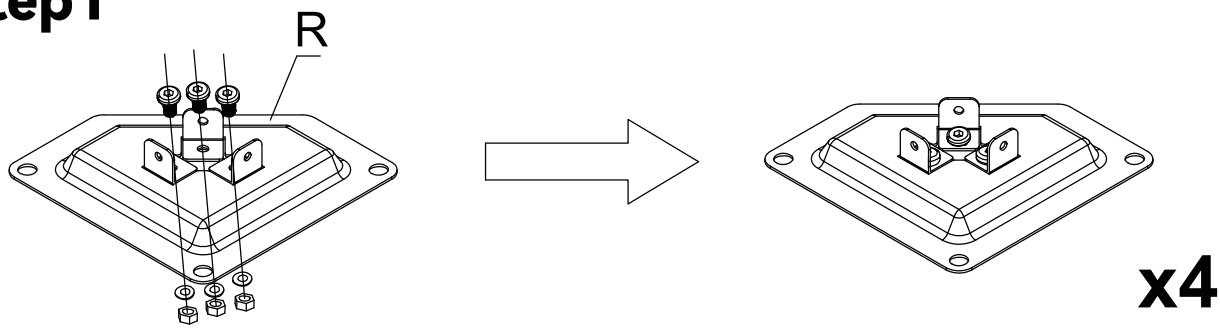Step1






x4

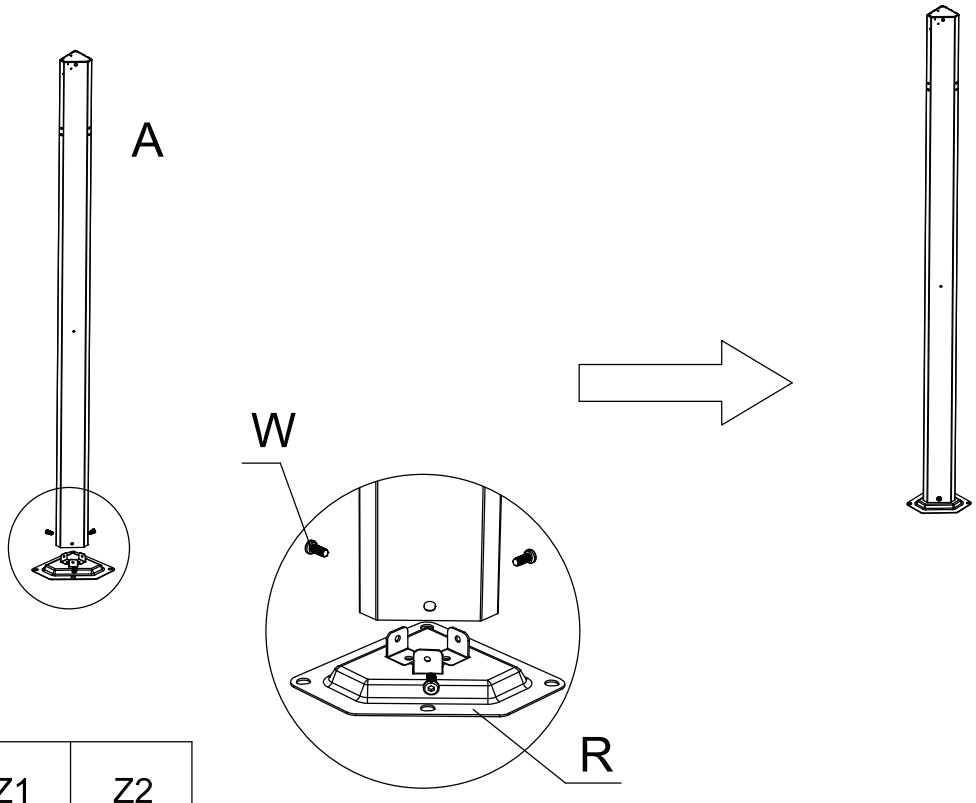Step2





Z1	Z2
	

4pcs




No.	Qty	Picture	No.	Qty	Picture
B	2		B1	2	
B2	2		B3	2	
B4	2		B5	2	
B6	2		B7	2	
W	16	 M6 * 15 mm			

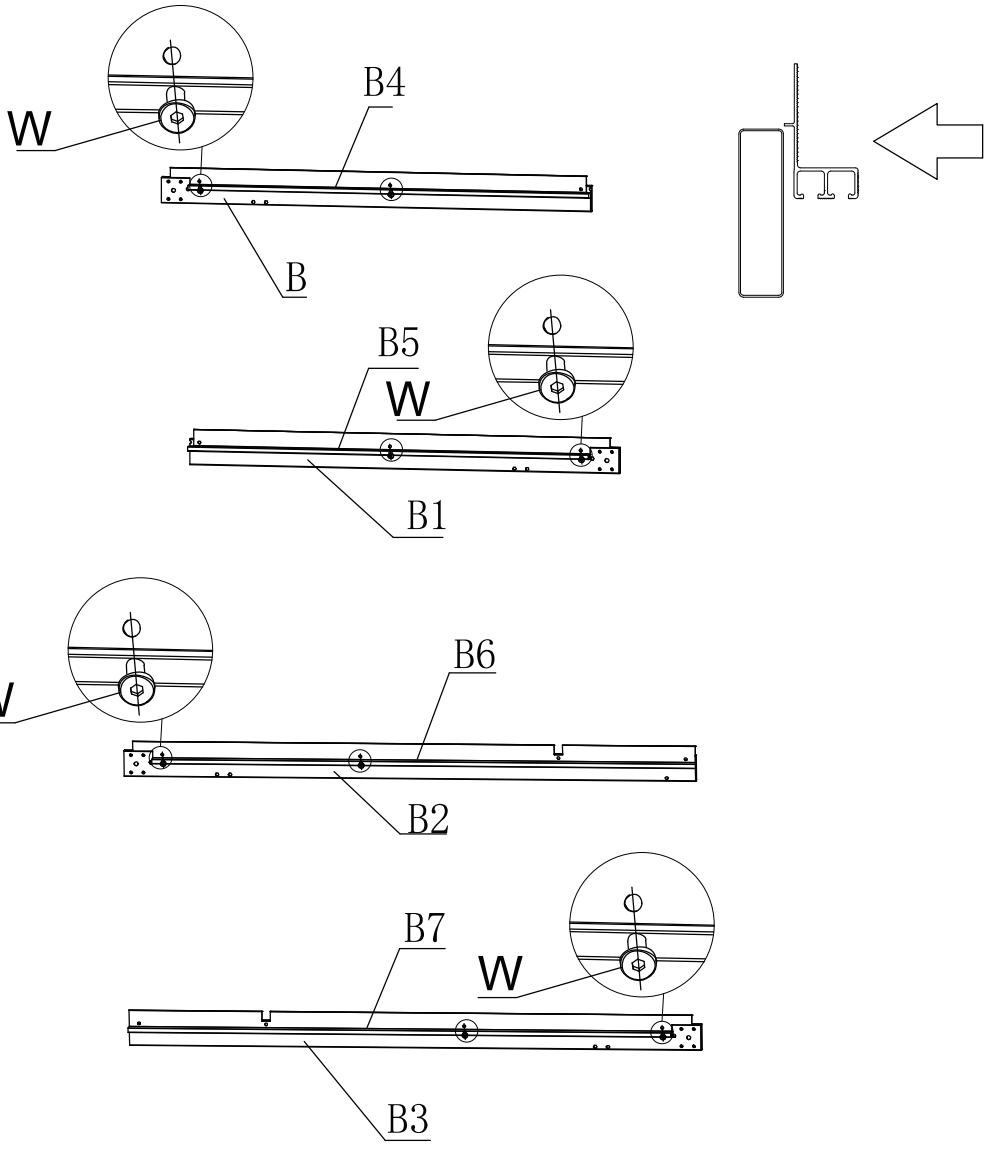Step3




Z1


x2


No.	Qty	Picture	No.	Qty	Picture
B	2		B1	2	
B2	2		B3	2	
W	40	 M6 * 15 mm	M	4	

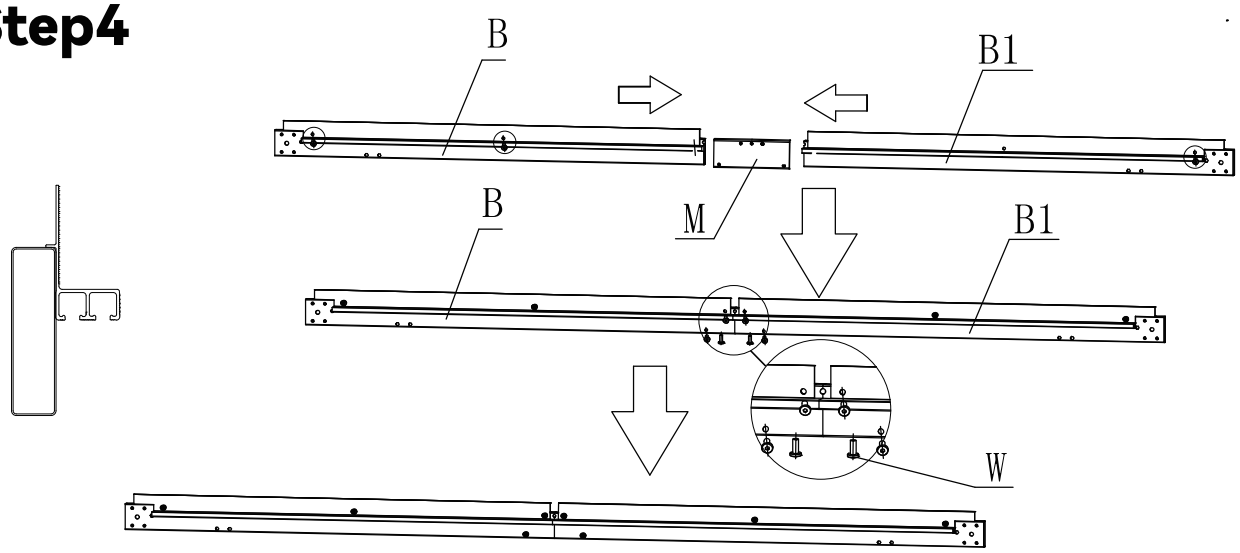
Step4




x2

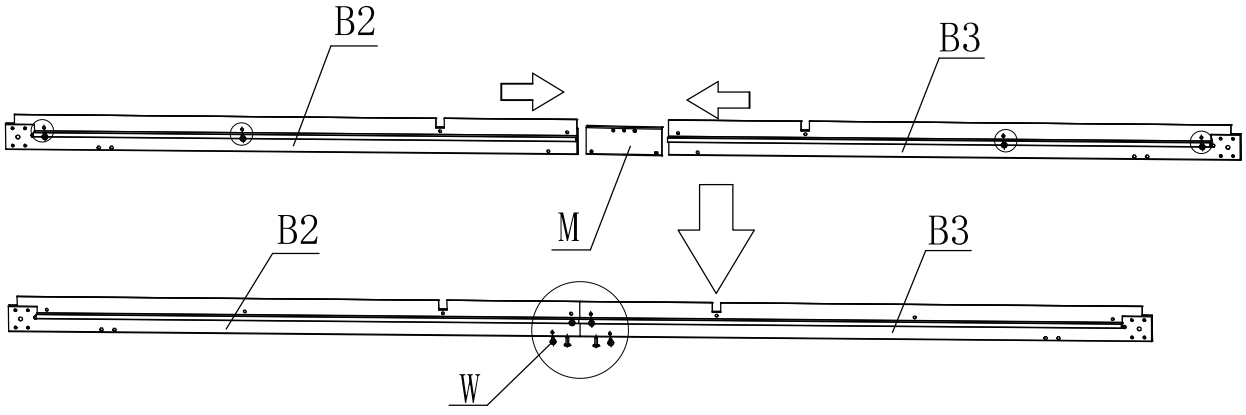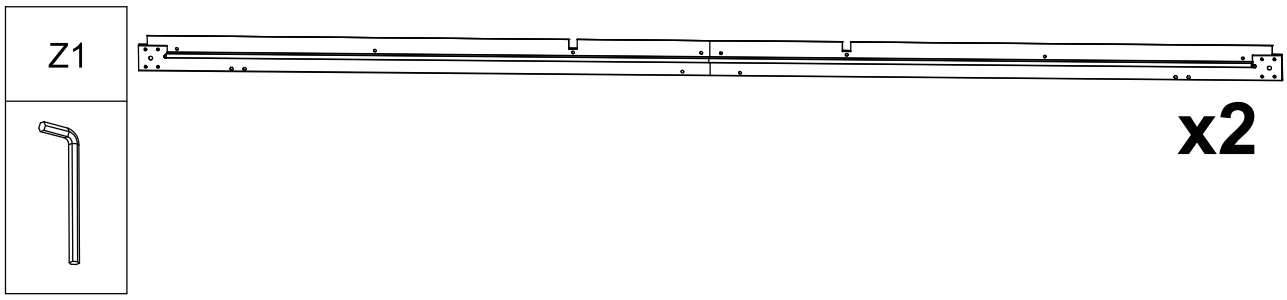Step5






x2

No.	Qty	Picture	No.	Qty	Picture
V	32				

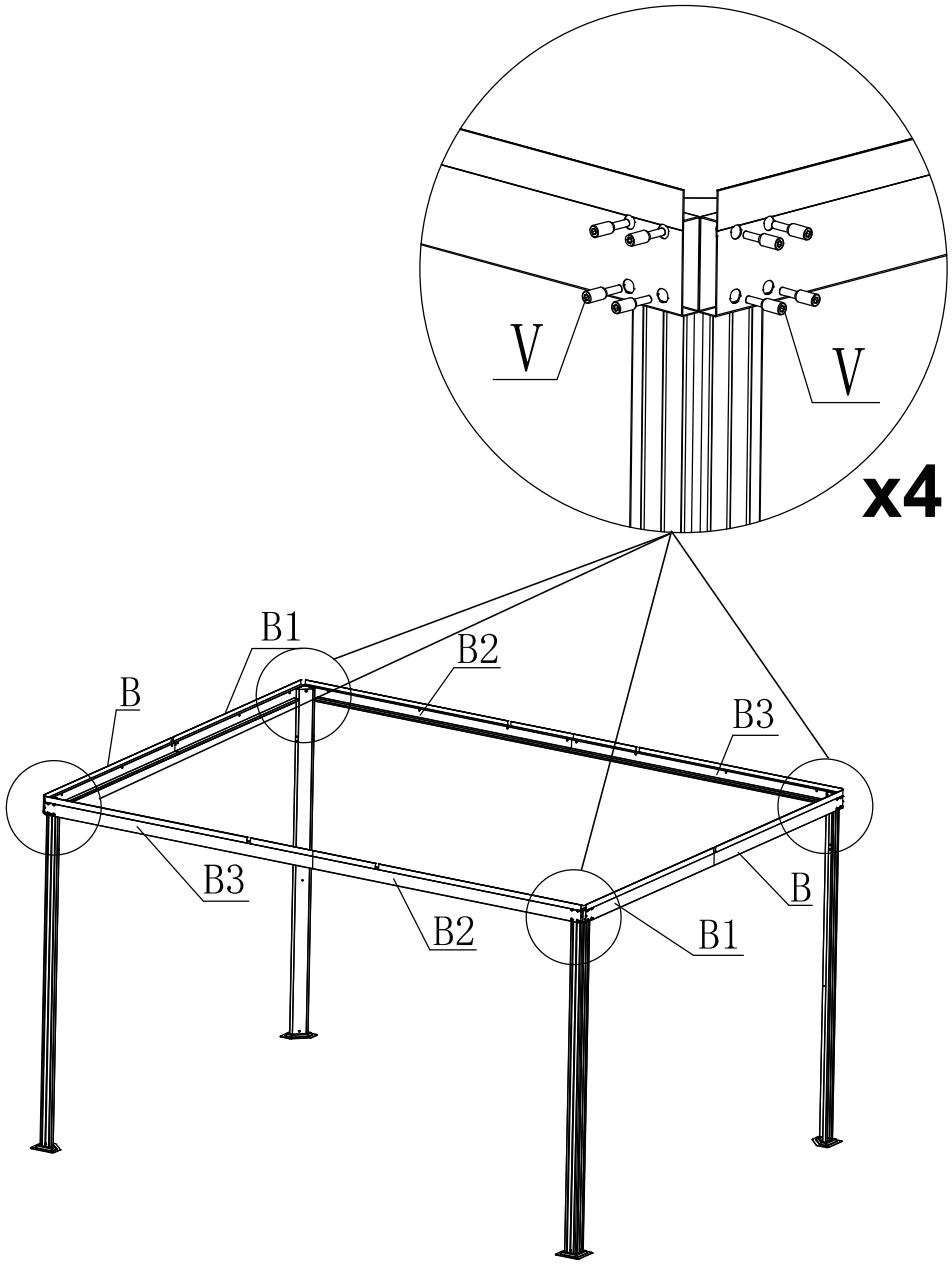Step6




Z1




No.	Qty	Picture	No.	Qty	Picture
C	4		W	24	 M6 * 15 mm
C1	4		O	8	
			X1	16	 M4 * 12 mm

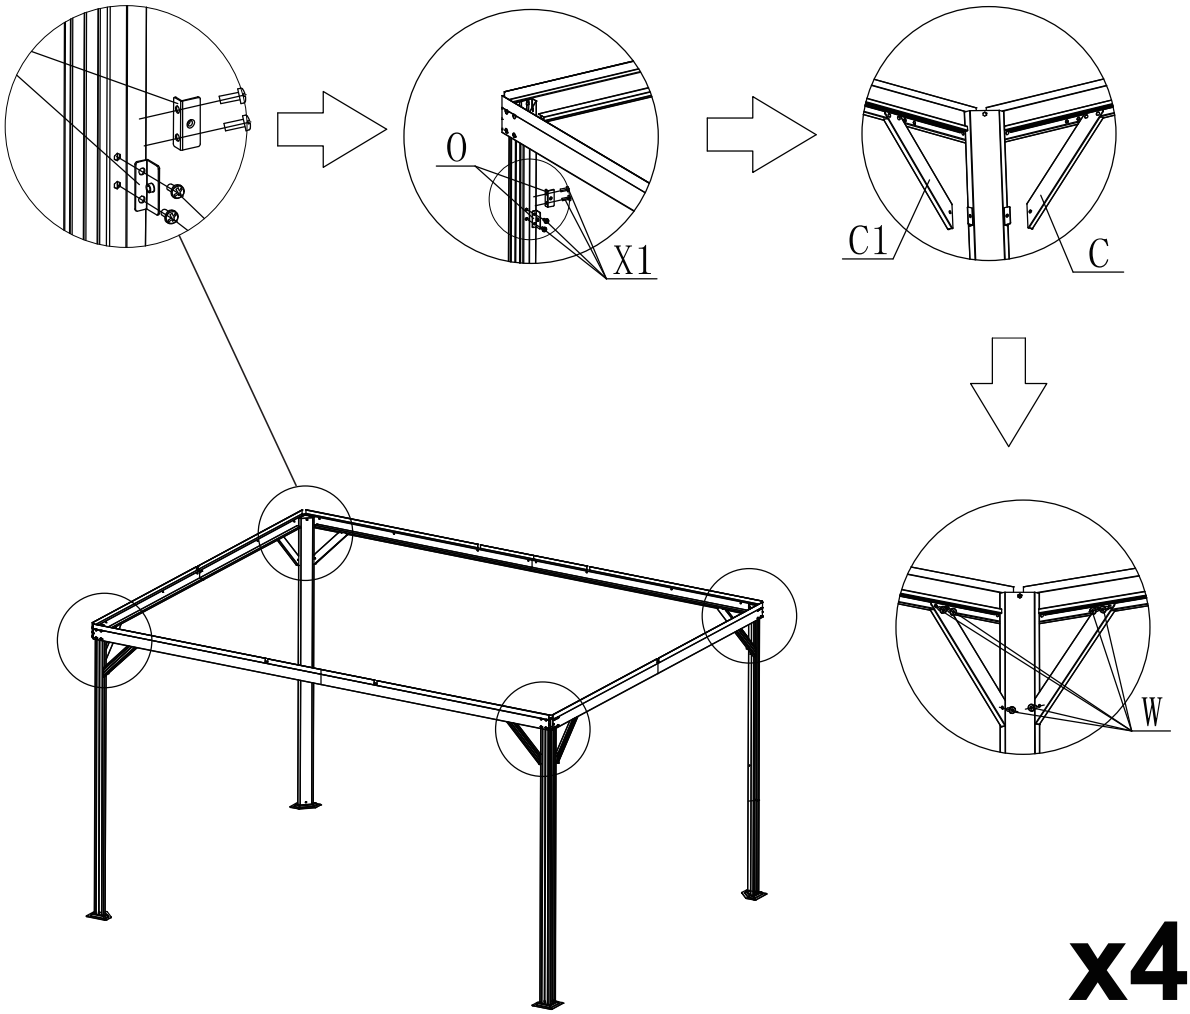Step7




x4

Z1	Z3
	

No.	Qty	Picture	No.	Qty	Picture
N	4		Y	12	 ST4.8* 12 mm
N1	4				

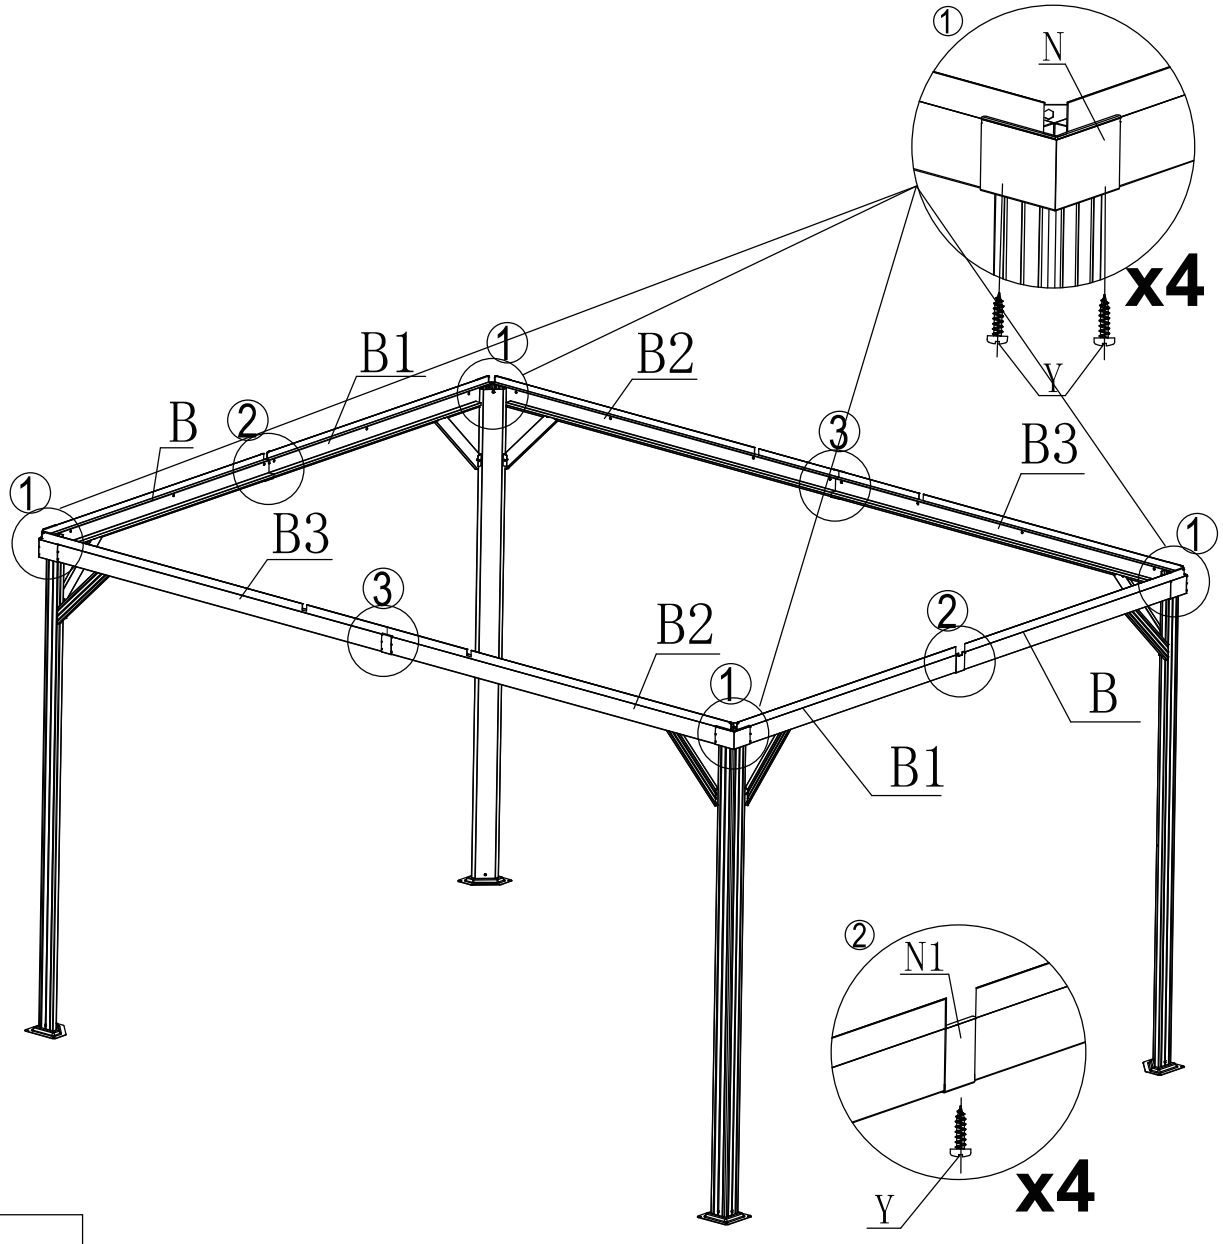
Step8




Z3



No.	Qty	Picture	No.	Qty	Picture
D	4		W	16	
D1	4		O1	4	
O2	4				

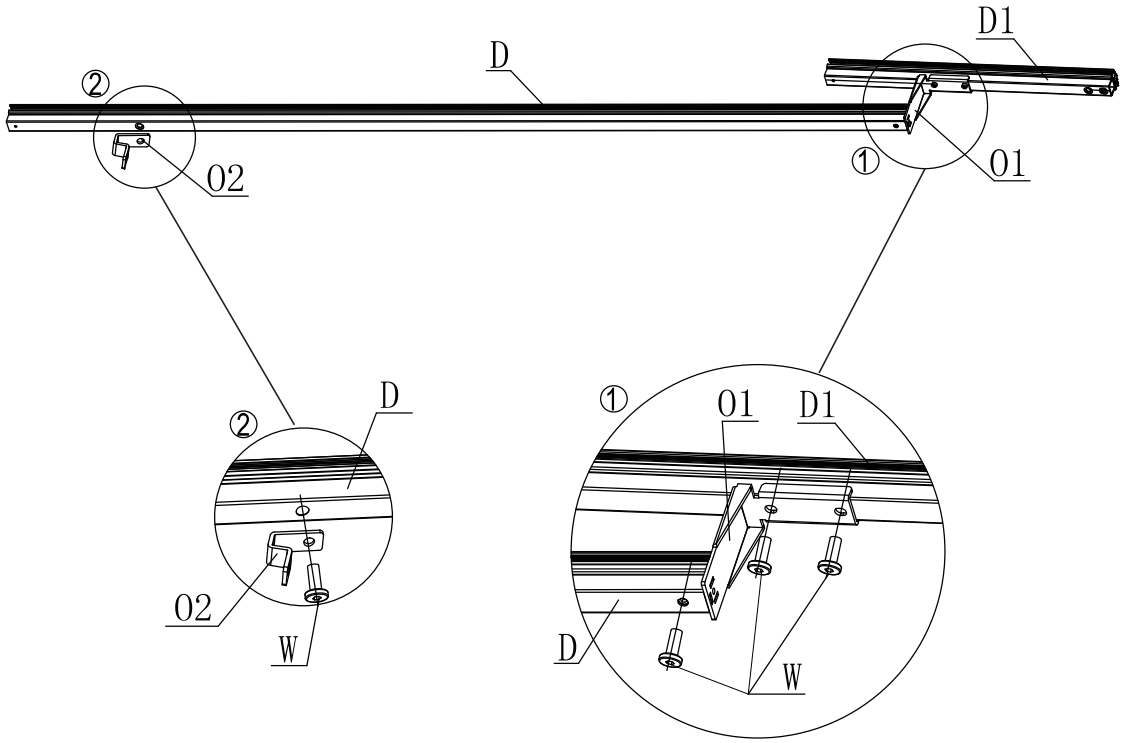Step9







x4


No.	Qty	Picture	No.	Qty	Picture
H	1		W	12	 M6 * 15 mm

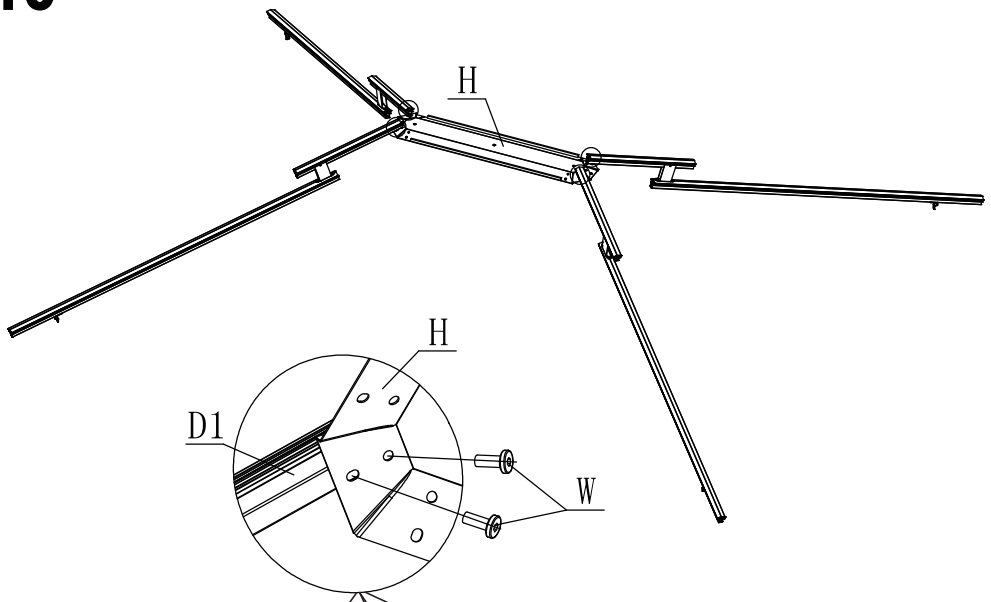Step10




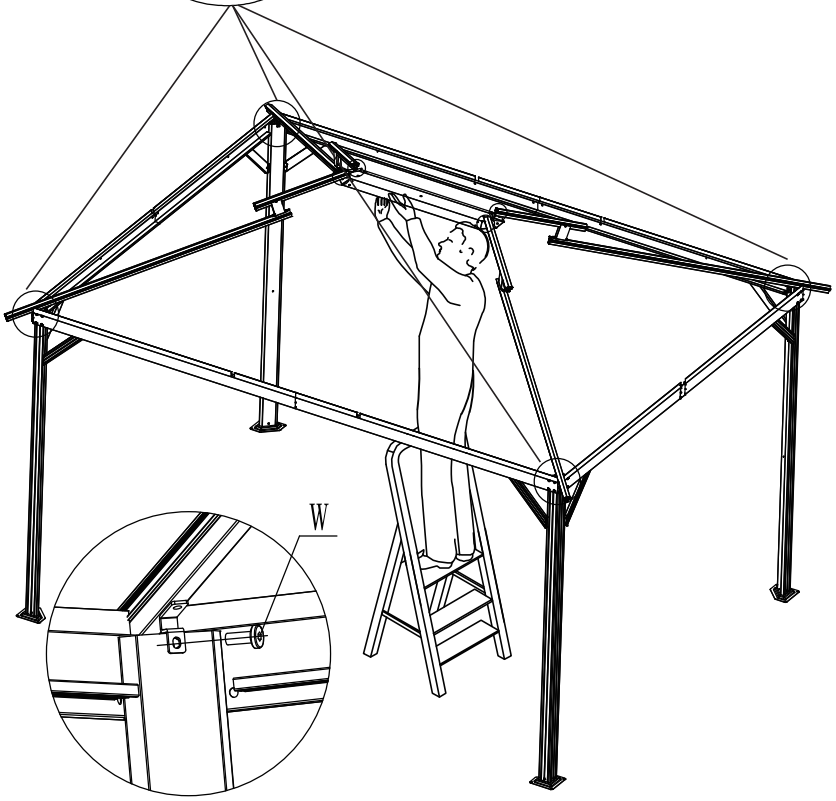Step11





Z1


Note:
1.Have one person stand on the ladder to lift and hold "H" while others fasten the screws of "V"
2.Do not release "H" until all the "V" screws are fully tightend.

No.	Qty	Picture	No.	Qty	Picture
D2	4		W	16	 M6 * 15 mm
D4	4		O1	4	
O3	4				

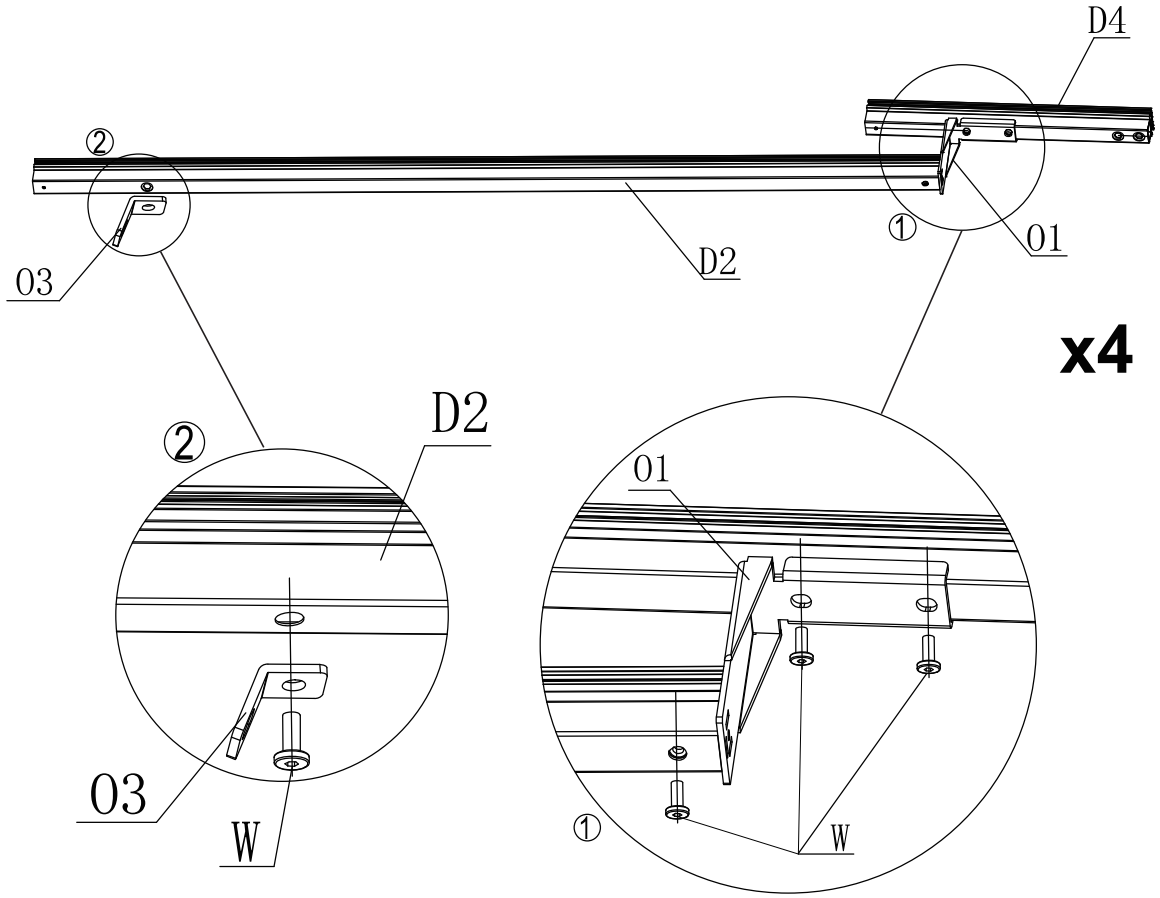
Step12





No.	Qty	Picture
W	12	M6 15 mm

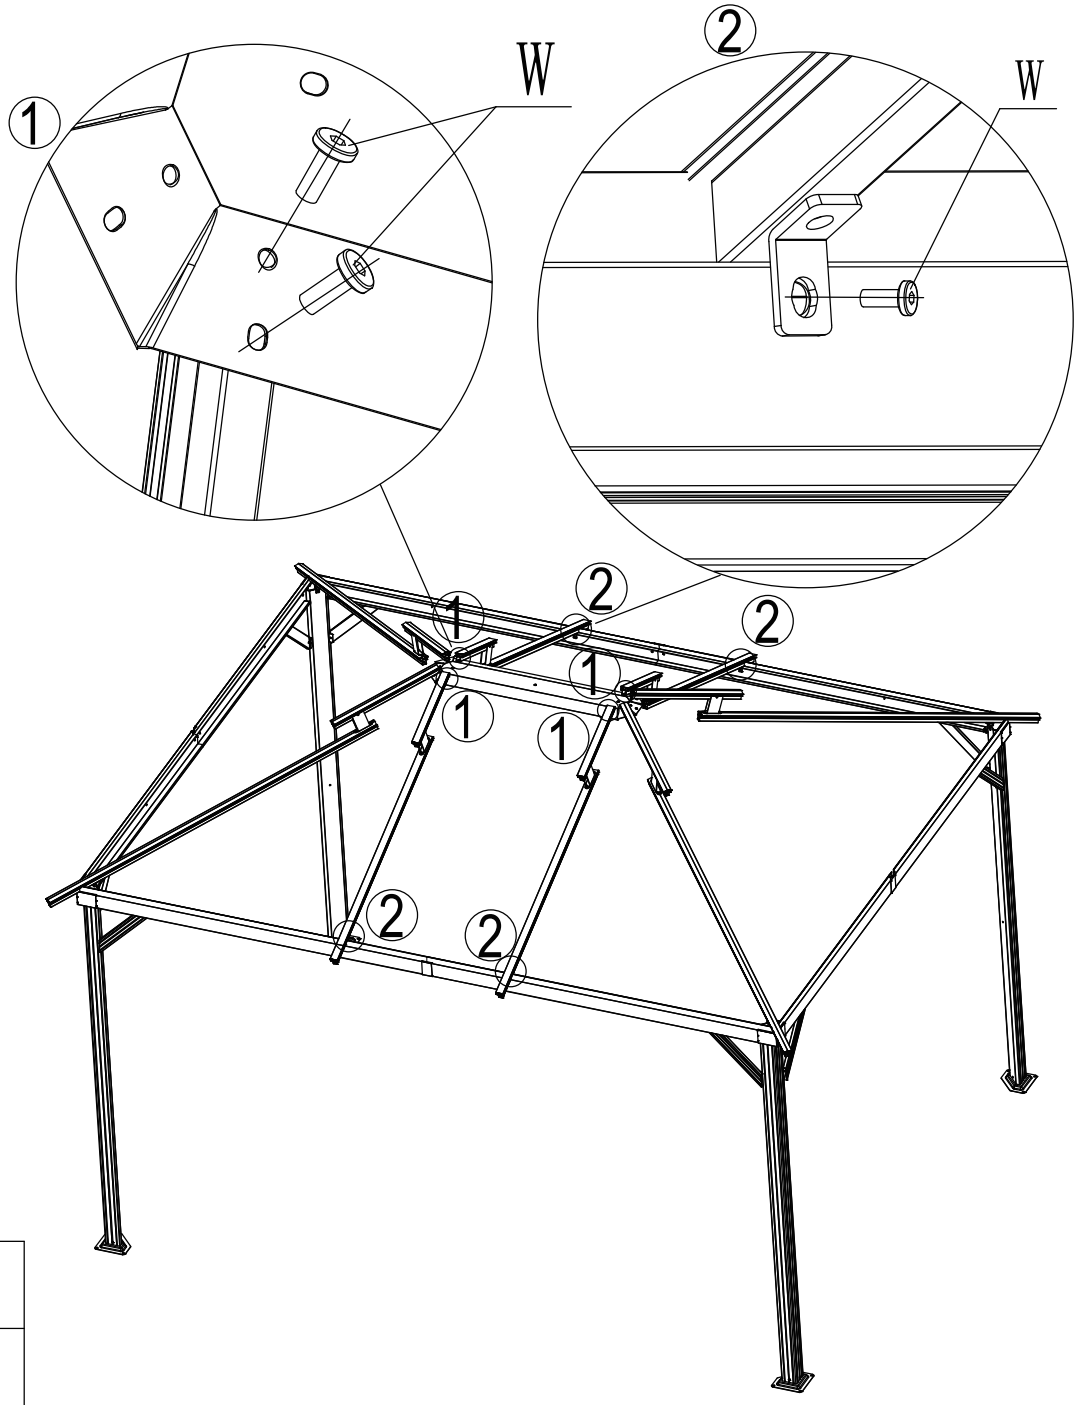
Step13




Z1


No.	Qty	Picture	No.	Qty	Picture
G1	2		W	4	 M6 * 15 mm

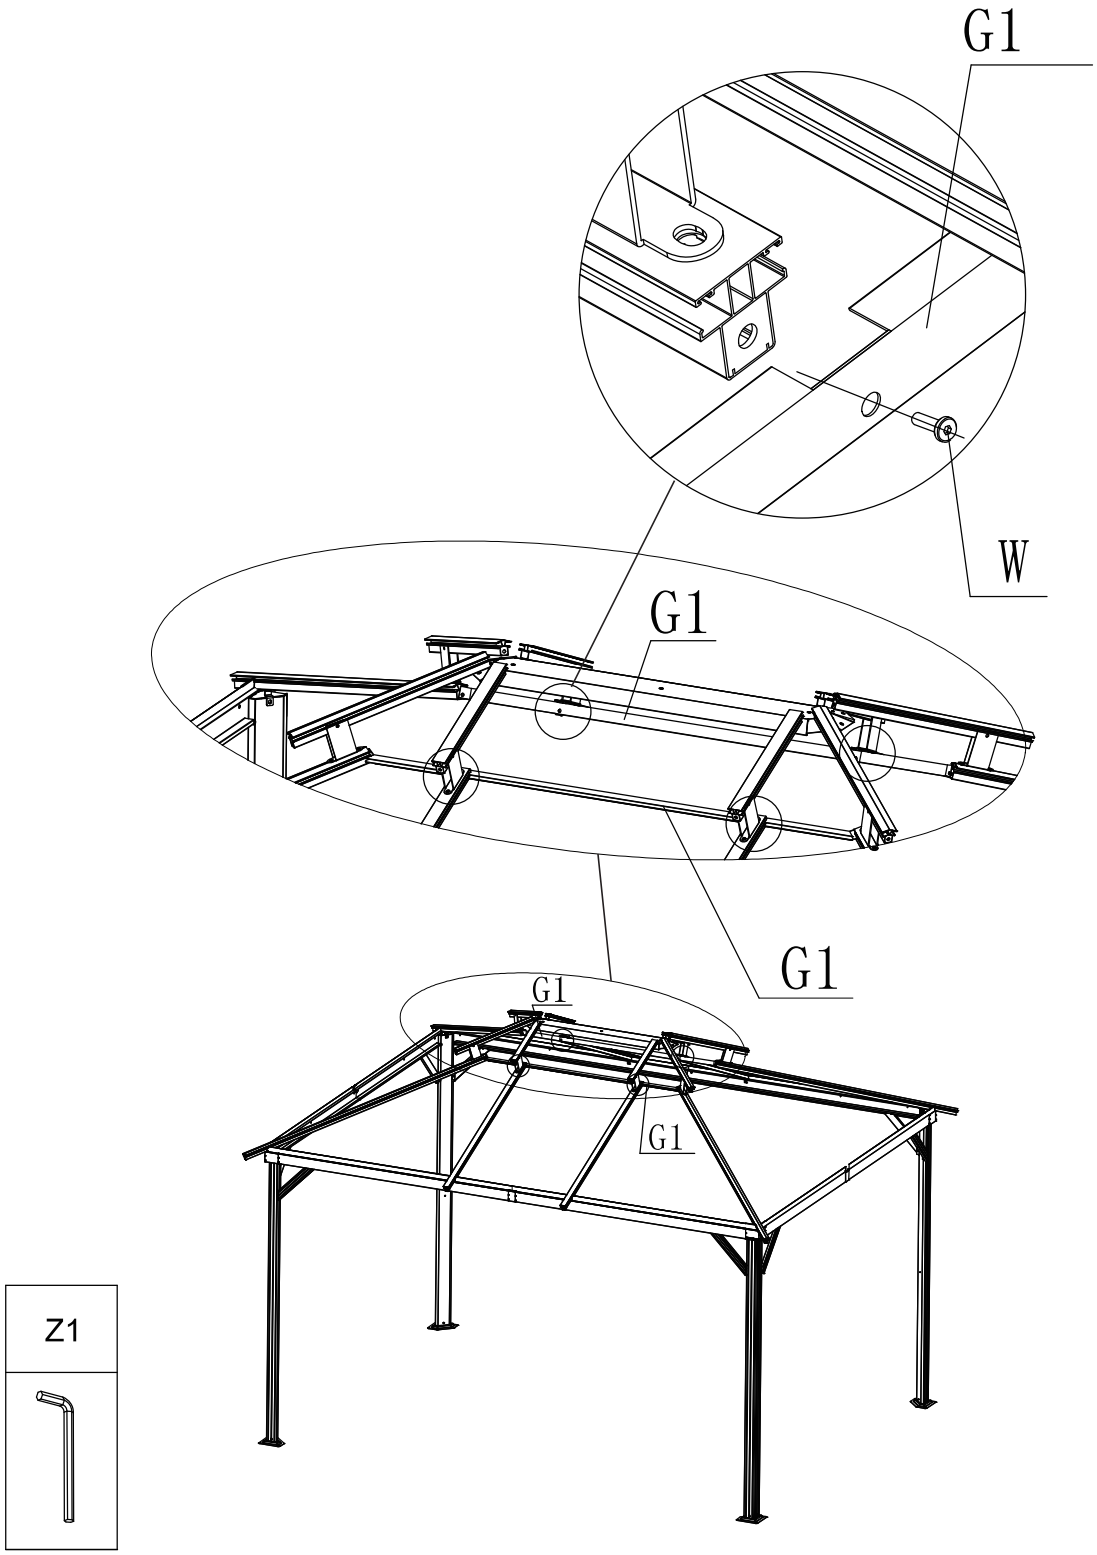
Step14




Z1

No.	Qty	Picture	No.	Qty	Picture
D3	2		W	4	 M6 * 15 mm
I	2		O3	2	

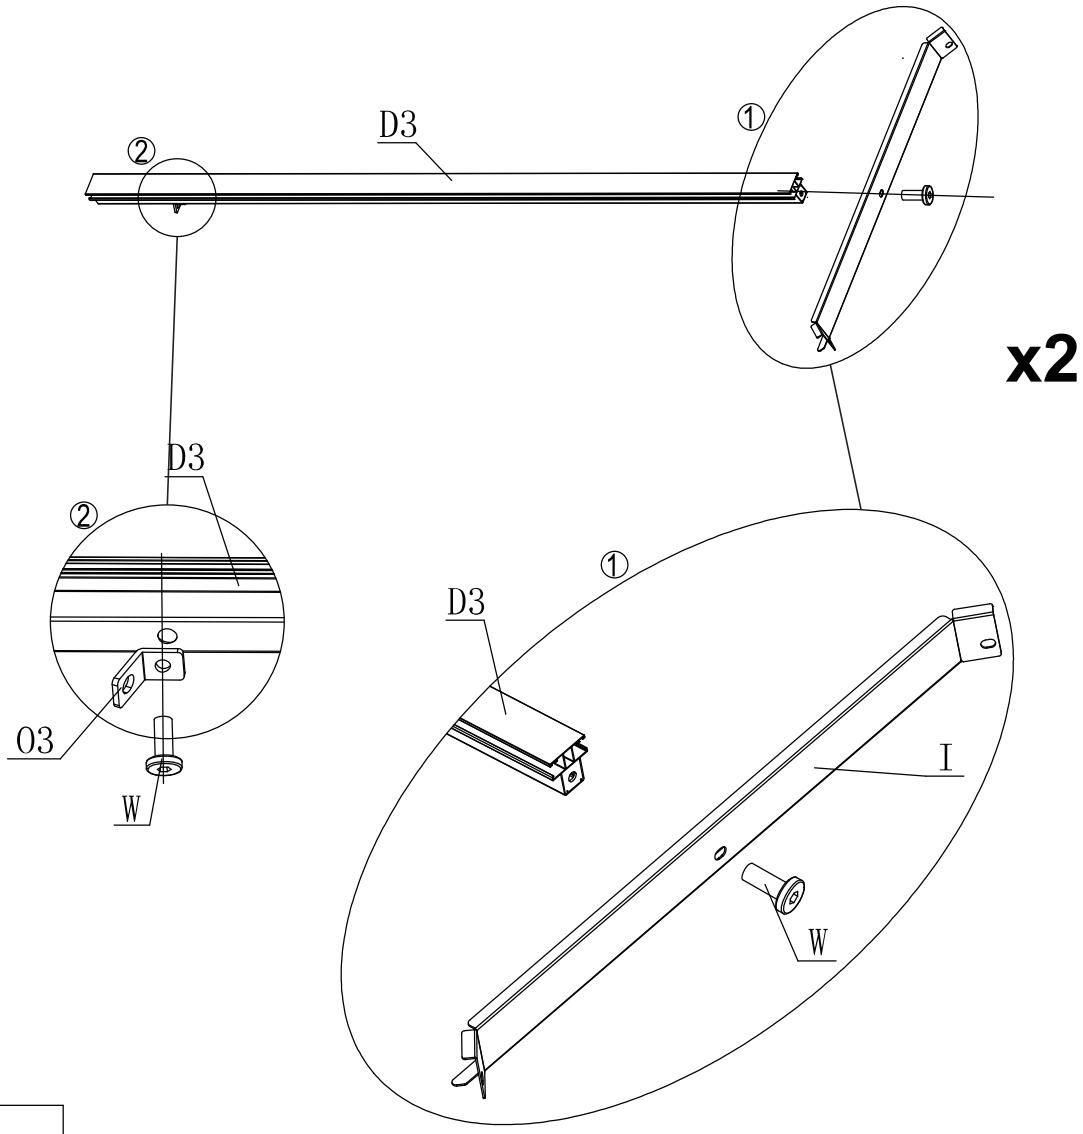
Step15






No.	Qty	Picture
W	6	M6 * 15 mm

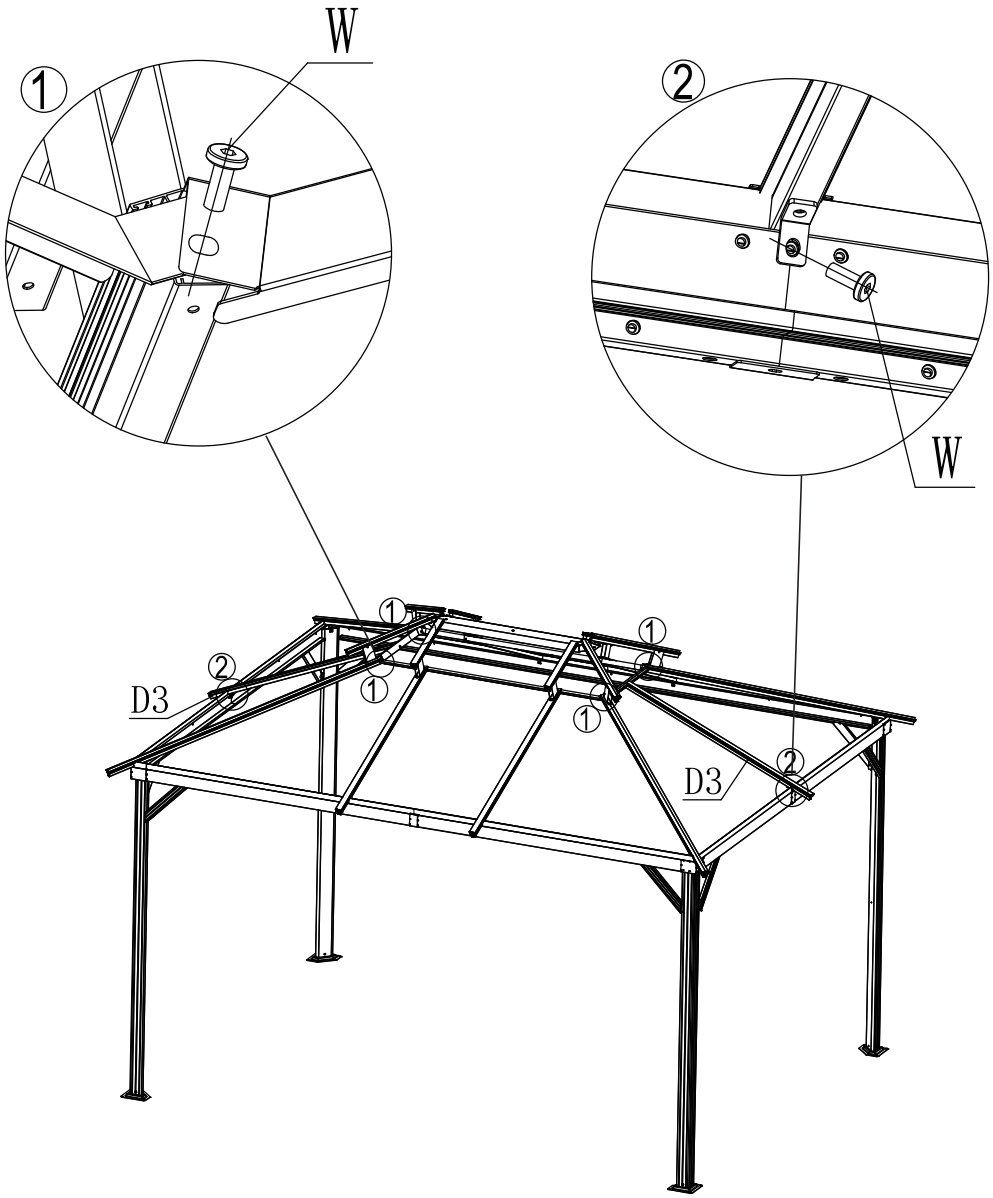
Step16




Z1

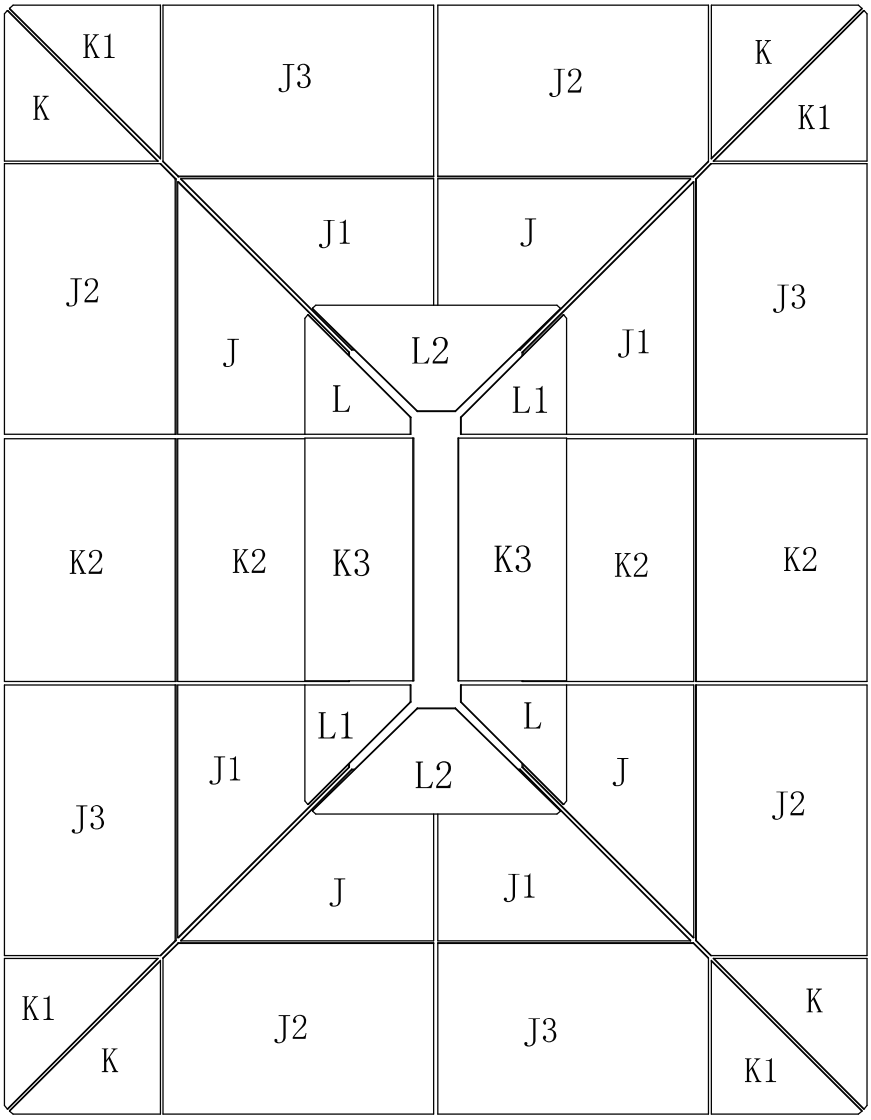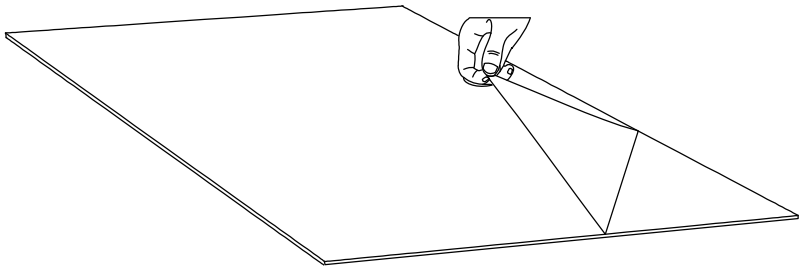Step17







Remove the protective film before installation.


No.	Qty	Picture	No.	Qty	Picture
K3	2		L	2	
L1	2		F2	4	
F1	2				
P1	4		W1	4	 M6 * 20 mm

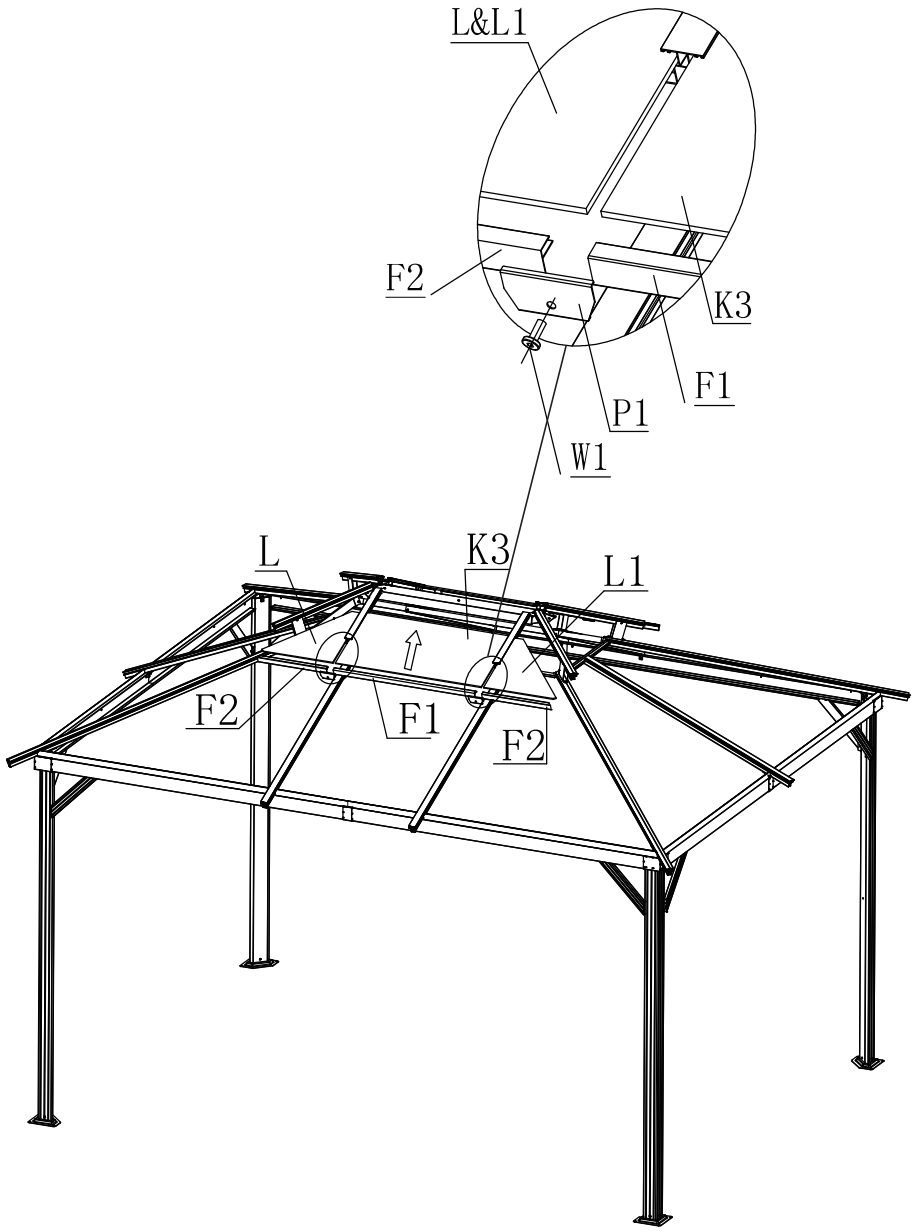Step18




Z1





No.	Qty	Picture	No.	Qty	Picture
L2	2		P	4	
G	2		W1	4	 M6 * 20 mm

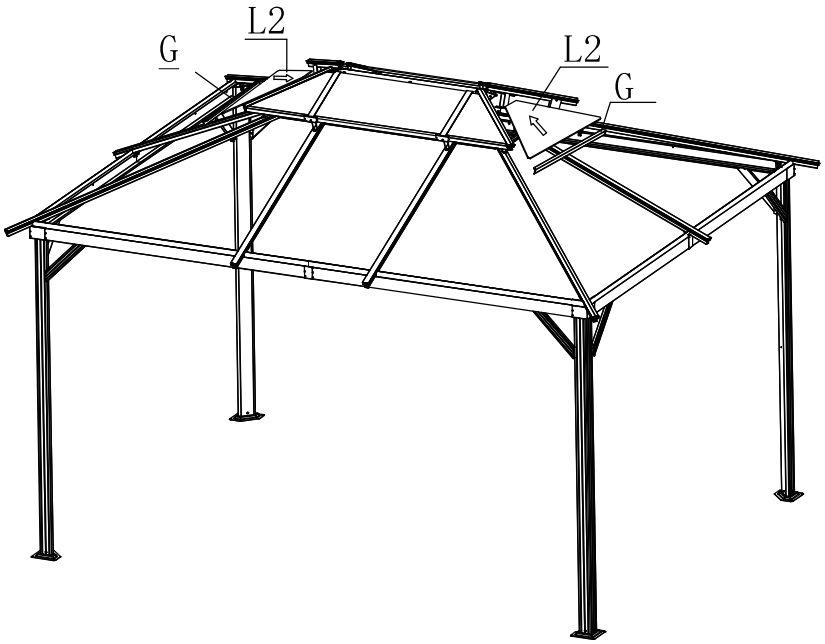
Step19



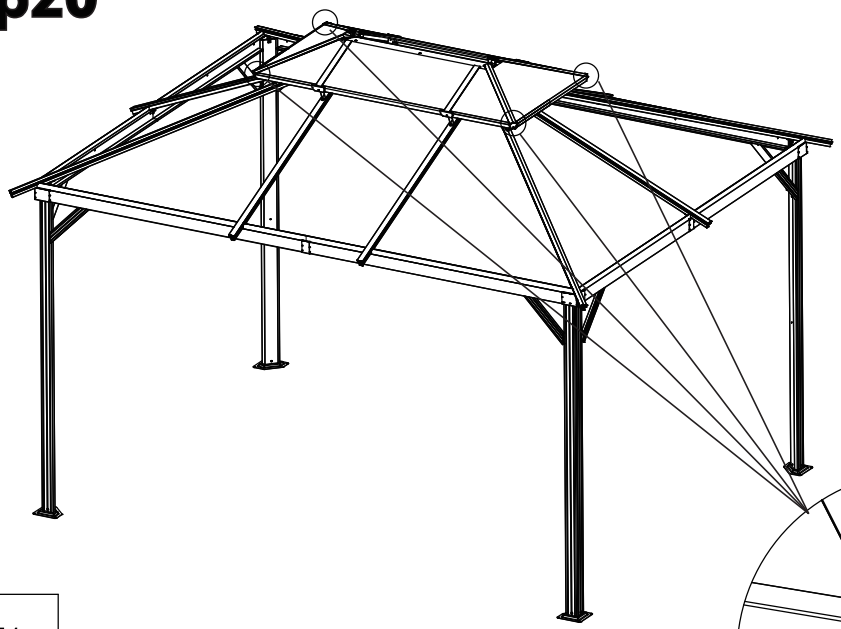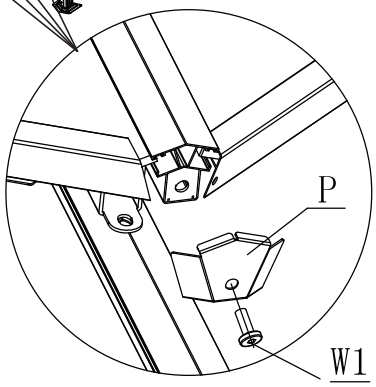Step20









No.	Qty	Picture	No.	Qty	Picture
H1	1		T1	1	
Q	1		P2	3	
Y2	3	 M6			

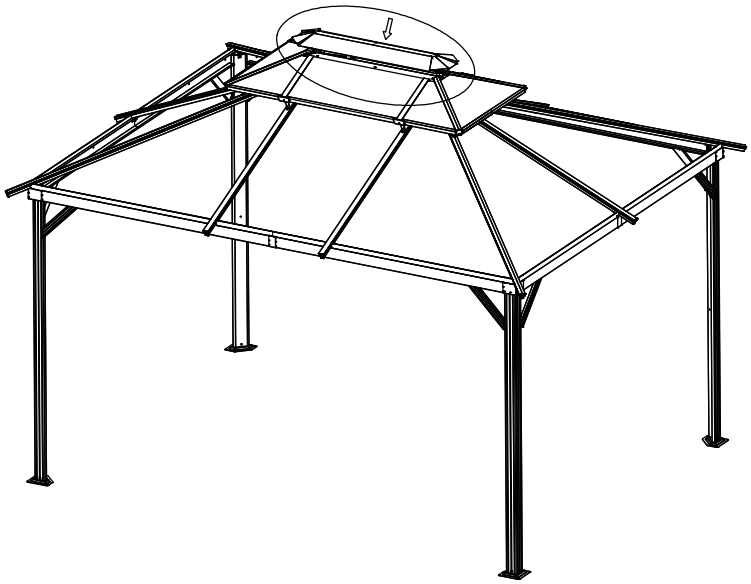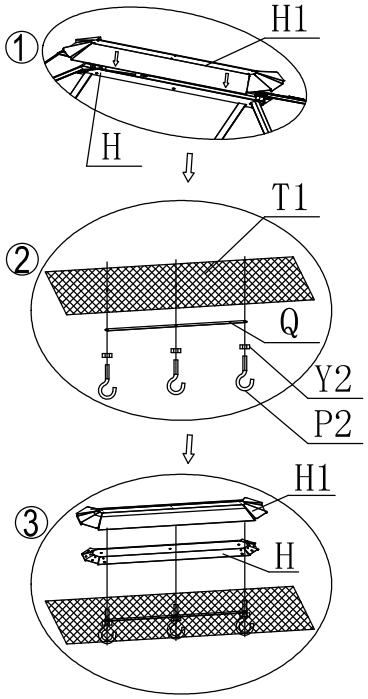
Step21










No.	Qty	Picture	No.	Qty	Picture
Q1	8		Q2	2	

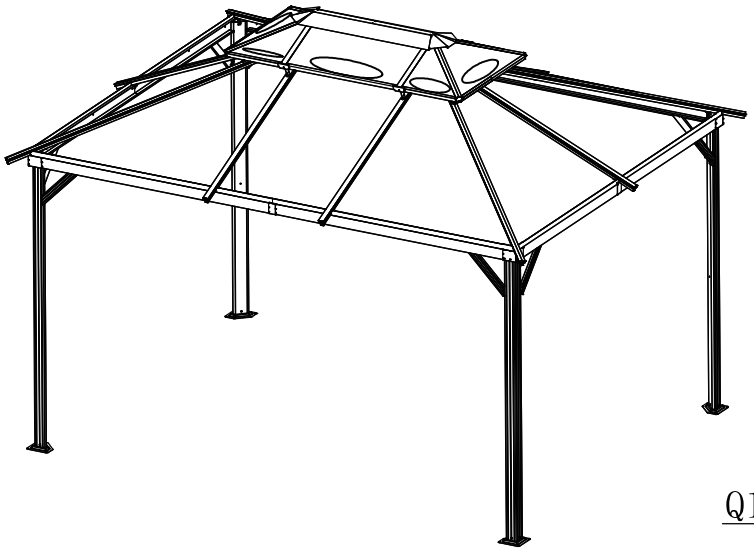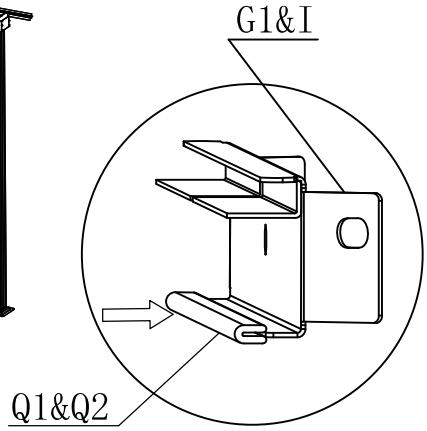
Step22







No.	Qty	Picture	No.	Qty	Picture
J	4		J1	4	
E	4		E1	4	

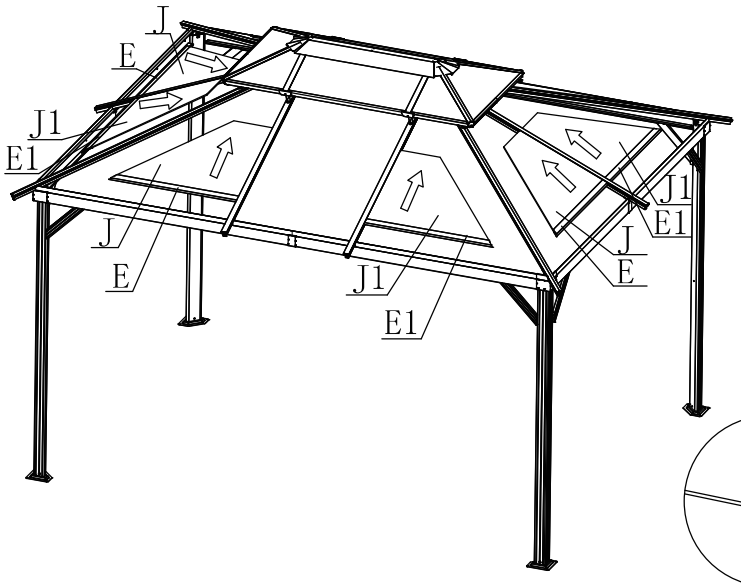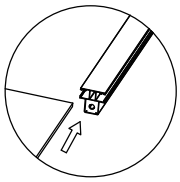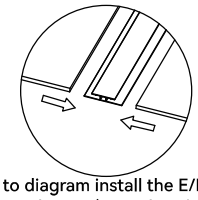
Step23










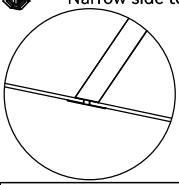
Refer to diagram install the E/E1
Narrow side top ↑ / Wide side base ↓




No.	Qty	Picture	No.	Qty	Picture
J2	4		J3	4	

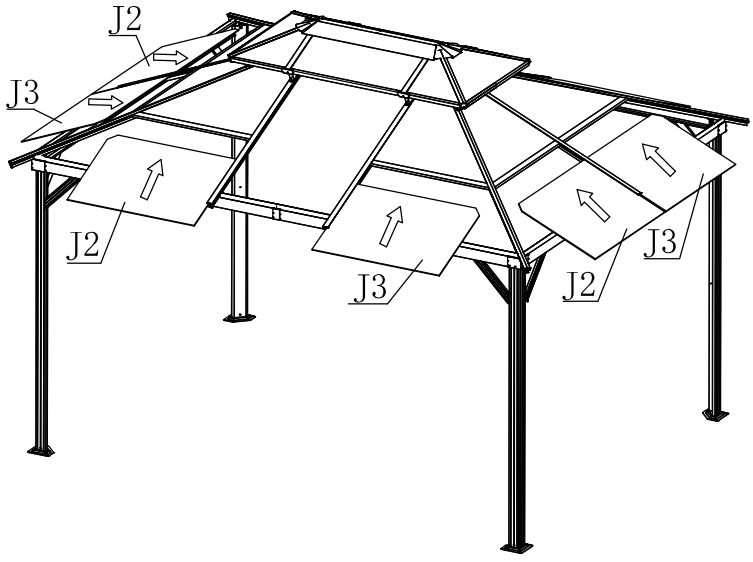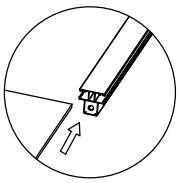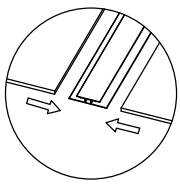
Step24










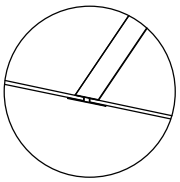Refer to diagram install the E/E1
Narrow side top ↑ / Wide side base ↓




No.	Qty	Picture	No.	Qty	Picture
K	4		K1	4	
E2	4		E3	4	

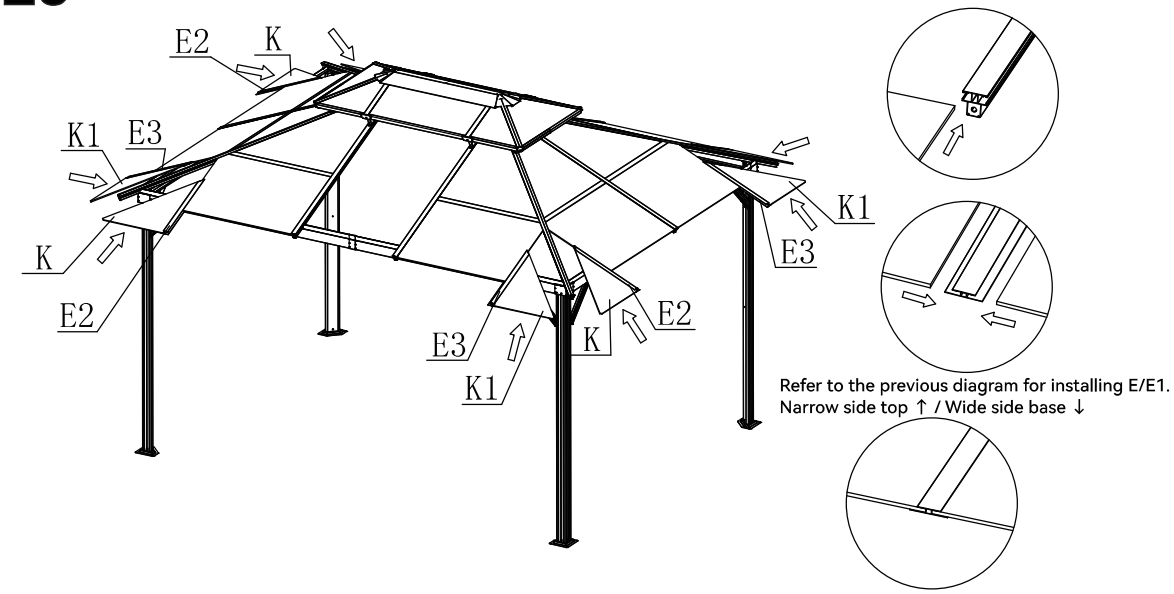
Step25



Refer to the previous diagram for installing E/E1.
Narrow side top ↑ / Wide side base ↓

No.	Qty	Picture	No.	Qty	Picture
K2	4		E4	2	

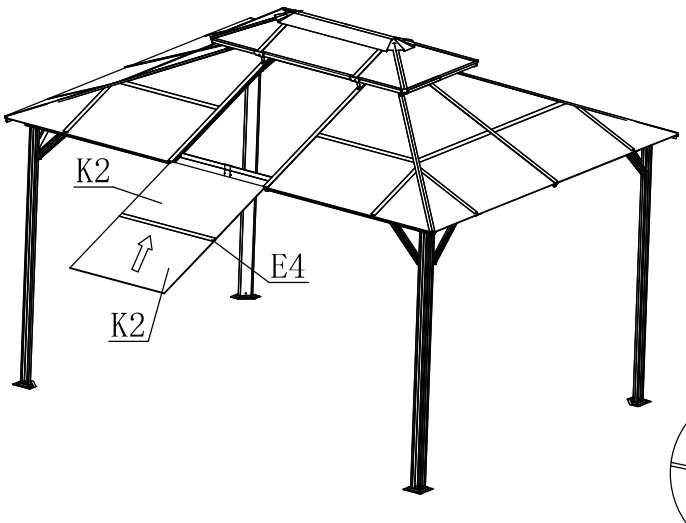
Step26



Refer to Diagram Install the E4
Narrow side Top ↑ / Wide side Base ↓


No.	Qty	Picture	No.	Qty	Picture
F	8		P	4	
F1	2		P1	6	
			W1	10	 M6 * 20 mm

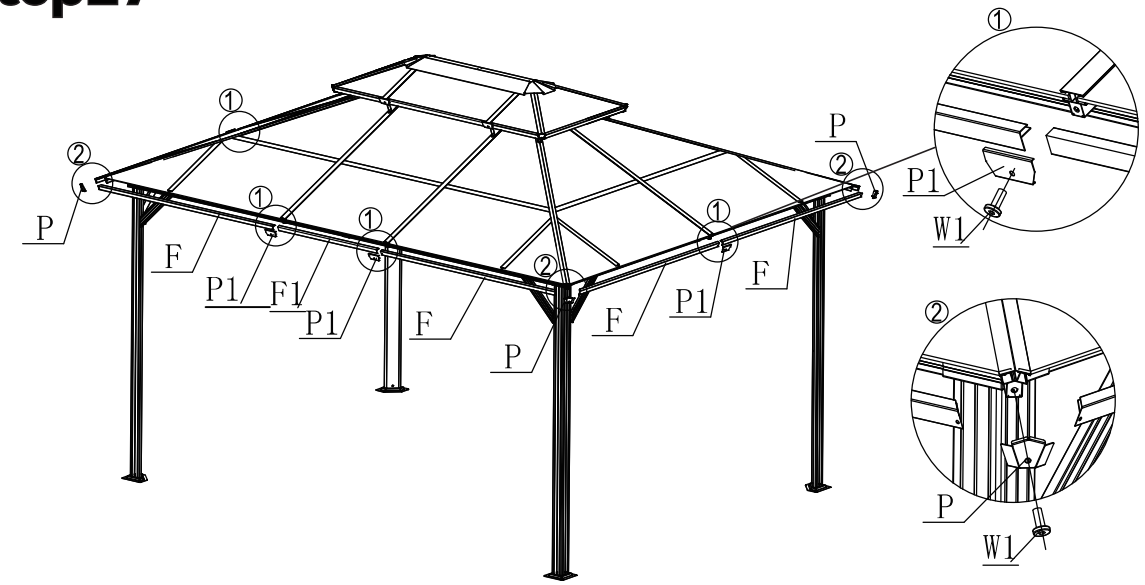
Step27




No.	Qty	Picture	No.	Qty	Picture
U	80		U1	8	 Ø11 * Ø 6* 20mm
X	8	 M6 * 35 mm			

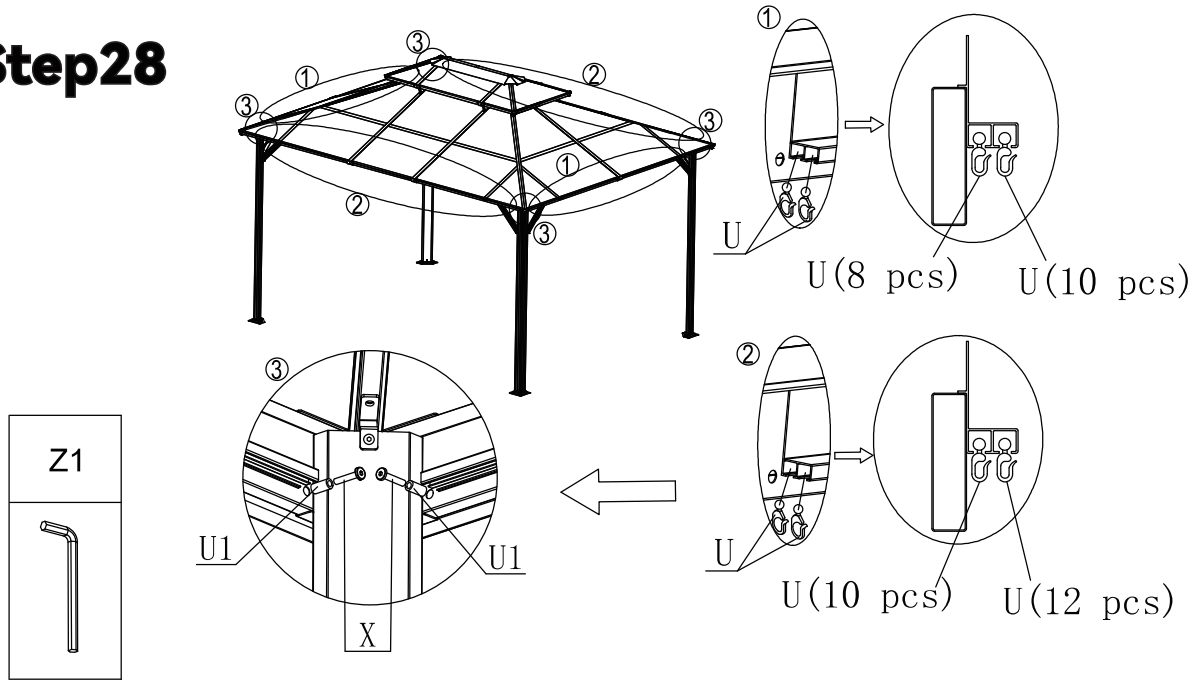Step28





No.	Qty	Picture
S	4	 Curtain

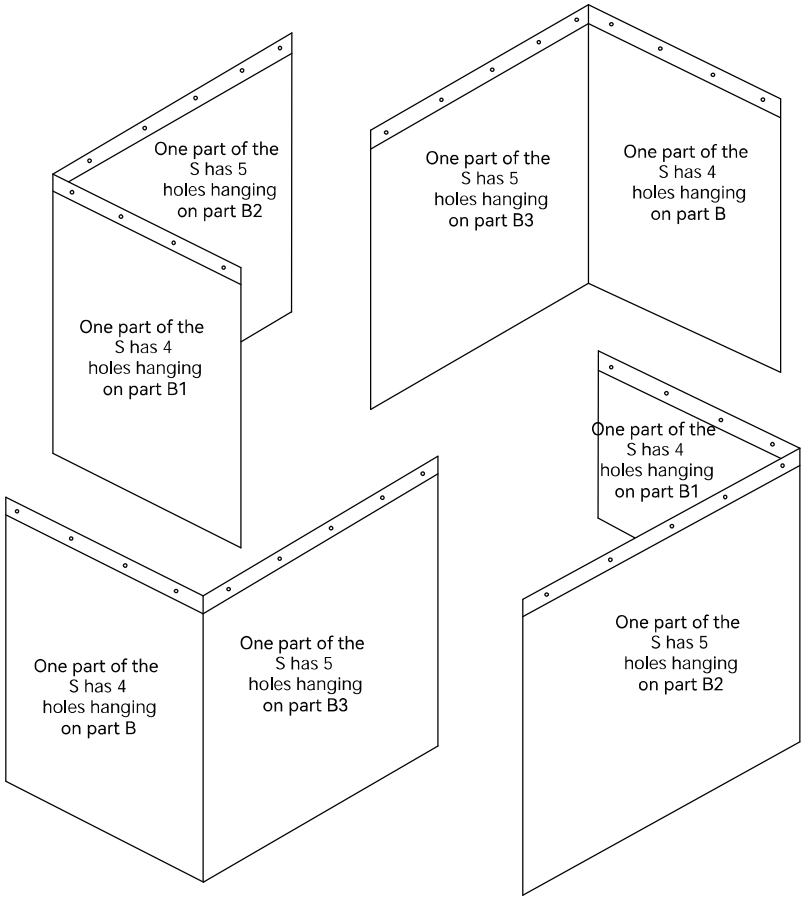Step29




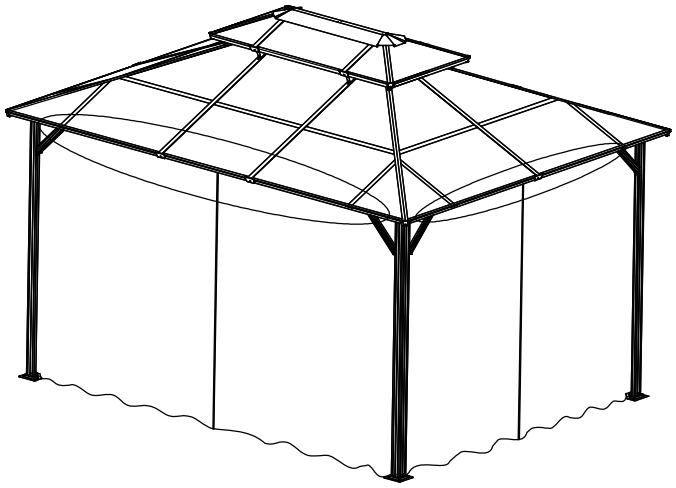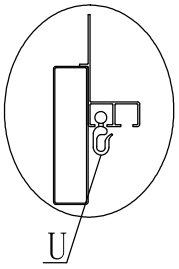Step30






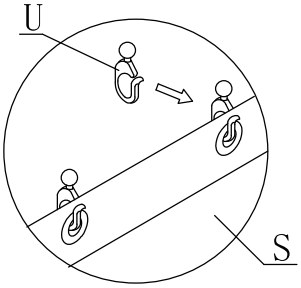Pay attention to the sidewall curtain's installation position.





No.	Qty	Picture
T	4	Net

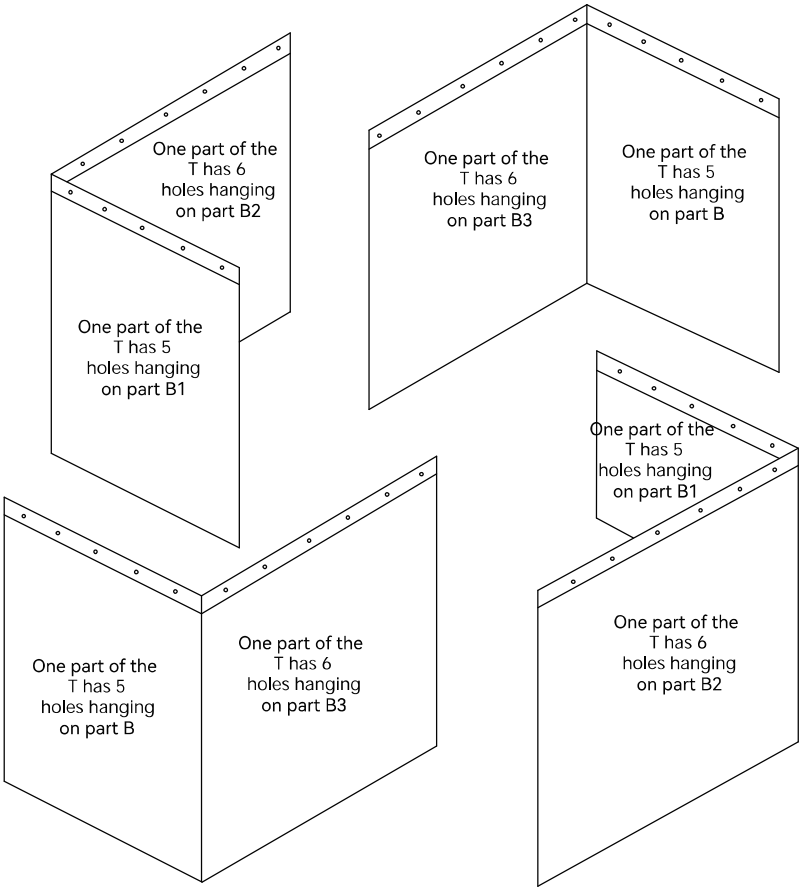Step31




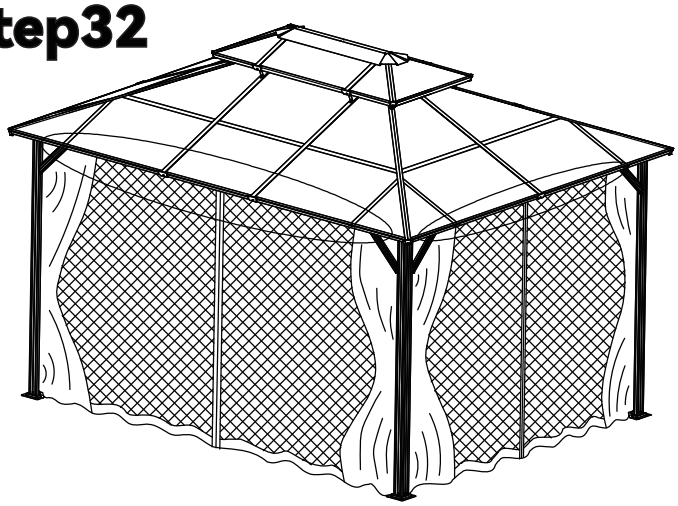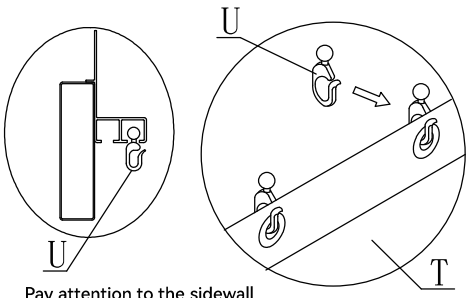Step32





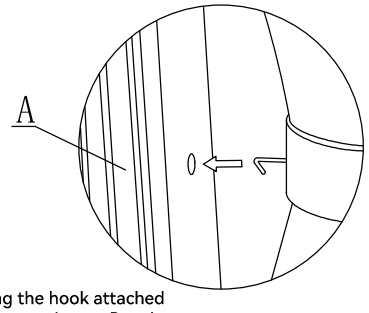
Pay attention to the sidewall netting's installation position.




Hang the hook attached to the netting on Part A.

No.	Qty	Picture
Z	12	

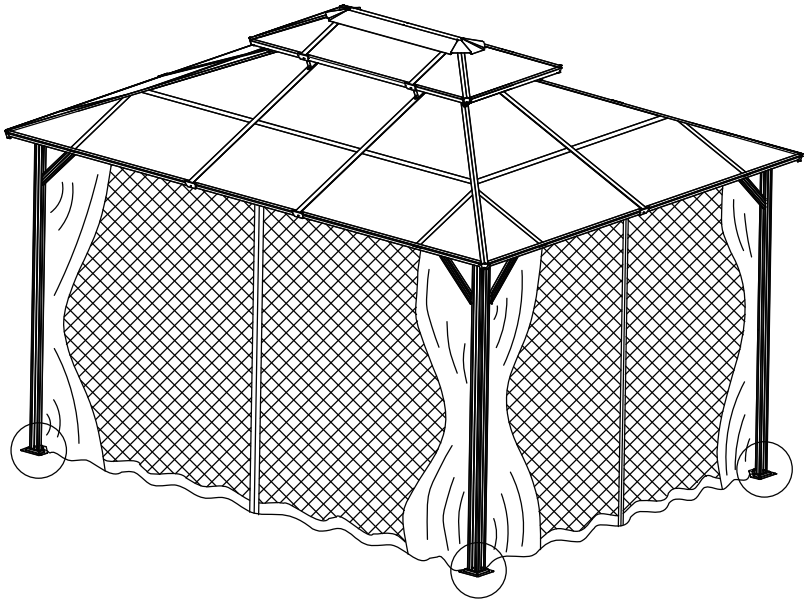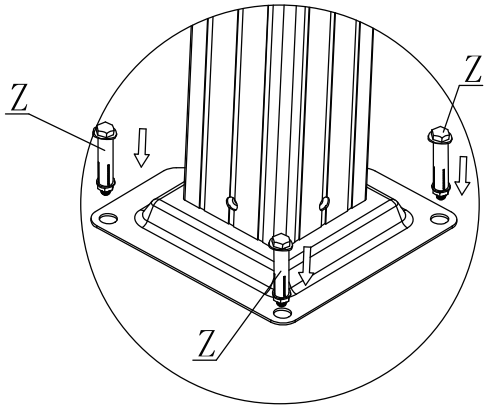Step33





Z2
