

**1. LAY BENCH SEAT (PART A) ON A FLAT SURFACE WITH THE SIDE WITH THE TWO SLATS FACING UP.**



**2. SET THE BENCH LEGS (PART B) NARROW END DOWN ON THE OUTSIDE OF THE SLATS. THESE WILL LINE UP WITH THE HOLES IN THE BENCH SEAT, BUT SHOULD NOT BE BOLTED DOWN YET.**




**PART - A**




**PART - B**




**3. THREAD ONE LARGE NUT ONTO THE ENDS OF THE TWO IRON RODS (PART C) AS FAR AS THEY WILL GO ON. INSERT THE IRON RODS IN PARALLEL INTO THE TOP AND BOTTOM OF THE LEGS AND PULL THE LEGS INTO POSITION NEXT TO THE BENCH SEAT SLATS, LINING UP THE SCREW HOLES.**

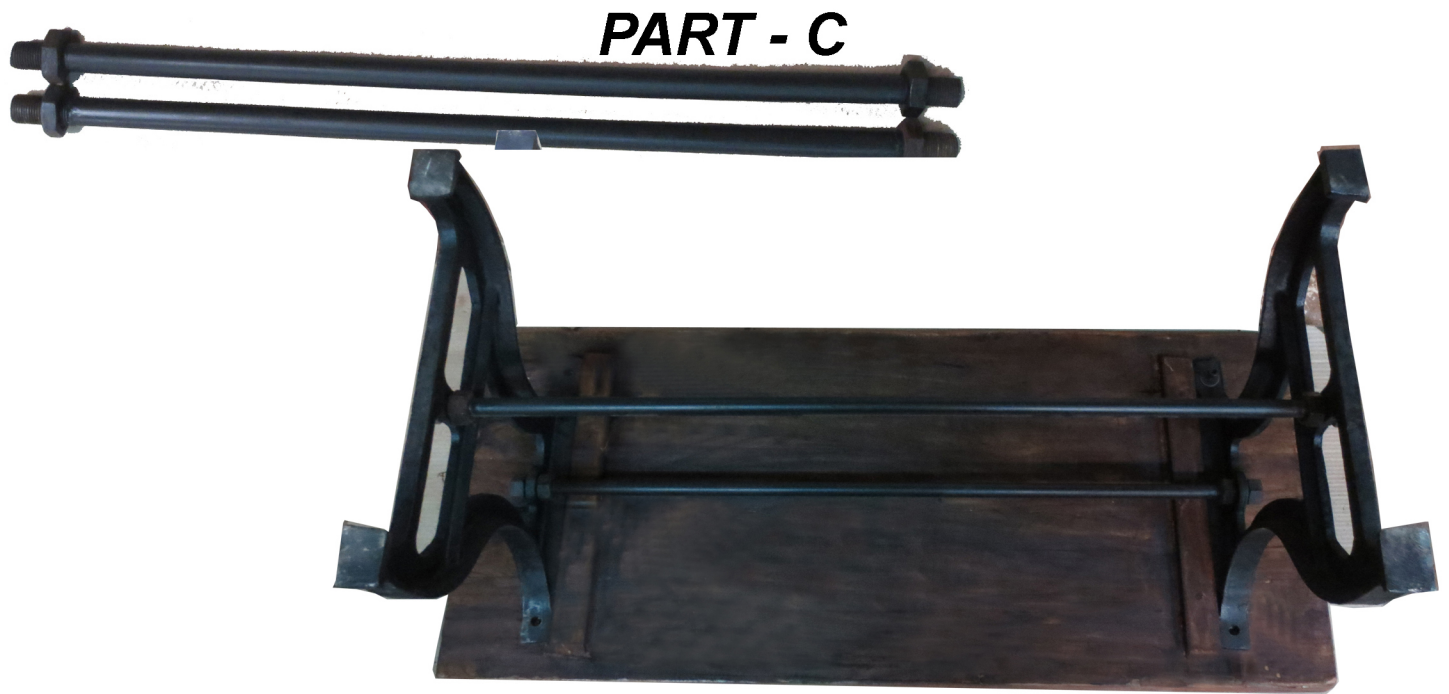

**4. INSERT THE BOLTS WITH WASHERS THROUGH THE LEGS INTO THE BENCH SEAT HOLES AND TIGHTEN WITH HEX WRENCH.**

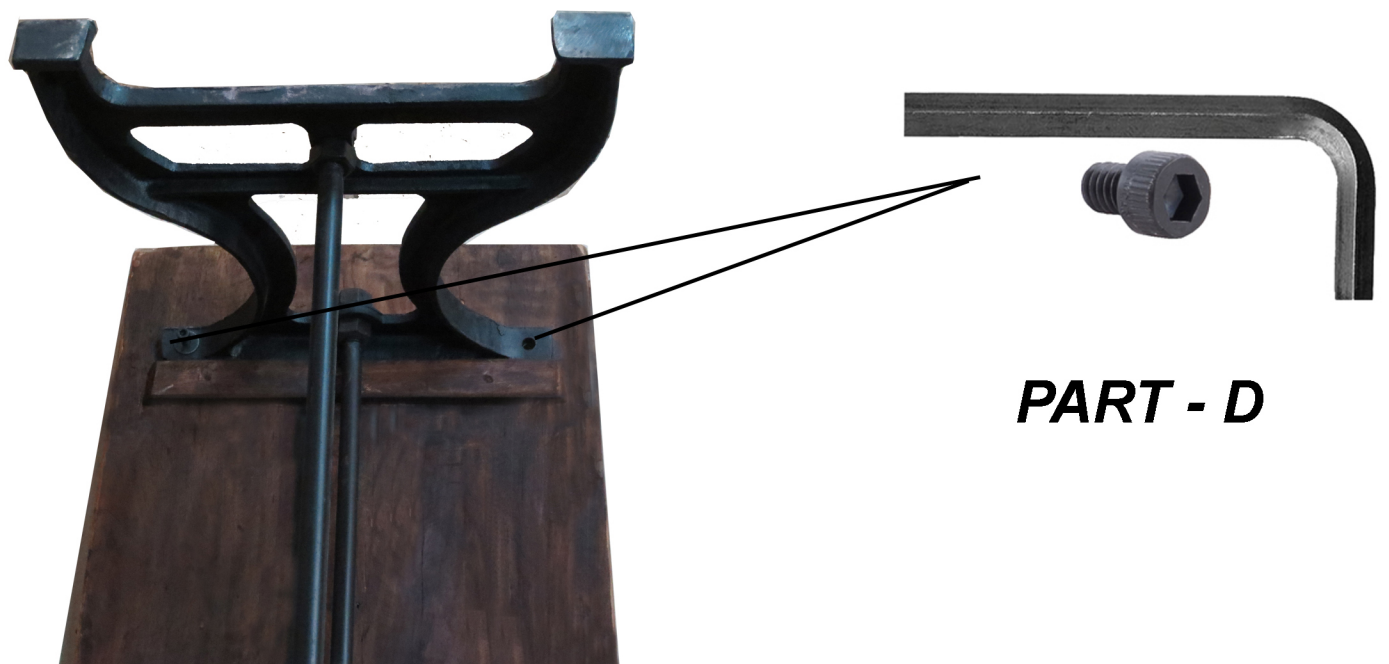

**5. ADD THE REMAINING LARGE NUTS ONTO THE IRON RODS ON THE OUTSIDE OF THE LEGS, AND TIGHTEN THE NUTS ON BOTH SIDES OF THE LEGS UNTIL SNUGGED UP AGAINST THE LEGS USING WRENCH.**

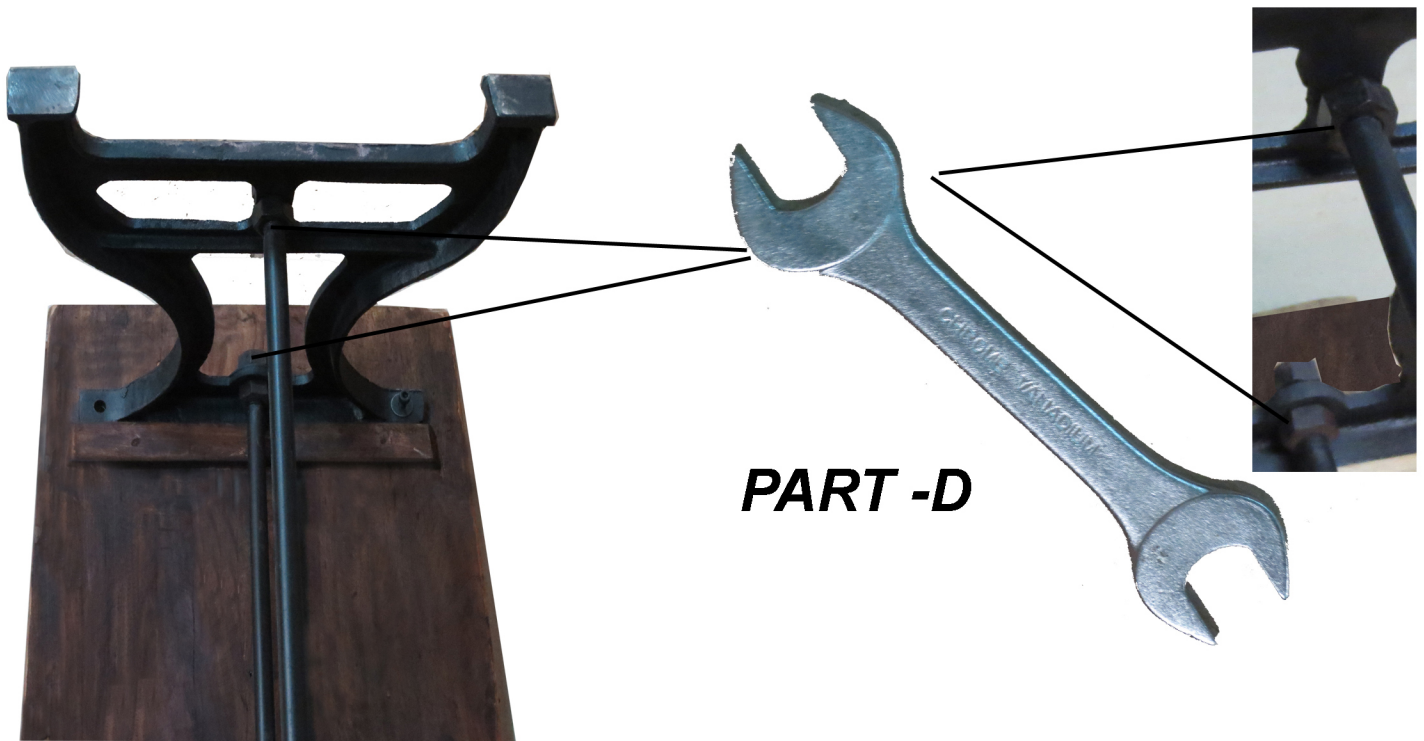

**6. TURN THE BENCH OVER TO USE.**

