

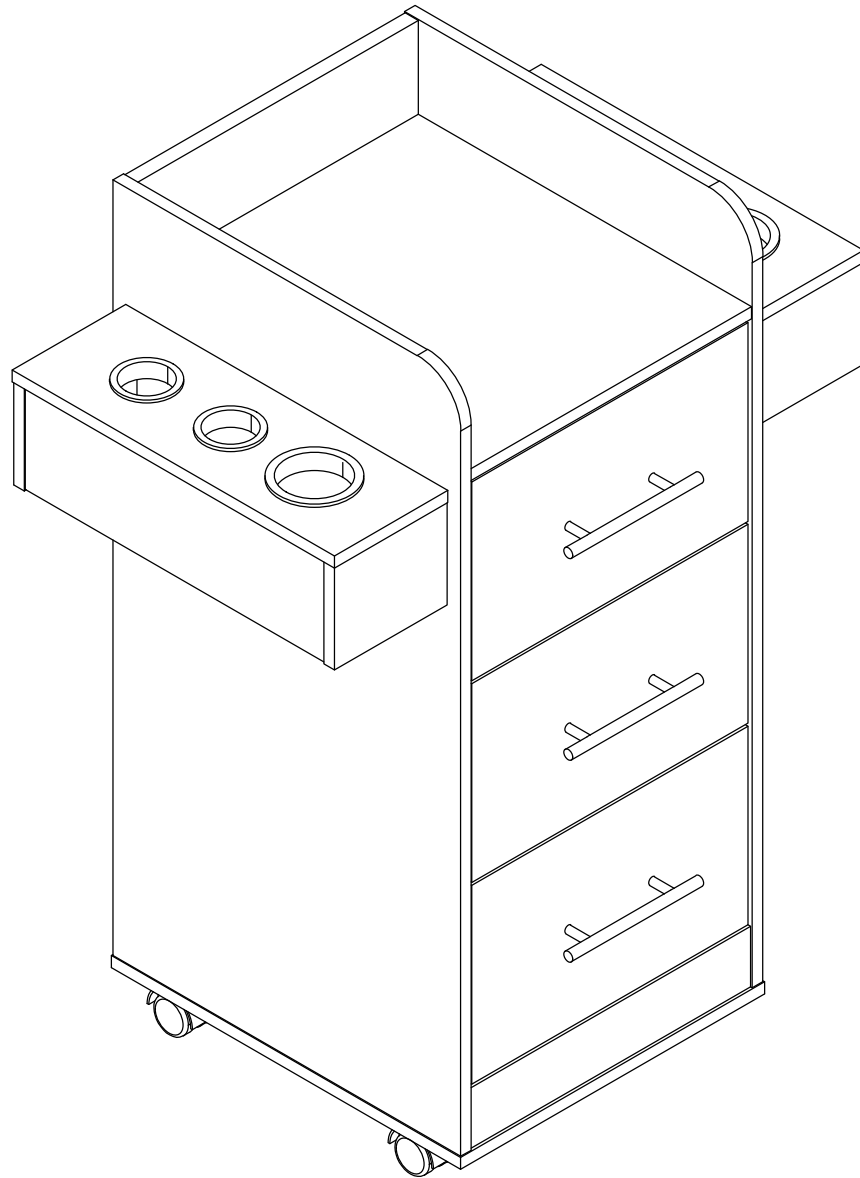


SKU:SF001018WH

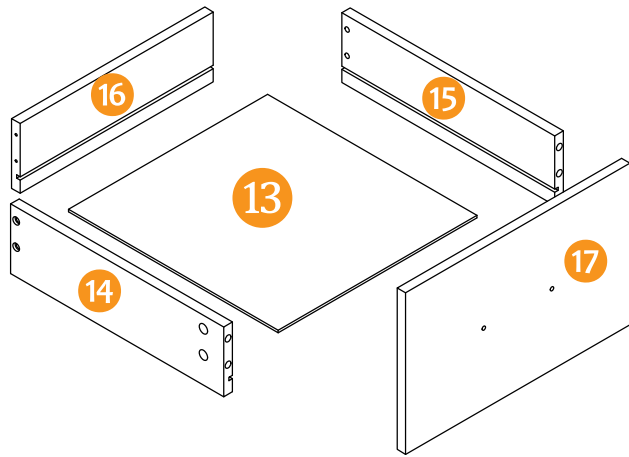

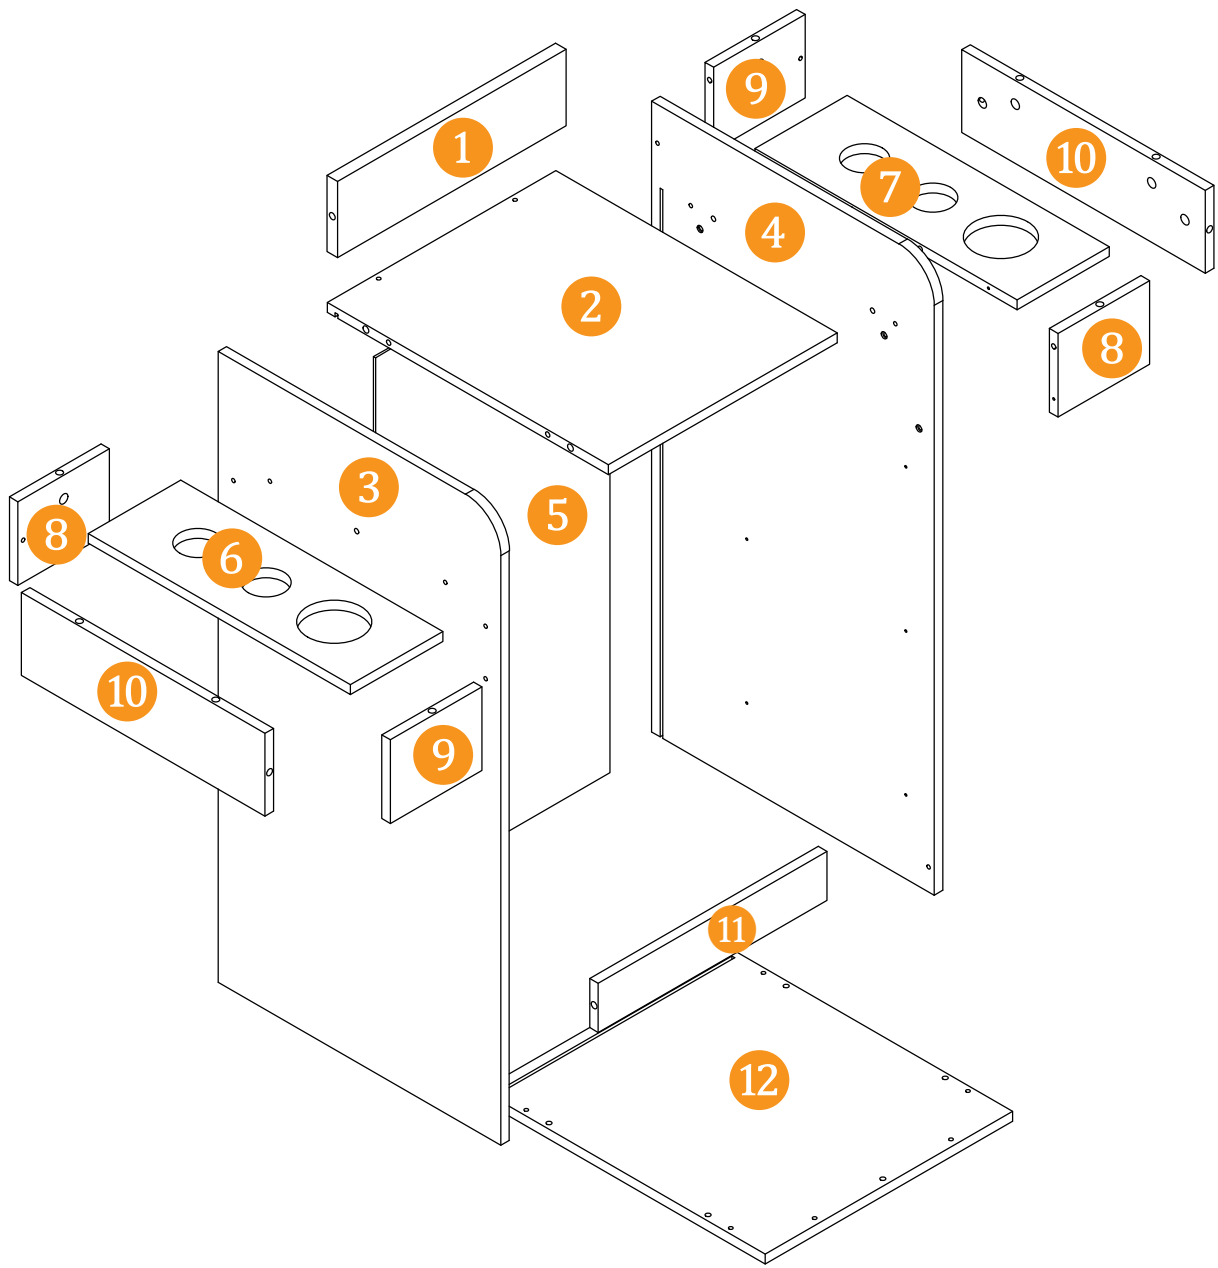


x3PCS

Before You Start


1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw

Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process

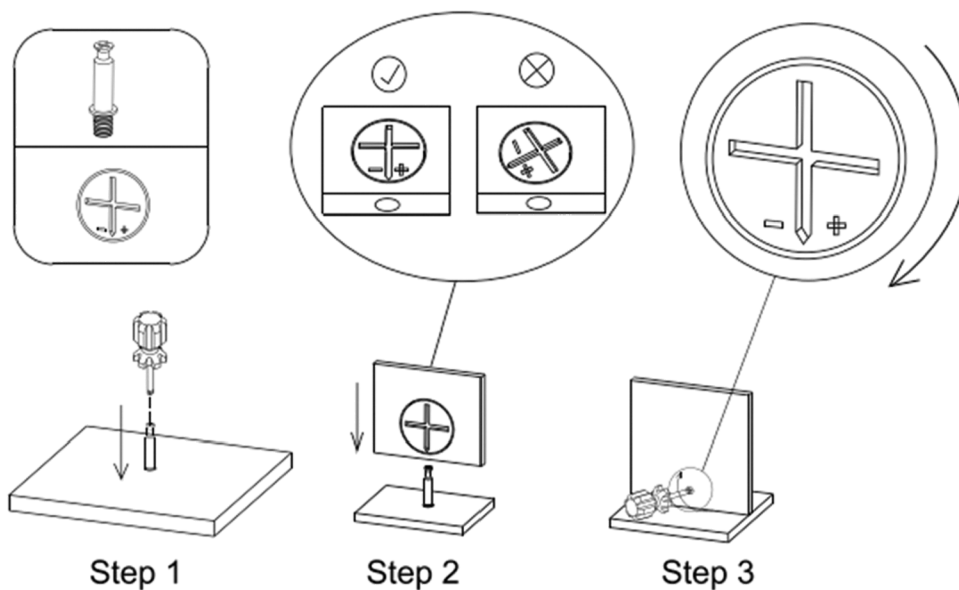


Parts List

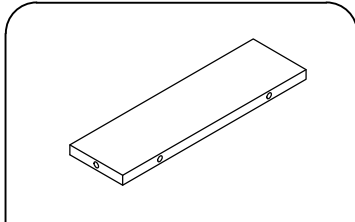


1

1PC

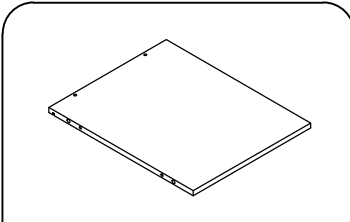


2

1PC

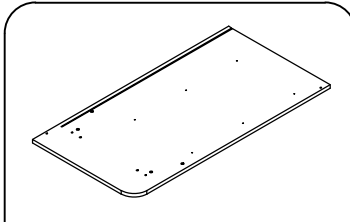


3

1PC

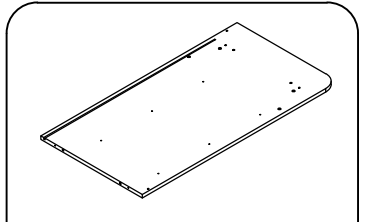


4

1PC

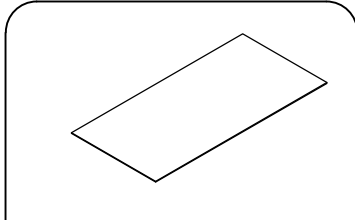


5

1PC

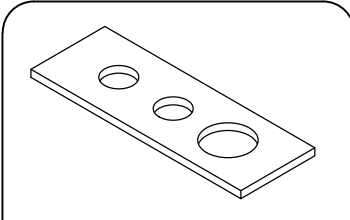


6

1PC

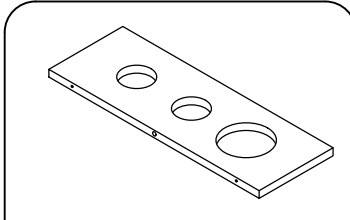


7

1PC

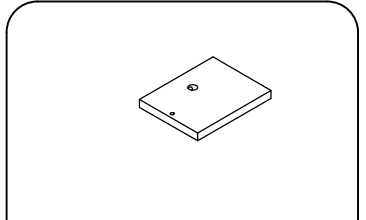


8

2PCS

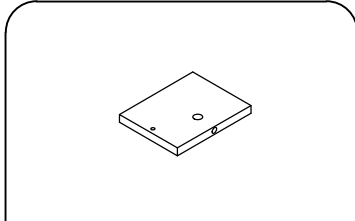


9

2PCS

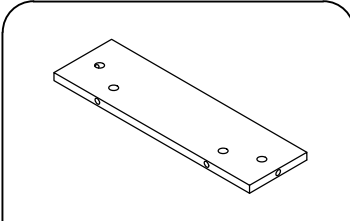


10

2PCS

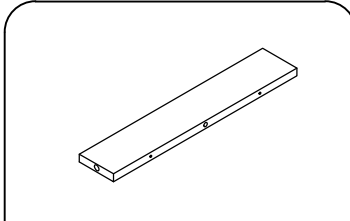


11

1PC

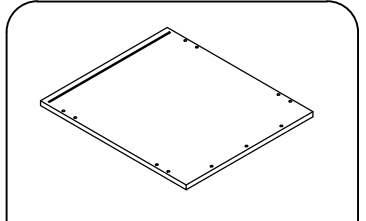


12

1PC

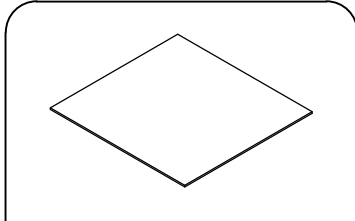


13

3PCS

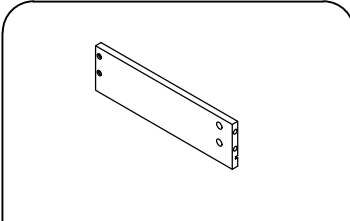


14

3PCS

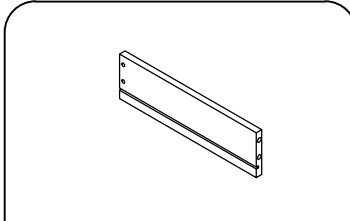


15

3PCS

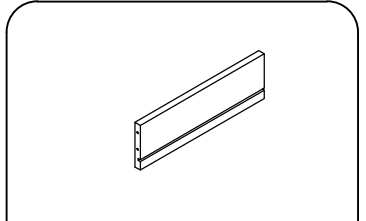

16
















3PCS

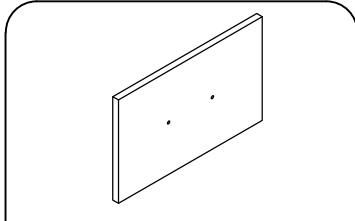




17

3PCS




Hardware List

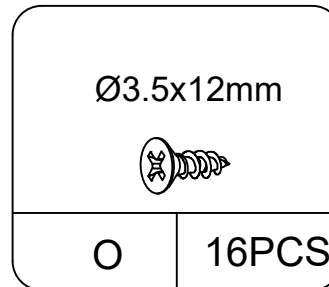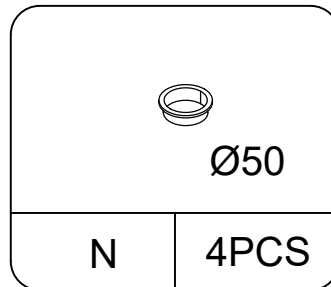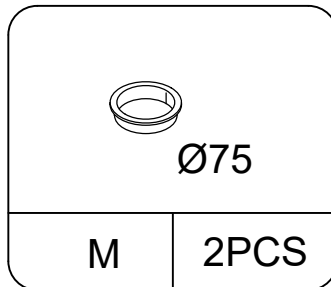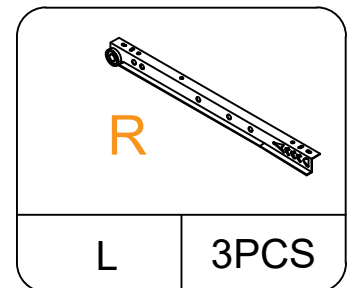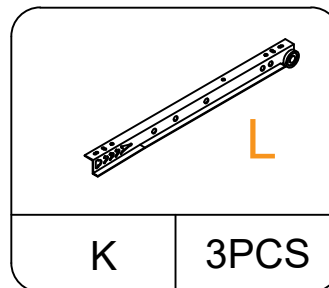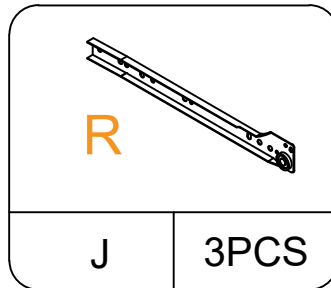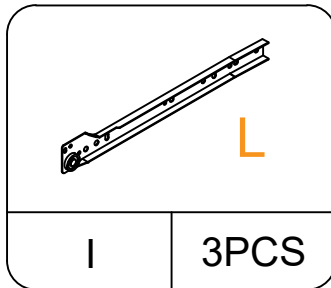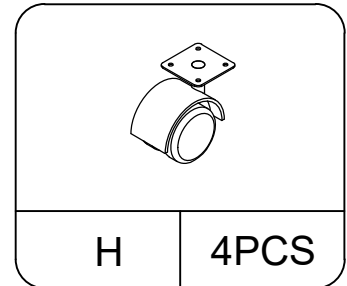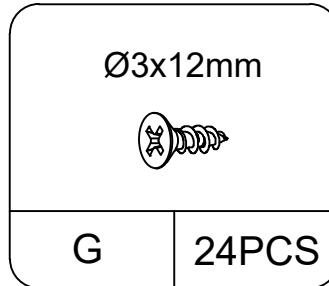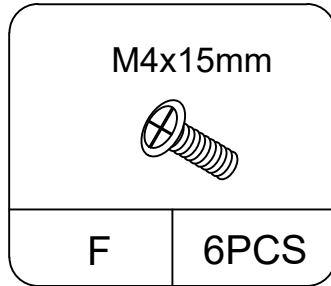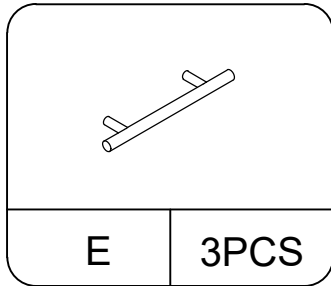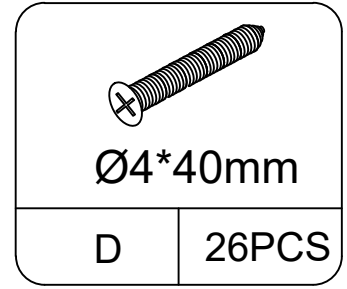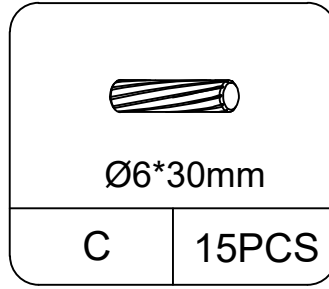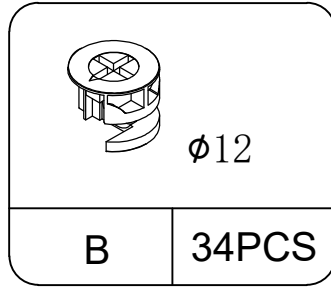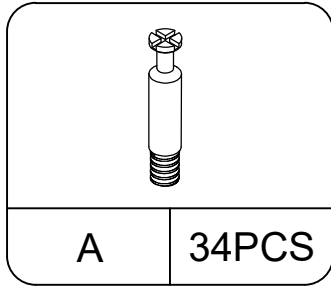




STEP 1

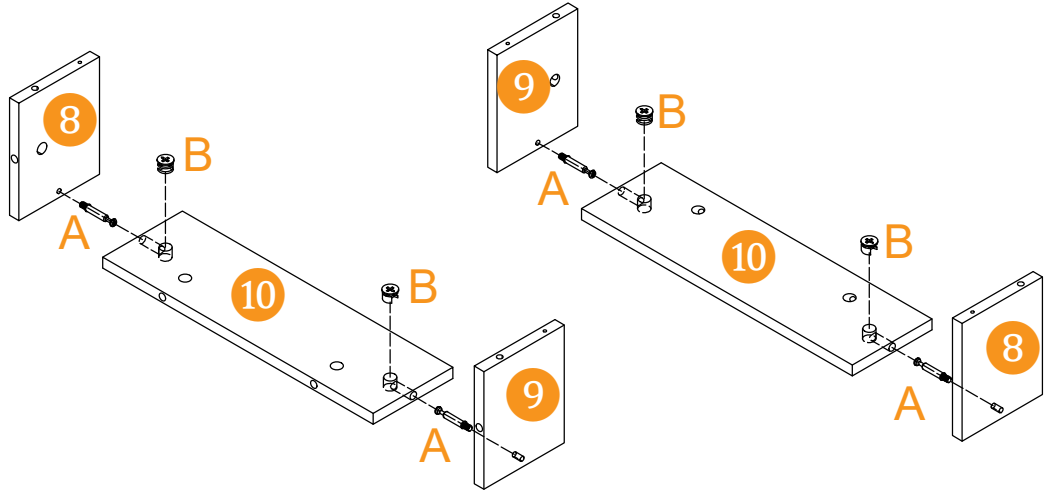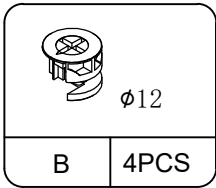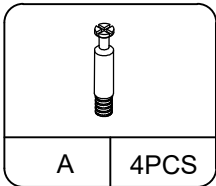

STEP 2

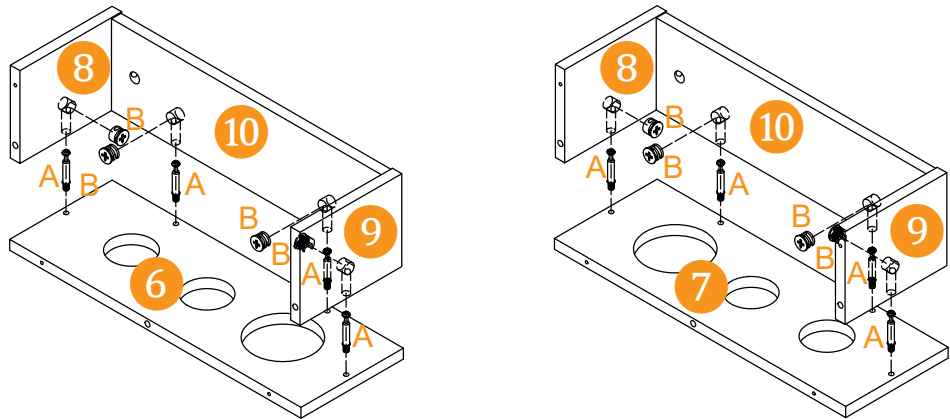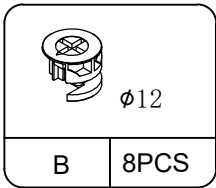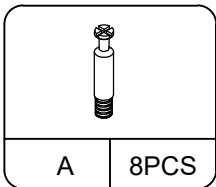


STEP 3

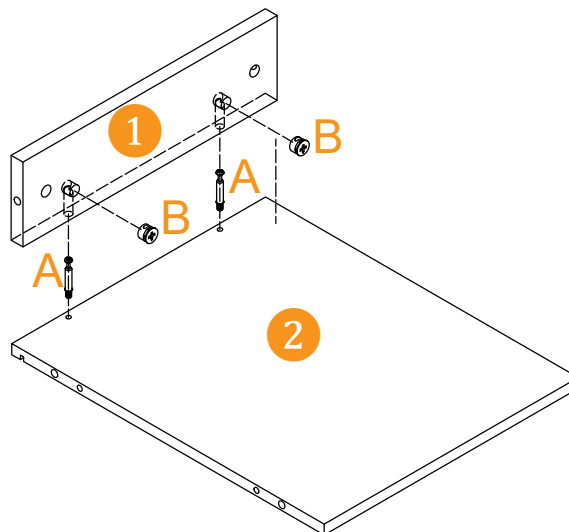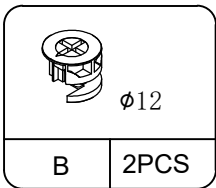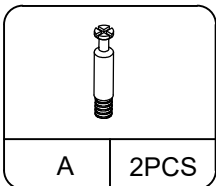

STEP 4


Ø3x12mm			
G	12PCS	I	3PCS

I	3PCS	J	3PCS




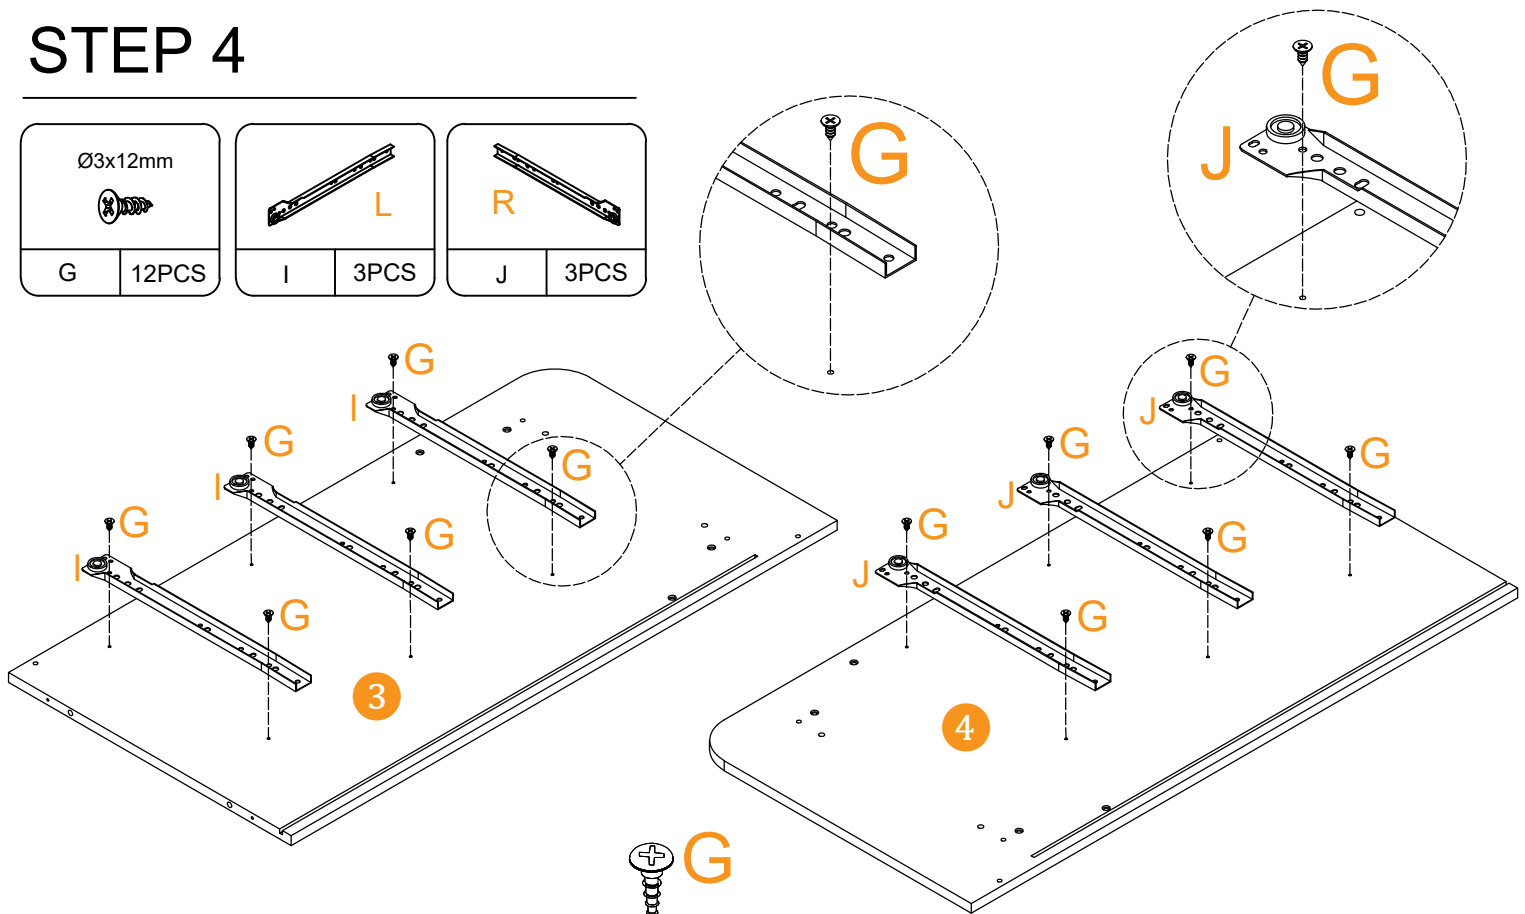


STEP 5





Ø6*30mm			
C	6PCS	D	8PCS

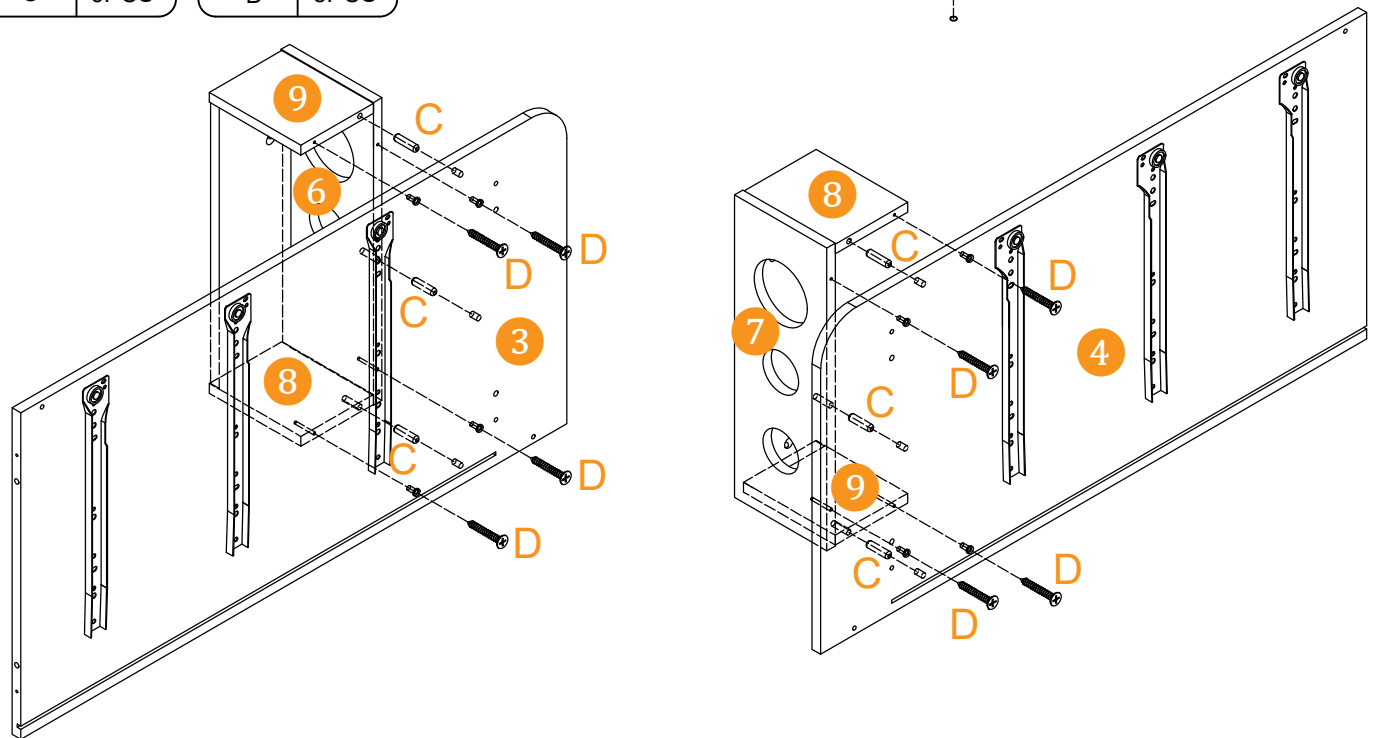


STEP 6

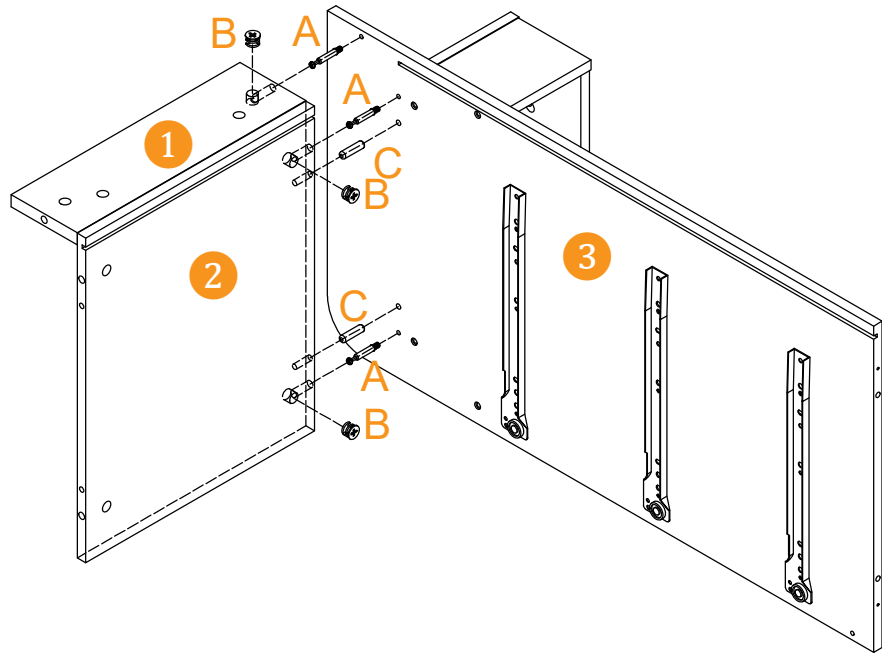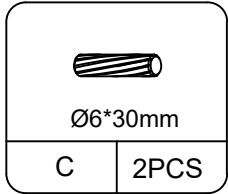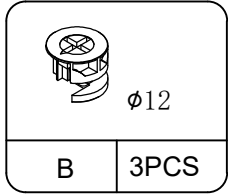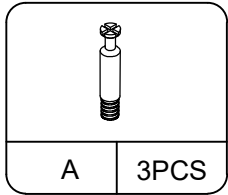




STEP 7

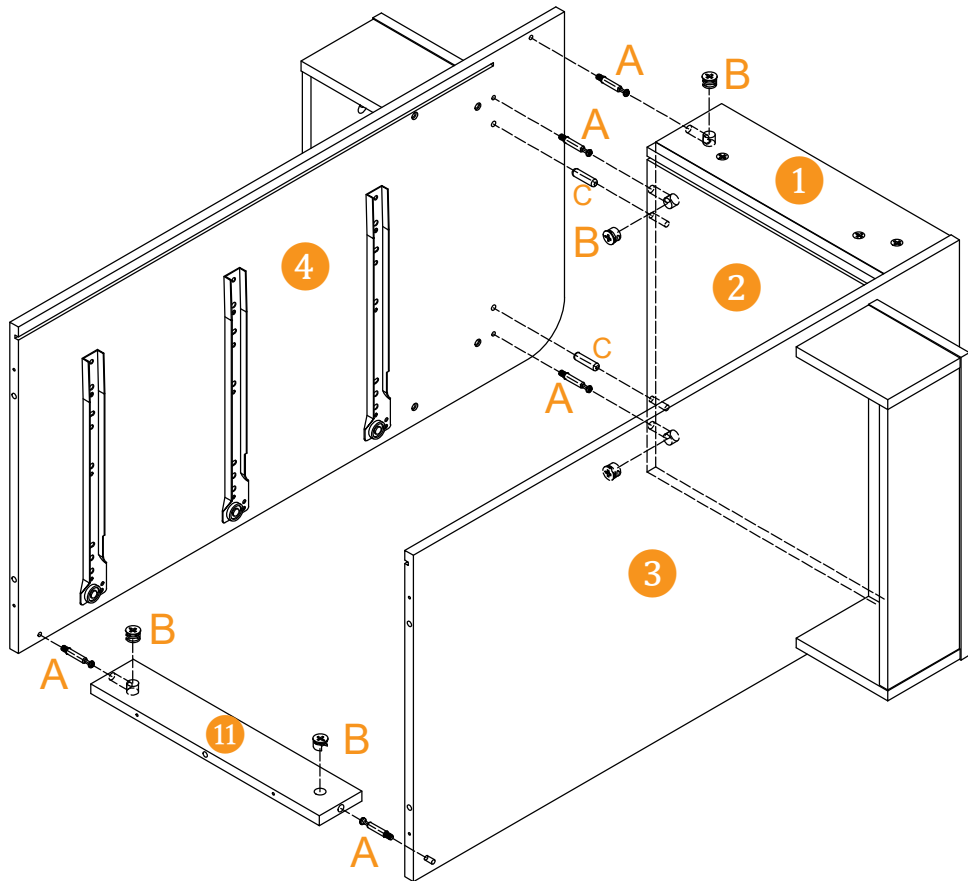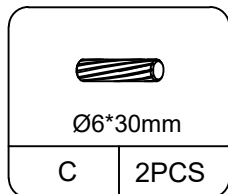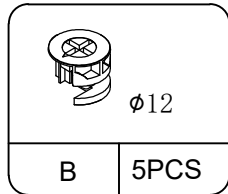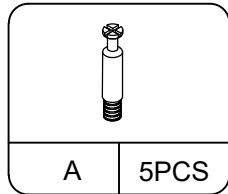


STEP 8

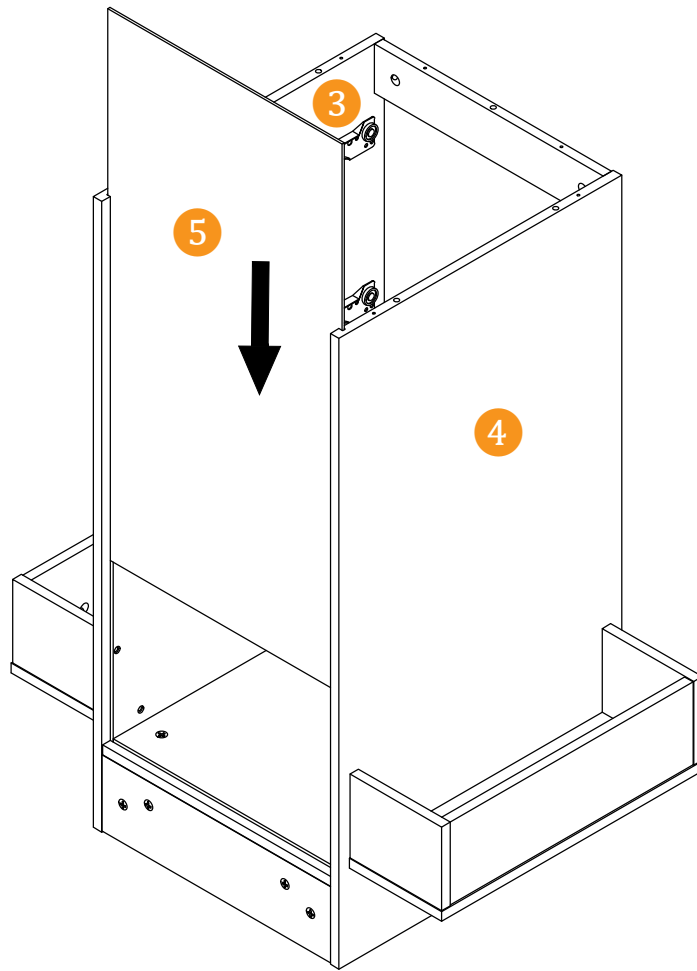

STEP 9

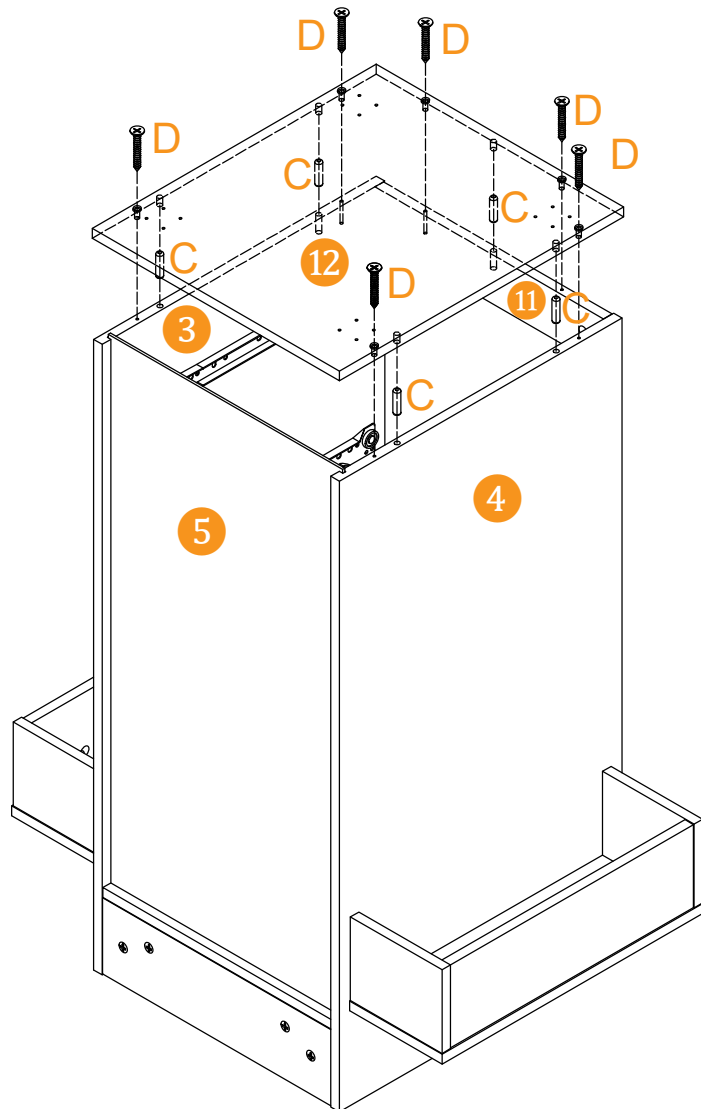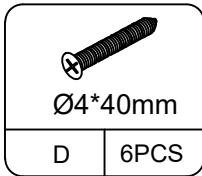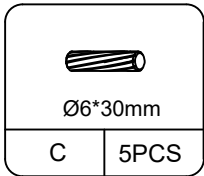

STEP 10




H 4PCS

Ø3.5x12mm



O 16PCS

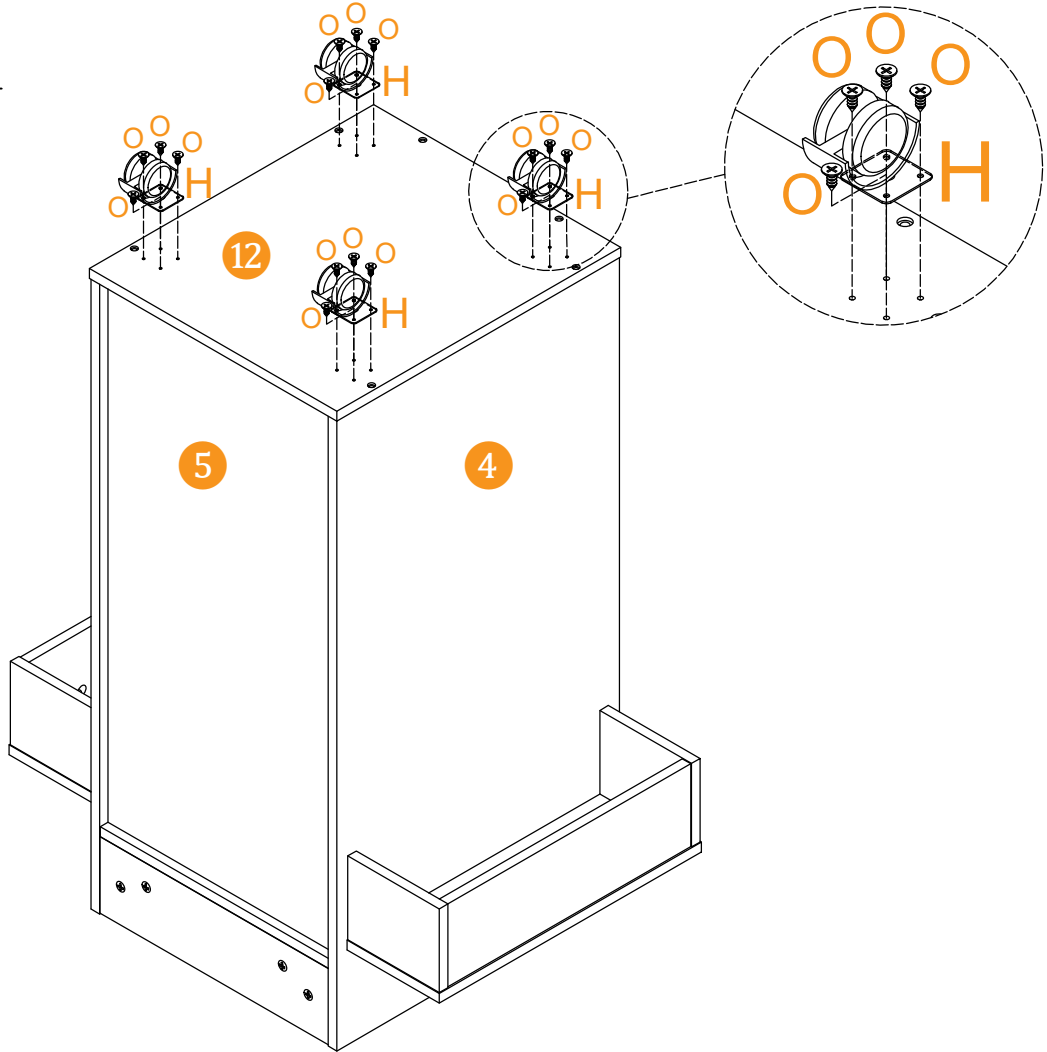


STEP 11




Ø4*40mm

D 12PCS

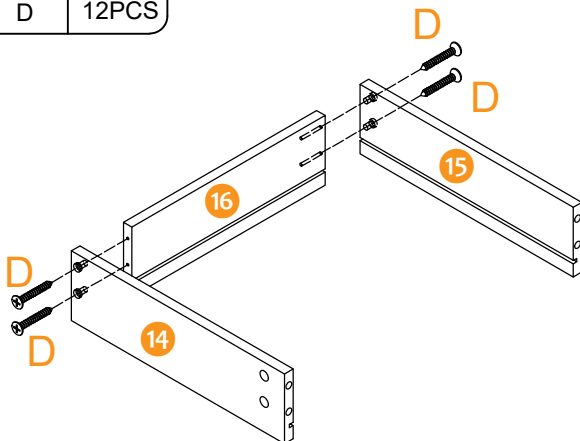



x3PCS

STEP 12

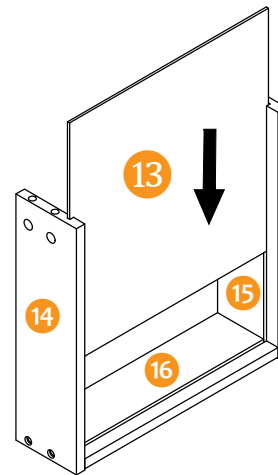



x3PCS

STEP 13

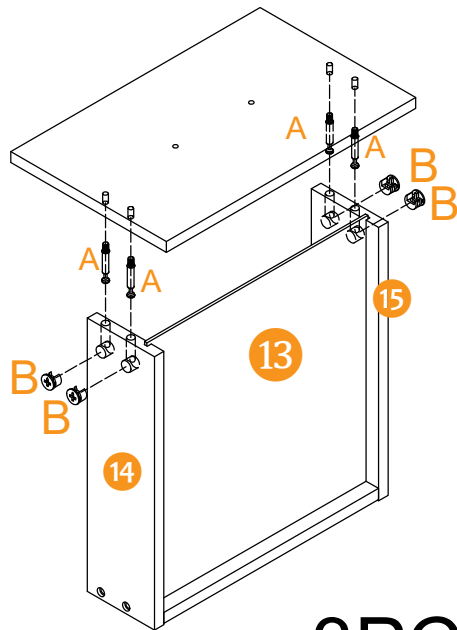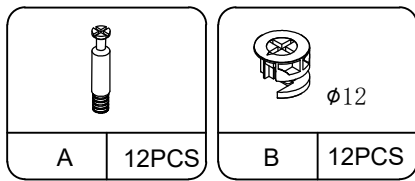





x3PCS

STEP 14

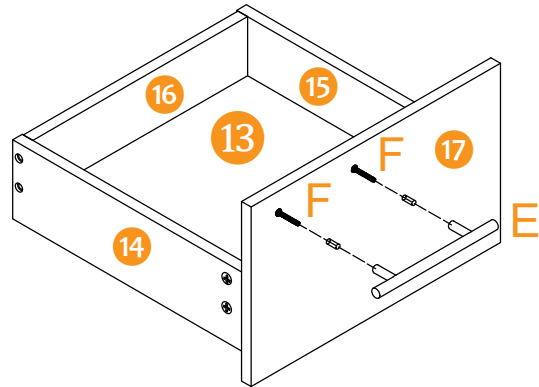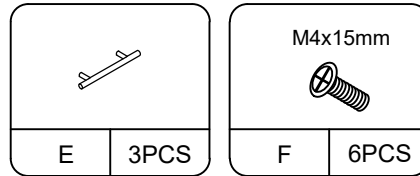


x3PCS


STEP 15

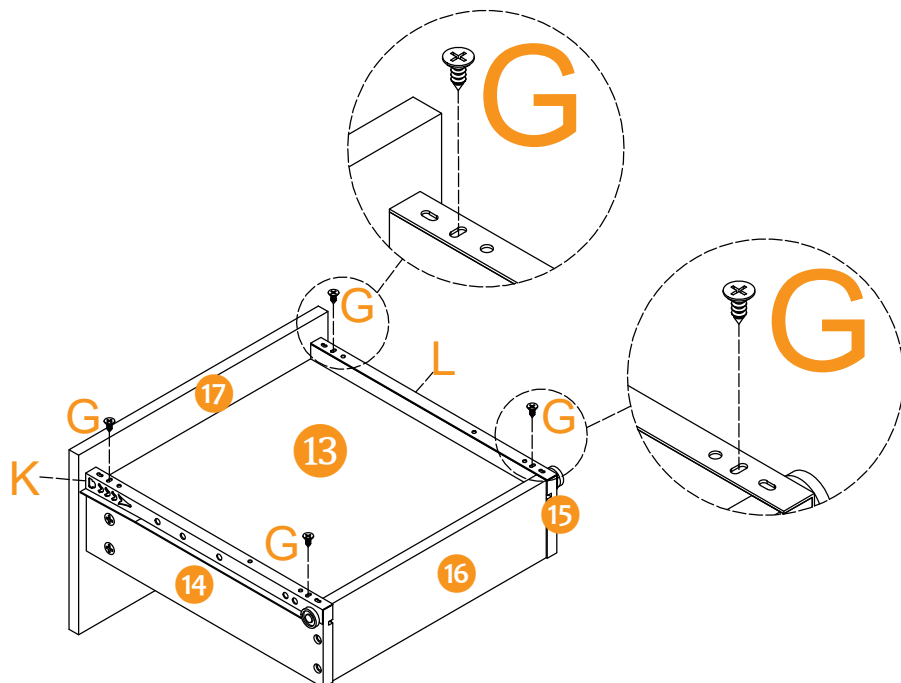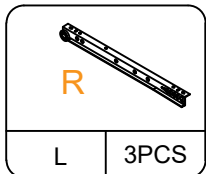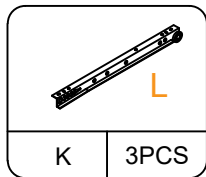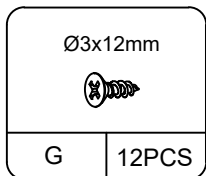

x3PCS

STEP 16

 Ø75	
M	2PCS

 Ø50	
N	4PCS

