
Office Desk

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

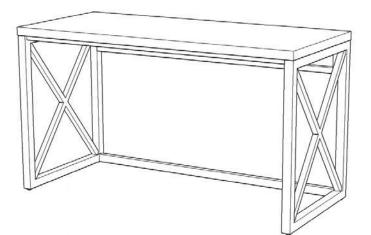


Part List	
A. Top 1 pc.	
D. Front Rail 1 pc.	B. C.
E. Stretcher 1 pc.	Side Frame Side Frame 1 pc. 1 pc.
F. Back Frame 1 pc. Hardware List	G. Stretcher 1 pc.
Small Hex Wrench 1 pc. 1 pc. 4 pcs.(+1 extra)	M6x16 Head Cap Bolt 18 pcs.(+1 extra)

Tools required for assembly : Level

Assembly Instructions 2/3

IMPORTANT


- * Do not tighten up all the Head Cap Bolts until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

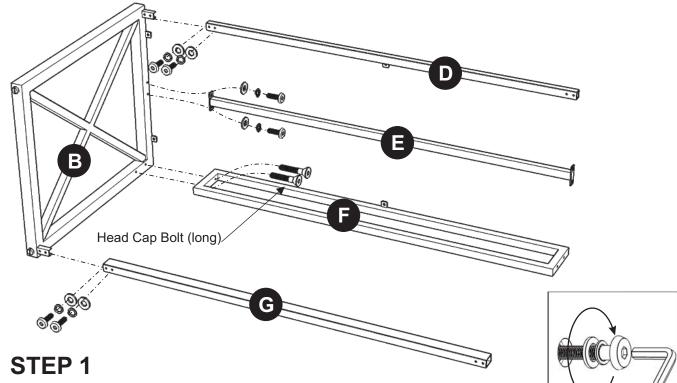


Attach Front Rail (D), Stretchers (E), and (G) to Side Frame (B) with Head Cap Bolts, Spring Washers and Flat Washers. (See Figure 1)

Attach Back Frame (F) to unit with Head Cap Bolts (long).

Figure 1

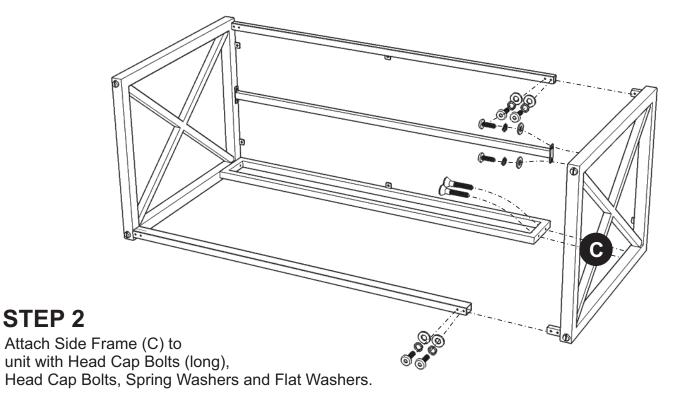

Assembly Instructions 3/3

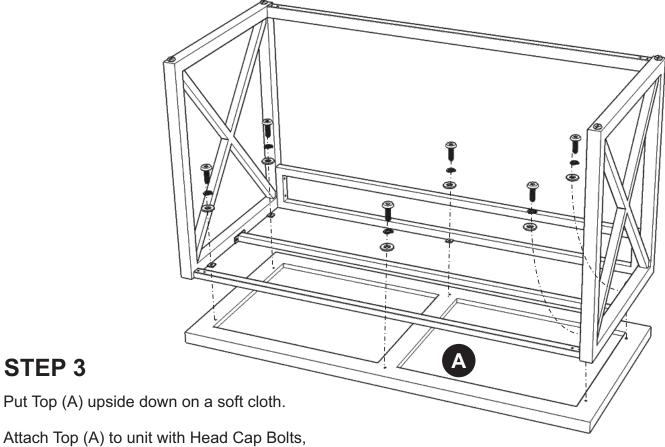

Spring Washers and Flat Washers.

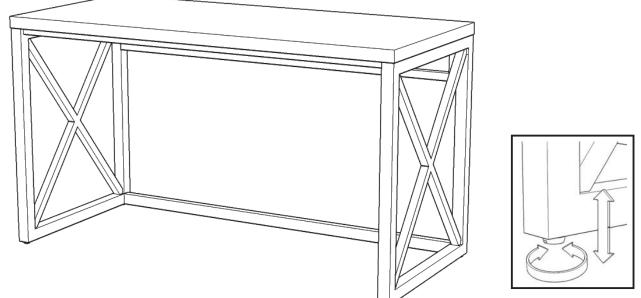


Figure 2

STEP 4

Turn the unit to its' upright position.

To level the unit, adjust the adjustable levelers on the bottom of side frames. (See Figure 2)

Note : Unit must be level to work properly.