


bed frame

Product ID. Q3L7N

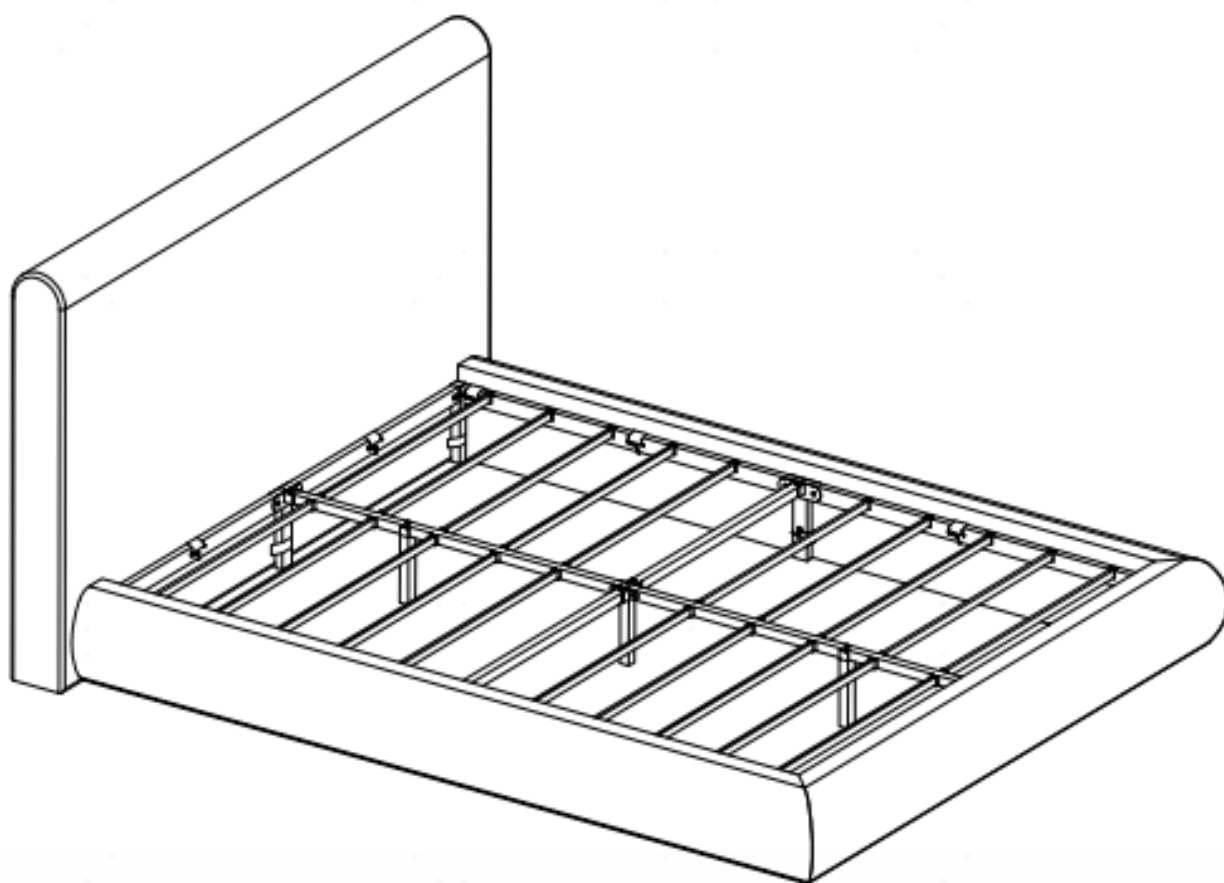


Scan for Support
support@garvee.com




Distributed by
GARVEE.com

V2608062G7P

Components

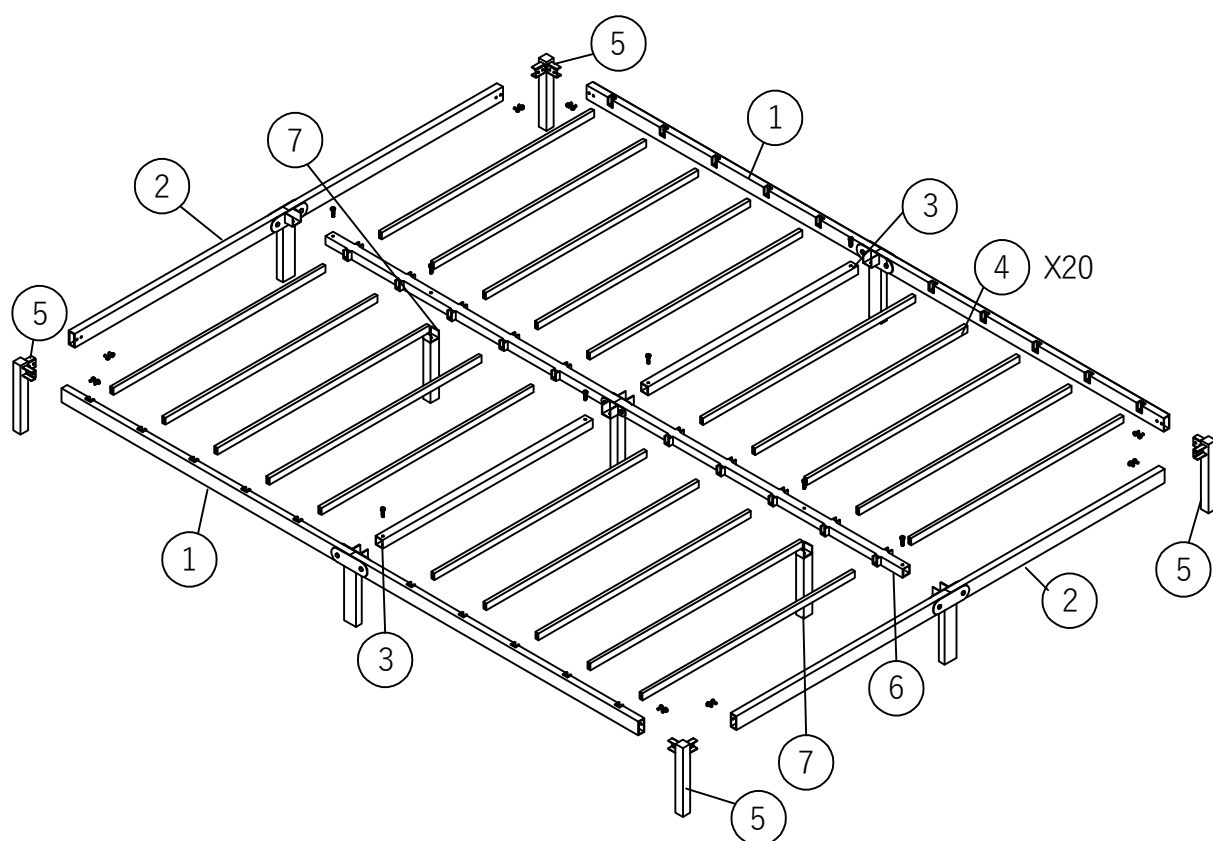

① X2



② X2




③ X2



④ X20




⑤ X4



⑥ X1



⑦ X2



Ⓐ X8+1




M6*35mm

Ⓑ X16+1




M8*10mm


Ⓒ X1

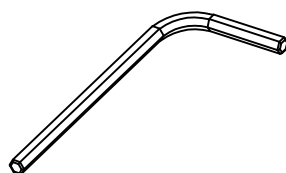


Ⓓ X12+1

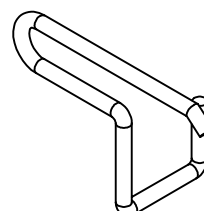


1

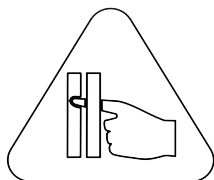


warning hands pinching

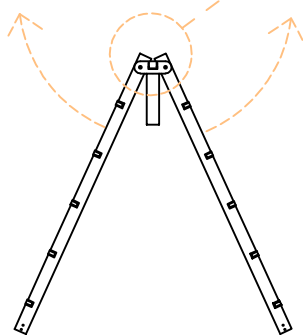

1

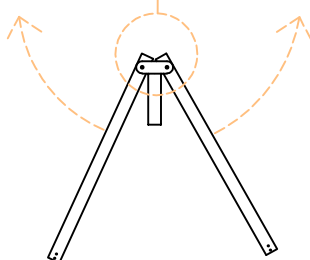


2

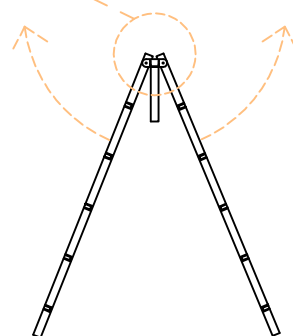

6

2


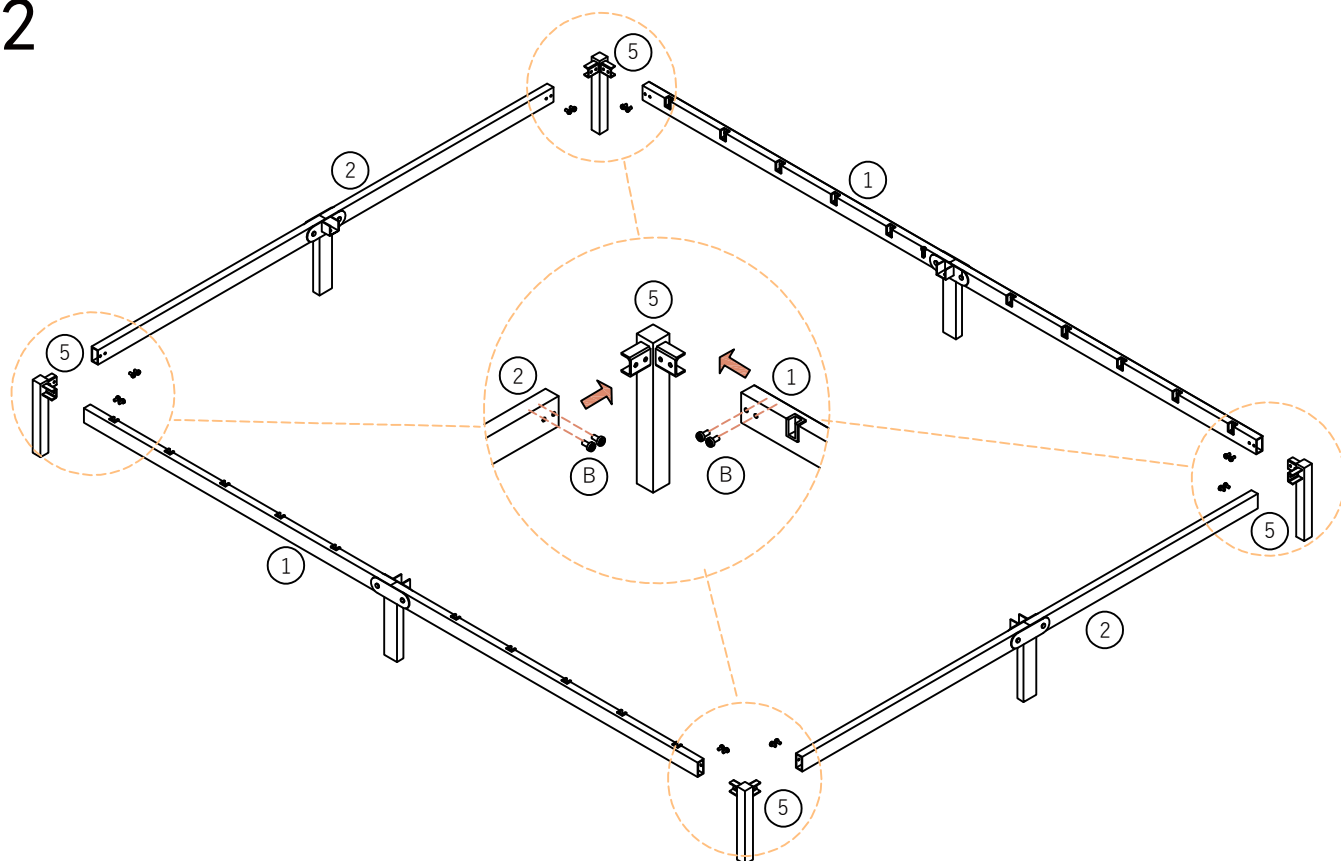


1	2	5	B
2PCS	2PCS	4PCS	16PCS

3



**Warning: Keep distance and enough room to the mattress when opening, as it may have a risk to smack people when restoring.
When cutting it open with a knife, please be careful not to damage the product.**

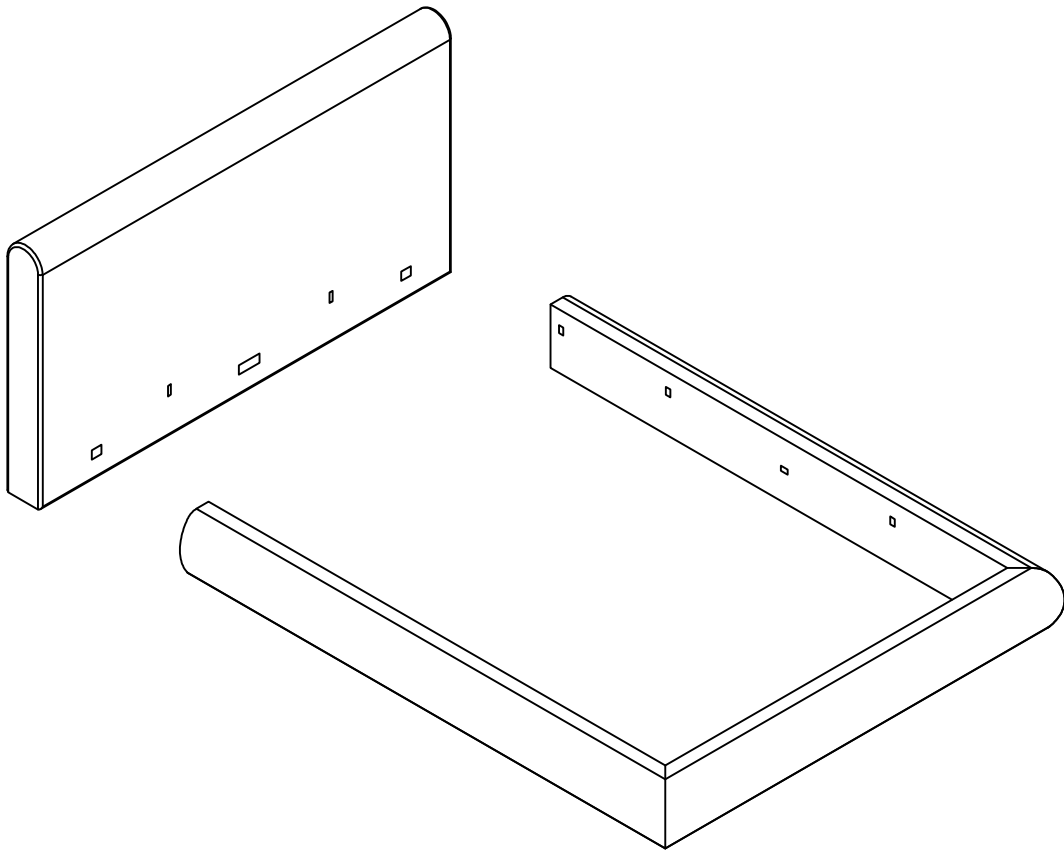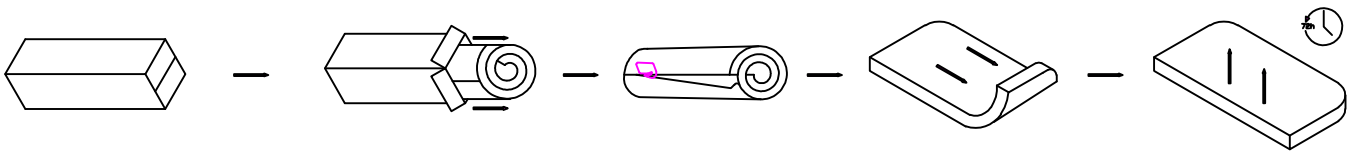


Note:



This product is vacuum compressed. The foam may initially feel softer with slower rebound due to long-term compression. Please allow up to 72 hours for full expansion, air ventilation, and pore recovery to achieve optimal performance.

Shape: Gently pull and smooth the fabric if the stitching appears crooked. Iron Wrinkles: Use an iron with a cloth barrier.

The bed frame will fully form/expand soon.

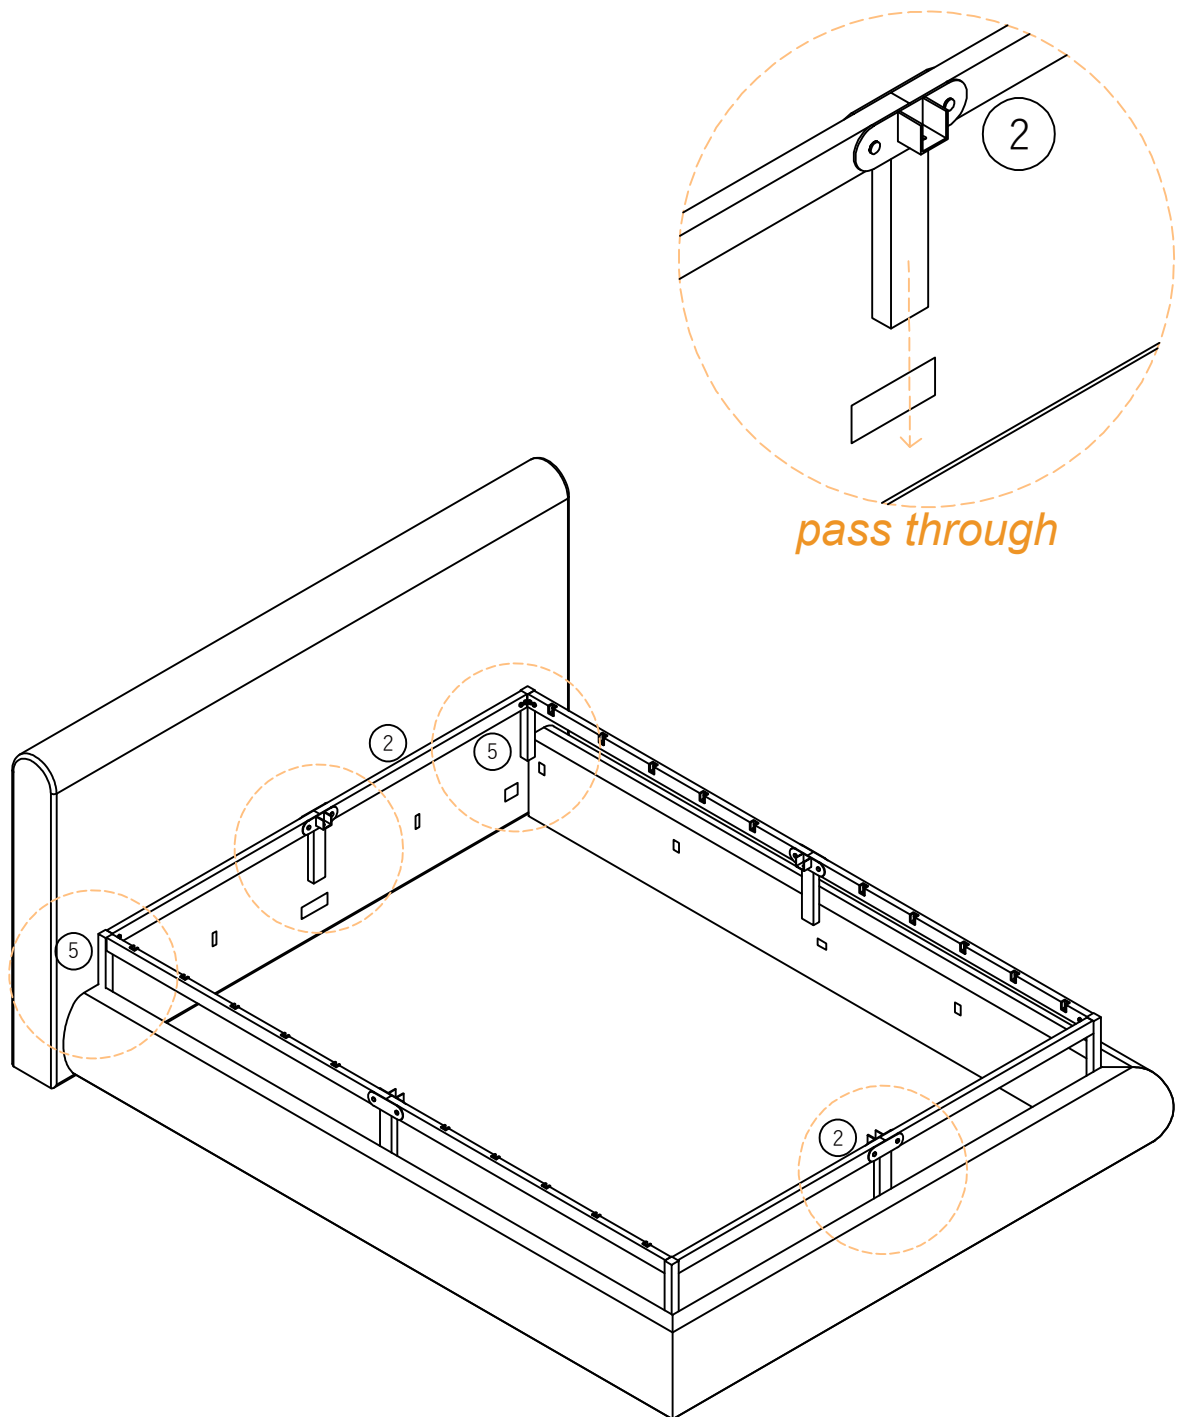


5

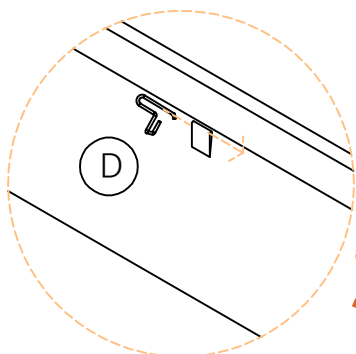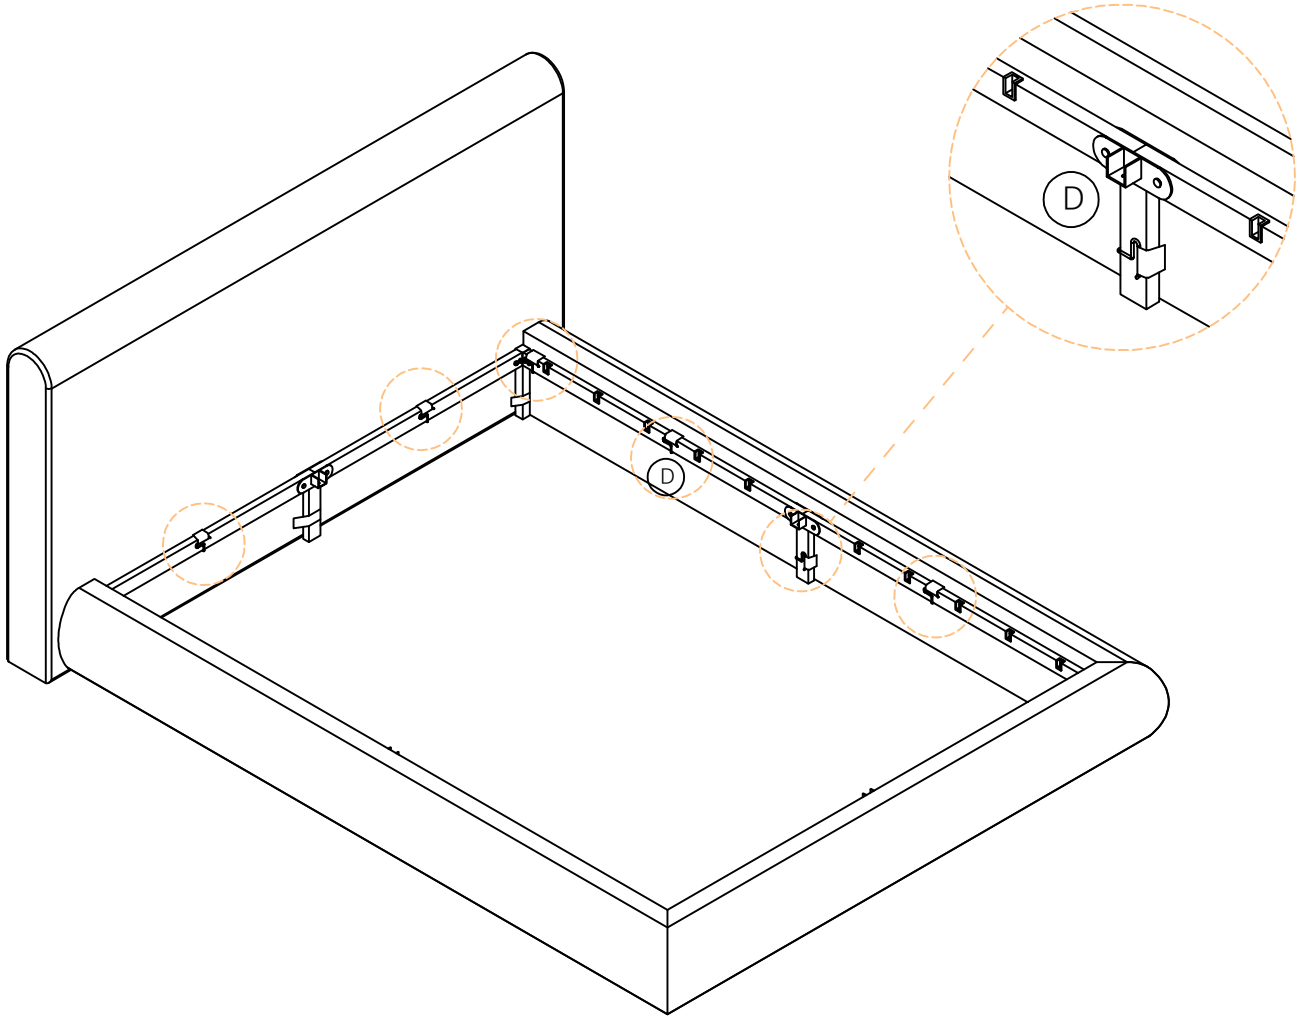


pass through

step1

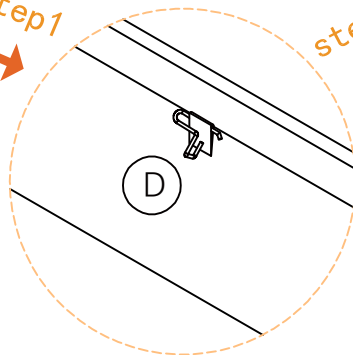


step2

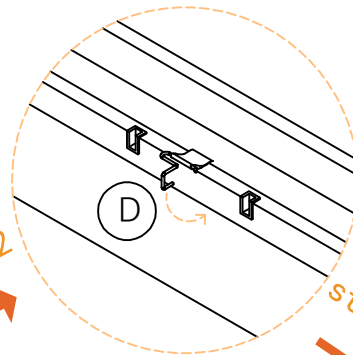


Twist

step3

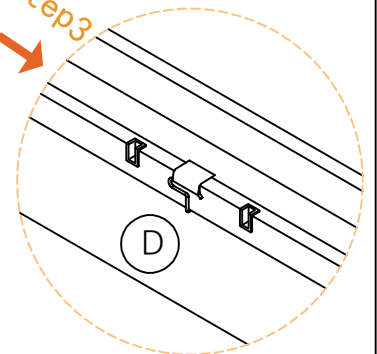


Clip in

6

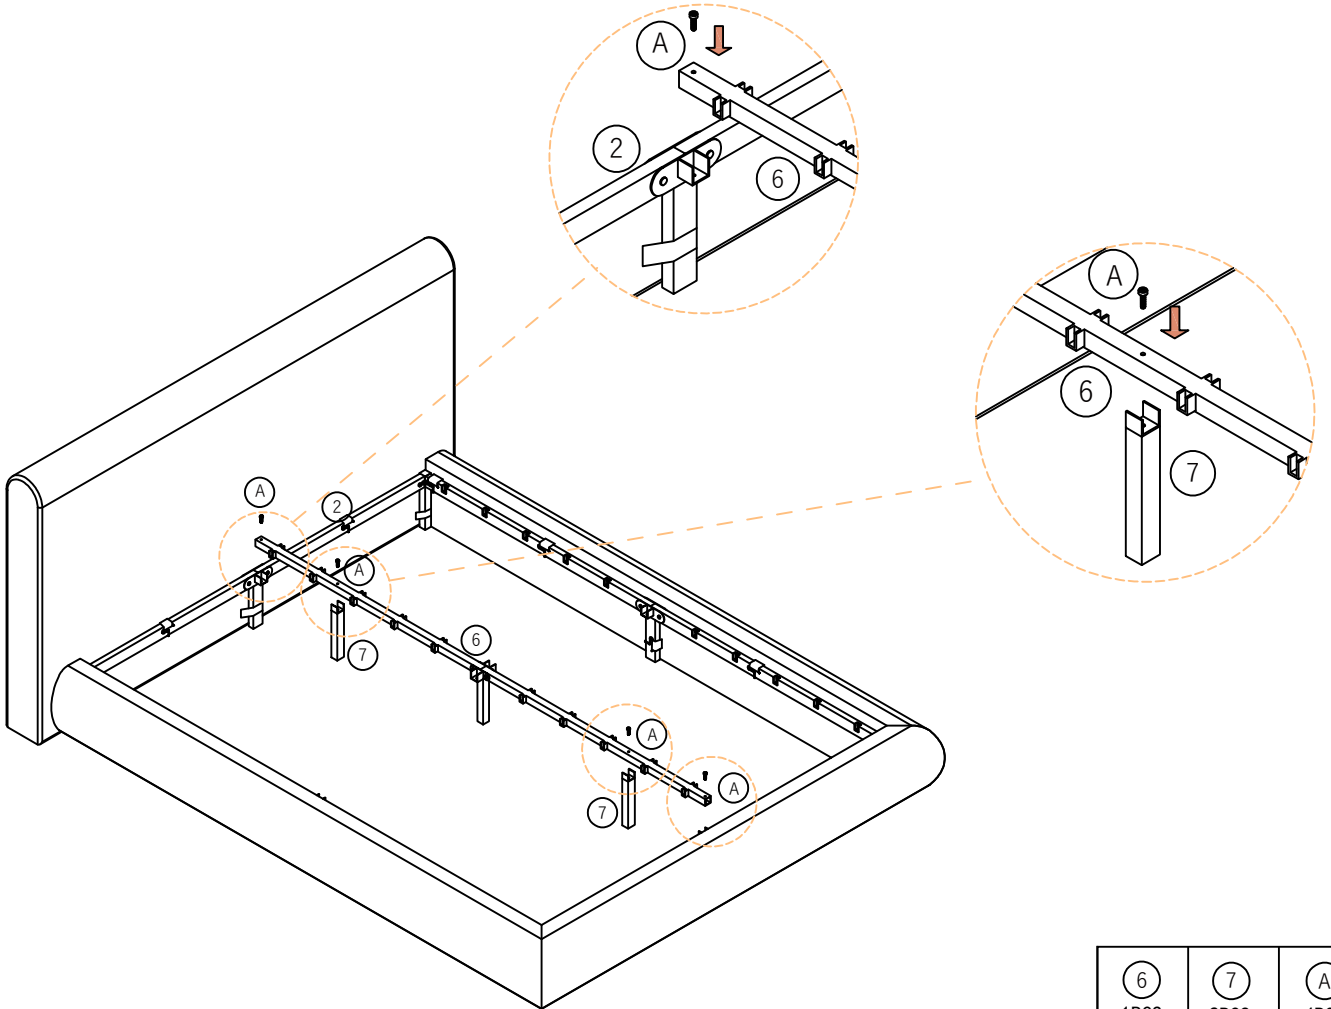

7

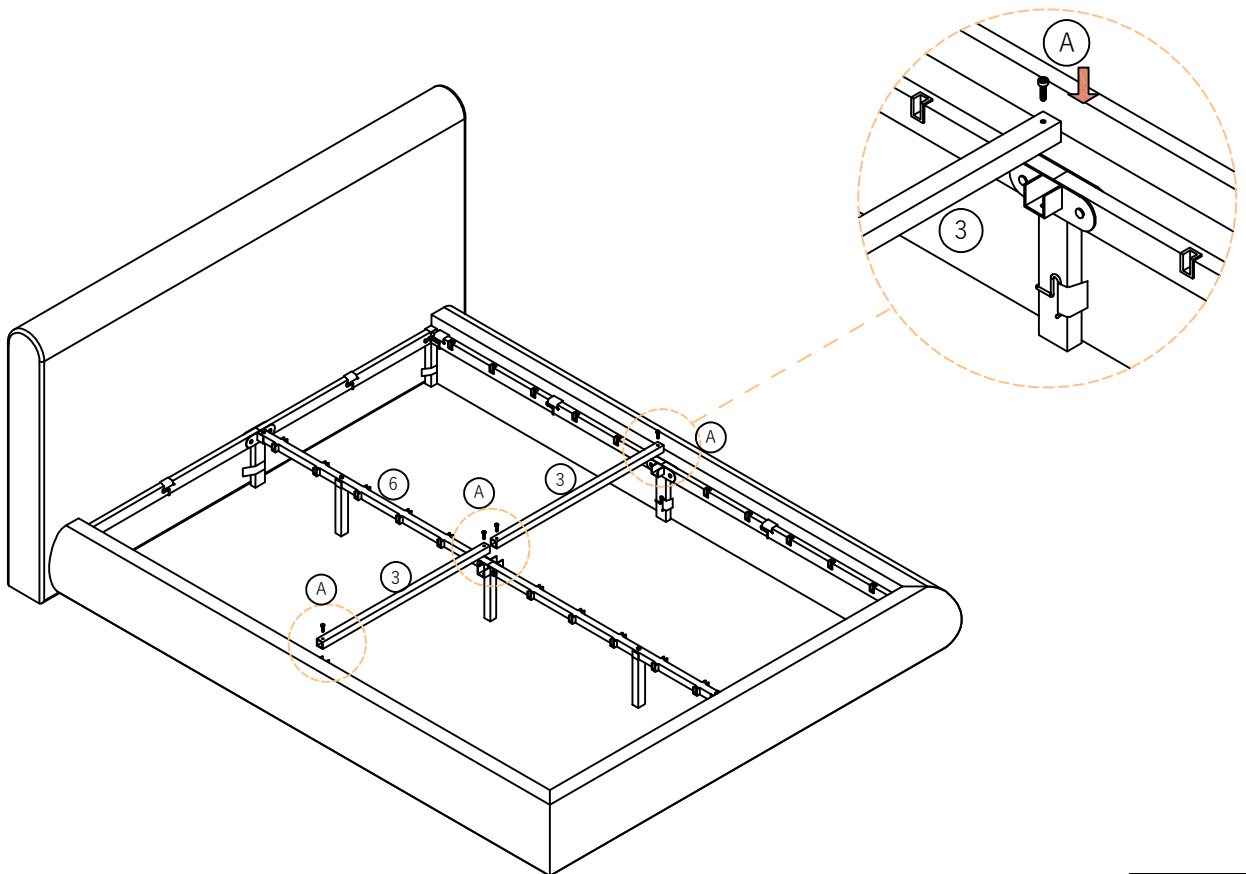

8

(4) X20

(4)
20PCS

OK

mattress

GARVEE
support@garvee.com