
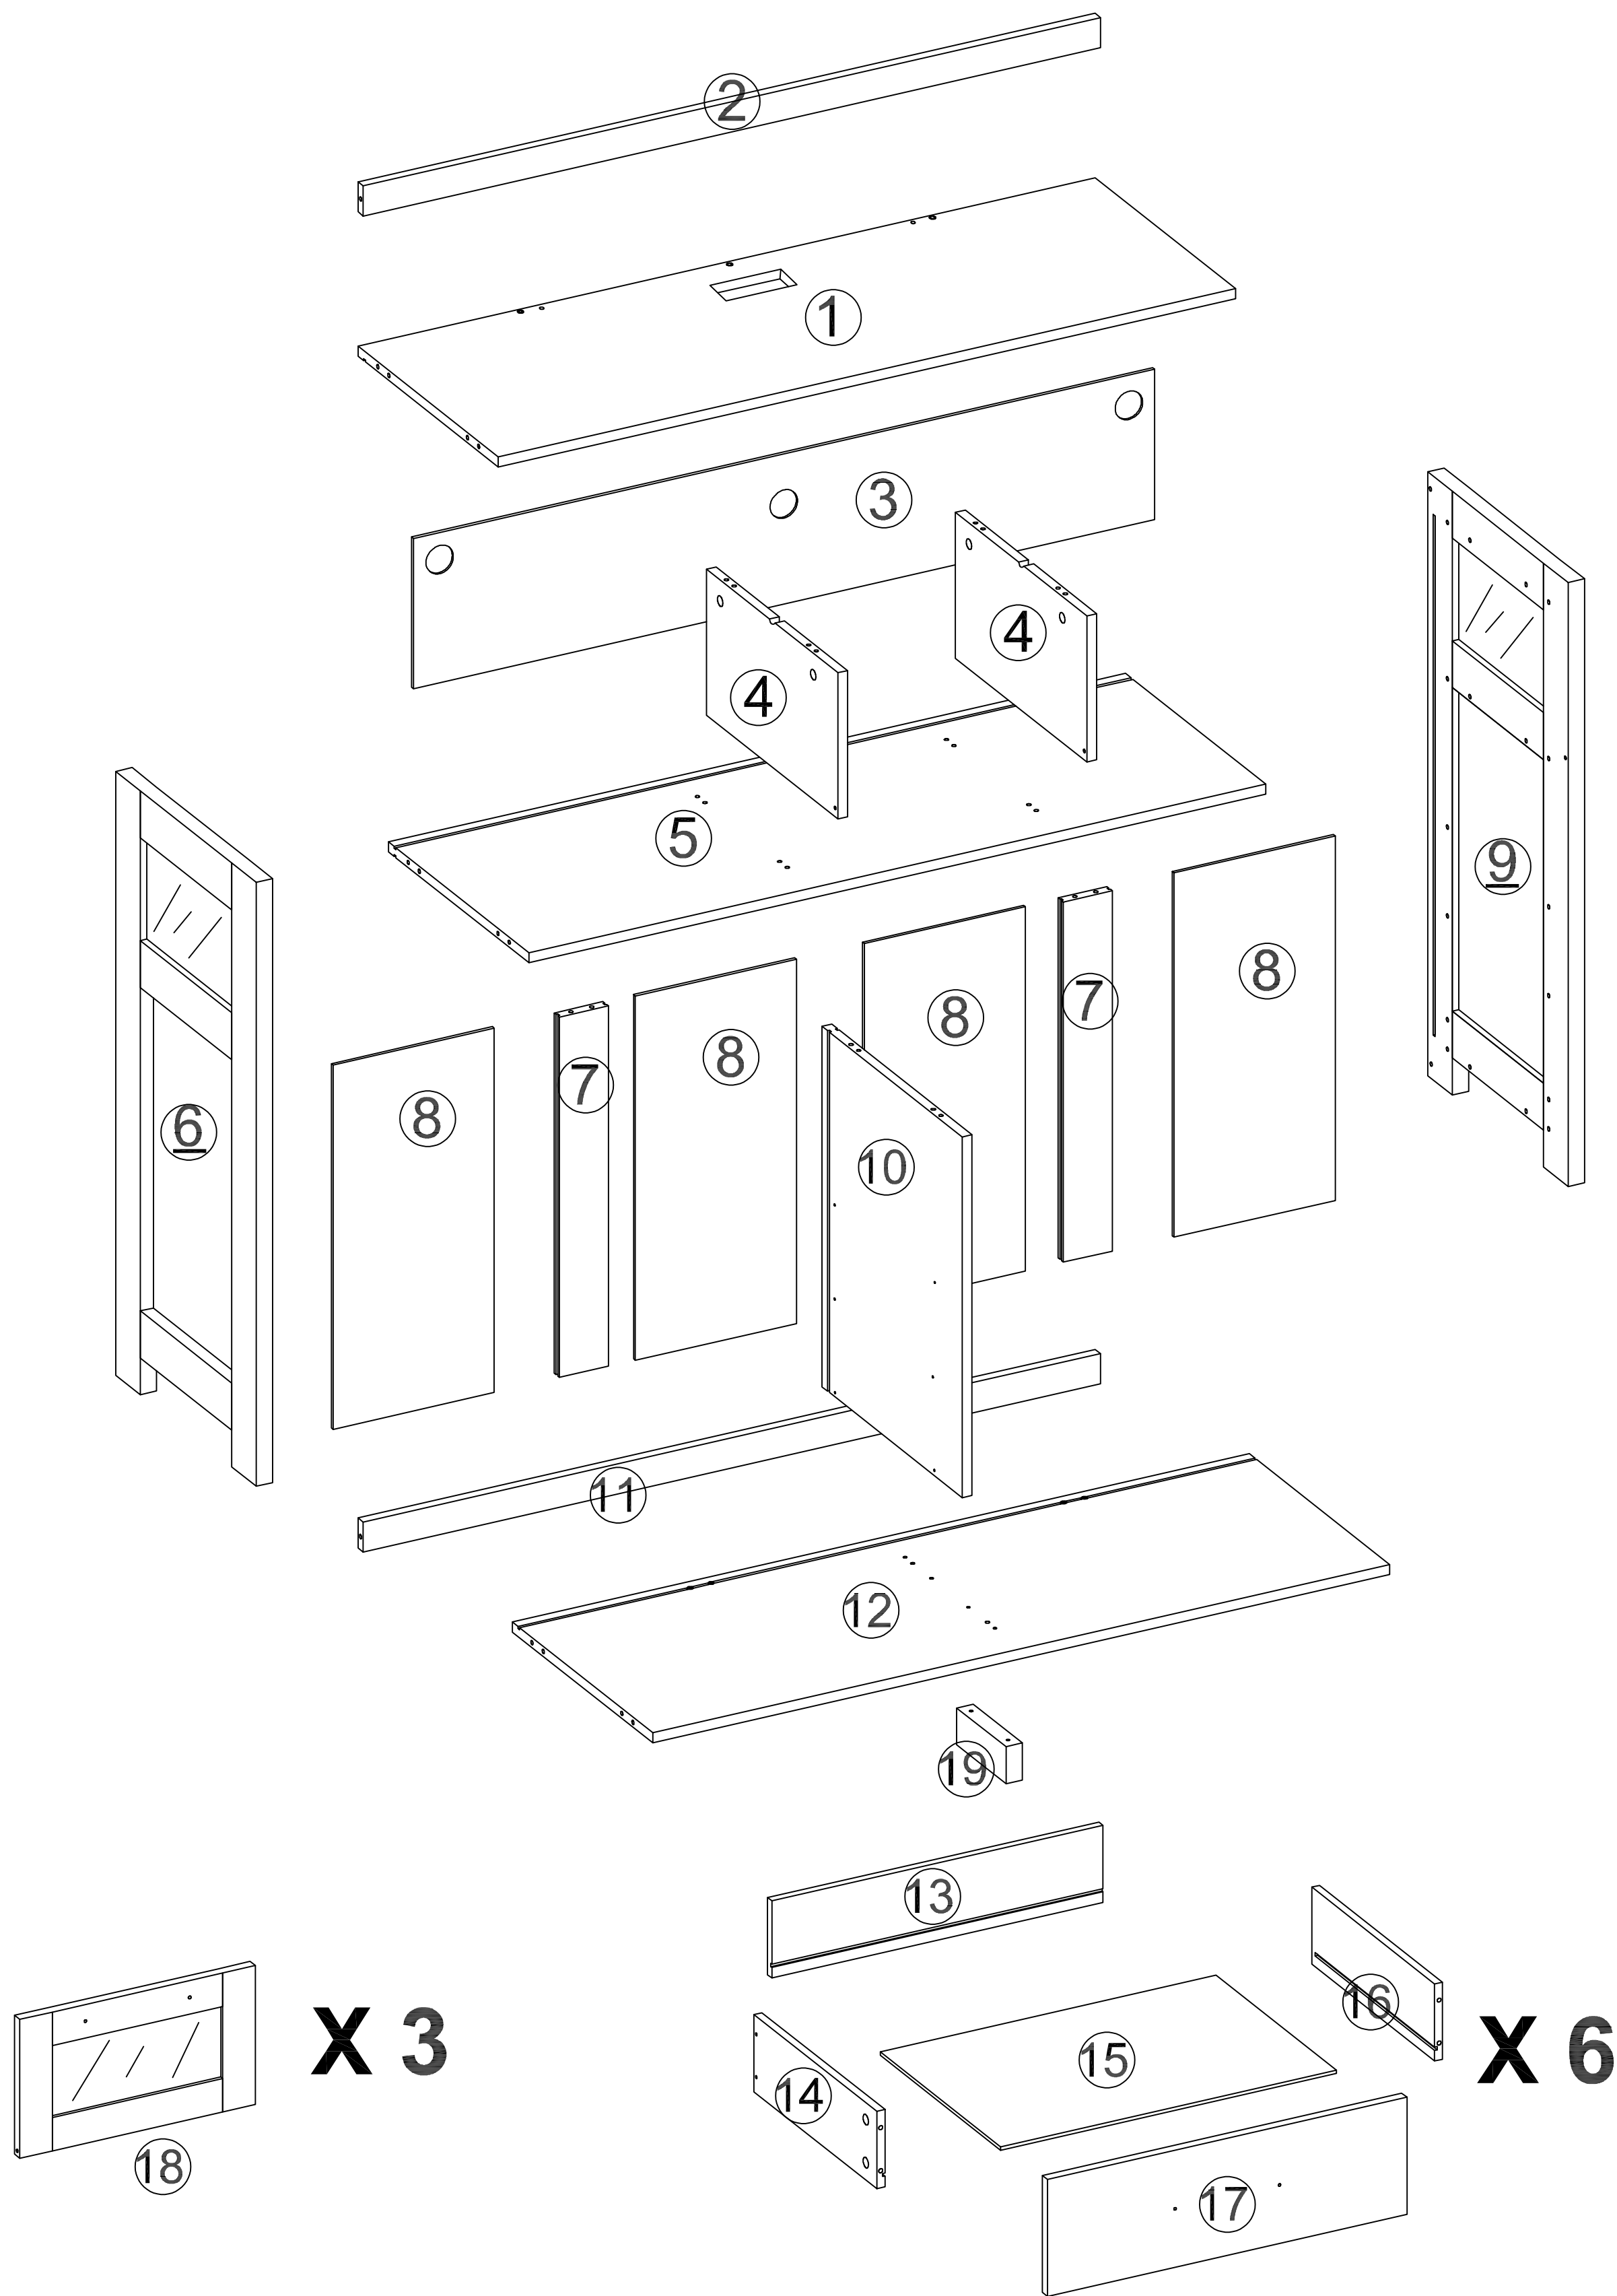
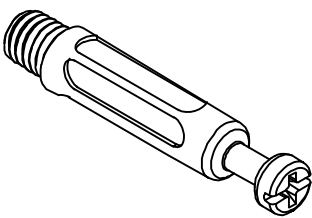
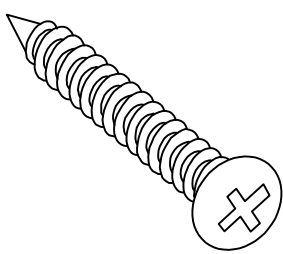
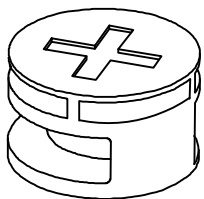
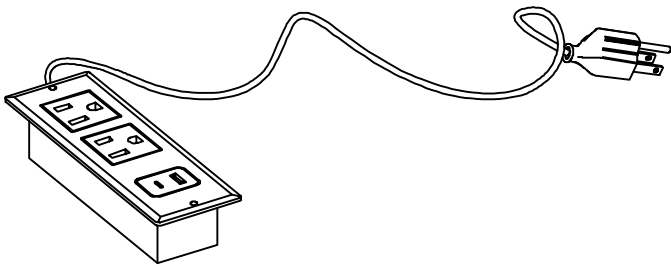
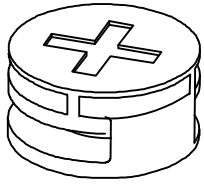
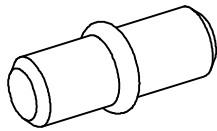
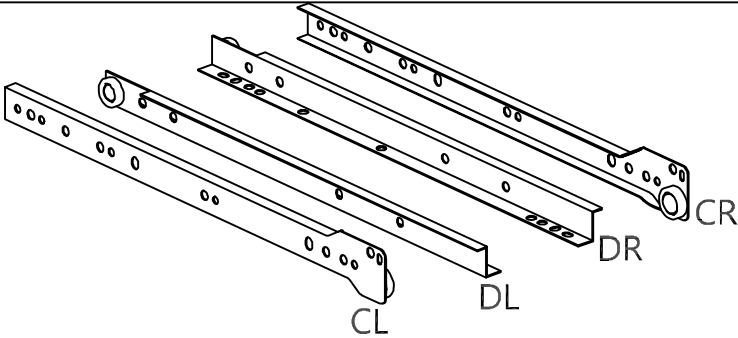
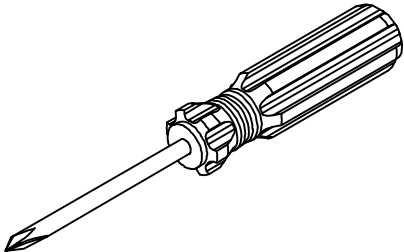





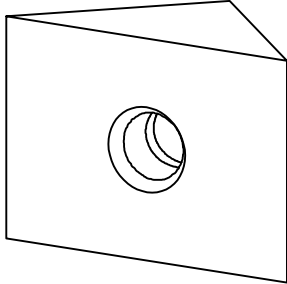
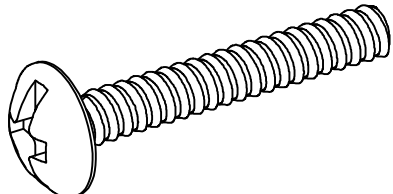
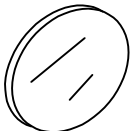
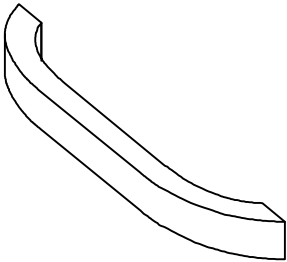
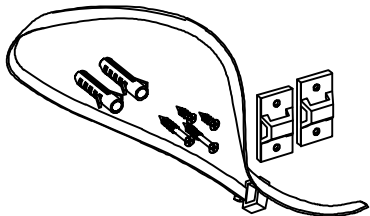
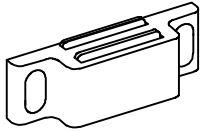
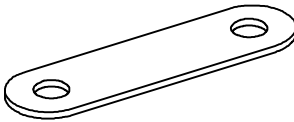
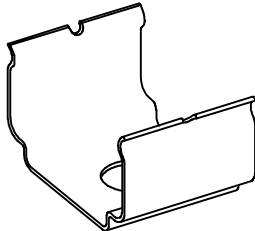
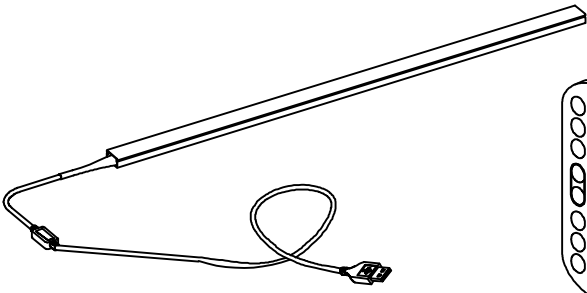

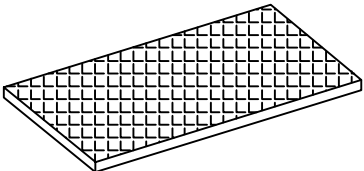
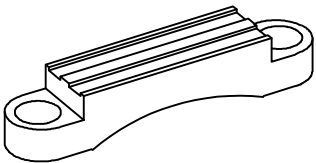
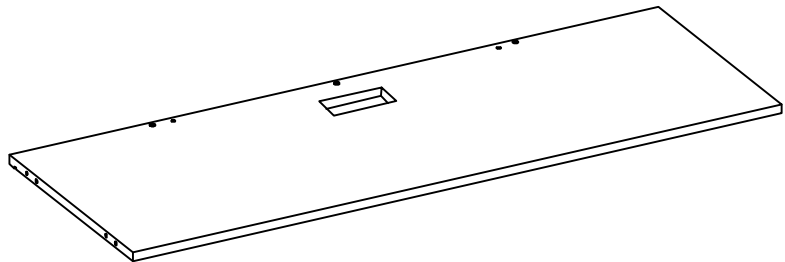
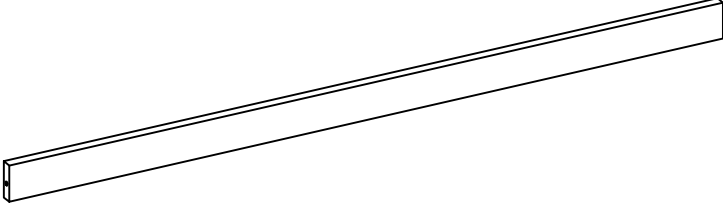
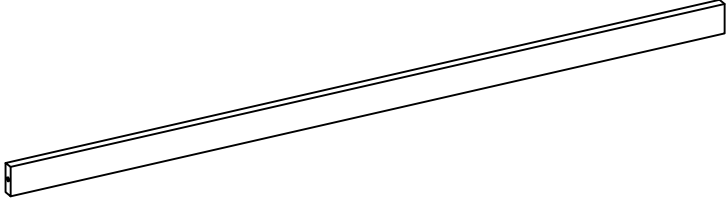
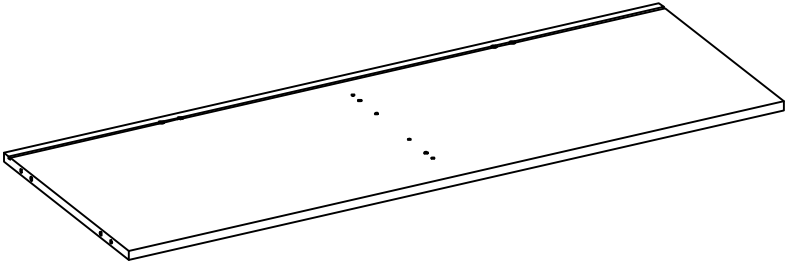
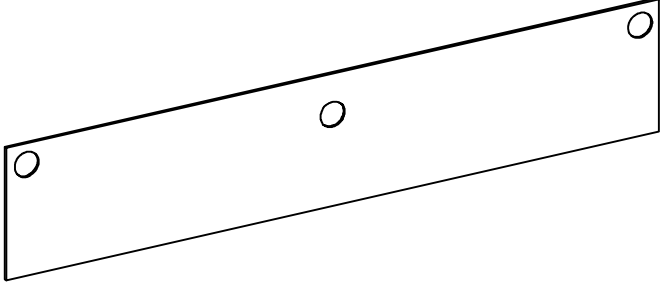
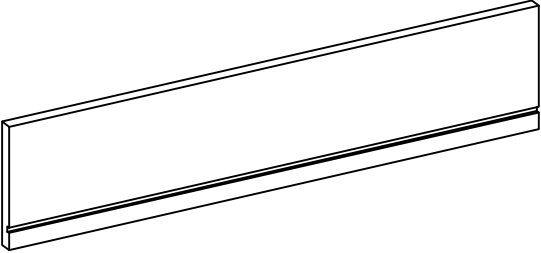
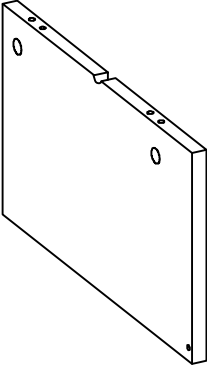
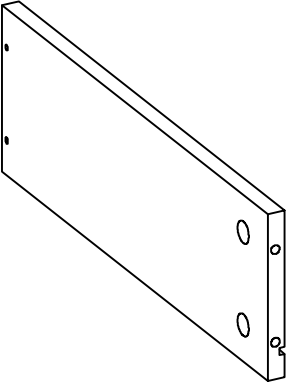
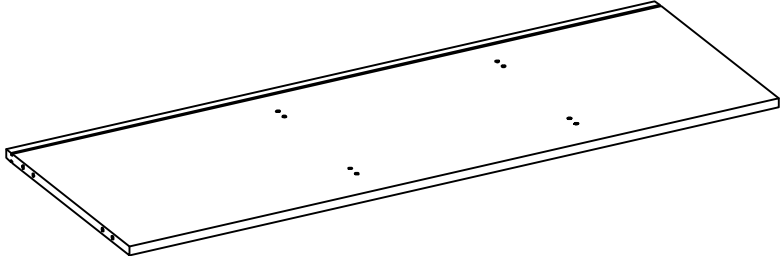
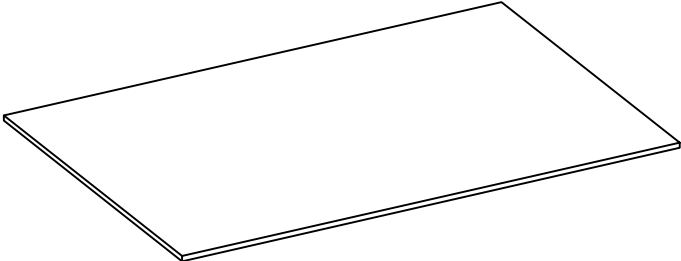
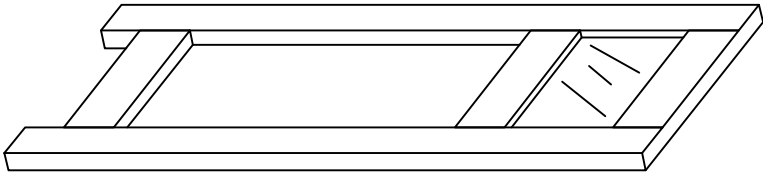
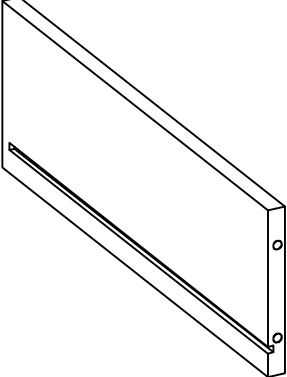

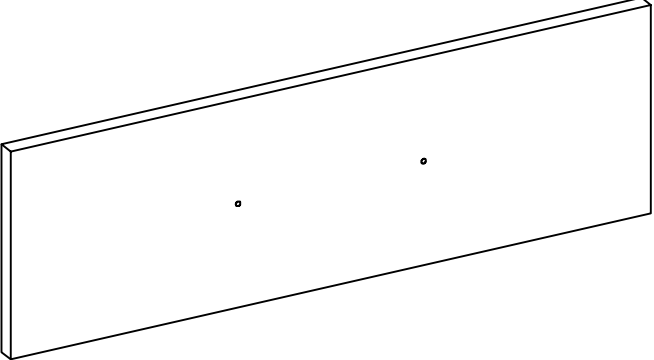
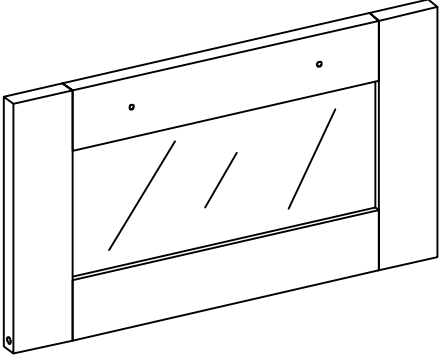
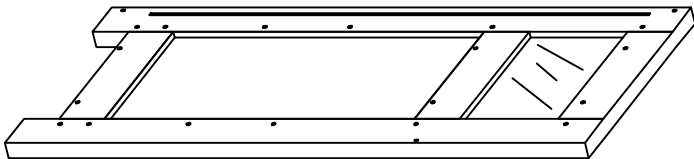
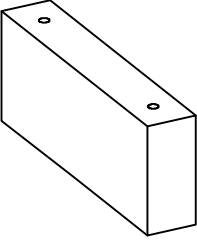



ASSEMBLING INSTRUCTION

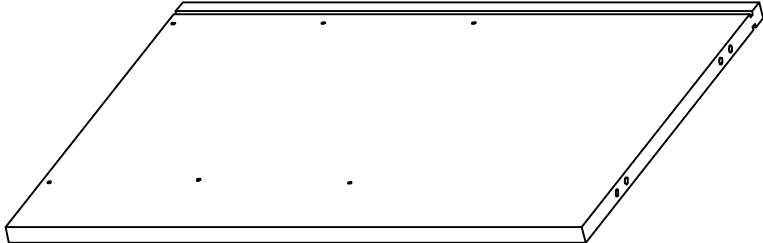



A		X60	N		X8
B	 ø15*12mm	X36	P		X1
C	 ø15*10mm	X24	Q		X6
D		X6	R		X1
E	 ø8*30mm	X 28	S	 M3.5*14mm	X14
F	 M3*12mm	X60	T	 M3*14mm	X28
G	 M4*35mm	X24	U		X20
H	 M4*18mm	X18	V		X60
J		X9	W		X2
K	  K-1 K-2	X3	X		X 3
L	 	X1	Y		X5
M		X2			

①		X1	⑪		X1
②		X1	⑫		X1
③		X1	⑬		X6
④		X2	⑭		X6
⑤		X1	⑮		X6
⑥		X1	⑯		X6
⑦		X2	⑰		X6
⑧		X4	⑱		X3
⑨		X1	⑲		X1
⑩		X1			


Step:1


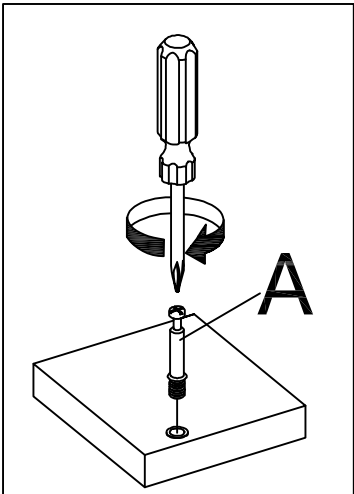



A		X3
---	---	----

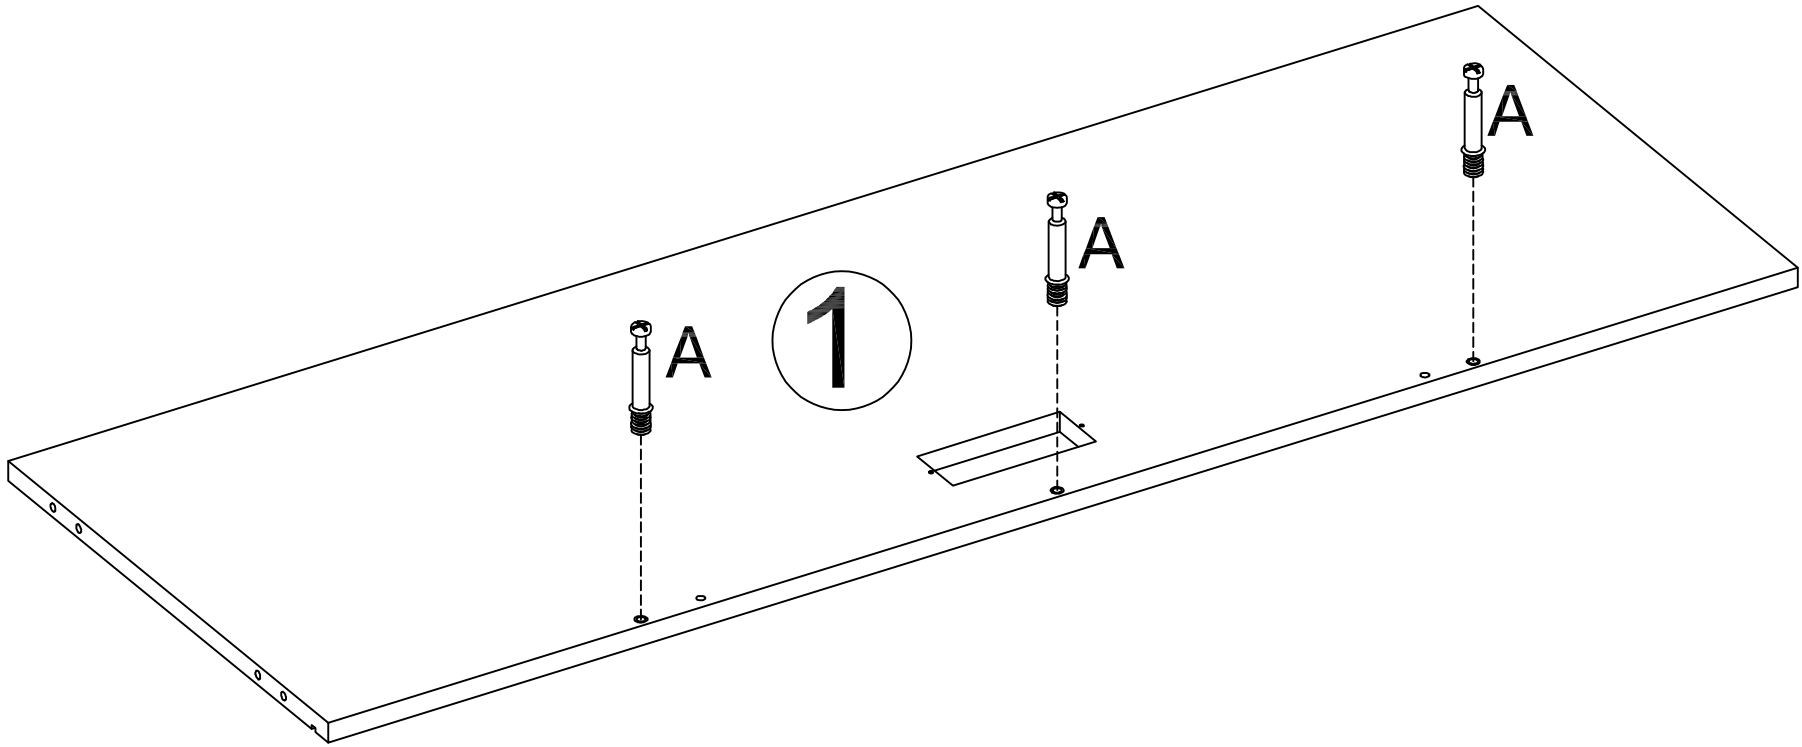

Step:2

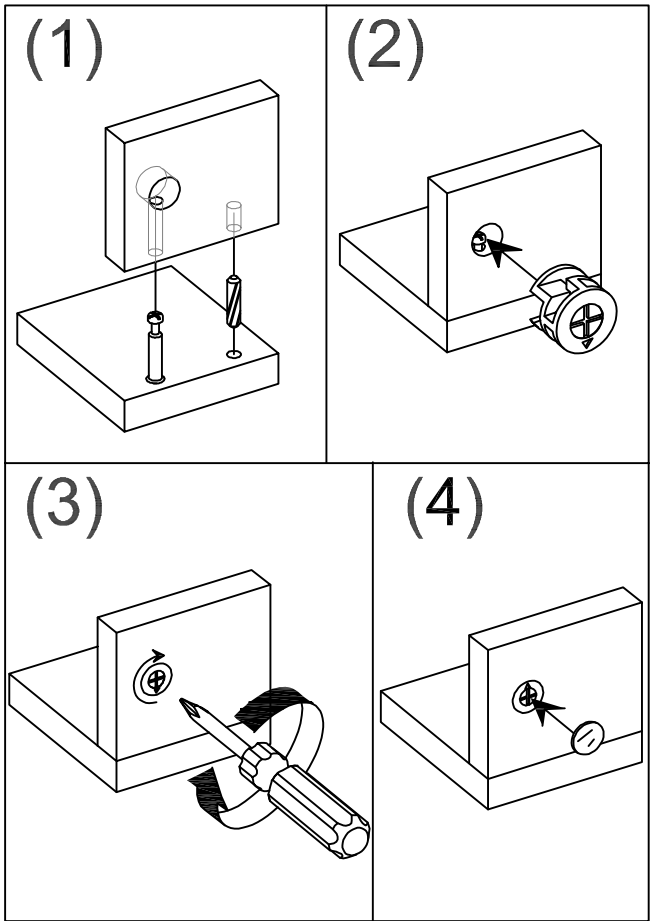

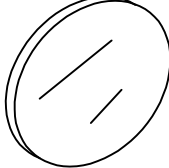
B	 ø15*12mm	X3
E	 ø8*30mm	X2
V		X3

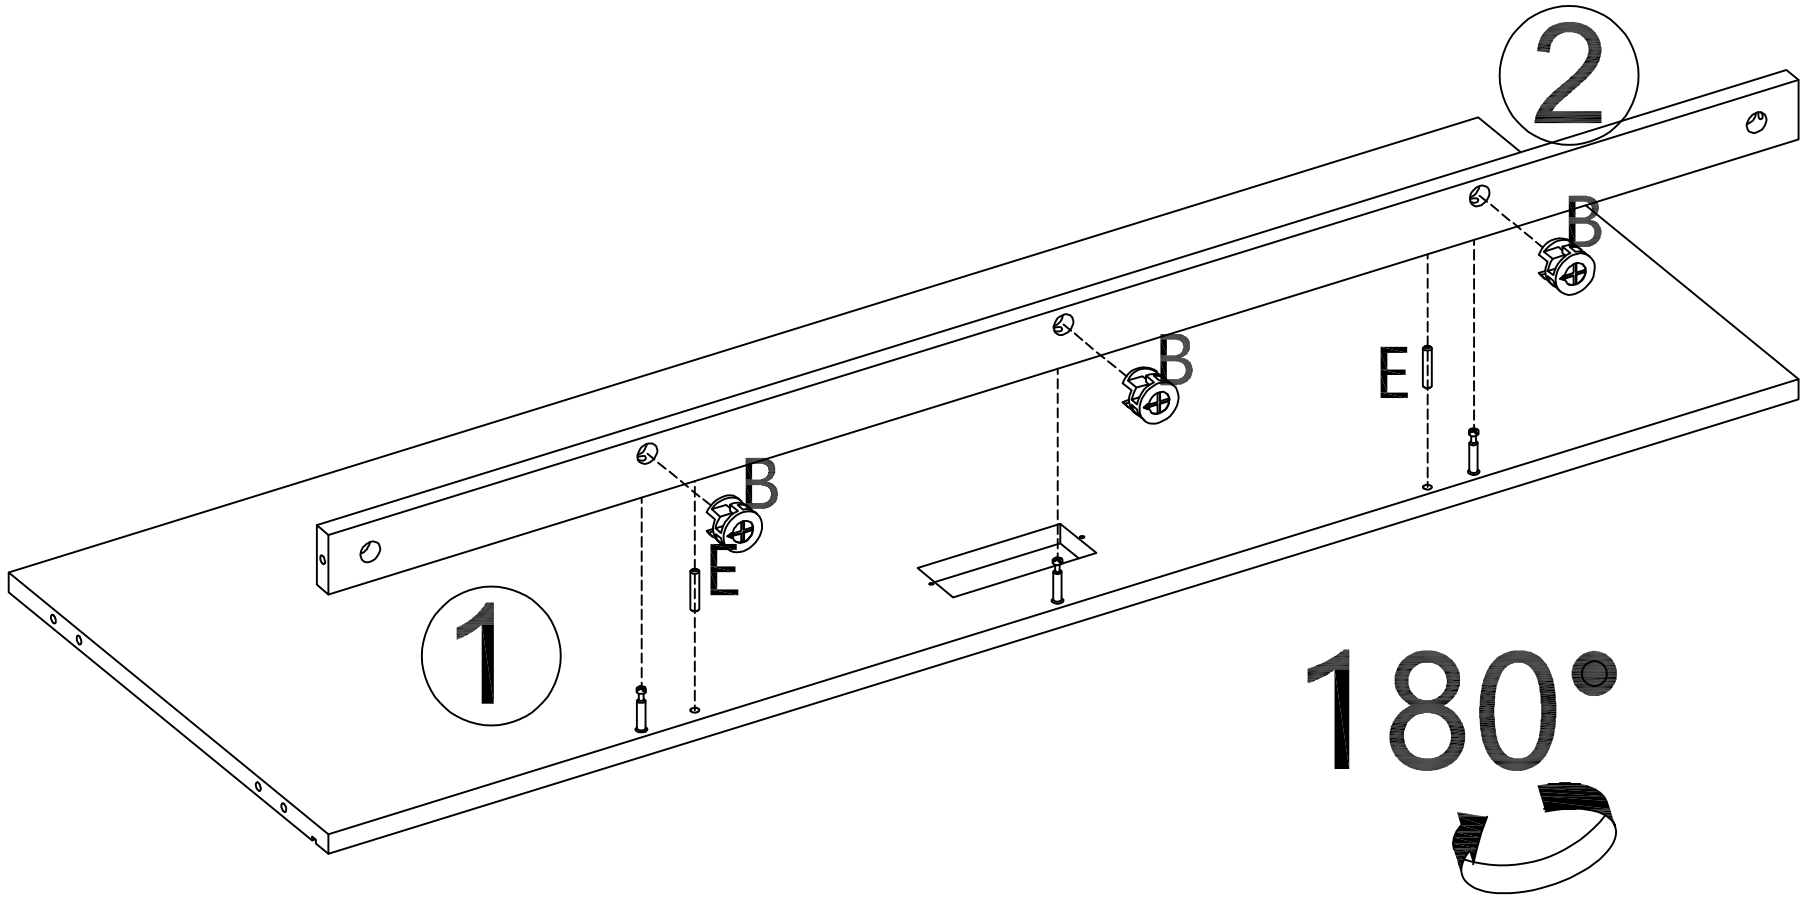


Make sure board 1 and board 2 are even when installing them.


Step:3

K-1		X3
S	 M3.5*14mm	X6

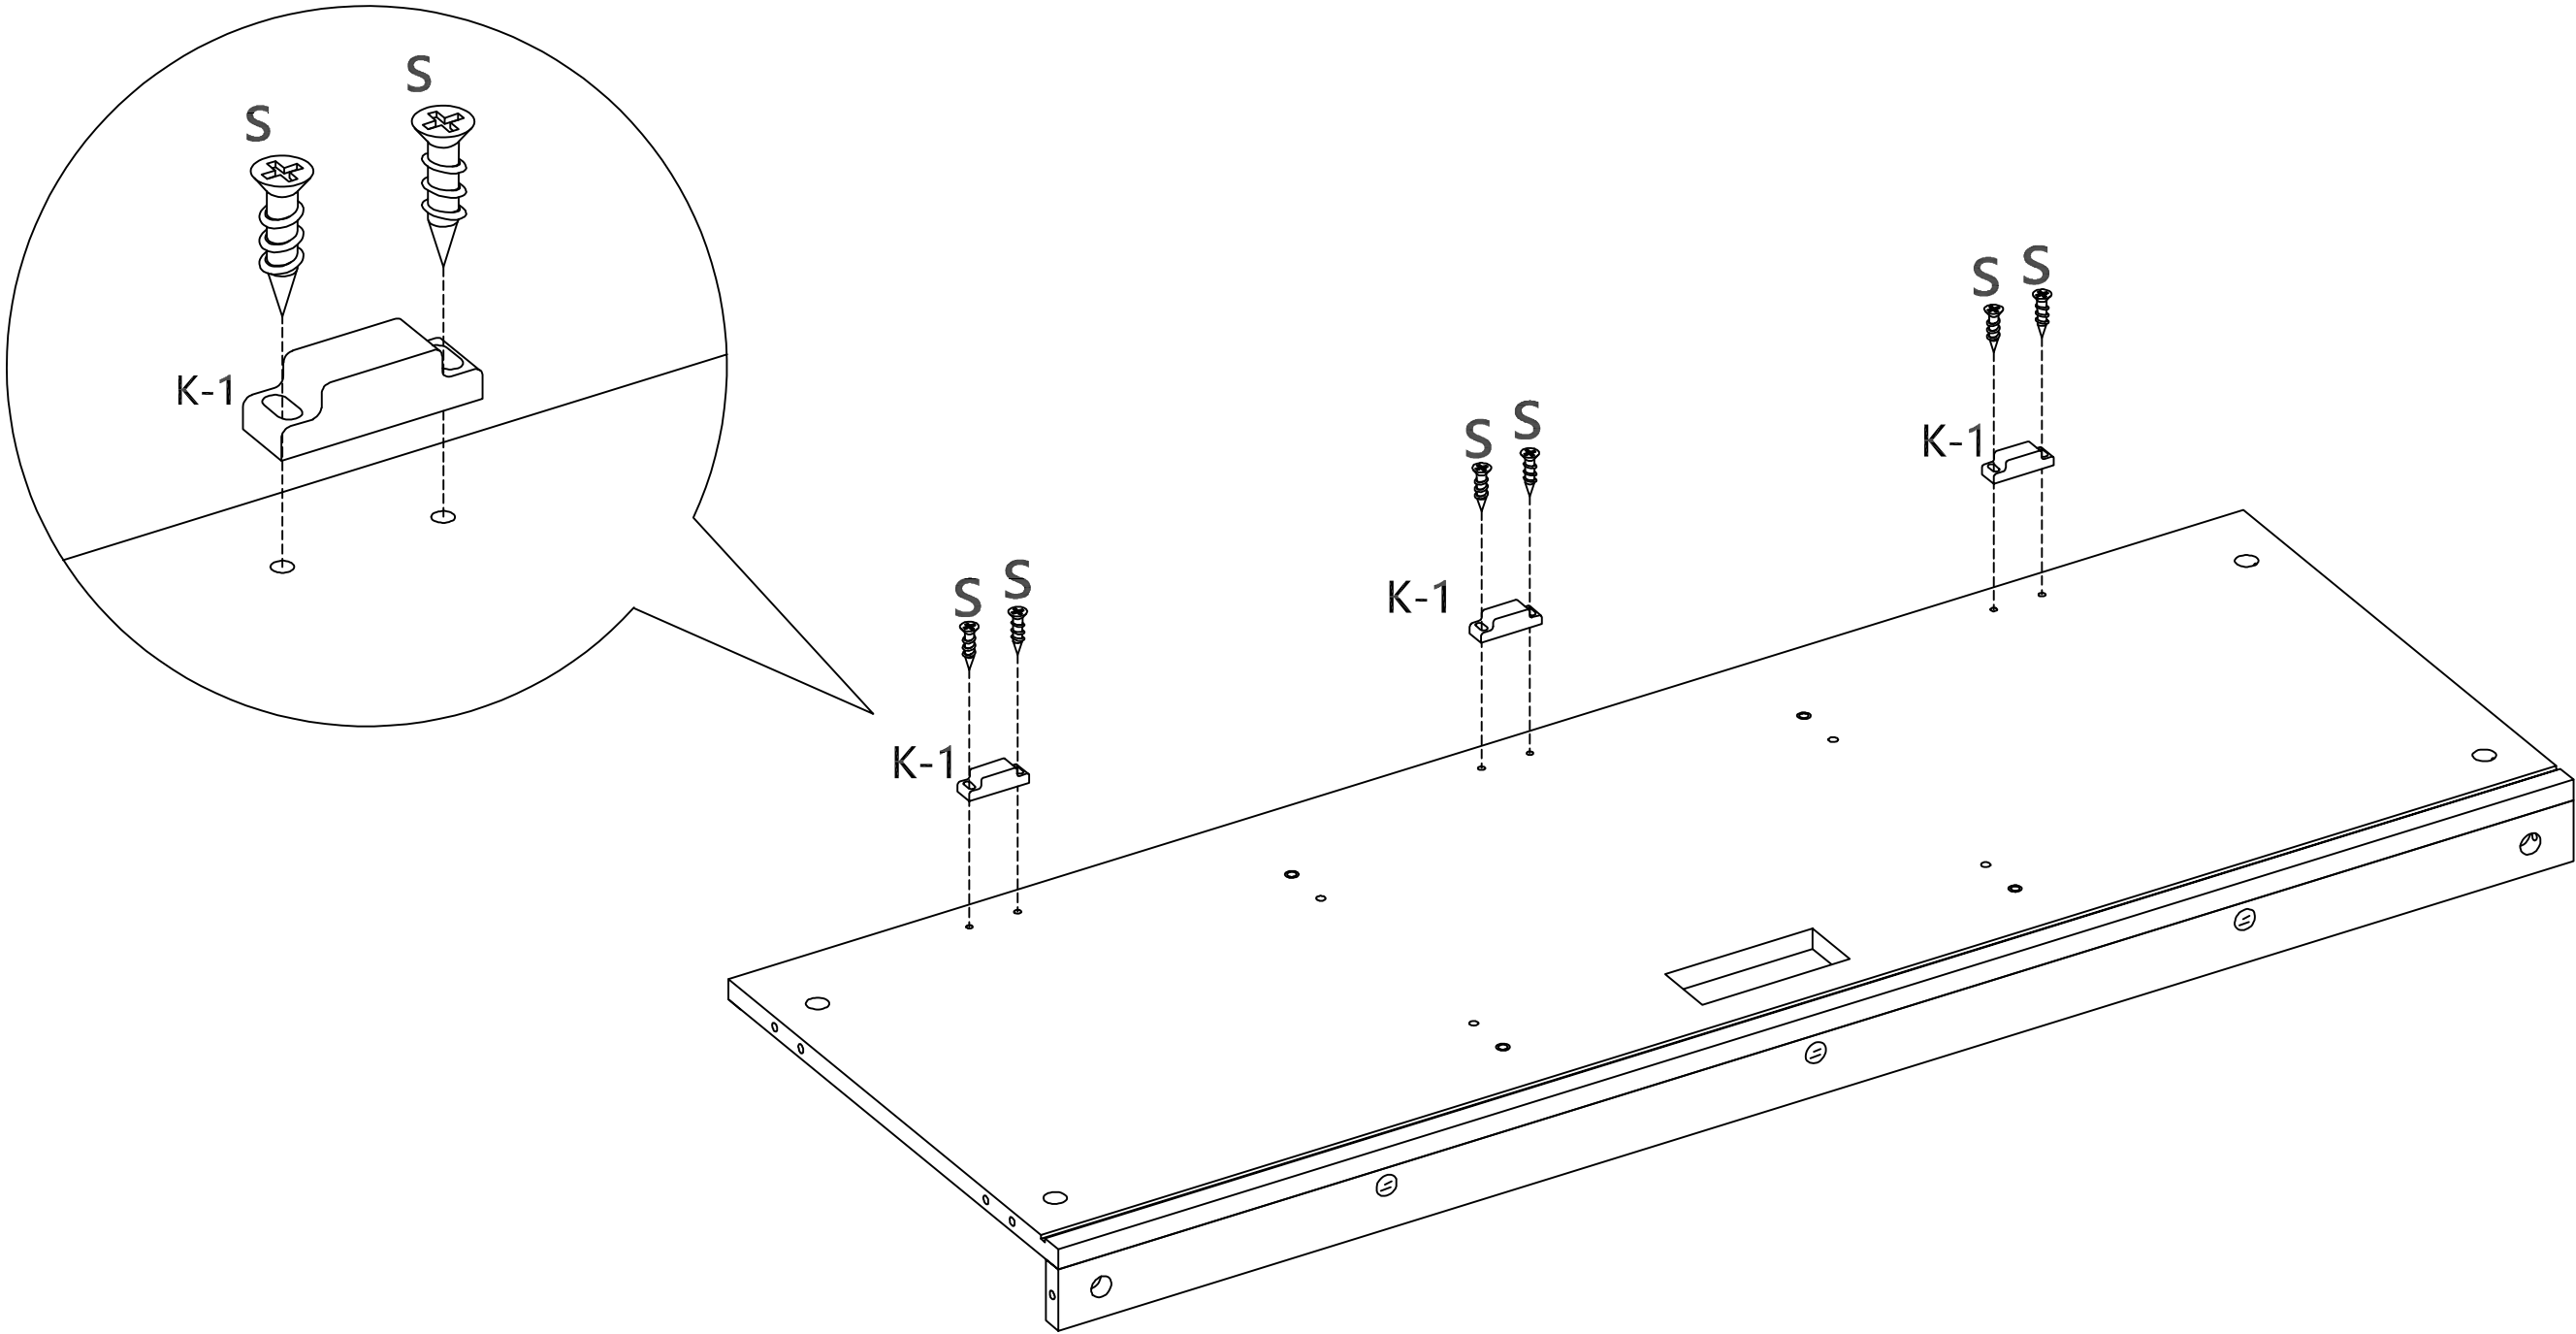


Step:4

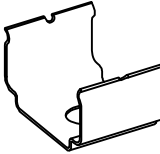
T	 M3*14mm	X 3
X		X3

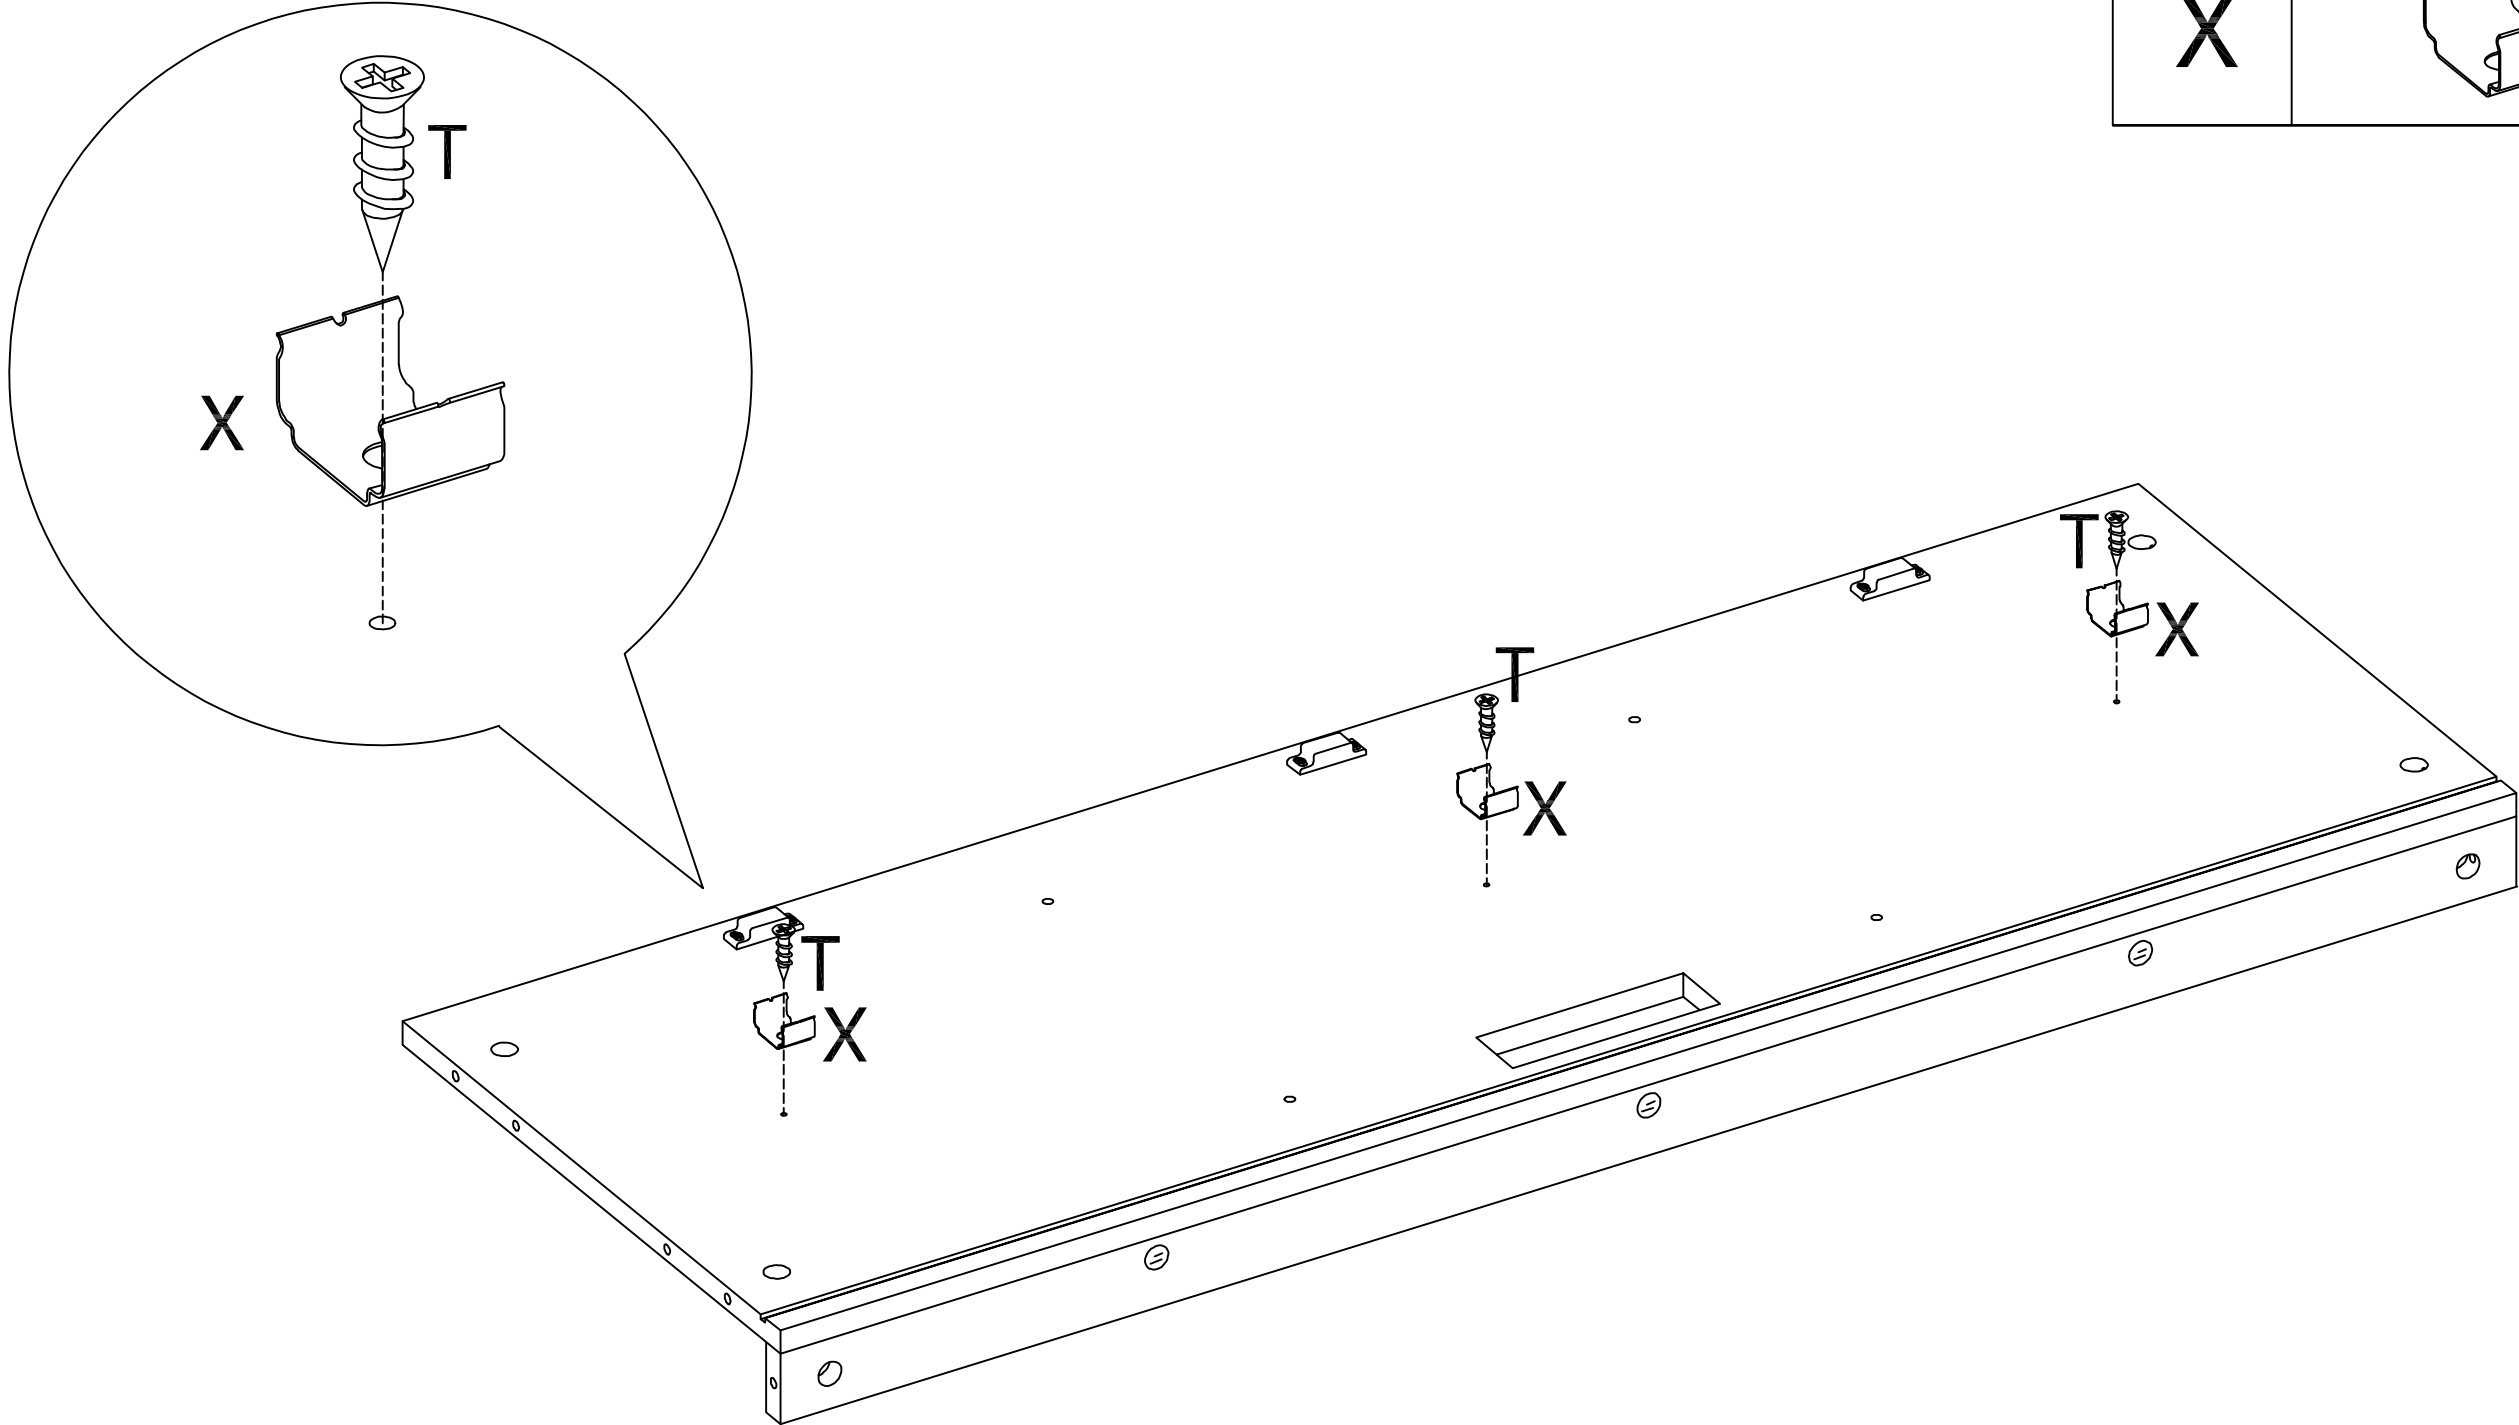


Step:5


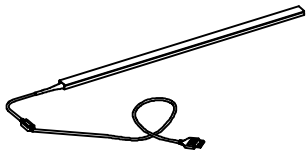
L		X1
---	---	----

Buckle the light strip in.

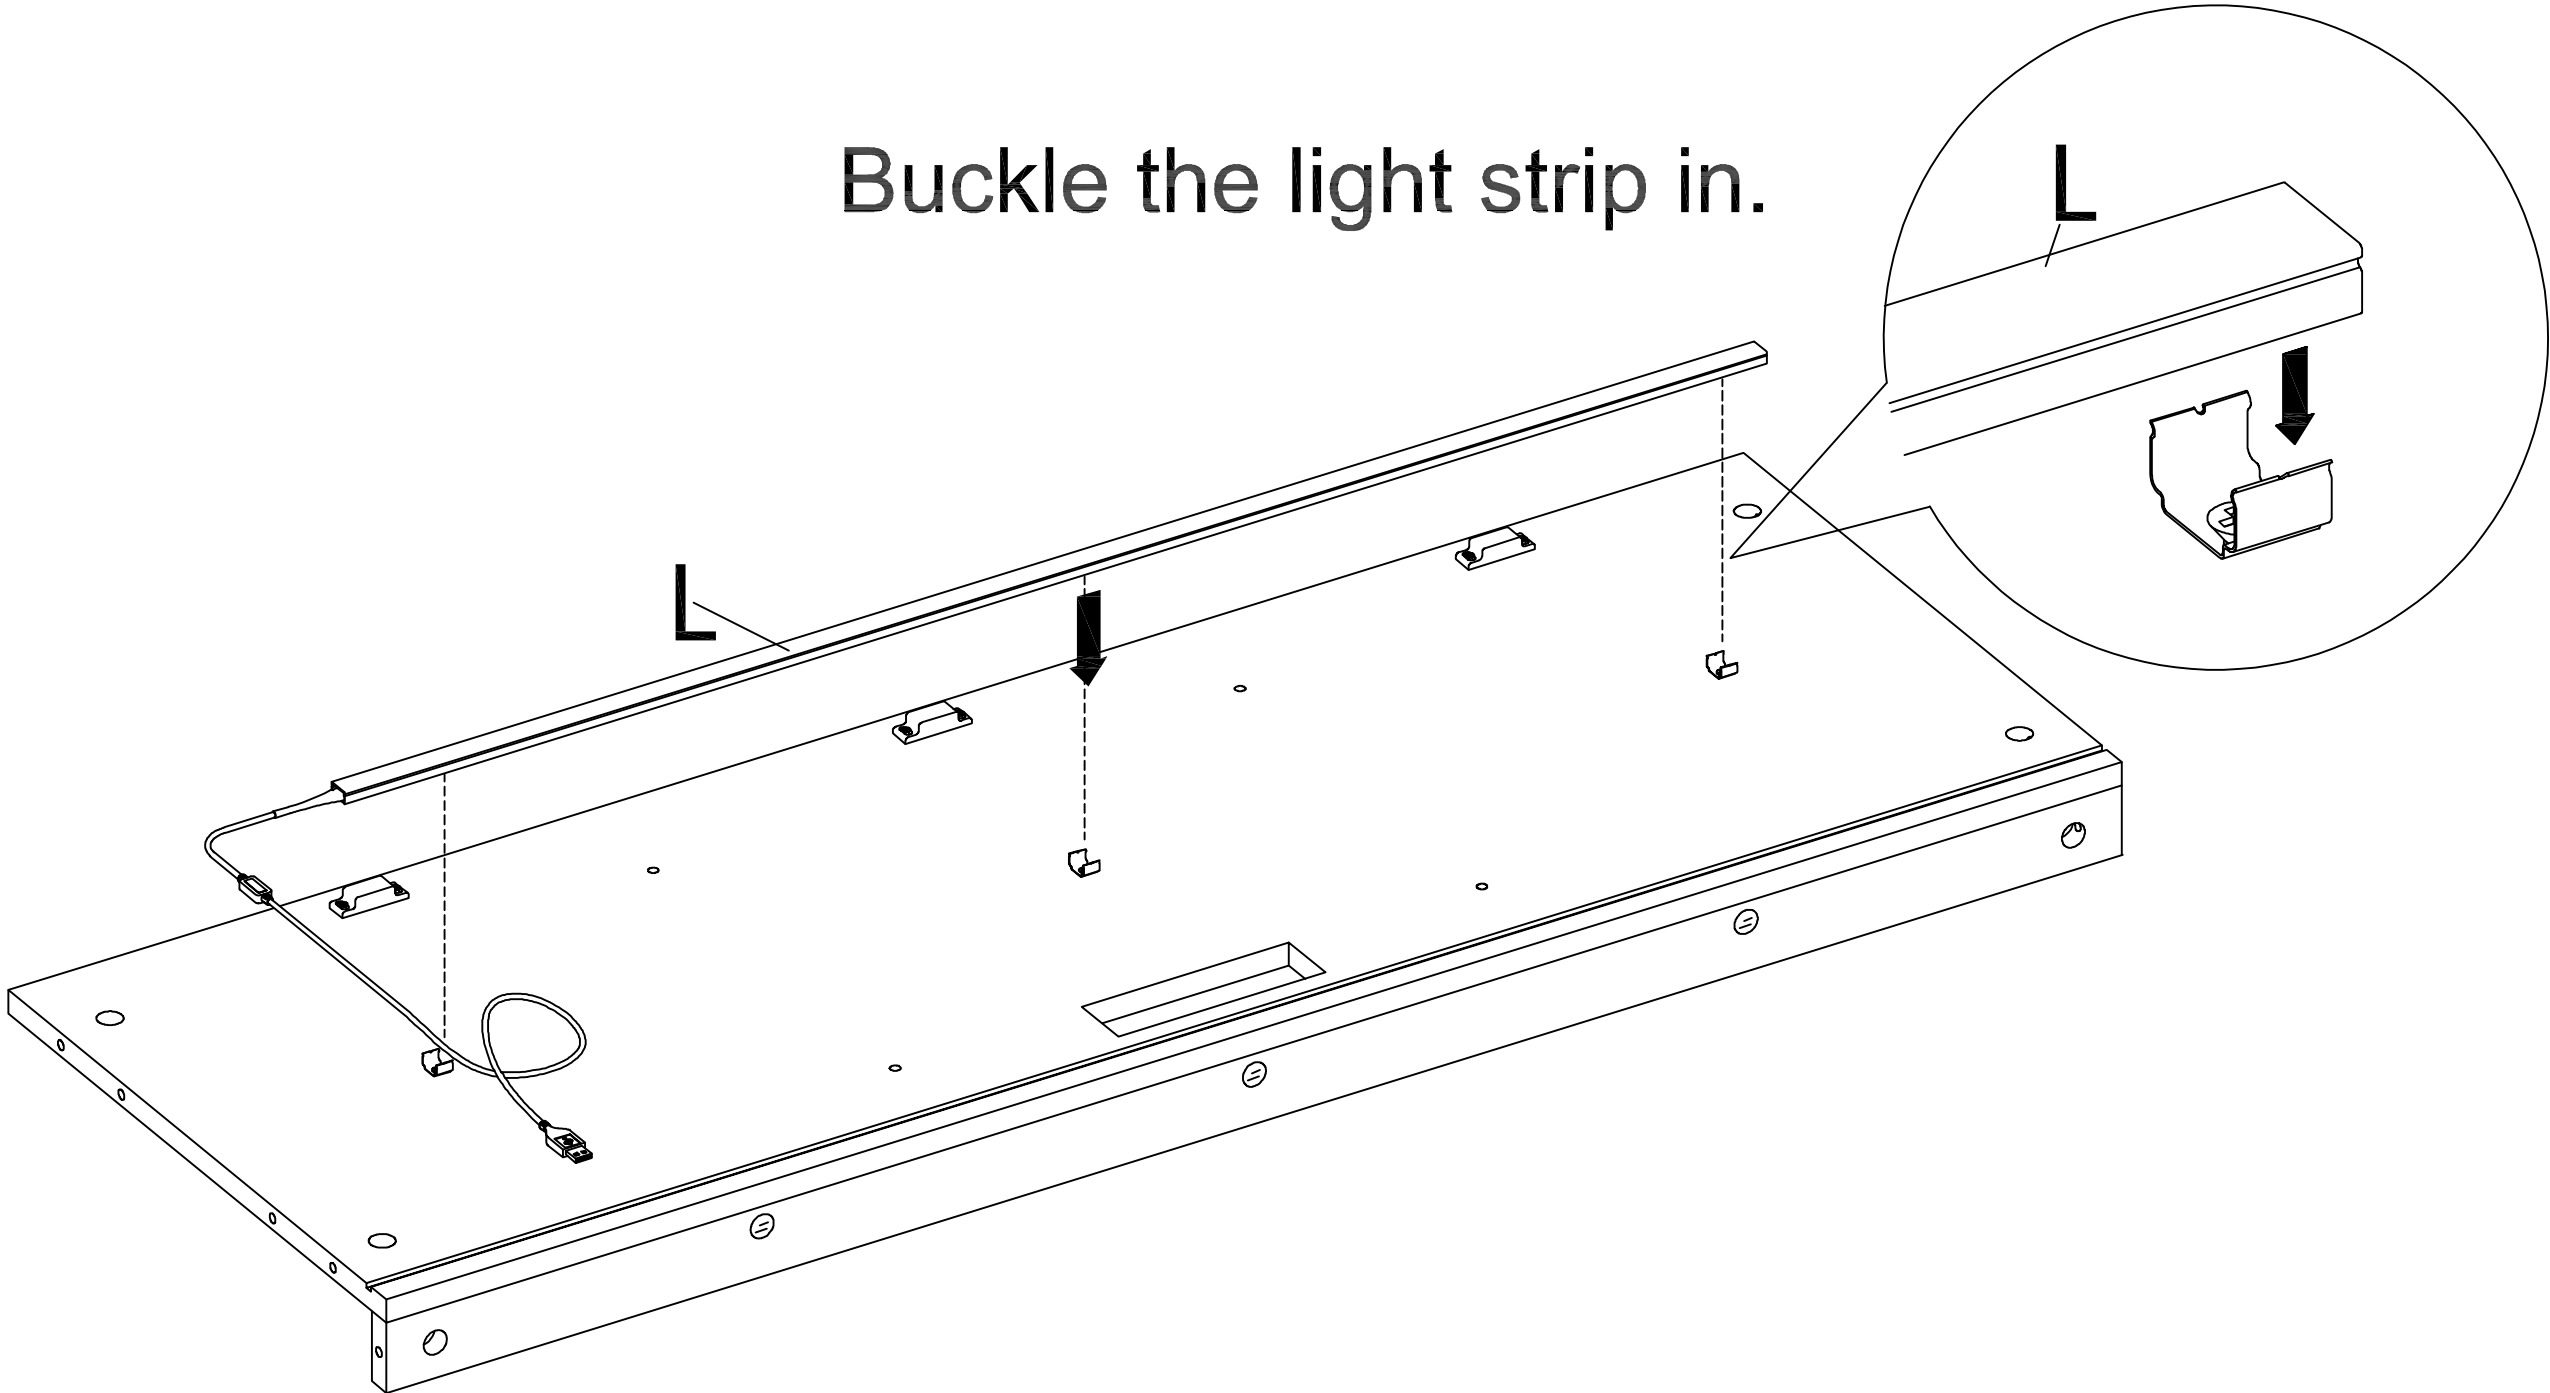




Step:6

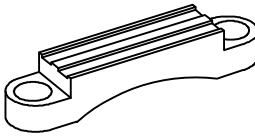T	 M3*14mm	X4
M		X2

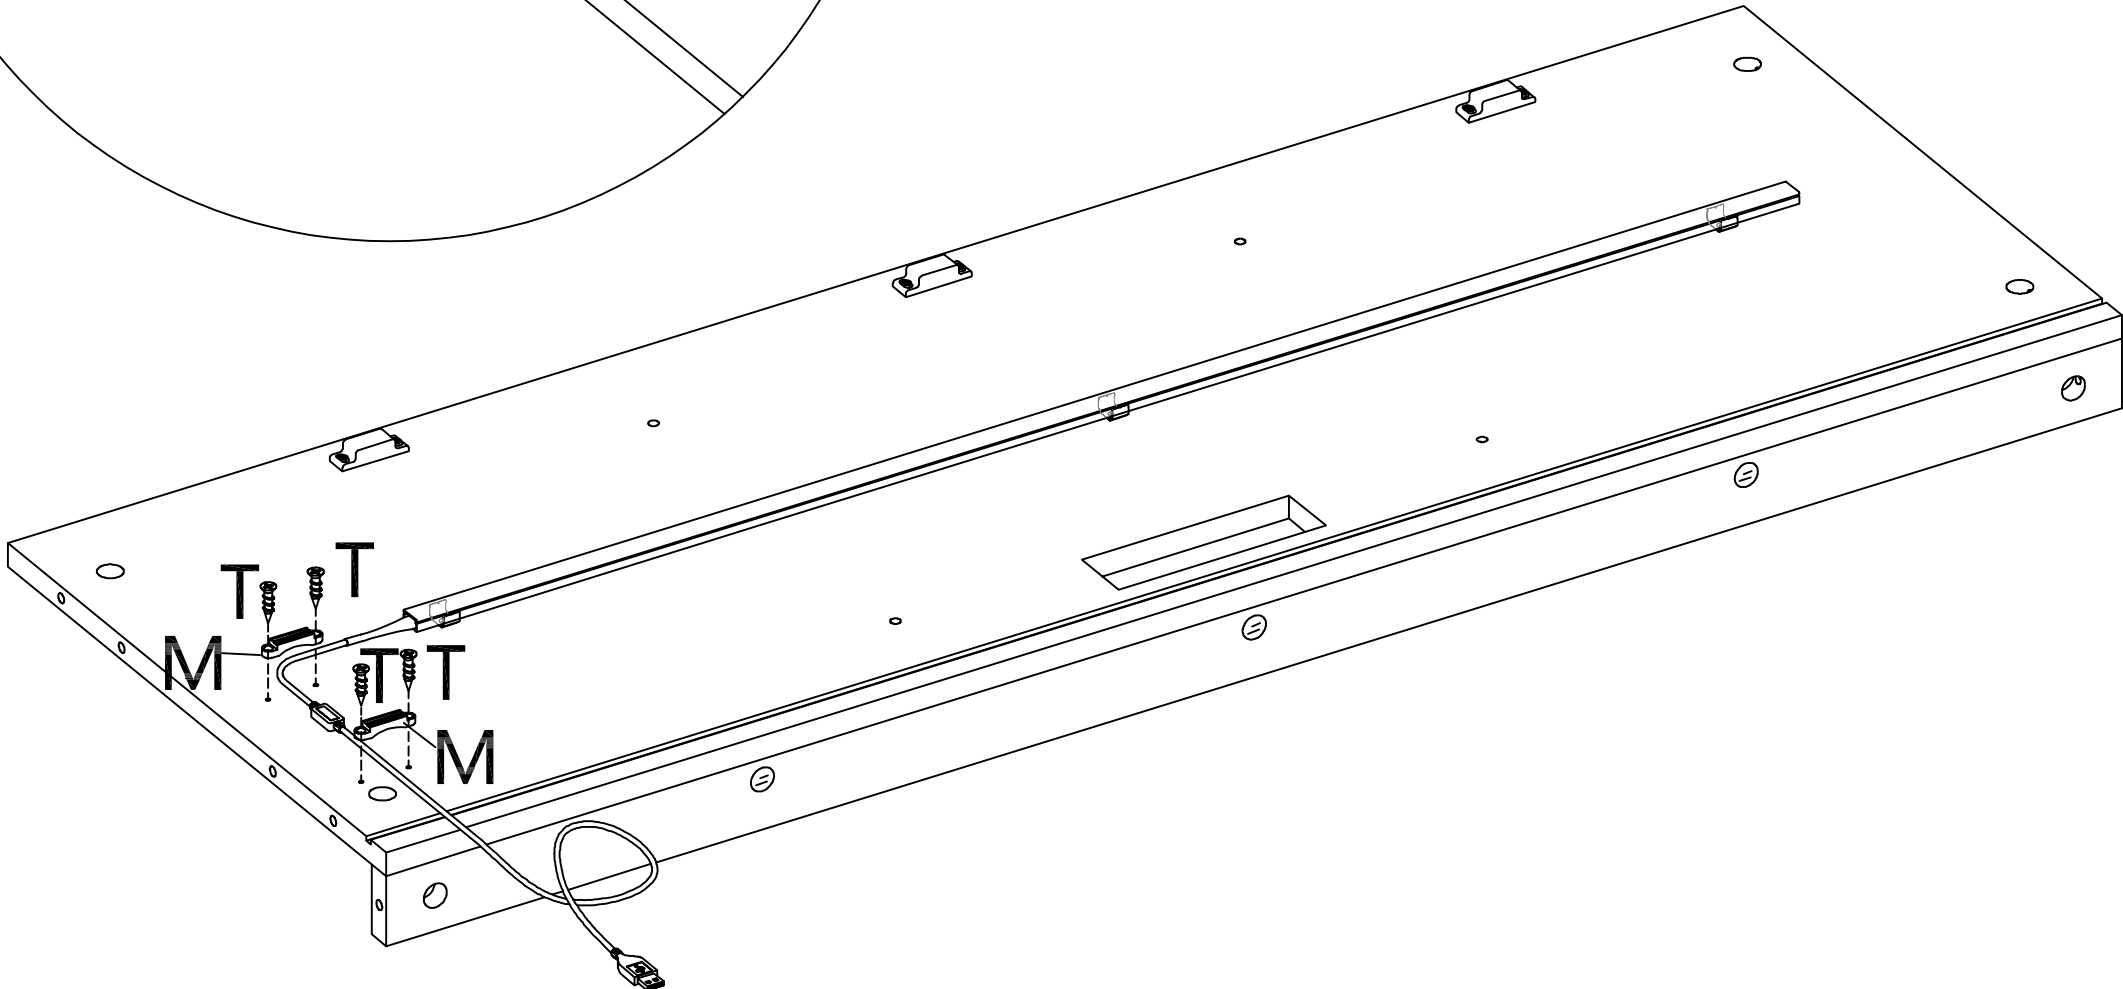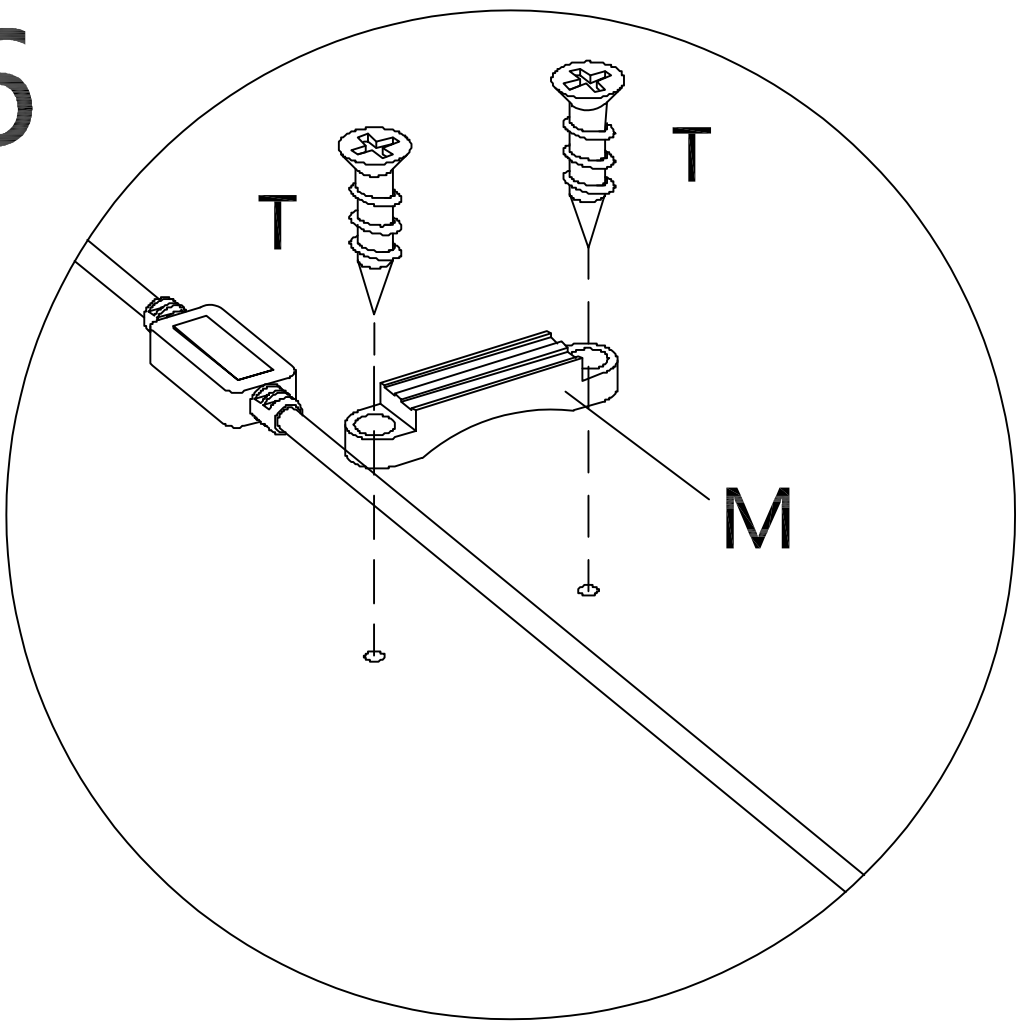


Step:7

A		X4
---	---	----

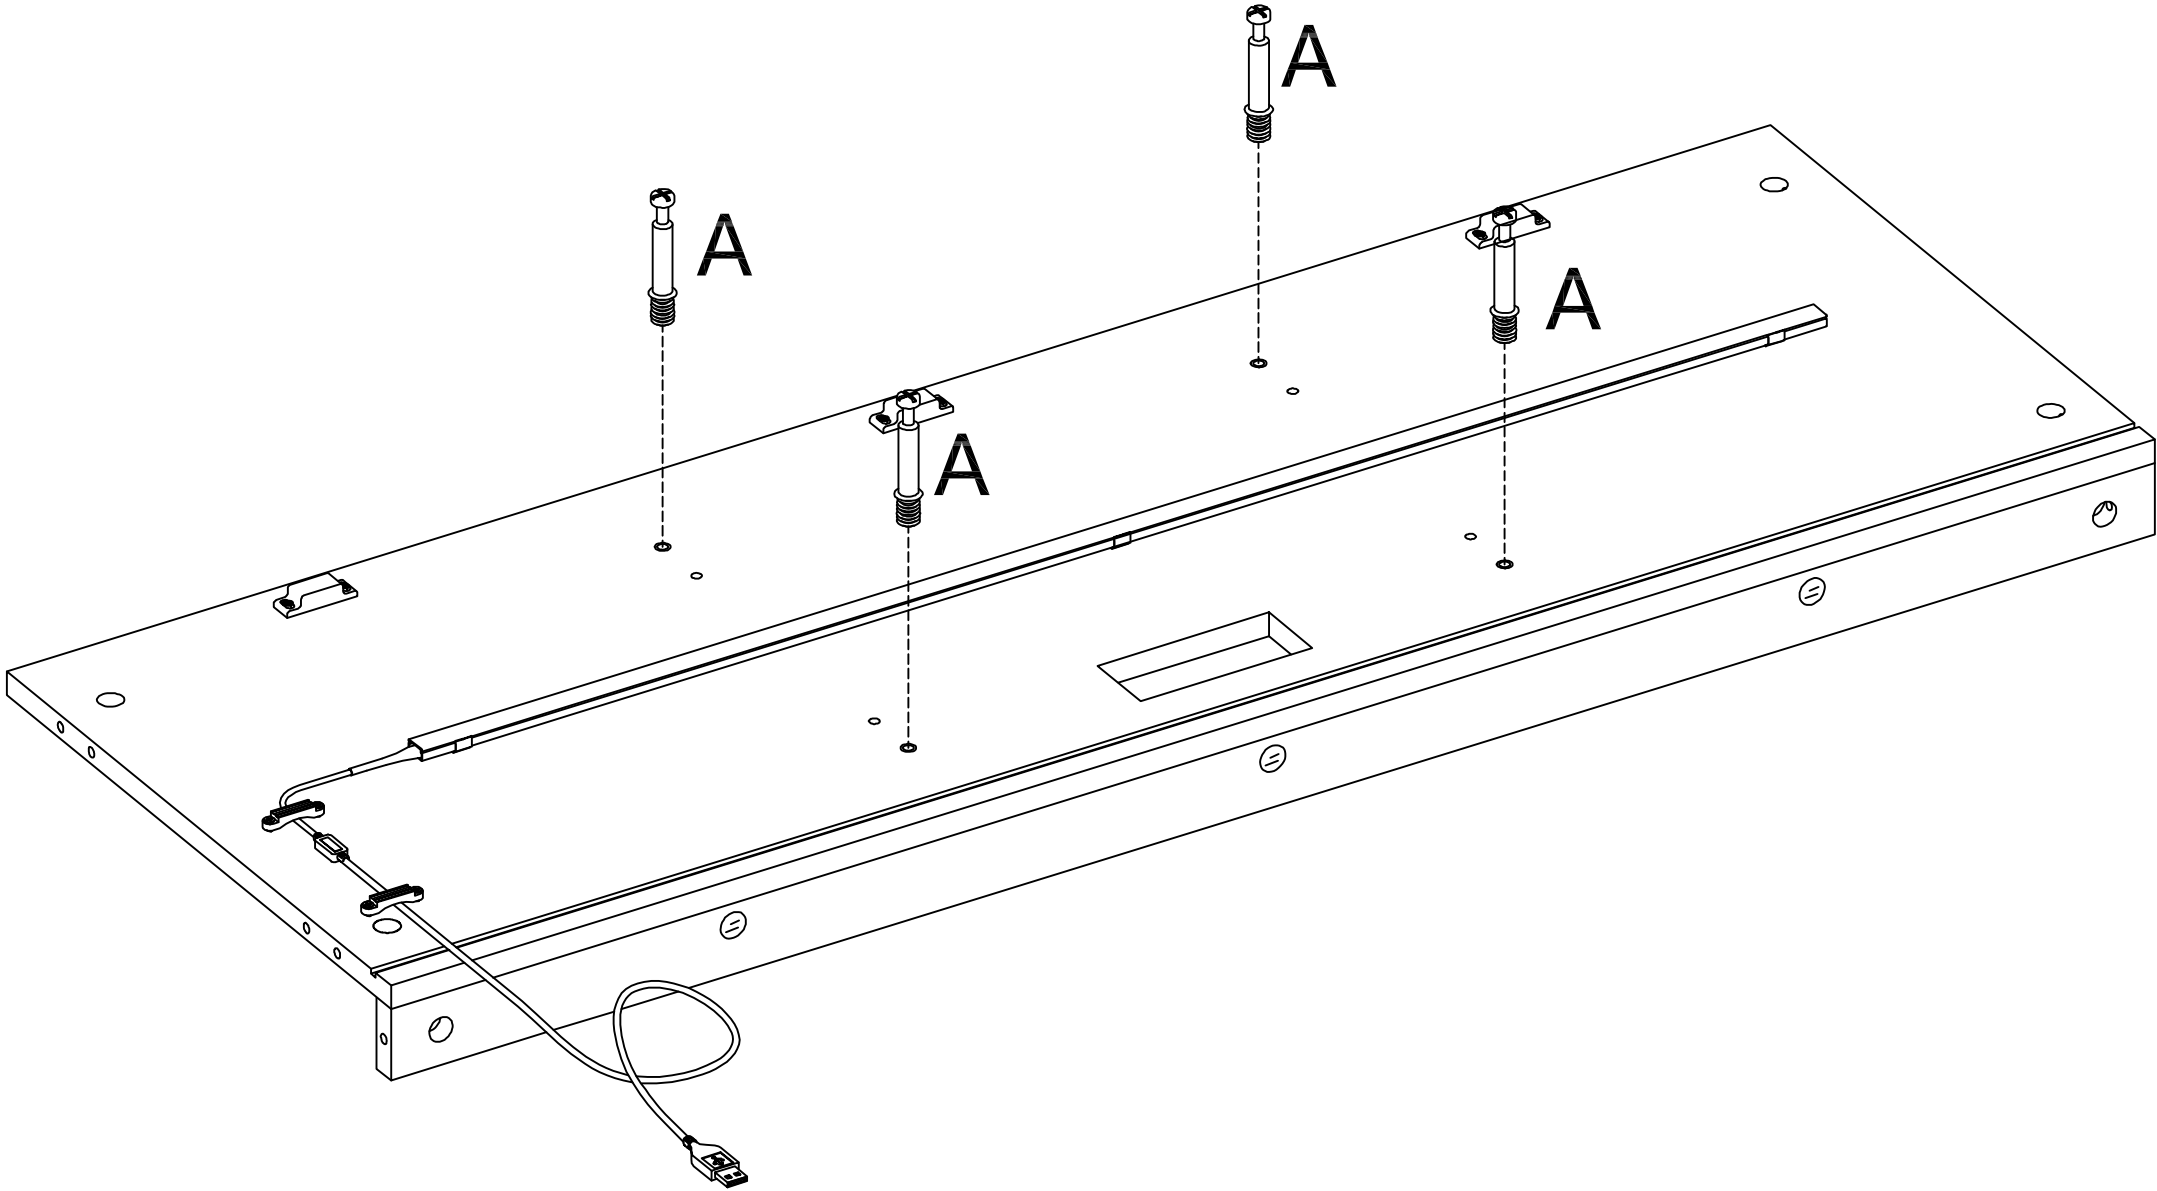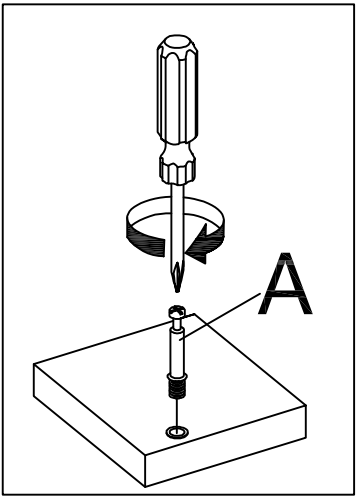

Step:8


K-2		X3
S	 M3.5*14mm	X6

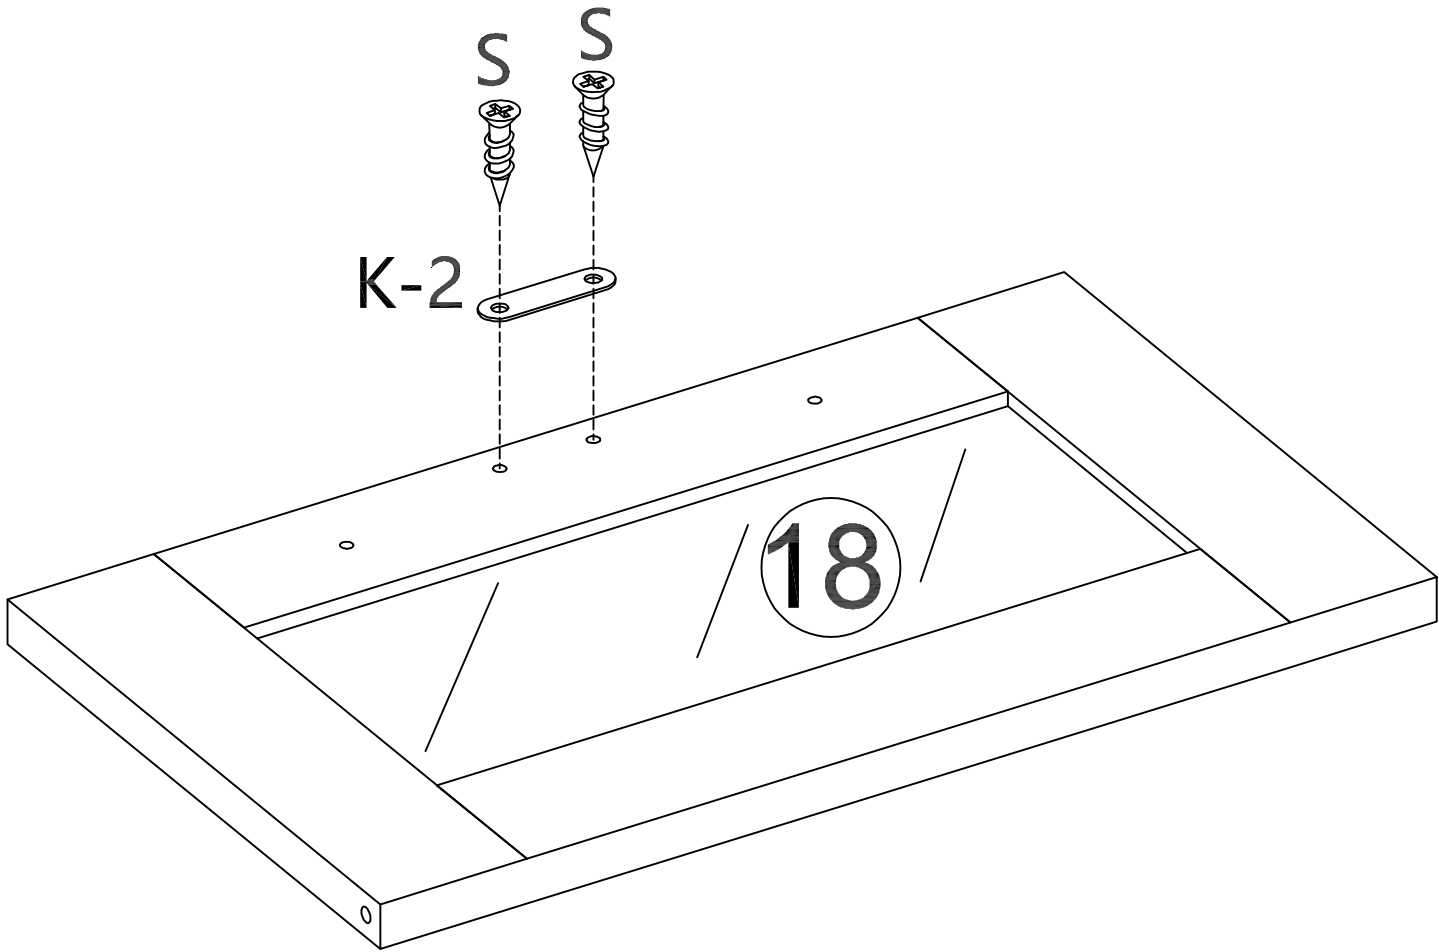

X 3

Step:9


J		X3
H		X6

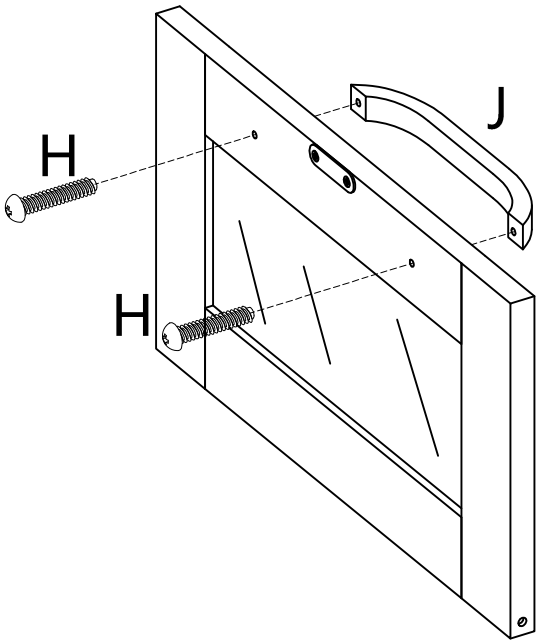

X 3


Step:10

Q		X6
---	---	----


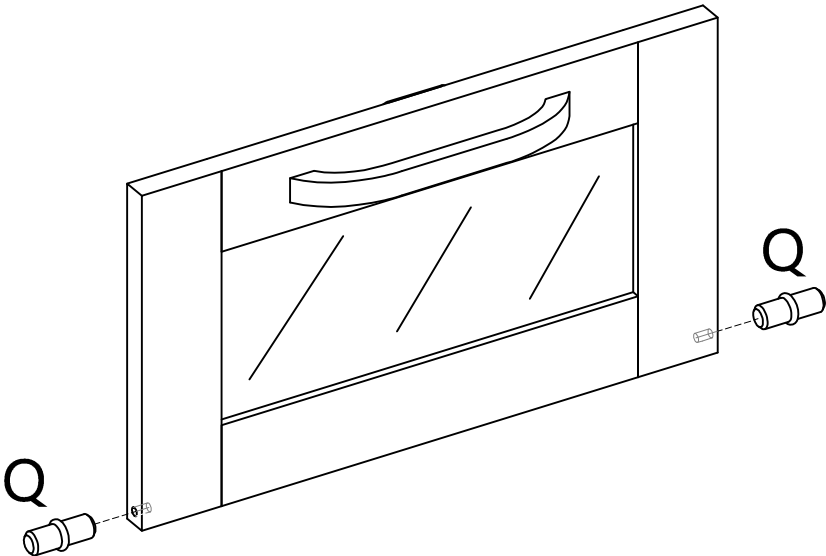




X 3

Step:11

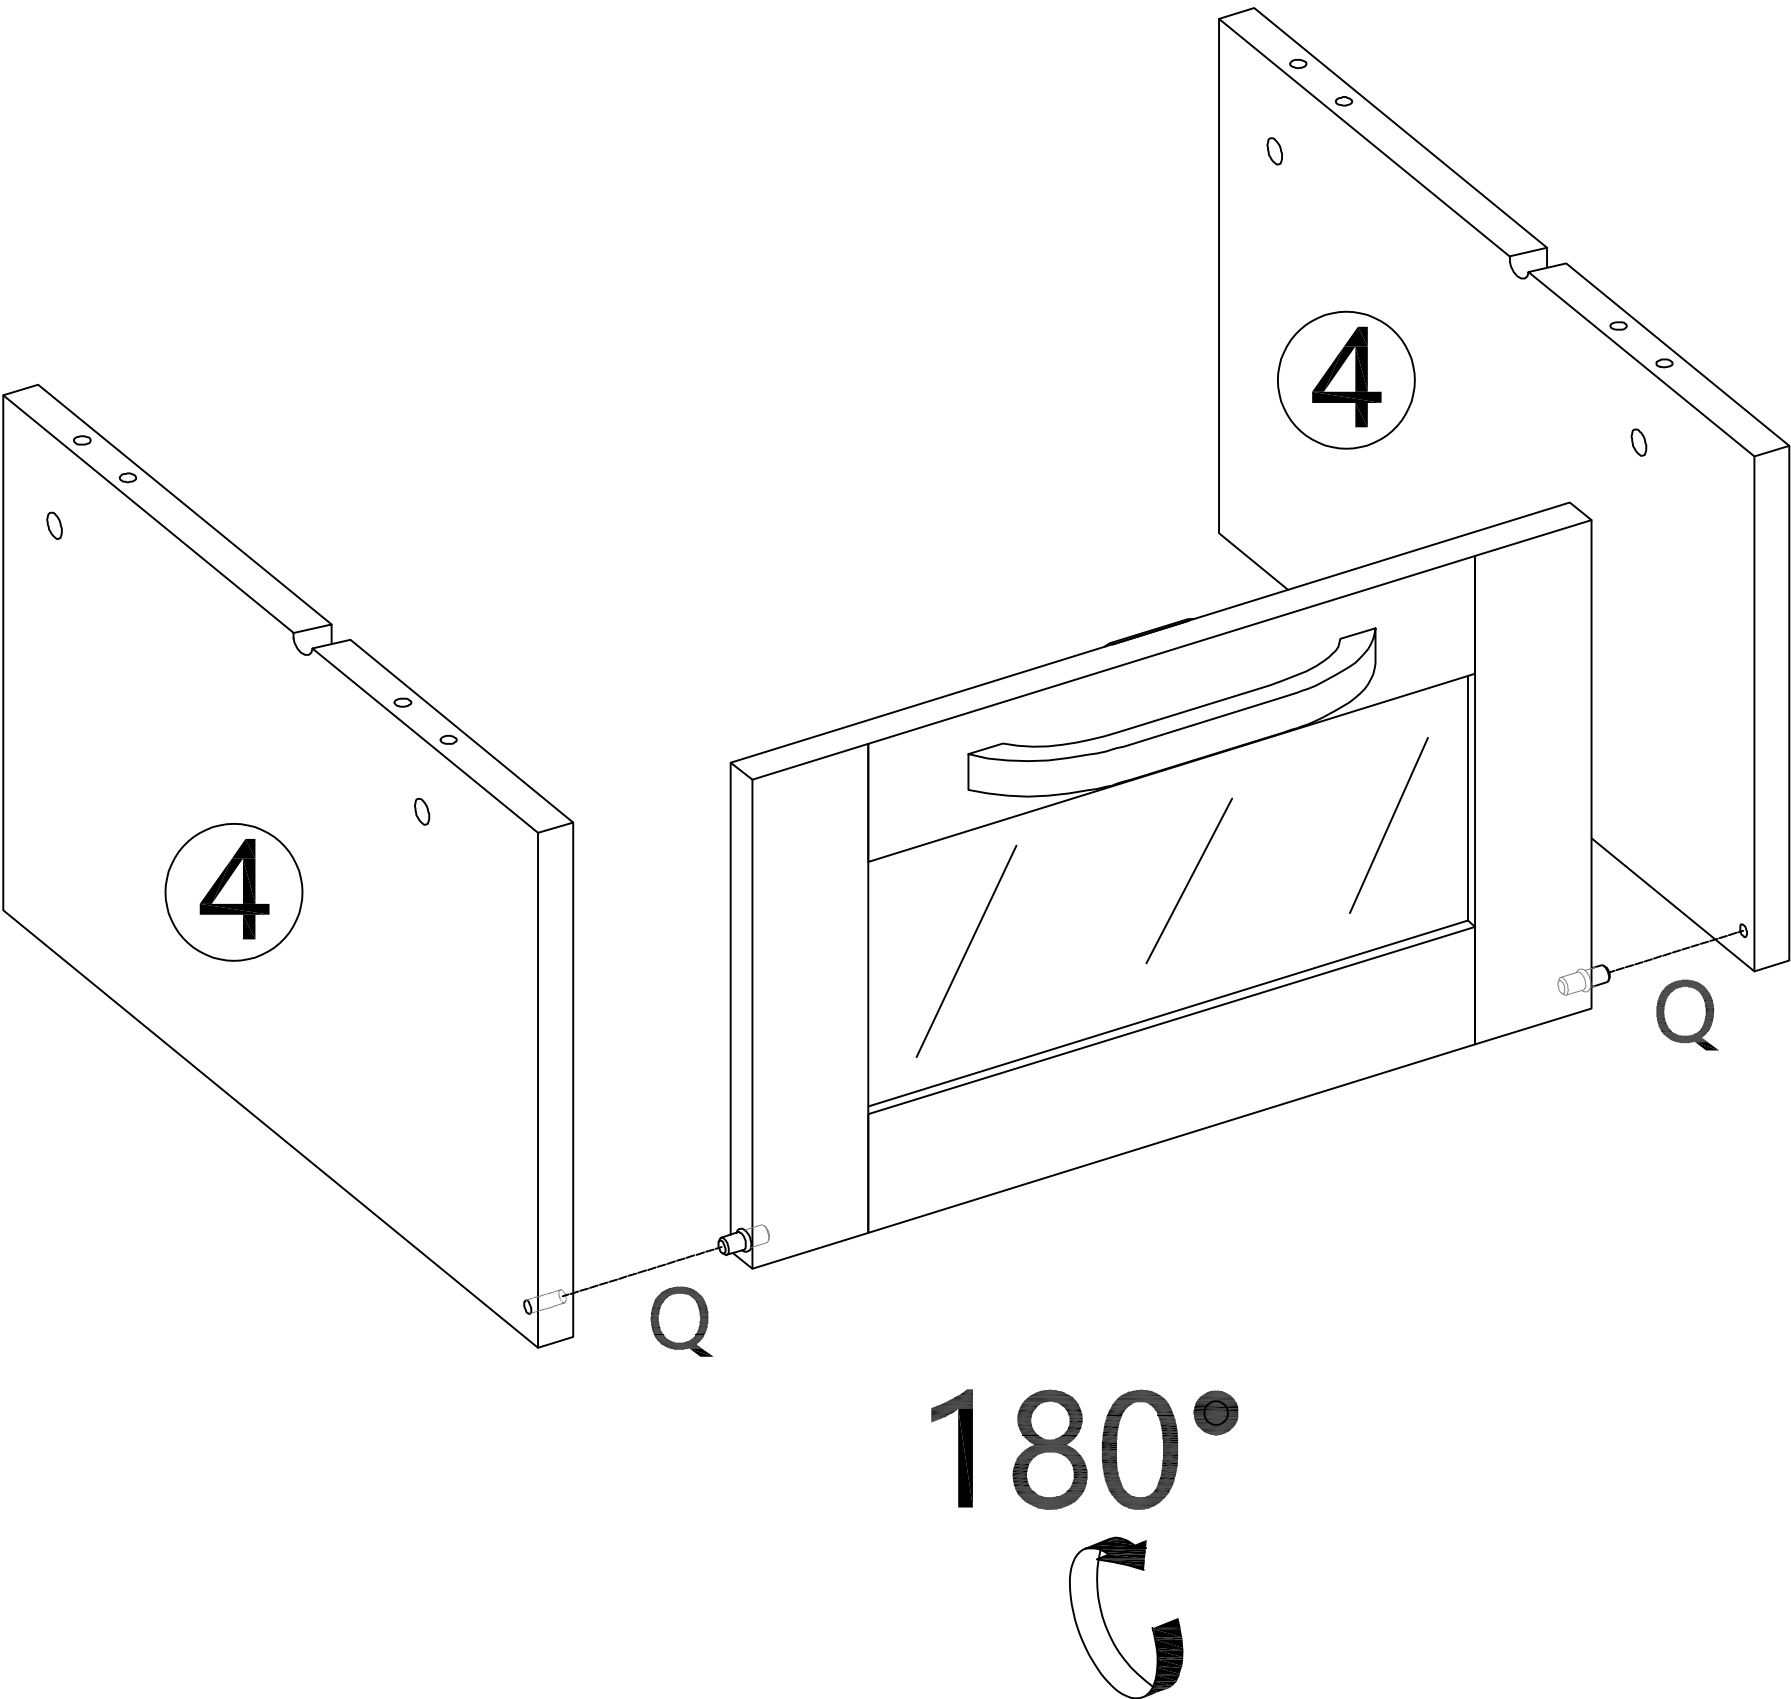




Step:12

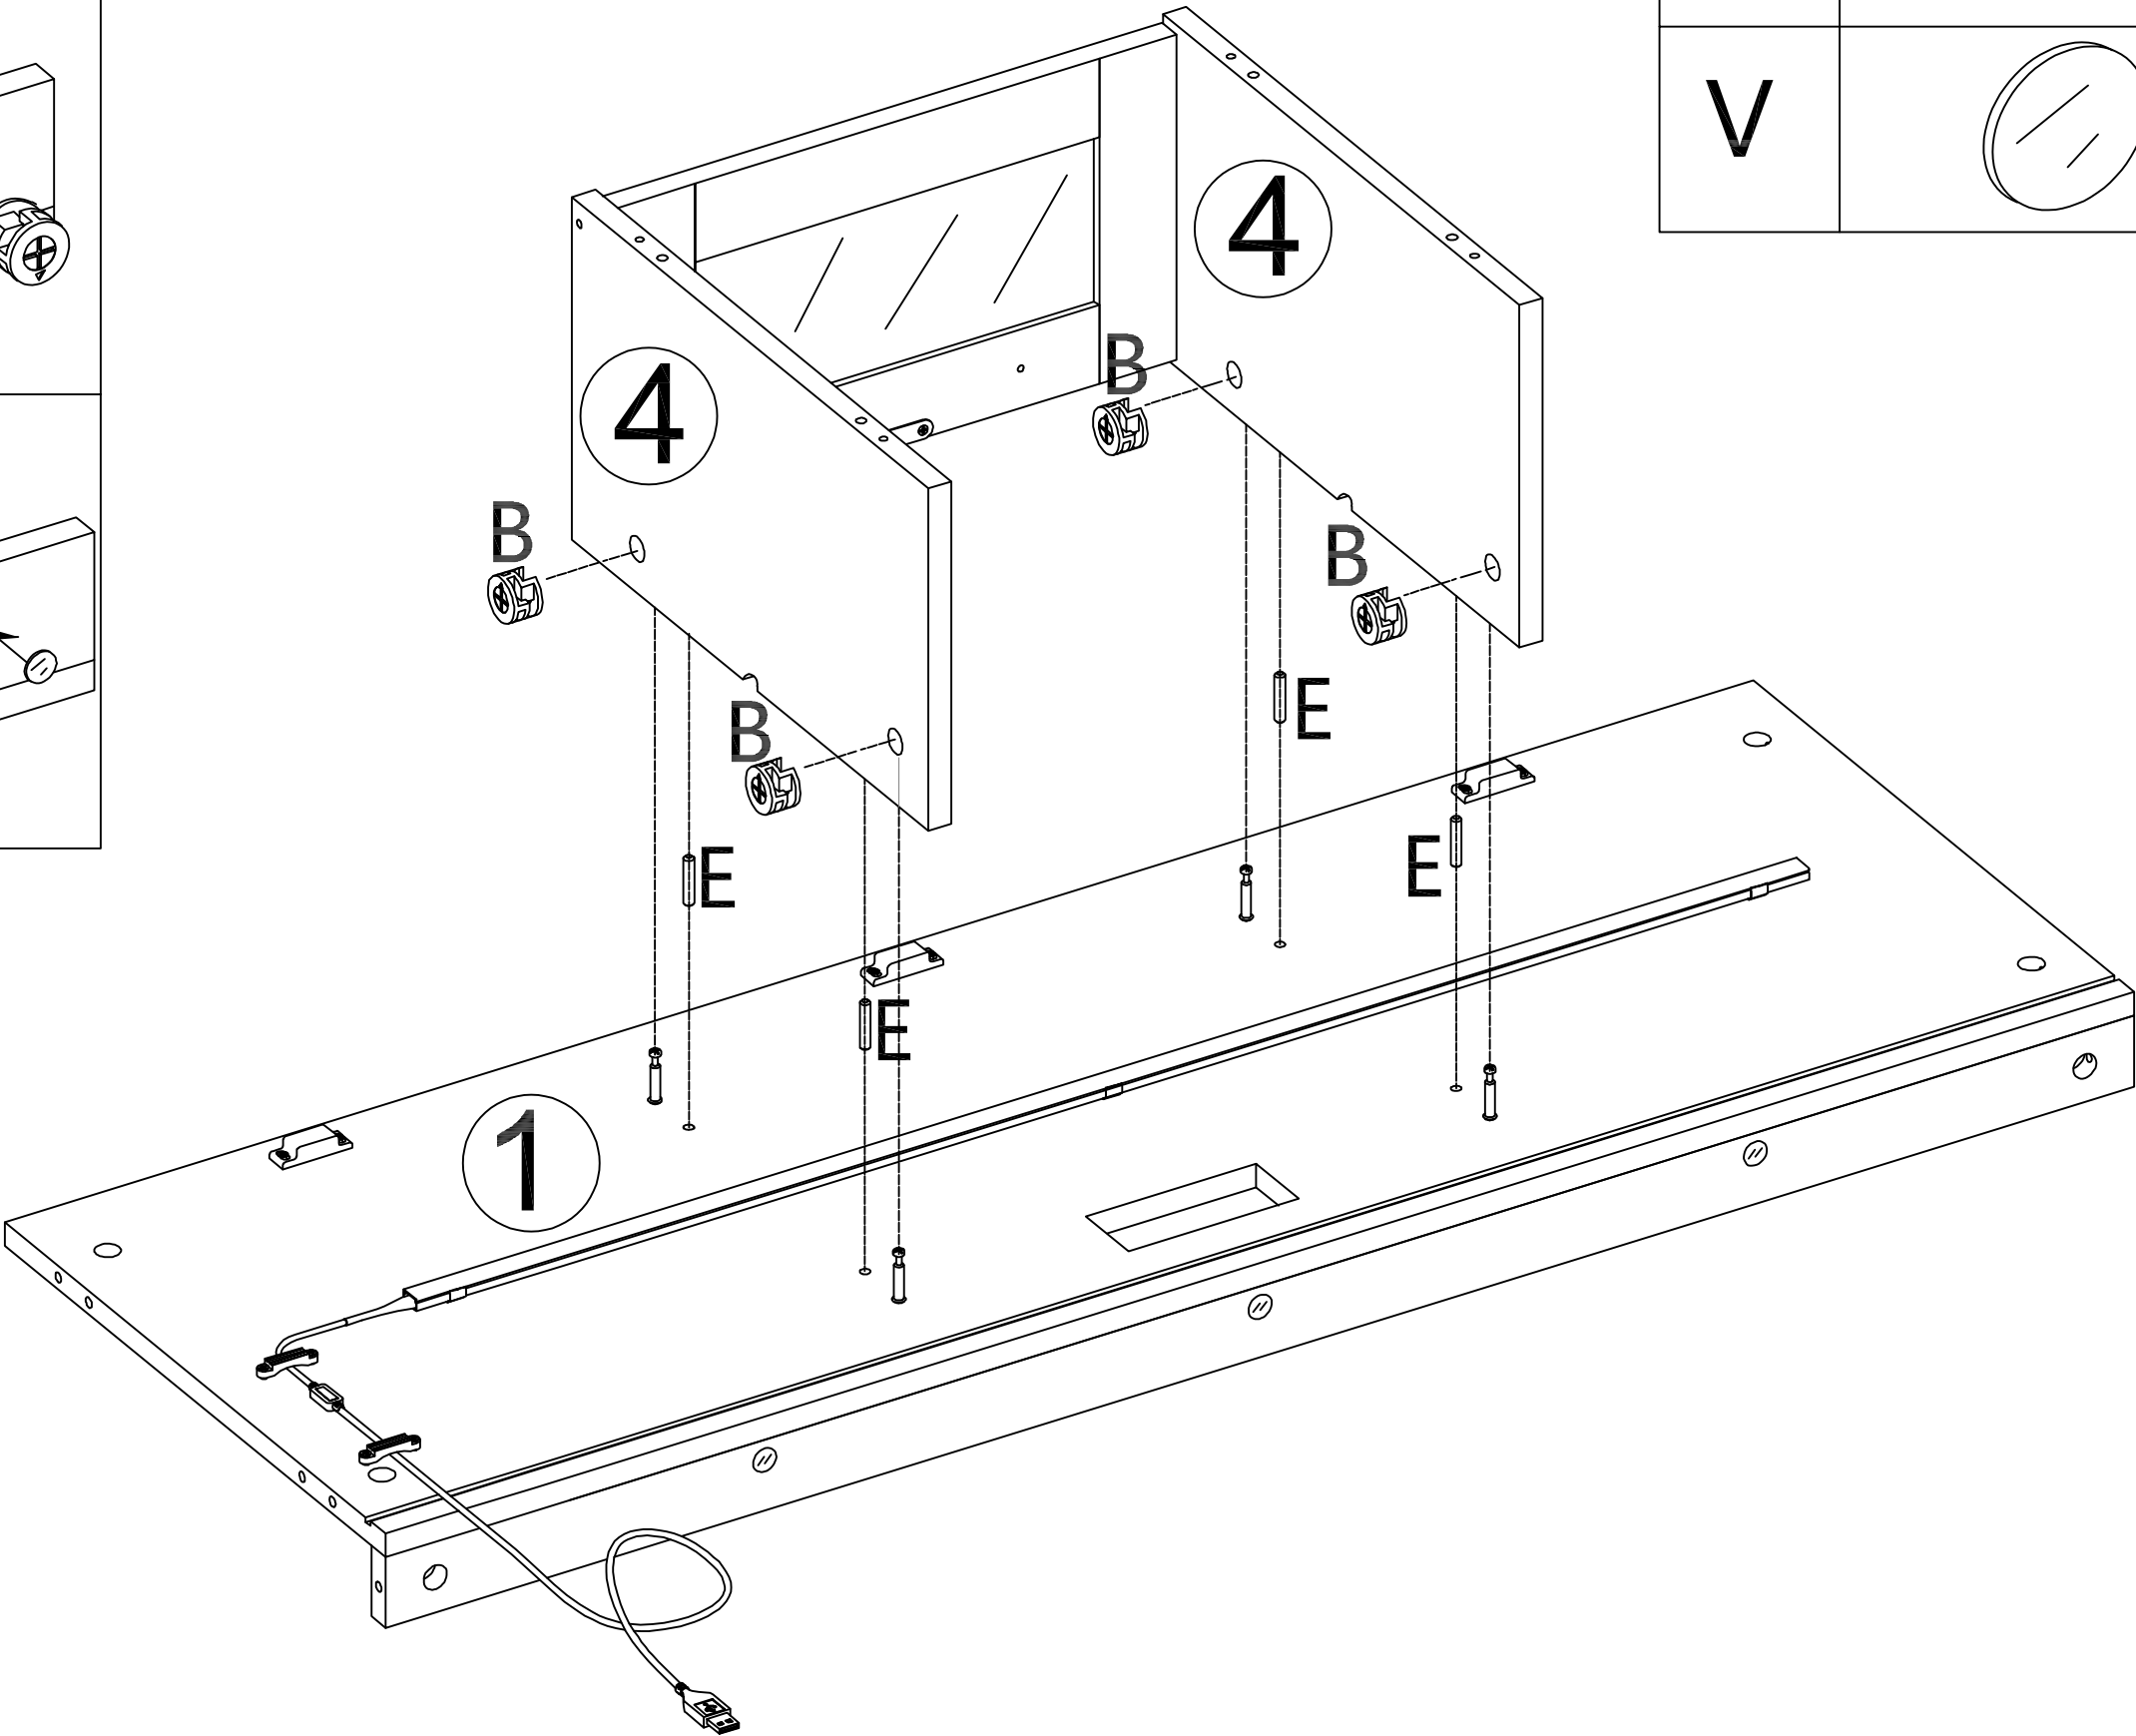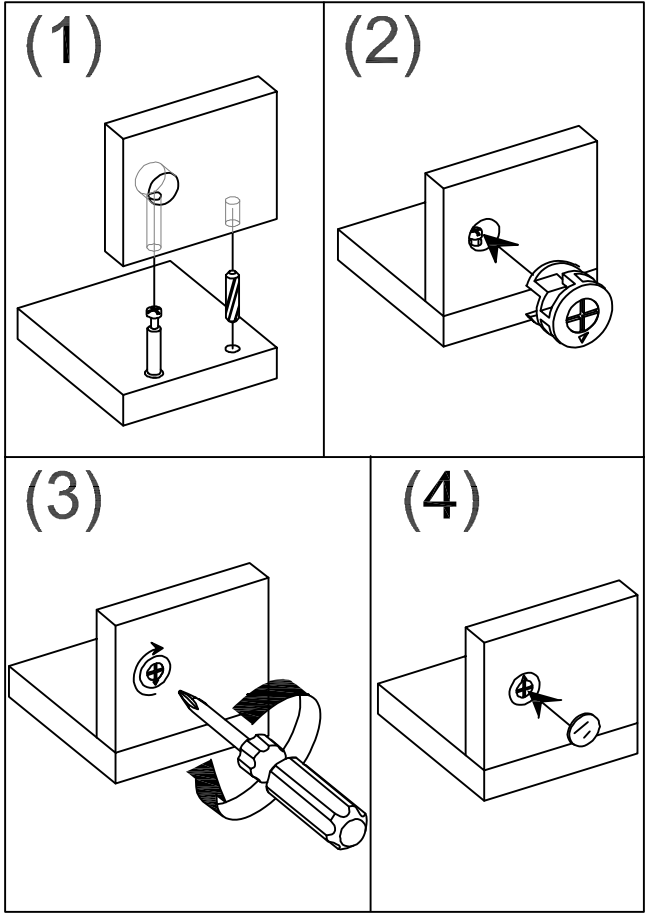

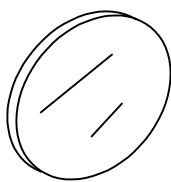
B	 φ15*12mm	X4
E	 φ8*30mm	X4
V		X4


Step:13

A		X6
---	---	----

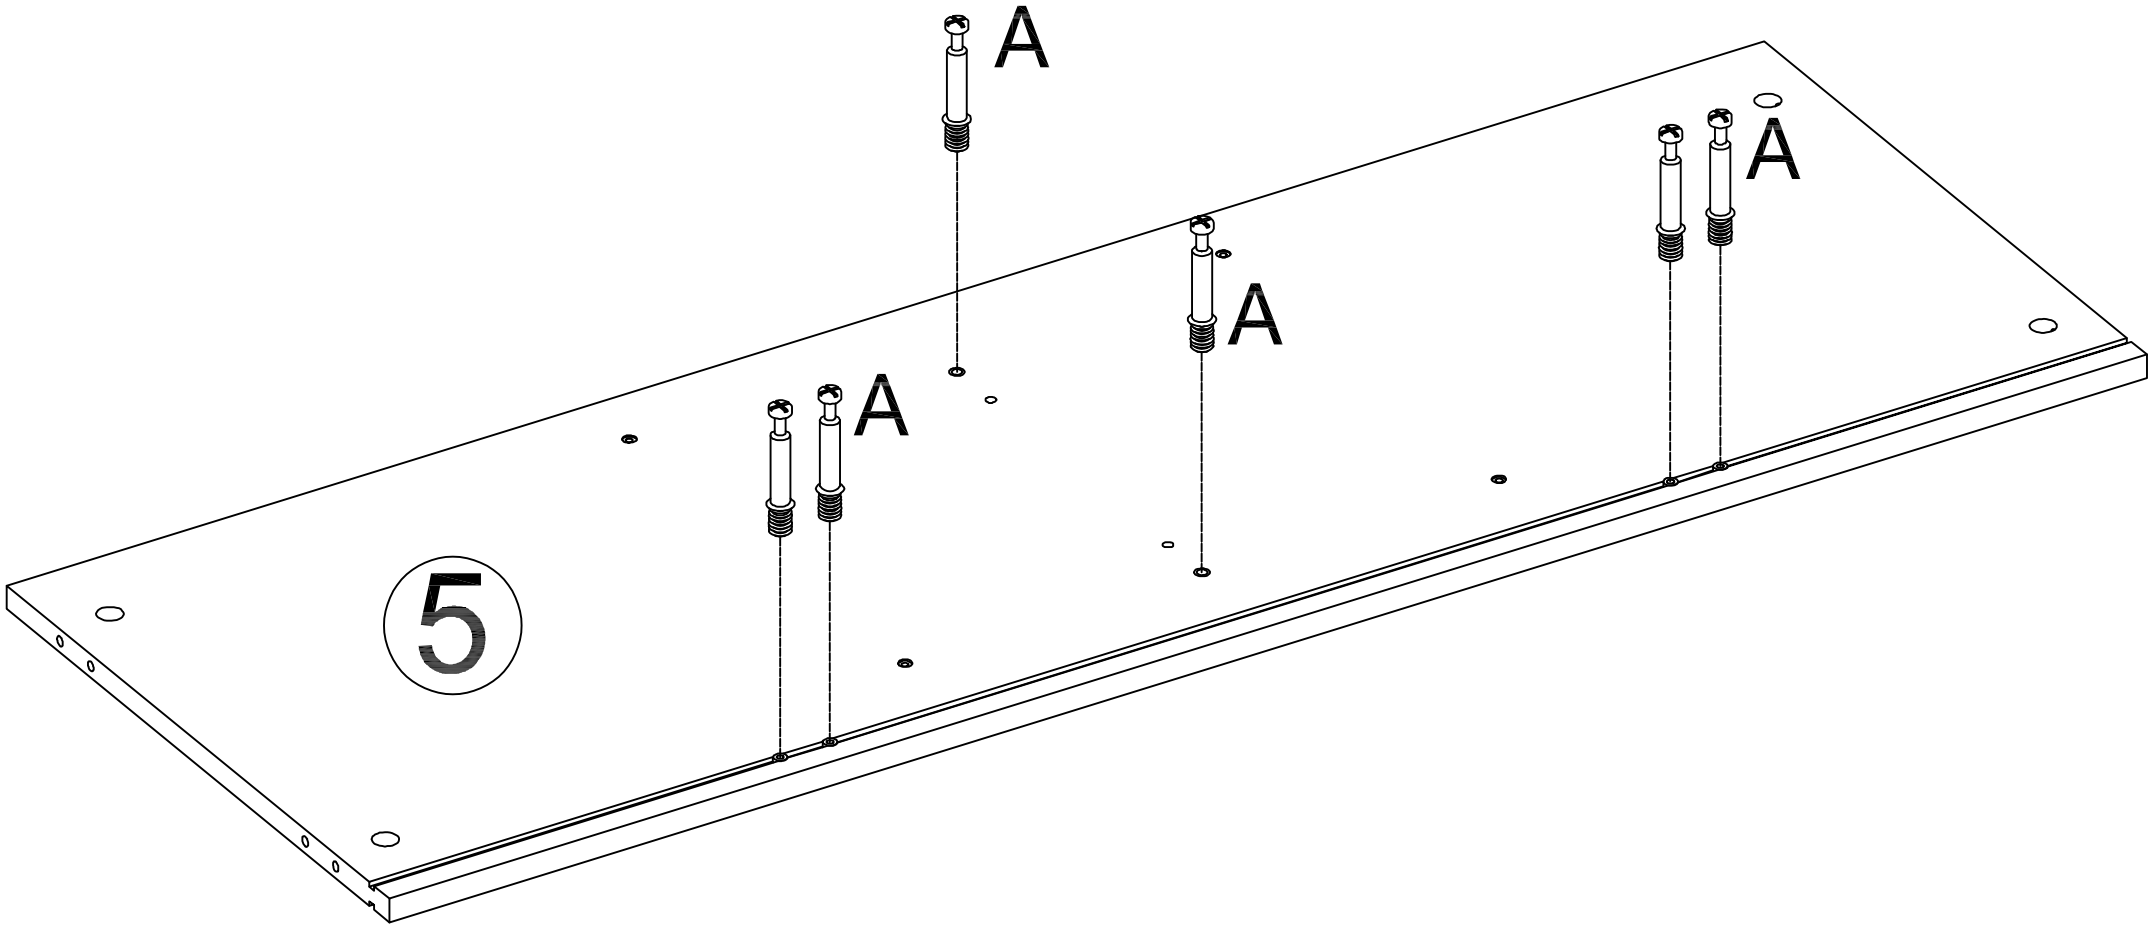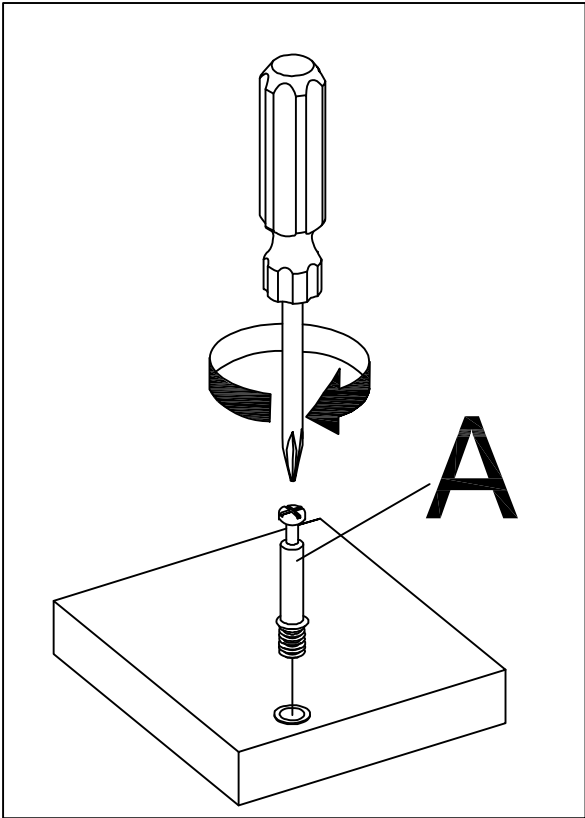




Step:14


E	 ø8*30mm	X4
---	--	----

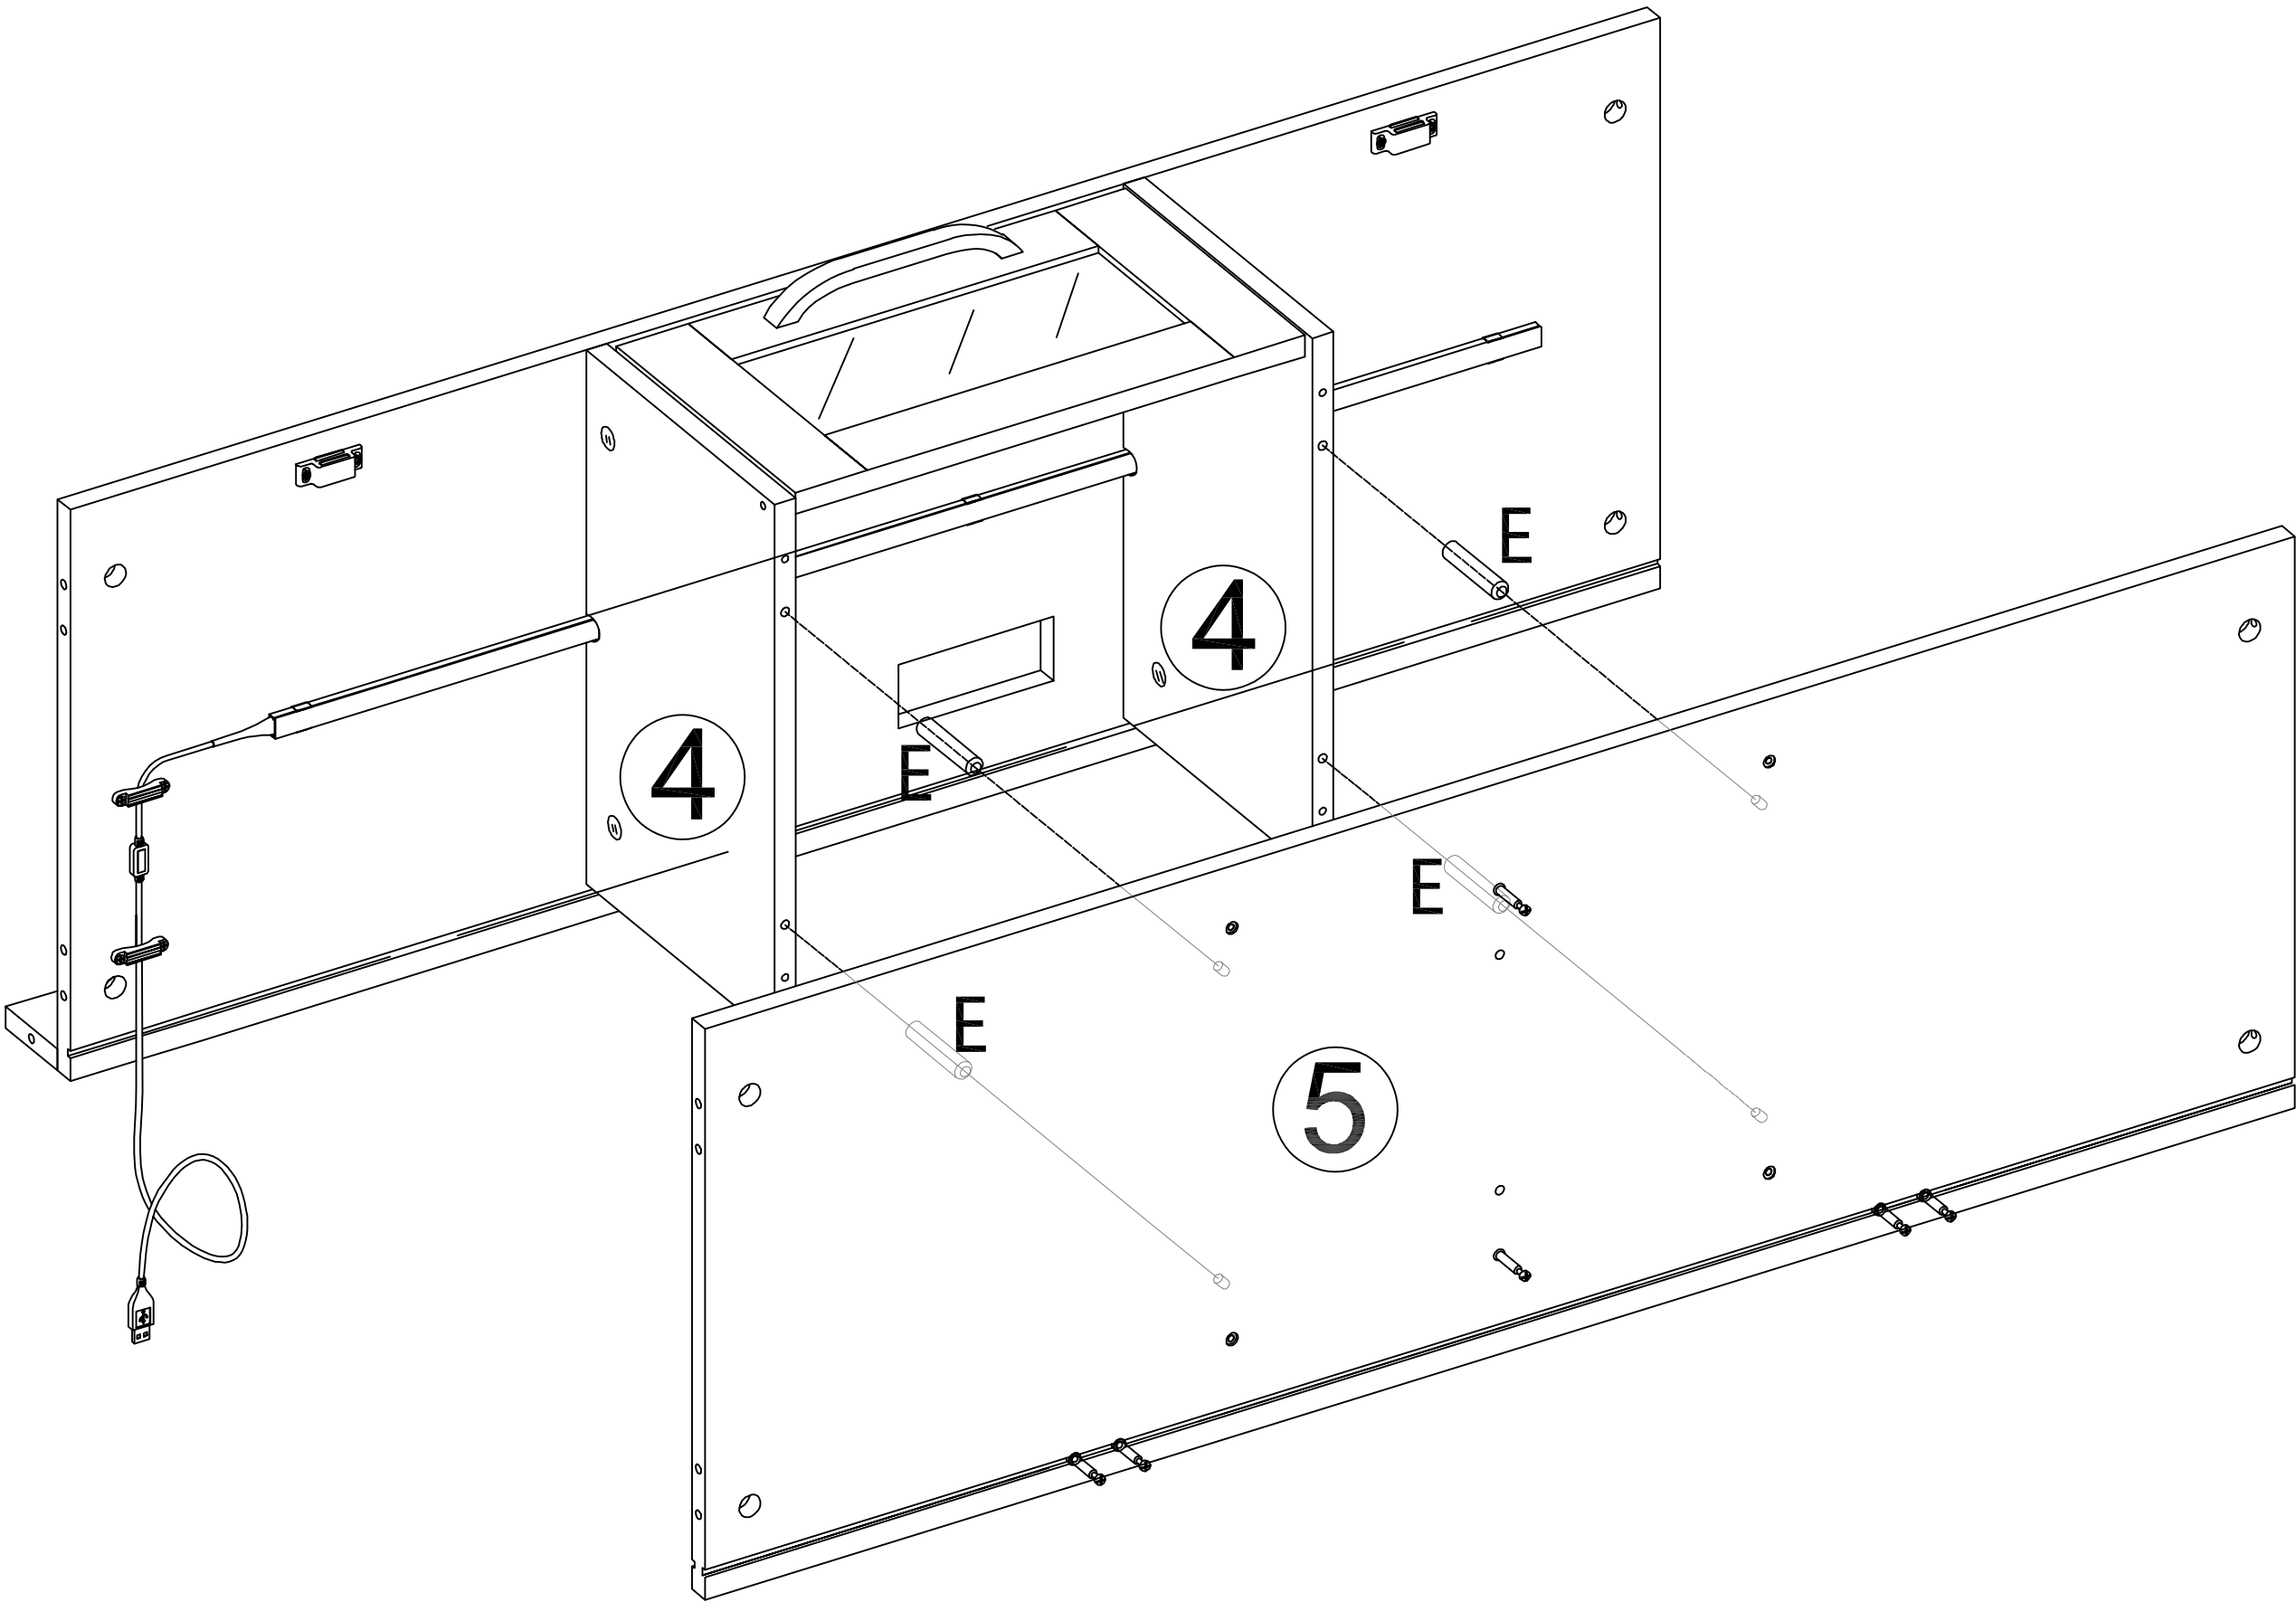


Step:15

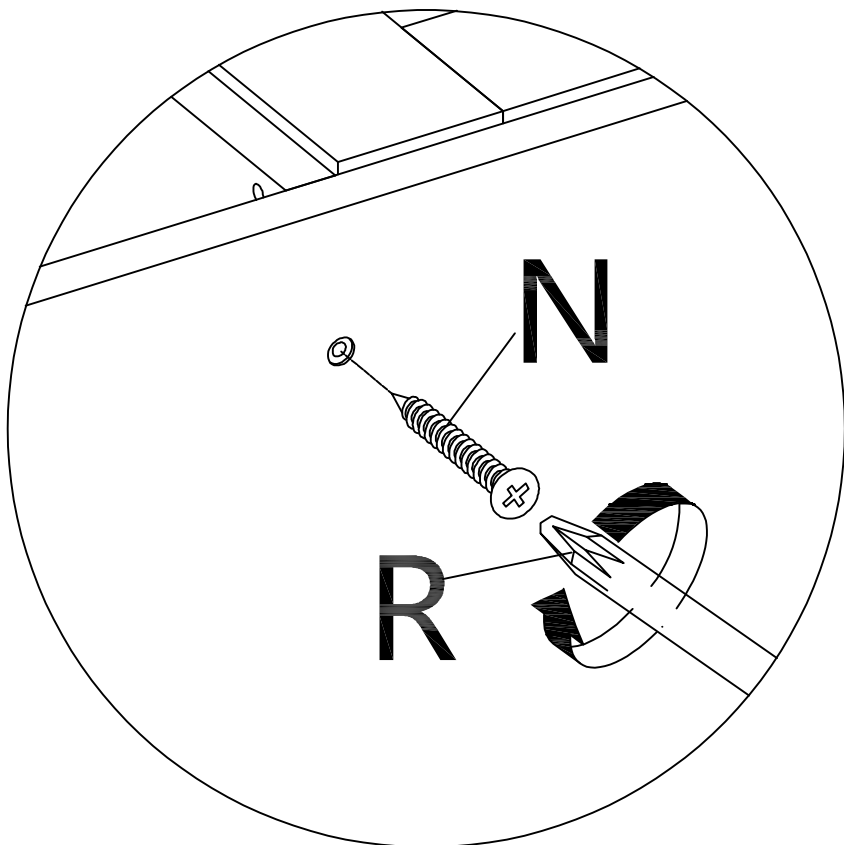

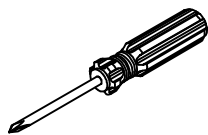
N		X4
R		X1

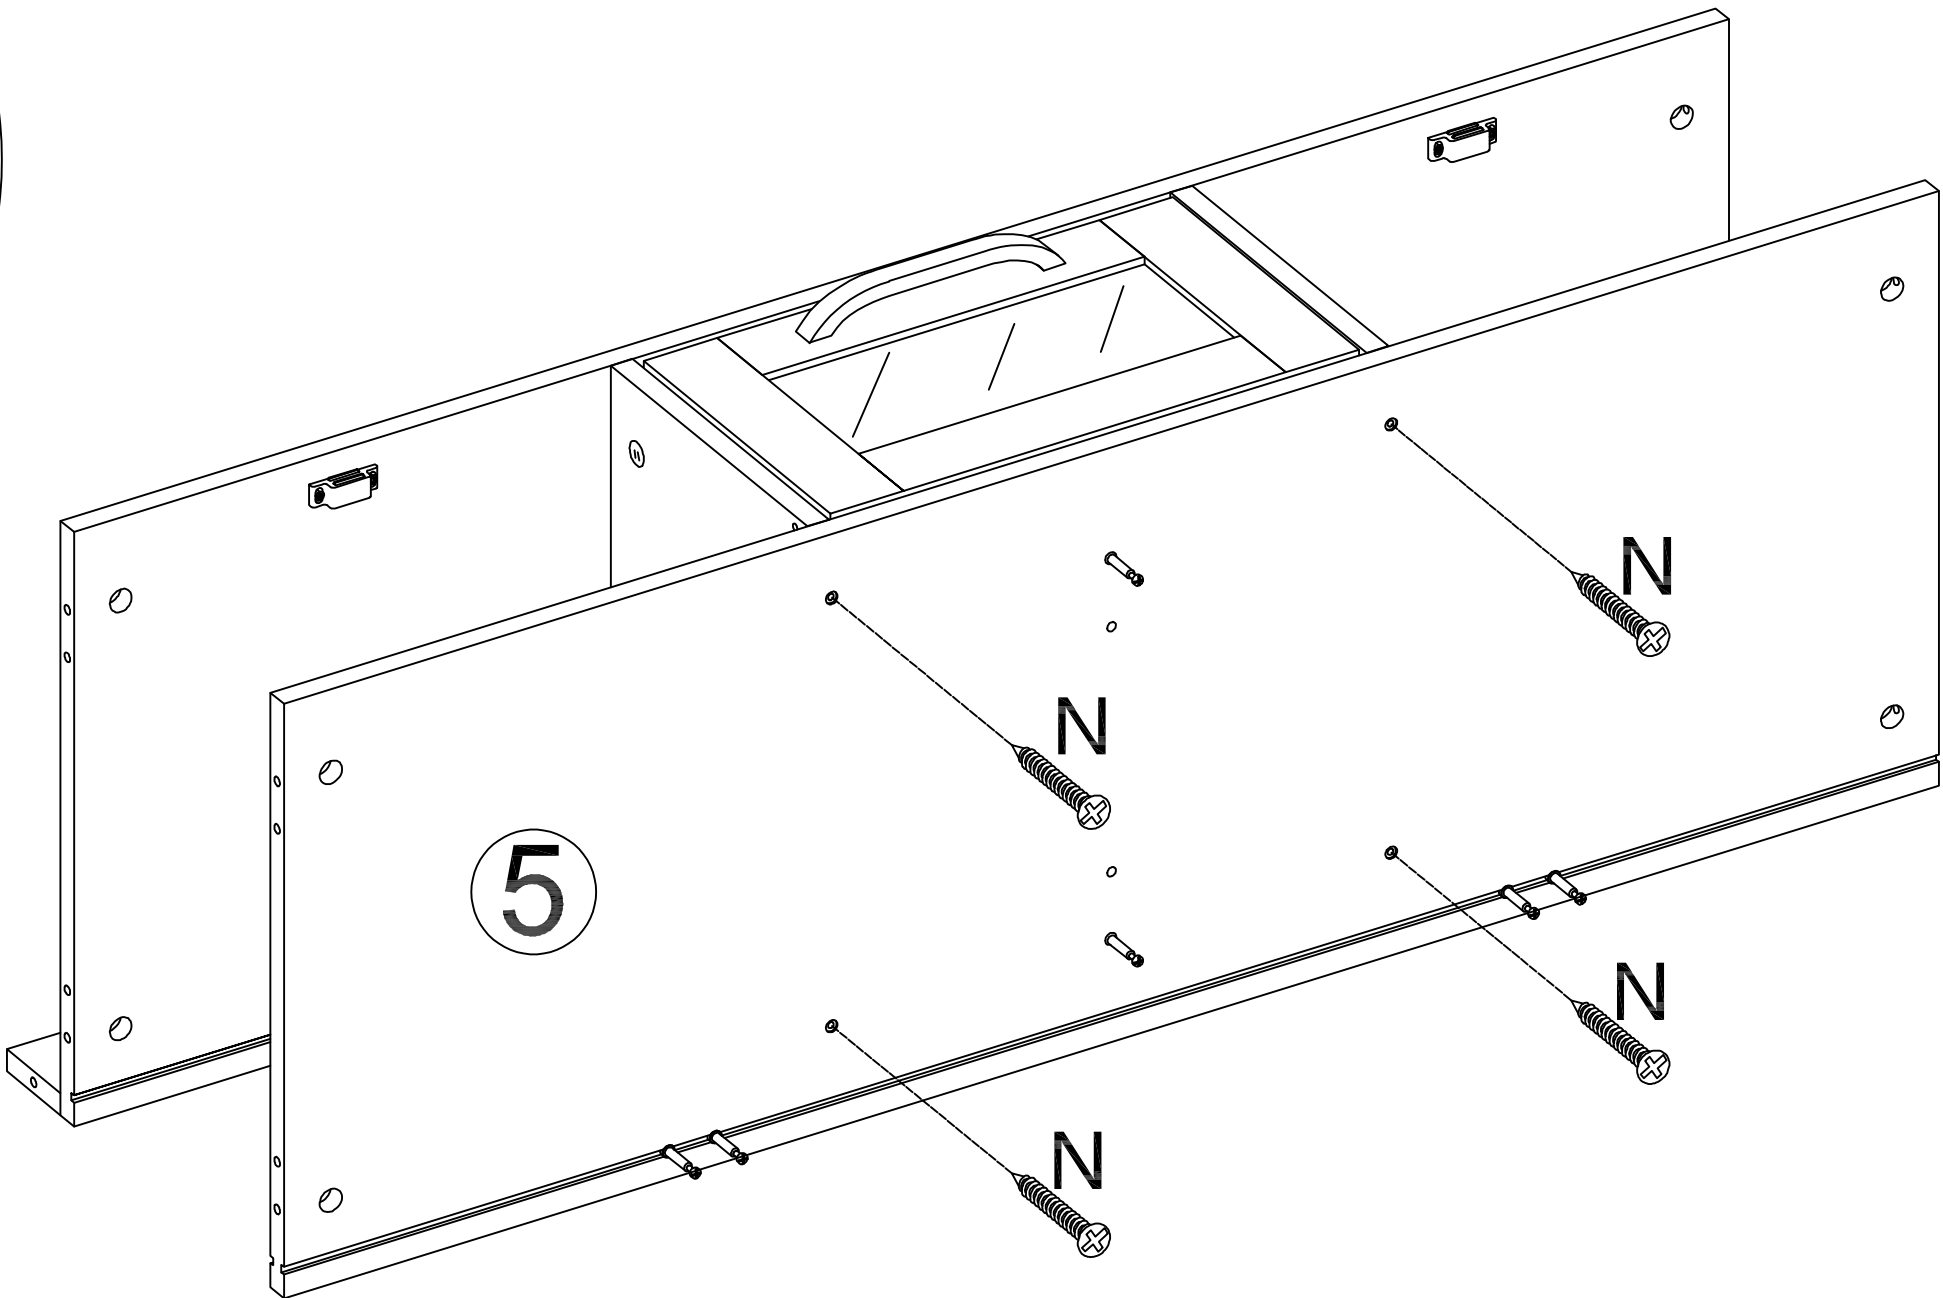




Step:16

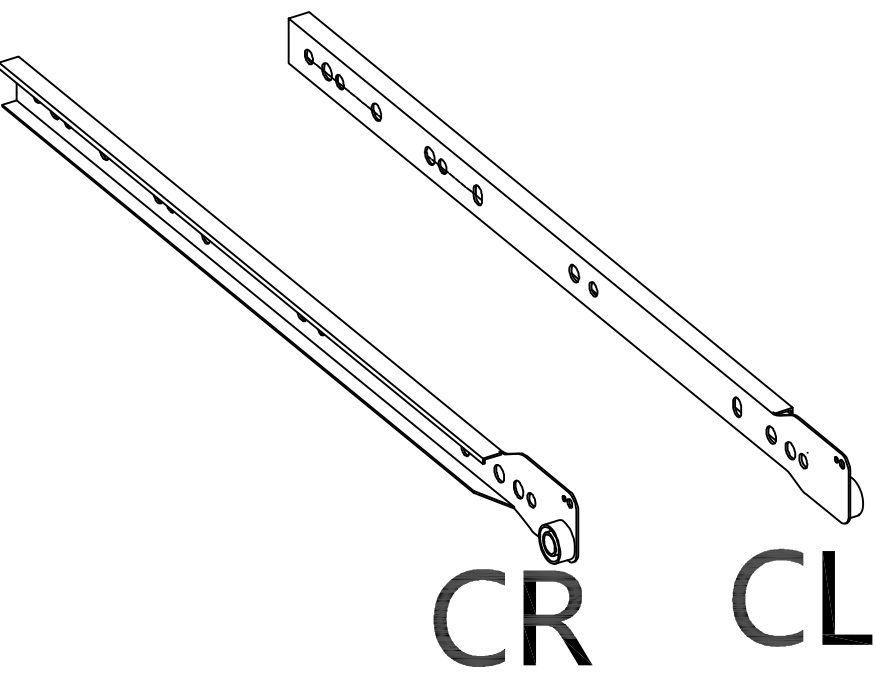


Punch the position
of the hole 1


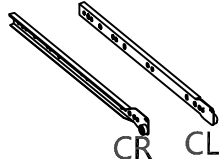
F	 M3*12mm	X12
D	 CR CL	X3


Punch the position
of the hole 1

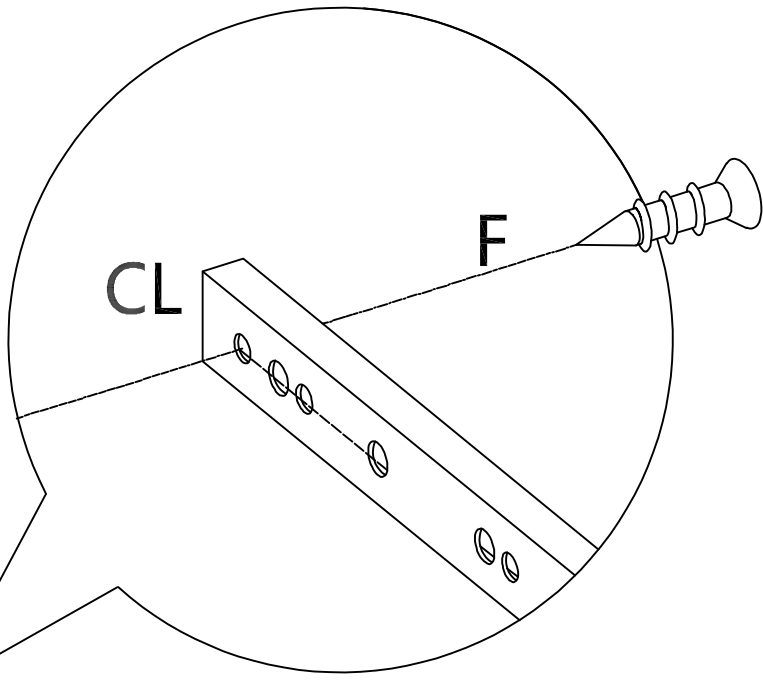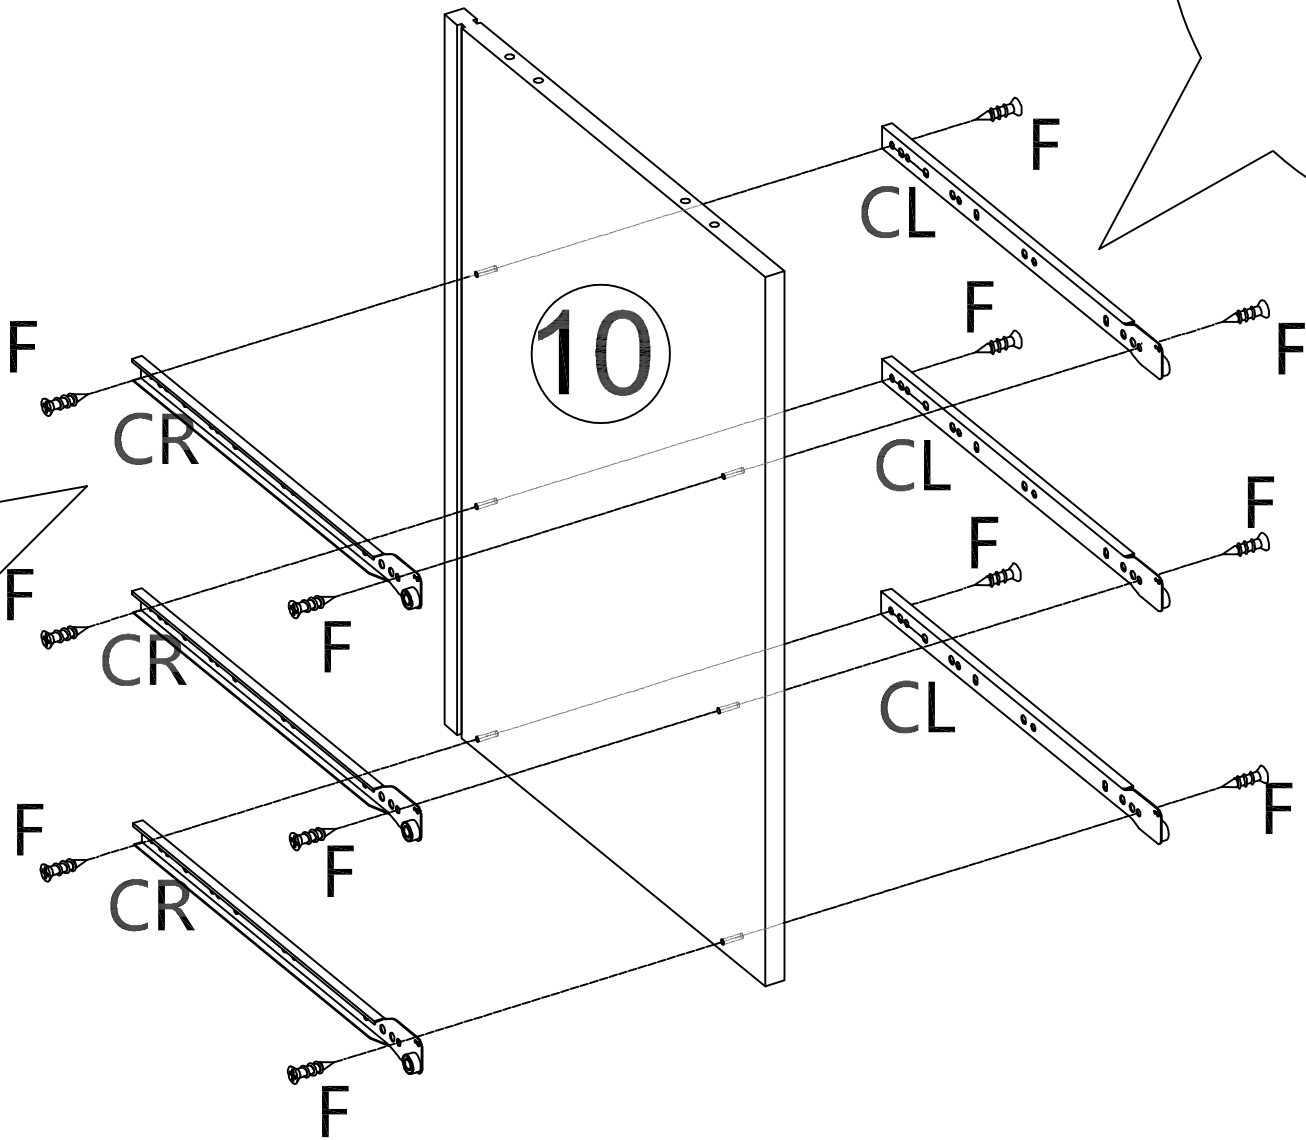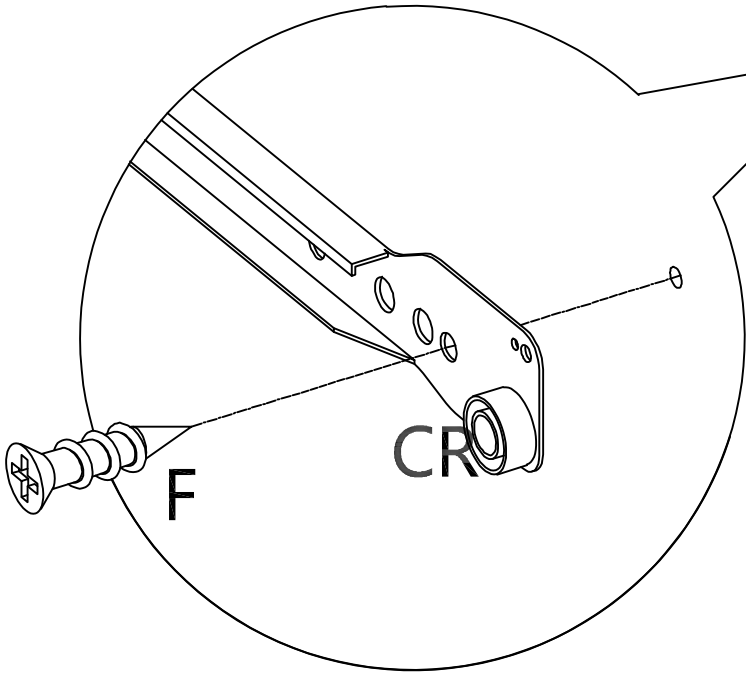


Step:17

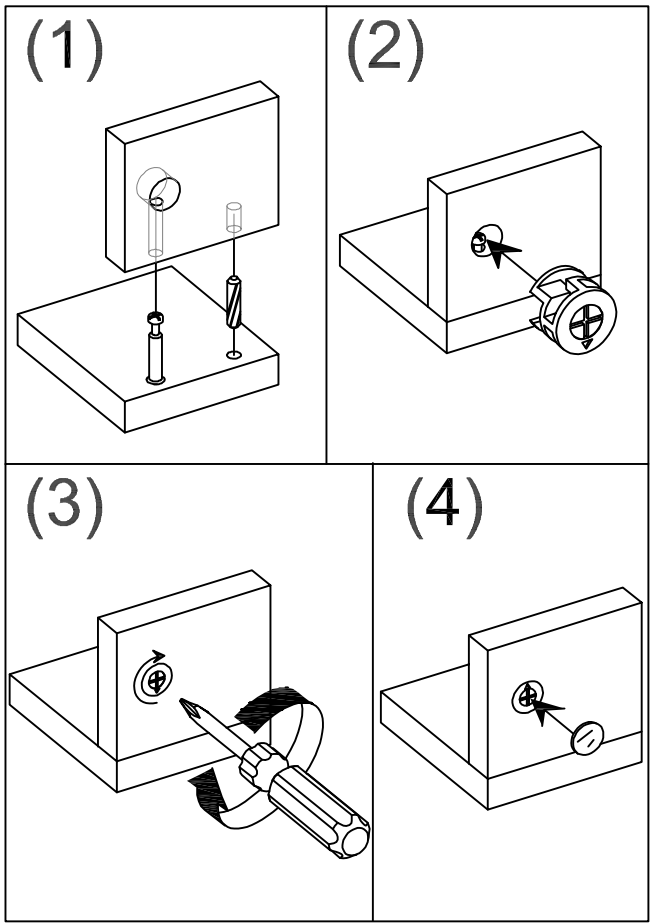

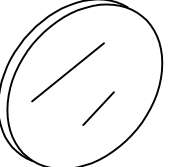
B	 ø15*12mm	X6
E	 ø8*30mm	X2
V		X6

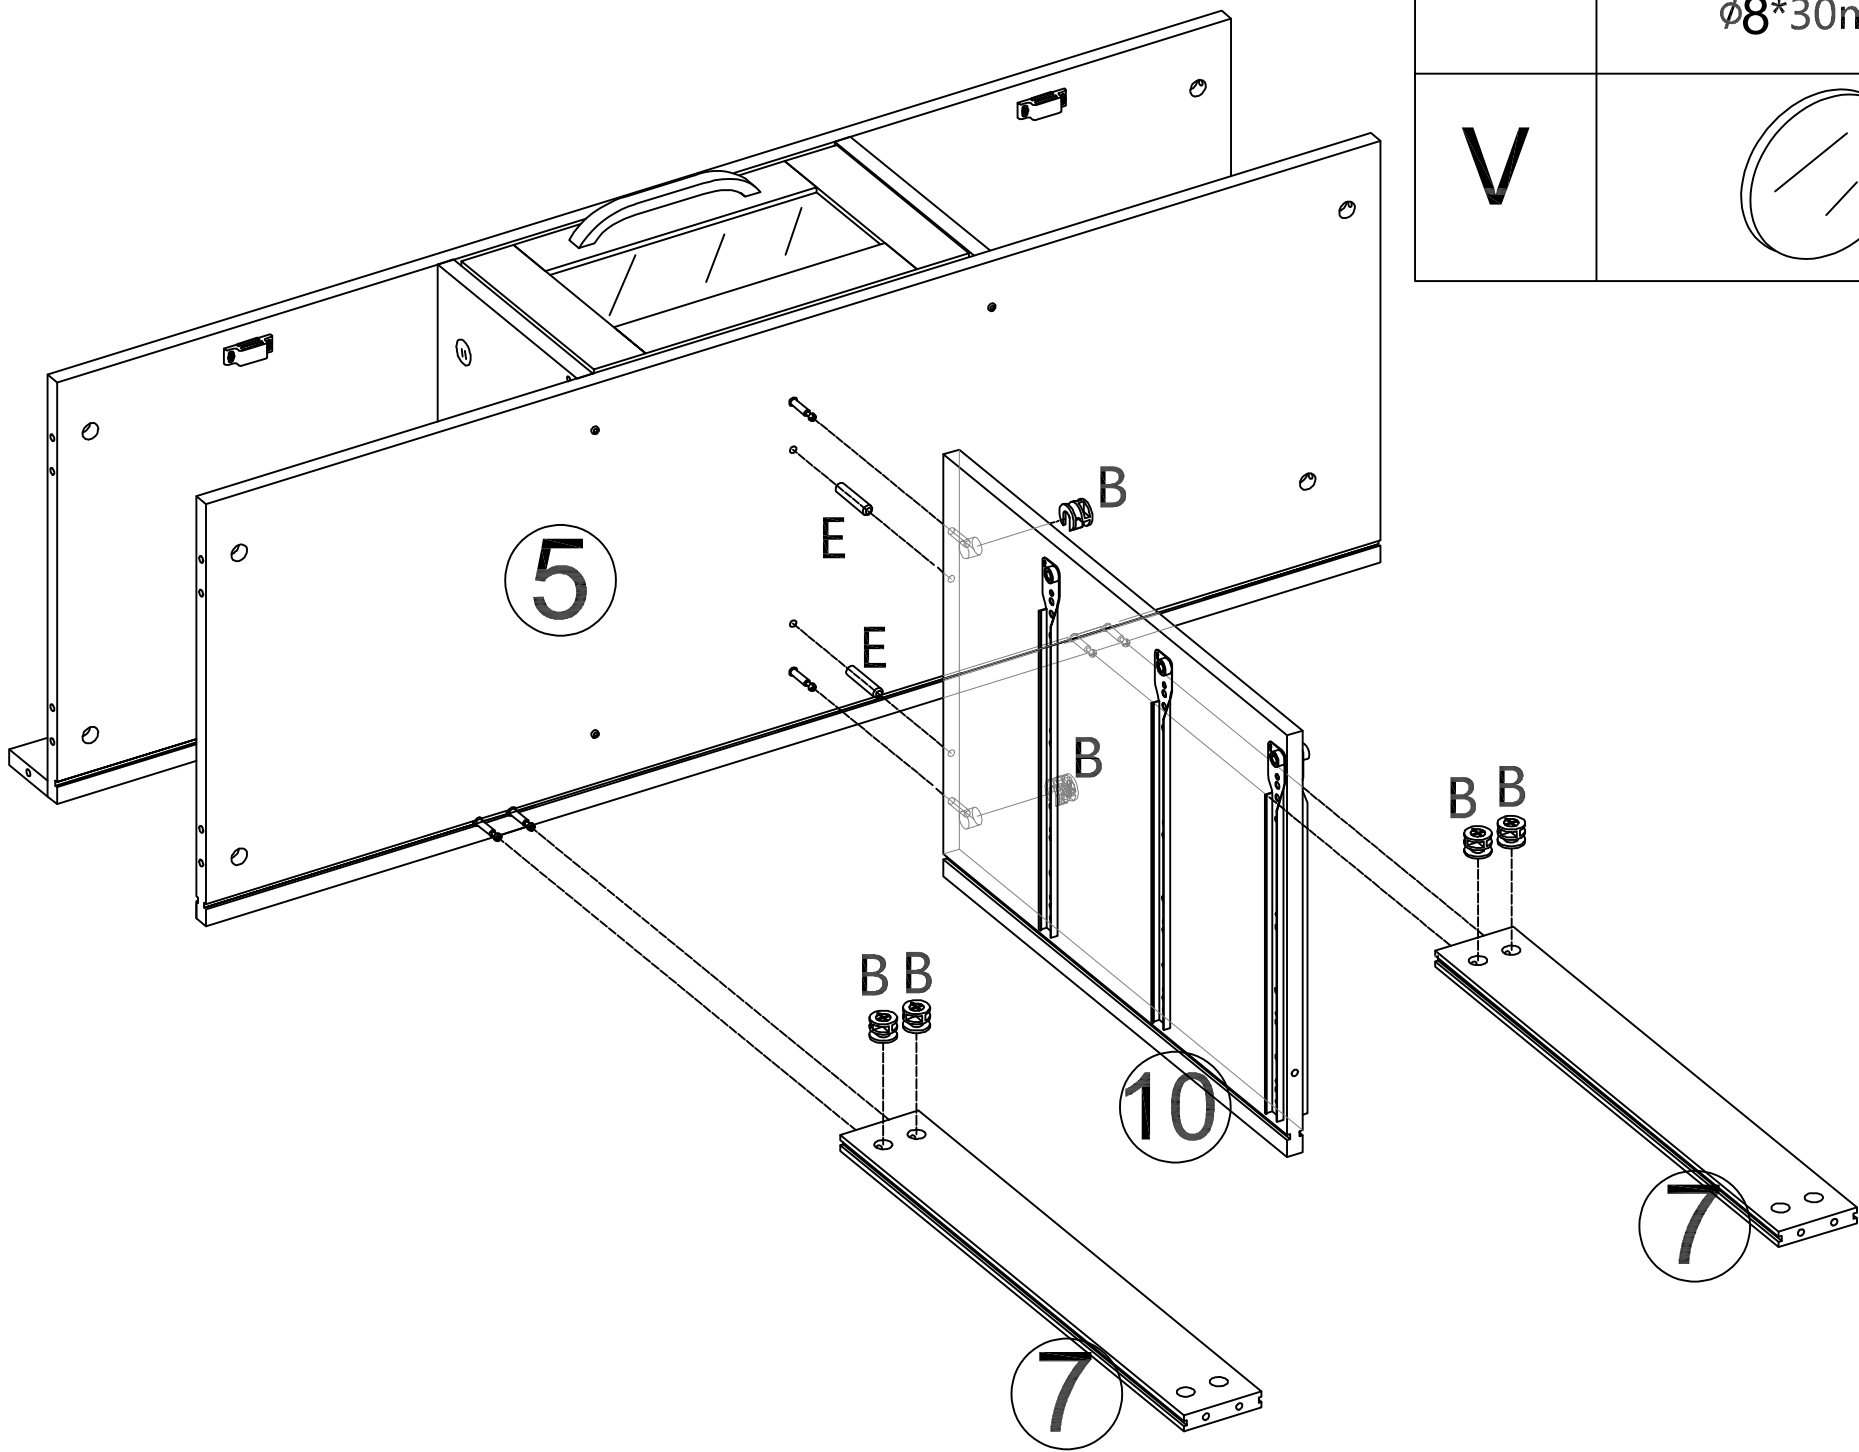


Step:18


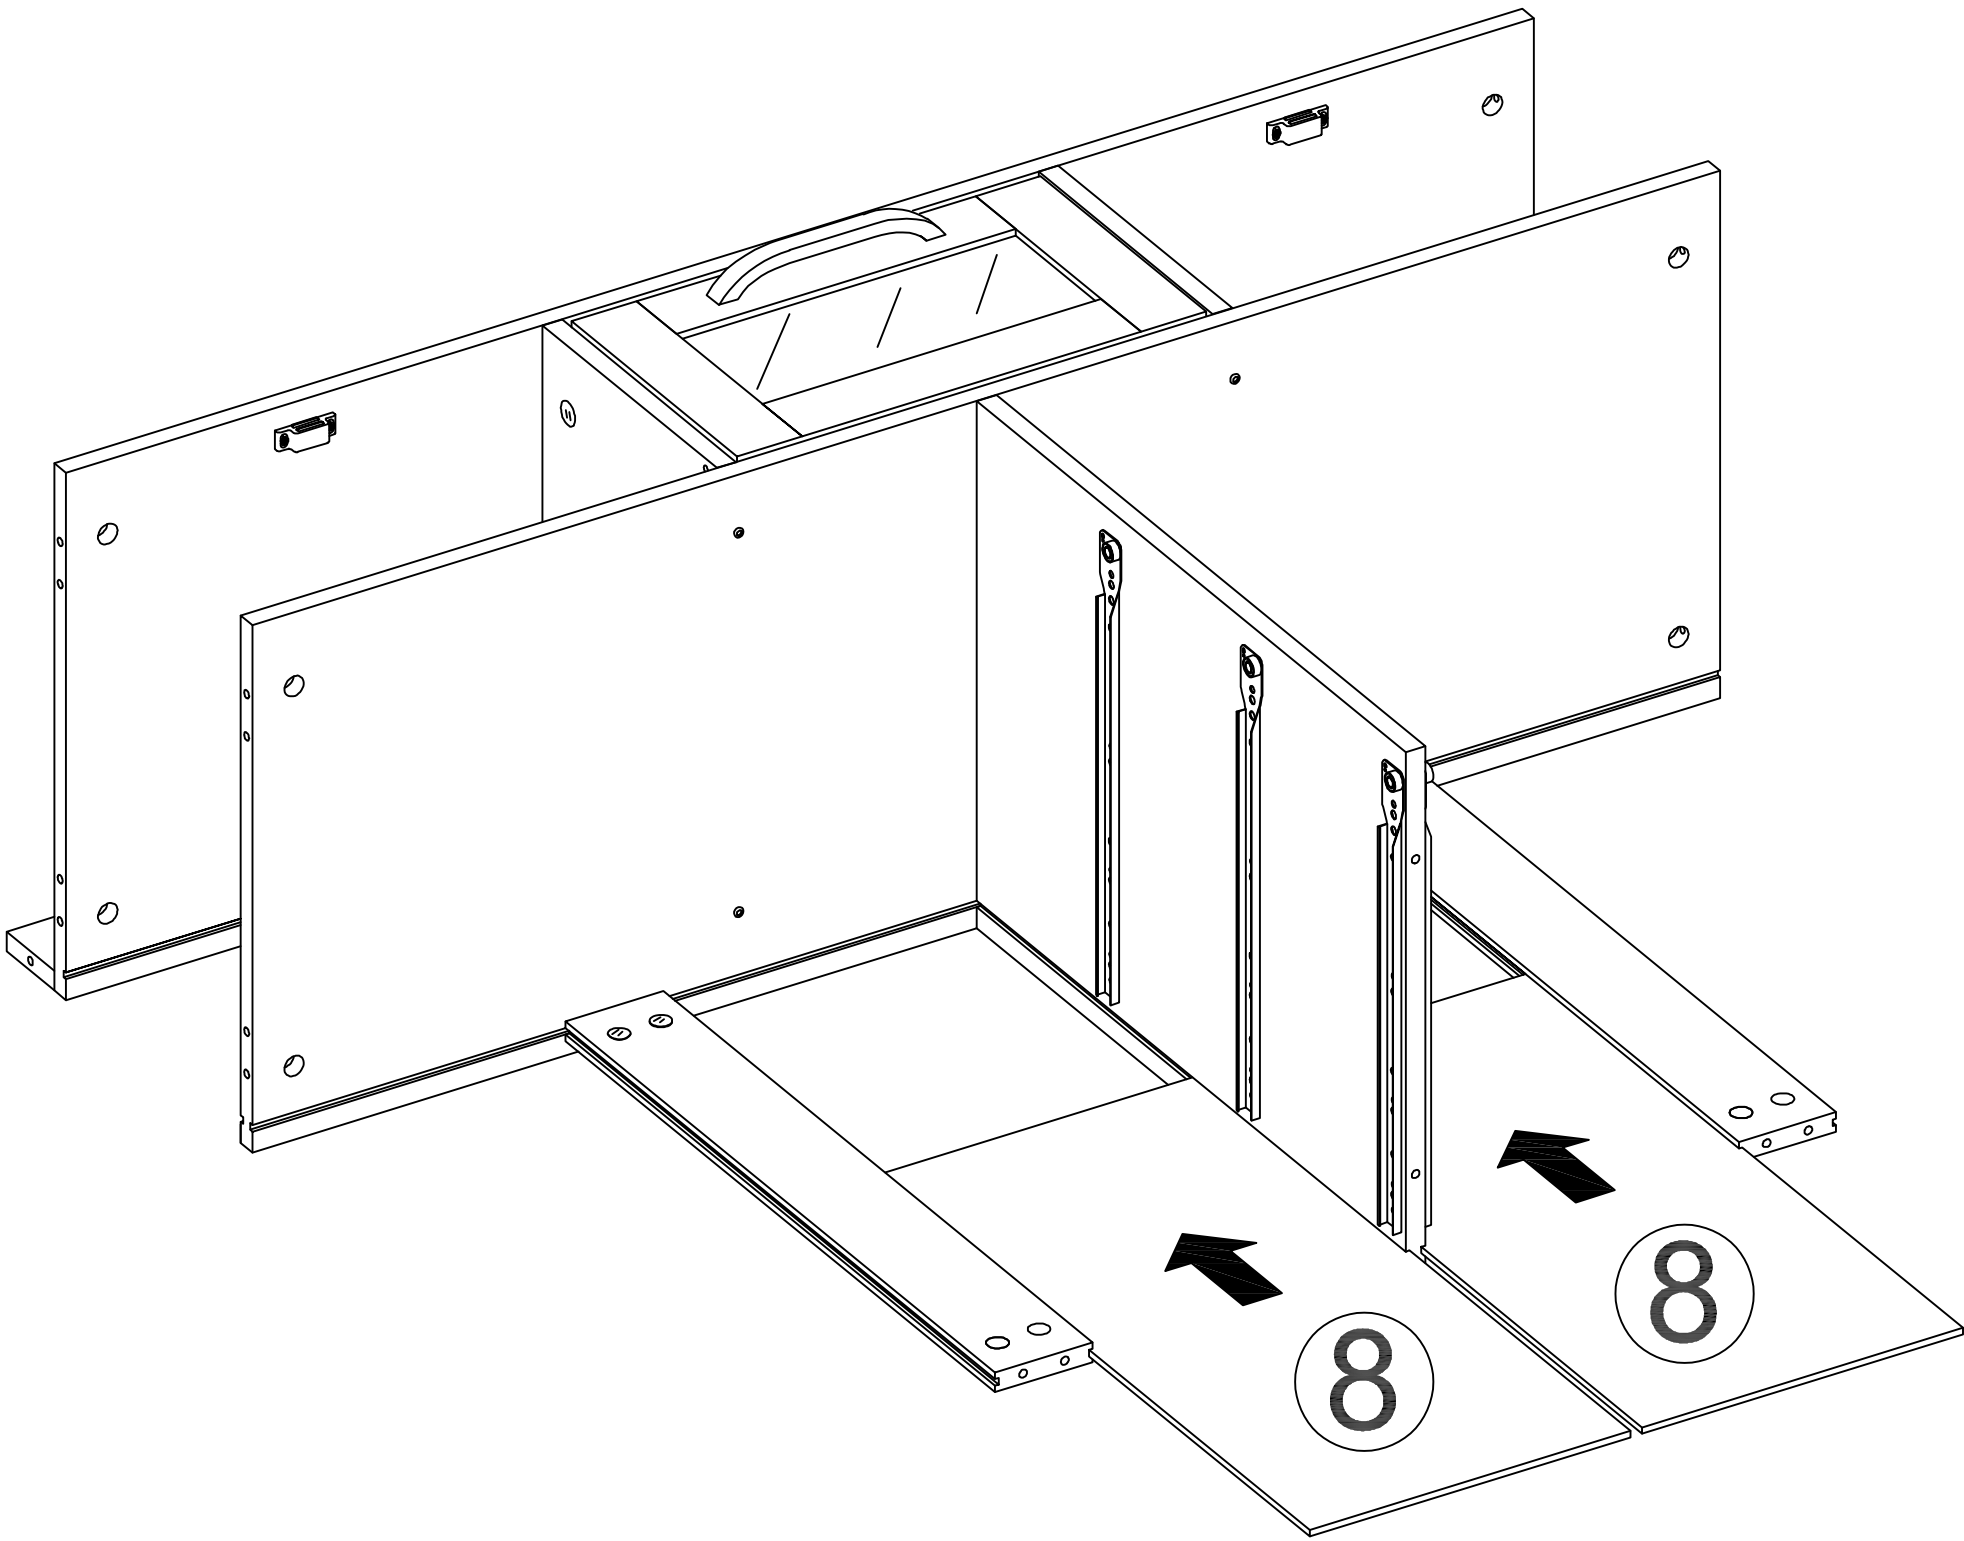





Step:19

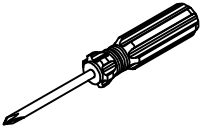N		X2
R		X1

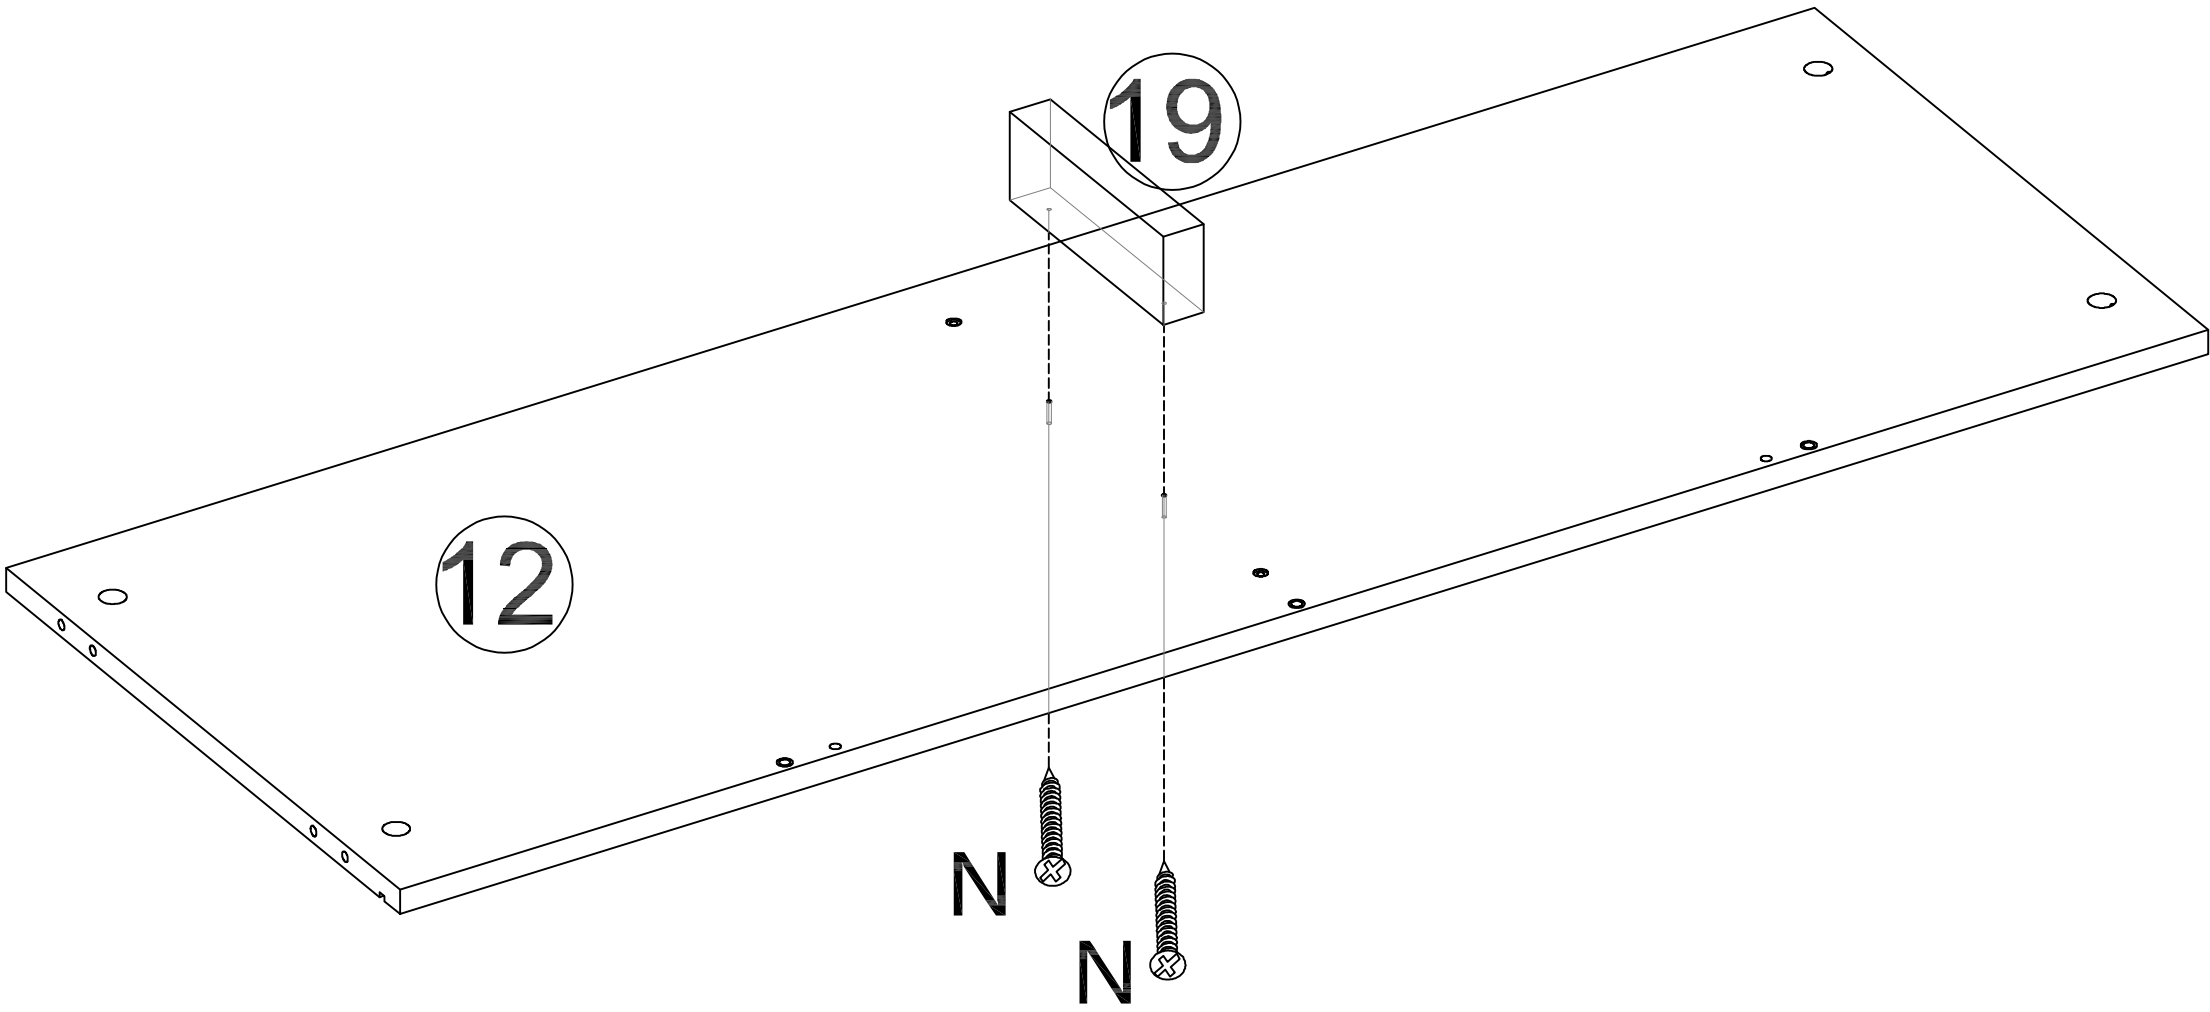




Step:20

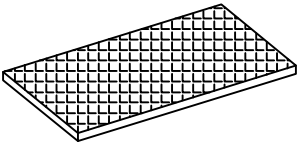
A		X3
Y		X1

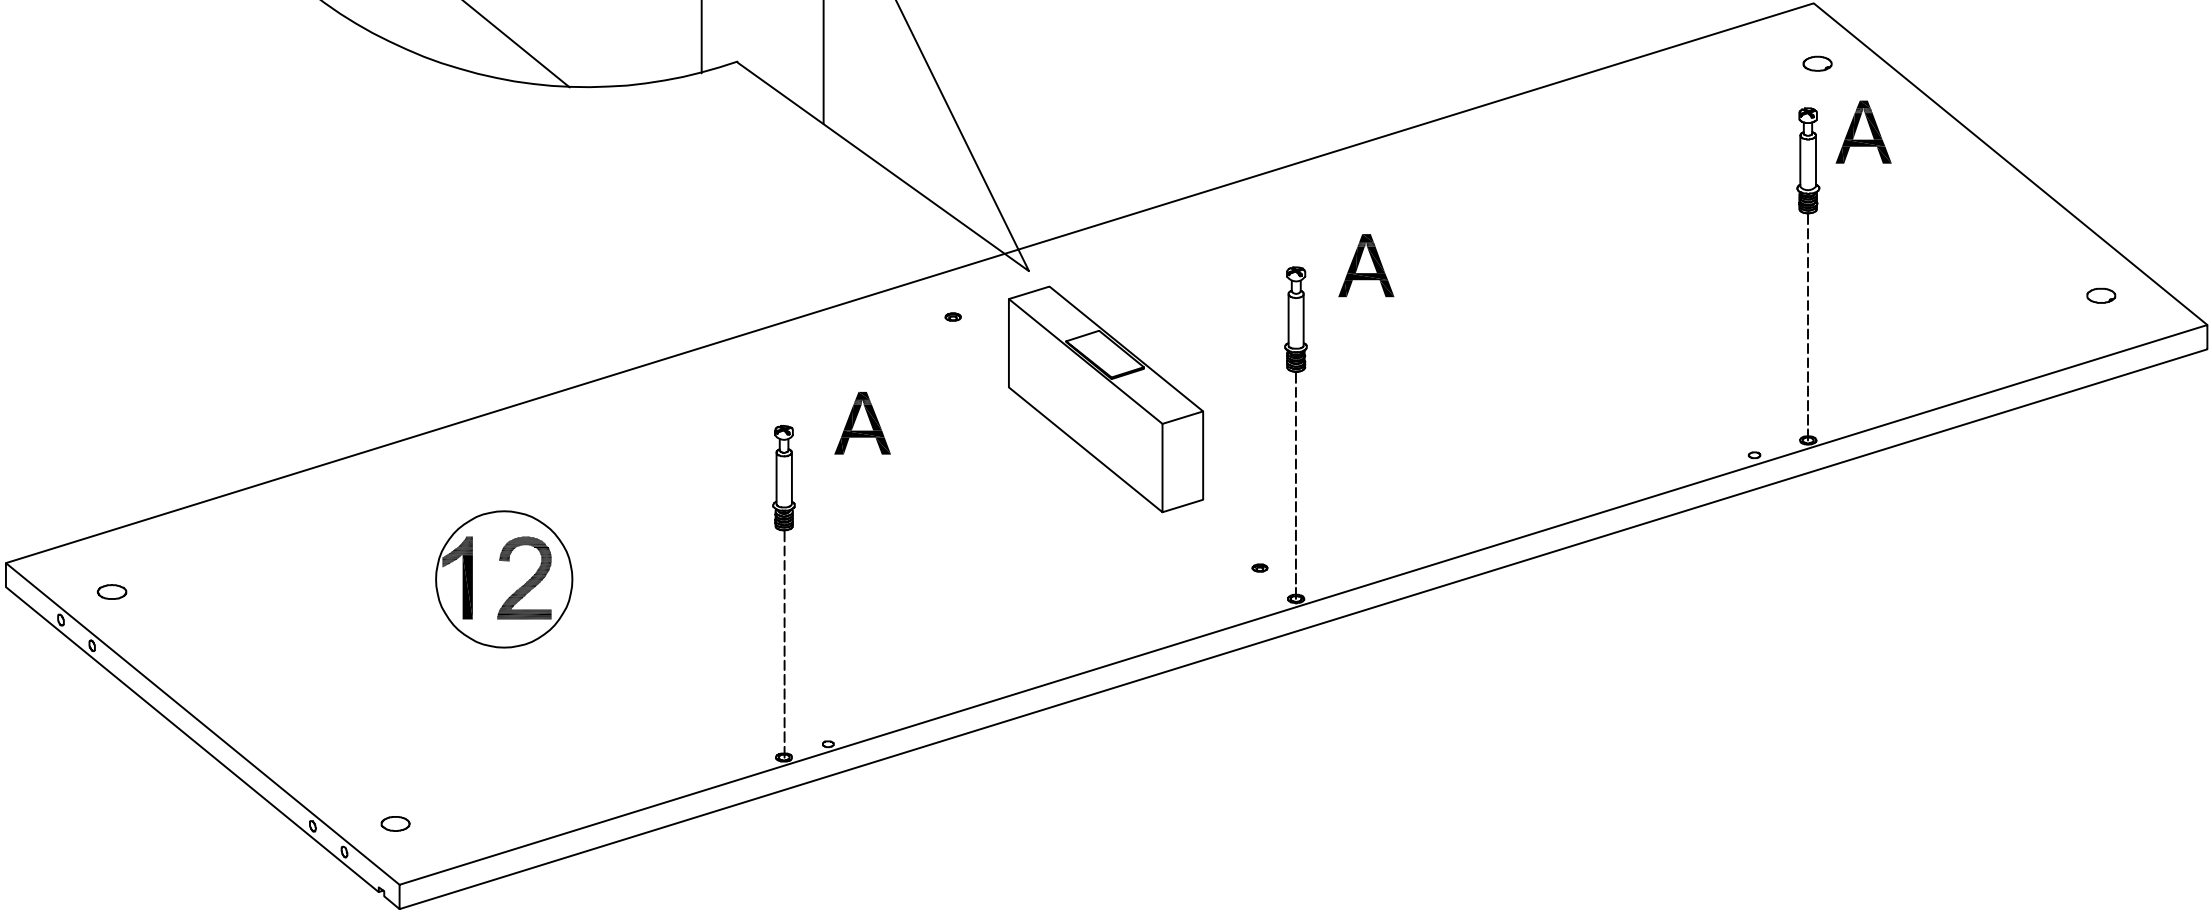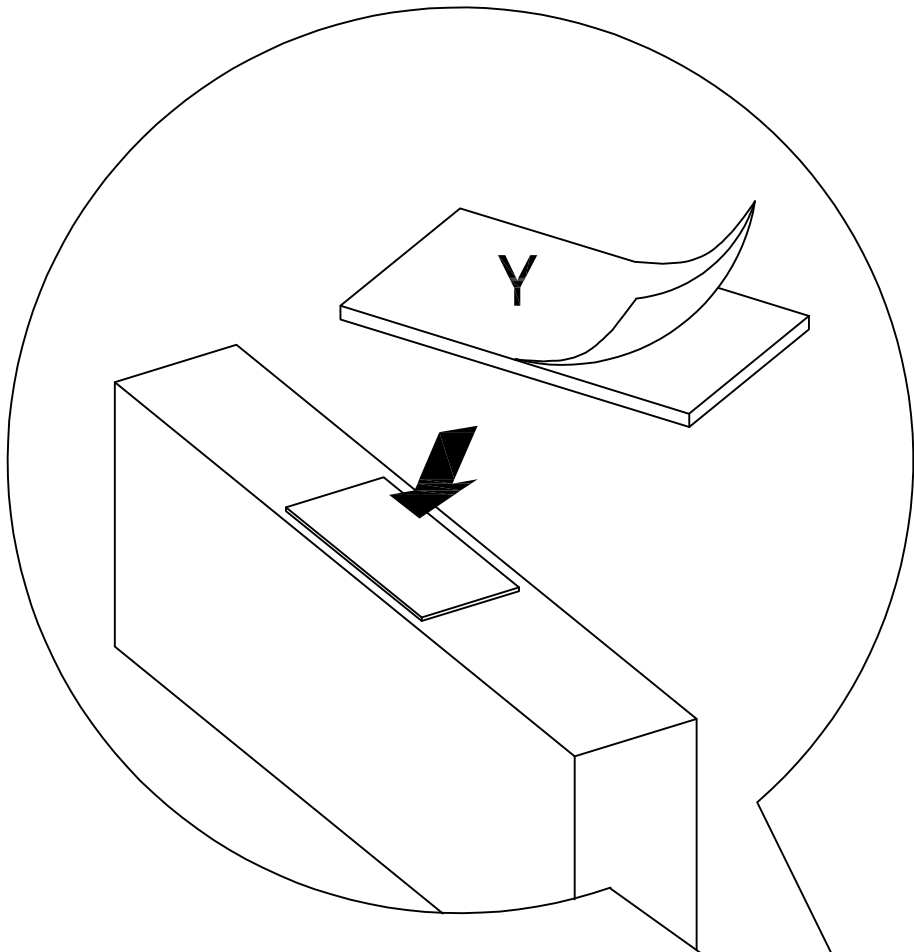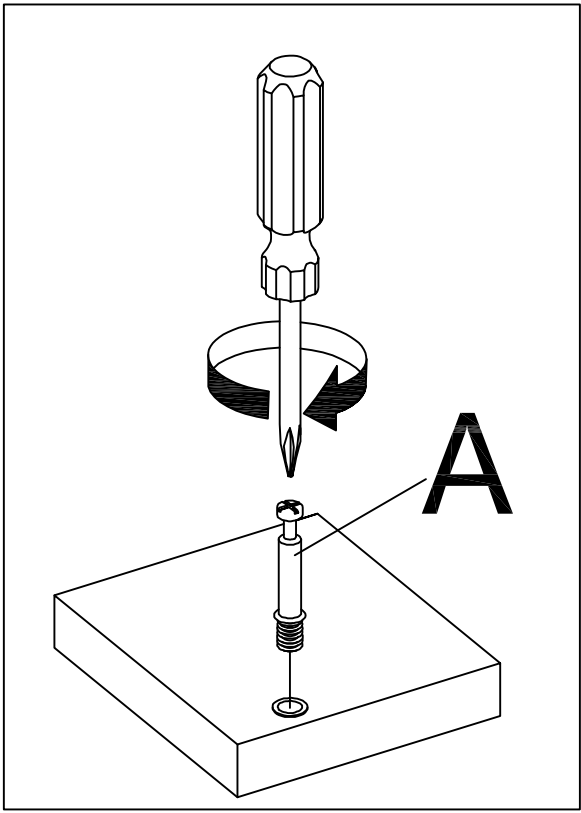


Step:21

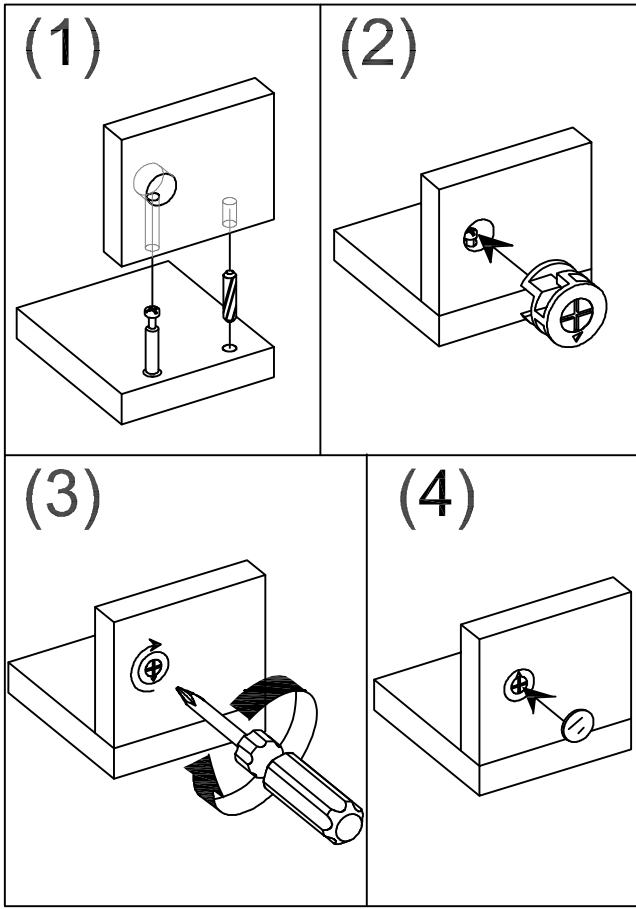


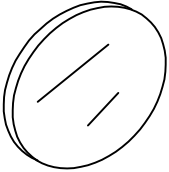
B	 ø15*12mm	X3
E	 ø8*30mm	X2
V		X3

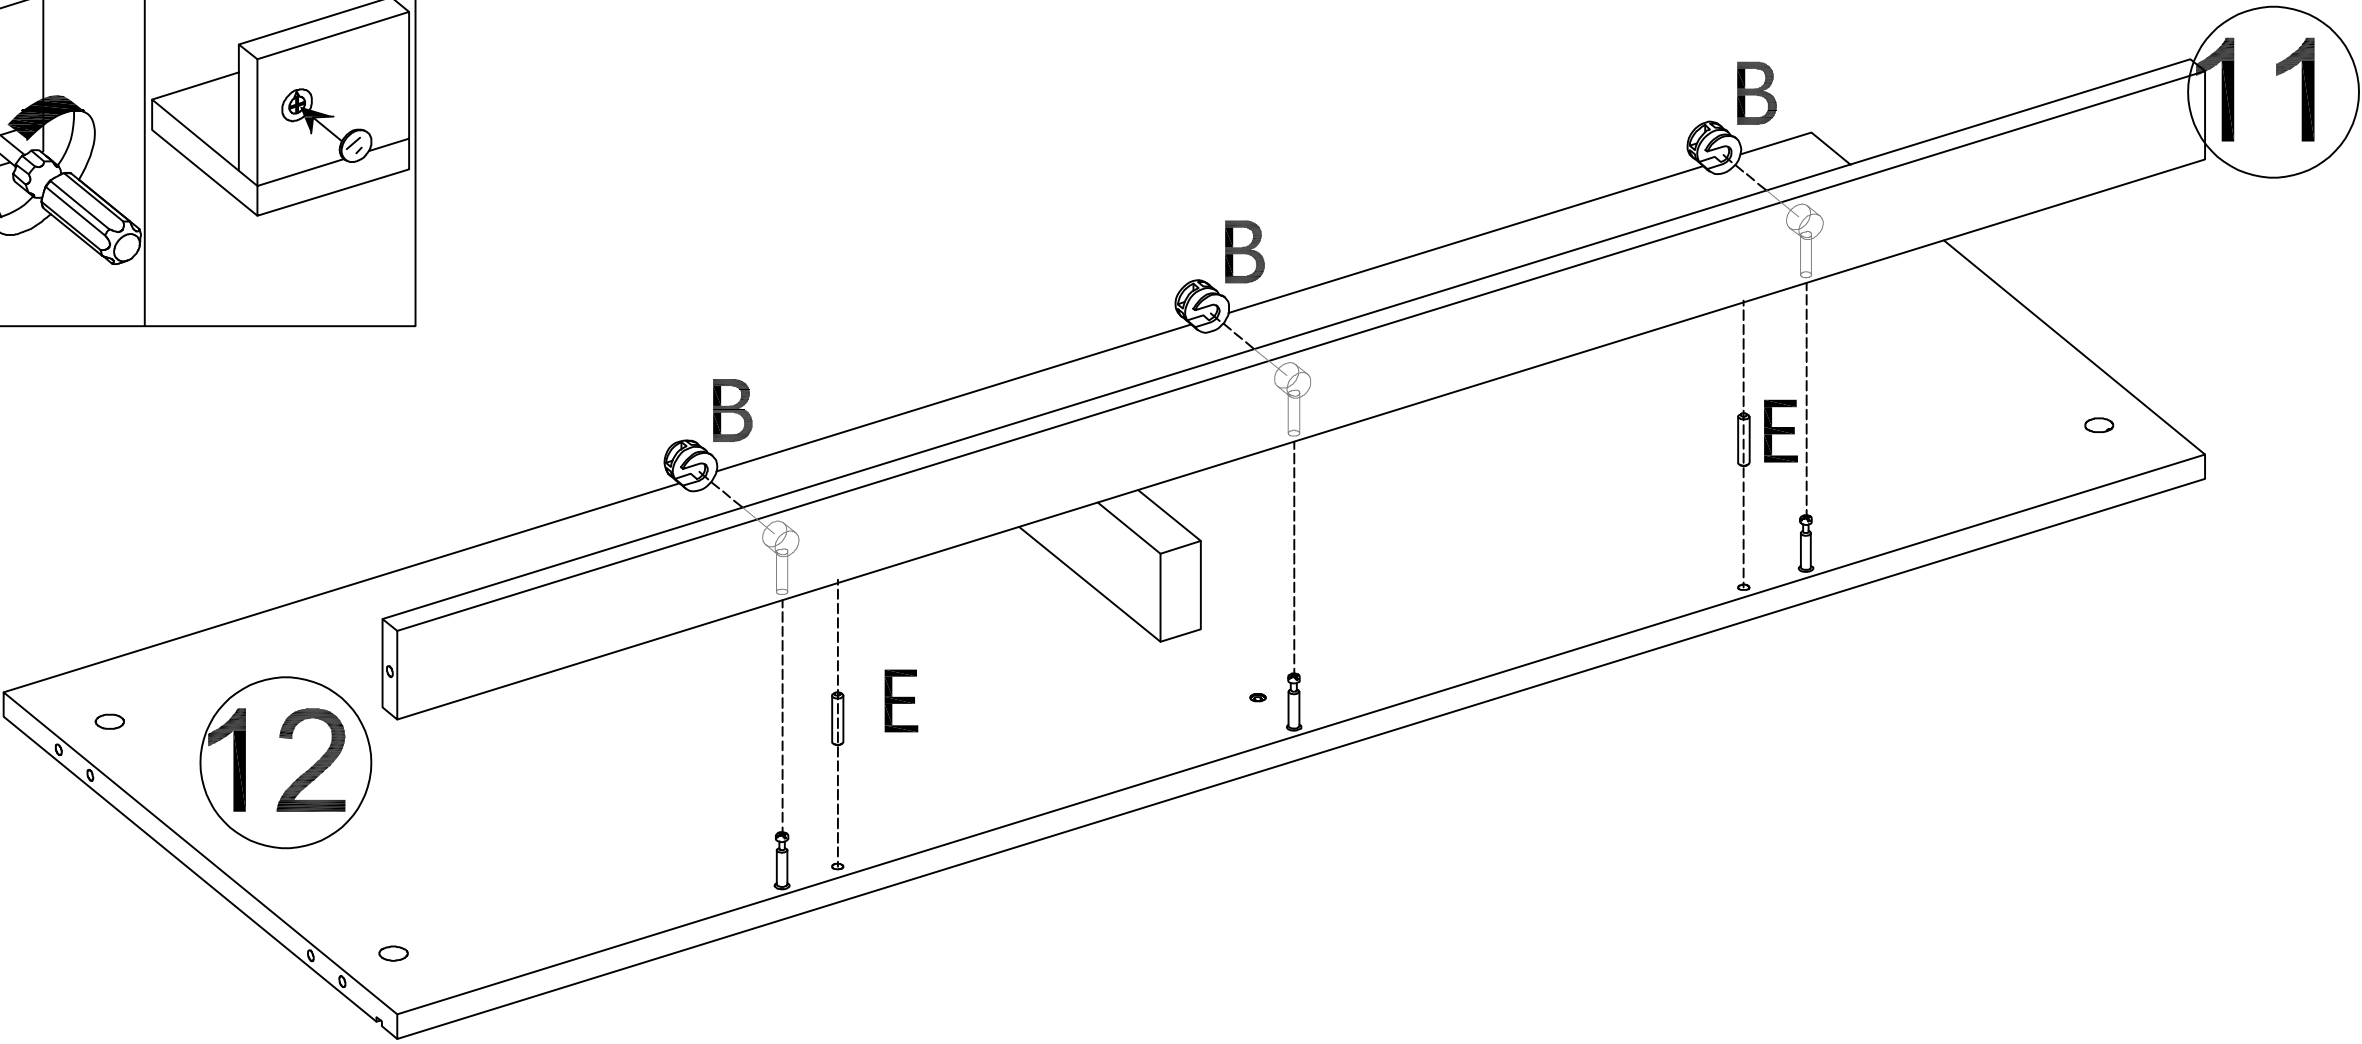



Step:22


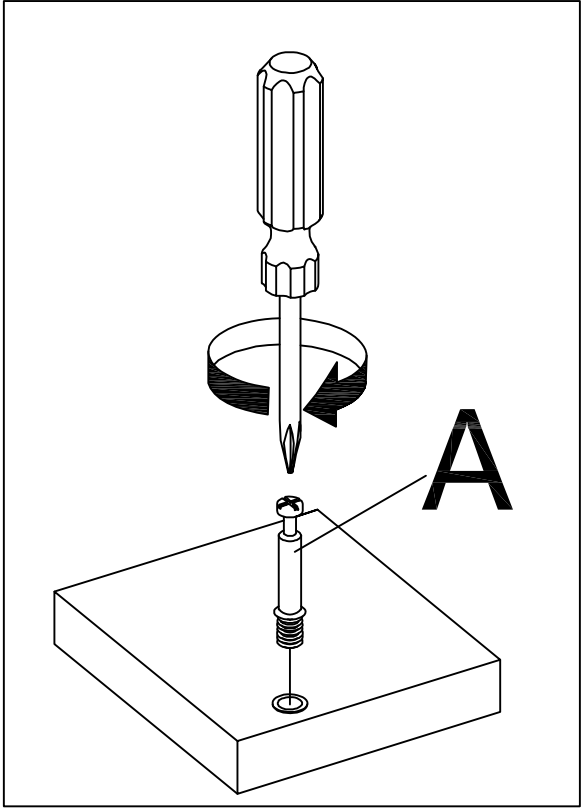


A		X4
---	---	----

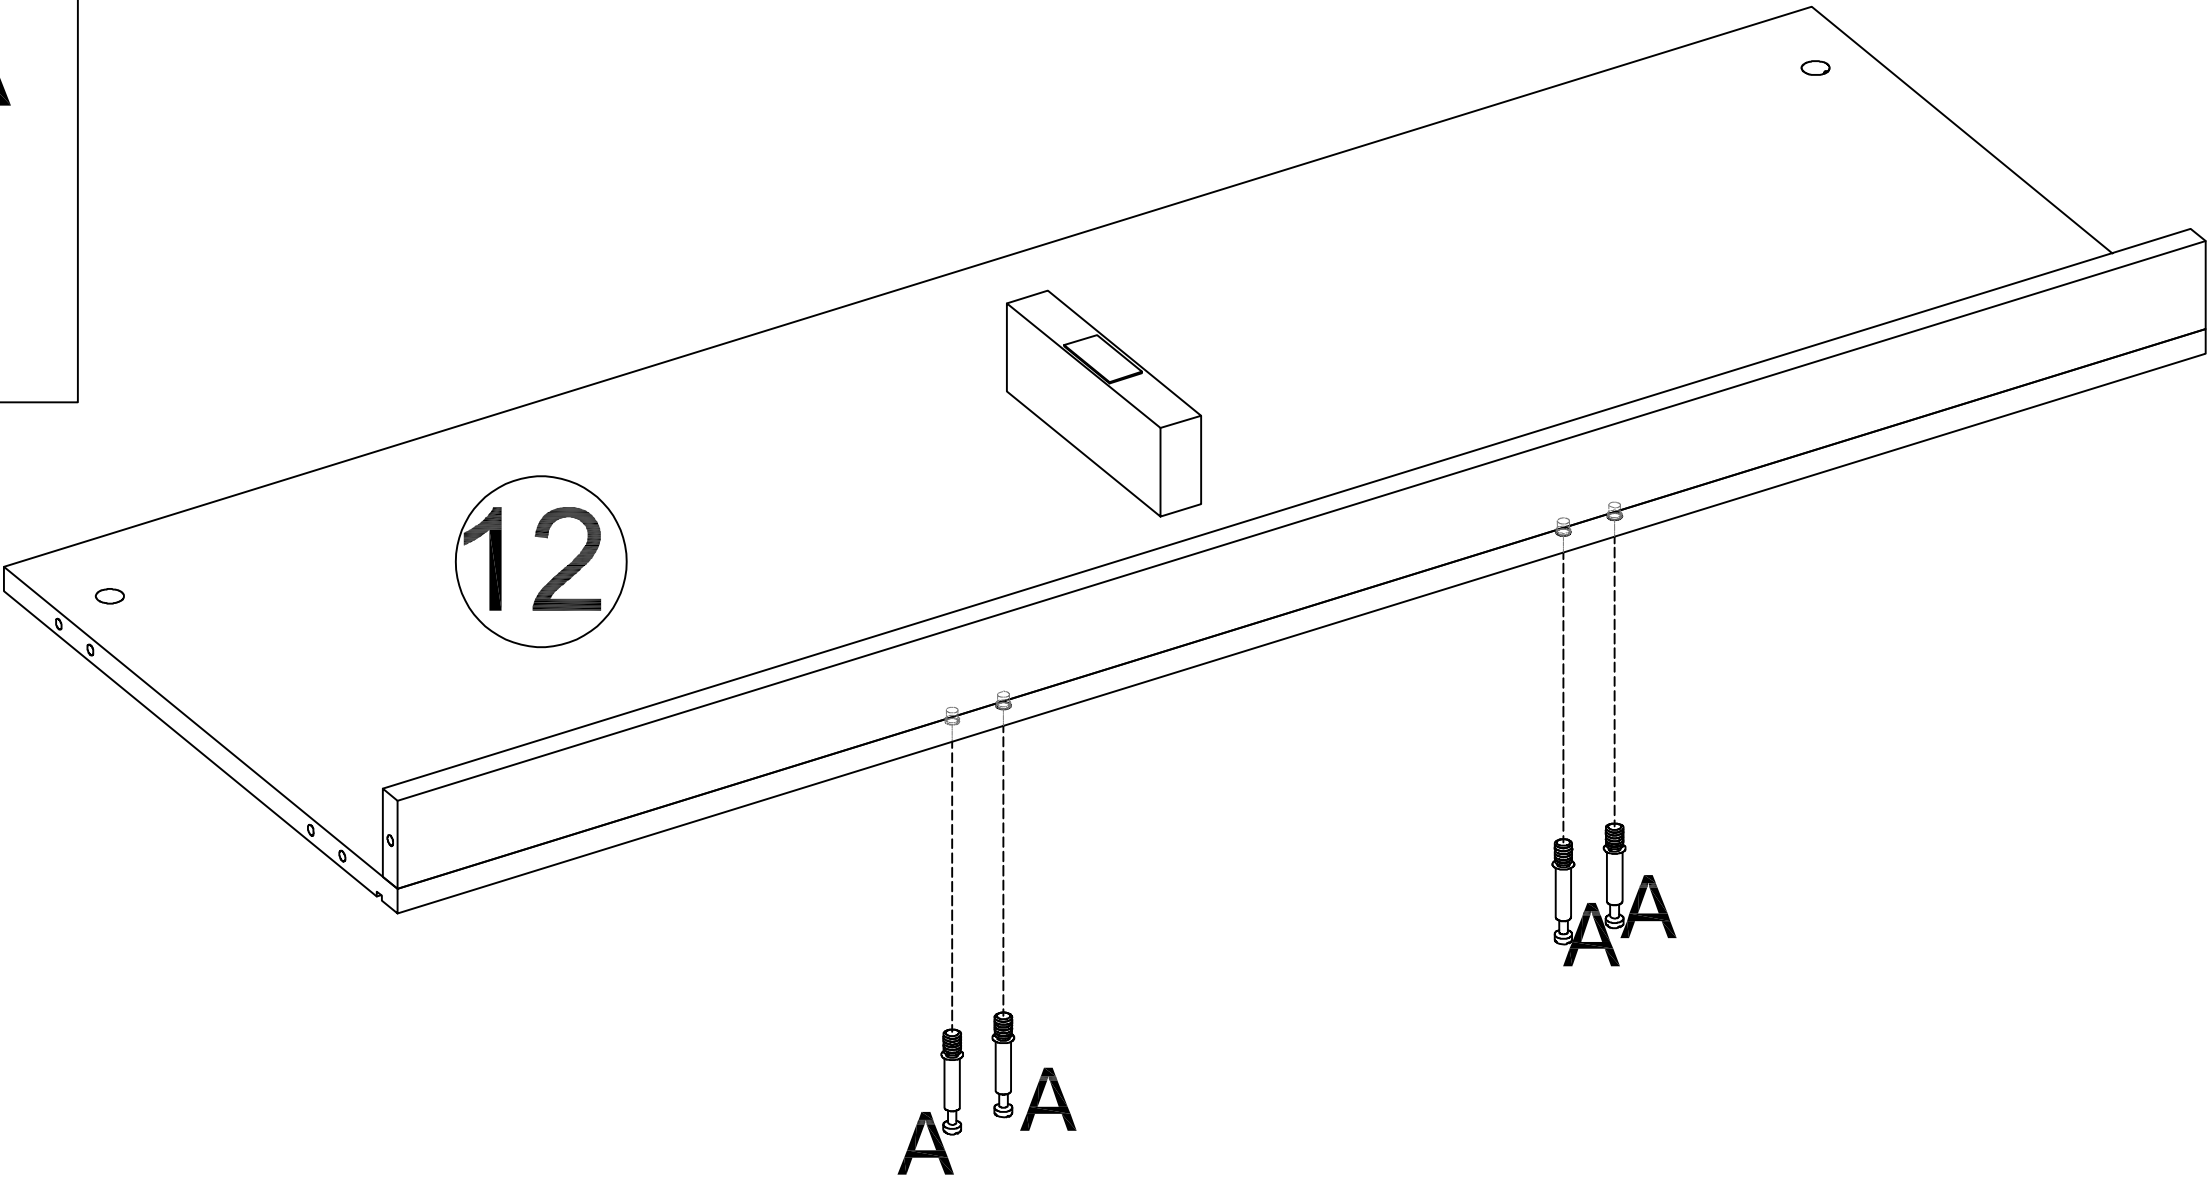




Step:23

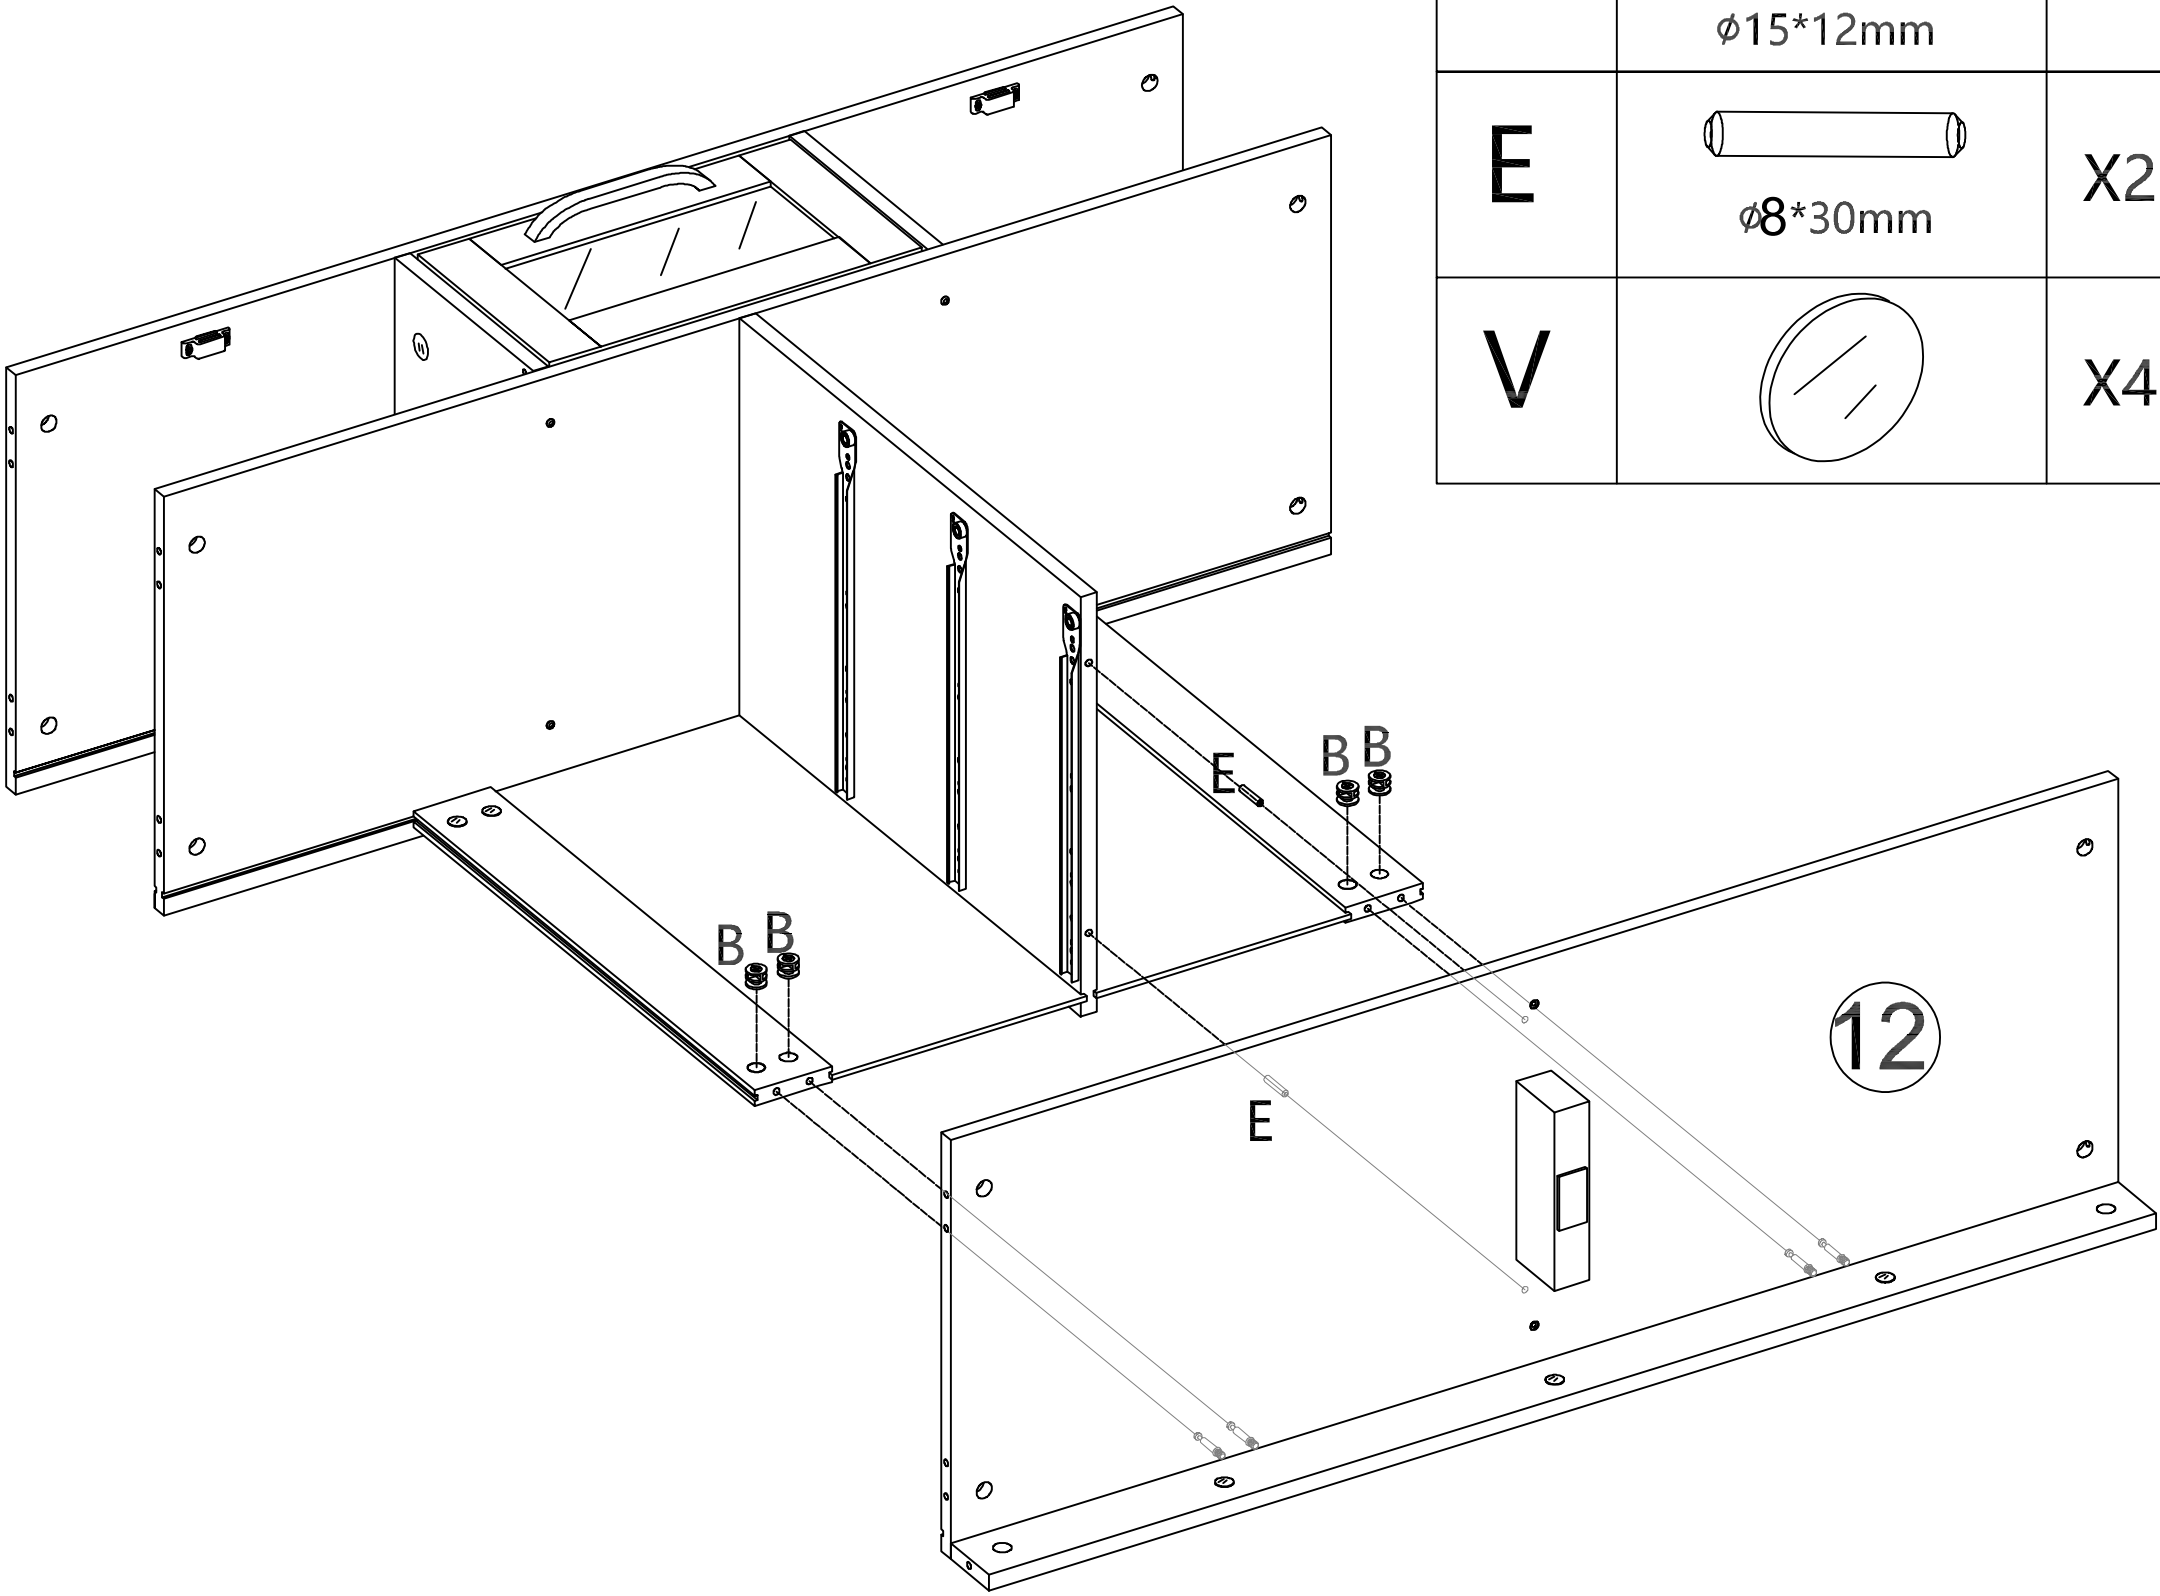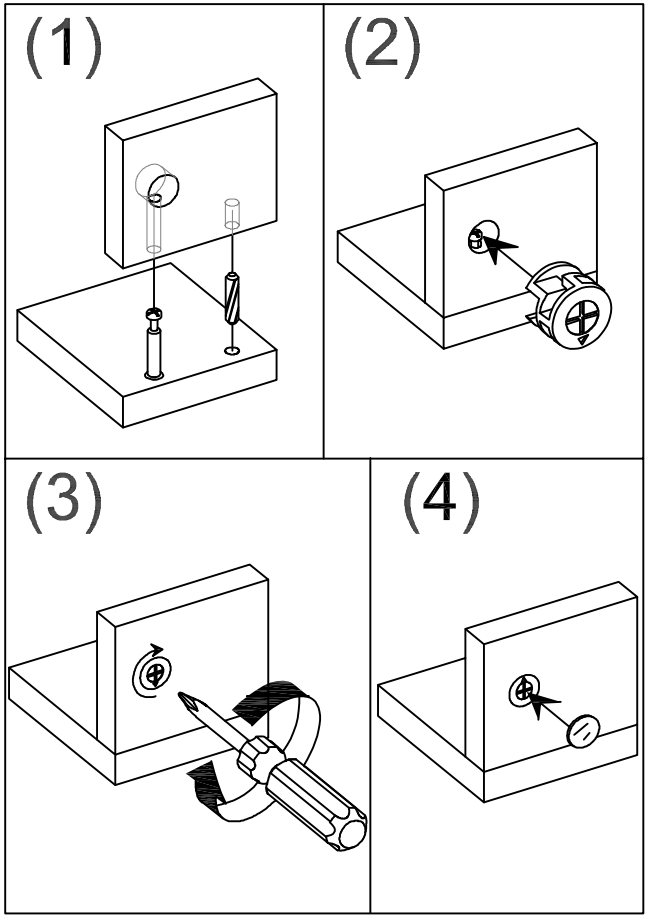

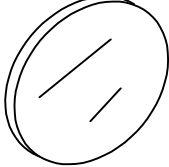
B	 ø15*12mm	X4
E	 ø8*30mm	X2
V		X4

Step:24

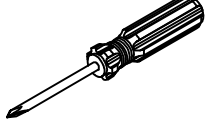
N		X2
R		X1

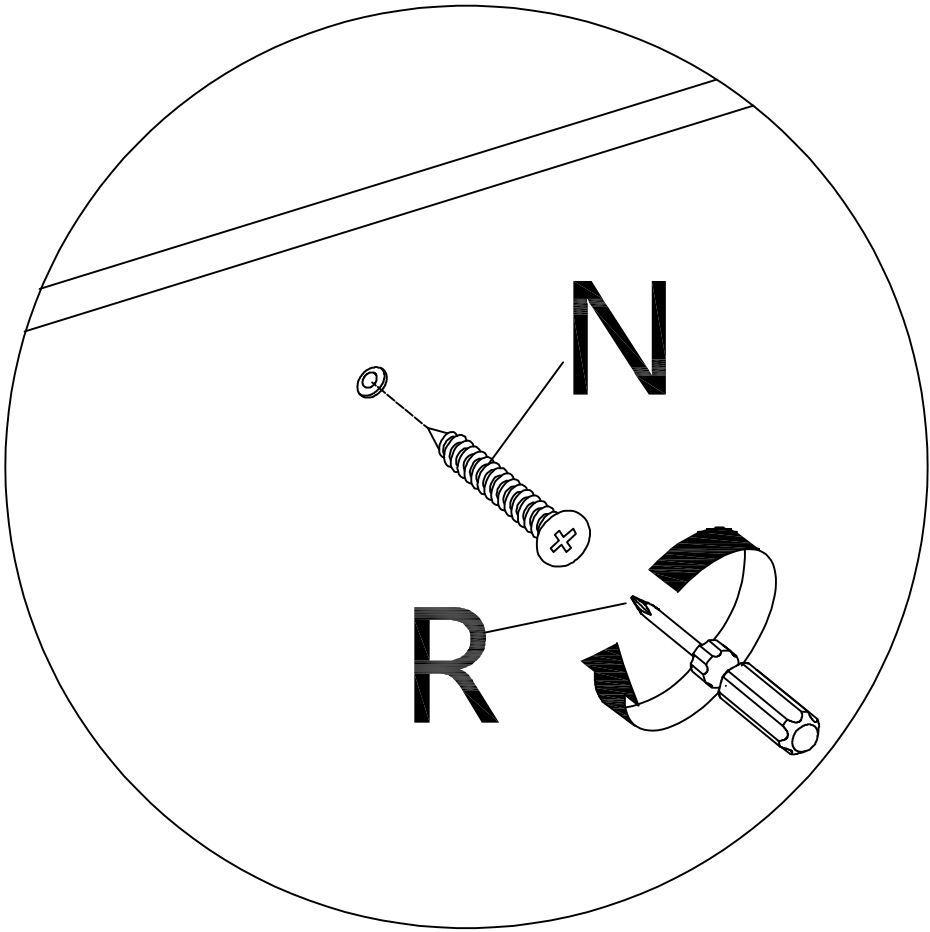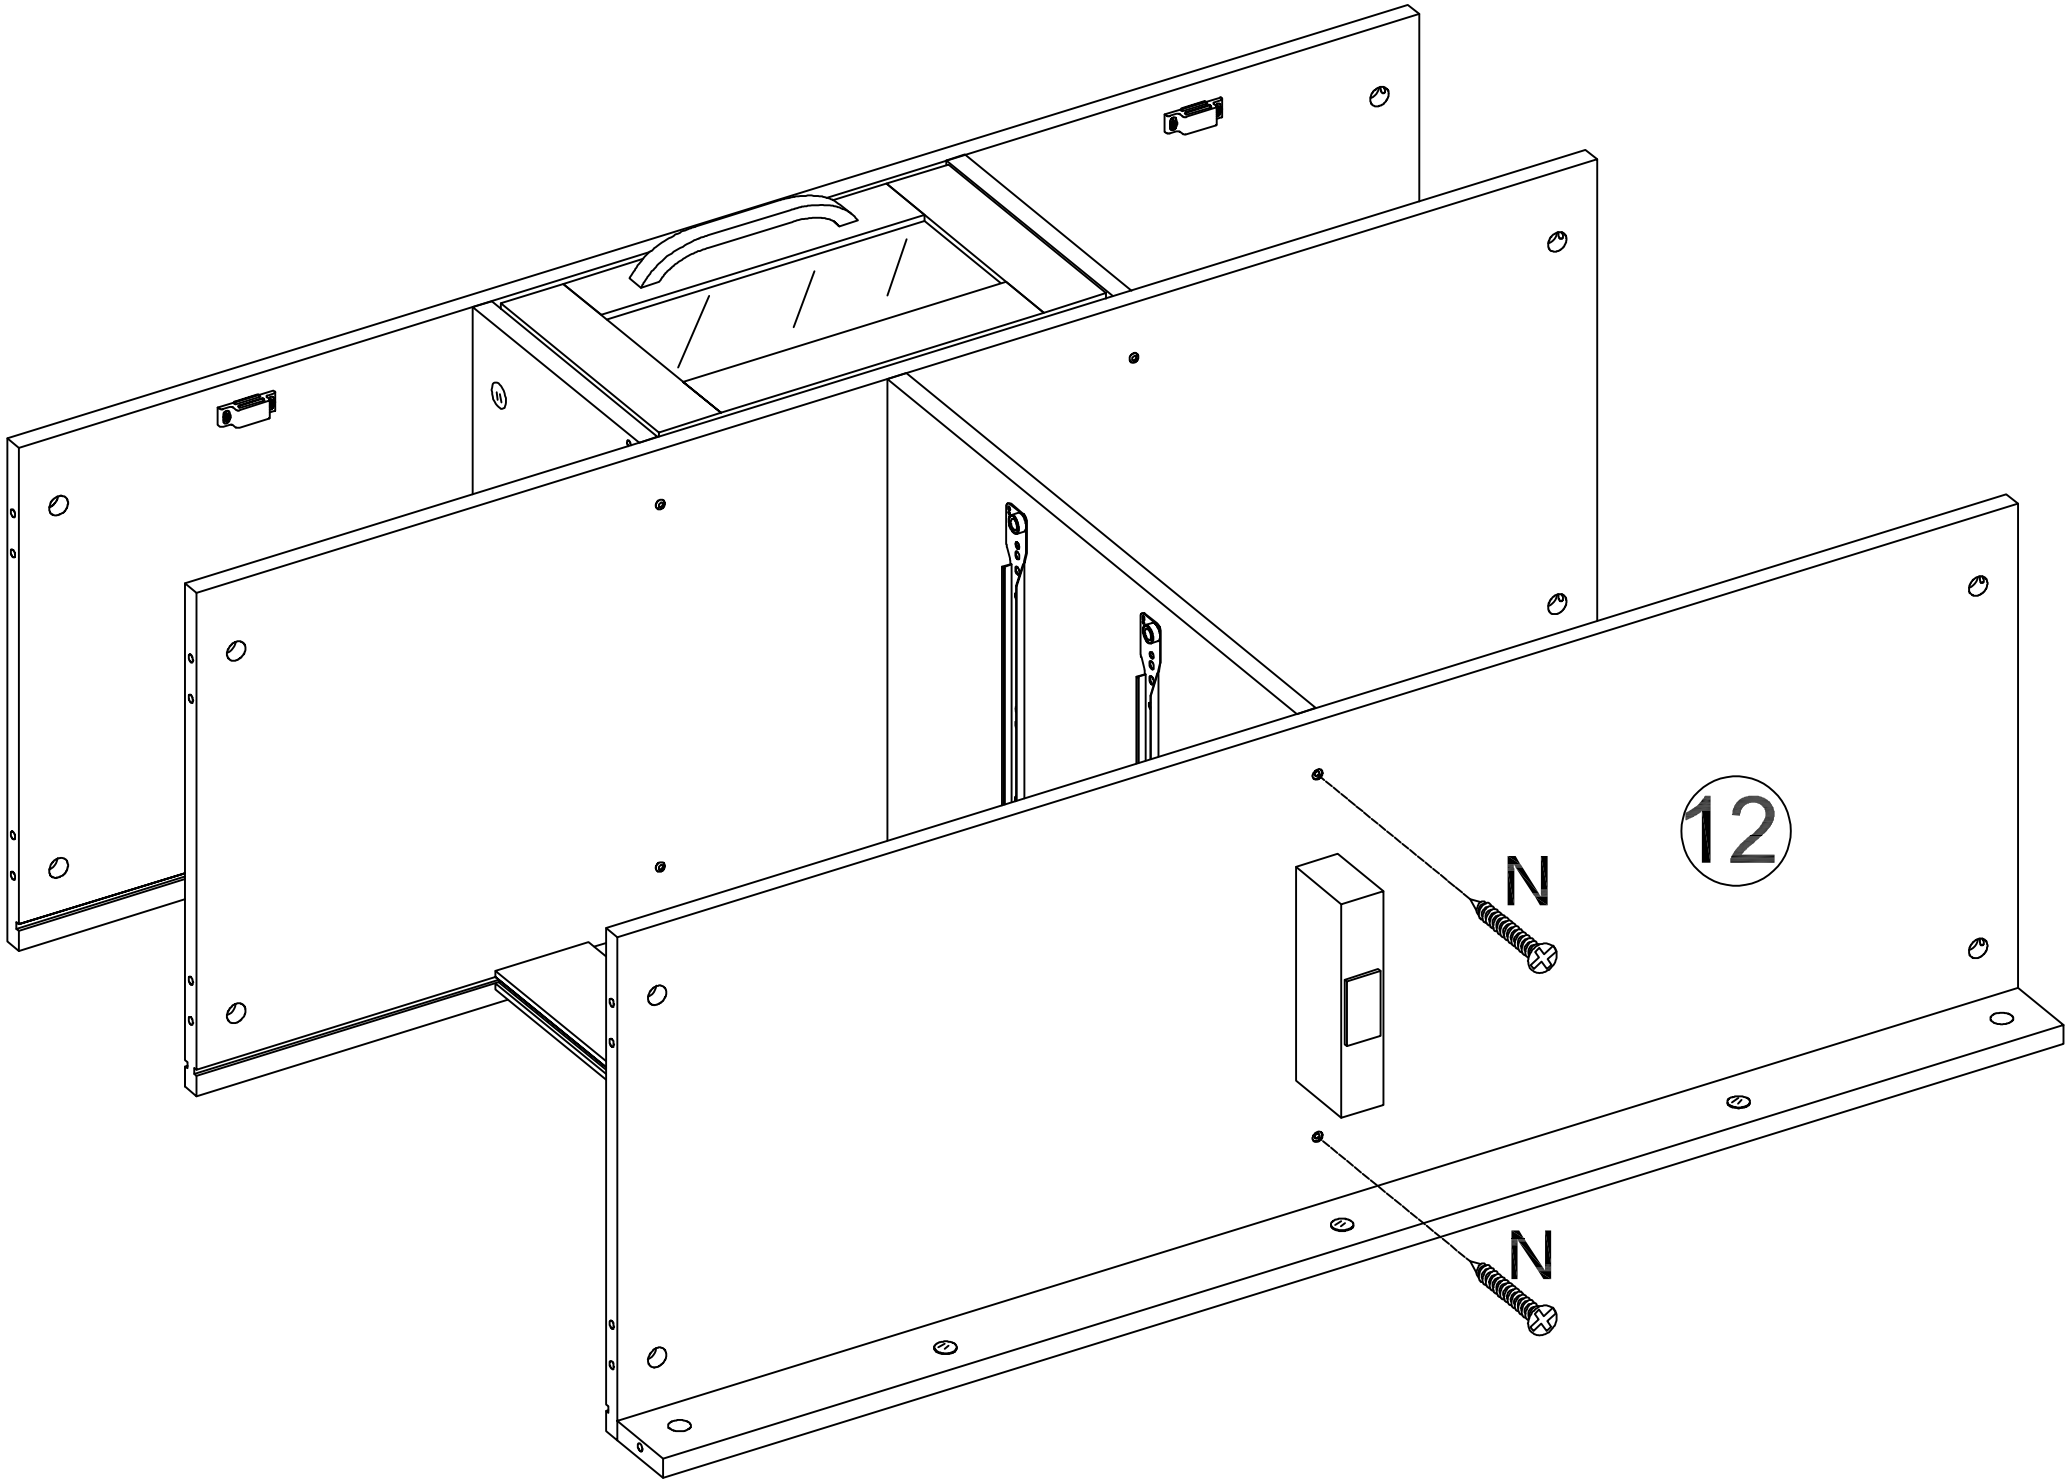


Step:25

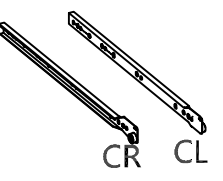F	 M3*12mm	X12
D	 CR CL	X3


Punch the position
of the hole 1

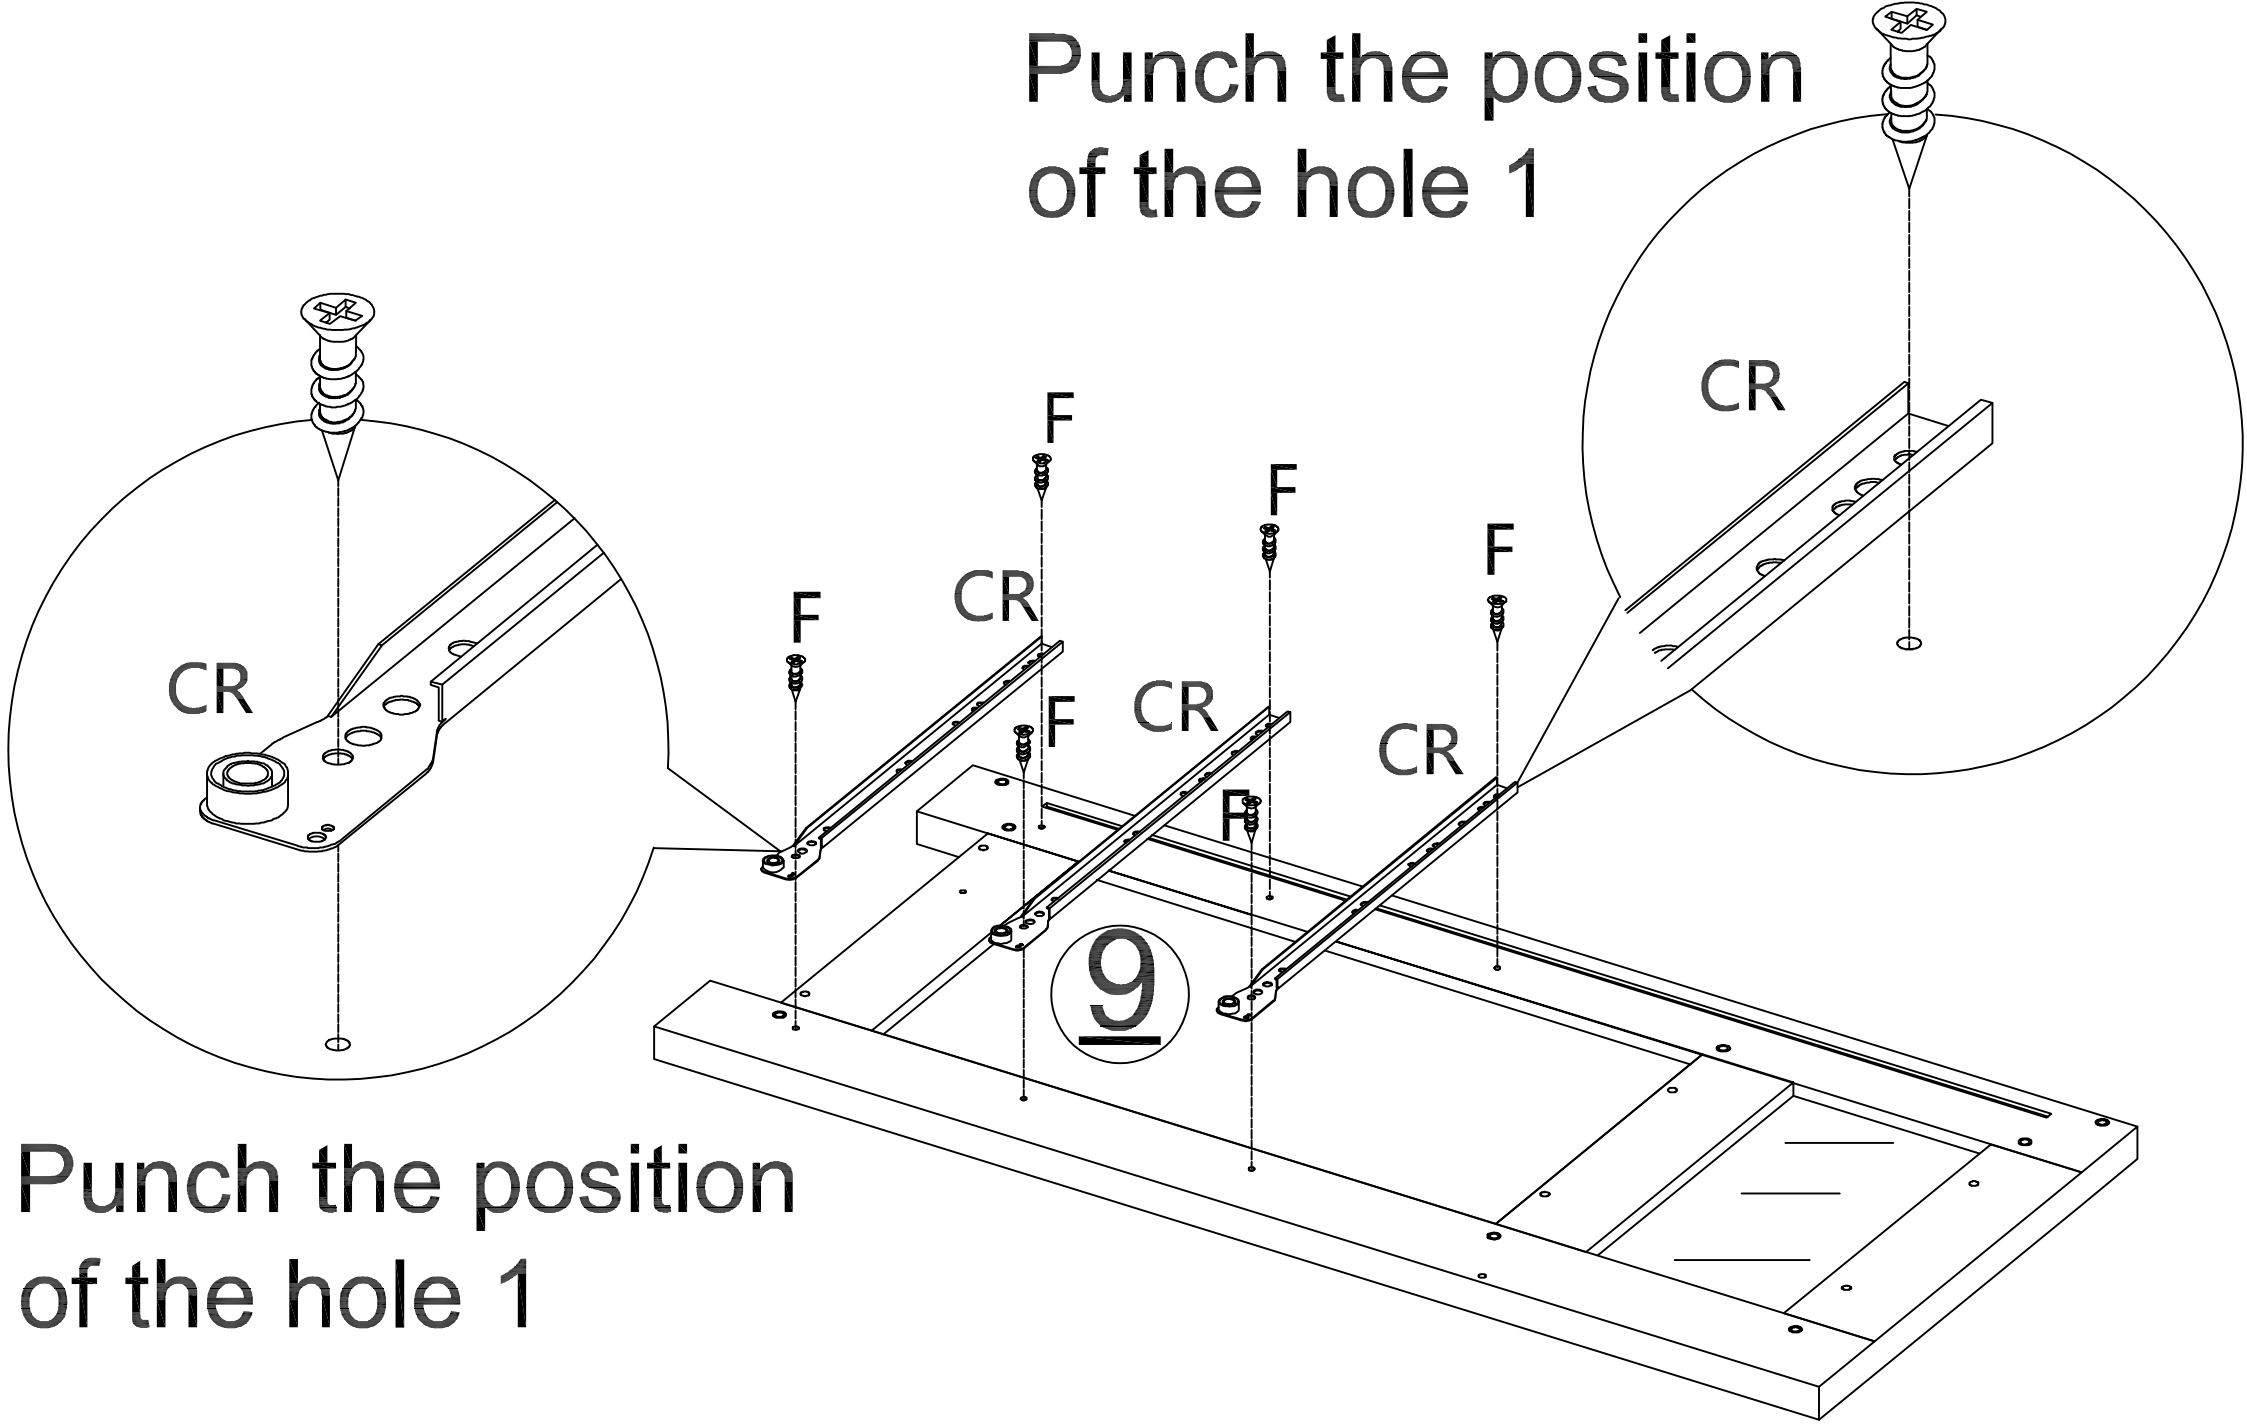

Punch the position
of the hole 1


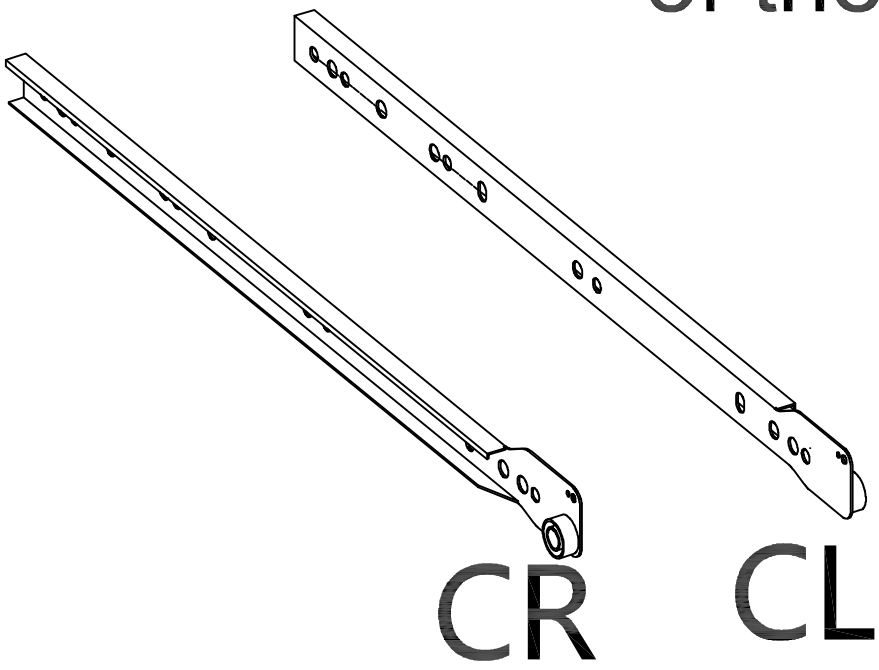







Punch the position
of the hole 1

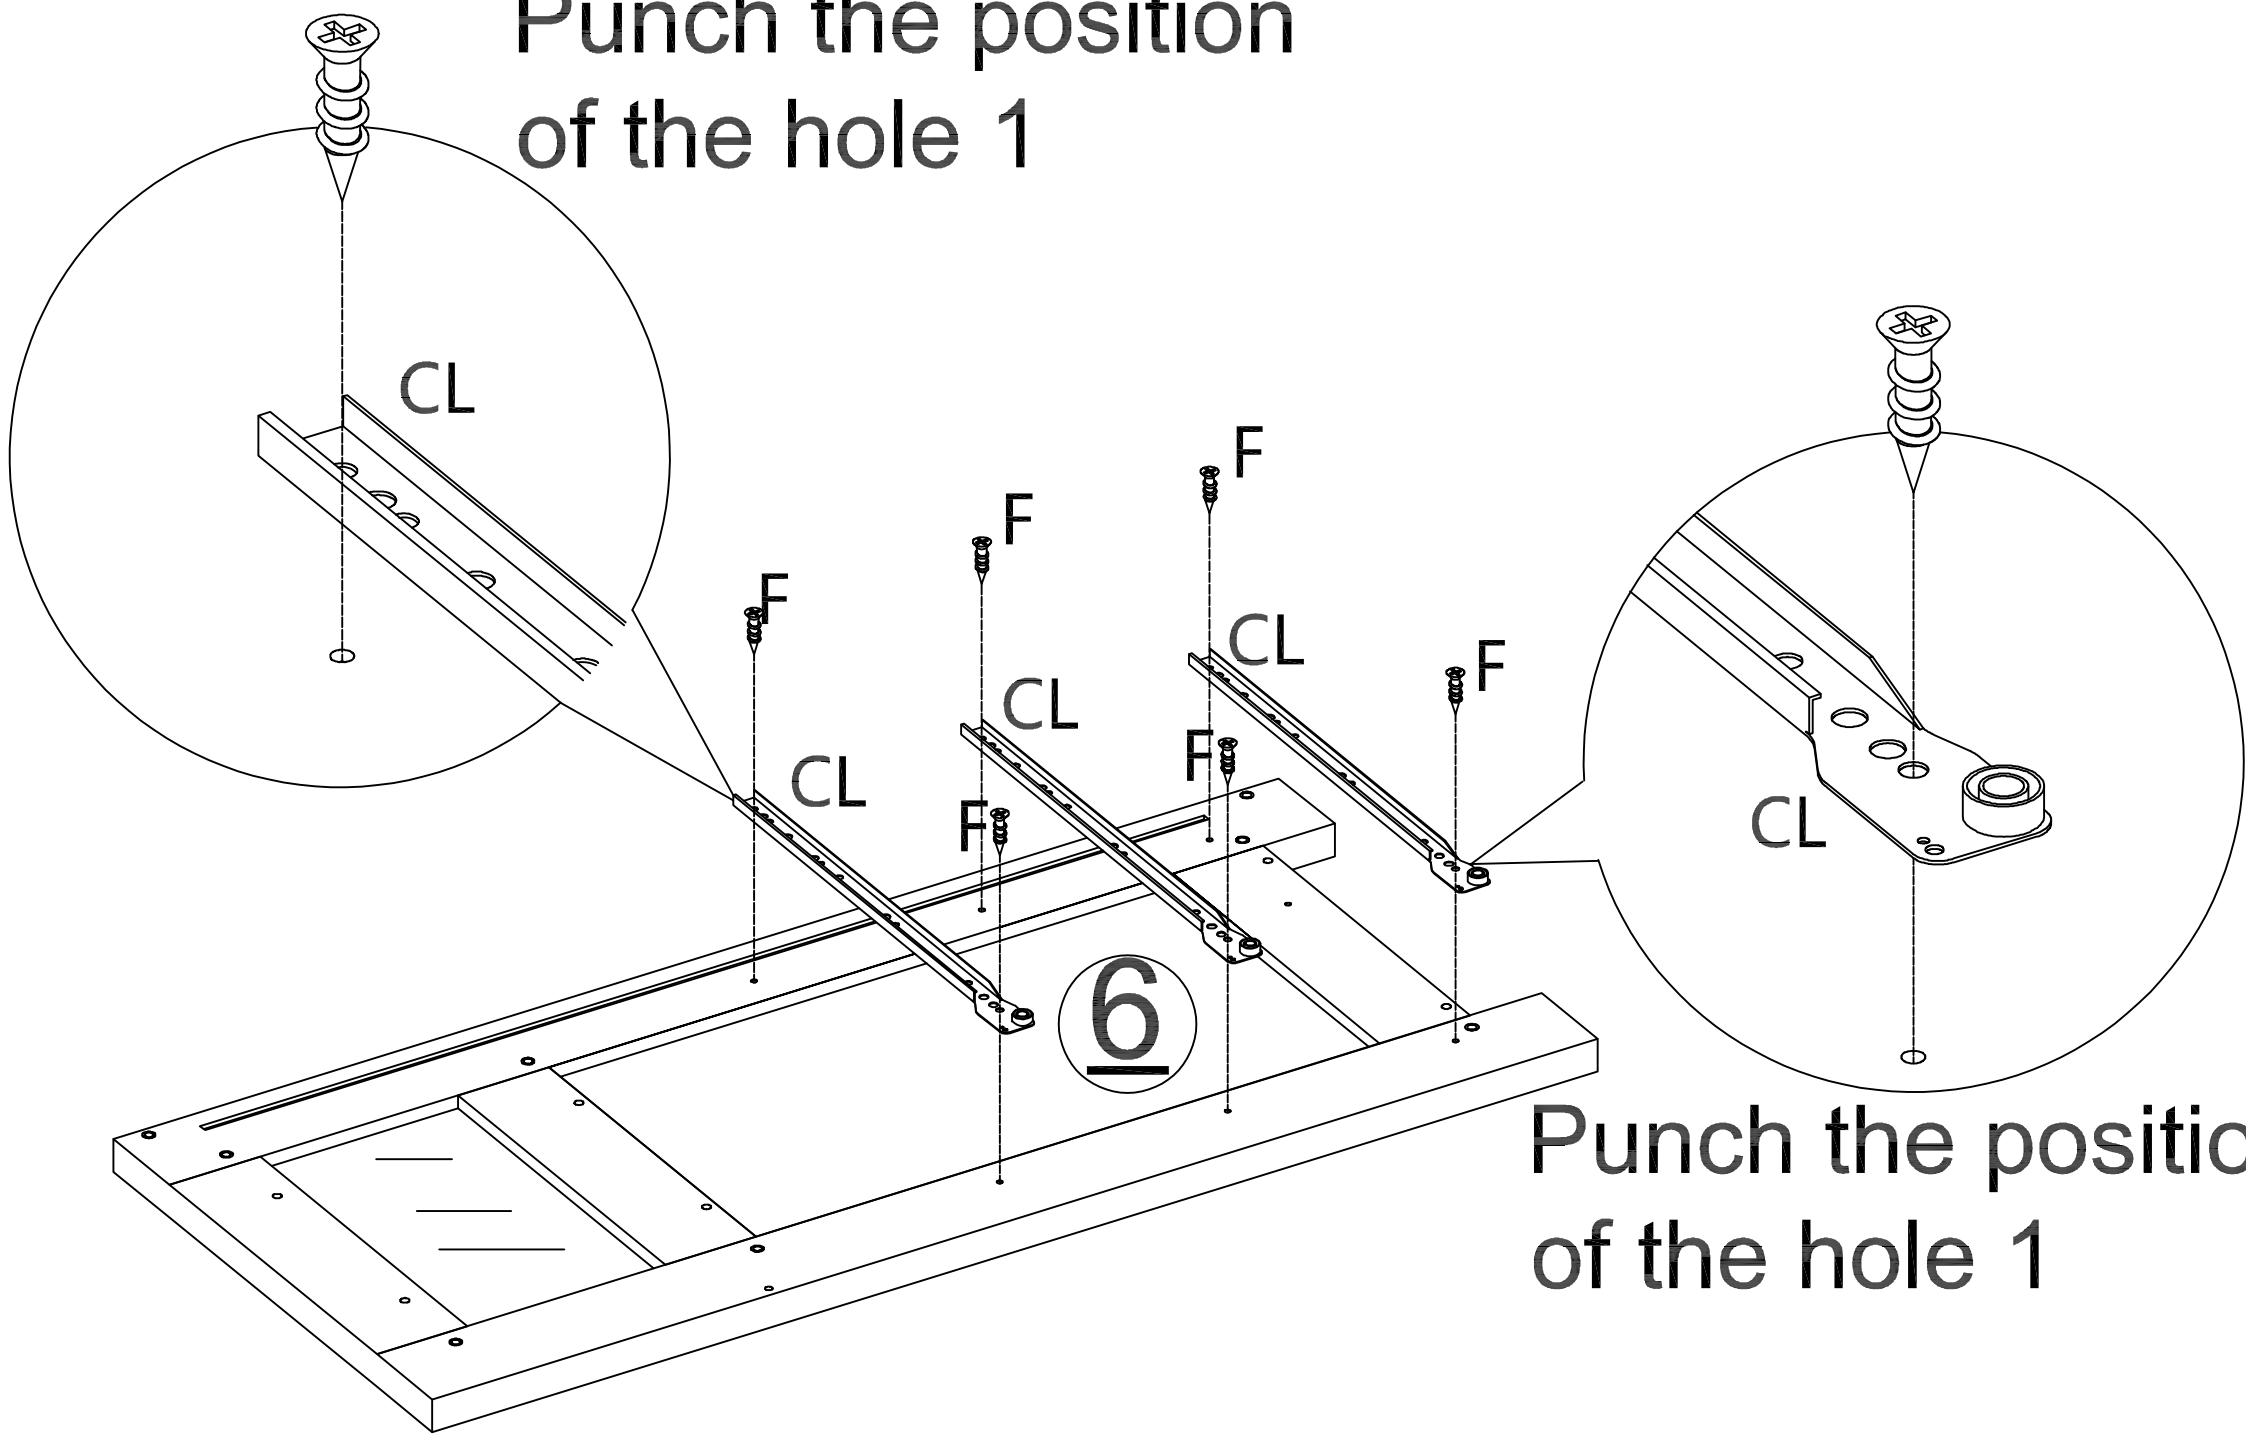


Punch the position
of the hole 1



Step:26

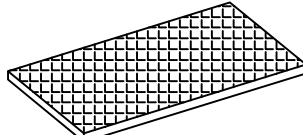
A		X16
Y		X4

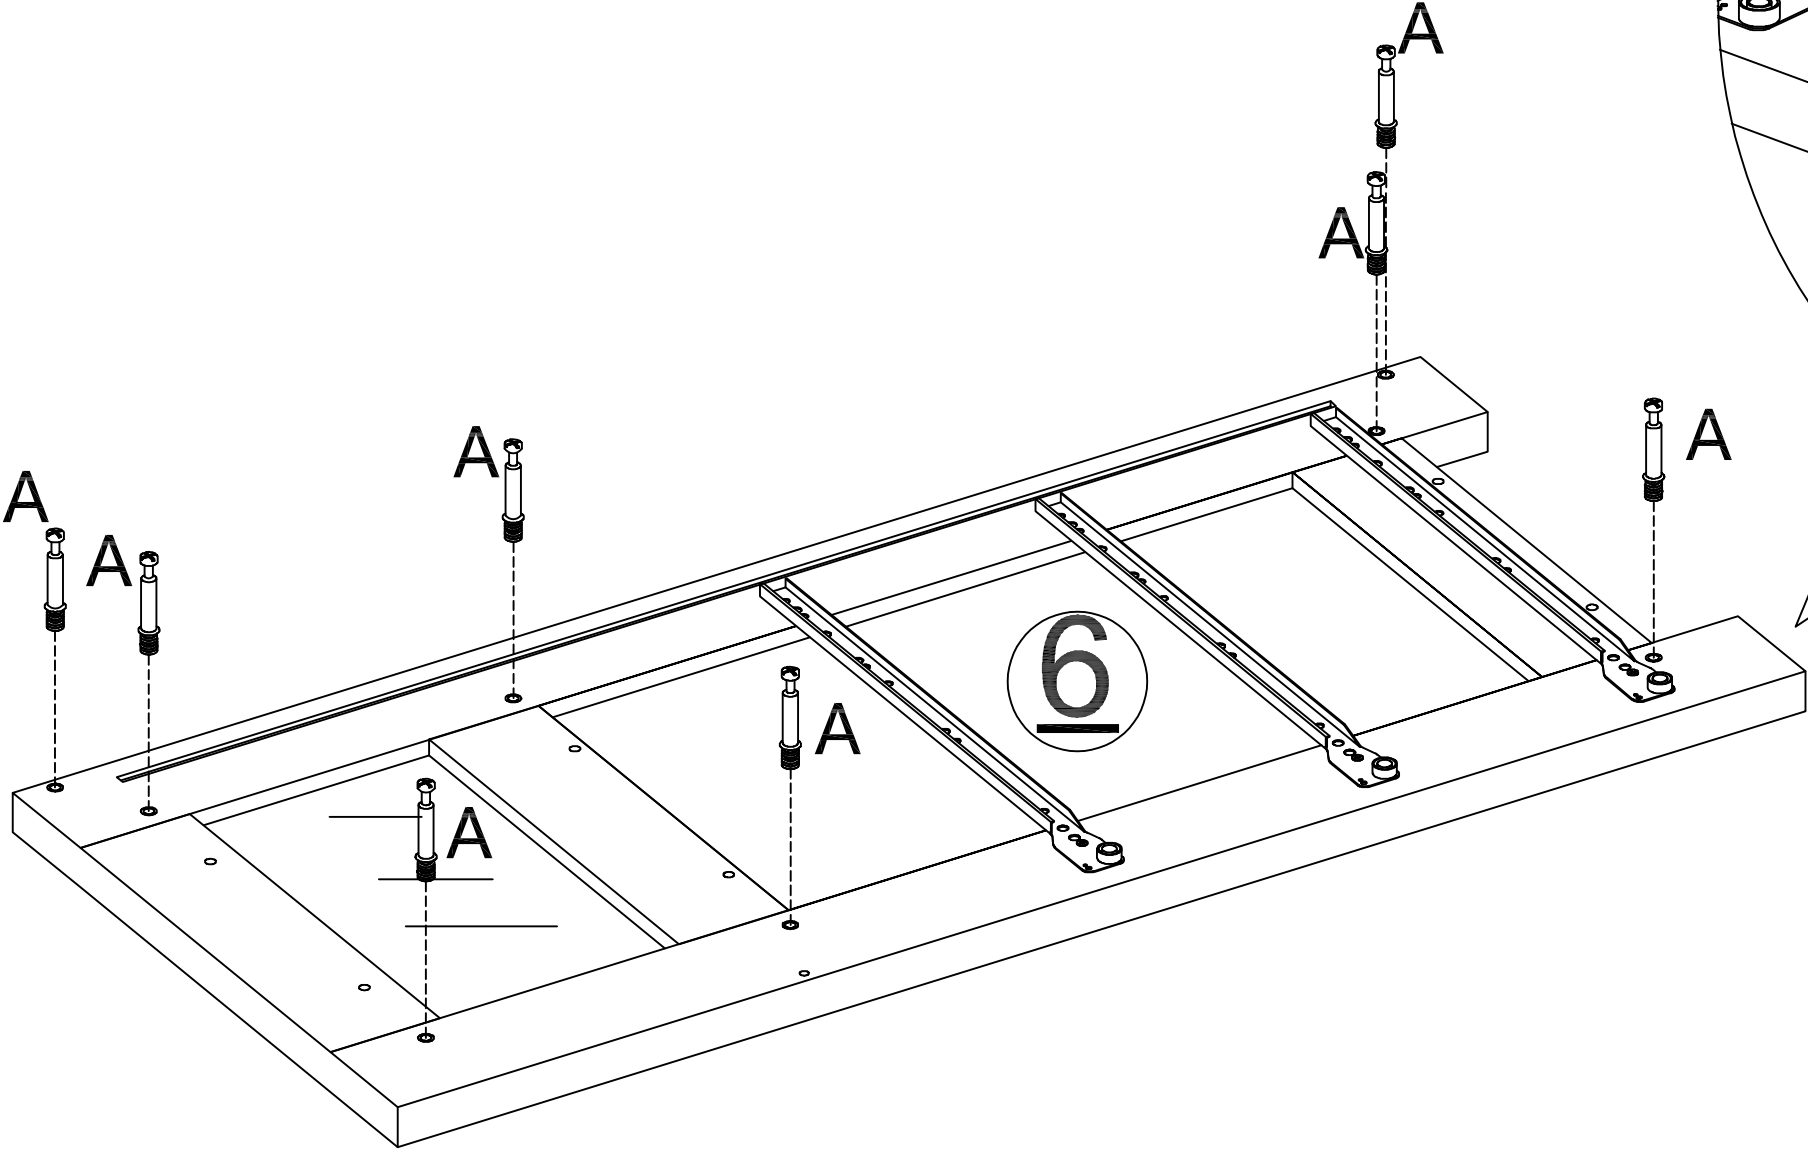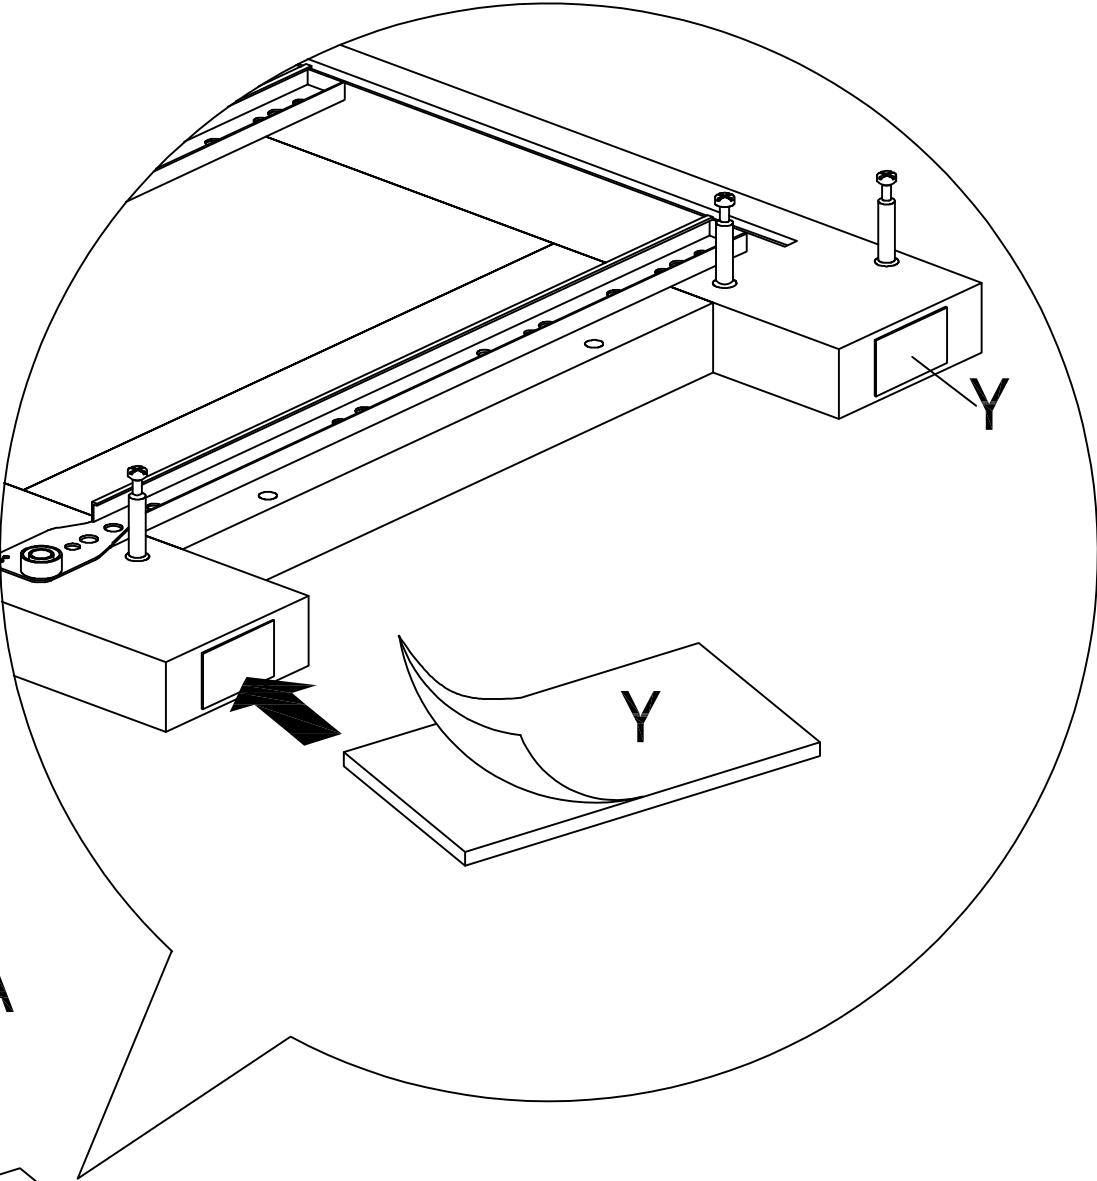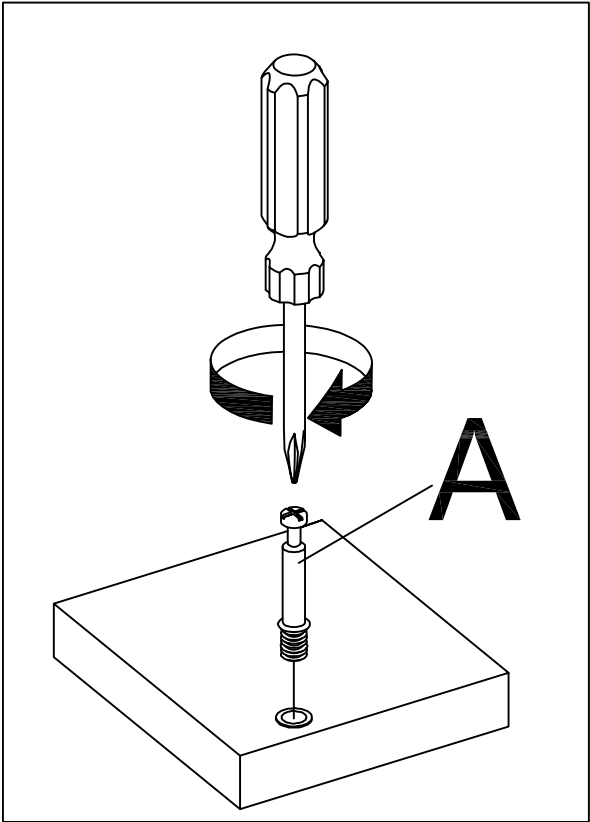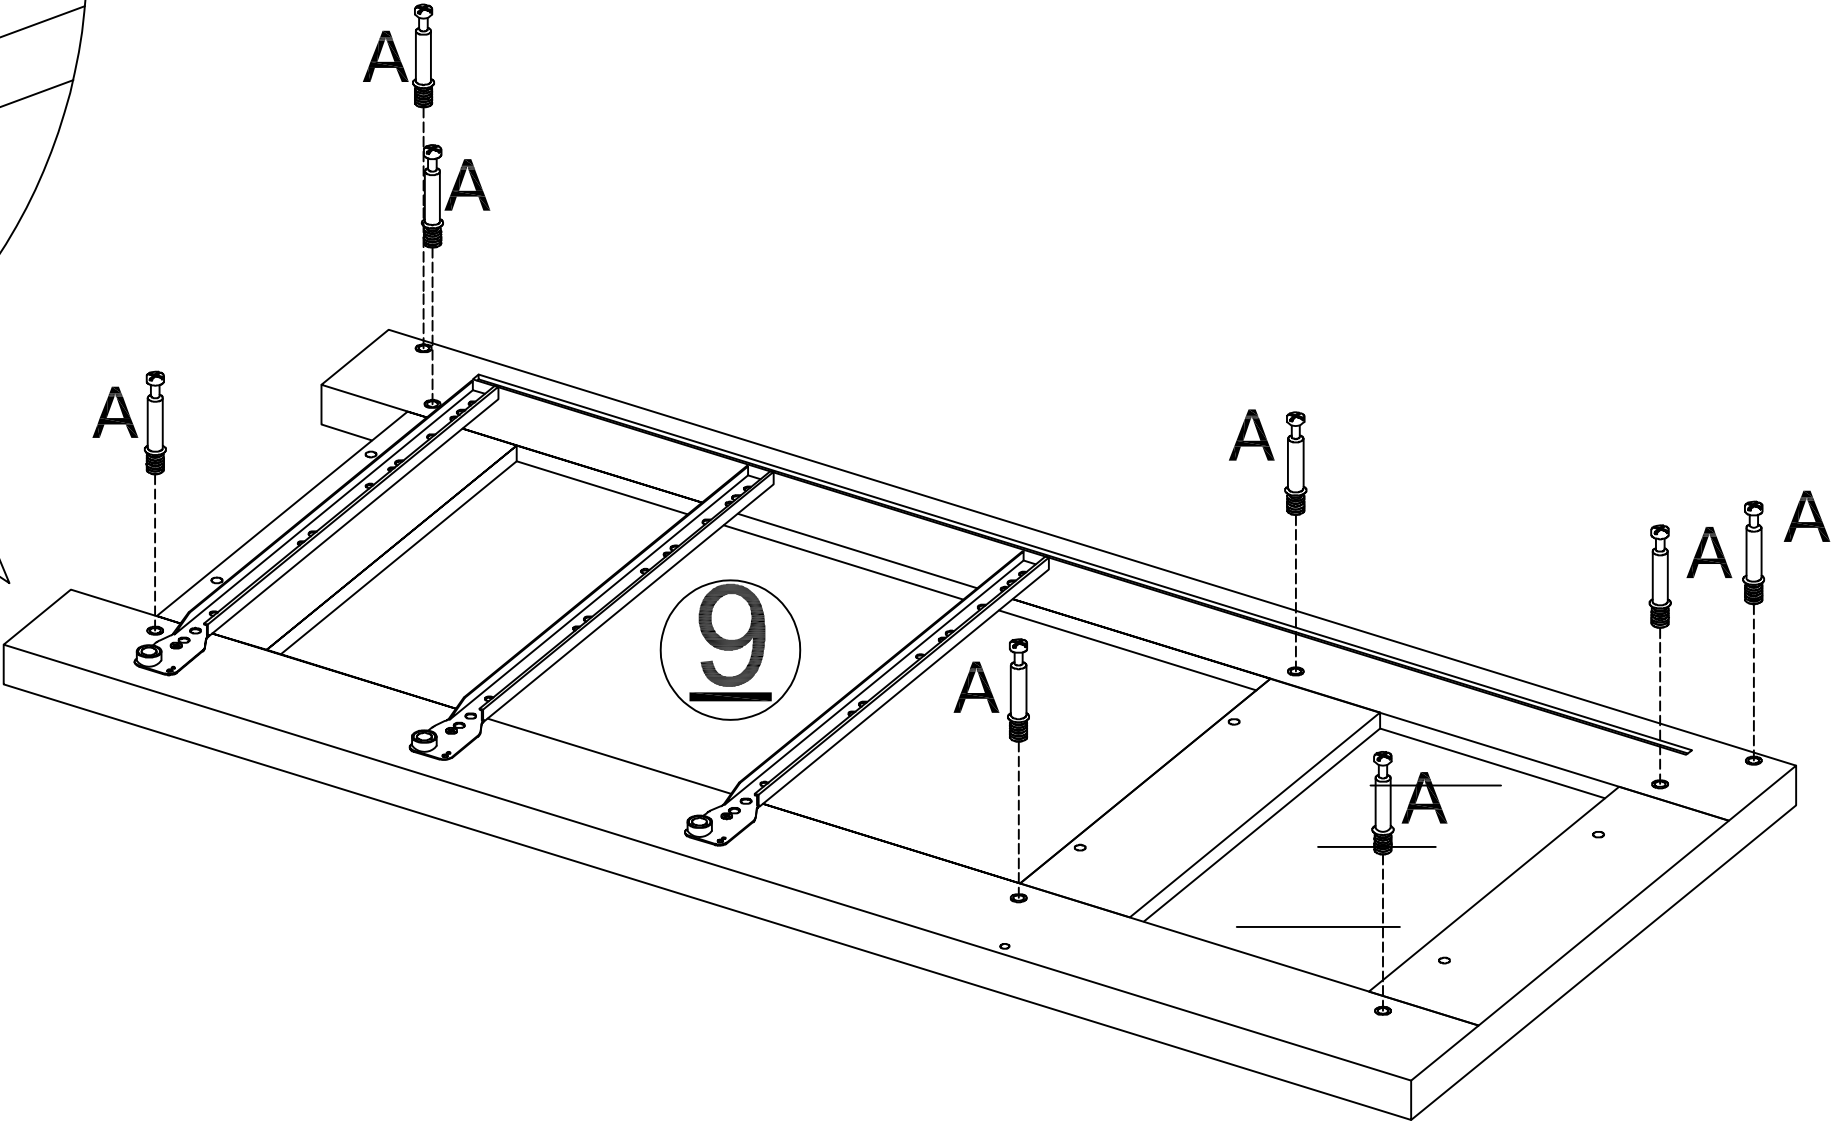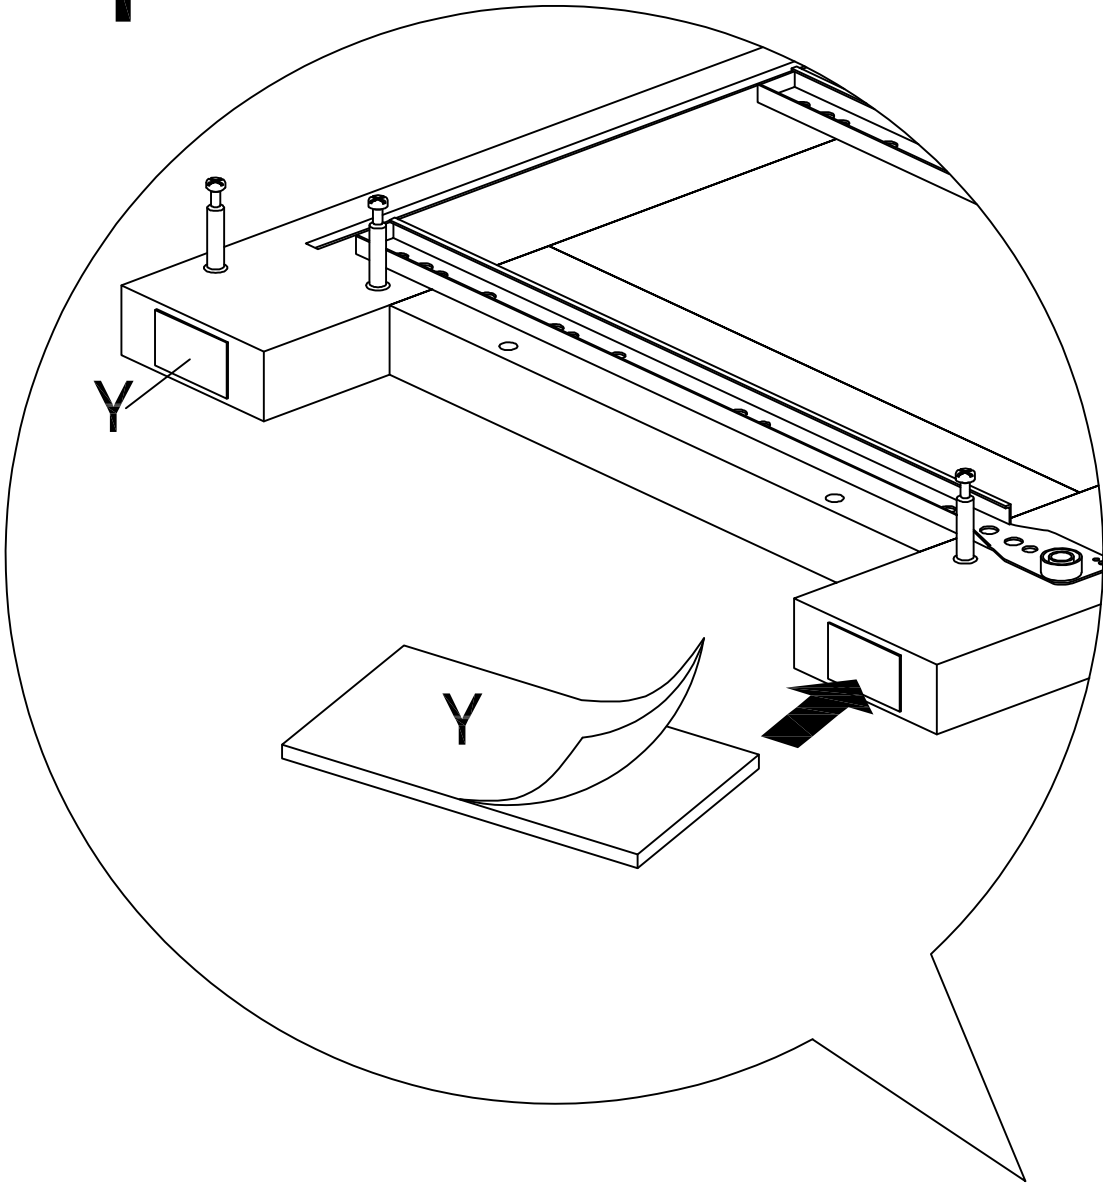


Step:27

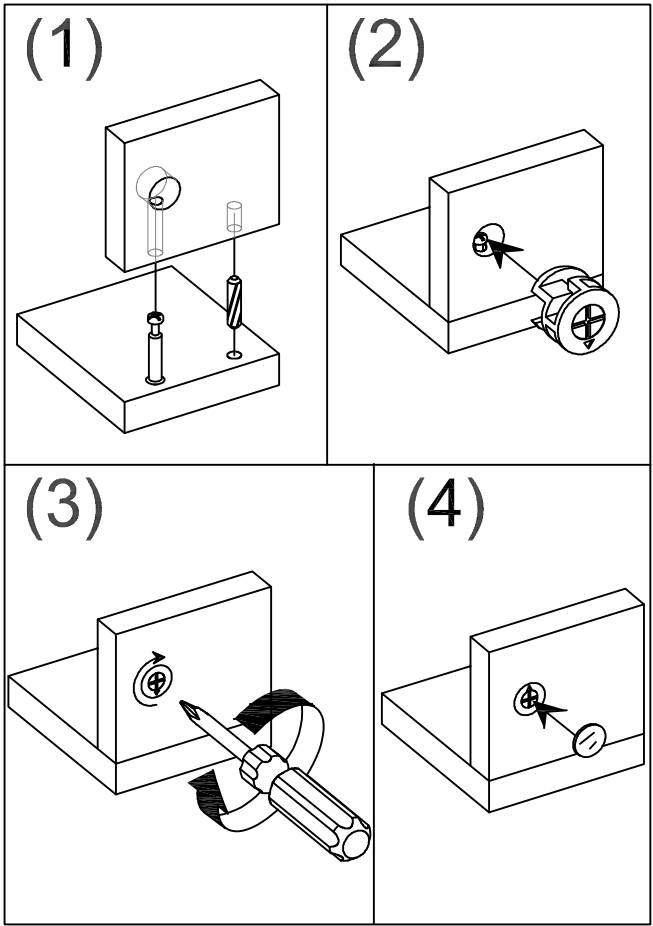

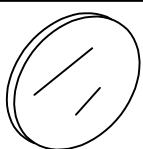
B	 ø15*12mm	X 8
E	 ø8*30mm	X 6
V		X 8

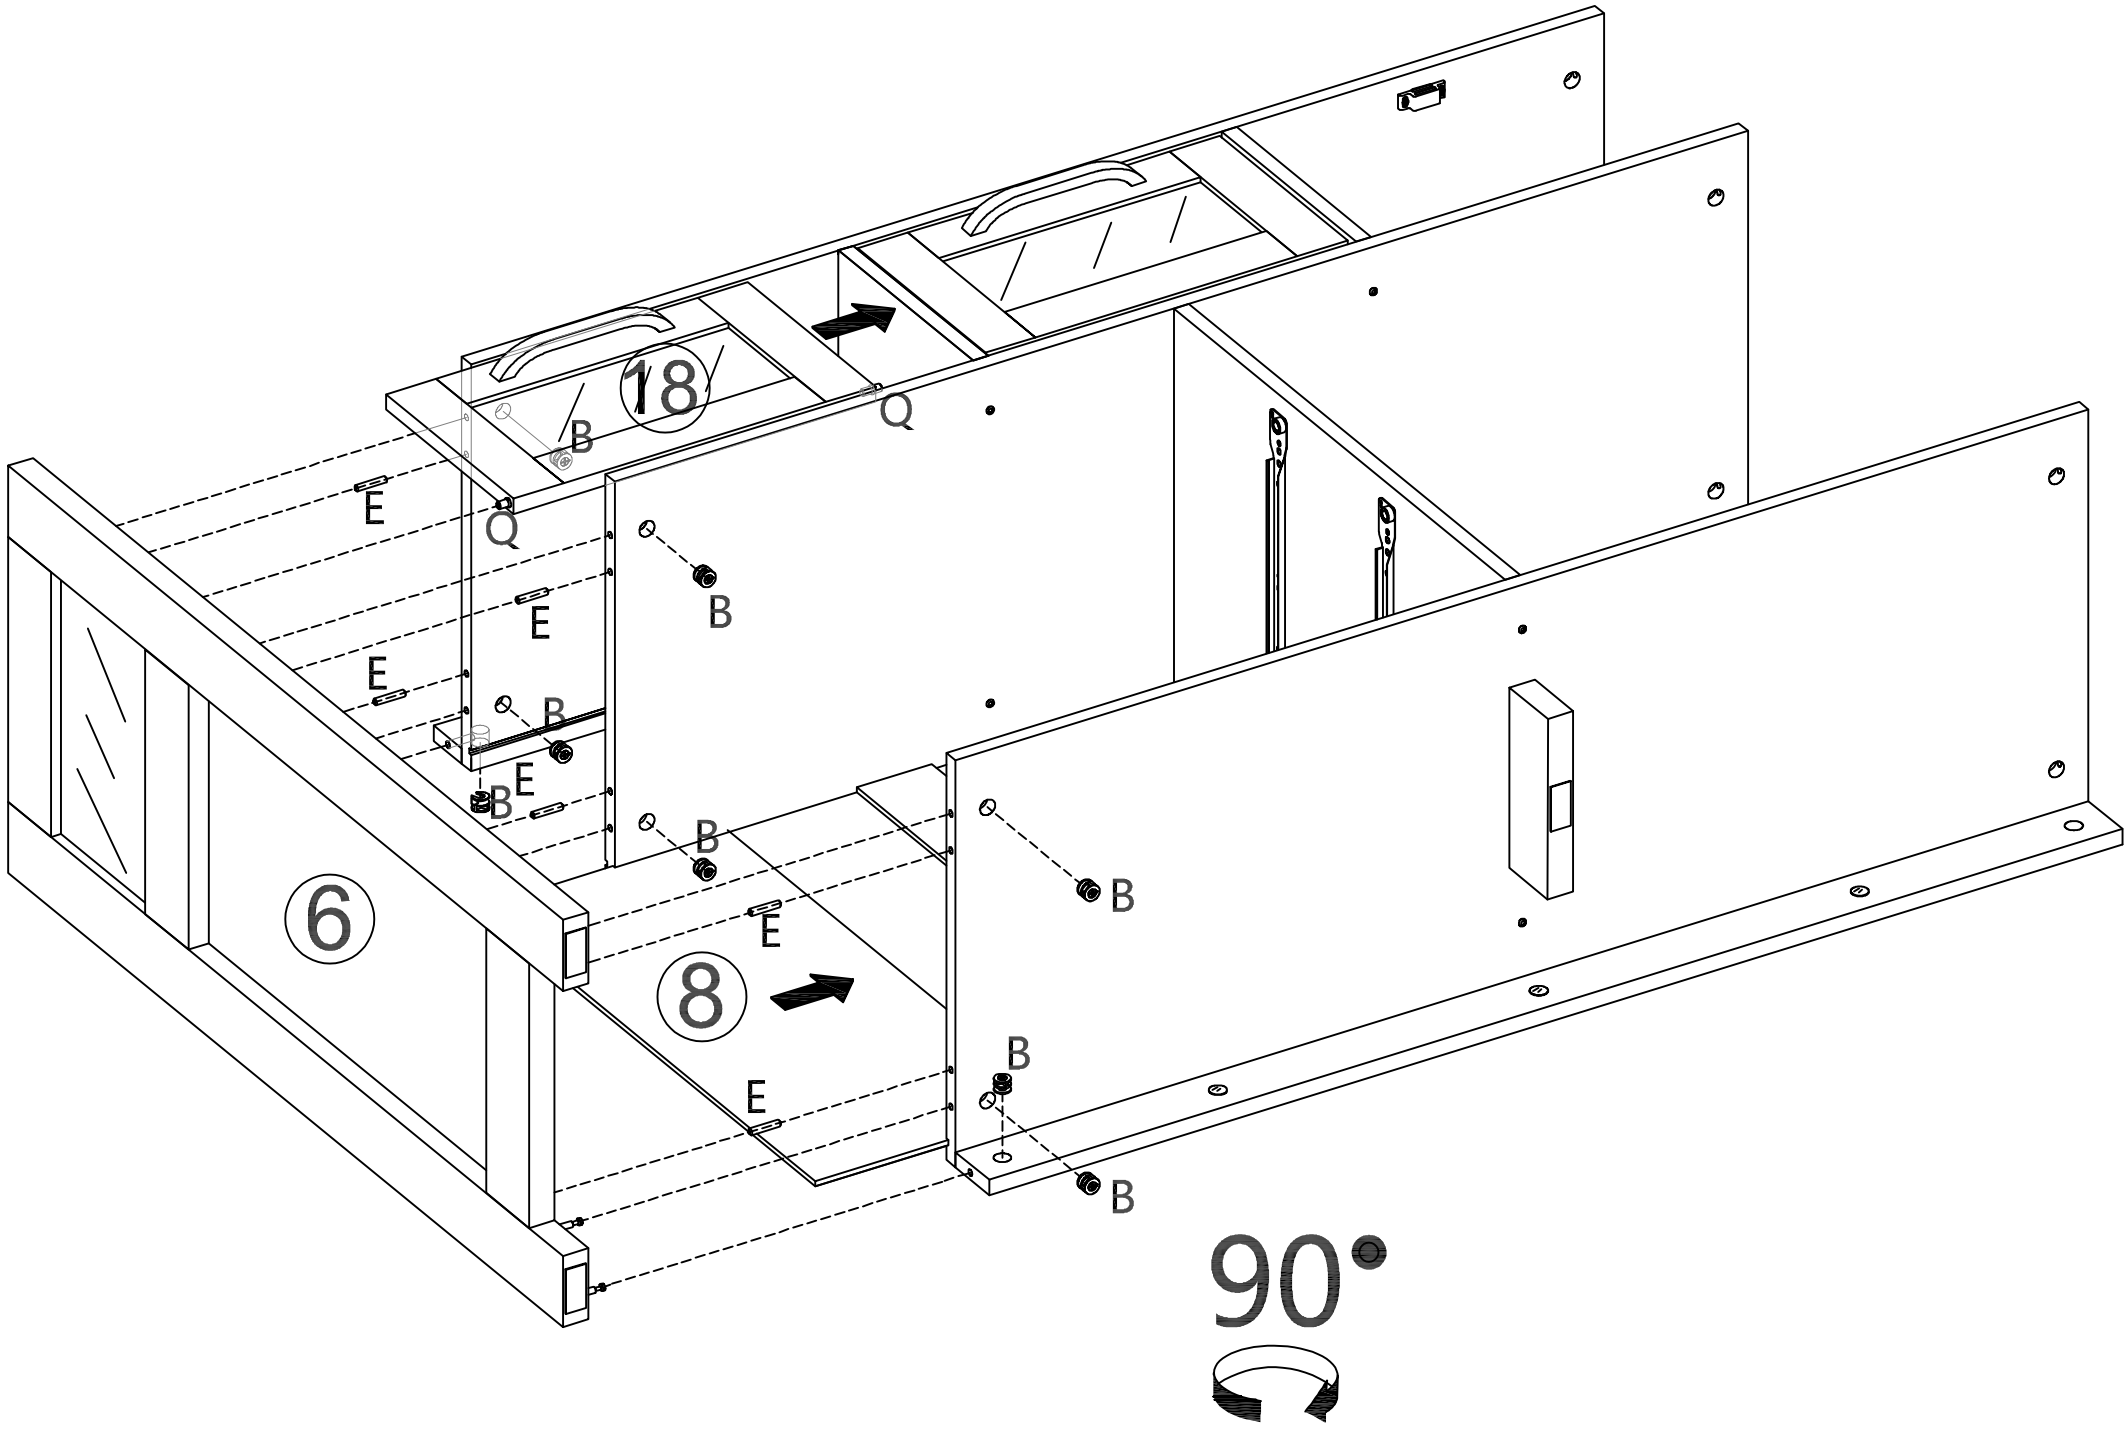



Step:28

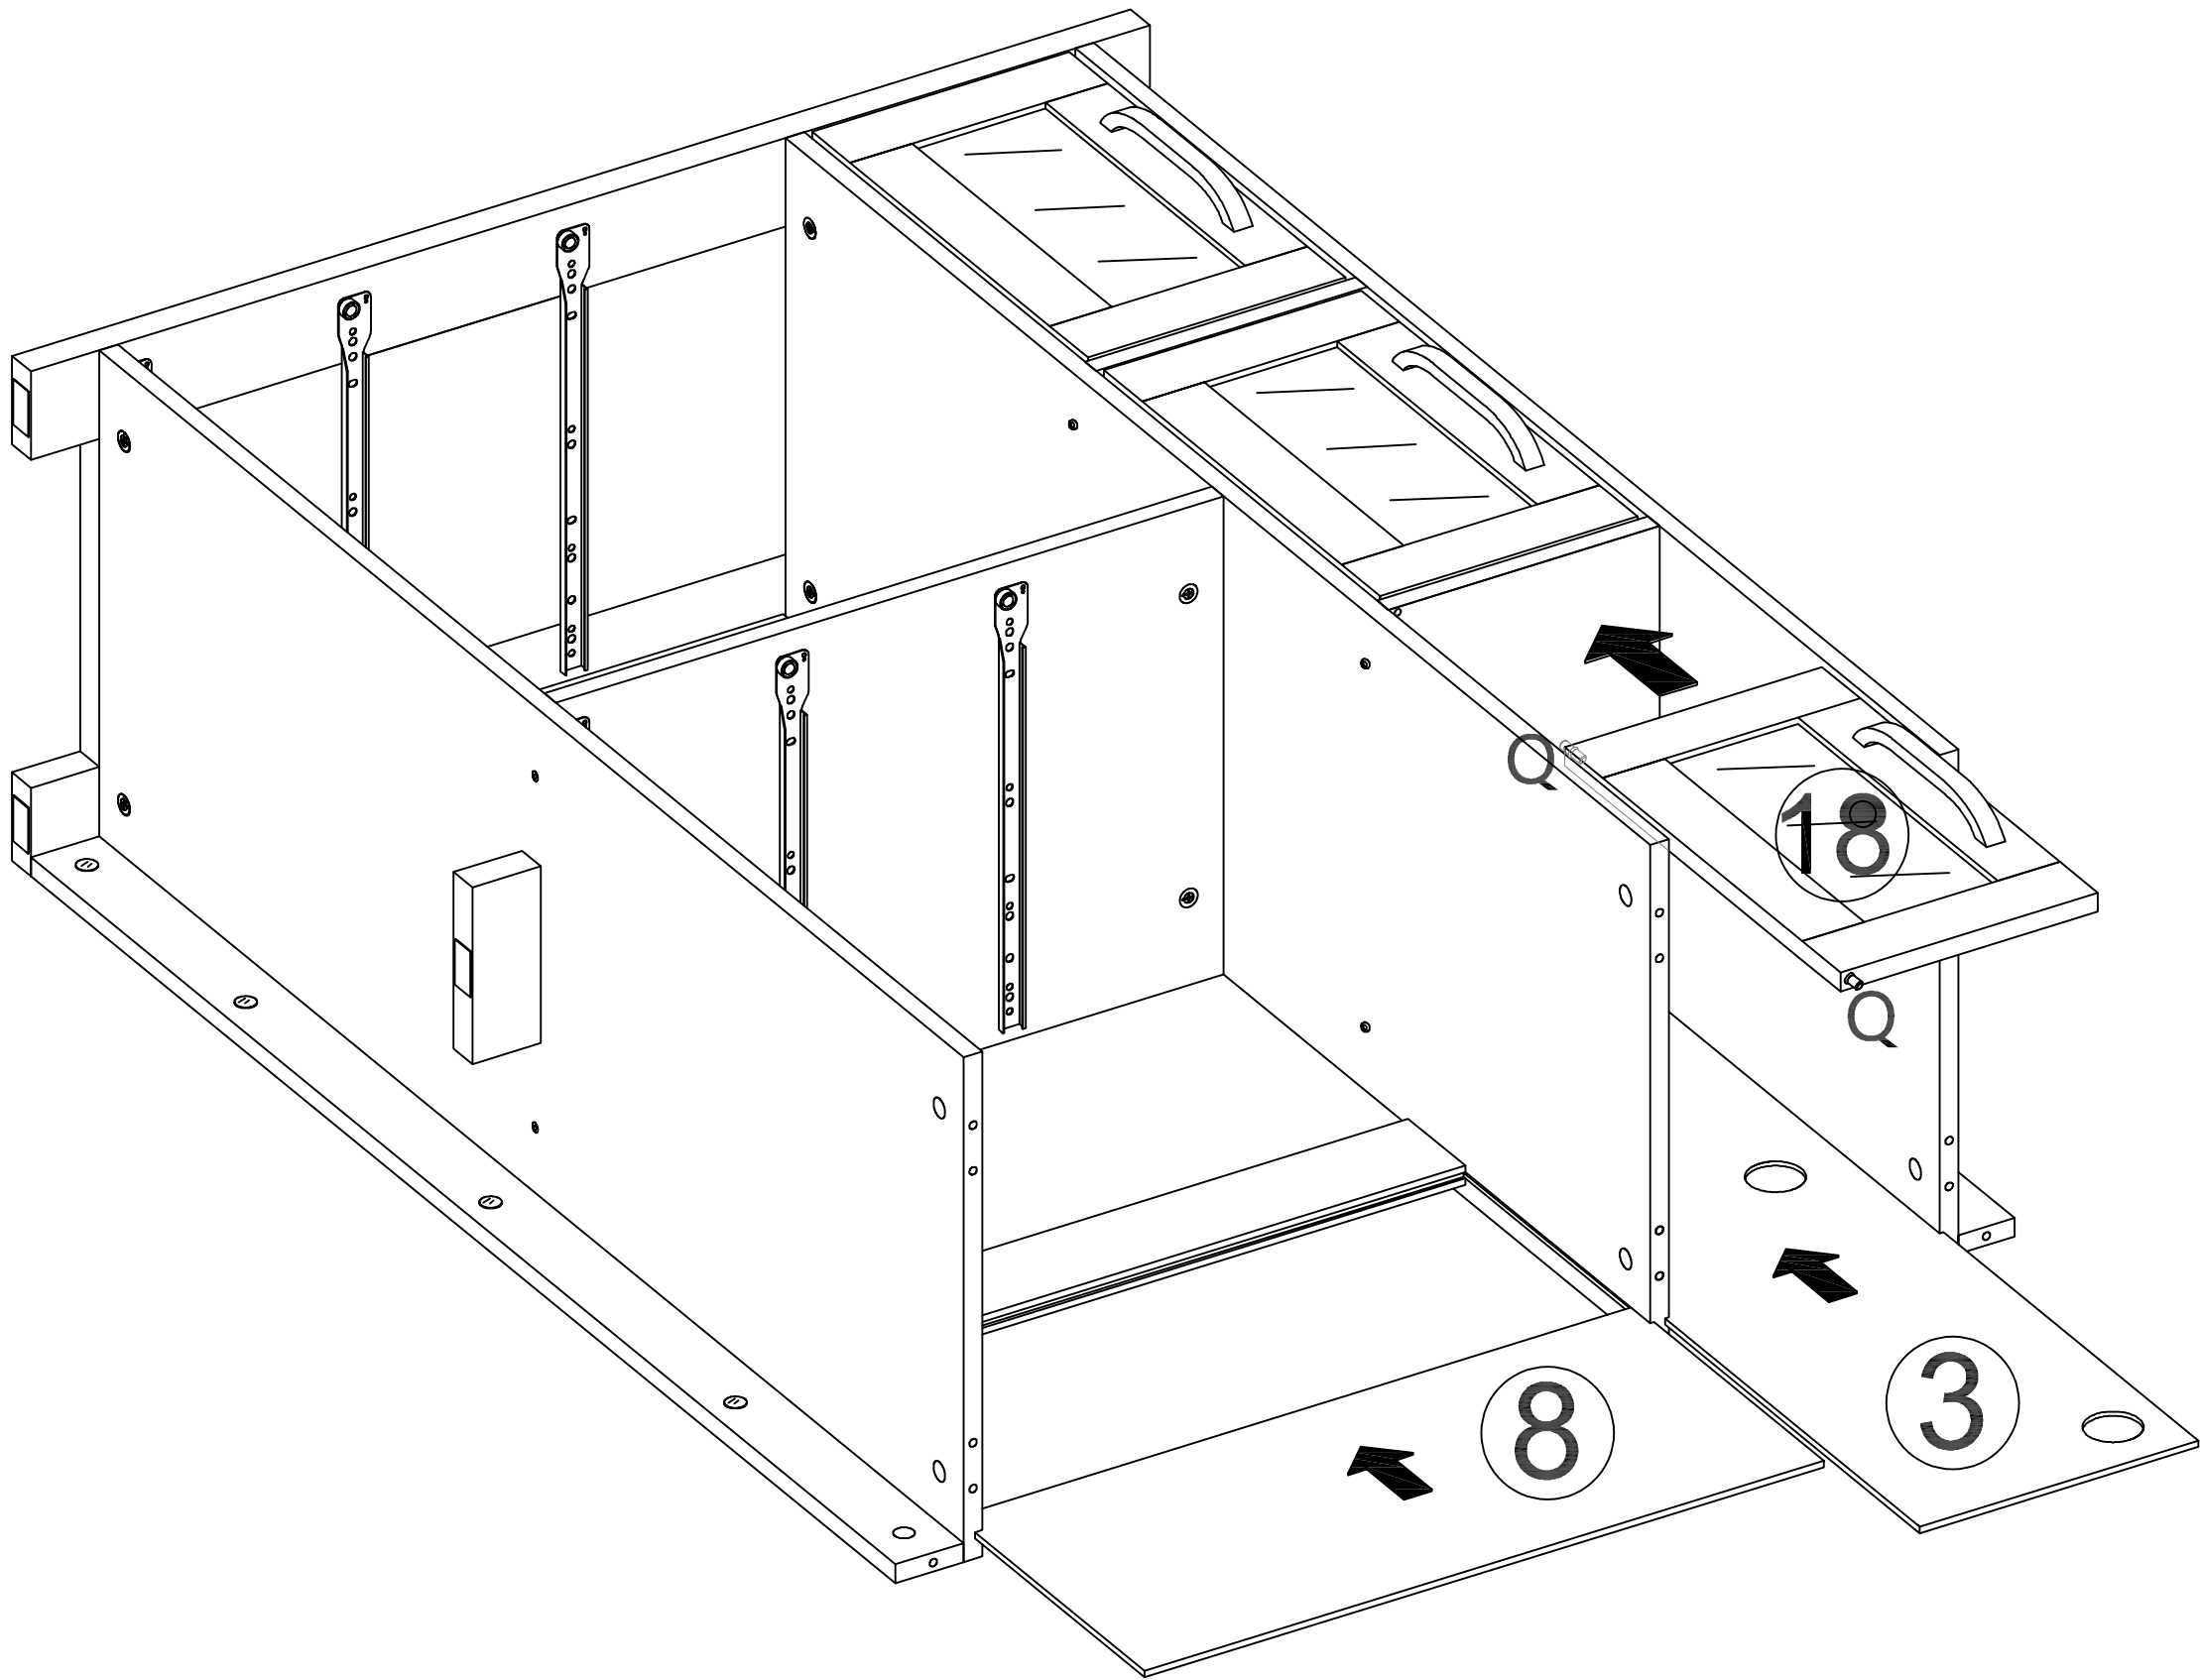



Step:29

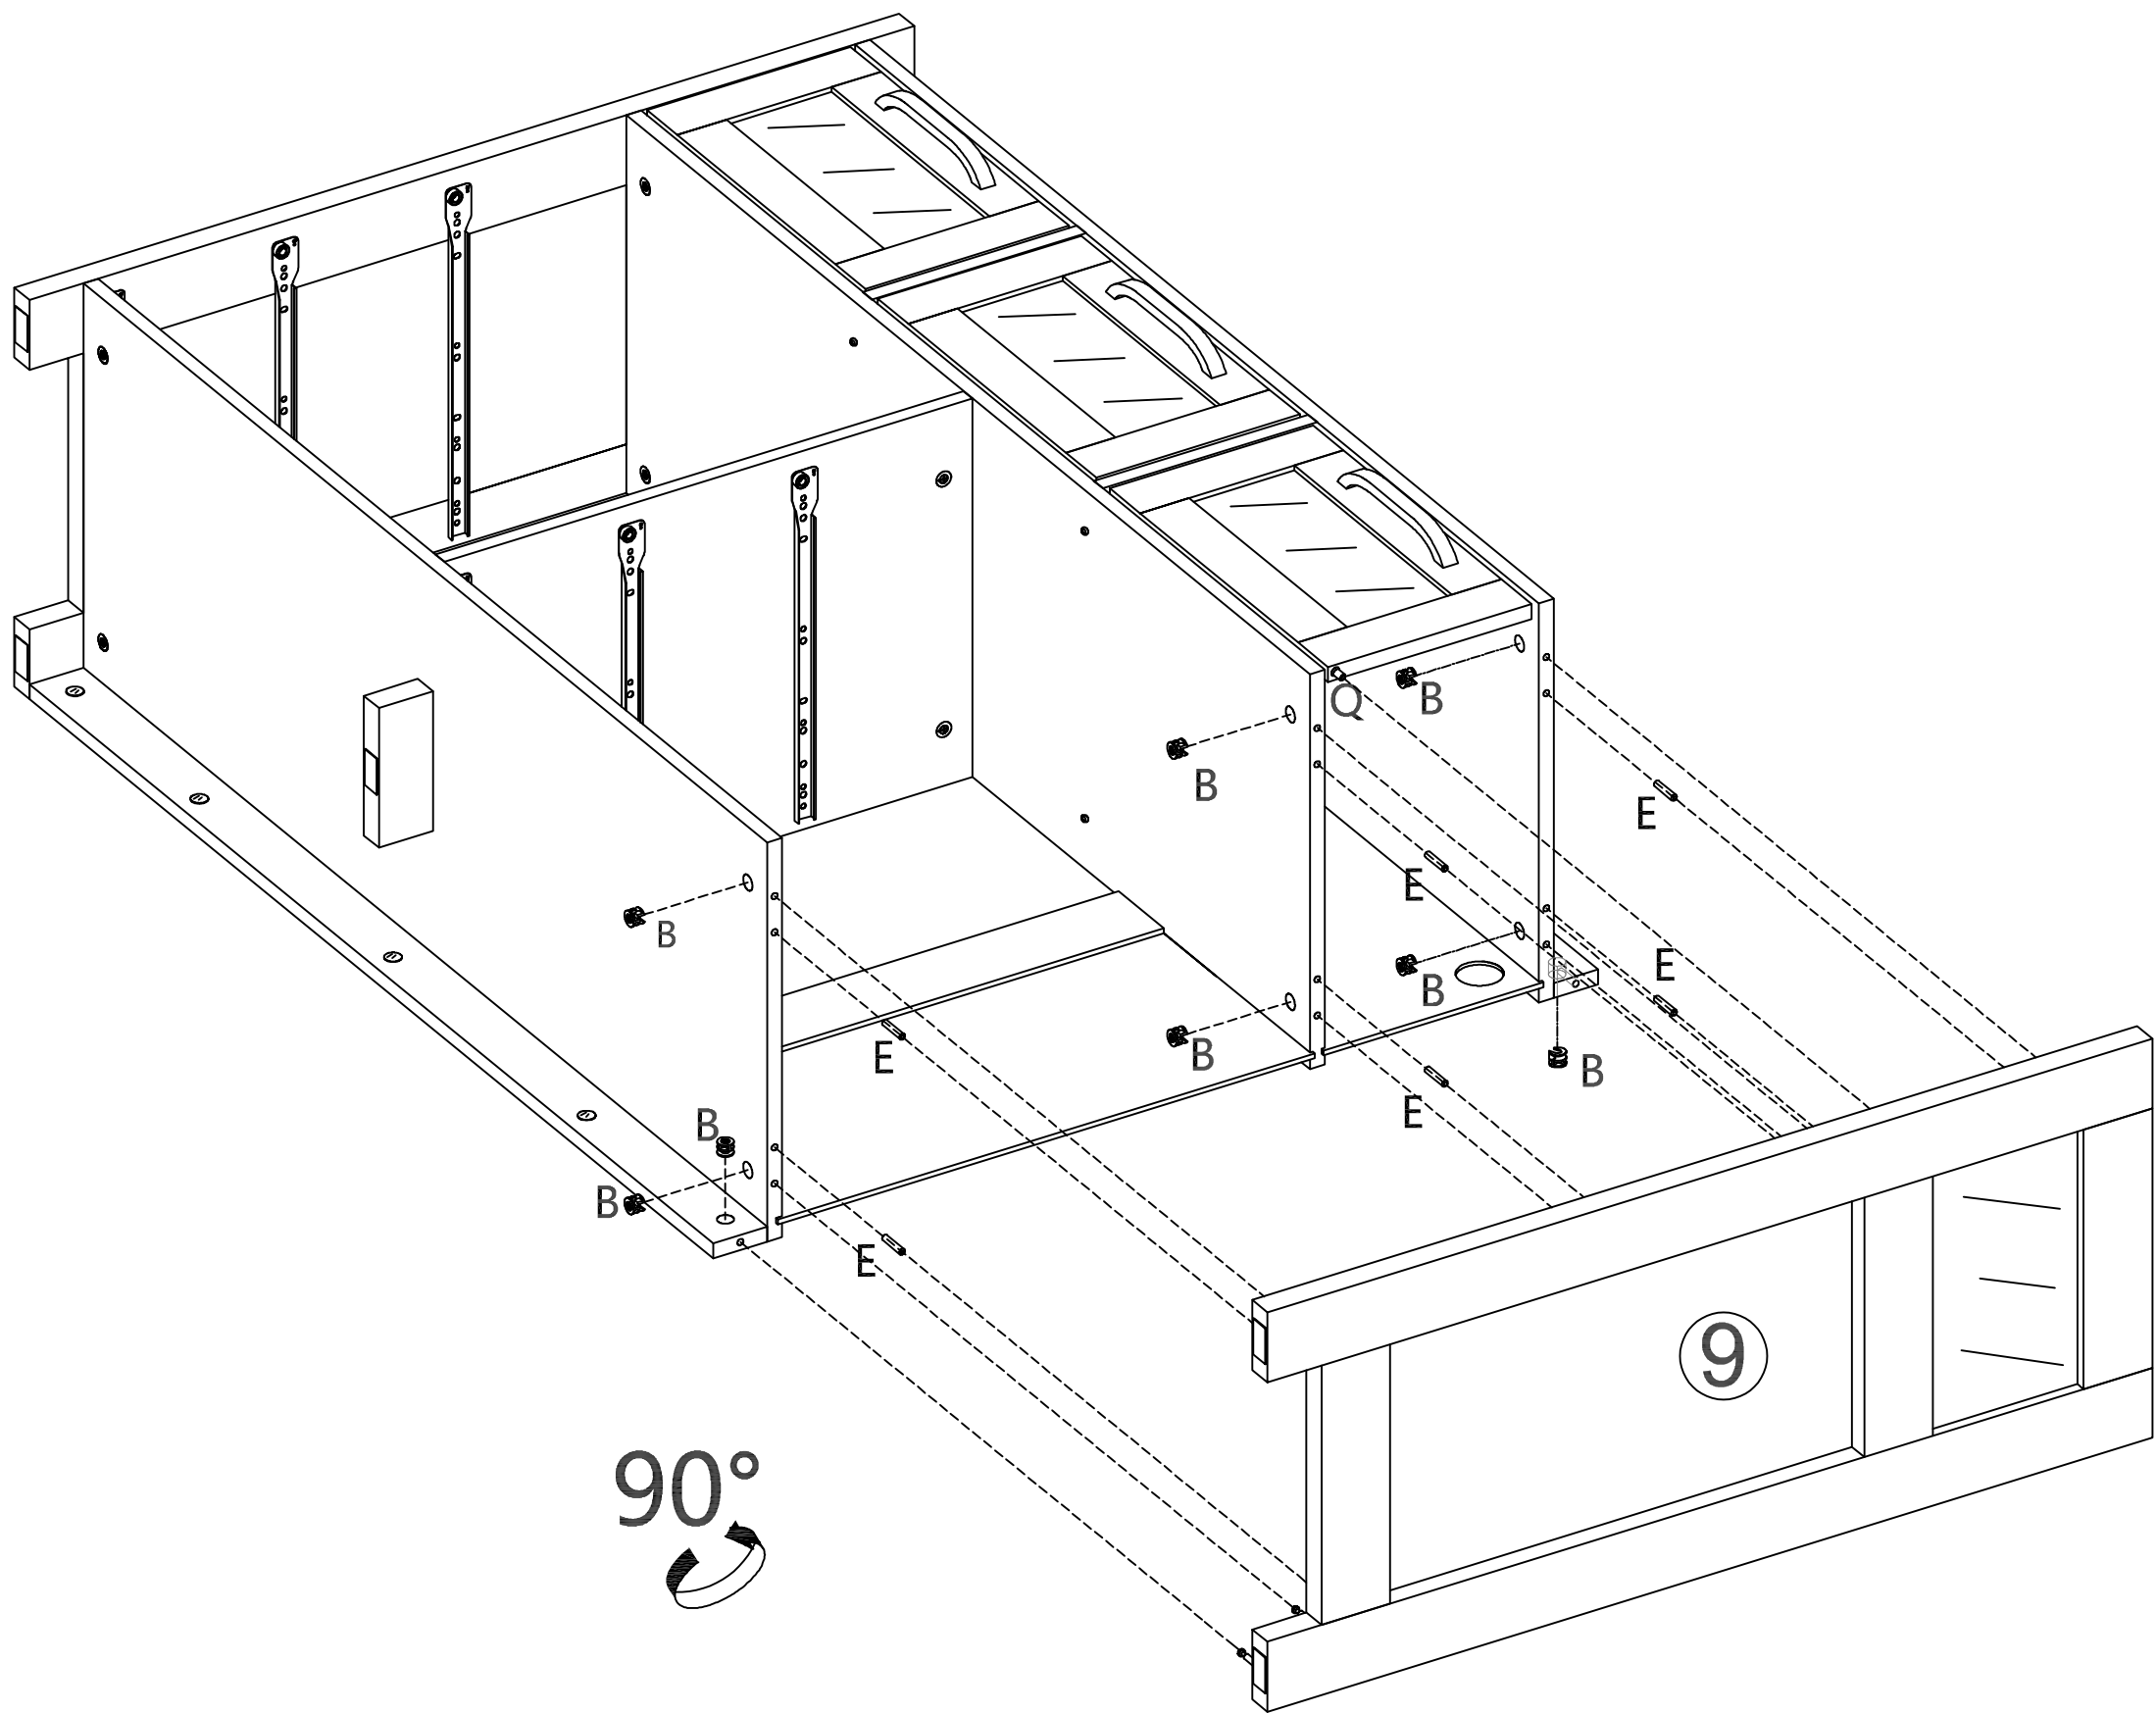


B	 ø15*12mm	X8
E	 ø8*30mm	X6
V		X8

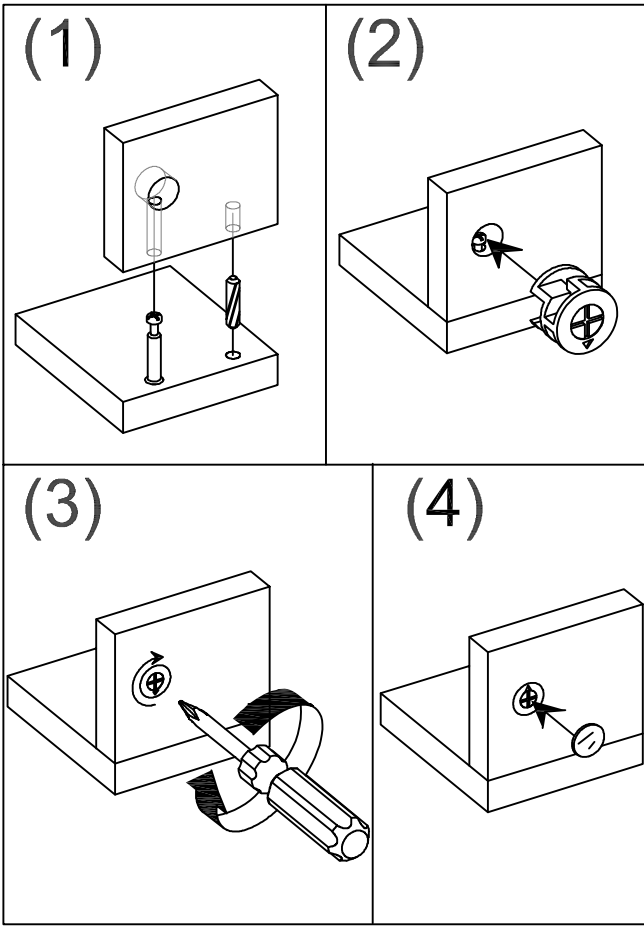



Step:30

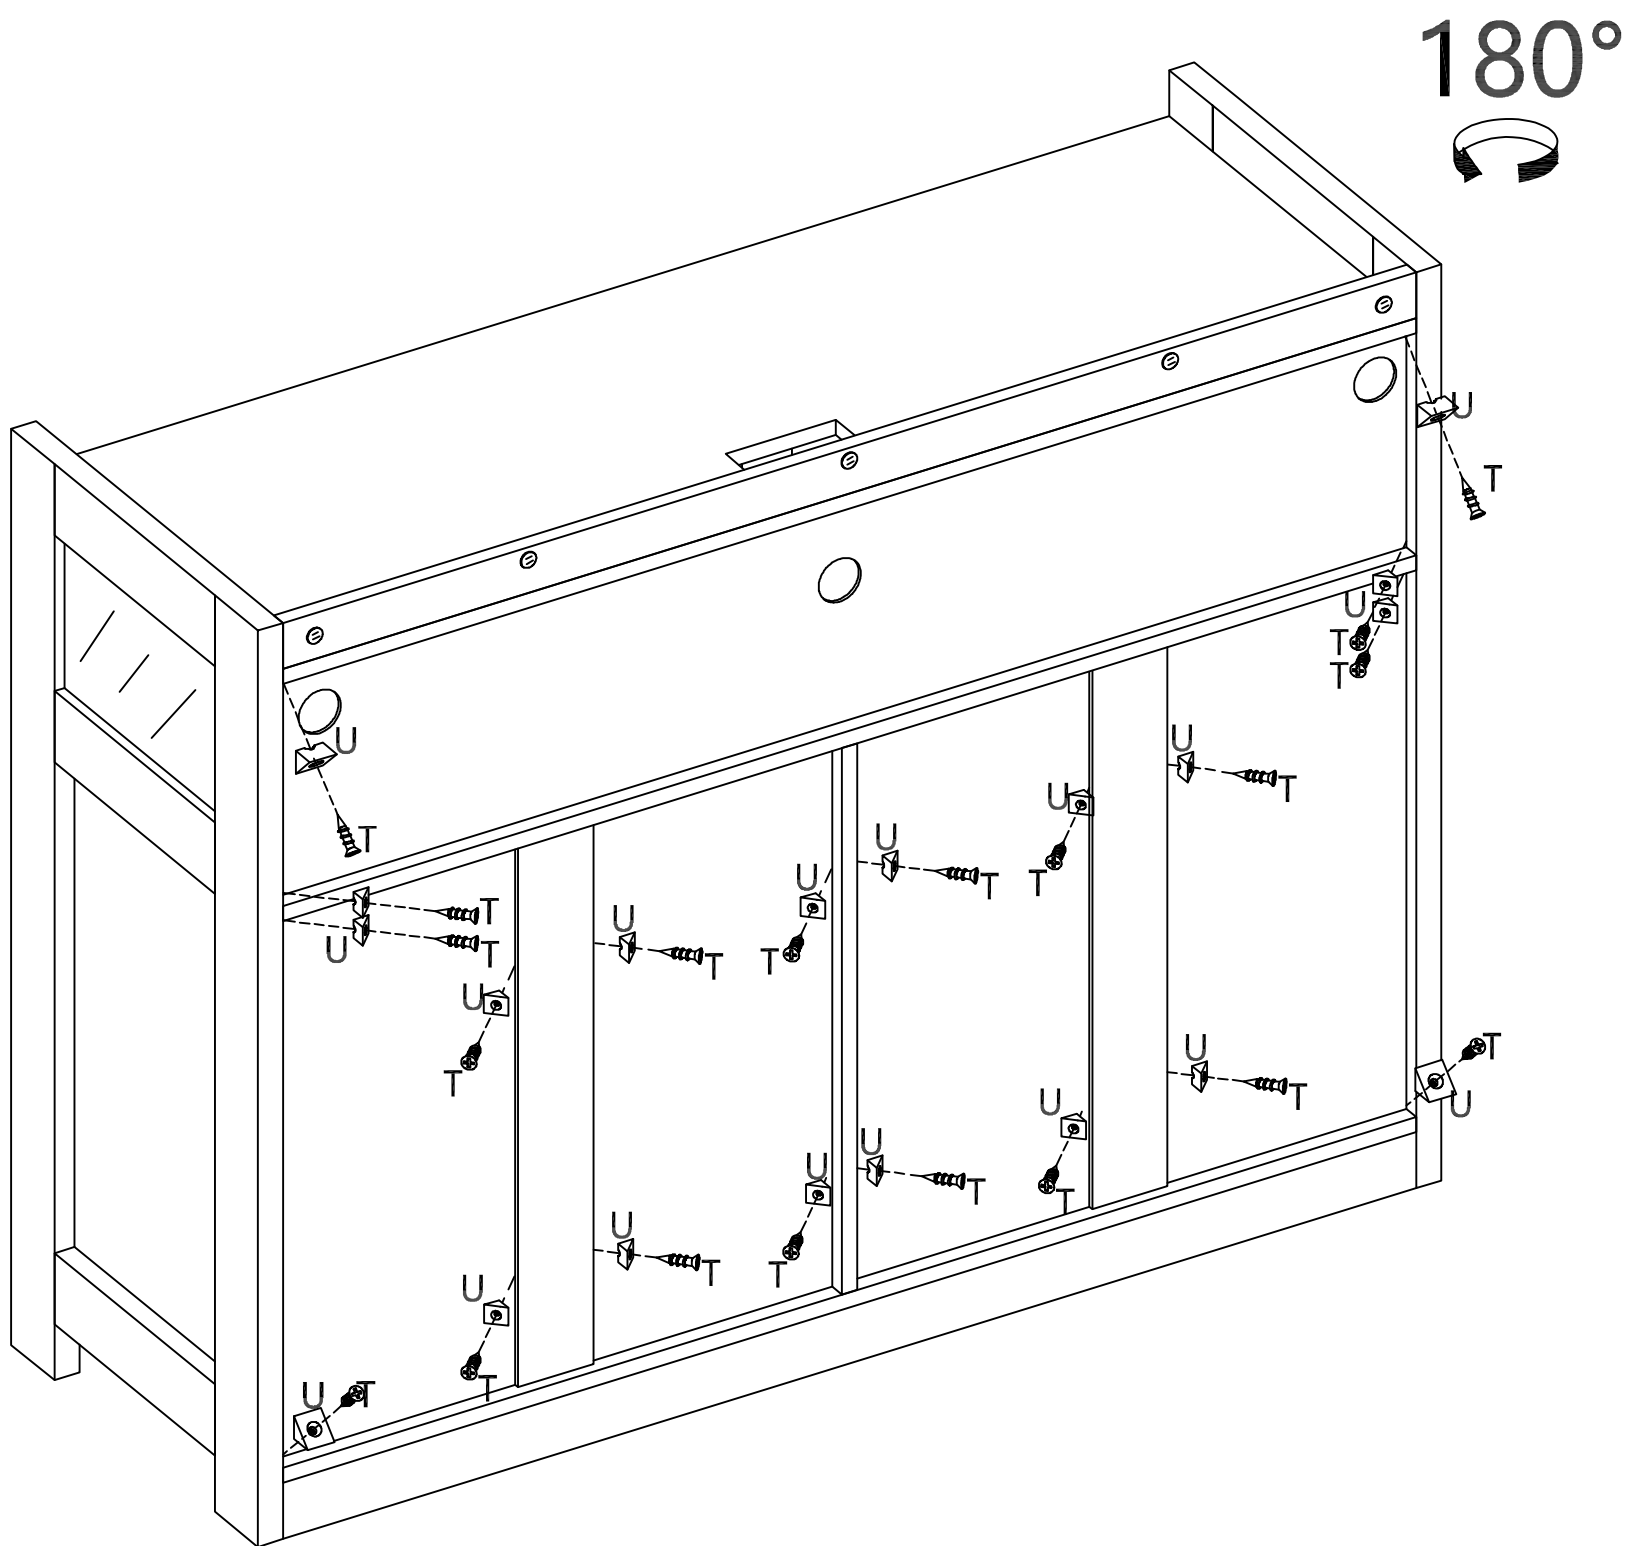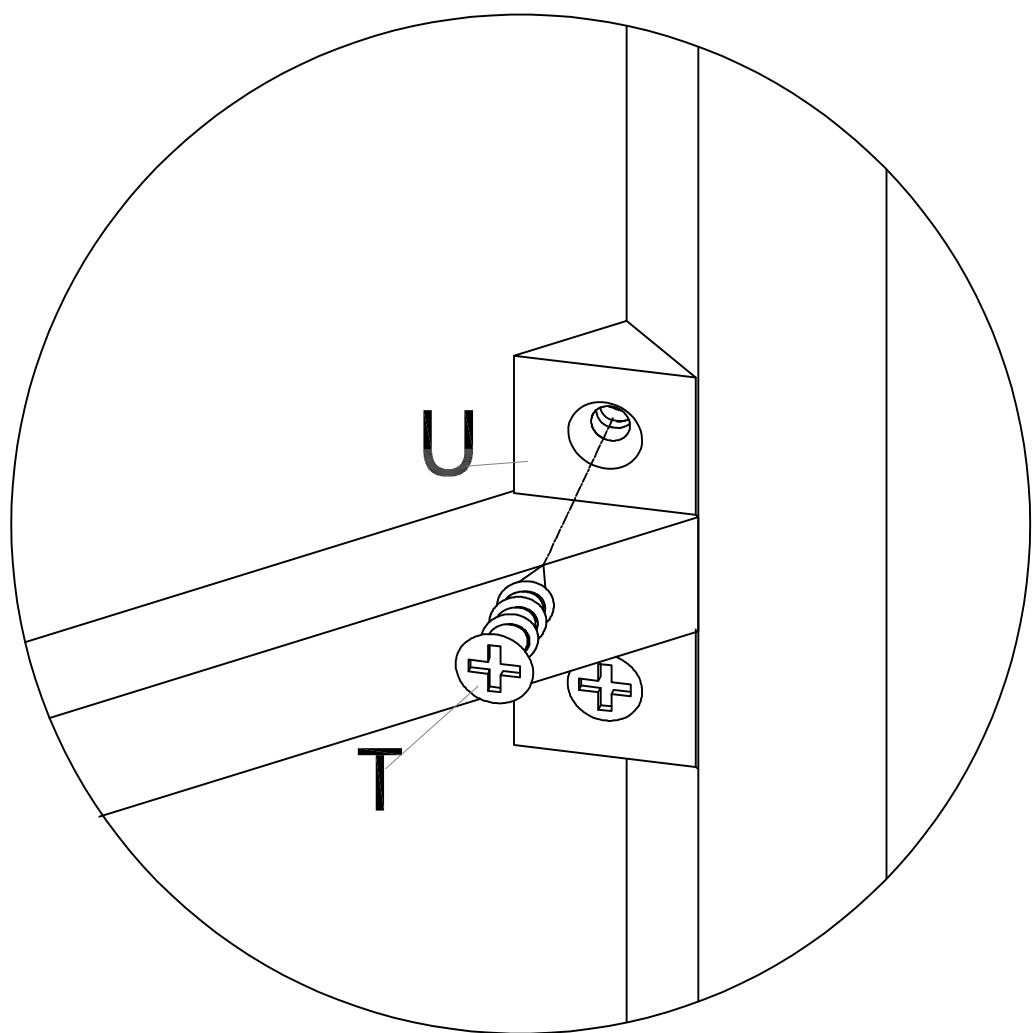

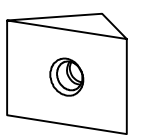T	 M3*14mm	X 20
U		X 20


Step:31

P		X1
S	 M3.5*14mm	X2

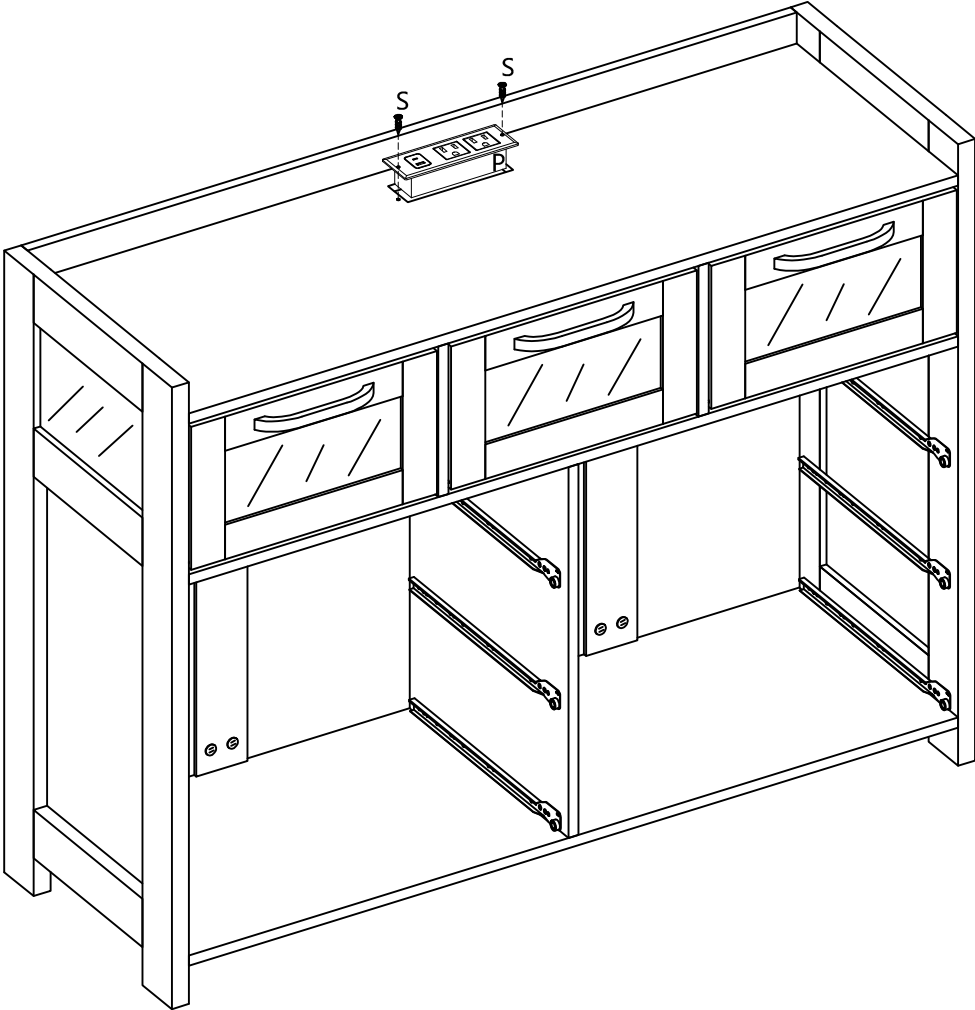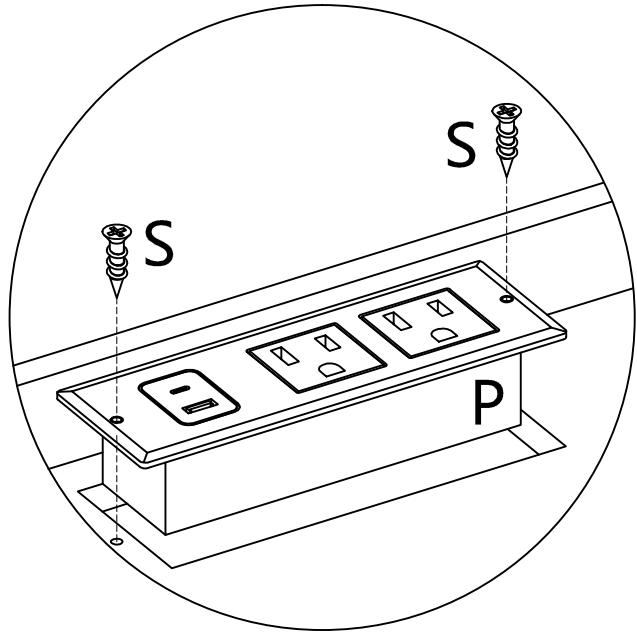




Step:32

G	 M4*35mm	X24
---	--	-----

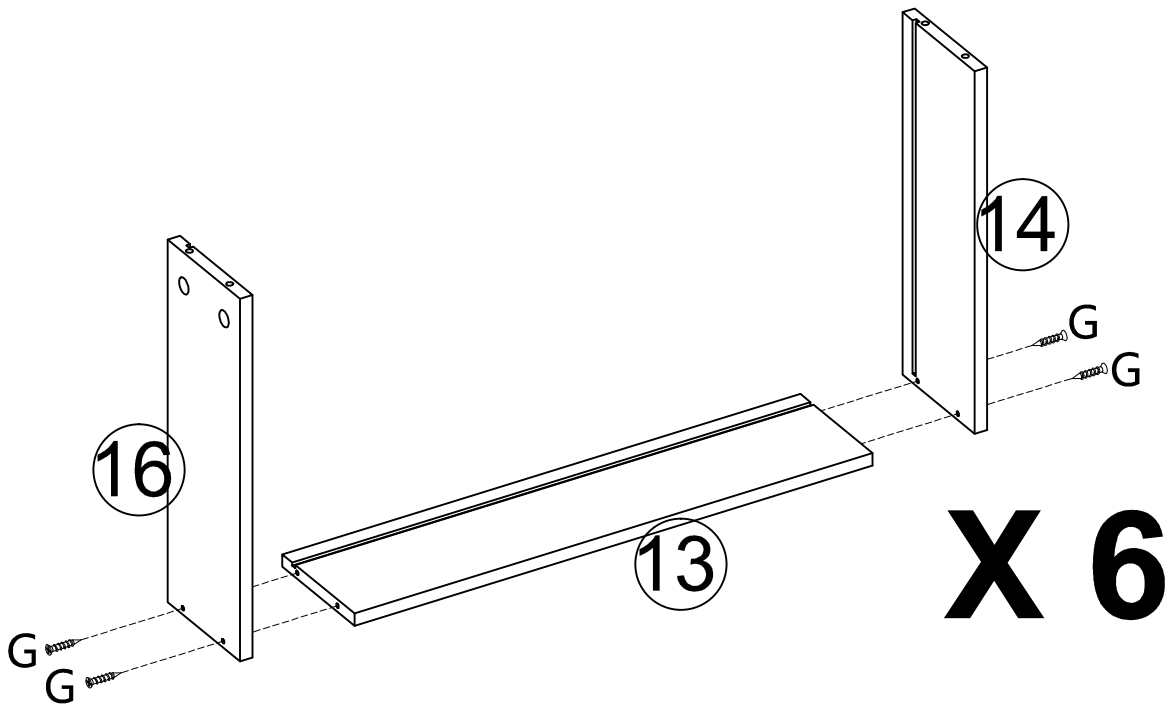

Step:33


A		X24
---	---	-----

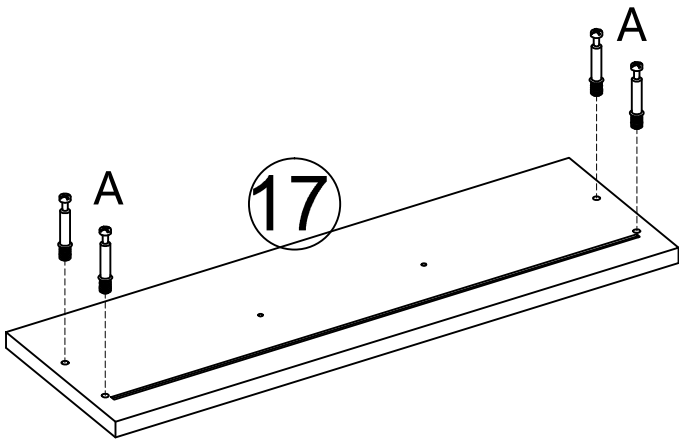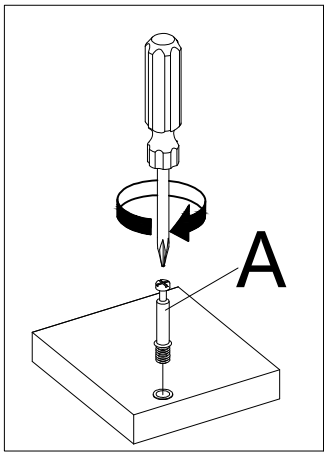

X 6



Step:34


C	 ø15*10mm	X24
V		X24

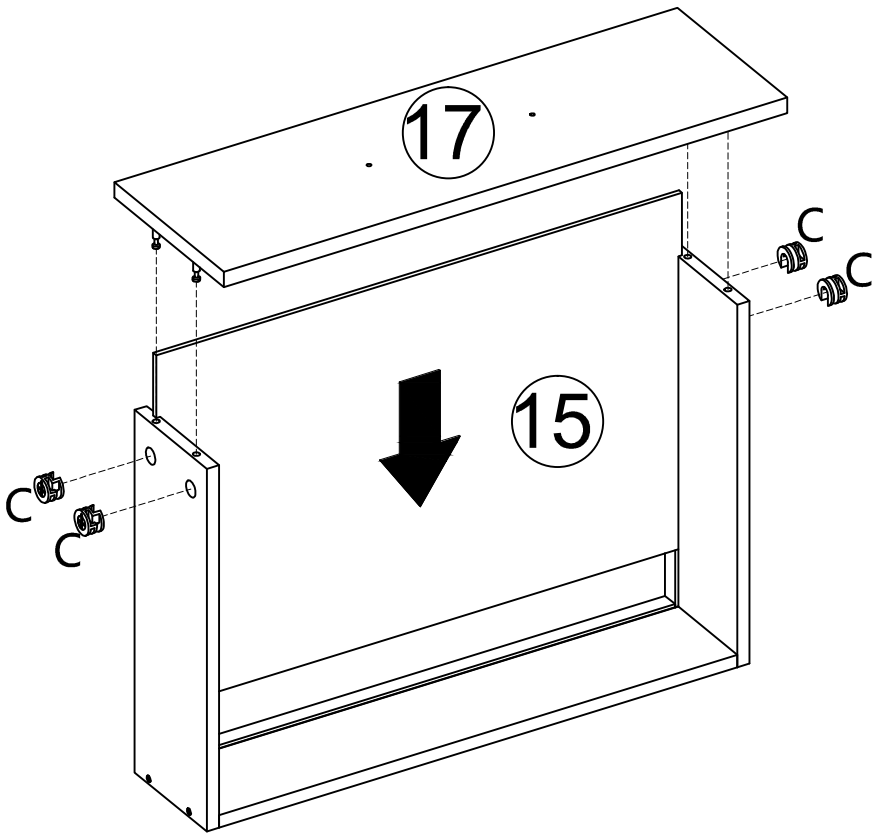

X 6


Step:35


J		X6
H		X12

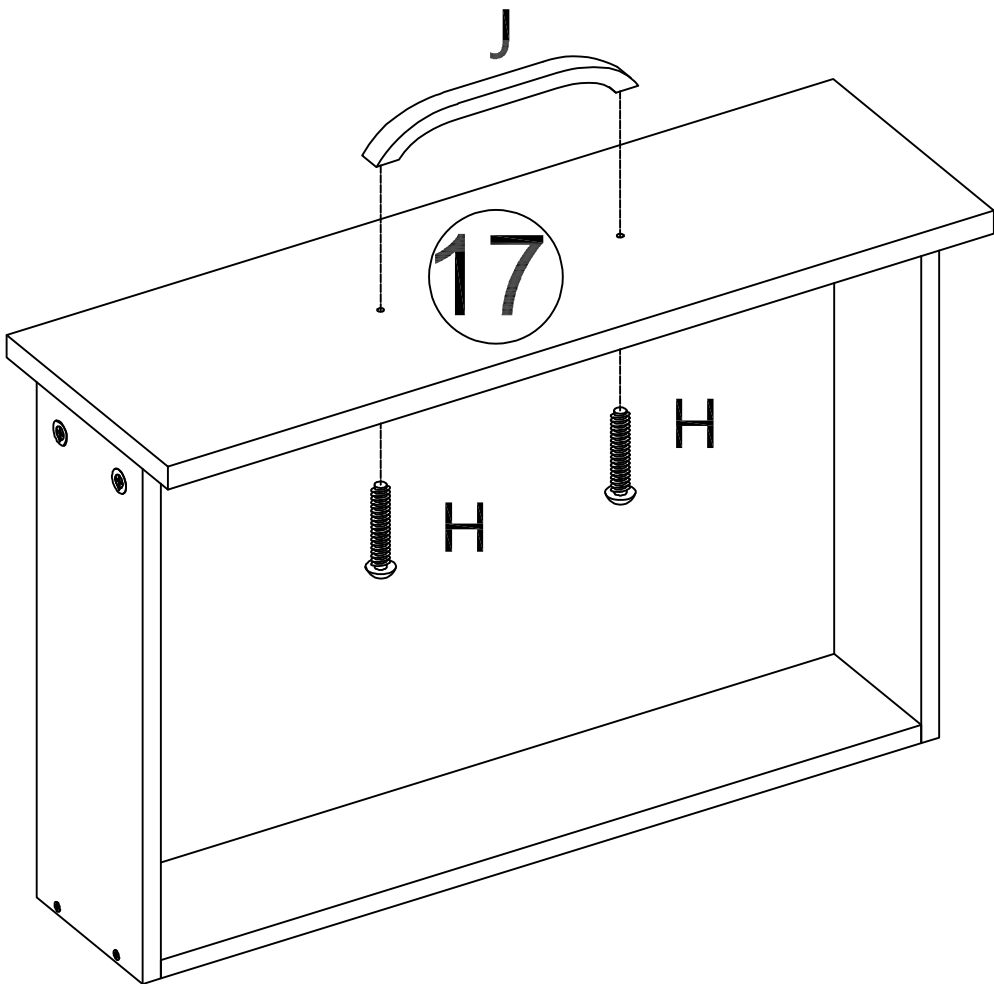

X 6


Step:36

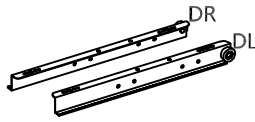D		X6
F	 M3*12mm	X36

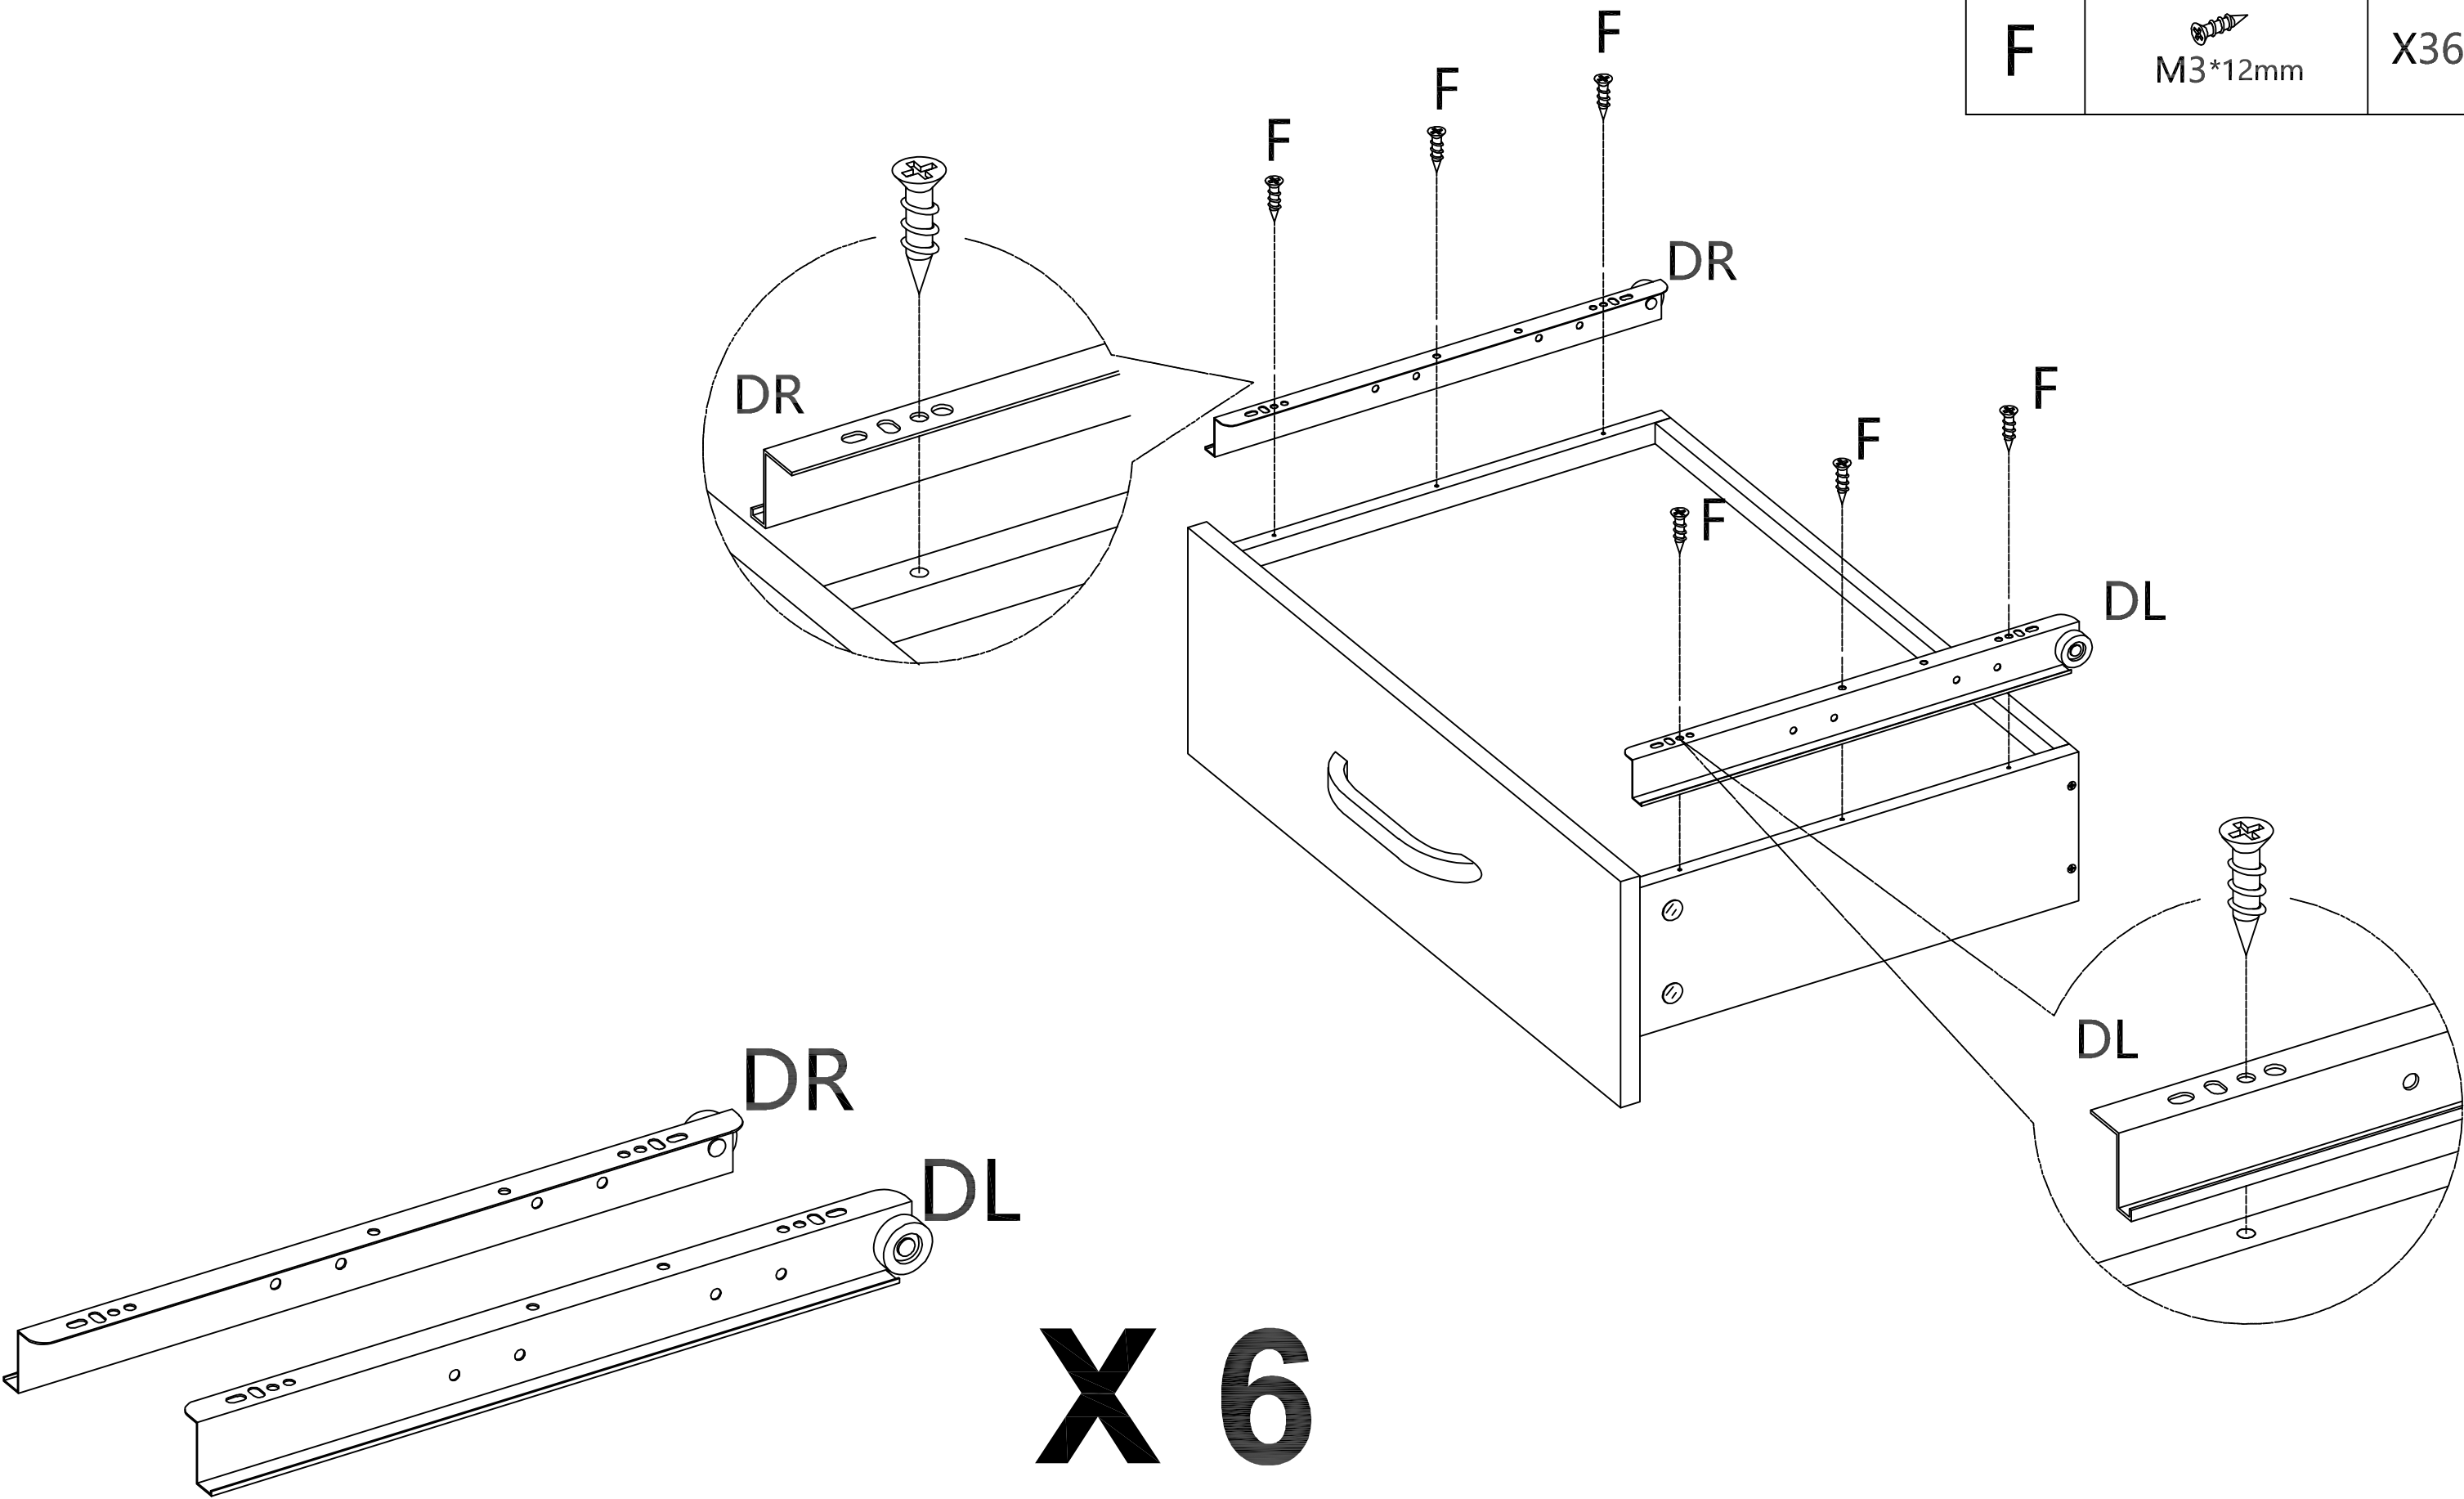


X 6

Step:37

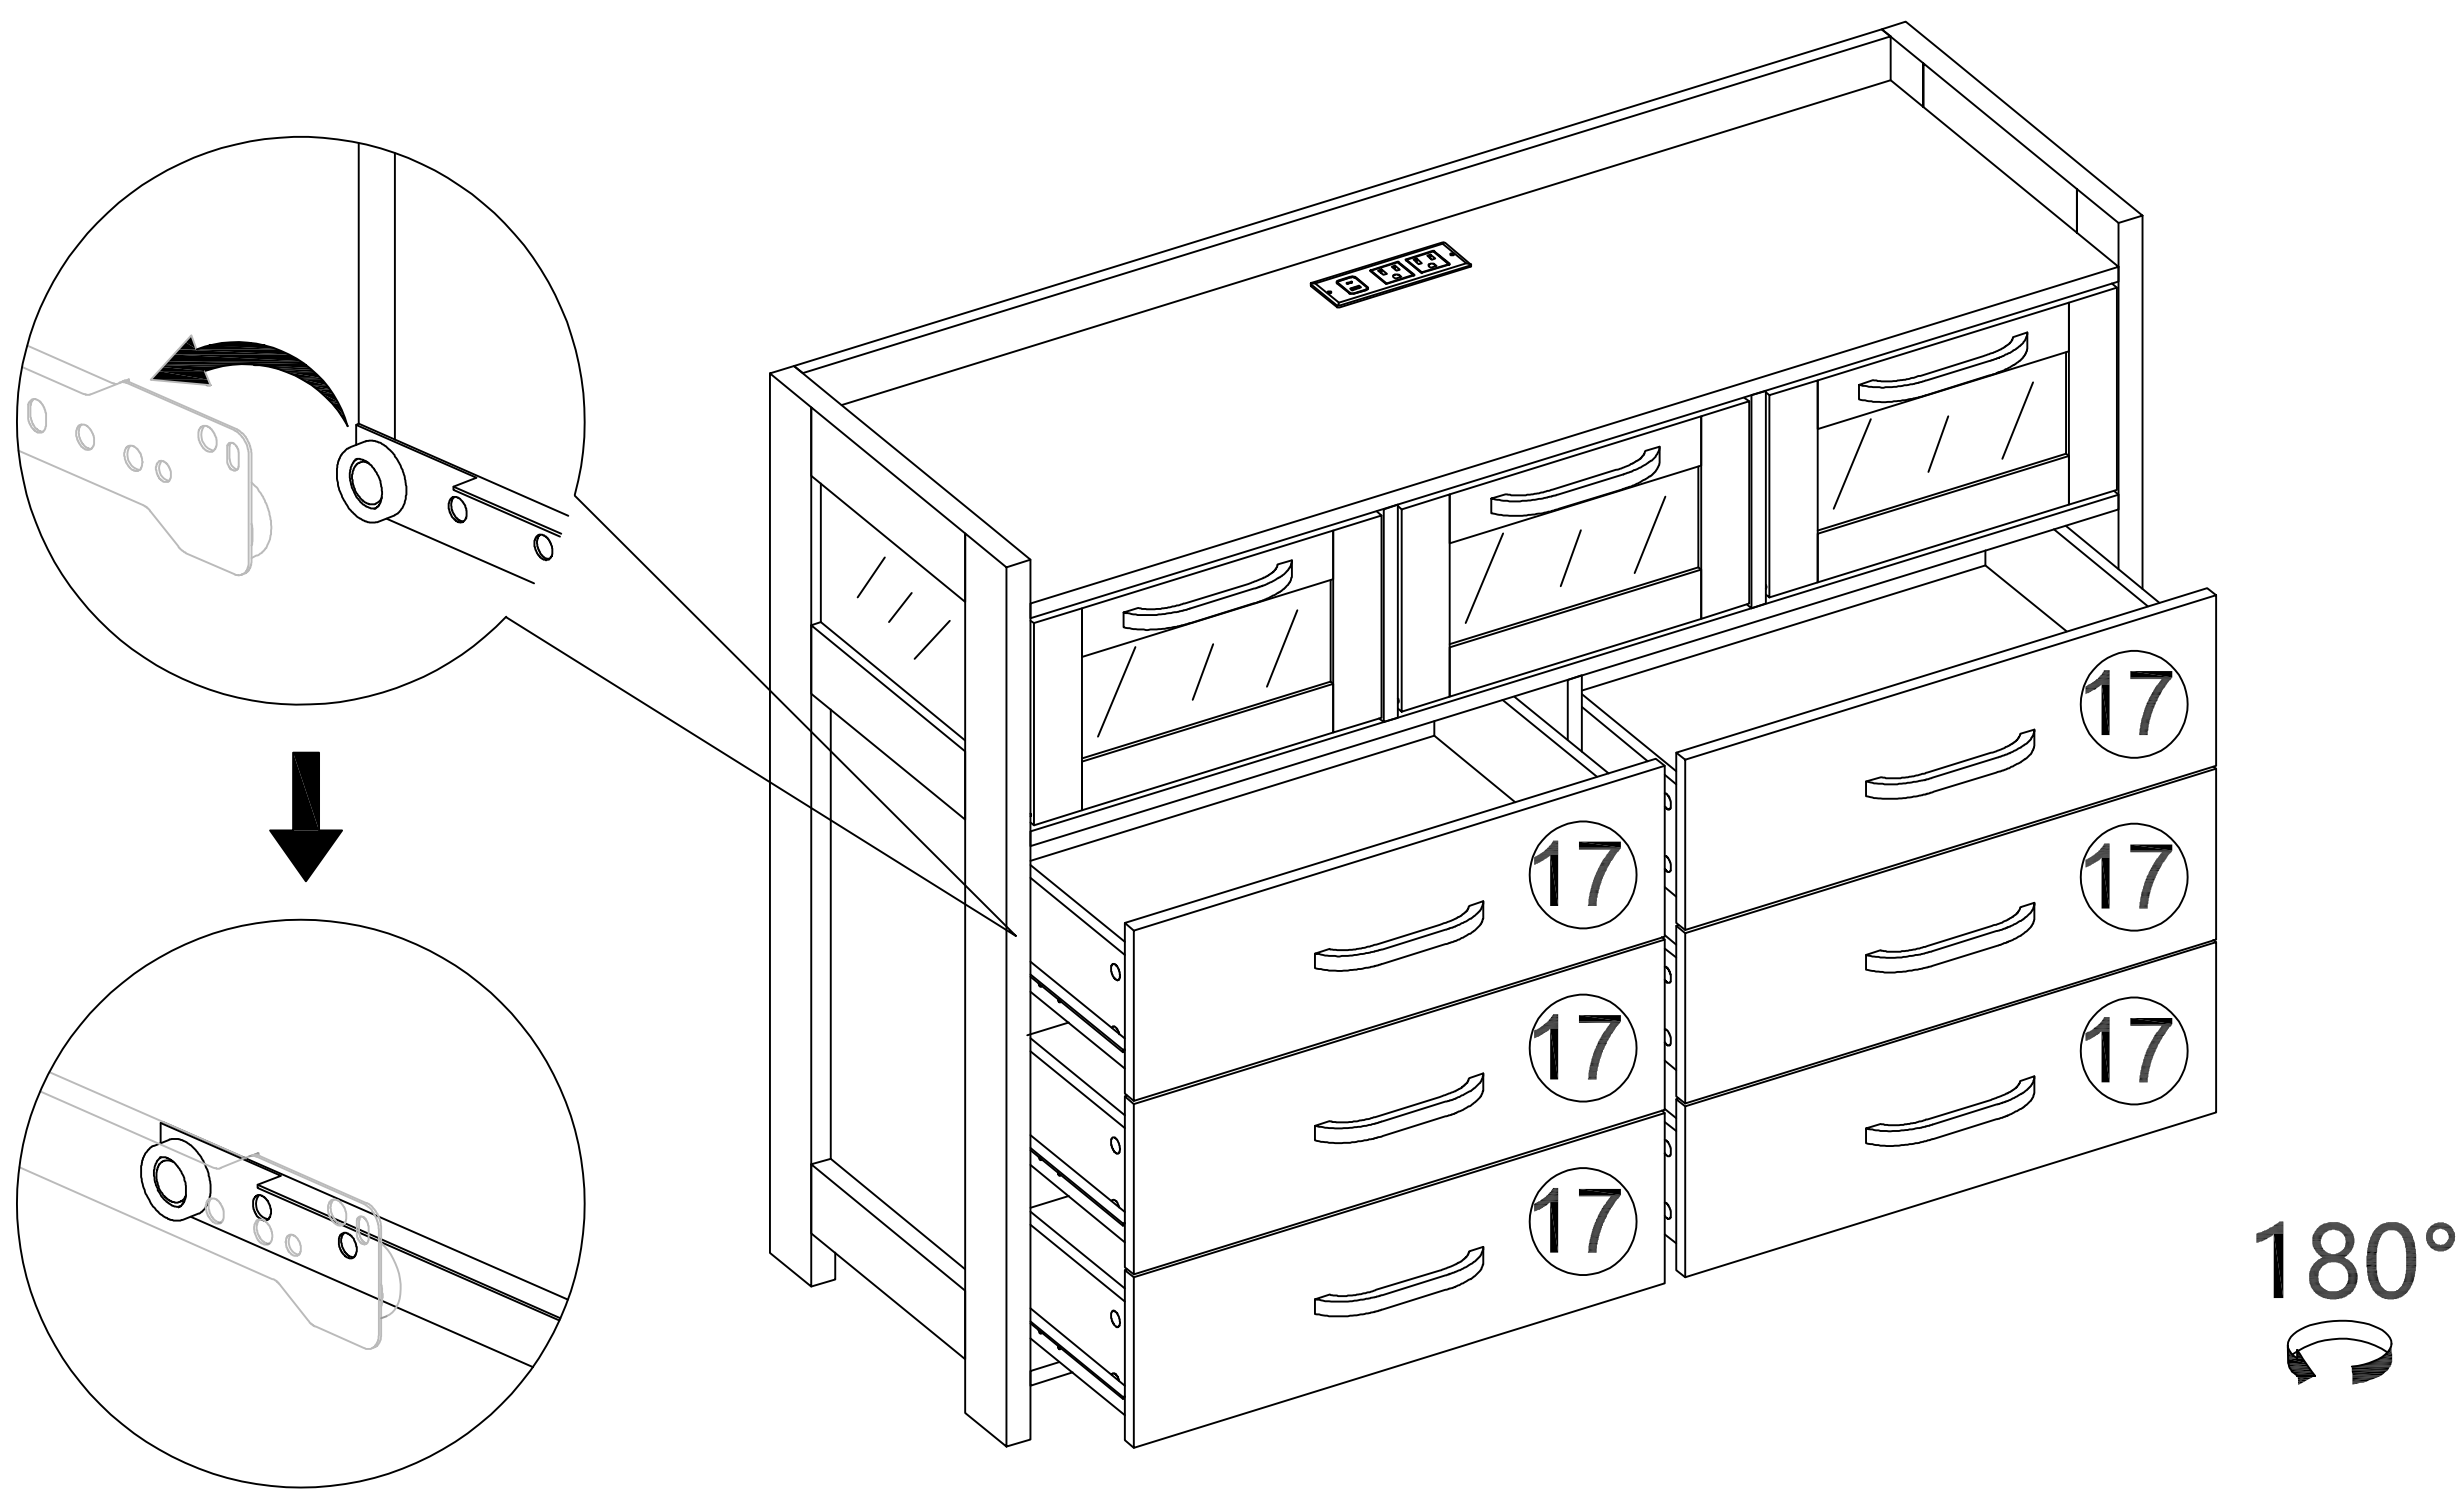

Step:38

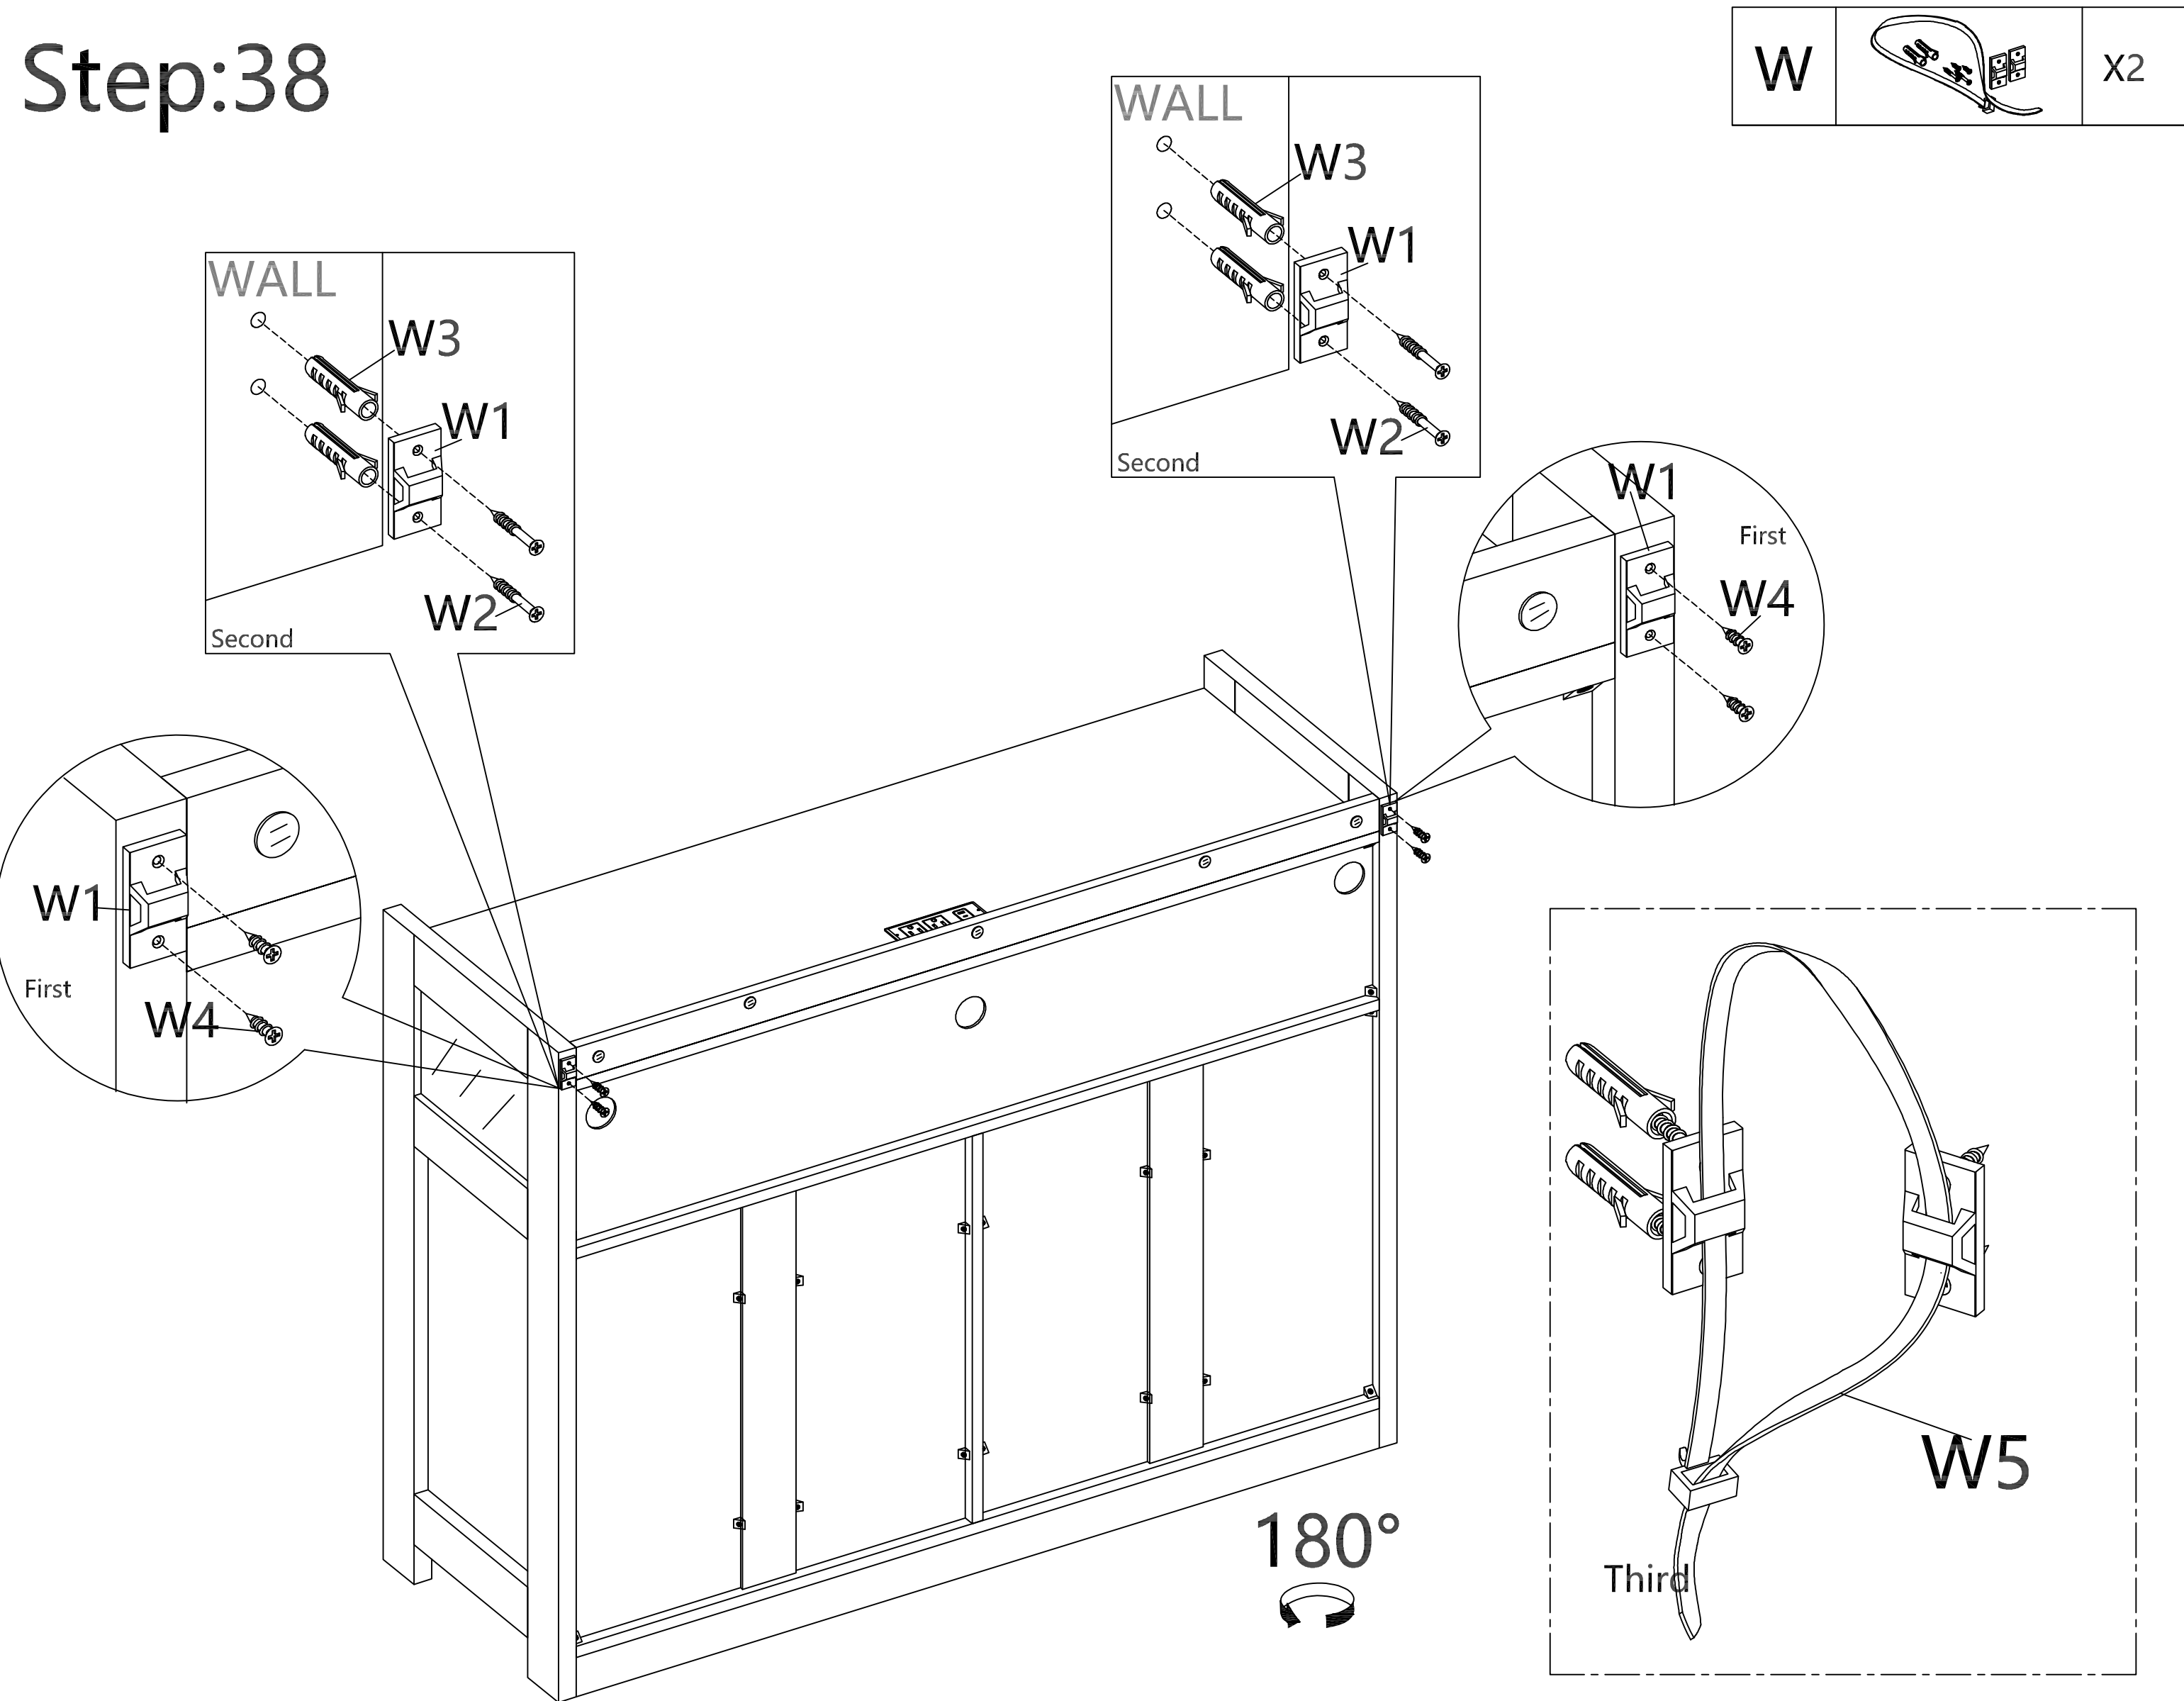

Step:39

