


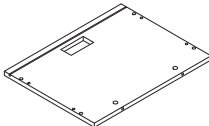



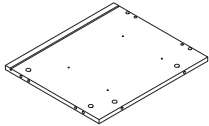

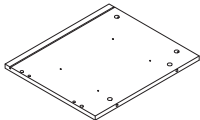
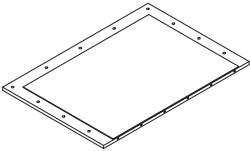
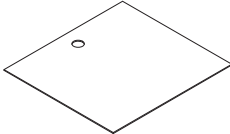
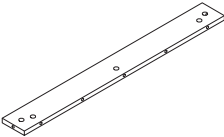

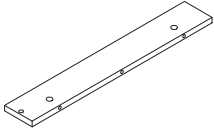























- 
1. Two or more people are needed to complete the installation.

2. Please protect the wires and remote control accessories from damage during installation.

3. Professional installation is highly recommended.




4. Assemble on a flat, clean and soft surface.

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		X1	10		X1
2		X1	11		X1
3		X1	12		X1
4		X1	13		X1
5		X1	14		X1
6		X1	15		X1
7		X1	16		X1
8		X1	17		X1
9		X1	18		X2

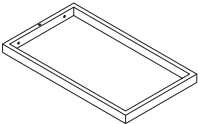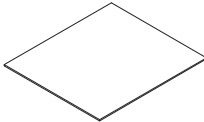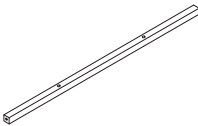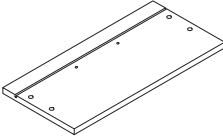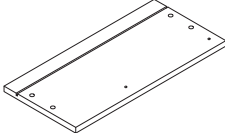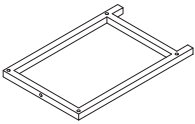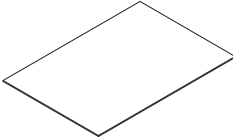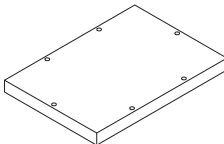
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
19		X2	28		X1
20		X2	29		X1
21		X2	30		X1
22		X1	31		X1
23		X1	32		X1
24		X2	33		X2
25		X2	34		X2
26		X2	35		X2
27		X2	36		X1

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
(A)		X49
(B)		X49
(C)	 φ8X40mm	X20
(D)	 ST3.5X14mm	X34
(E)	 ST3.5X35mm	X16
(F)	 M7X50mm	X10
(G)	 M6X25mm	X2
(H)	 M6X30mm	X12
(I)	 M6X40mm	X8
(J)	 M6X60mm	X2

Item no.	Reference Image	Qty.
(K)		X3
(L)		X1
(M)	 M4X18mm	X8
(N)		X1
(O)	 O1 O2 O3 O4 O5	X2
(P)	 P1 P2	X4
(Q)		X4
(R)		X6
(S)		X1


ASSEMBLY INSTRUCTIONS

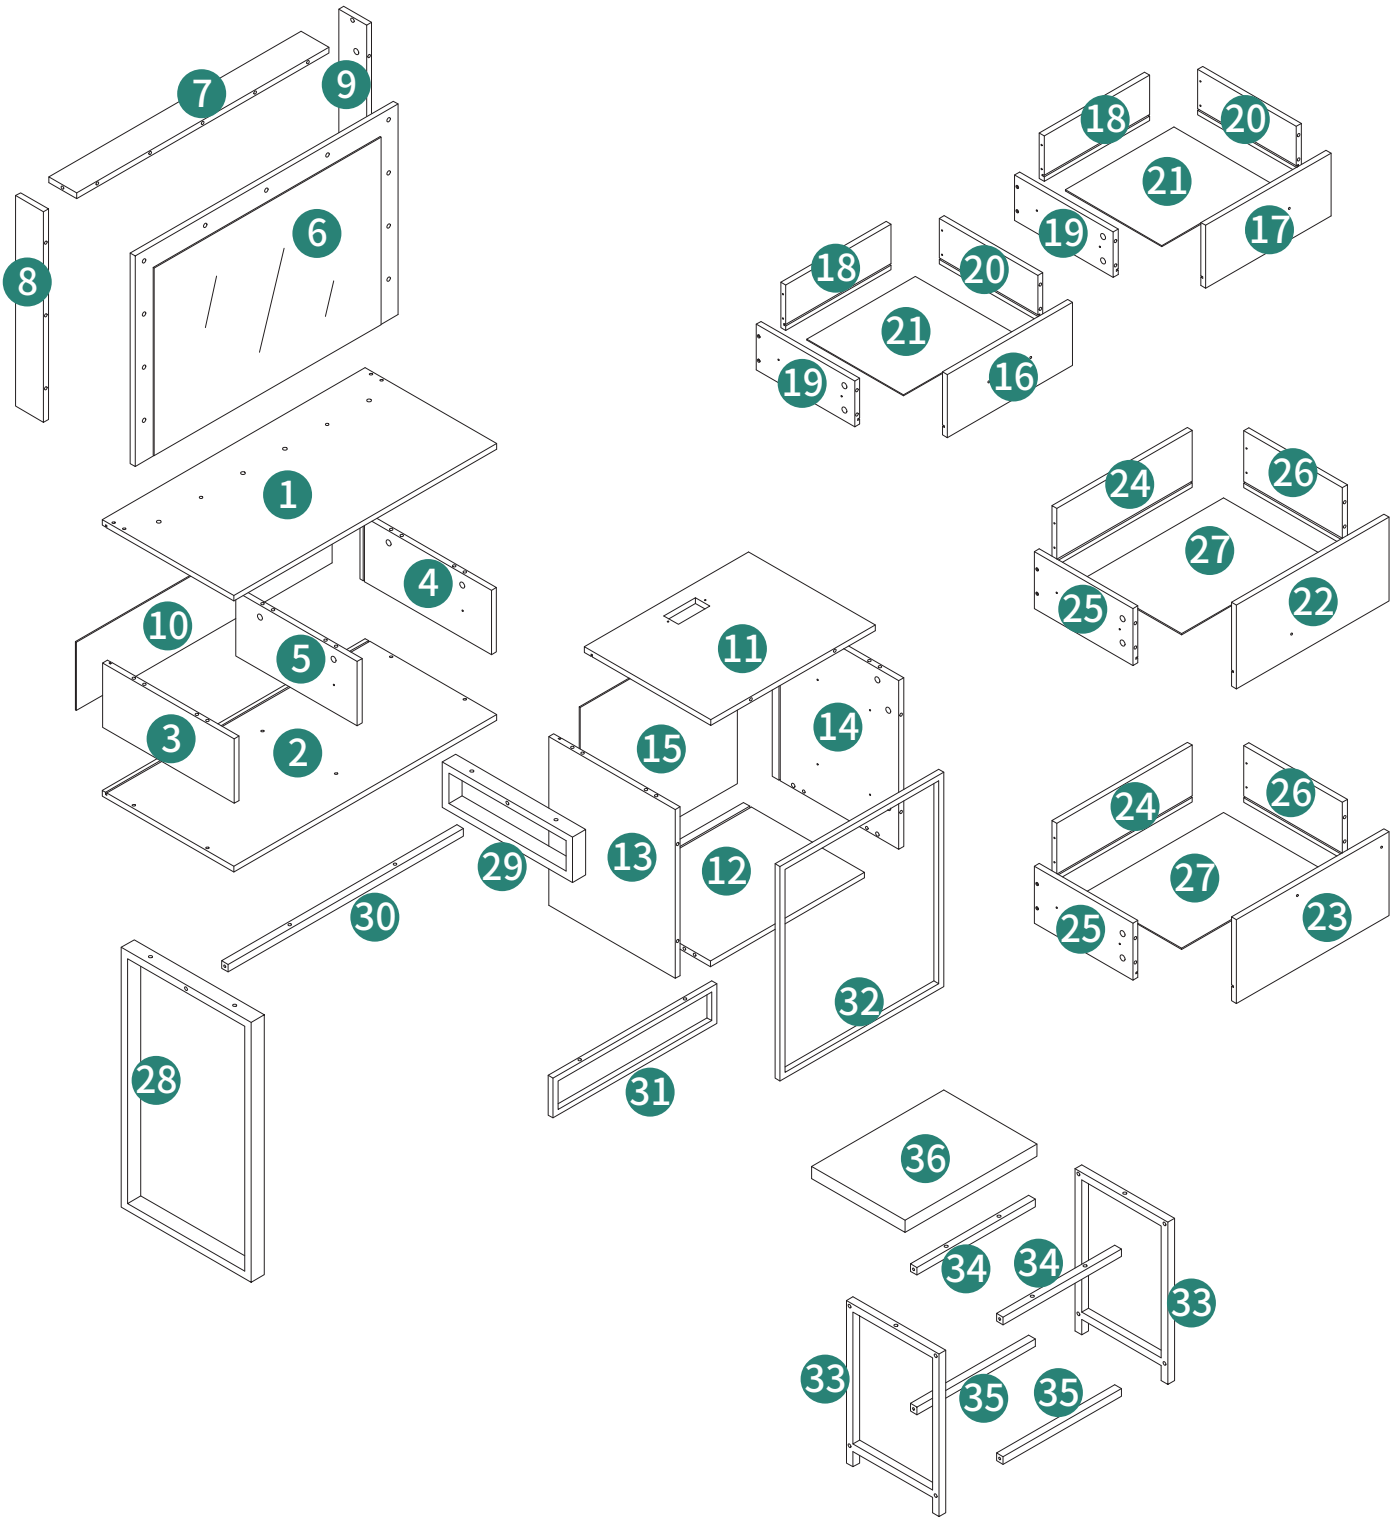


ASSEMBLY INSTRUCTIONS

USING CAM LOCK AND QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

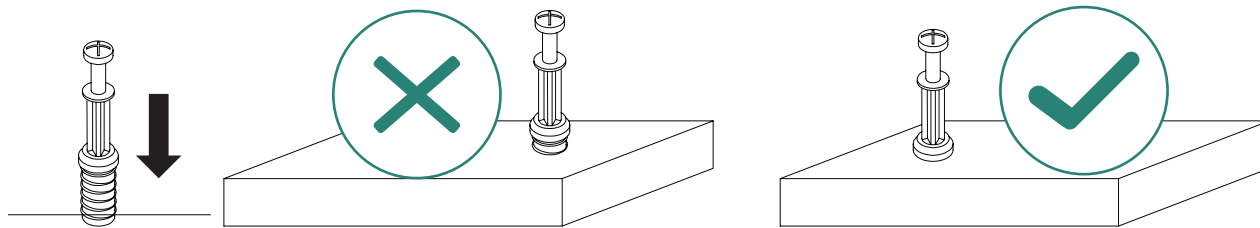


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

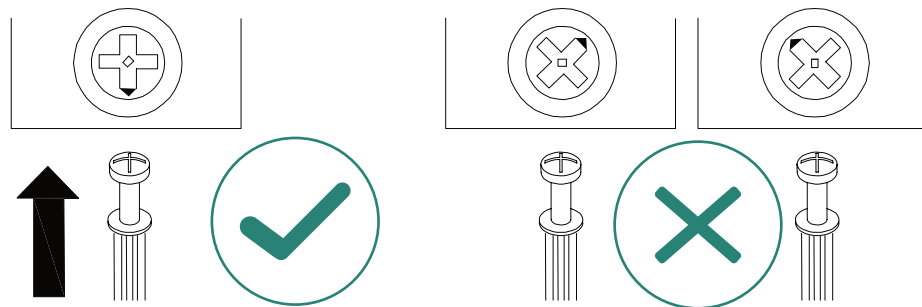

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.


Turn cam lock clockwise to tighten.

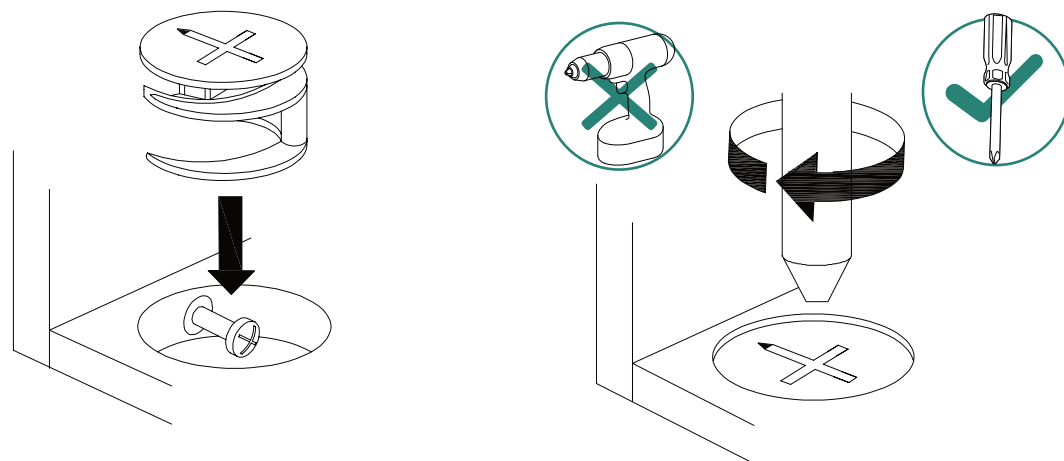


ASSEMBLY INSTRUCTIONS

PRE-FIX DRAWER RUNNER INSTRUCTIONS


Pull inner and outer drawer runners apart before fixing them to panels.




Slide drawer runners apart until the drawer lock can be seen, as shown.

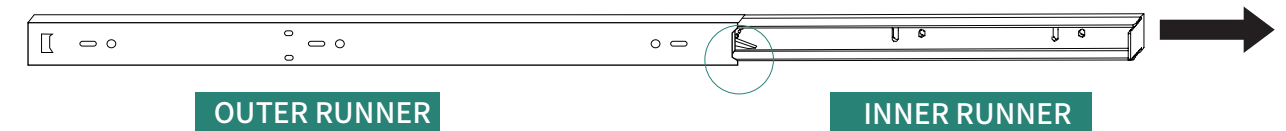


Press and hold the drawer runner lock and then continue to slide drawer runners apart, as shown.

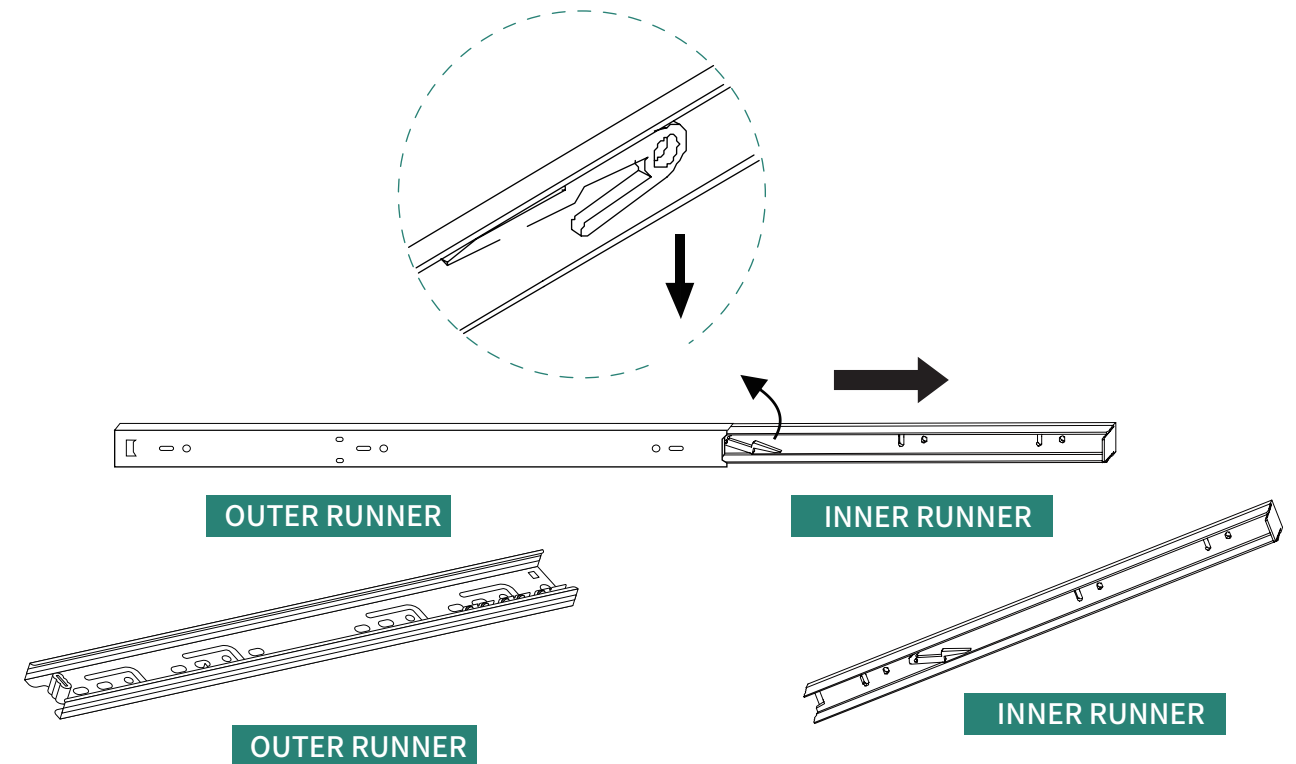

Your inner and outer drawer runners are ready to be fixed to panels.

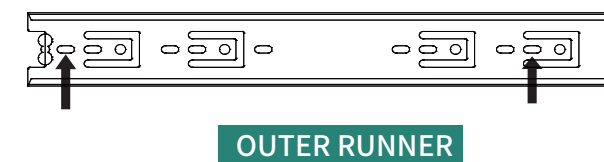



! When installing the outer guide rail, please use the guide rail notch to assemble towards the inner direction of the drawer. Please fix the screws according to the marked position. If the installed position is changed, adjust it side-to-side at the marked position.

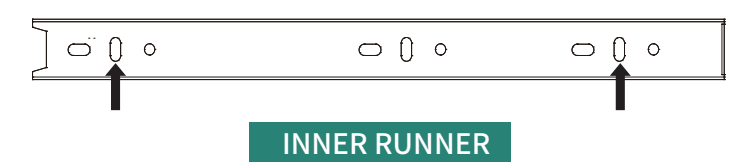

! When installing the inner guide rail, please use the guide rail notch to assemble towards the inner direction of the drawer. Please fix the screws according to the marked position. If the installed position is changed, adjust it up and down at the marked position.



ASSEMBLY INSTRUCTIONS

1

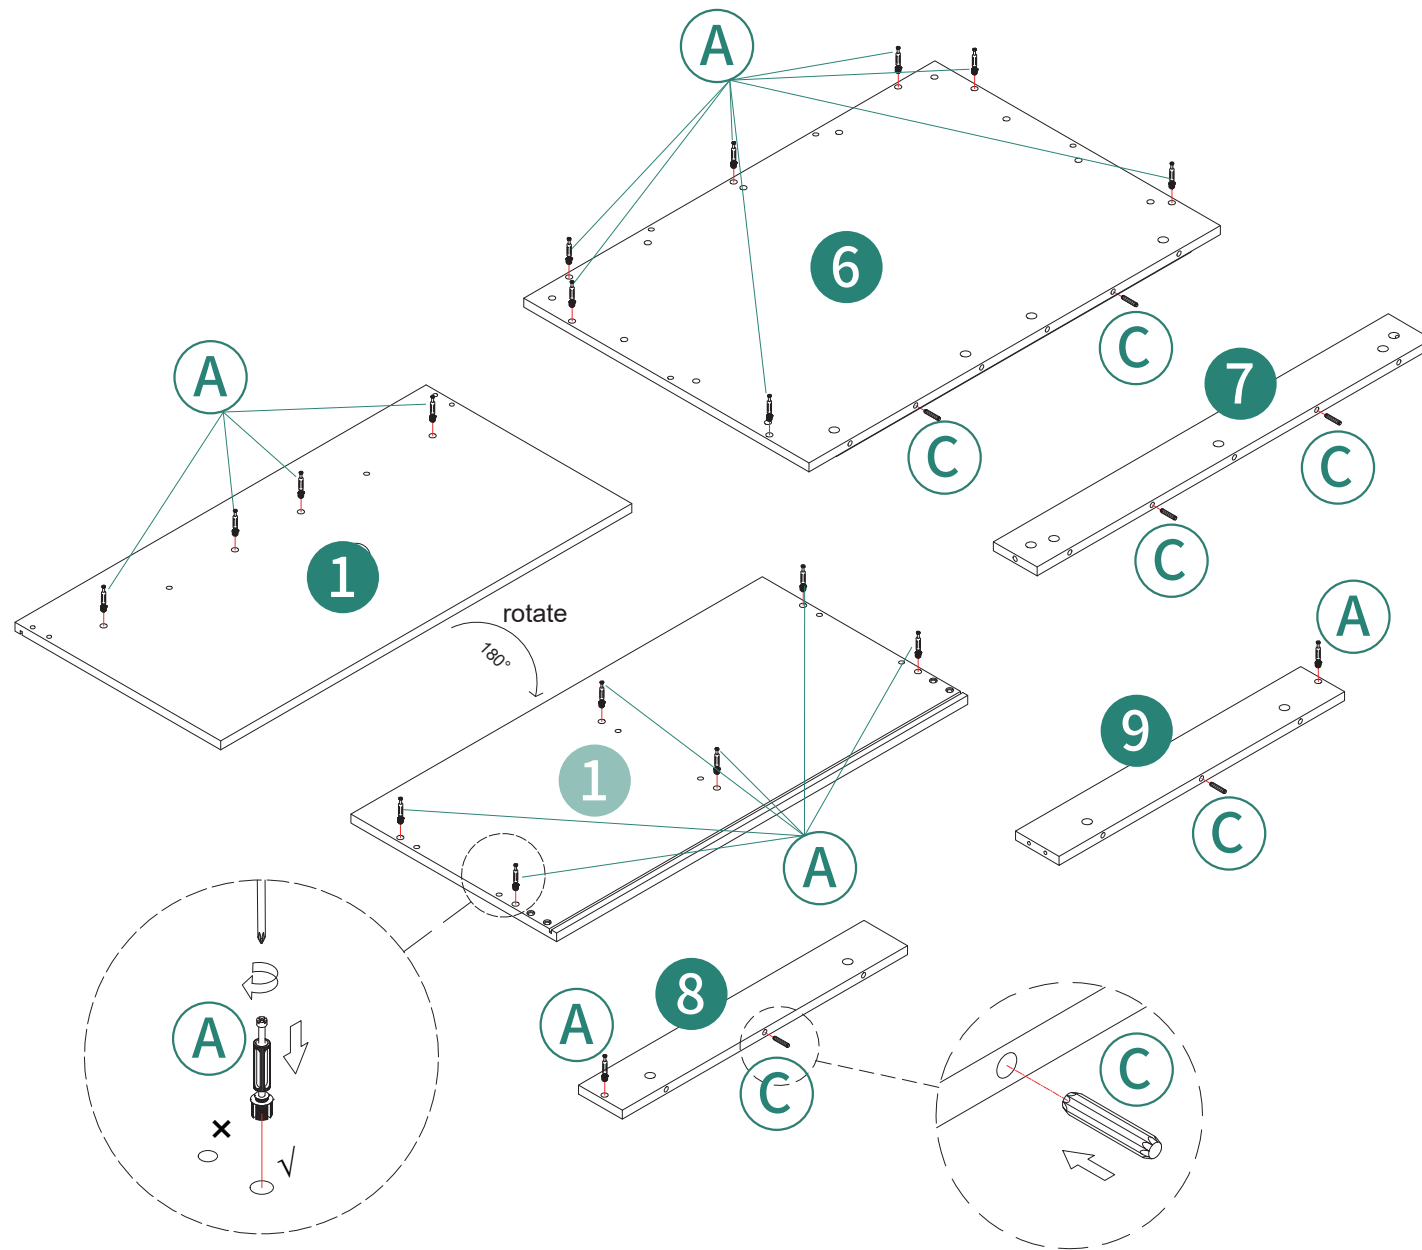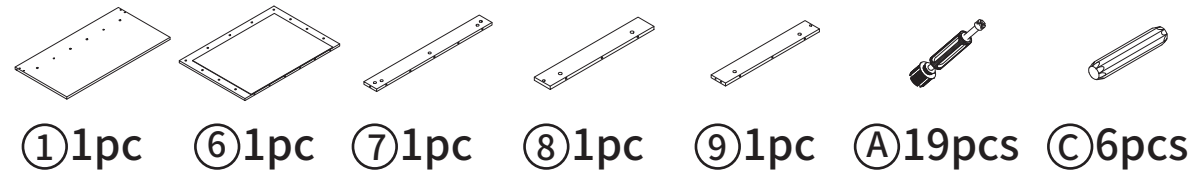



ASSEMBLY INSTRUCTIONS

2

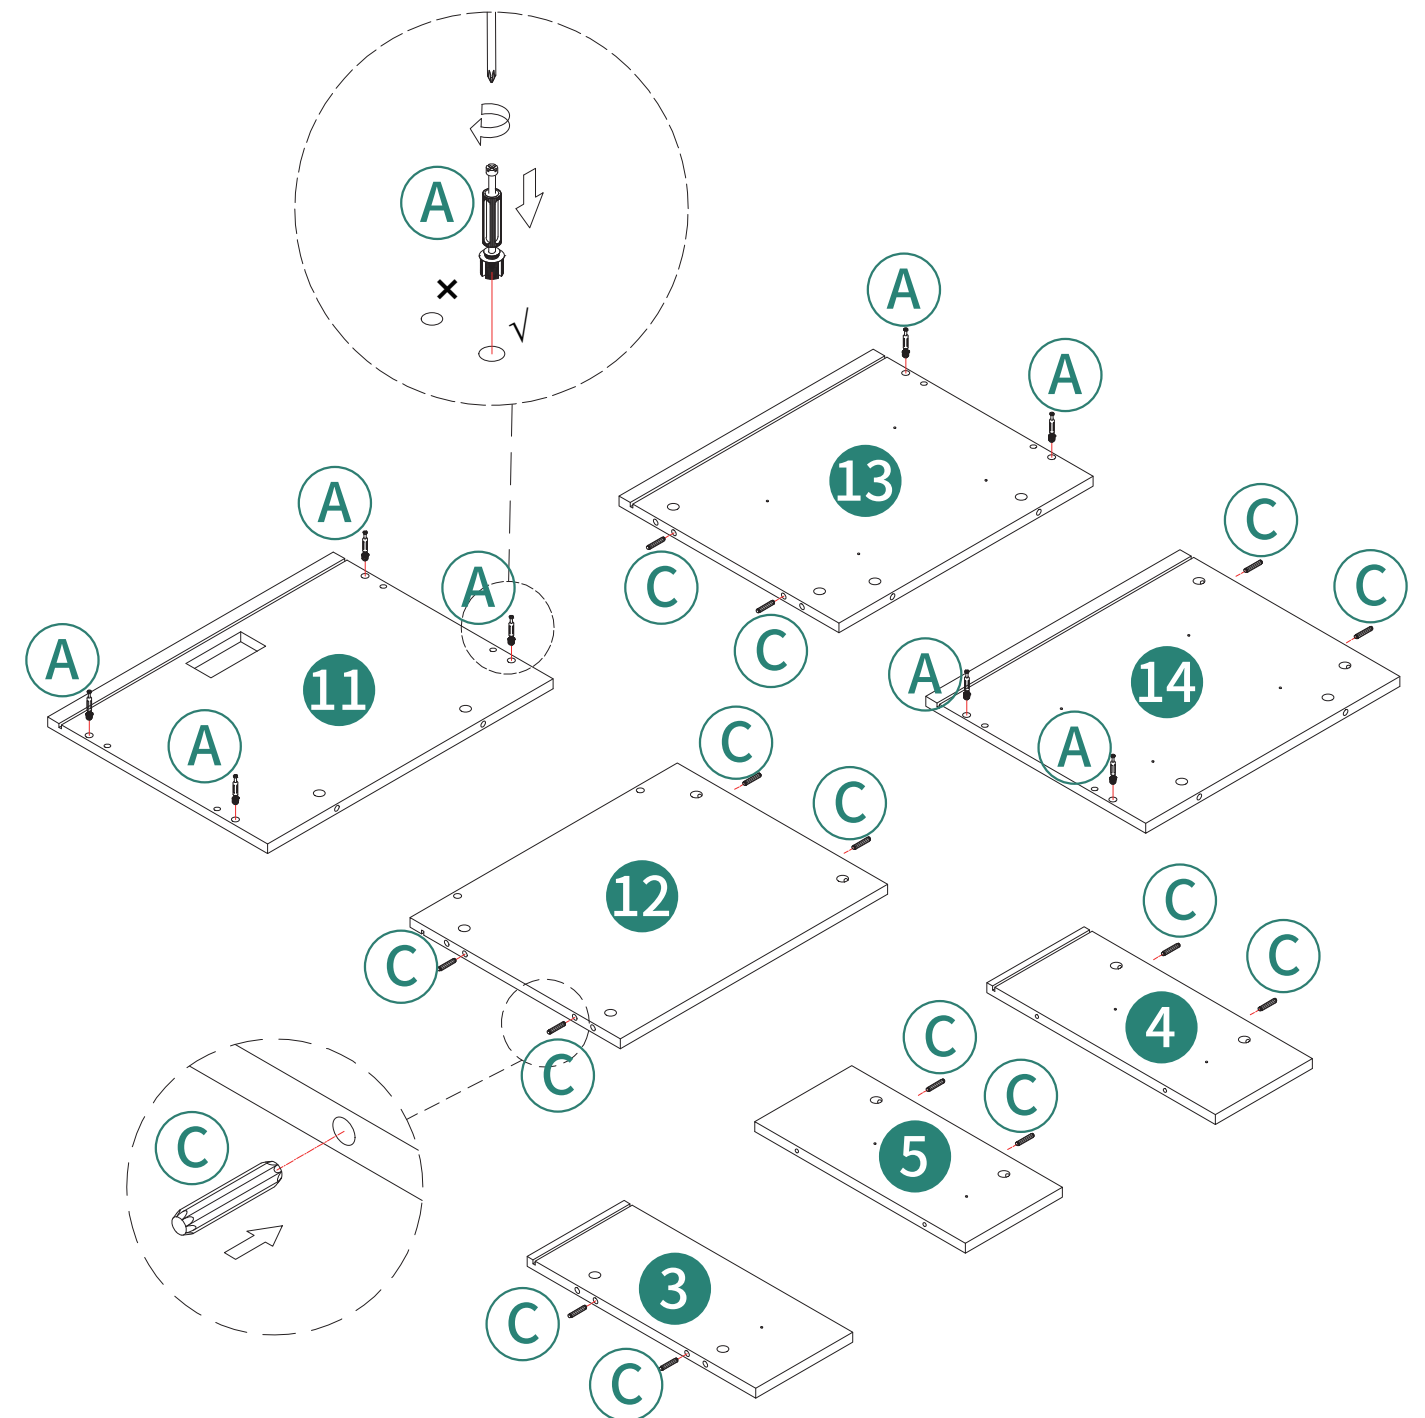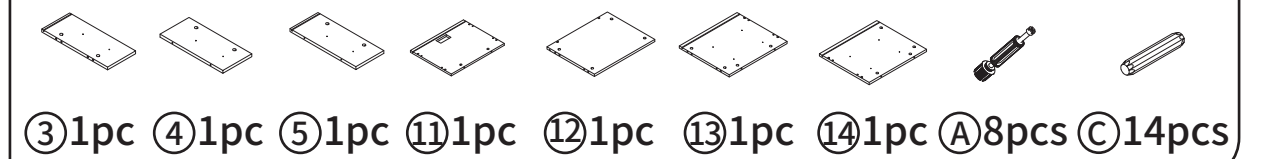



ASSEMBLY INSTRUCTIONS

3

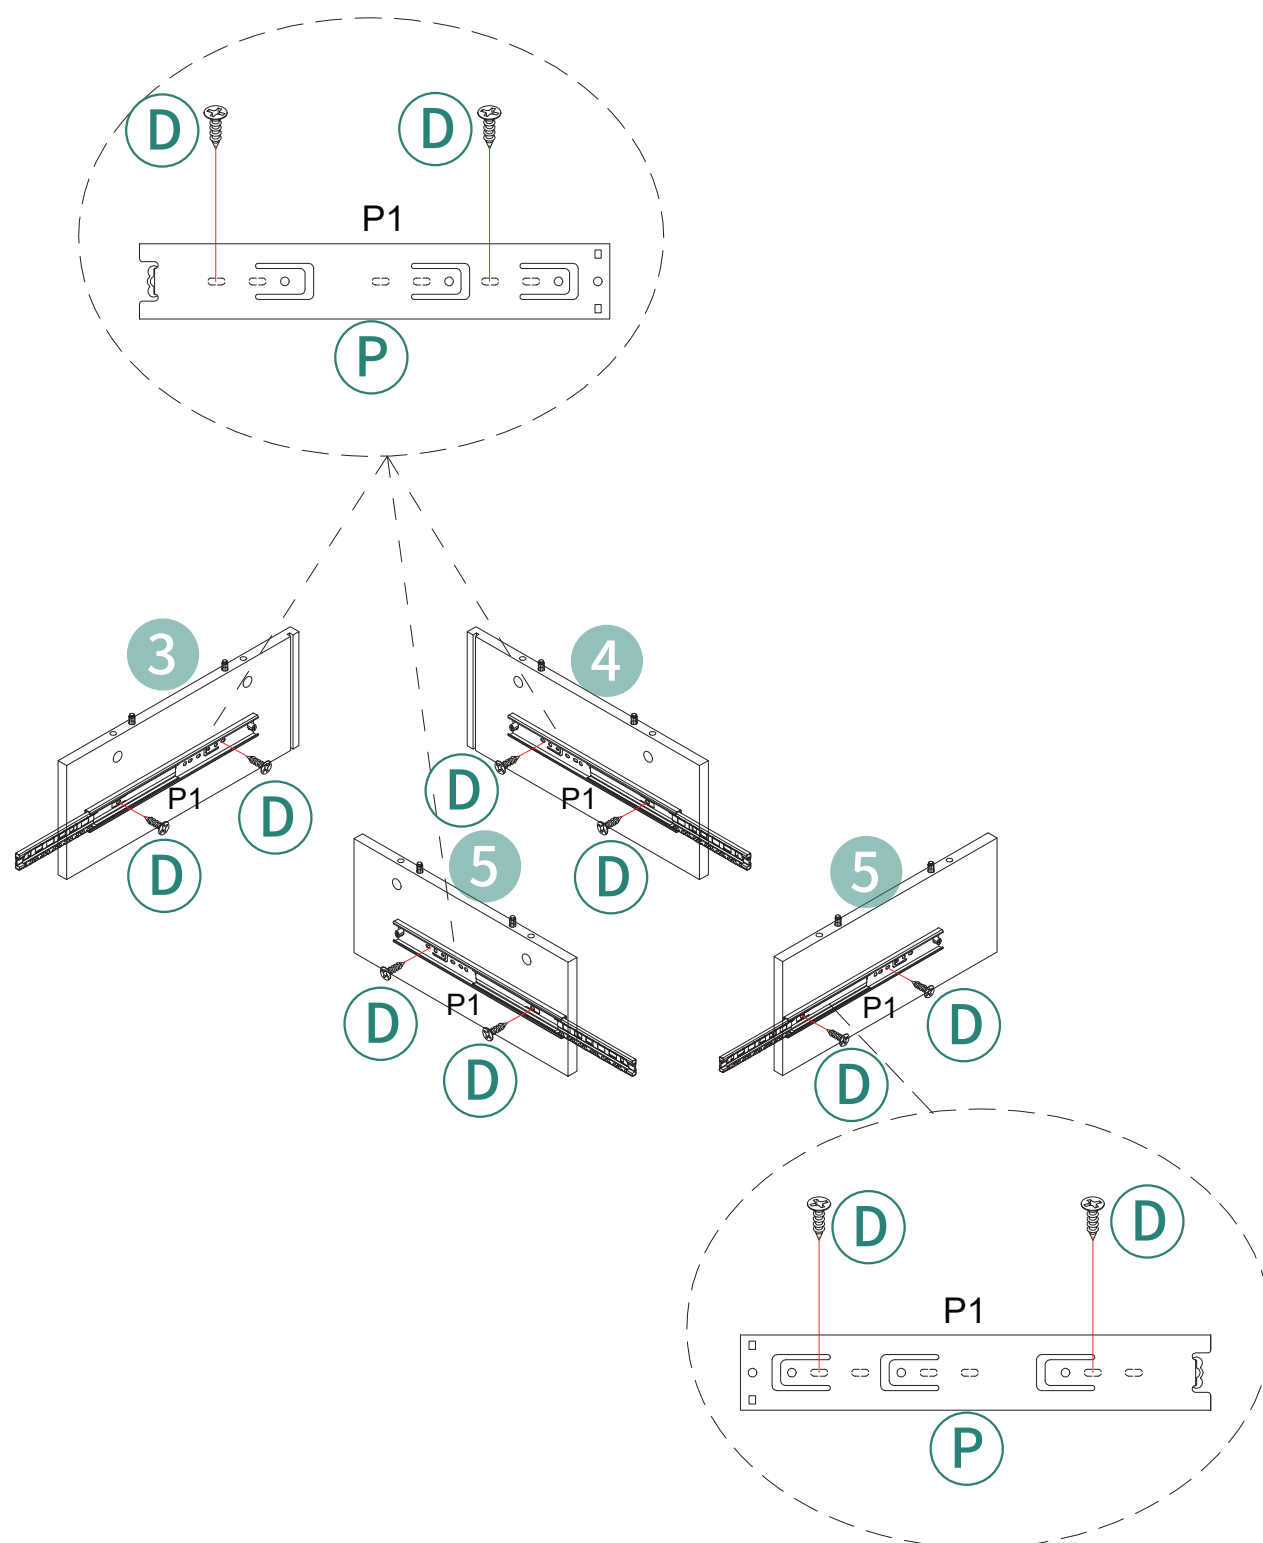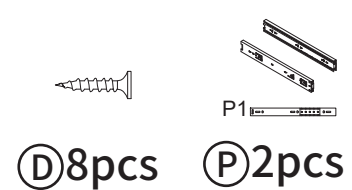

ASSEMBLY INSTRUCTIONS


4

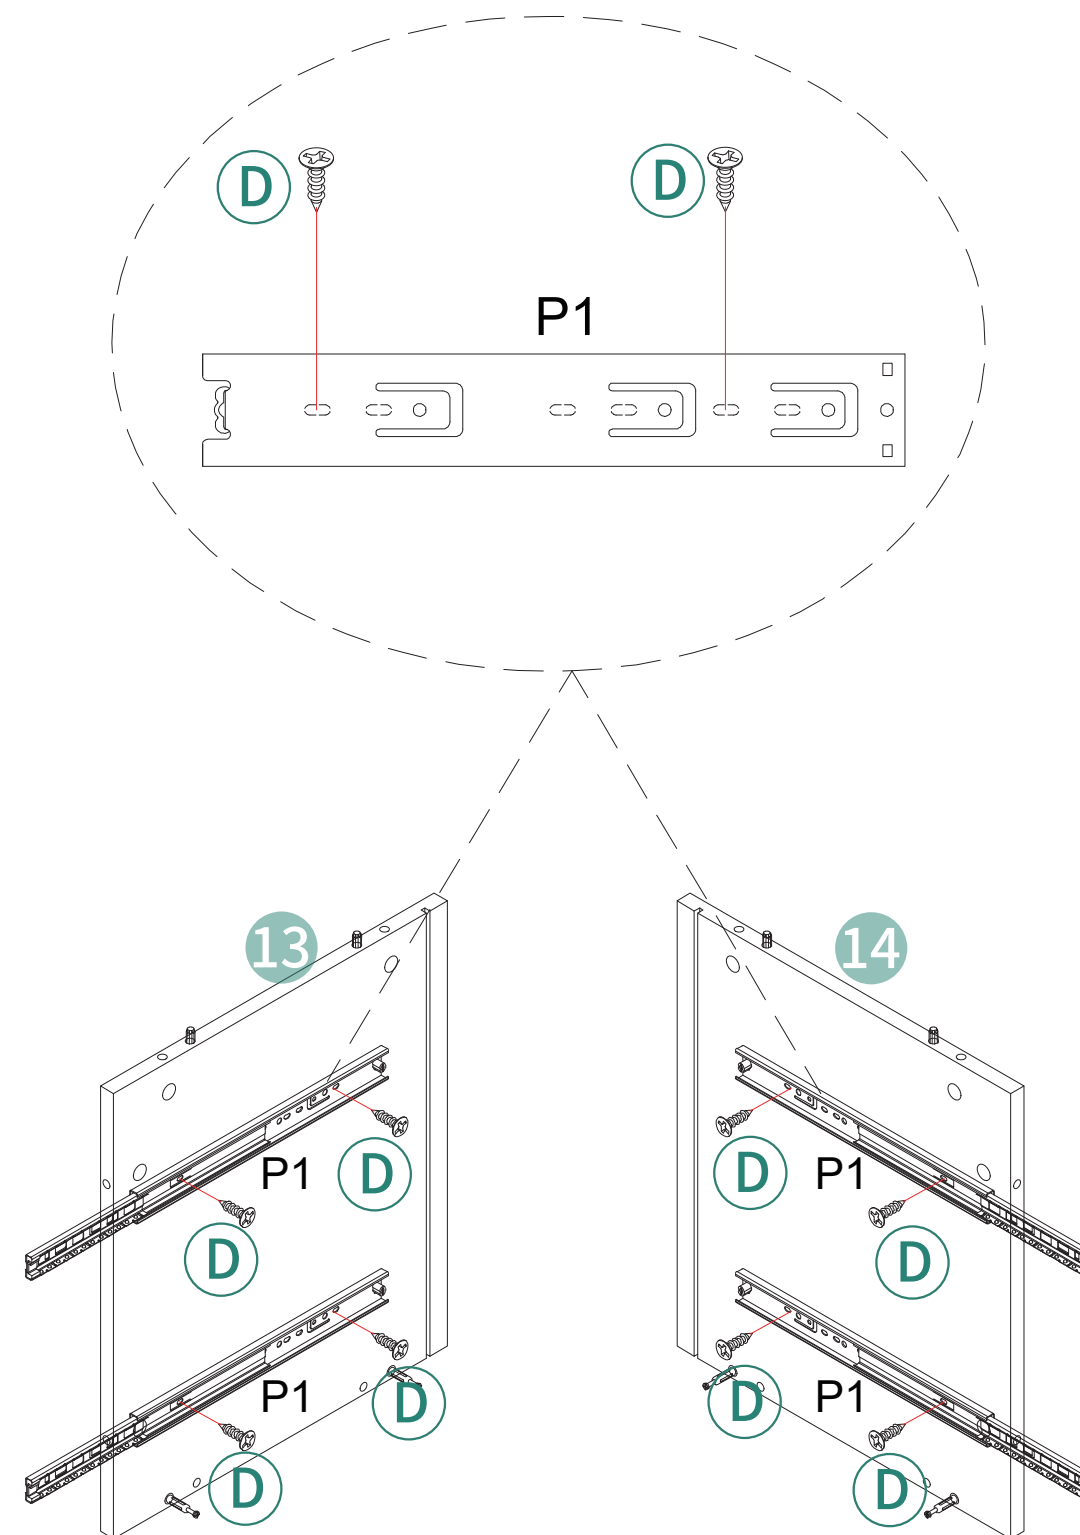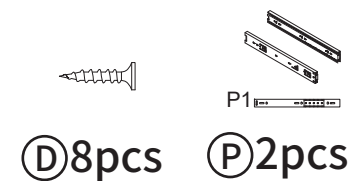

ASSEMBLY INSTRUCTIONS

5


 **B** 9pcs

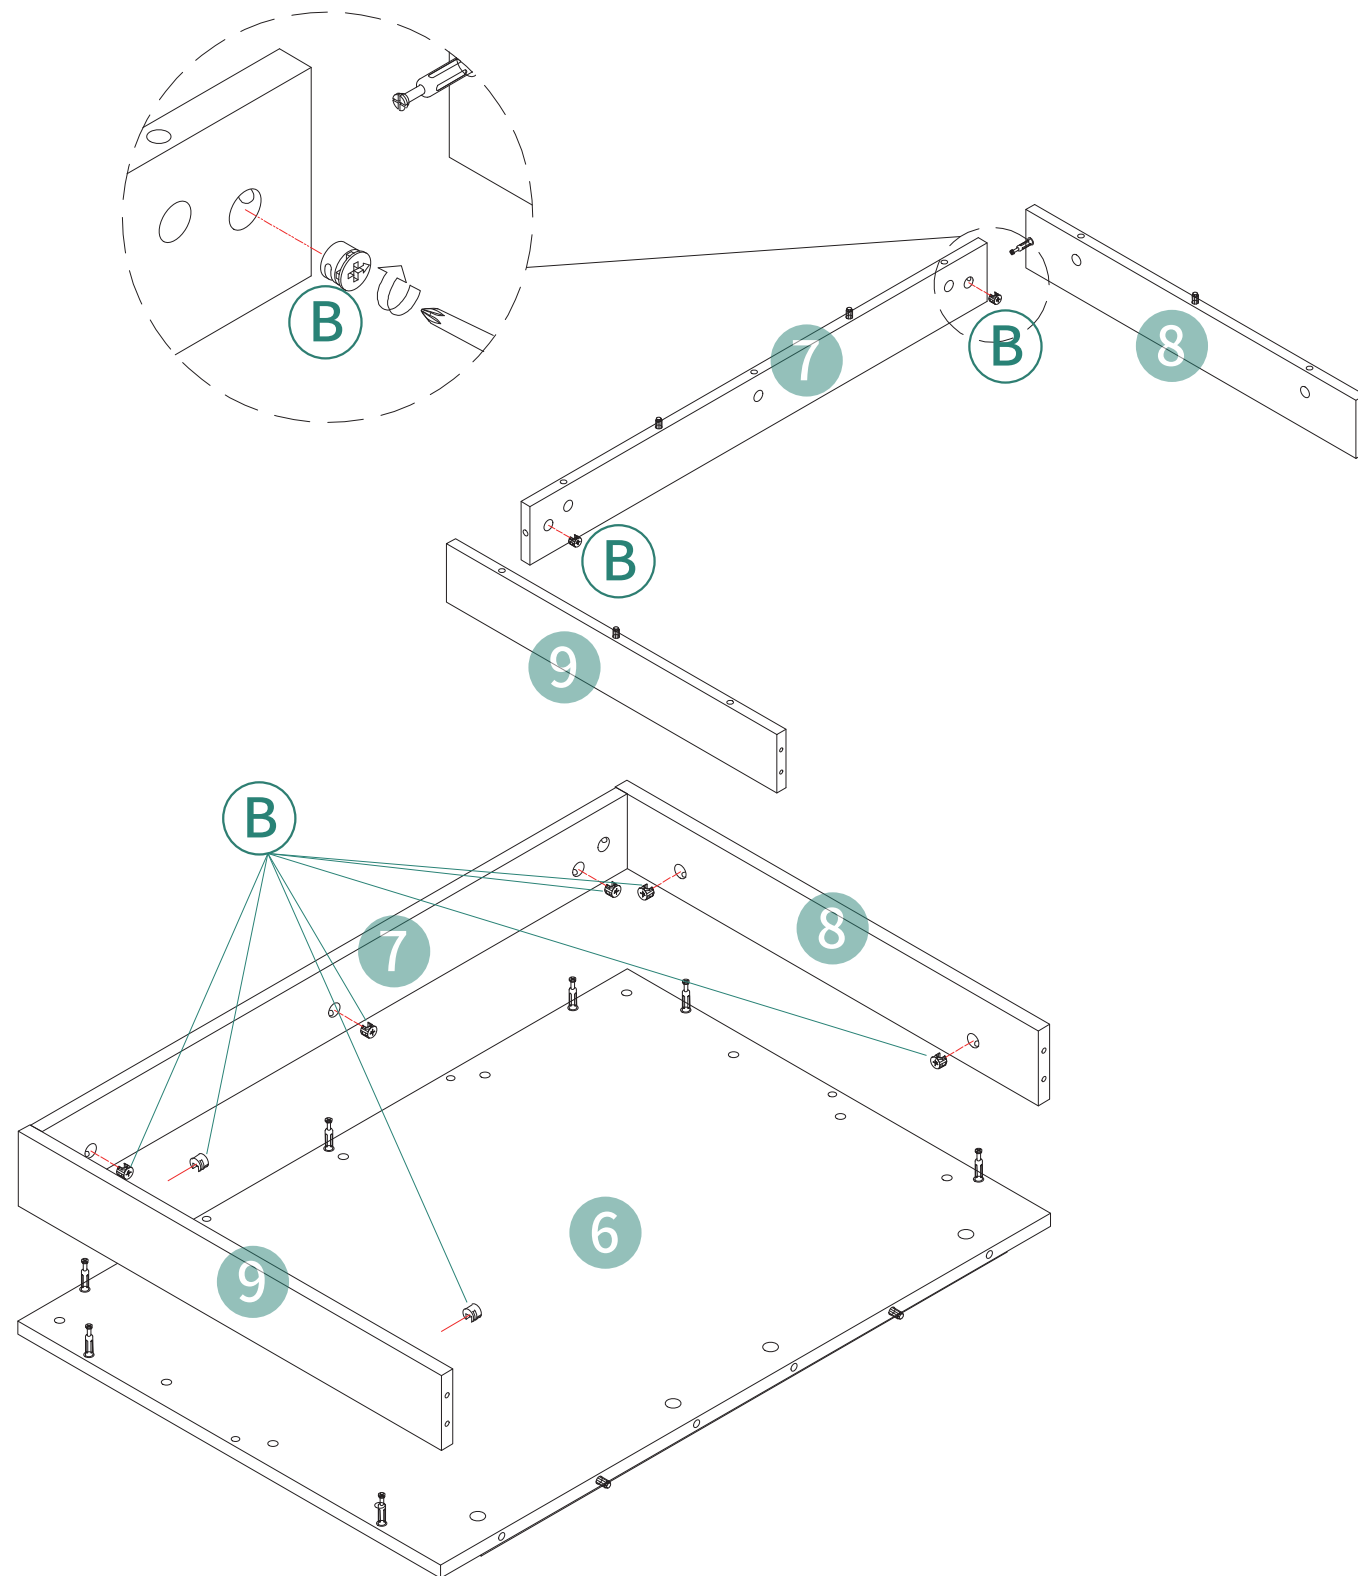


11

ASSEMBLY INSTRUCTIONS

6

 **B** 4pcs  **F** 4pcs

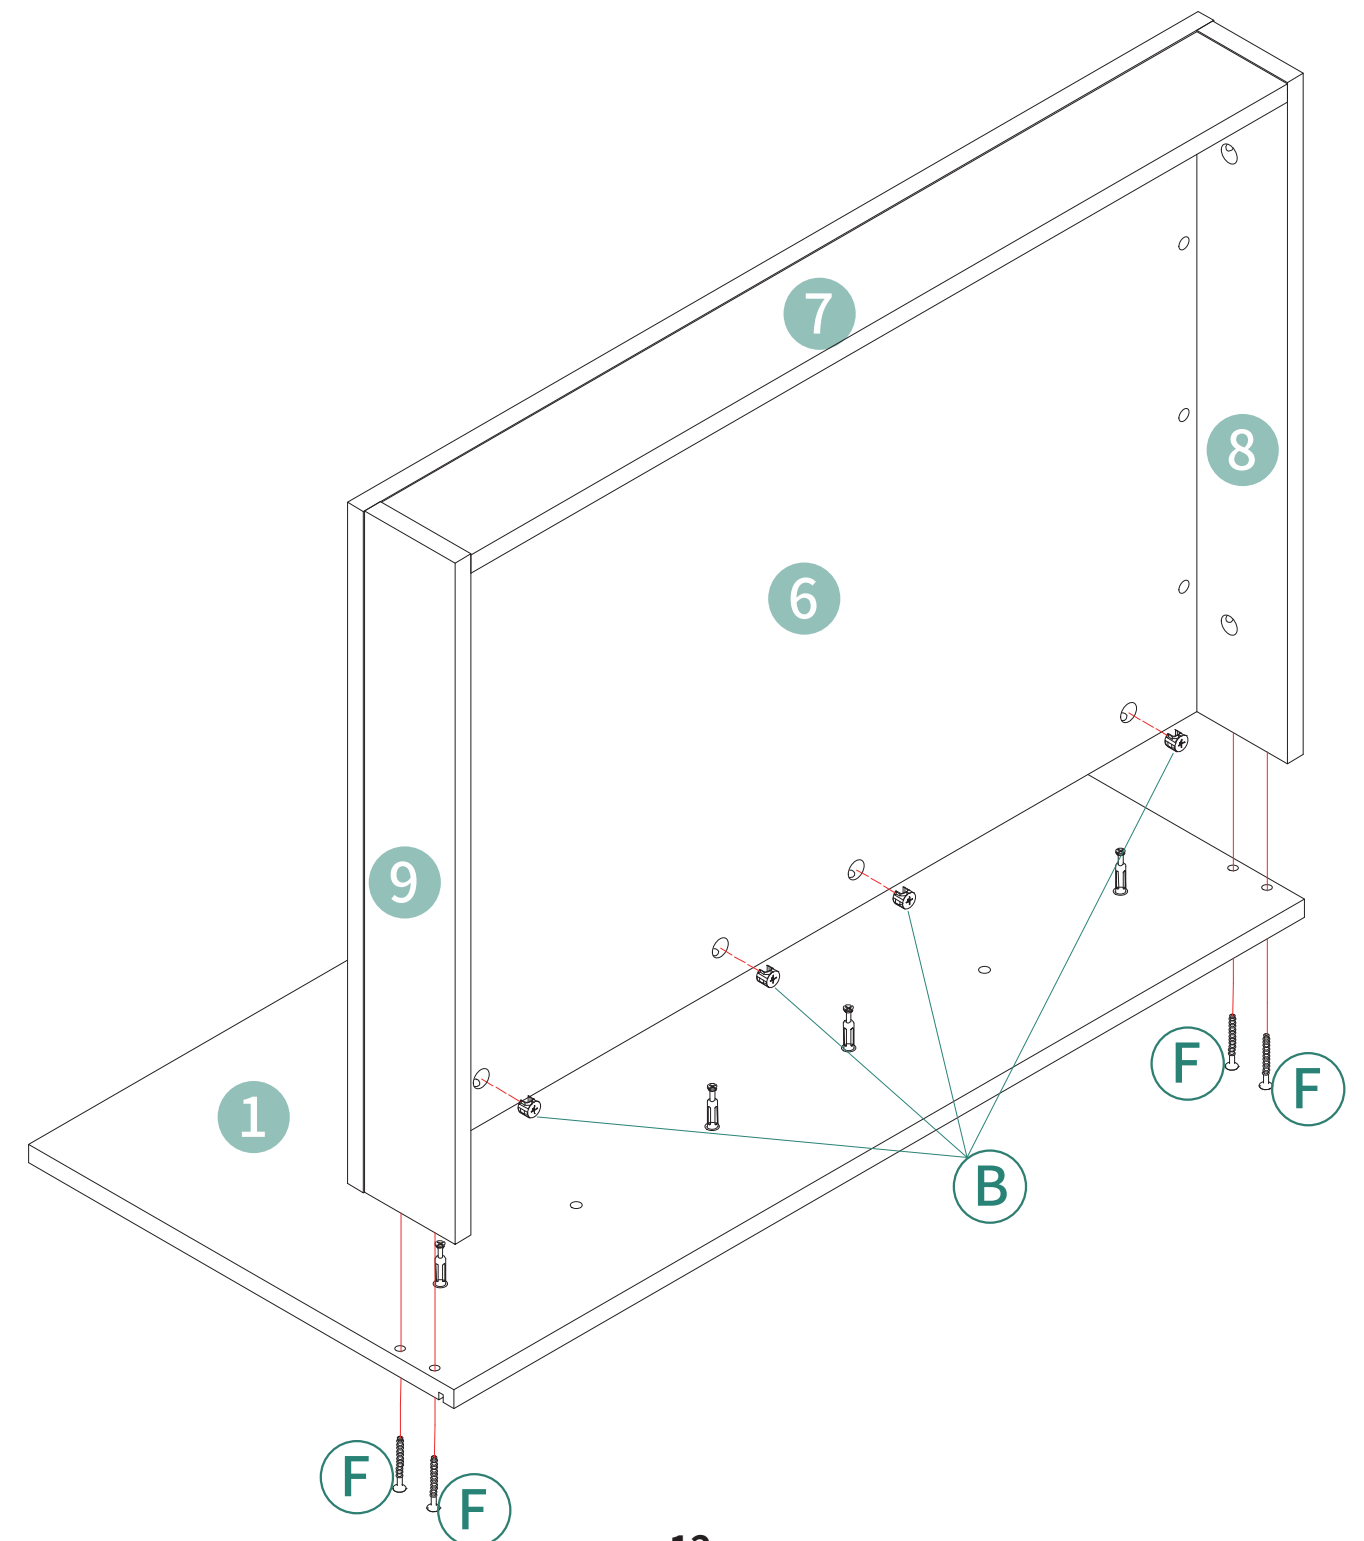


12


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

7



②1pc


⑩1pc



ⓕ6pcs

8


Ⓑ6pcs

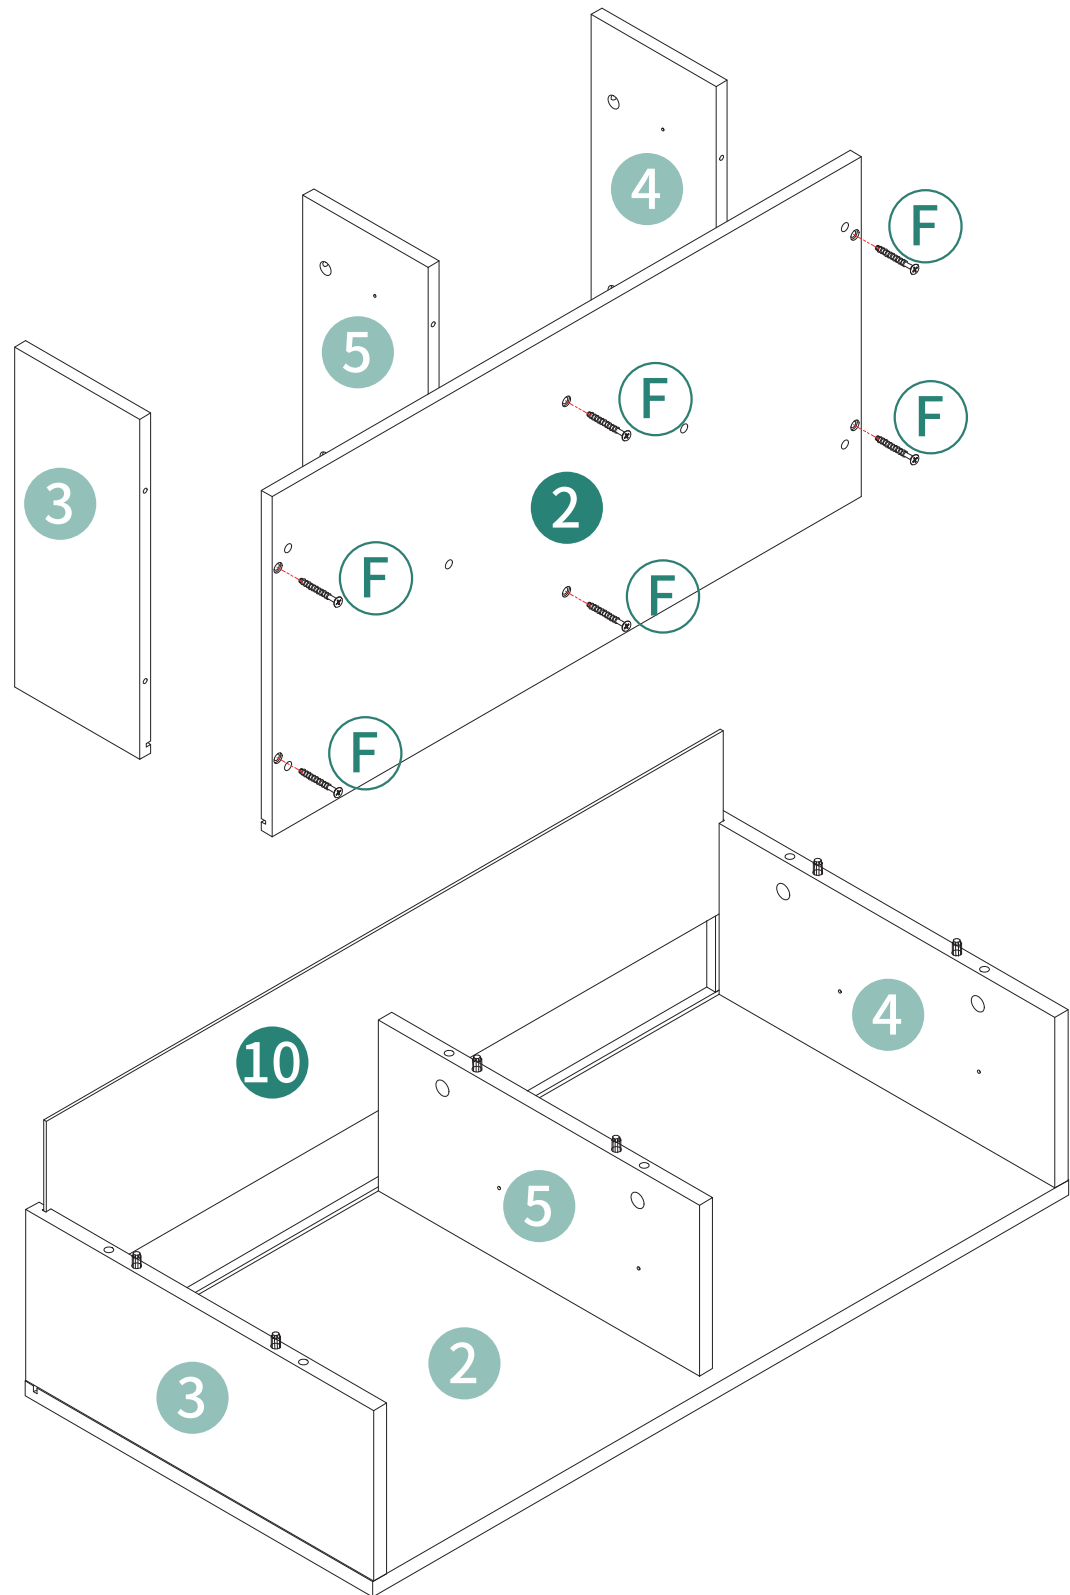



13

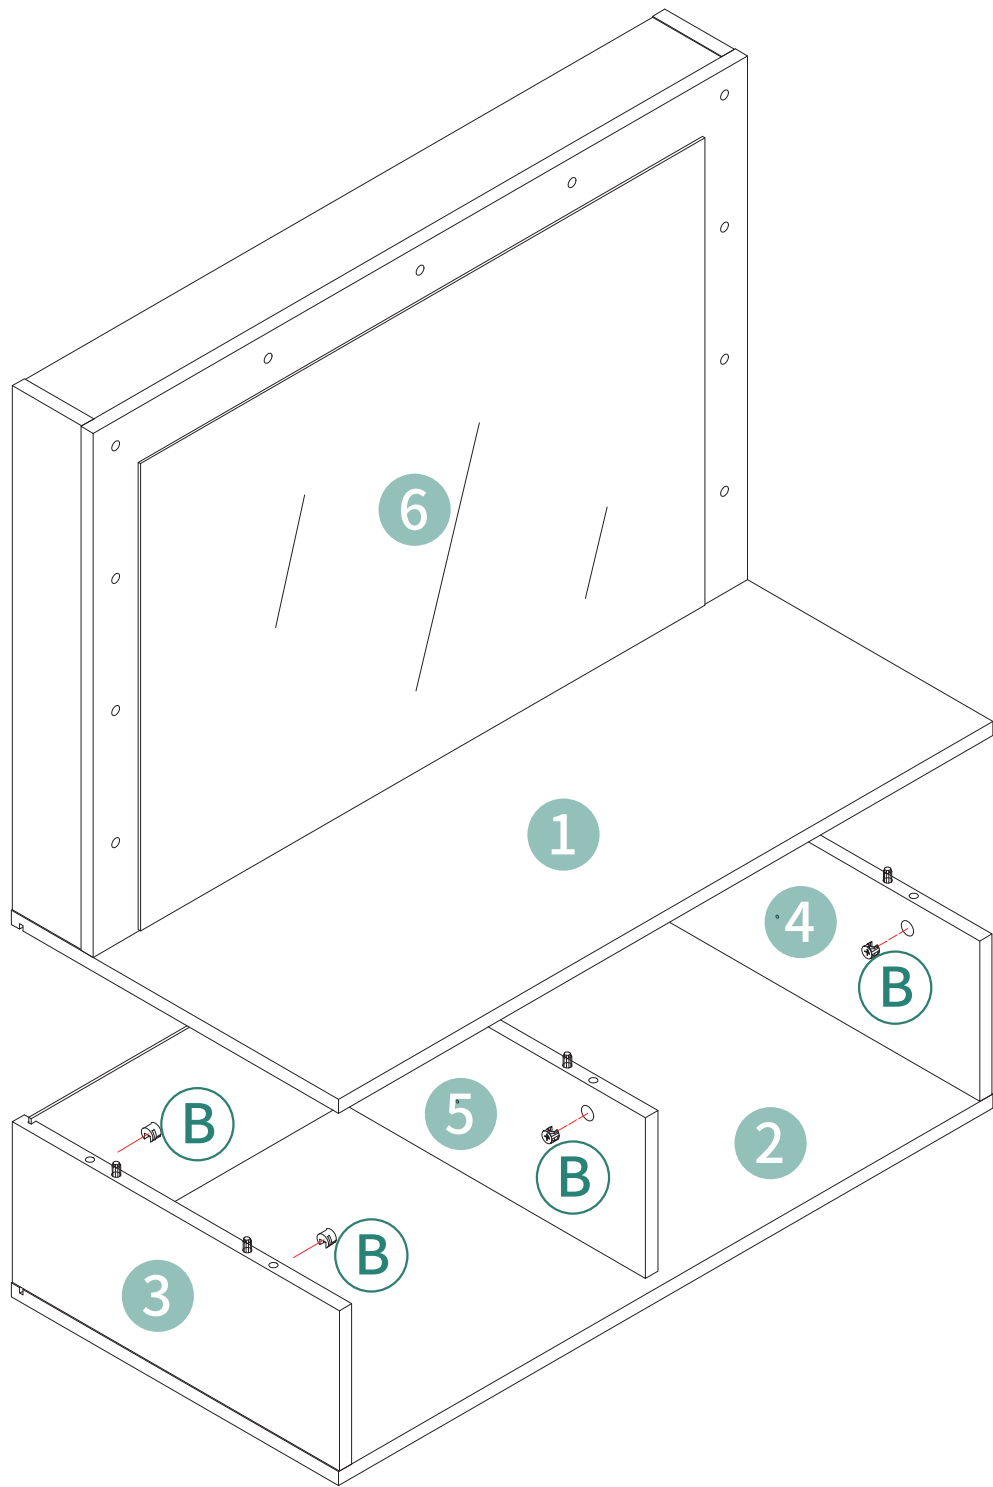

14

ASSEMBLY INSTRUCTIONS


9

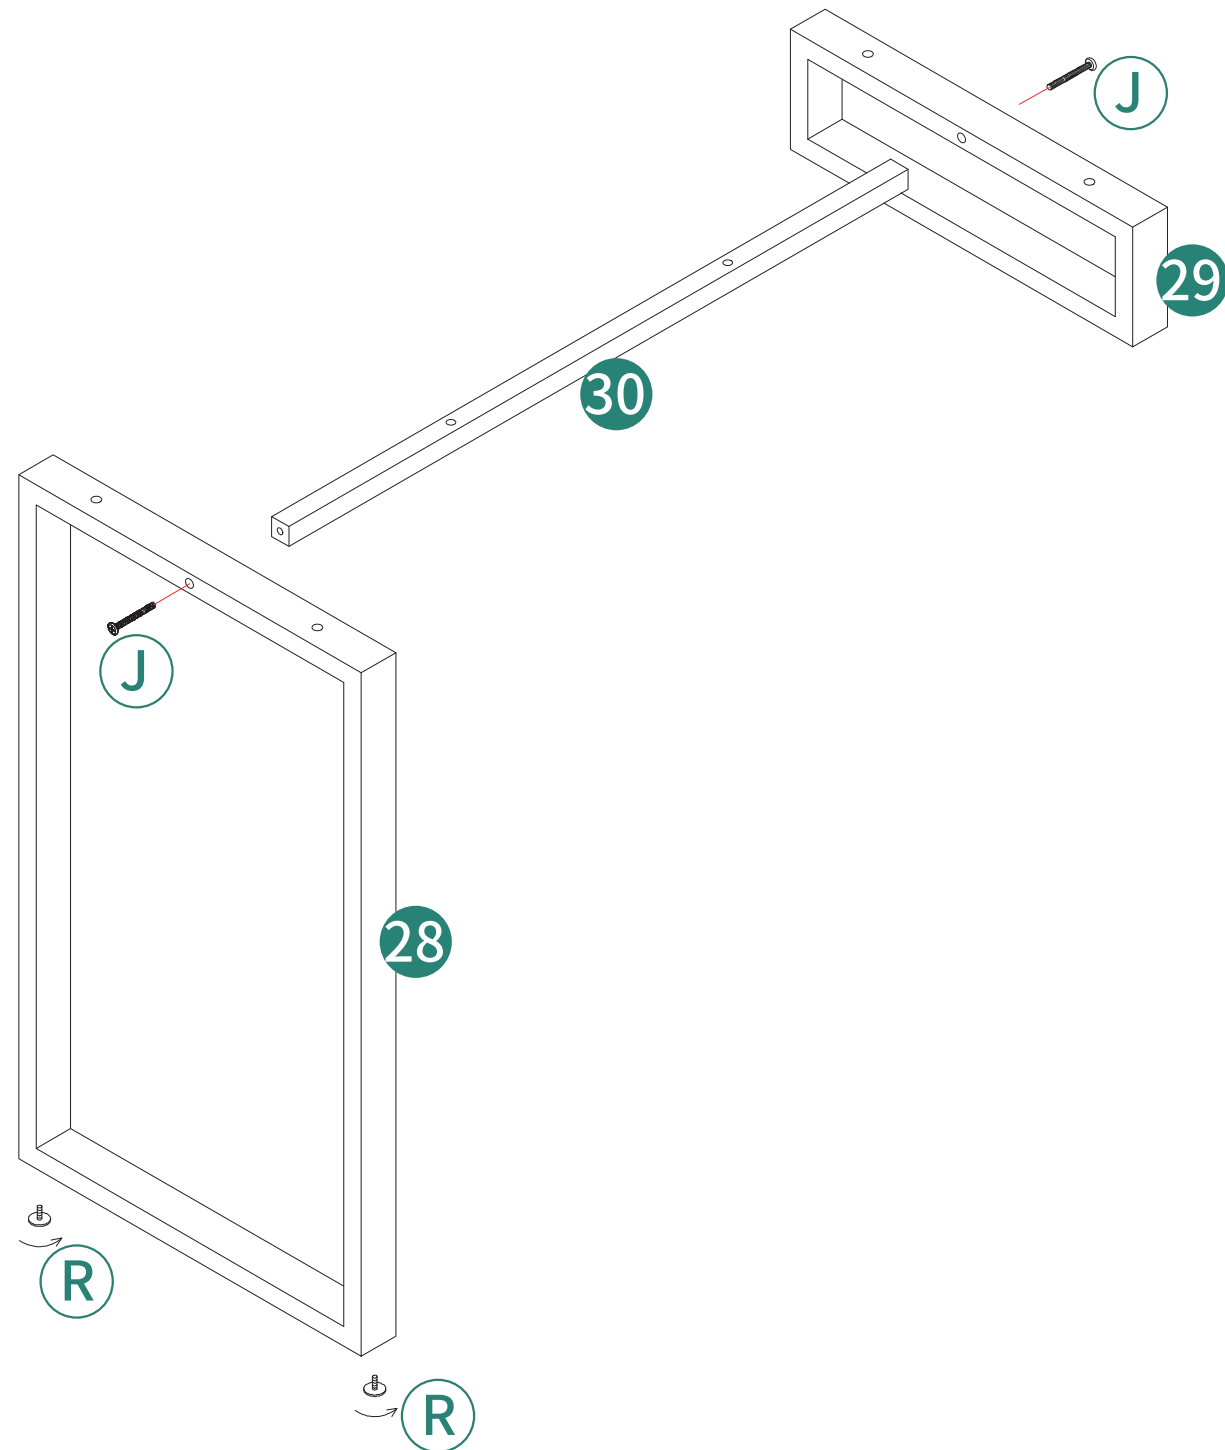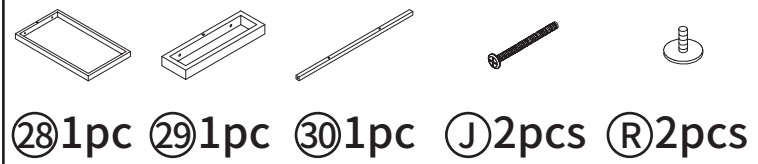

15

ASSEMBLY INSTRUCTIONS


10

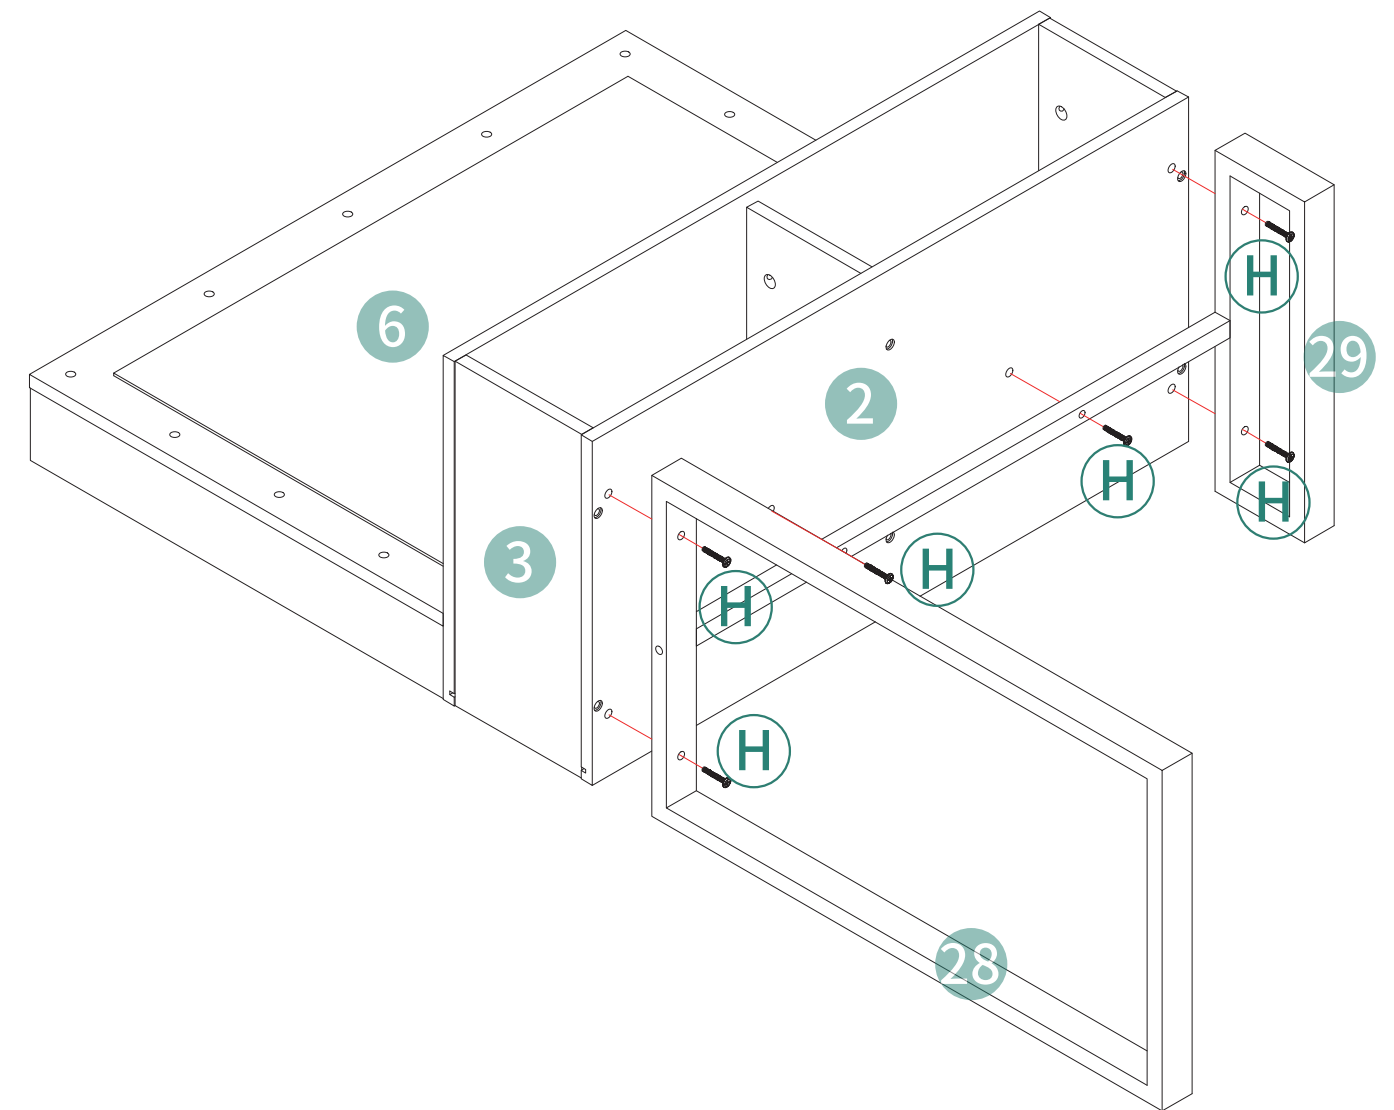

16

ASSEMBLY INSTRUCTIONS


11



⑮1pc




Ⓑ4pcs

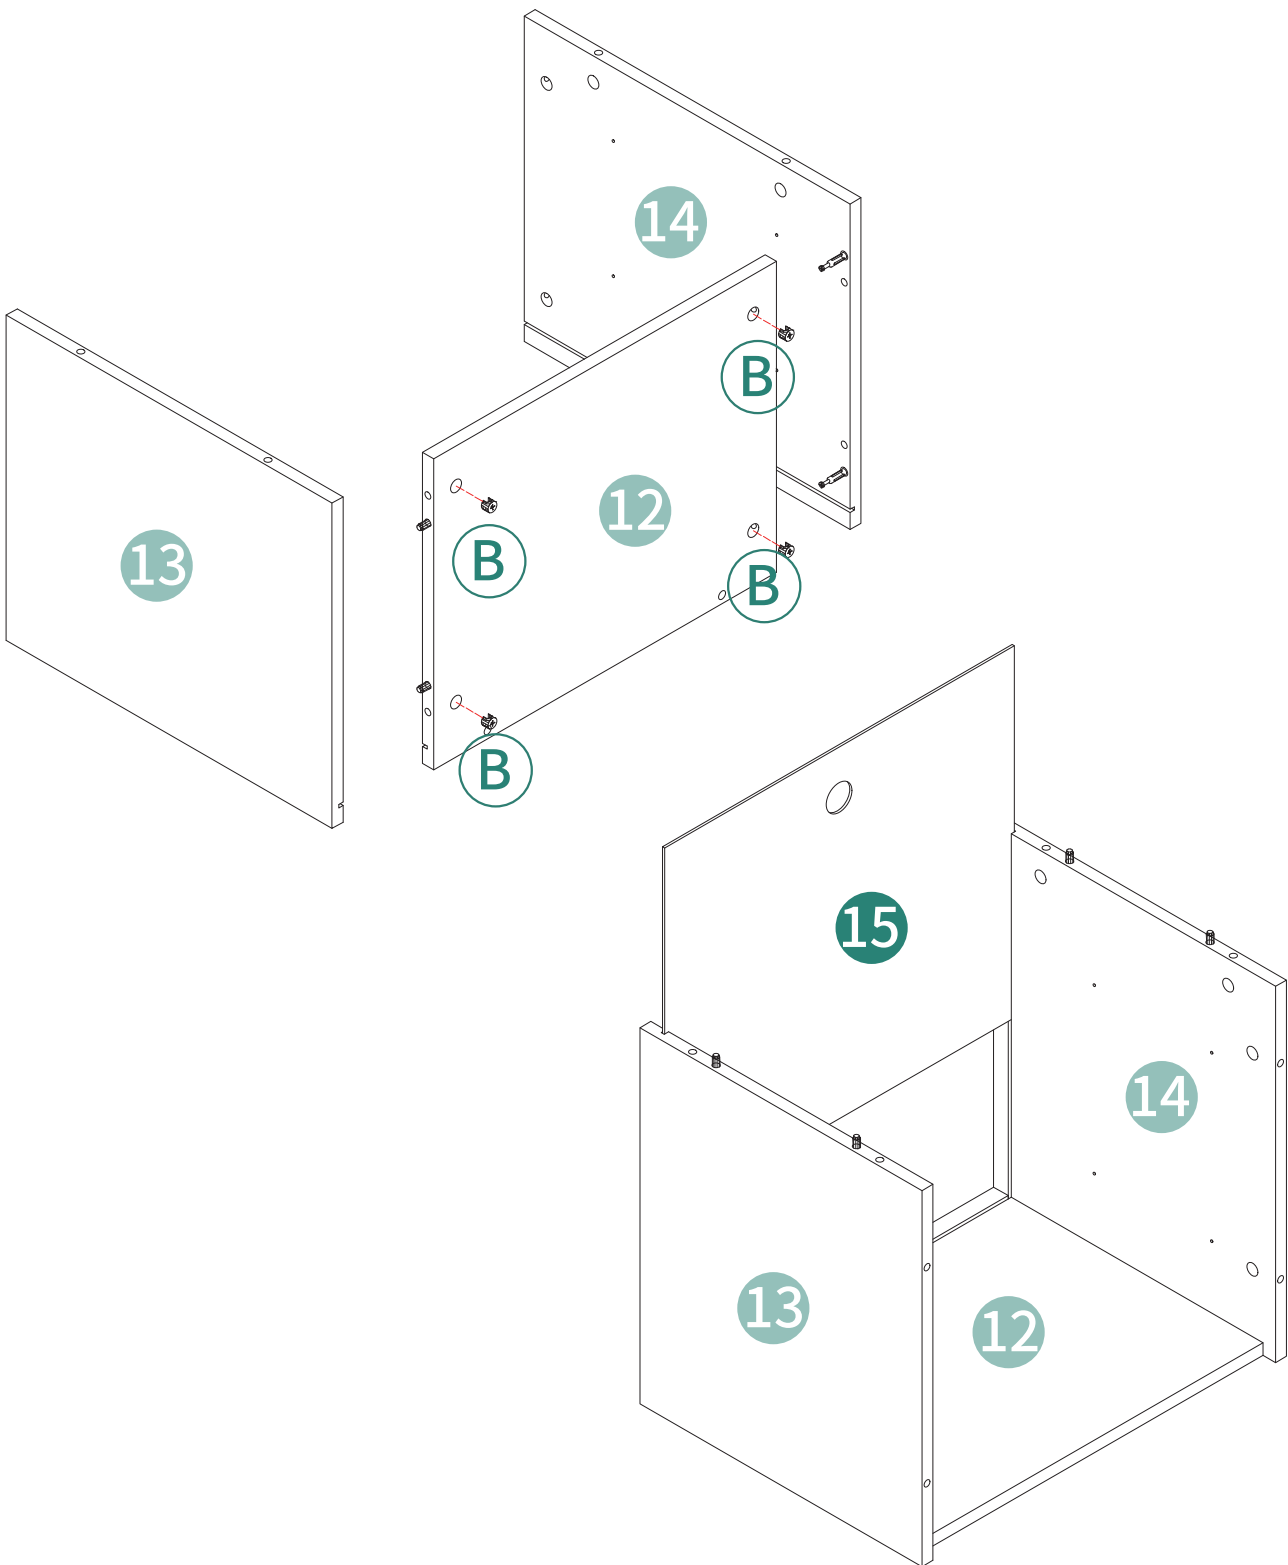


17

ASSEMBLY INSTRUCTIONS

12



③11pc



③21pc



Ⓑ4pcs




Ⓓ2pcs



Ⓐ1pc



Ⓚ4pcs

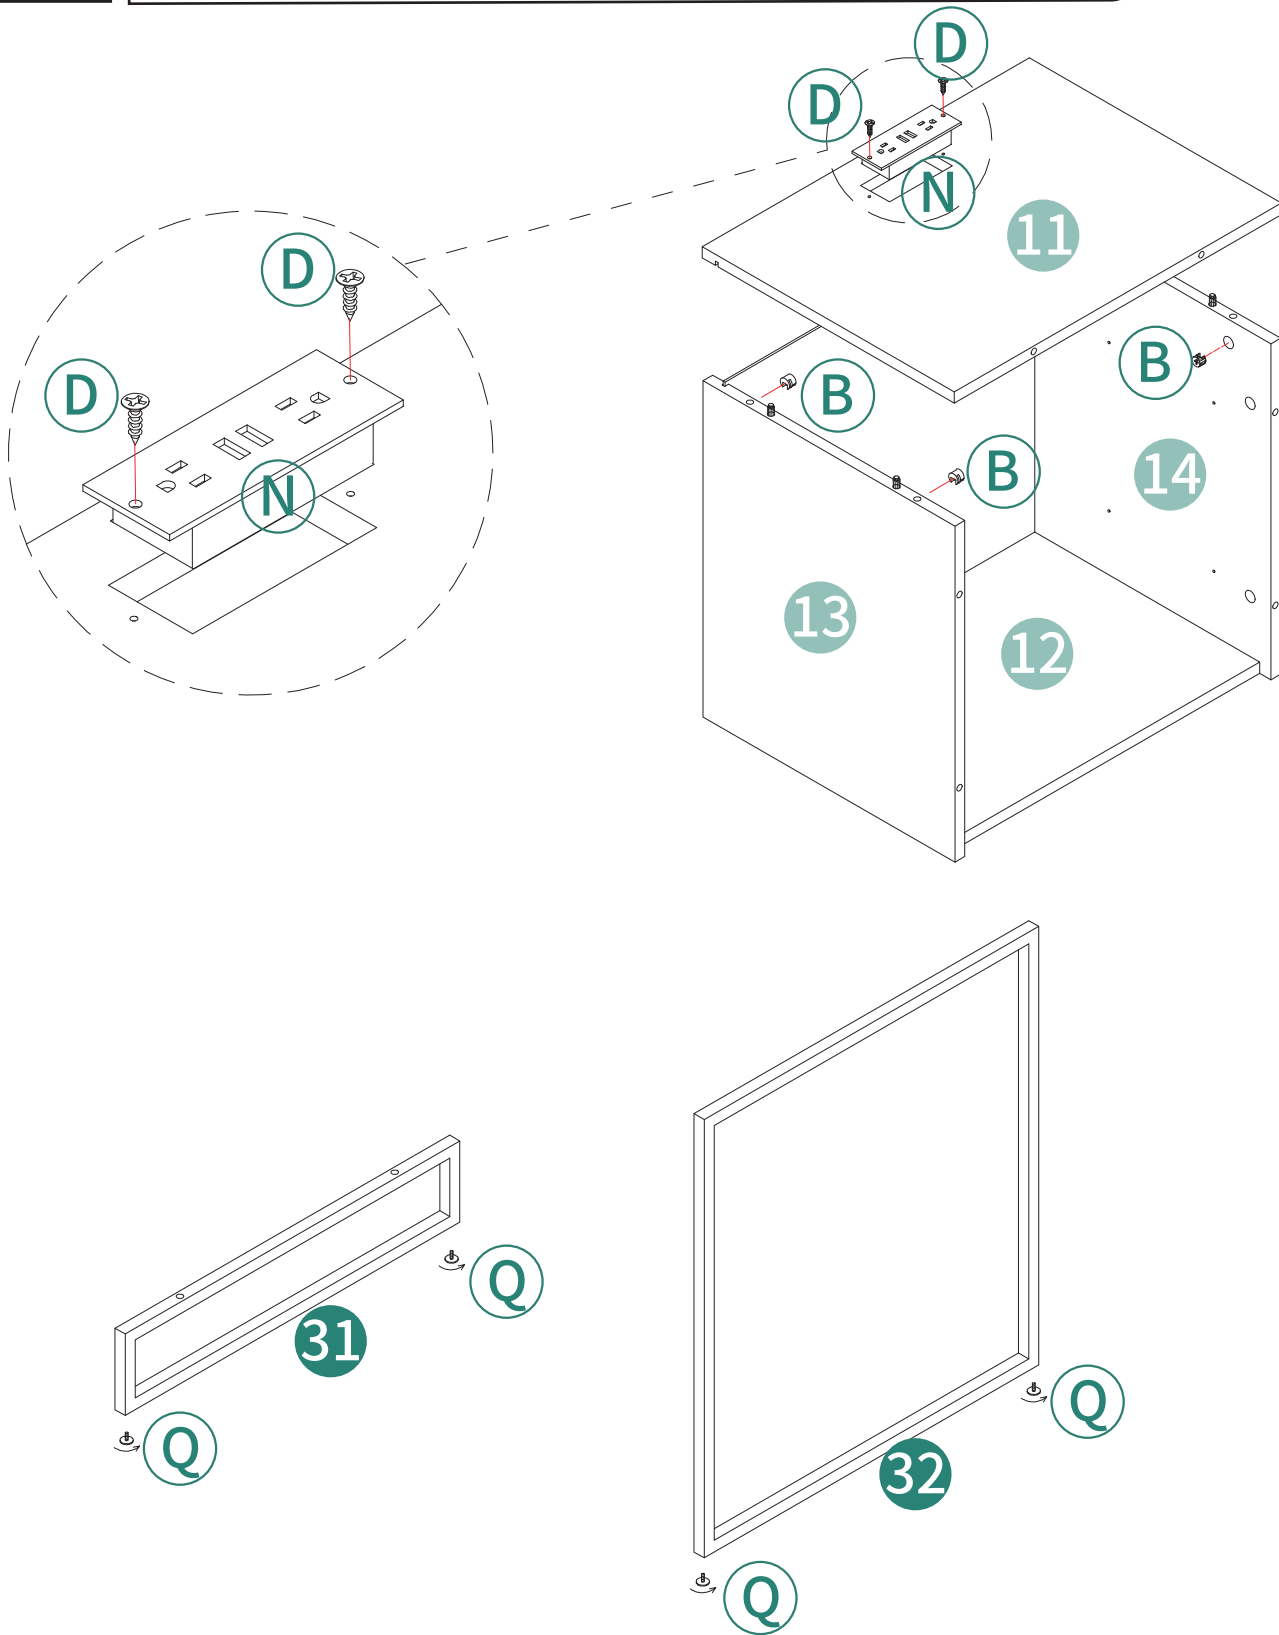


18

ASSEMBLY INSTRUCTIONS

13


-   
Ⓐ6pcs Ⓑ6pcs Ⓒ2pcs

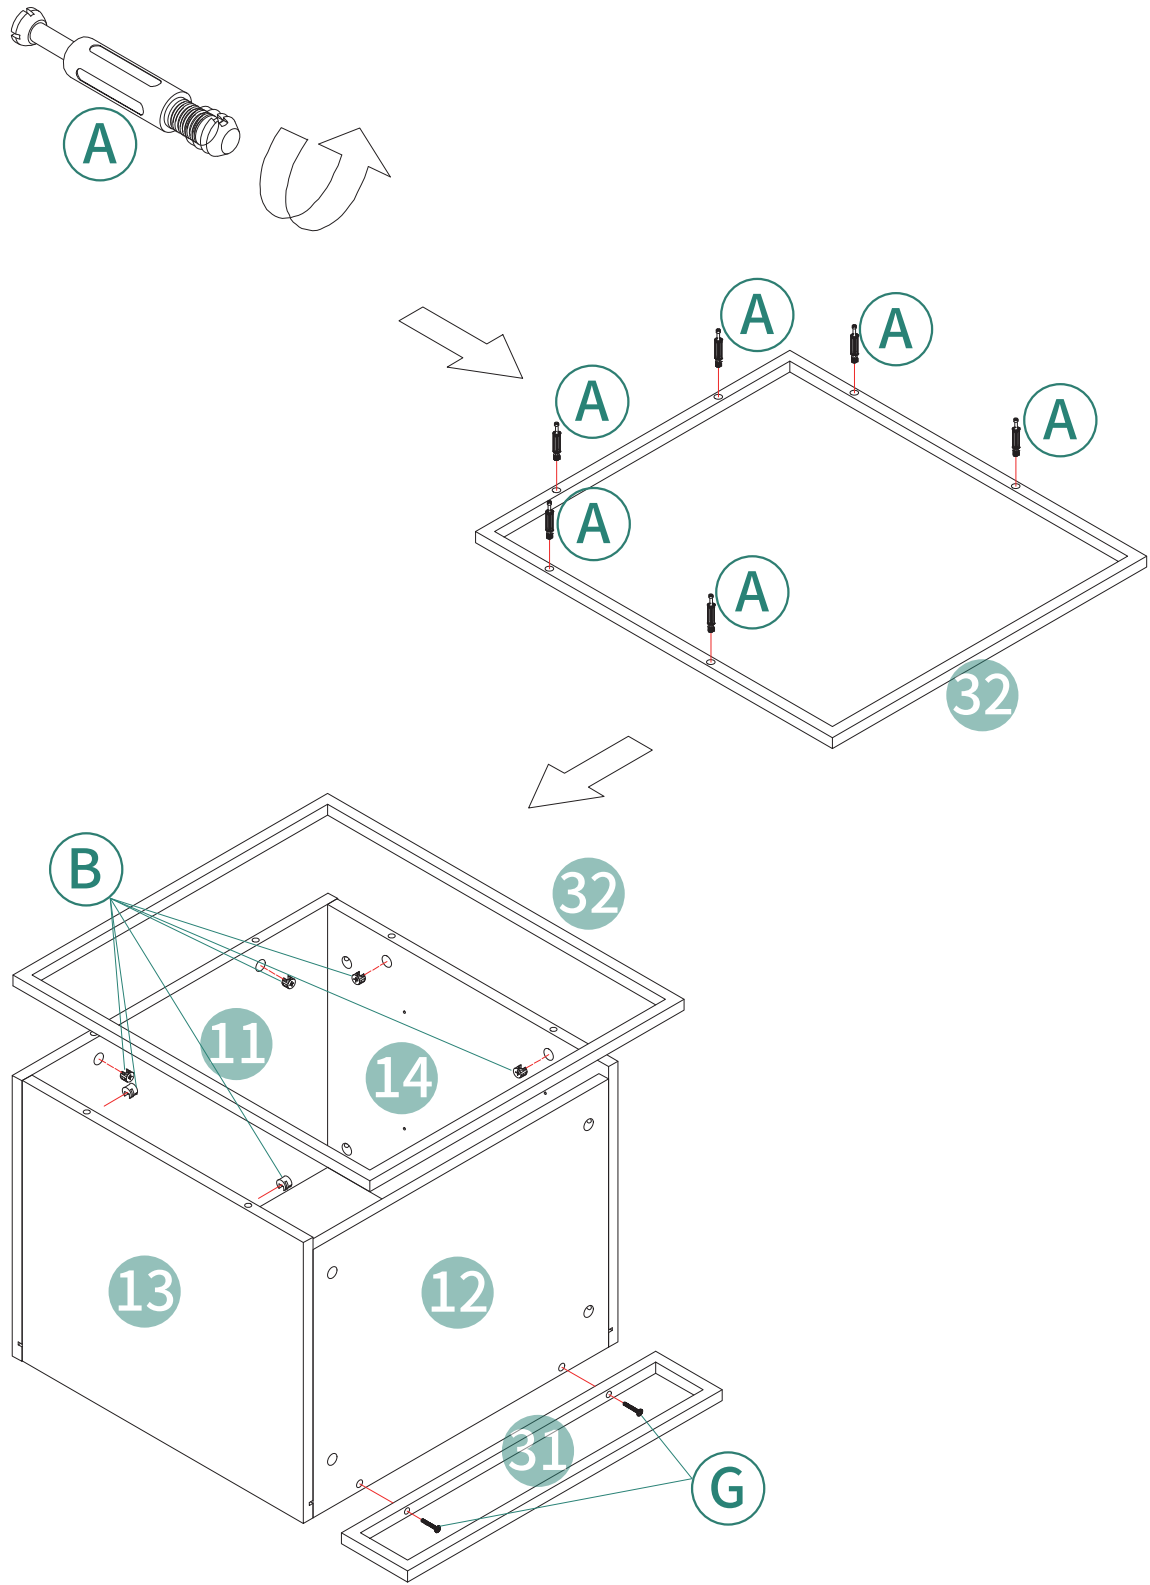

ASSEMBLY INSTRUCTIONS

14


-     
Ⓐ16pcs Ⓑ1pc Ⓒ1pc Ⓓ1pc Ⓔ1pc Ⓕ1pc Ⓖ16pcs

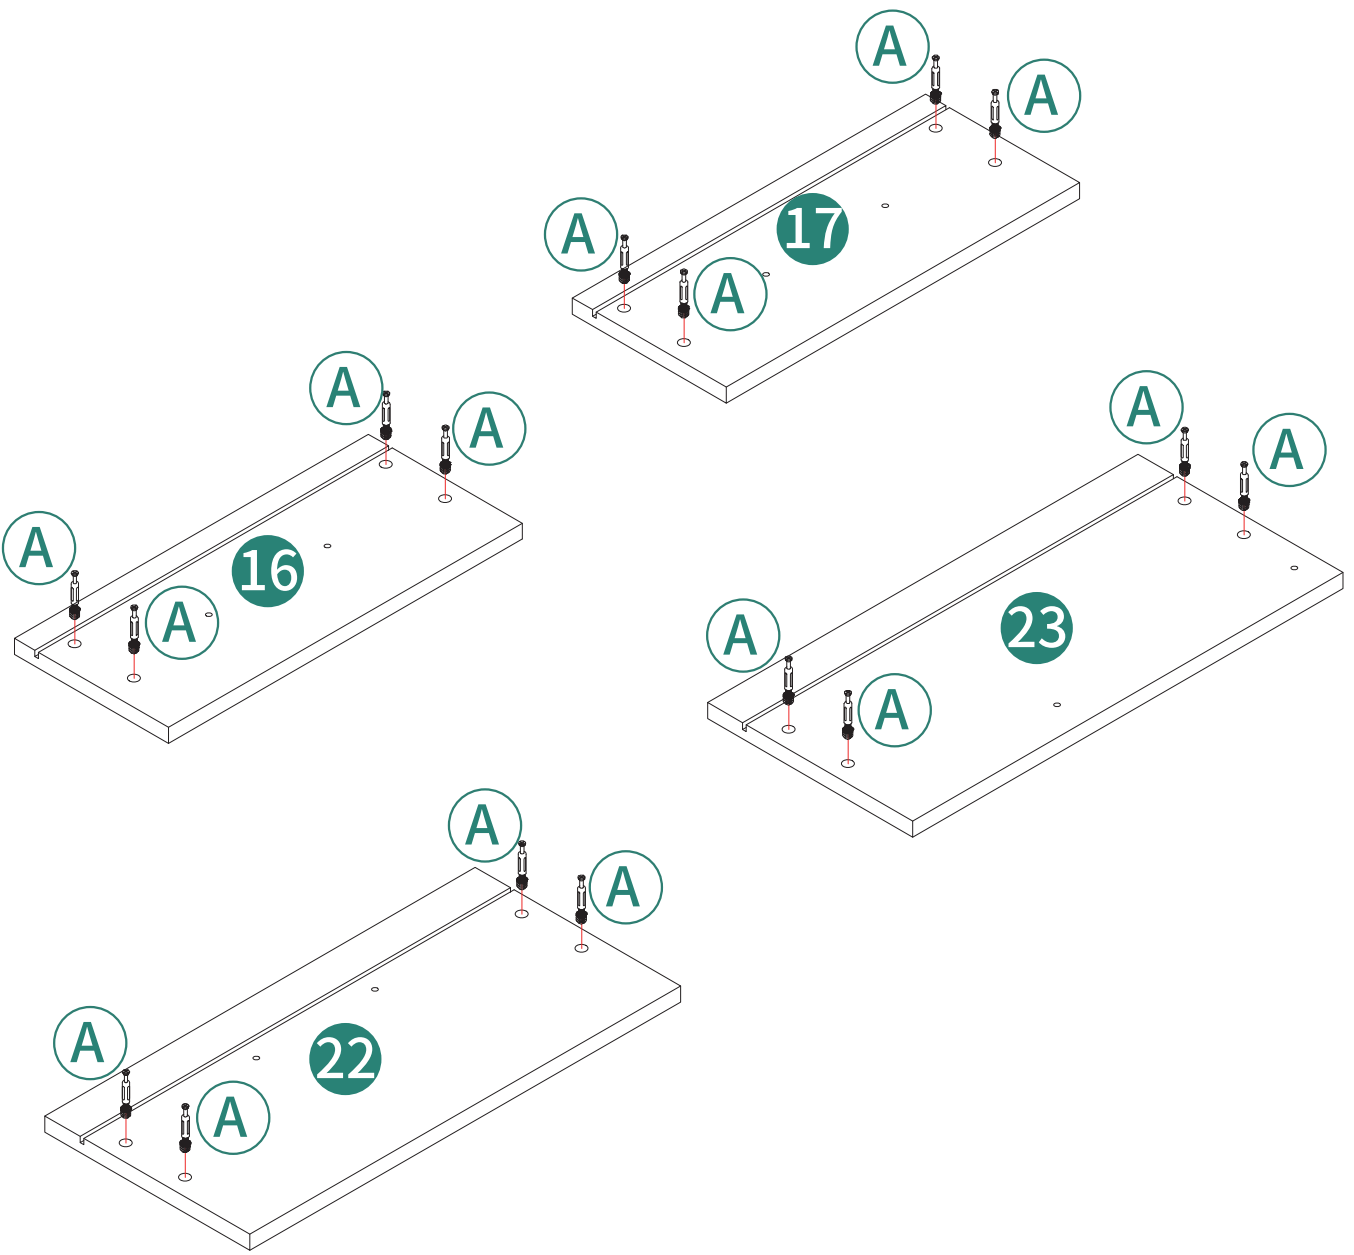

ASSEMBLY INSTRUCTIONS


15





 ⑱2pcs ⑲2pcs ⑳2pcs ㉑2pcs ㉒8pcs ㉓8pcs

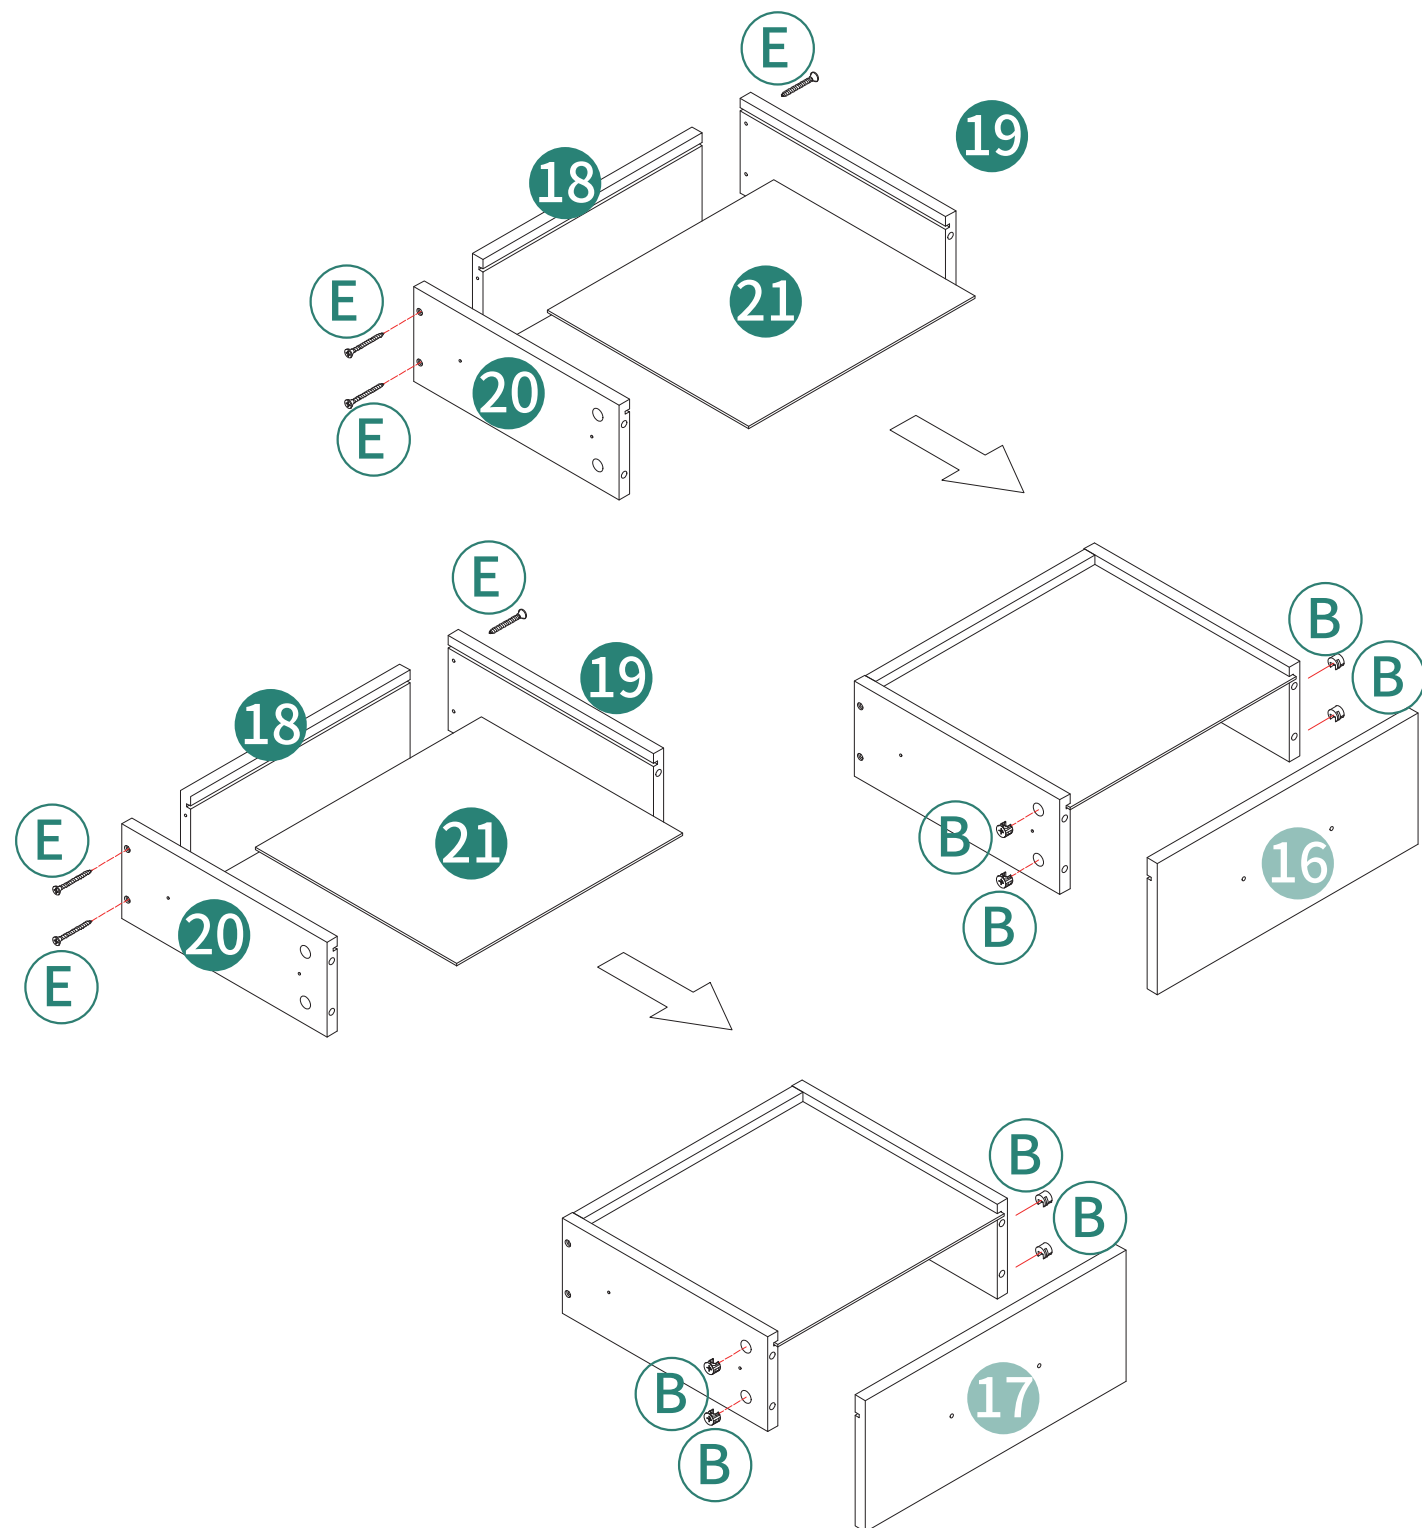


21

ASSEMBLY INSTRUCTIONS


16







 ㉔2pcs ㉕2pcs ㉖2pcs ㉗2pcs ㉘8pcs ㉙8pcs

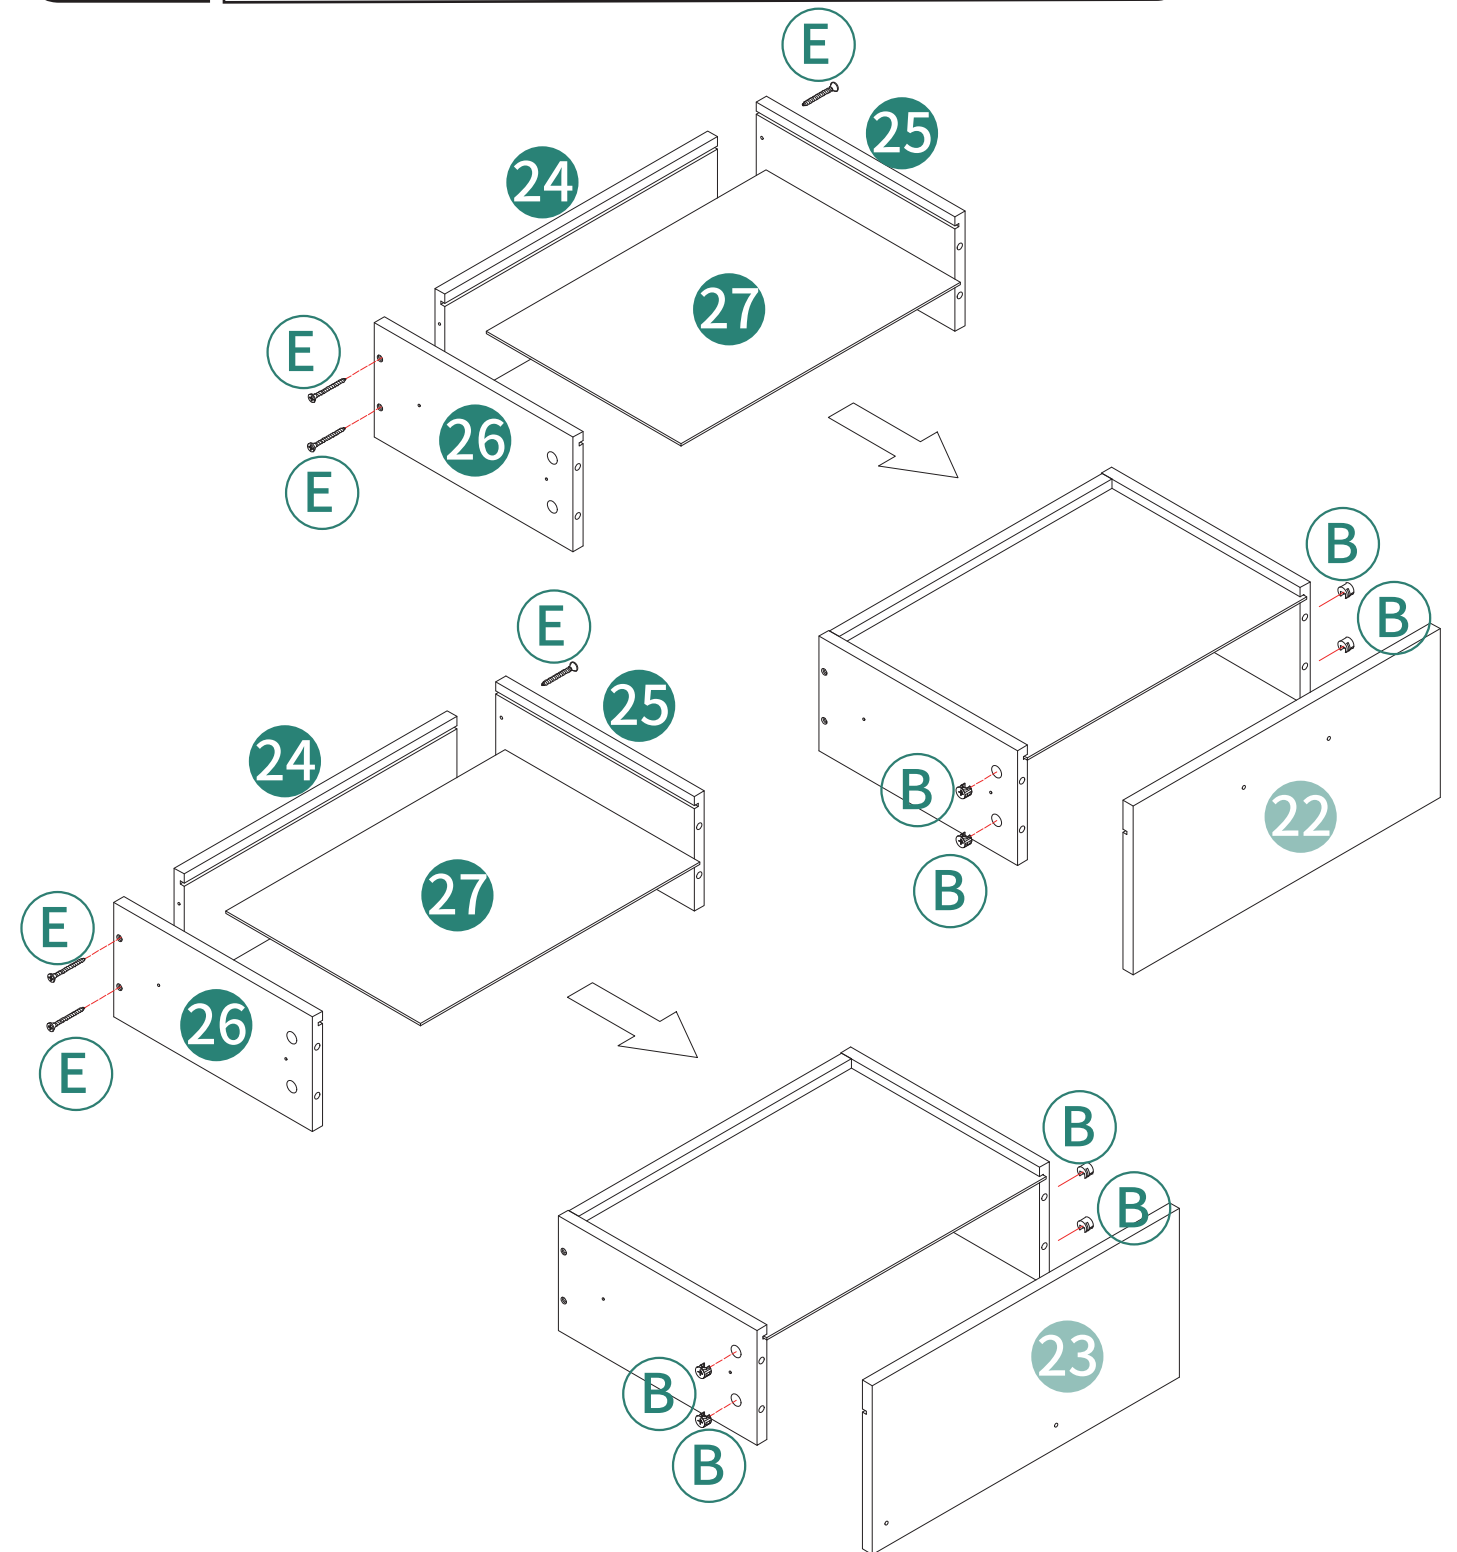


22

ASSEMBLY INSTRUCTIONS




17

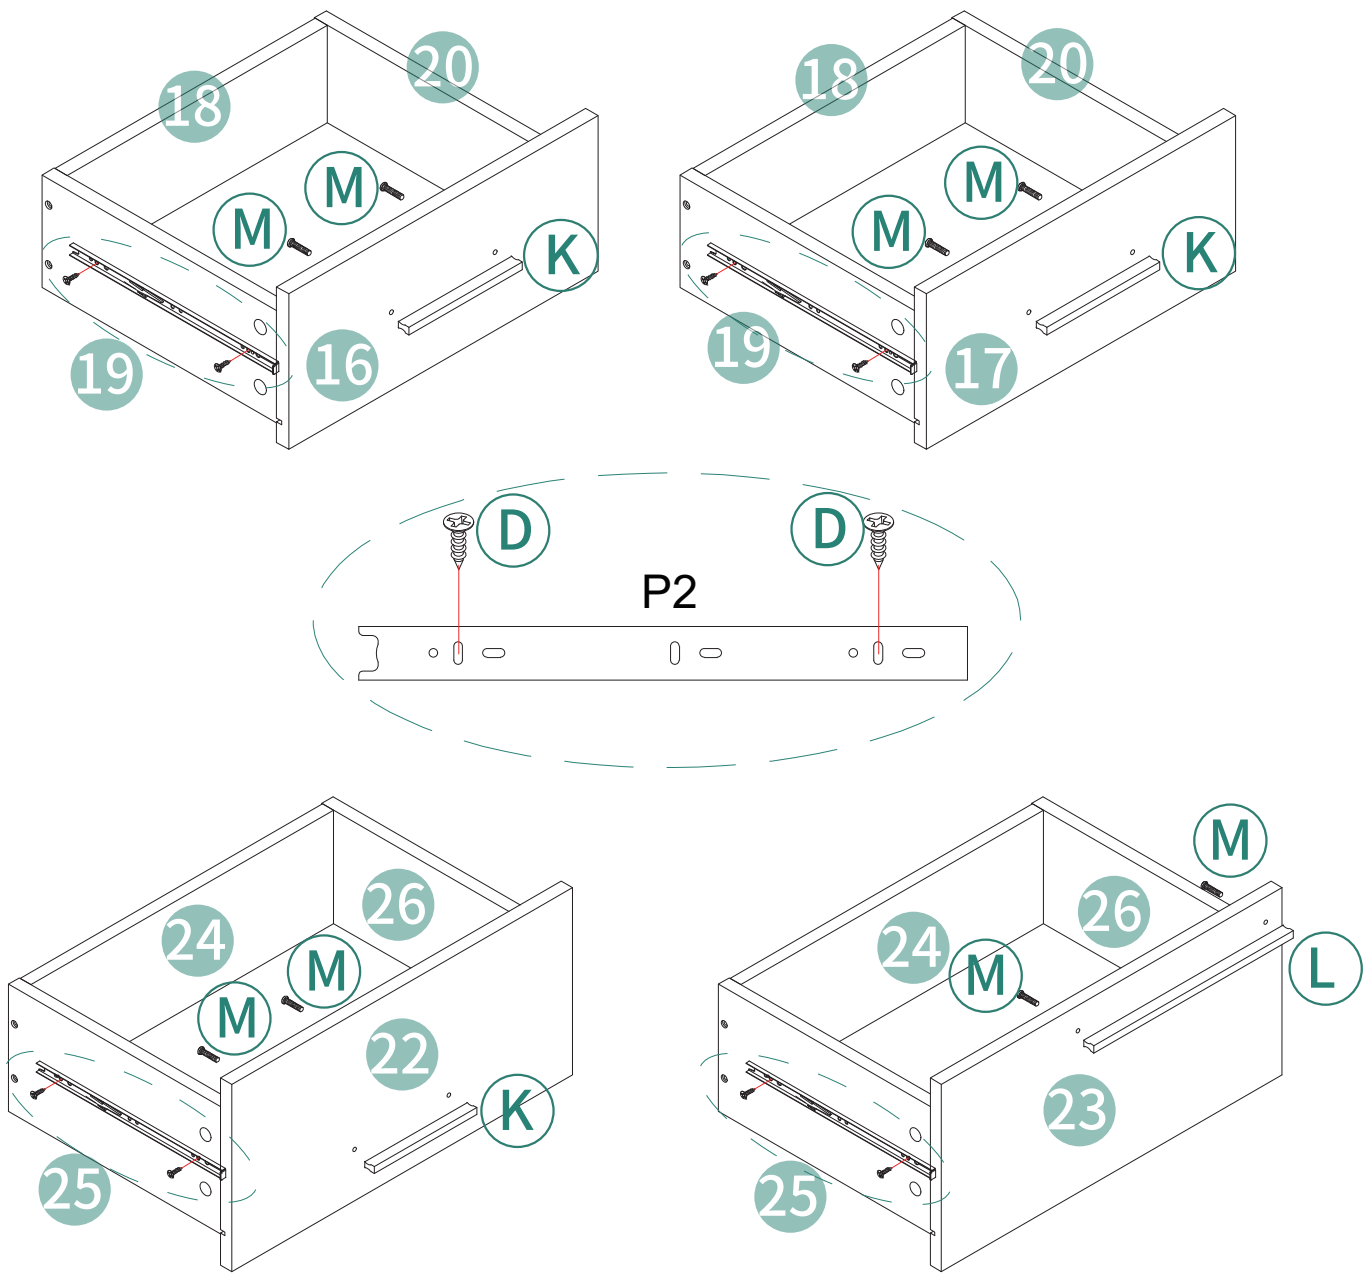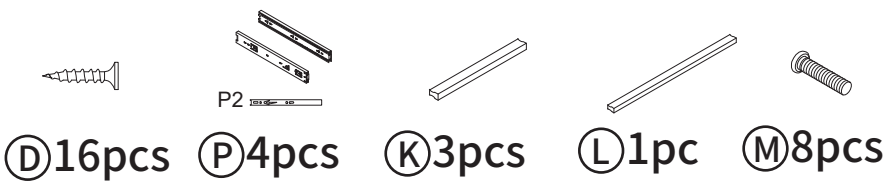


18

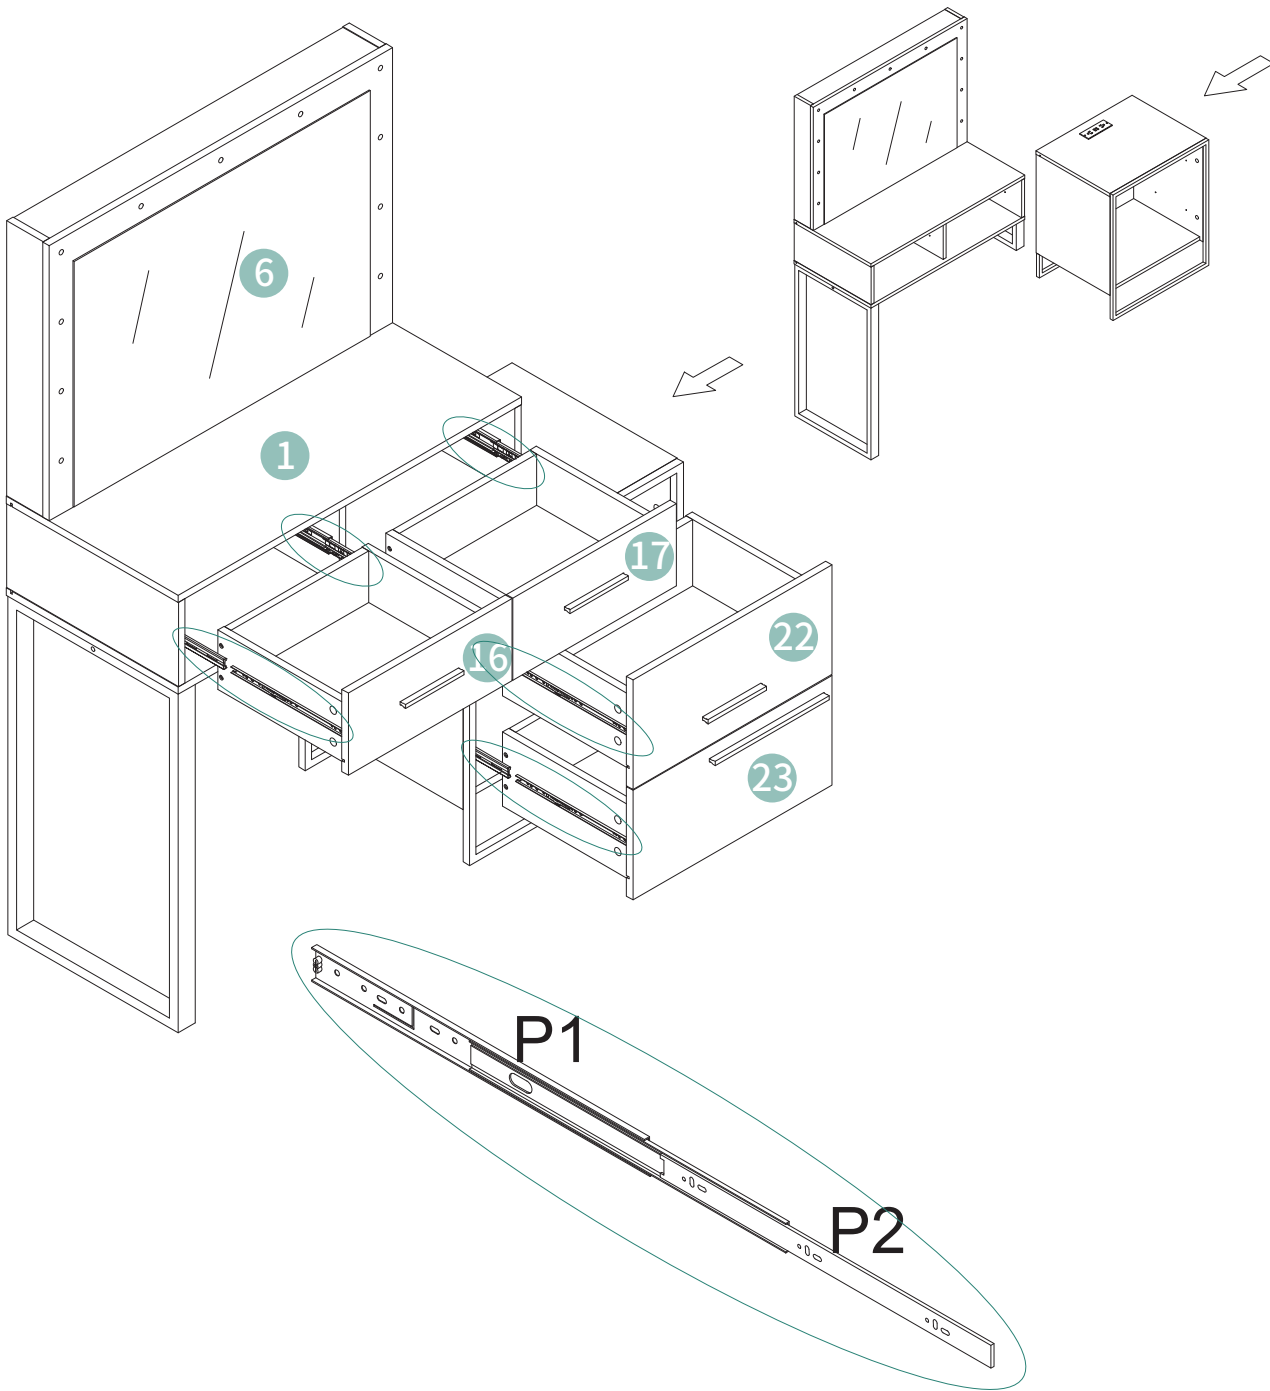


ASSEMBLY INSTRUCTIONS

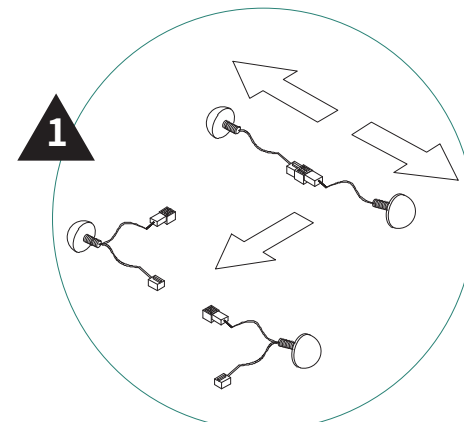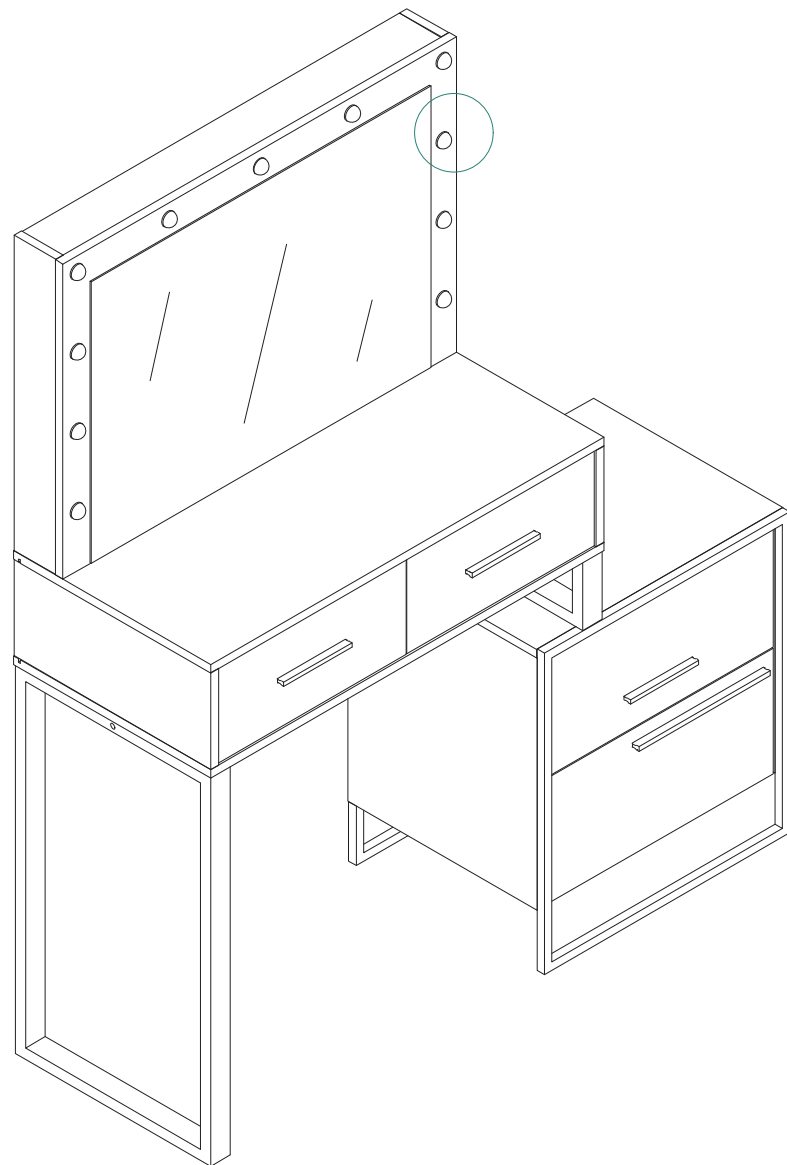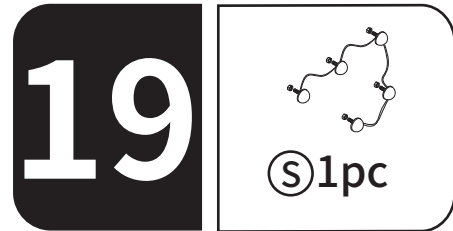

Pull it out



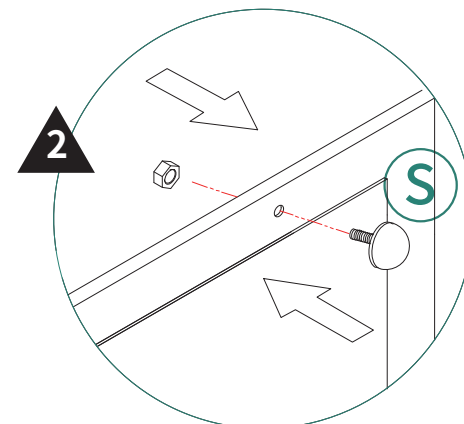


Fix the bulb first.

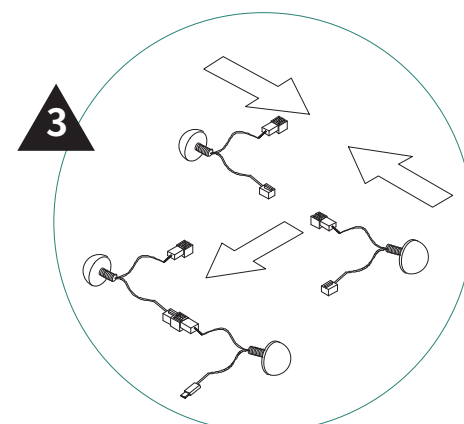

Connect the bulb & wires.

ASSEMBLY INSTRUCTIONS

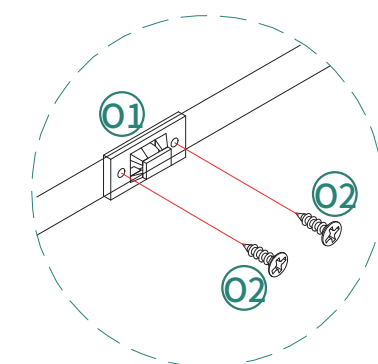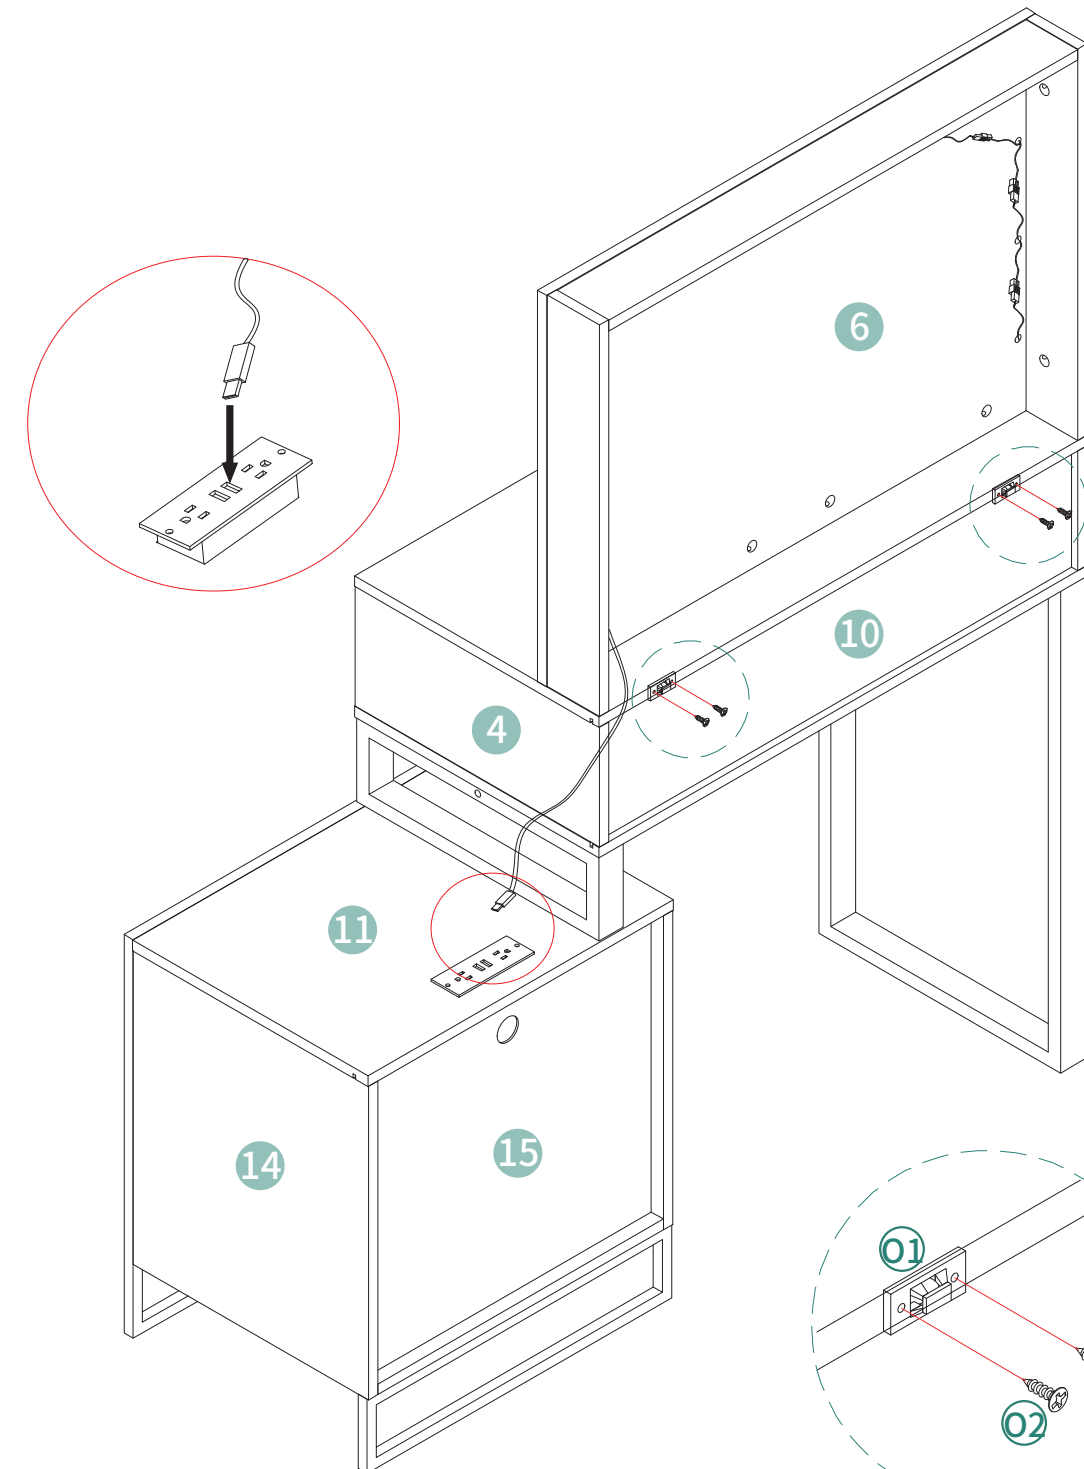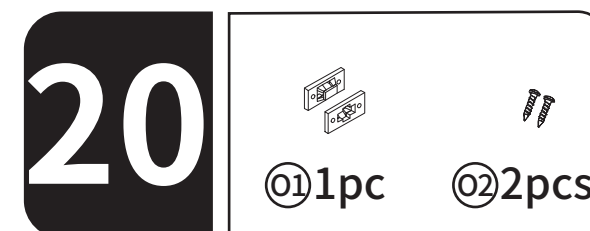





ASSEMBLY INSTRUCTIONS

21


 ①1pc


 ③2pcs


 ④2pcs

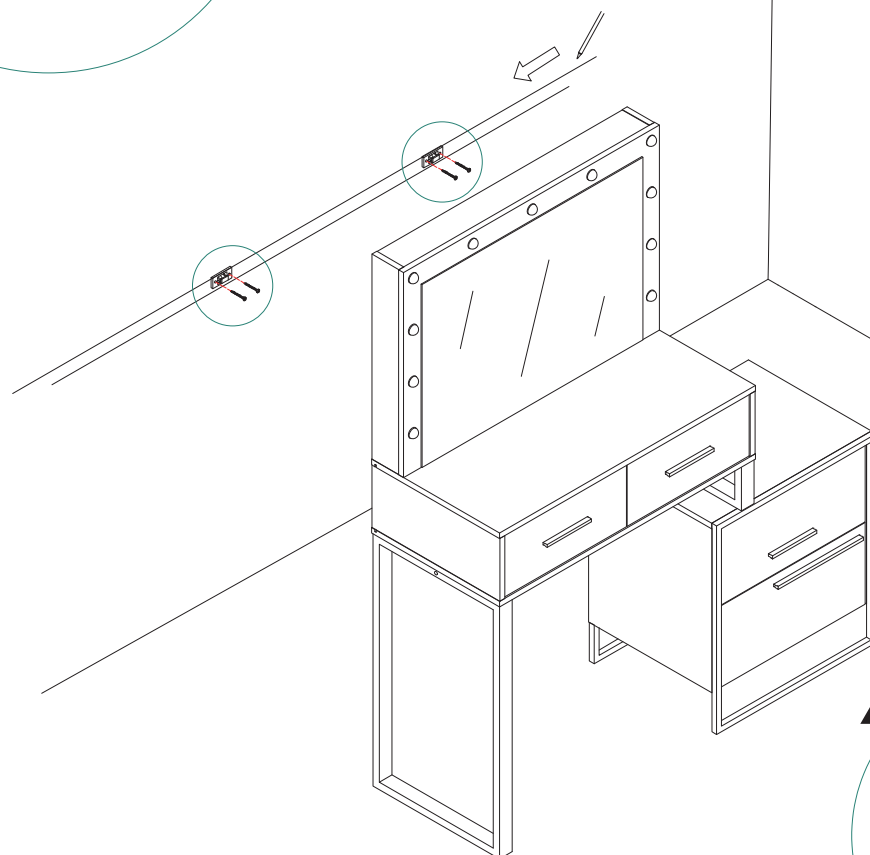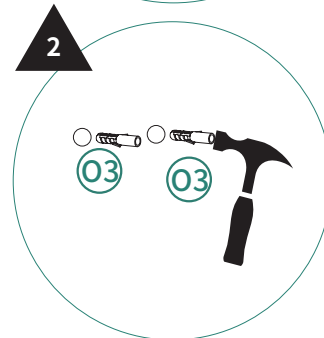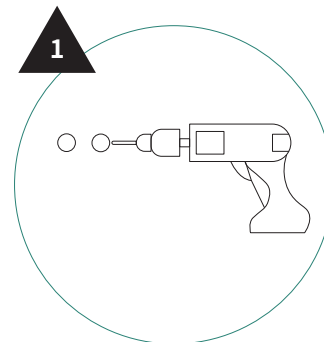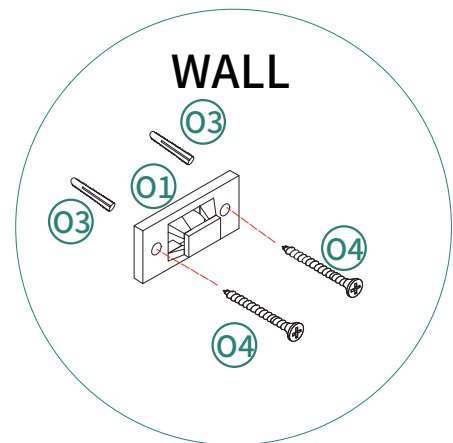



! After the cabinet assembly, please install the wall fixing device on the back of the cabinet to avoid accidents.

Install at a location based on your needs.

ASSEMBLY INSTRUCTIONS


22


 ⑤2pcs

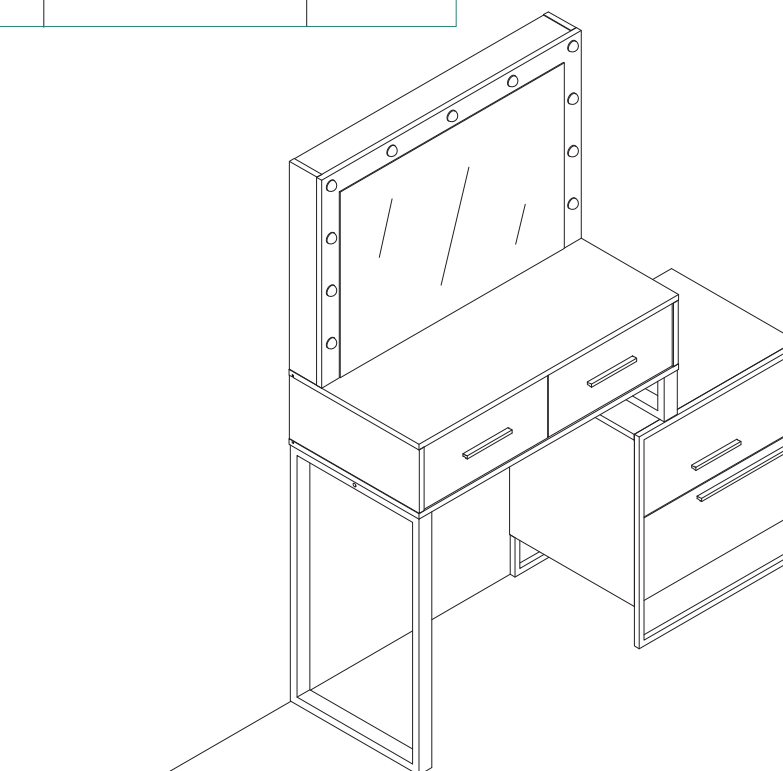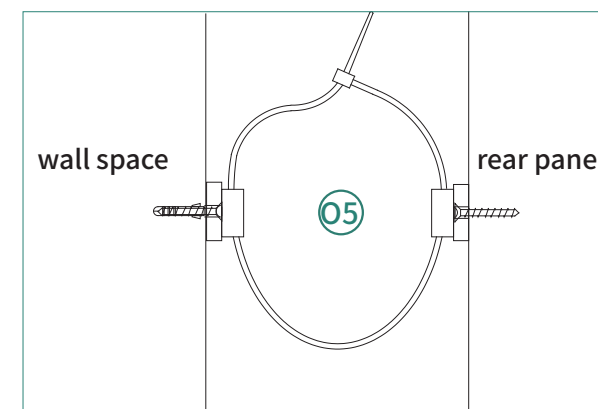


ASSEMBLY INSTRUCTIONS

23




③③2pcs



③④2pcs




③⑤2pcs



①8pcs




①④4pcs

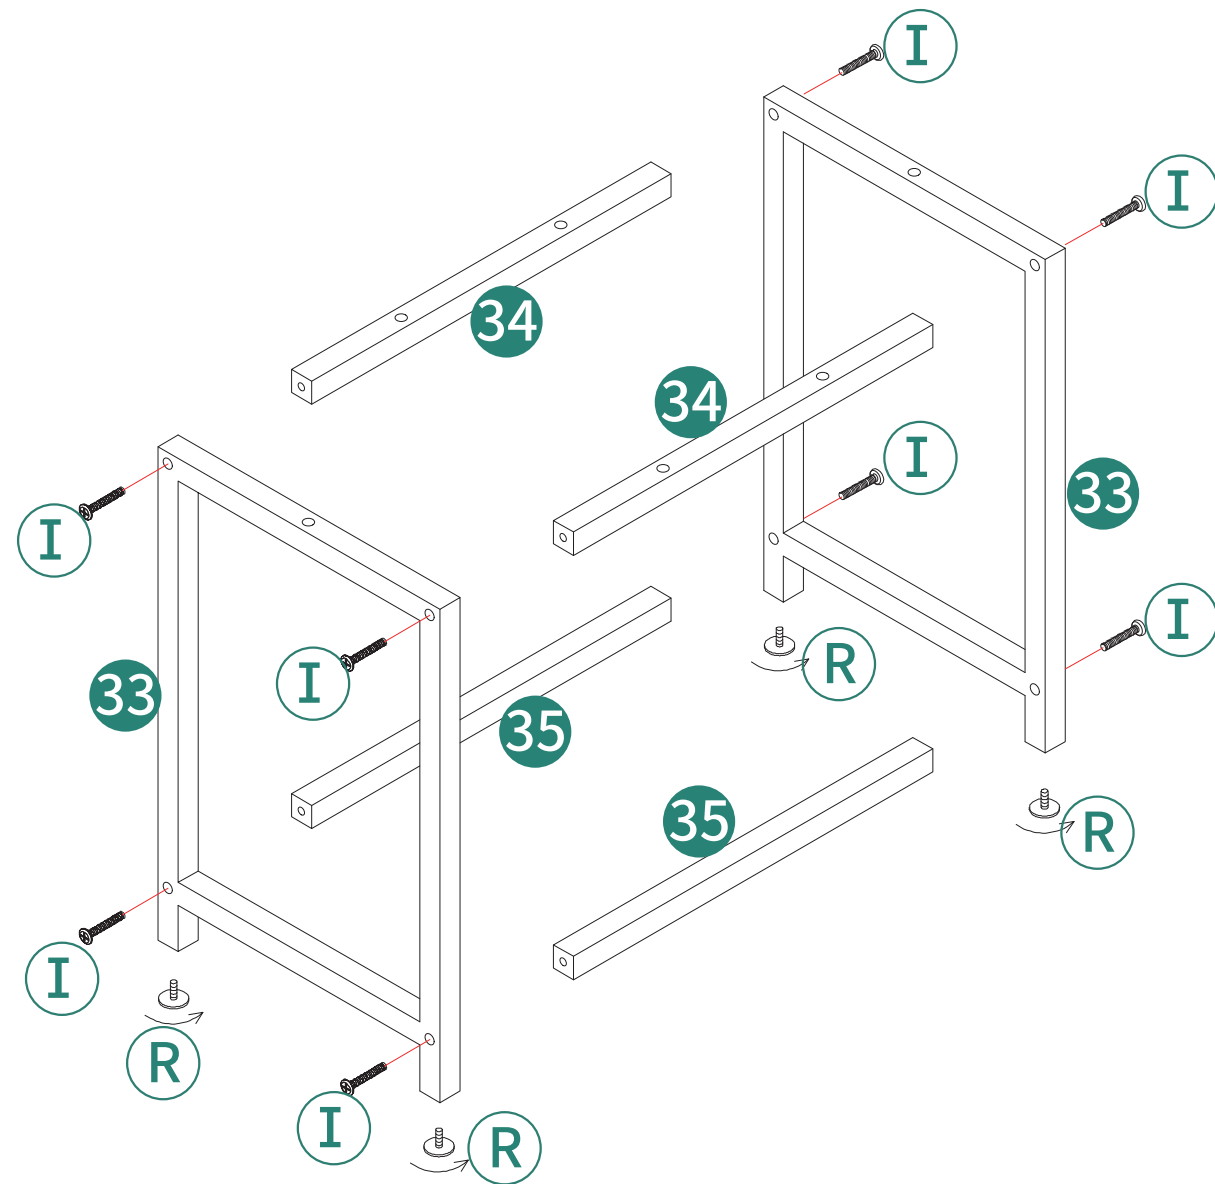

ASSEMBLY INSTRUCTIONS


24



③⑥1pc




①⑥6pcs

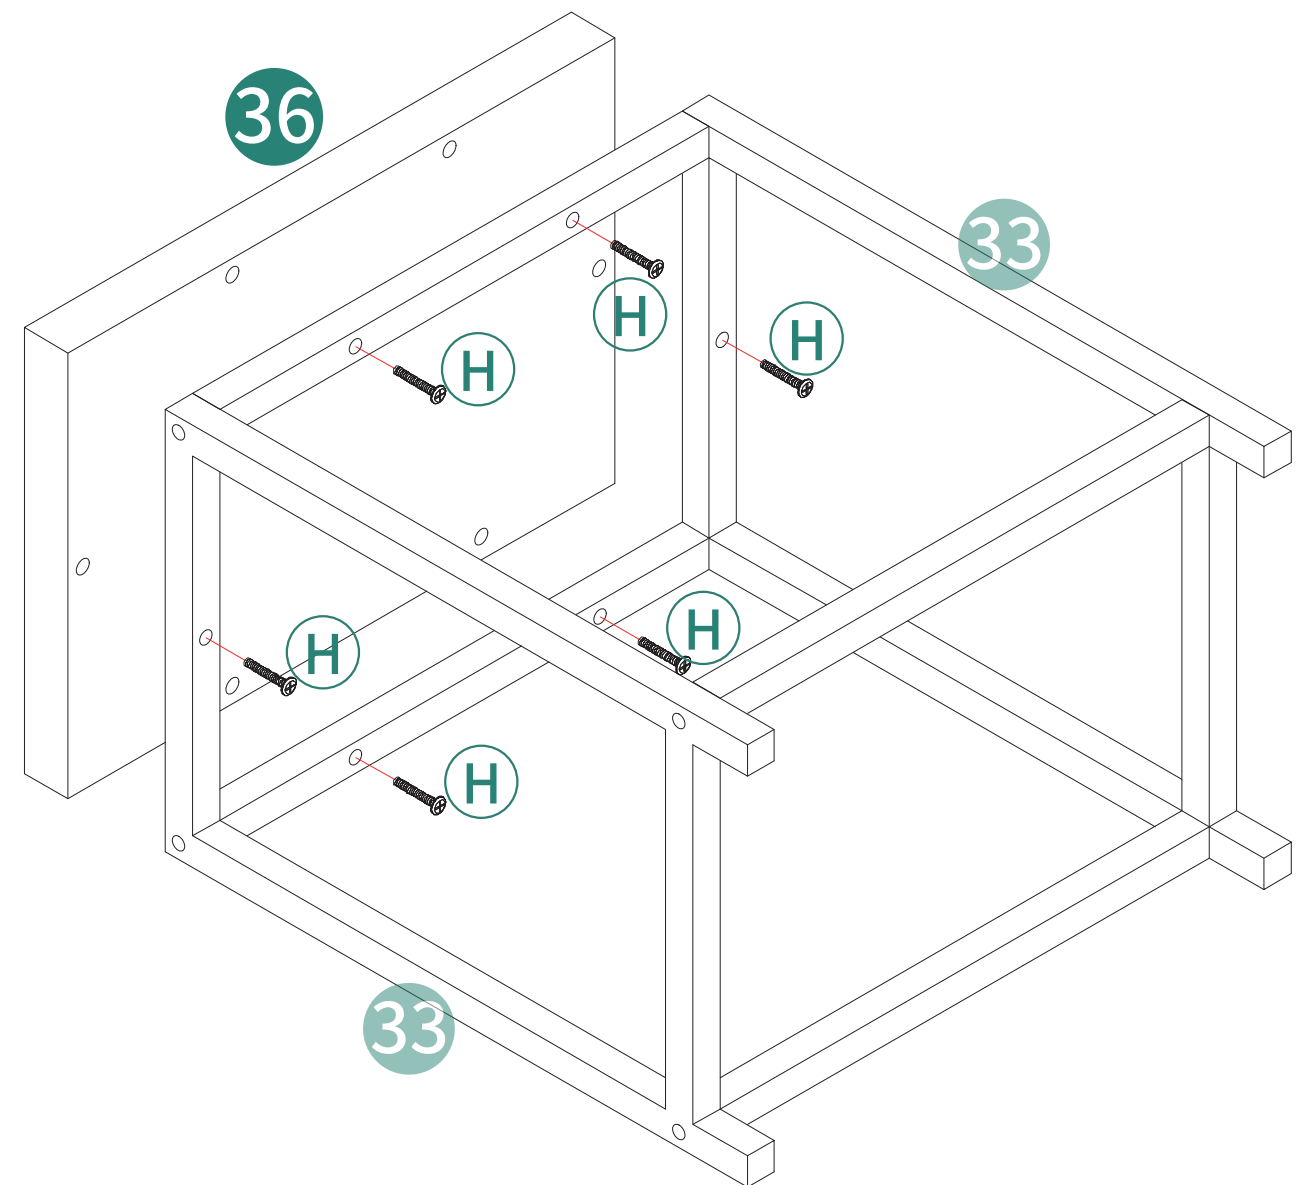


25

According to the specific usage needs, adjust the cabinet frame to switch the orientation from left to right or vice versa.

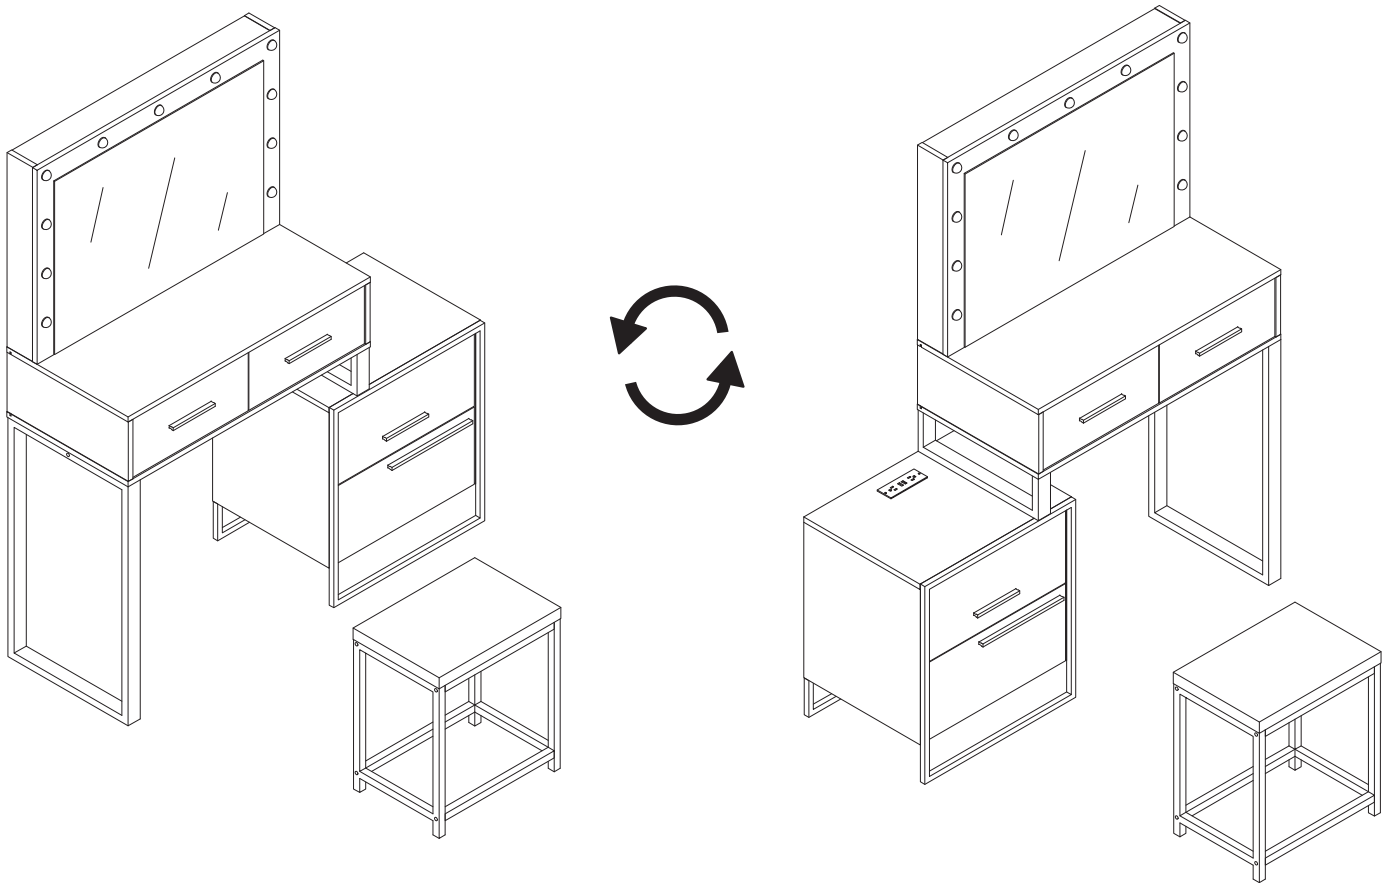

26

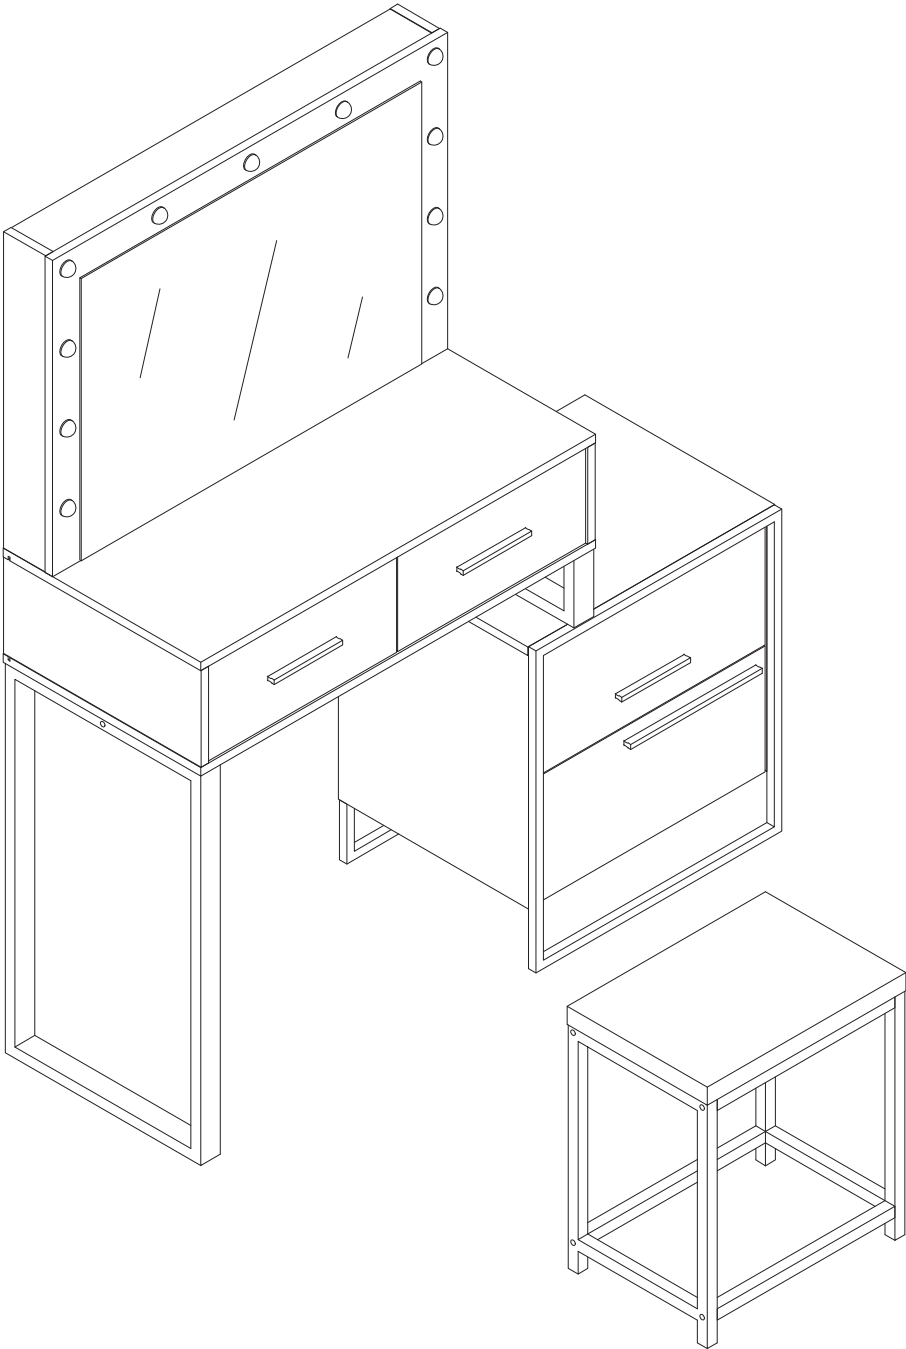

Installation Completed