


DOUBLE ROCKING CHAIR

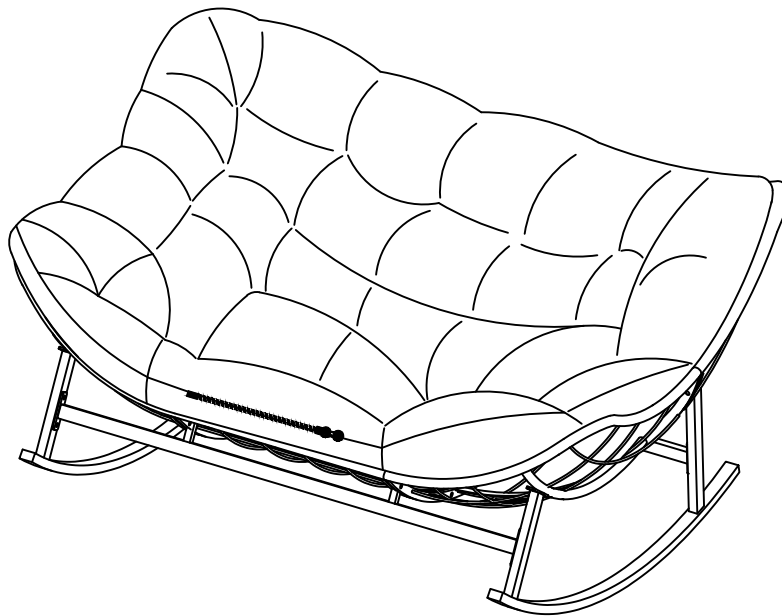

ATTENTION Section:

1. If you encounter any issues, such as missing accessories or damaged parts, please contact us immediately and include pictures










Assembly Instructions:

1. Assembly requires two people to complete.
2. For optimal assembly, we highly recommend using the provided Allen key.
If using a power tool, please set it to a low speed to prevent any damage.
3. Do not fully tighten the screws until all screws are properly aligned with their holes.



Back Cushion Notes:


1. The back cushion is vacuum-sealed. After opening the bag, allow some time and fluffing for the cushion to return to its original thickness.
2. Fluff and shake the cushion to restore its original thickness before use.

PARTS LIST OF BOX A

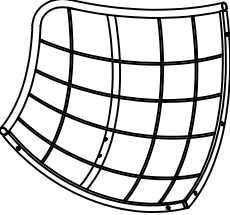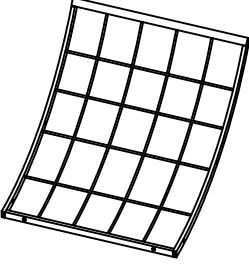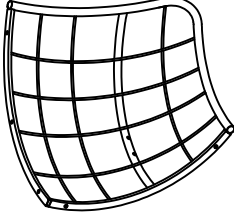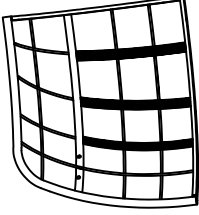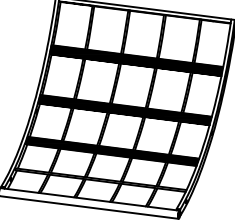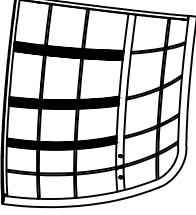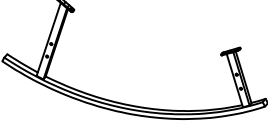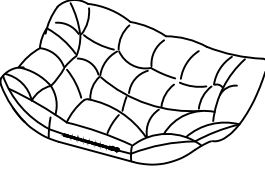

A  TOP LEFT PLATE 1pc	B  TOP MIDDLE PLATE 1pc	C  TOP RIGHT PLATE 1pc	D  LOWER LEFT PLATE 1pc
E  LOWER MIDDLE PLATE 1pc	F  LOWER RIGHT PLATE 1pc	G  LEFT LEG 1pc	H  RIGHT LEG 1pc
I  FRONT CROSSBAR 1pc	J  REAR CROSSBAR 1pc	K  SEAT CUSHION 1pc	1  M6*35 24pcs
2  M6*16 14pcs	3  M6 62pcs	4  M6 24pcs	5  M6 1pc
6  M6 1pc			


STEP 1

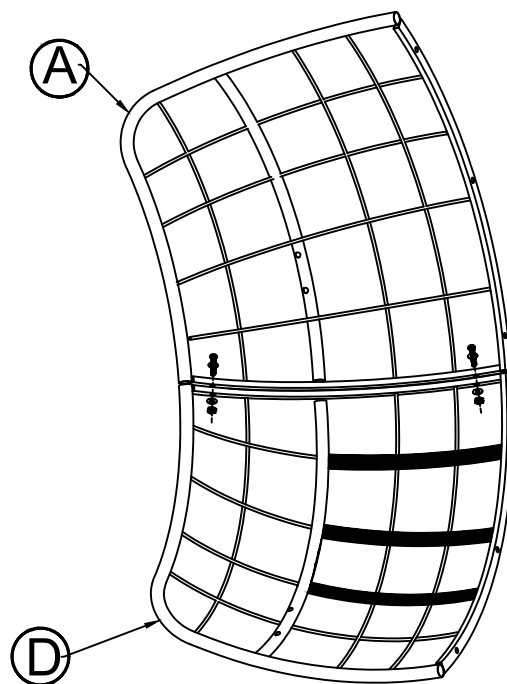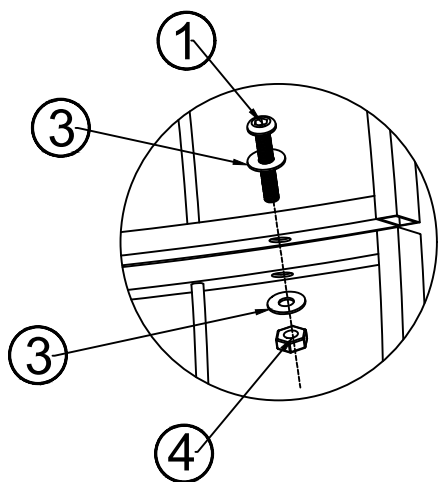

A*1pc	D*1pc	1*2pcs	3*4pcs	4*2pcs	5*1pc	6*1pc
						
		M6*35	M6	M6	ALLEN KEY M6	M6



STEP 2

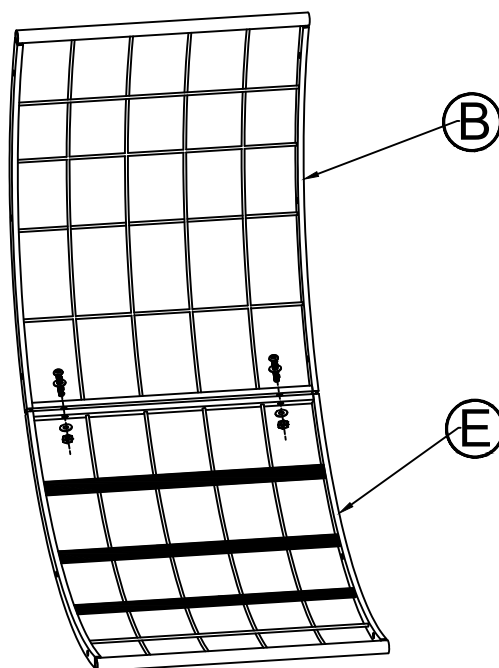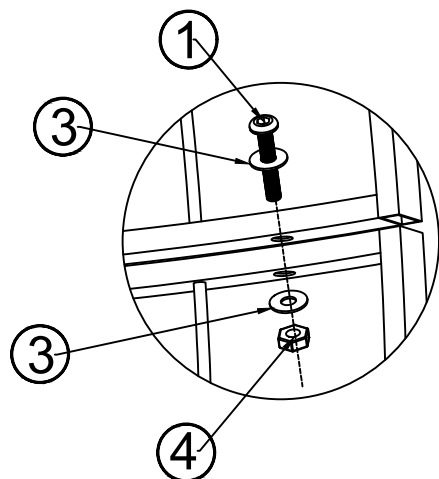

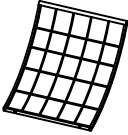B*1pc	E*1pc	1*2pcs	3*4pcs	4*2pcs	5*1pc	6*1pc
						
		M6*35	M6	M6	ALLEN KEY M6	M6

Do not fully tighten all screws until assembly is completed.

STEP 3

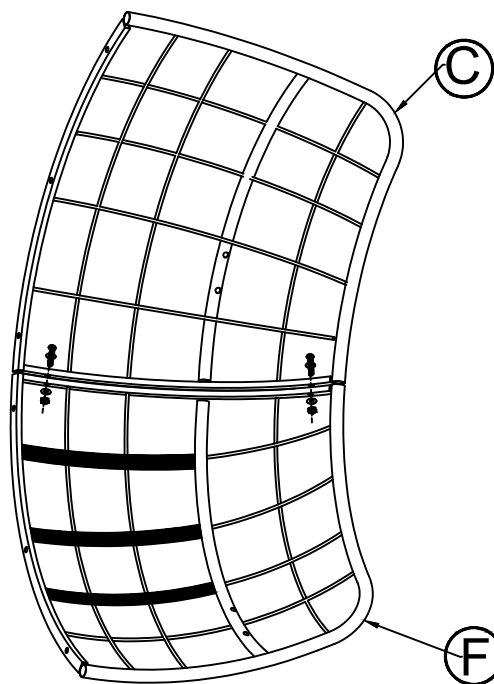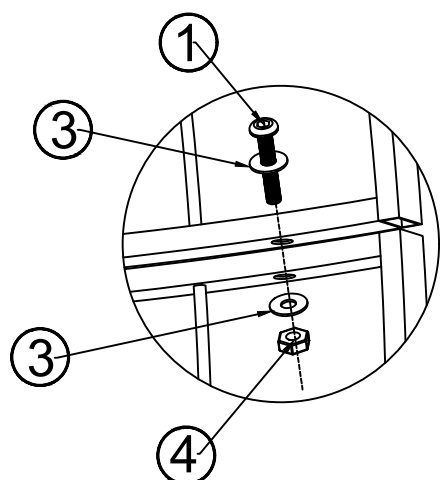

C*1pc

F*1pc



1*2pcs

3*4pcs

4*2pcs

5*1pc

6*1pc



M6*35



M6



M6





ALLEN KEY M6



M6

STEP 4

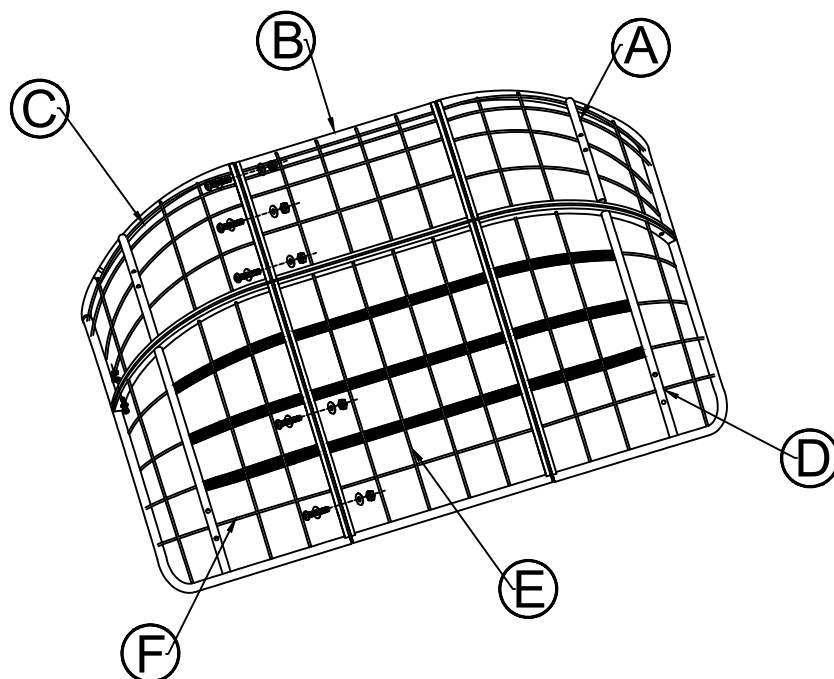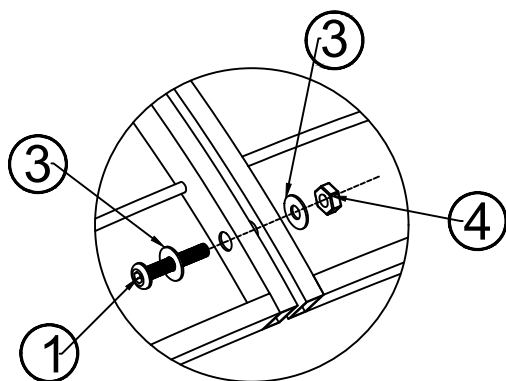

1*5pcs

3*10pcs

4*5pcs

5*1pc

6*1pc



M6*35



M6



M6




ALLEN KEY M6



M6

Do not fully tighten all screws until assembly is completed.


STEP 5

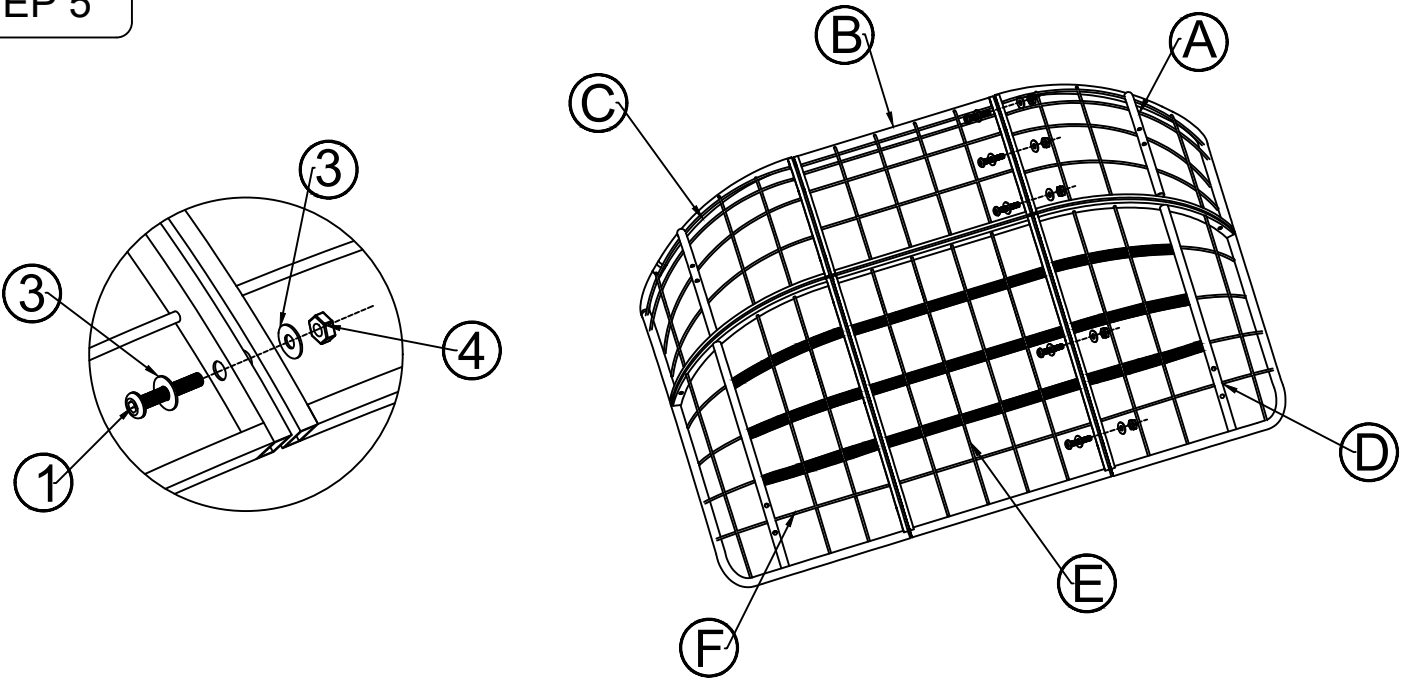

1*5pcs	3*10pcs	4*5pcs	5*1pc	6*1pc
				
M6*35	M6	M6	ALLEN KEY M6	M6

STEP 6



TIPS: Ensure you attach the FRONT side of the leg on PART H to PART F and the FRONT side of the leg on PART G to PART D.

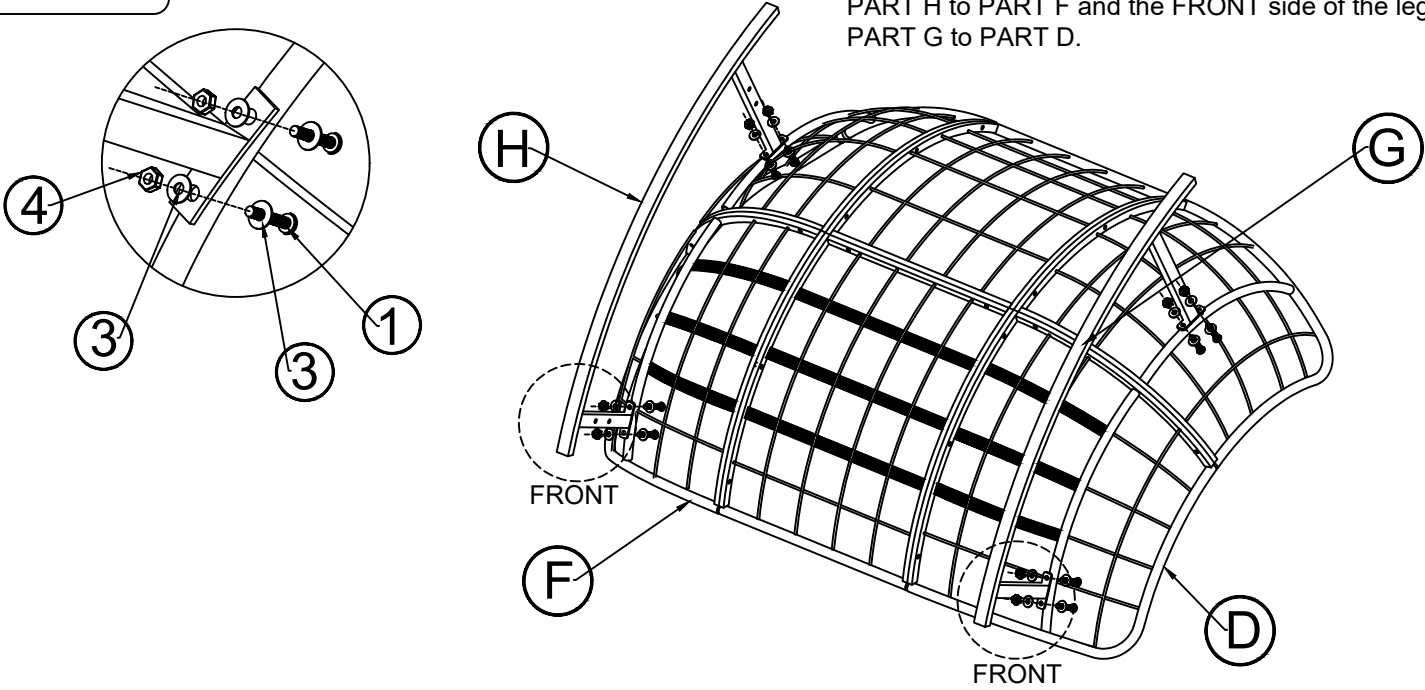

G*2pcs	H*1pc	1*8pcs	3*16pcs	4*8pcs	5*1pc	6*1pc
						
		M6*35	M6*16	M6	ALLEN KEY M6	M6

Do not fully tighten all screws until assembly is completed.

STEP 7

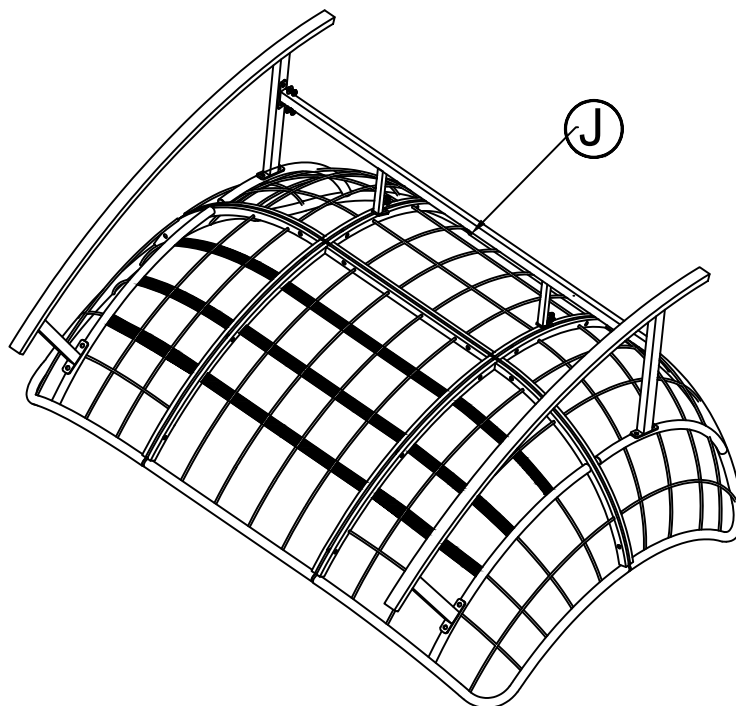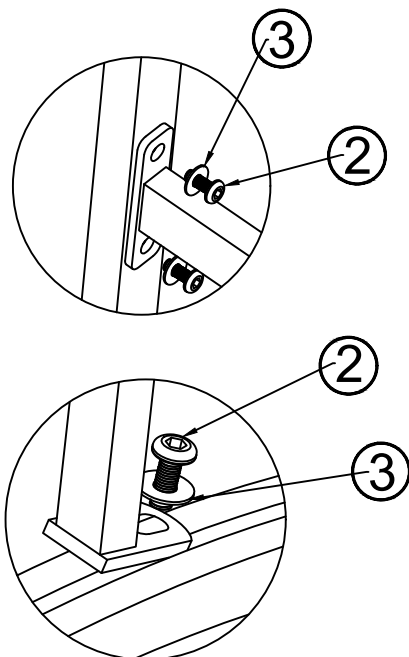

J*1pc	2*6pcs	3*6pcs	5*1pc
-------	--------	--------	-------



M6*16





M6



ALLEN KEY M6

STEP 8

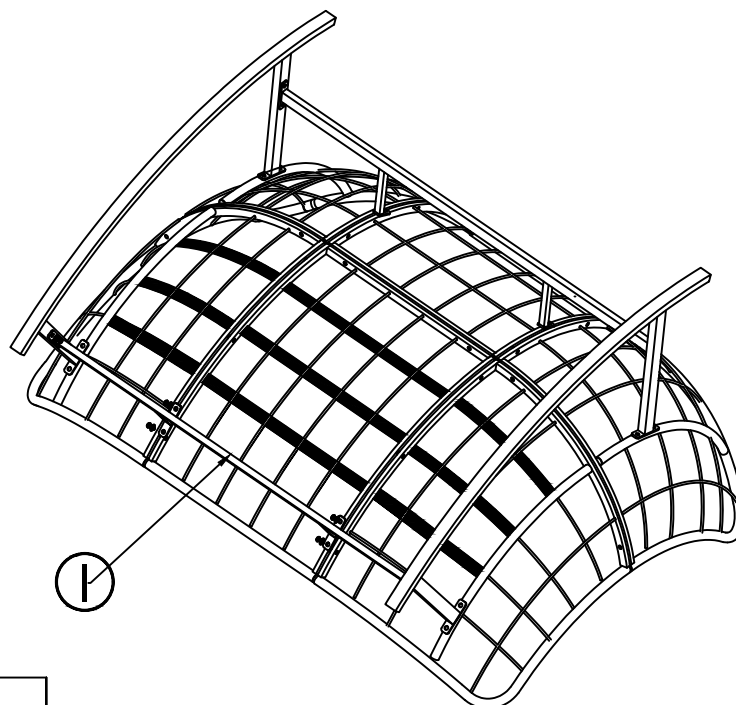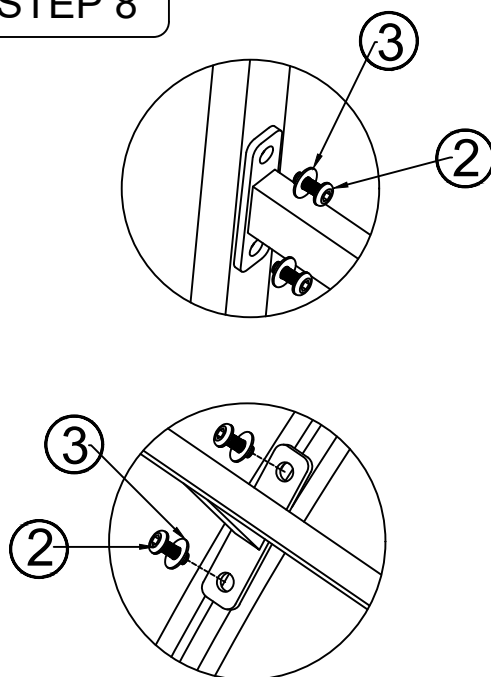

I*1pc	2*8pcs	3*8pcs	5*1pc
-------	--------	--------	-------



M6*16



M6




ALLEN KEY M6

Do not fully tighten all screws until assembly is completed.

STEP 9

Place the side with the
sponge filling onto the
seat.

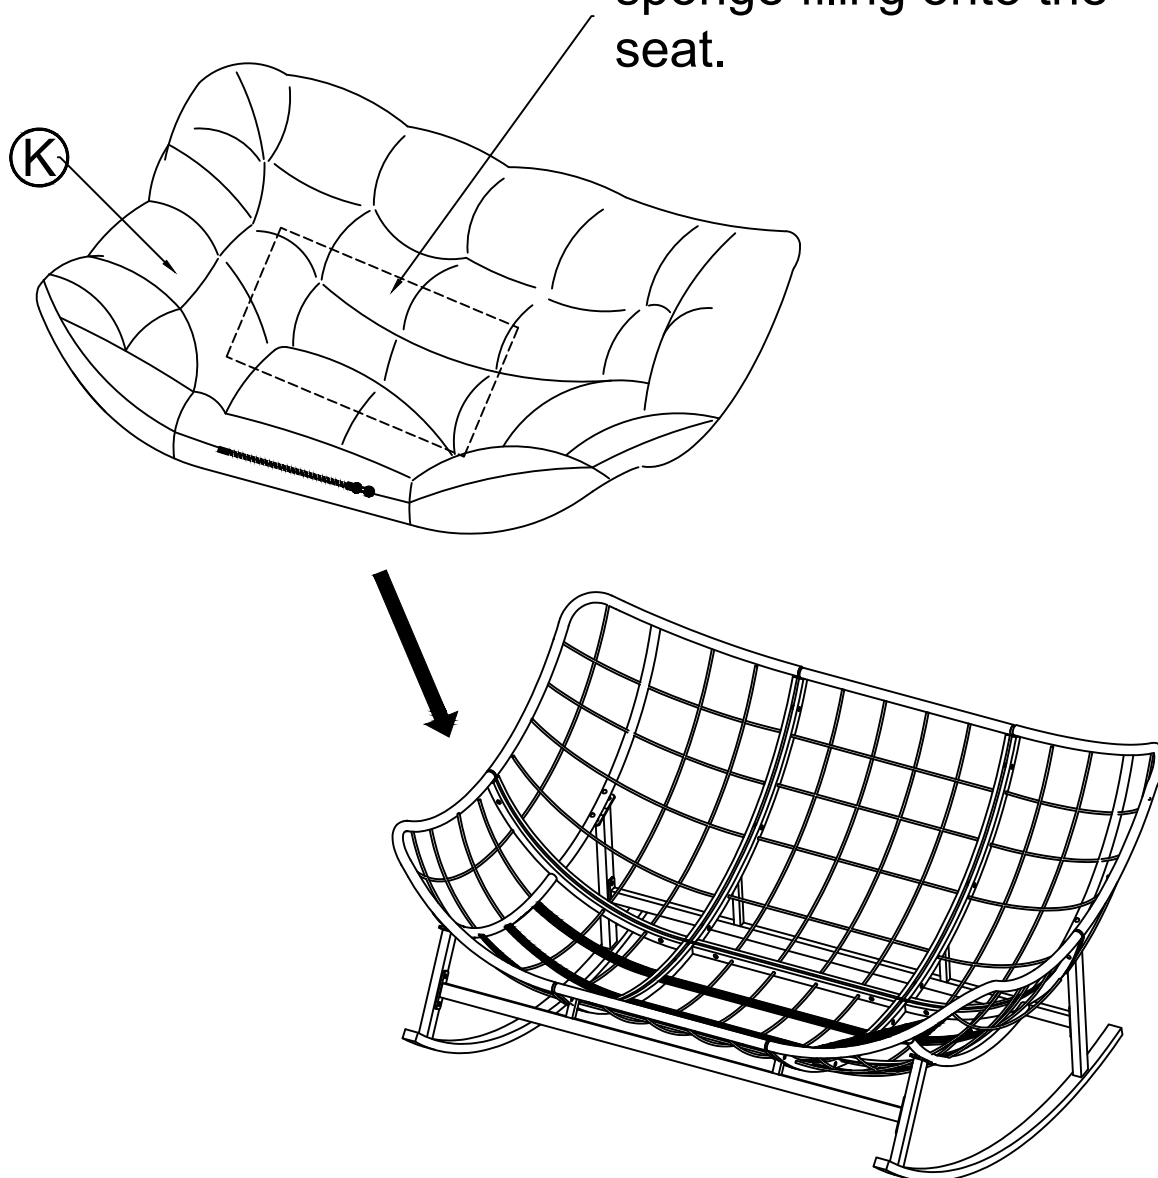

K*1pc



Do not fully tighten all screws until assembly is completed.