


Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1

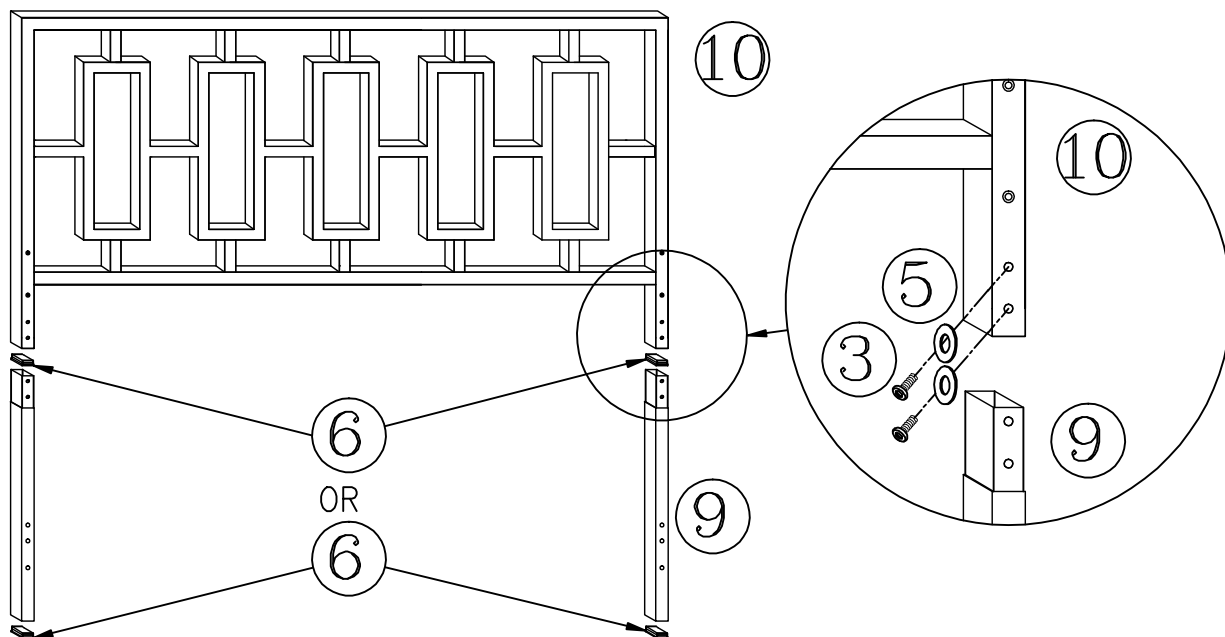

NOTE: This product can be used as Headboard only or as Headboard/Footboard bed. Insert plastic glide (6) into leg extension (9) for headboard assembly. For footboard assembly insert plastic glide (6) into bottom of panel (10) posts. See Figure 1

Step 1 Headboard assembly

- Align top reduction of extension leg (9) with bottom of panel post (10). (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to panel panel.
- Now carefully insert extension leg (9) into bottom of panel (10) posts.
- Secure leg extension leg (9) with screws (3) and washer (5) to panel (10).
- Repeat on other side of panel.

Step 2

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in leg (9). (See Figure 2)
- Align bed frame bracket over screws.
- Place a flat washer (5) first and then a nut (4) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (7) and open wrench (8).

Step 3 Footboard Assembly

- Discard Leg extension (9) for footboard attachment to frame.
- Position panel (10) and align holes in the post with holes in the frame bracket. (See Figure 3)
- Place washer (5) over on each screw (2). Insert through bracket and into panel (10) post. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench.

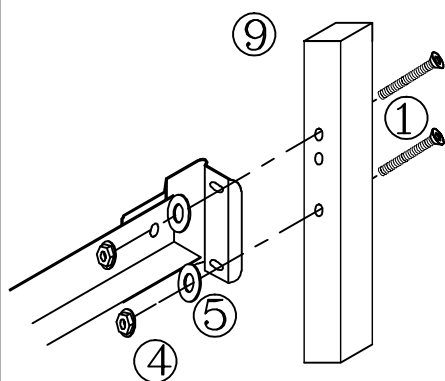


FIGURE 2

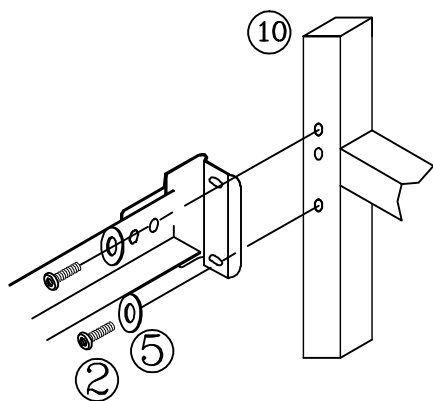


FIGURE 3