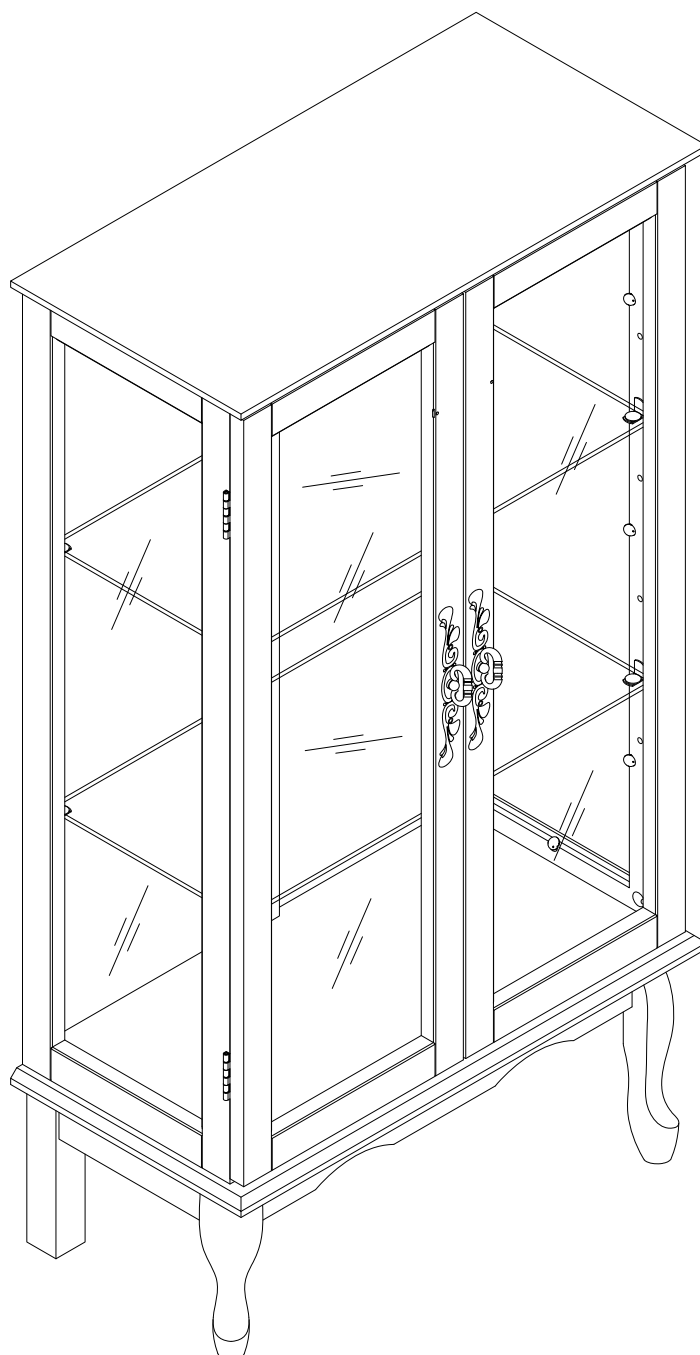


2 Doors Glass Cabinet

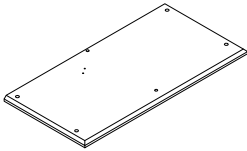
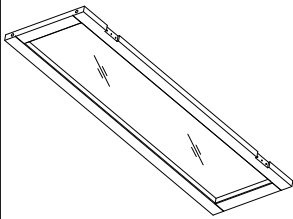
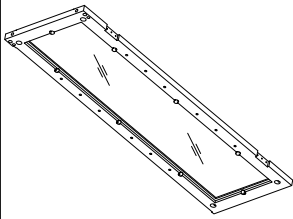


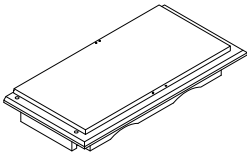
Assembly Instruction









ASSEMBLY INSTRUCTION

Page 2 of 12

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Left side		1
3	Right side		1
4	Front crosspiece		1
5	Back crosspiece		1
6	Base		1
7	Front leg		2
8	Back leg		2

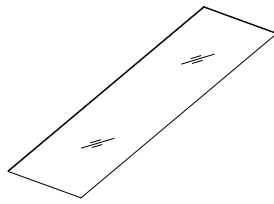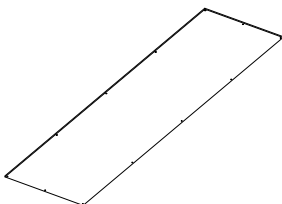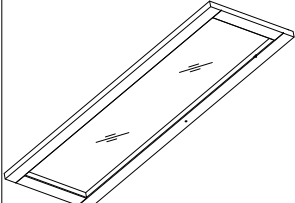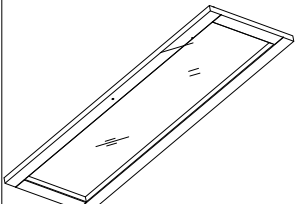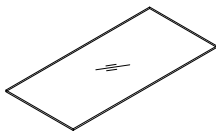
Part List:

ITEM	DESCRIPTION	PART	QTY
9	Vertical bar		1
10	Mirror		2
11	Back panel		2
12	Left door		1
13	Right door		1
14	Shelf glass		2
15	Lamp unit		1
16	Lamp Bulb	 120V 4W Type T Bulb	1

MADE IN CHINA

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight.
Failure to do so may result in stripping the screw.

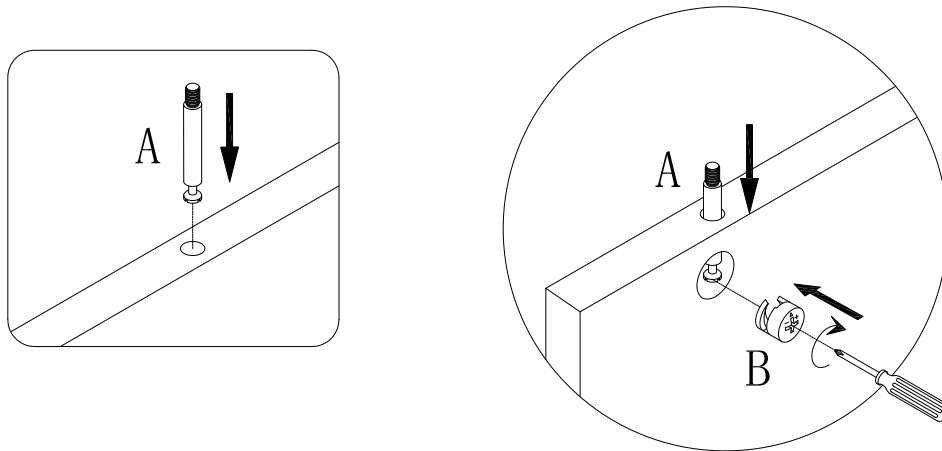Guideline For Assembling of Cam Lock(A & B)



Screw camlock bolt (A) to wood part.

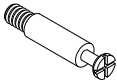

Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.



ASSEMBLY INSTRUCTION

Page 3 of 12

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		13
B	Camlock		13
C	Wooden dowel	 Φ8*30mm	6
D	Bolt	 Φ1/4" * 1 1/2"	9
E	Lock washer		9
F	Flat washer		9
G	Allen wrench		1
H	Metal plate		2
I	Handle		2
J	Machine screw	 Φ5/32 * 3/4"	2

Hardware List:

ITEM	DESCRIPTION	PART	QTY
K	Wood screw	 Φ3*12mm	28
L	Hinge		4
M	Connecting slice		2
N	Round head screw	 Φ3*12mm	4
O	Back screw	 Φ3*12mm	26
P	Shelf support		9
Q	Safety wall strap		1
R	Plastic anchor		1
S	Mounting screw	 Φ4*38mm	1
U	Back screw	 Φ3*15mm	1
V	Wooden dowel	 Φ6*30mm	4

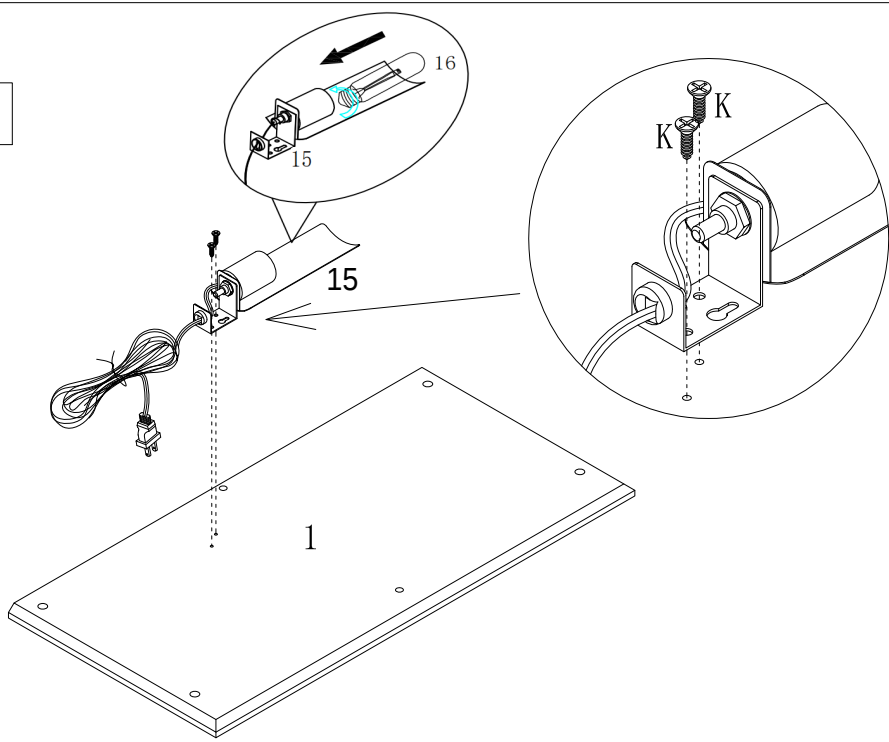
Tip: It is recommended to keep all hardware in a box to avoid loss during installation.

MADE IN CHINA

ASSEMBLY INSTRUCTION


STEP 1

K:  2PCS




STEP 2

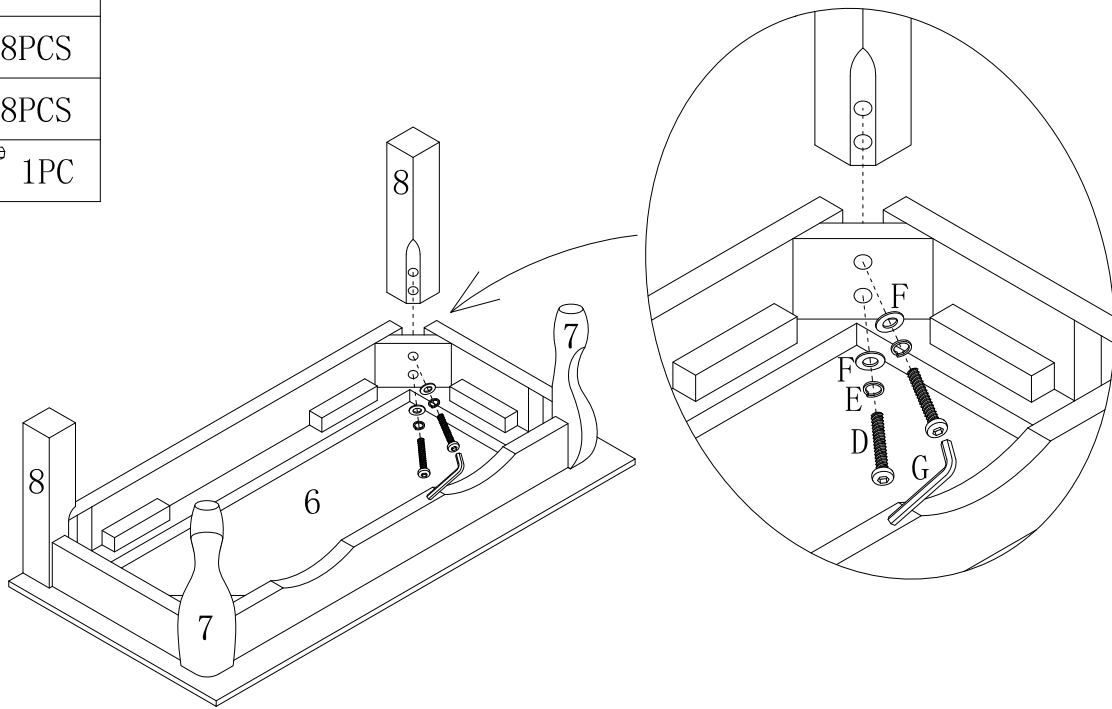
D:  8PCS
E:  8PCS
F:  8PCS
G:  1PC




ASSEMBLY INSTRUCTION


STEP 3

A:		2PCS
B:		2PCS
C:		2PCS

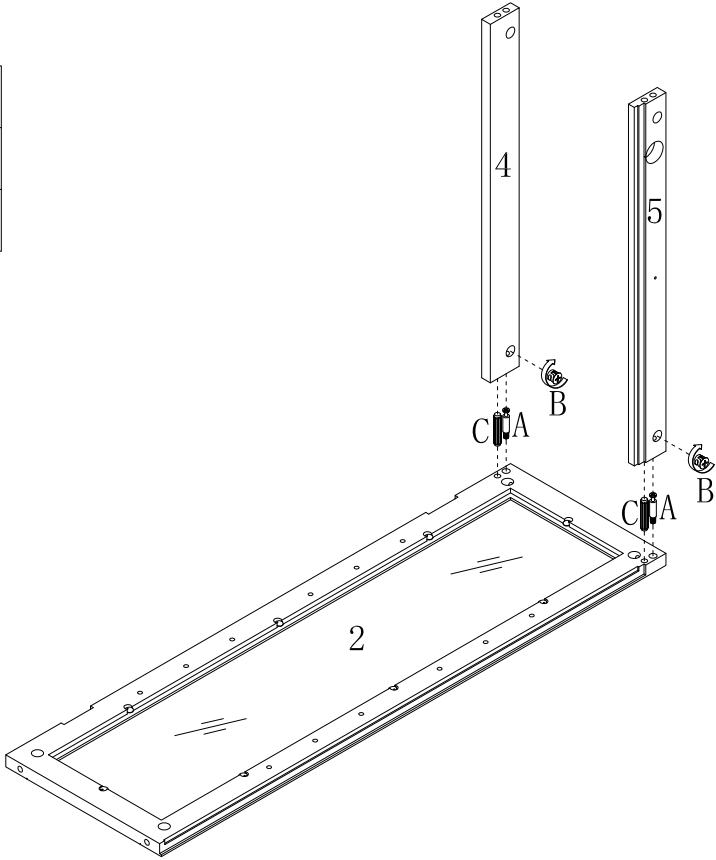


STEP 4


A:		2PCS
B:		2PCS
C:		2PCS

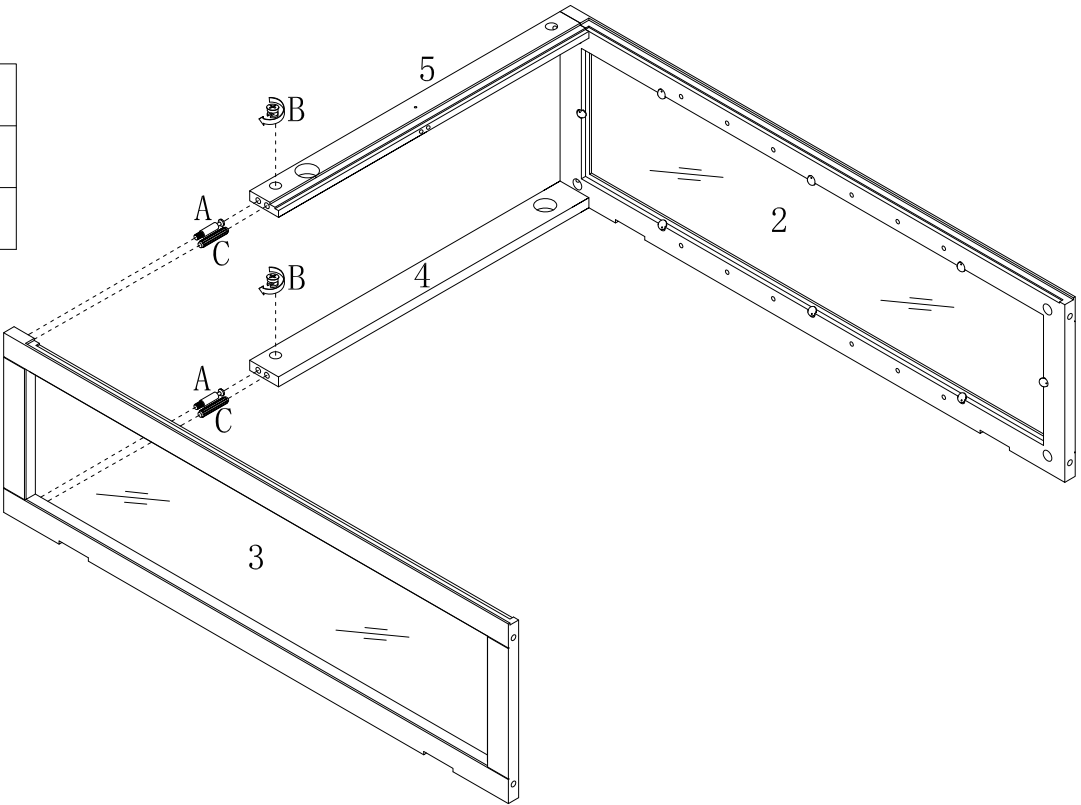


ASSEMBLY INSTRUCTION

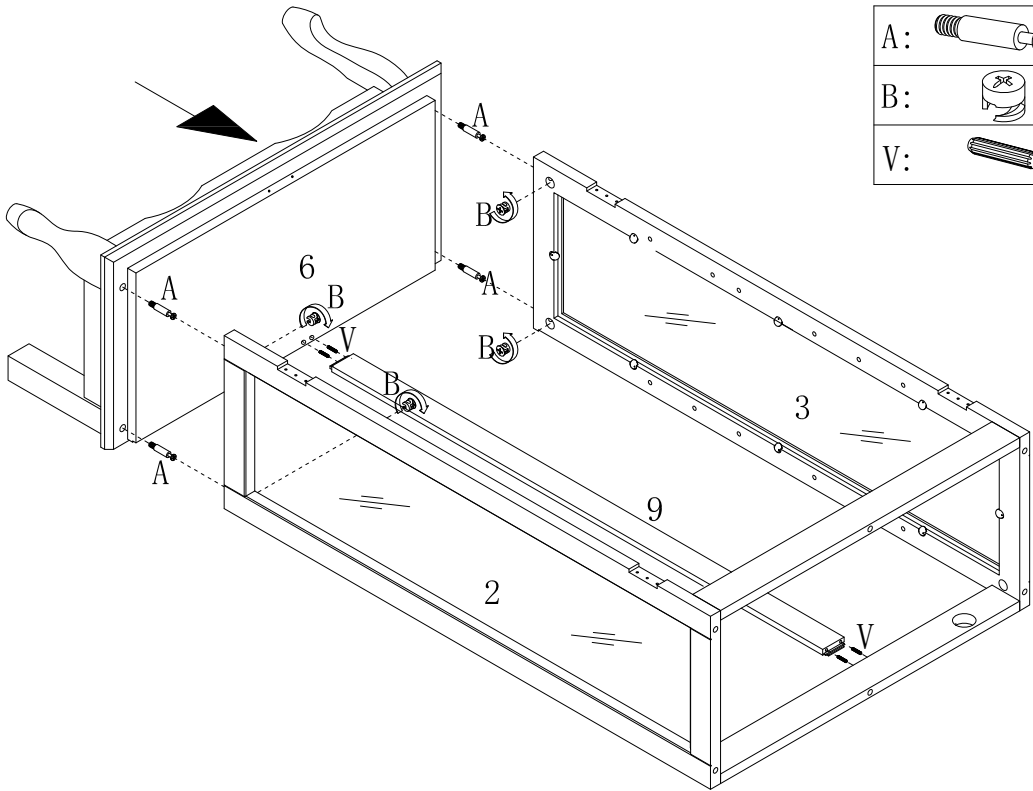STEP 5



A:		4PCS
B:		4PCS
V:		4PCS

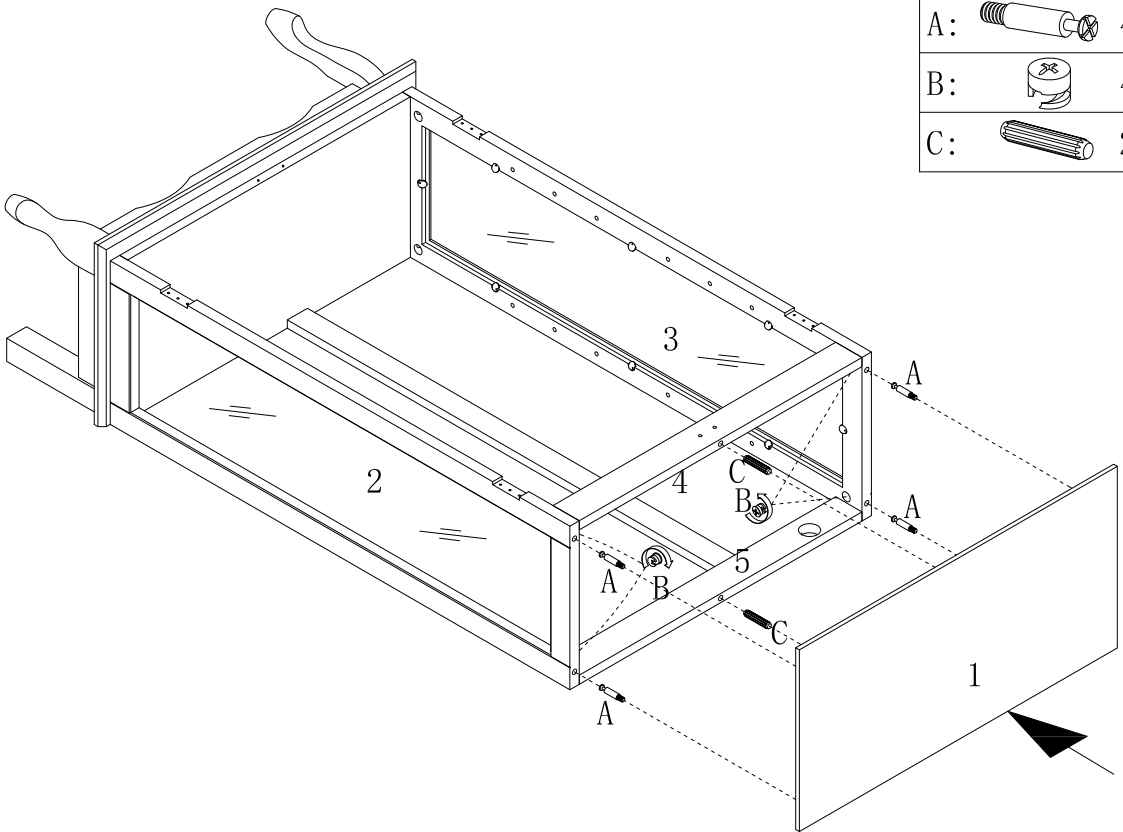STEP 6





A:		4PCS
B:		4PCS
C:		2PCS

STEP 7

F:		1PC
M:		2PCS
N:		4PCS
O:		23PCS
Q:		1PC
U:		1PC

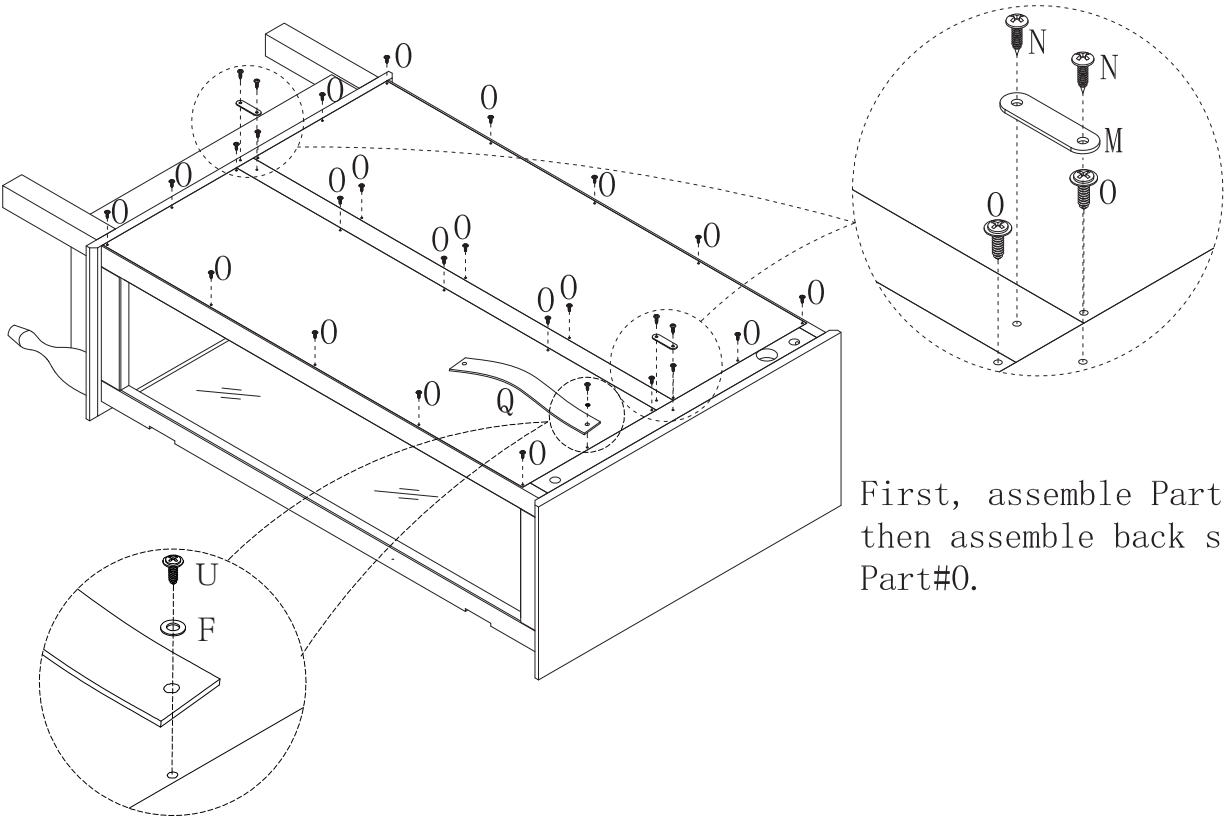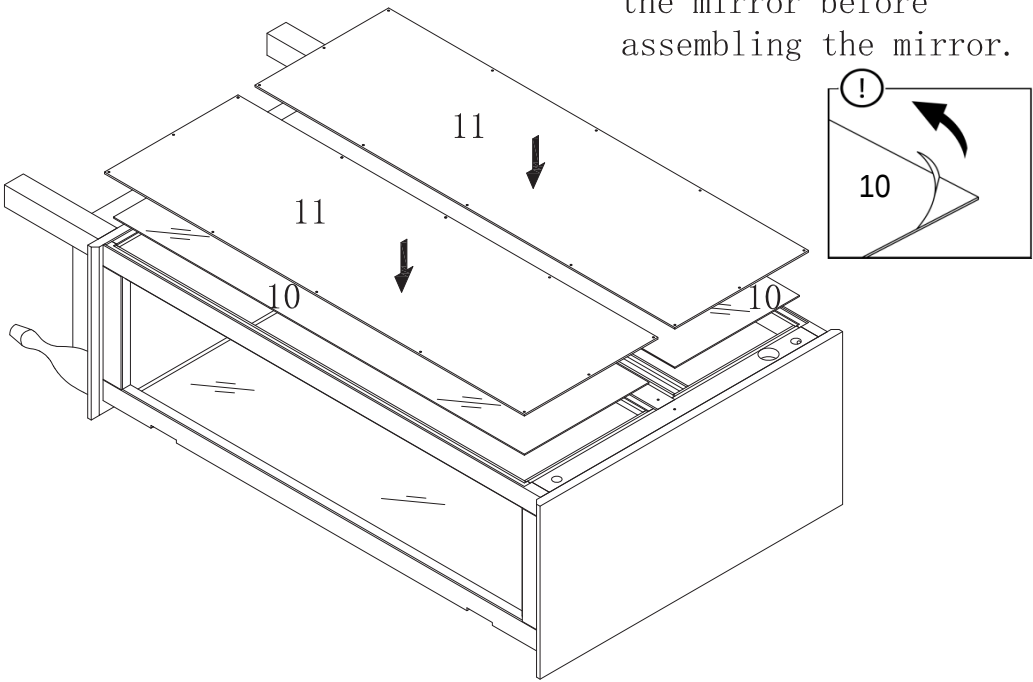Please tear off the protective film of the mirror before assembling the mirror.




First, assemble Part#N & M, then assemble back screws Part#O.

ASSEMBLY INSTRUCTION


STEP 8

H:		2PCS
I:		2PCS
J:		2PCS
K:		12PCS
L:		4PCS

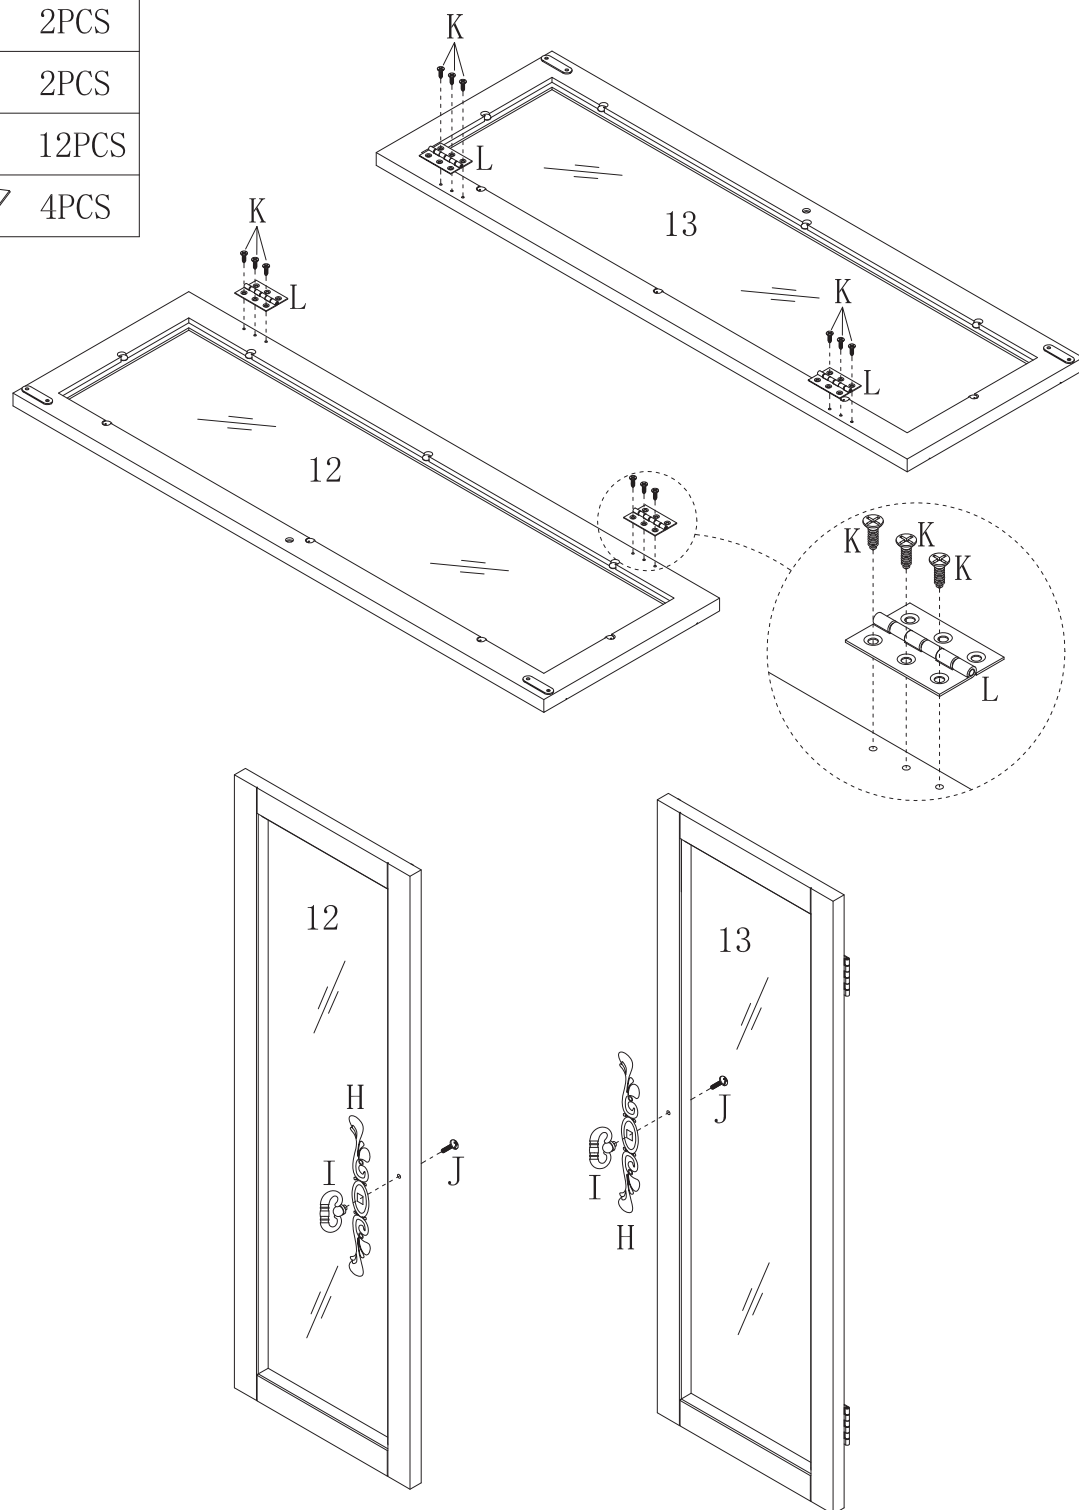


STEP 9

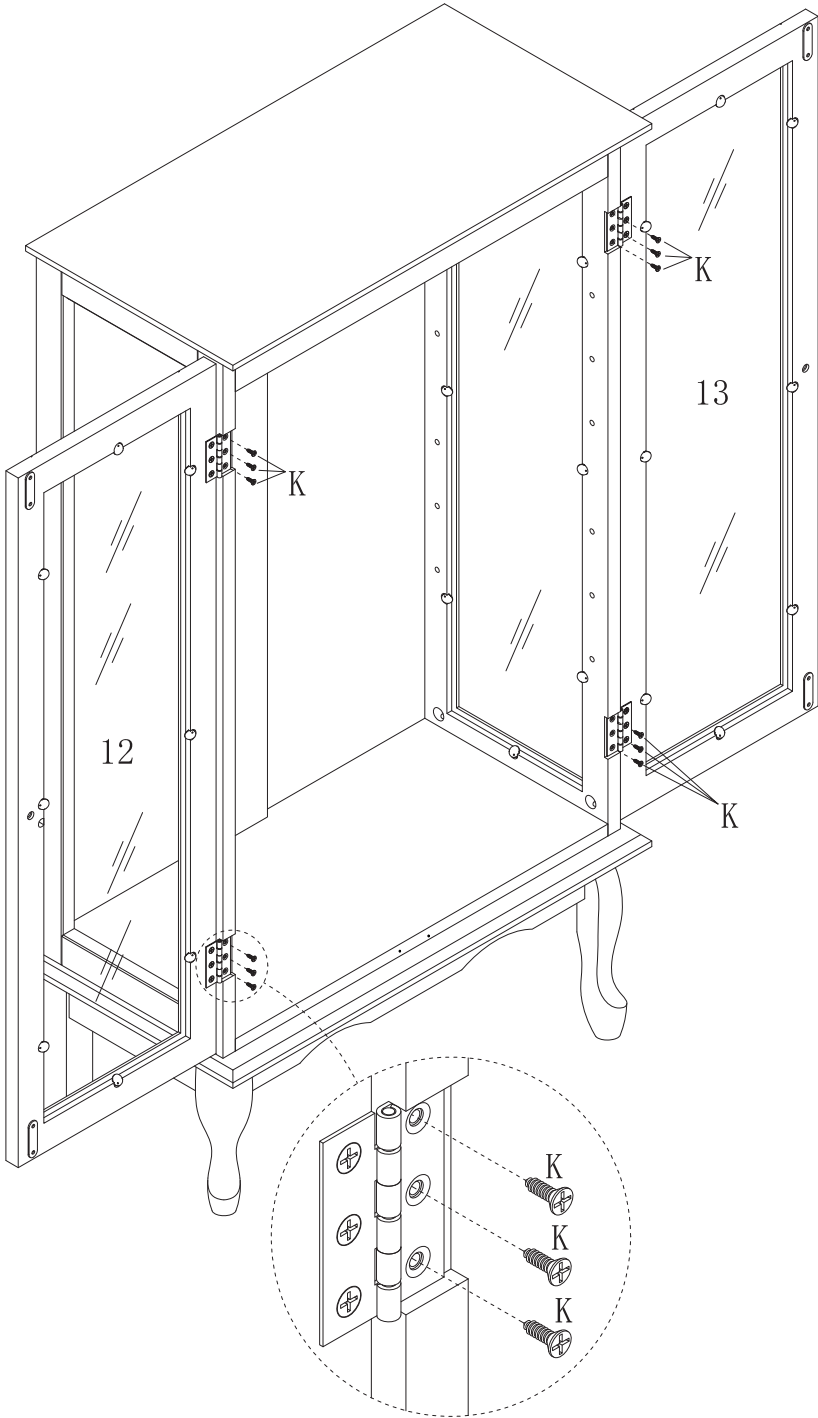K:  12PCS



STEP 10

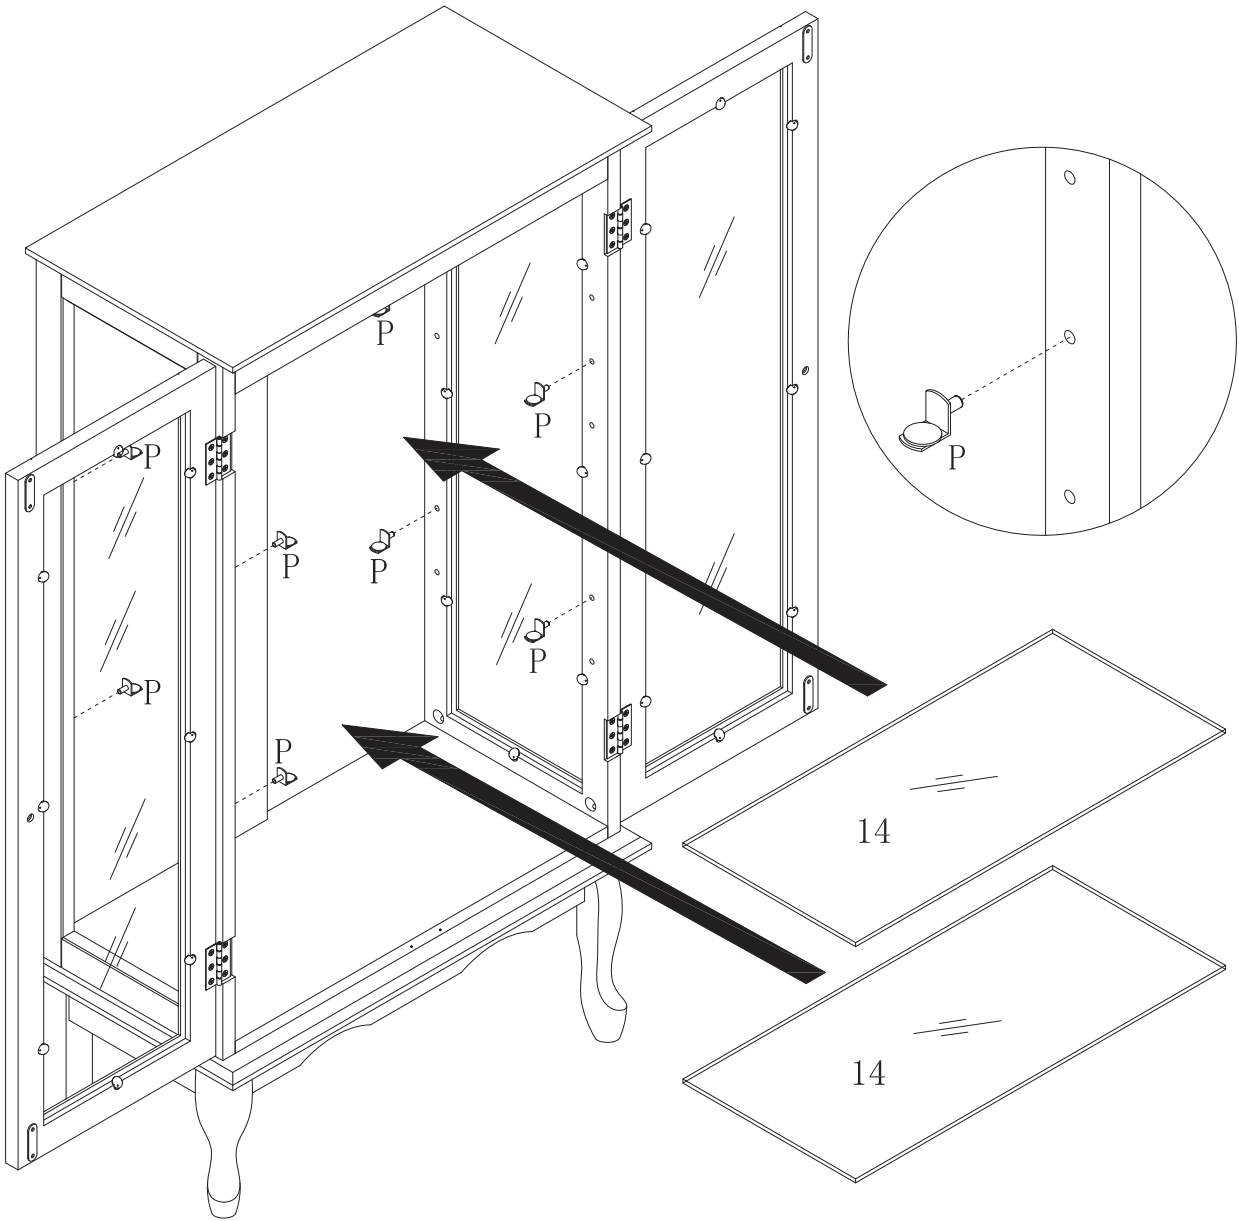P:  8PCS



STEP 11

F:		1PC
R:		1PC
S:		1PC

