



Item NO.: MC901B


Hardware

NO.	Draw	QTY
A	 45 degree wall hanging strip	2
B	 Plastic anchor(Ø6mm)	4
C	 (Ø4 x 45mm) Screws for fix on the wall	4

Dimensions

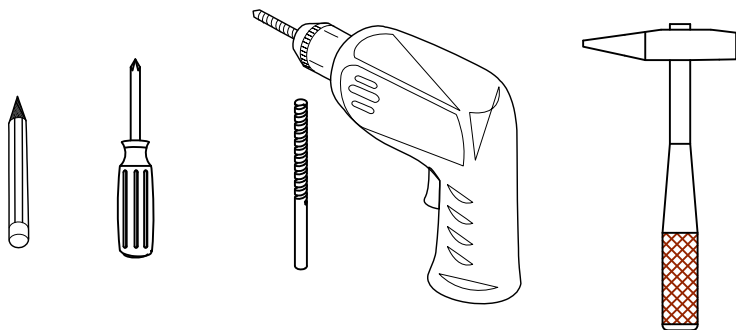


Dimensions

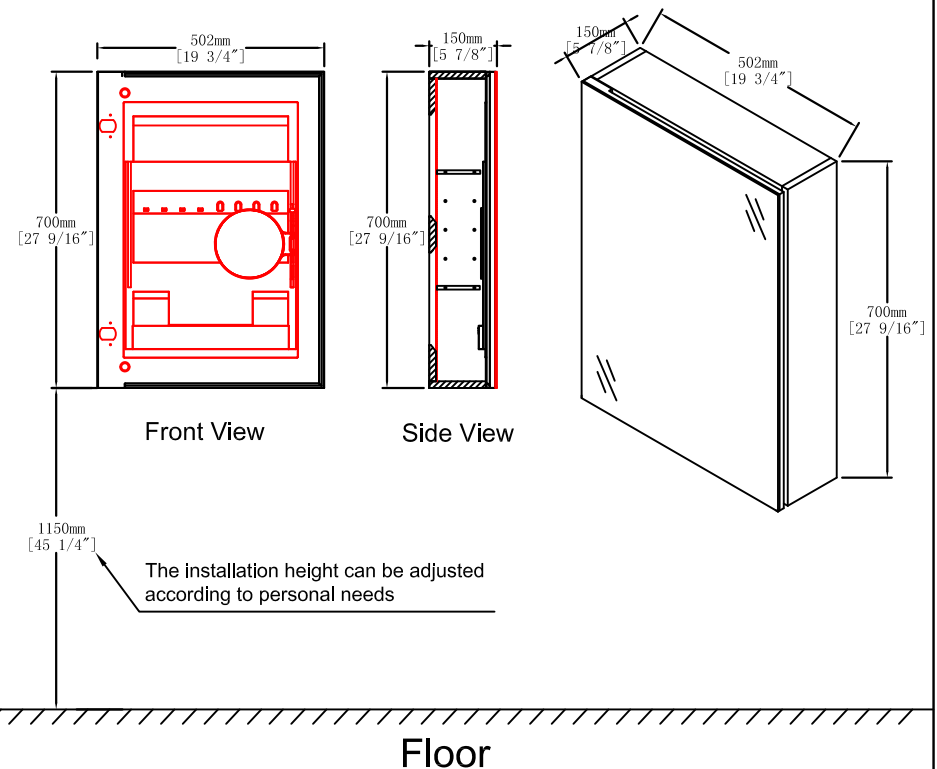


CARE CLEANING AND MAINTENANCE

1. Dust regularly with a soft , dry cloth.
2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
3. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
4. Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Finished

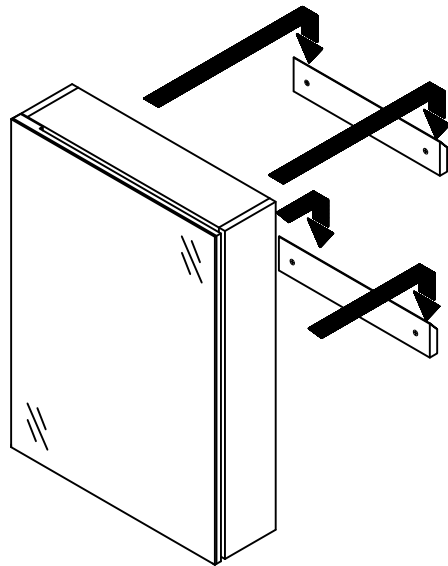



Step 1




Tool

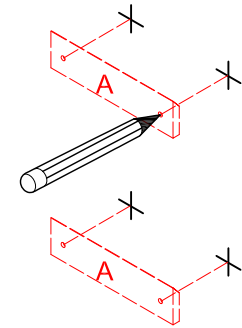


Step 2

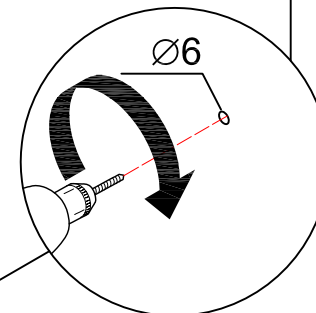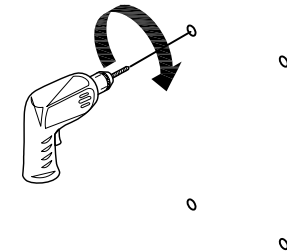

Step 3

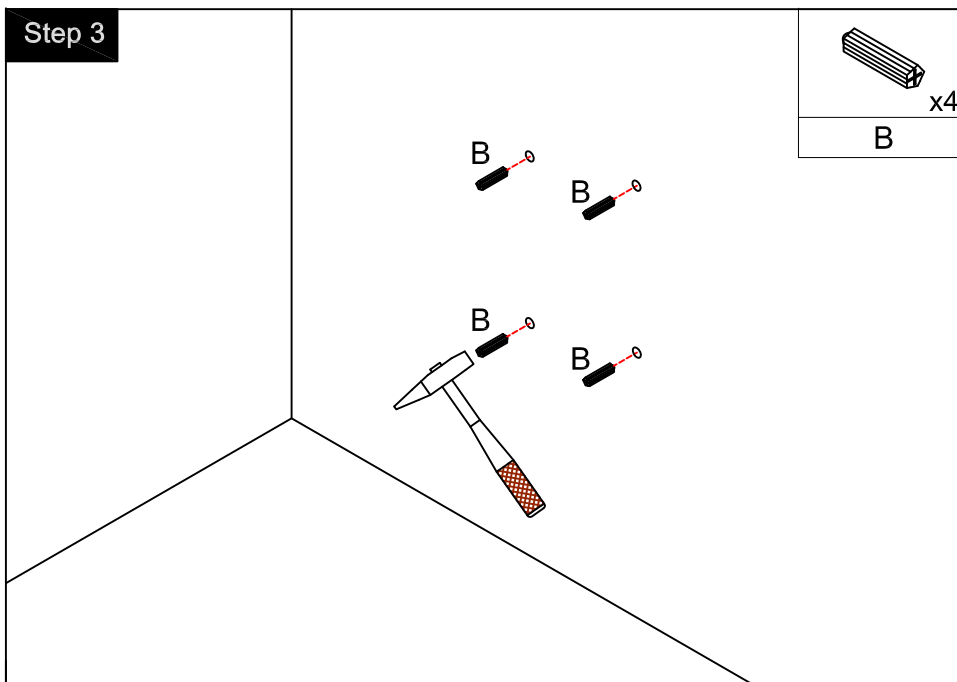


Step 4

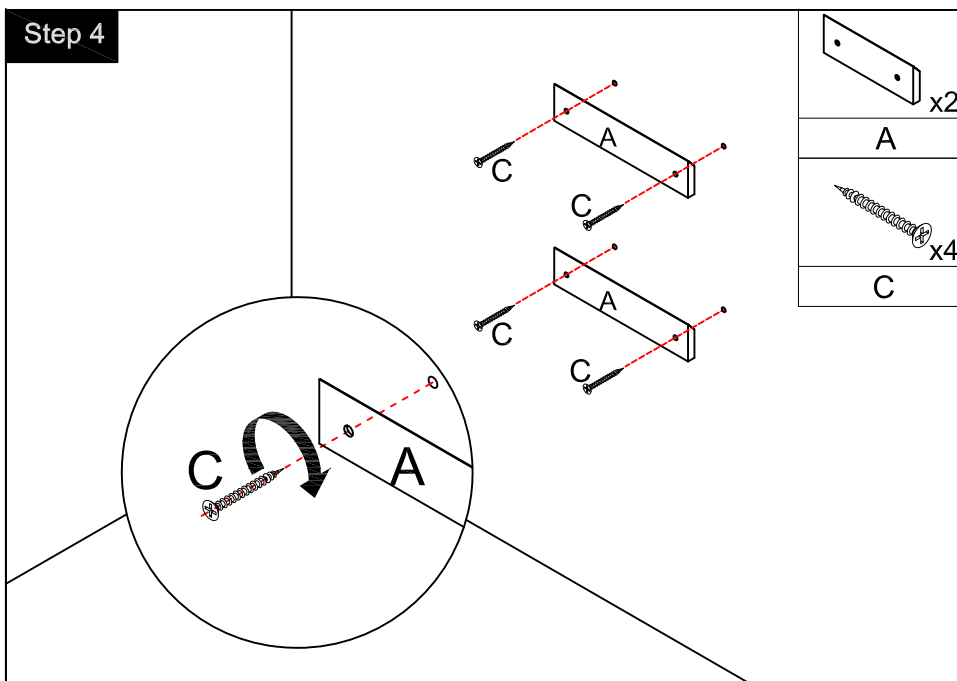


Step 5

Note: The installation direction of the side cabinet can be adjusted according to your own needs, and it can be installed with a left or right door.

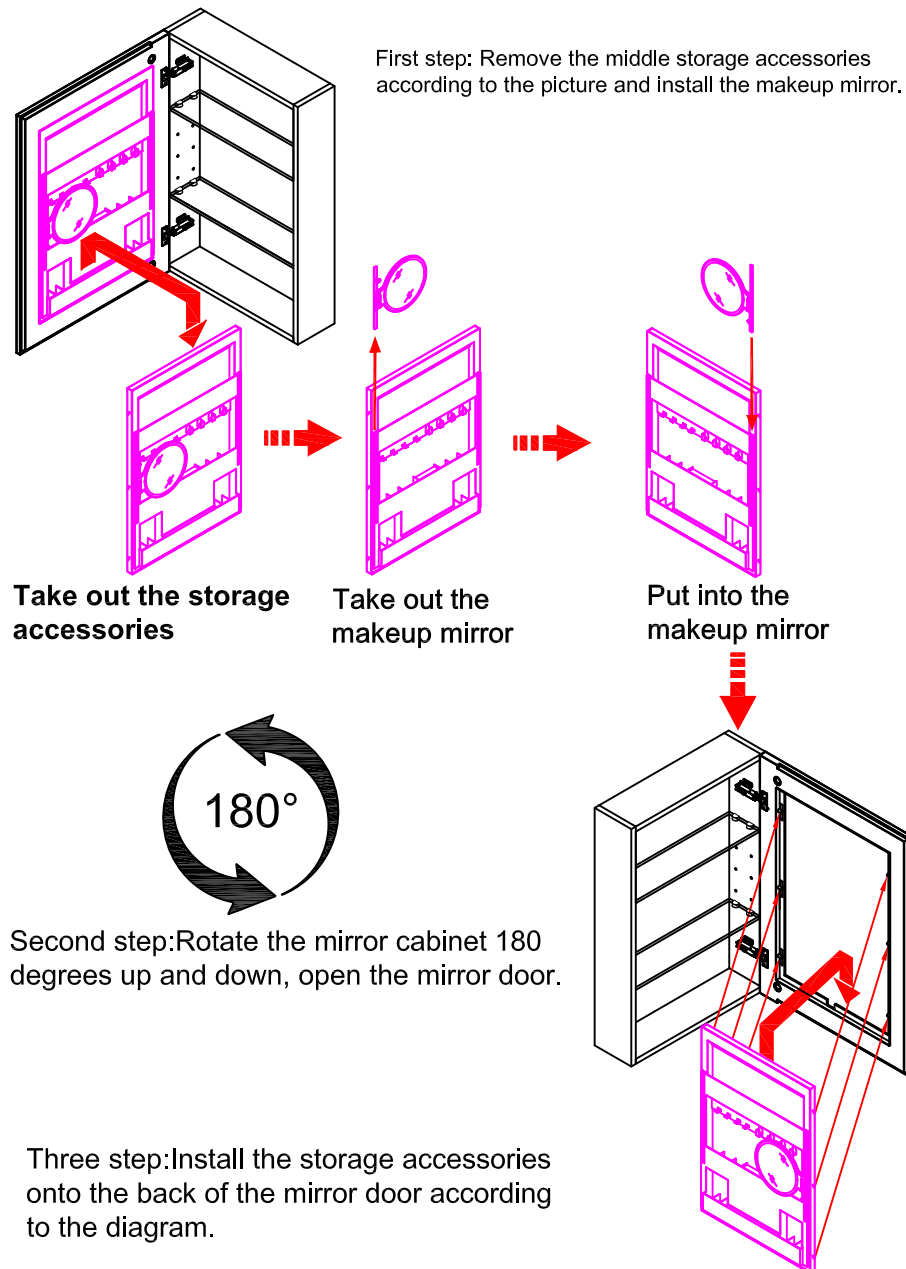


Item NO.: MC901C


Hardware

NO.	Draw	QTY
A	 45 degree wall hanging strip	2
B	 Plastic anchor(Ø6mm)	4
C	 (Ø4 x 45mm) Screws for fix on the wall	4

Dimensions

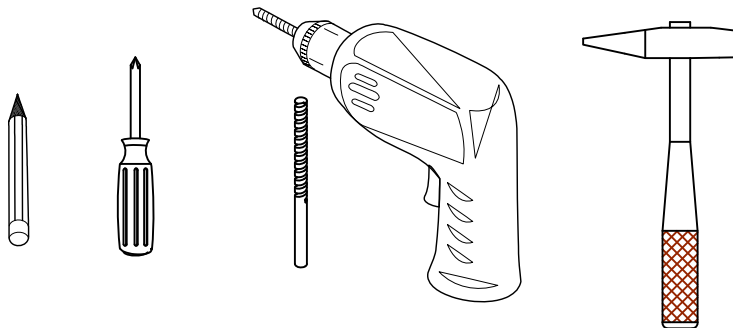


Dimensions

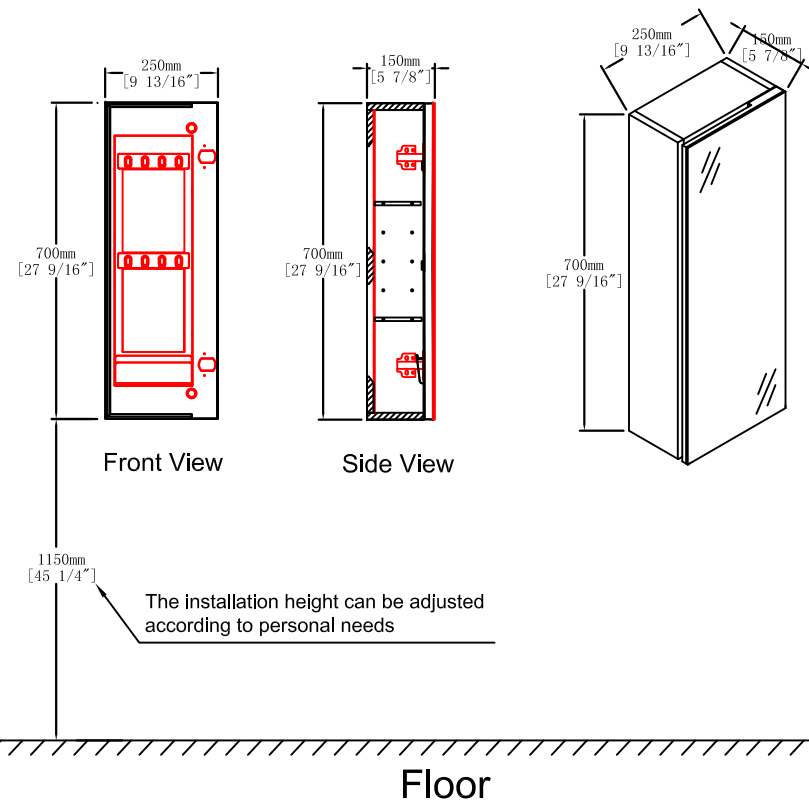



CARE CLEANING AND MAINTENANCE

1. Dust regularly with a soft , dry cloth.
2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
3. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
4. Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

Finished


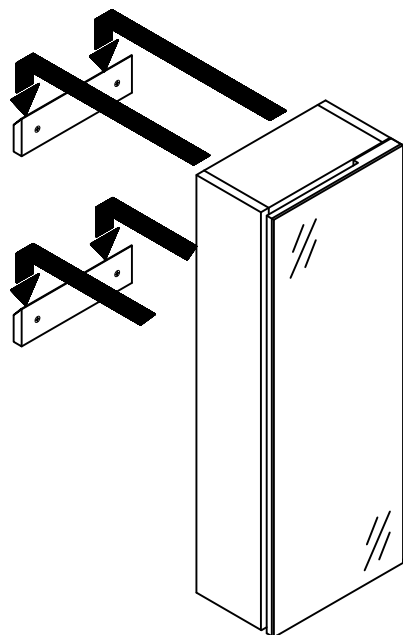


Step 1

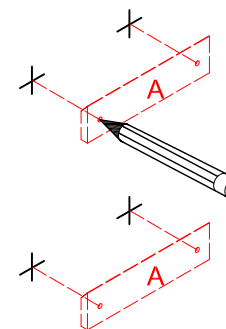


Tool


Step 2

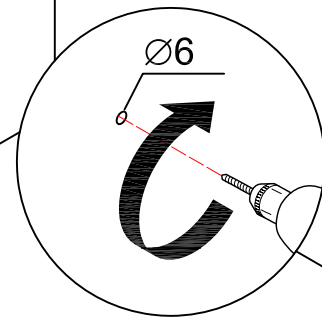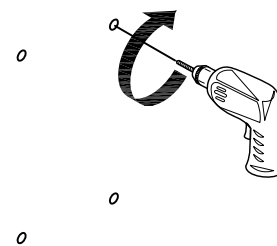

Step 3

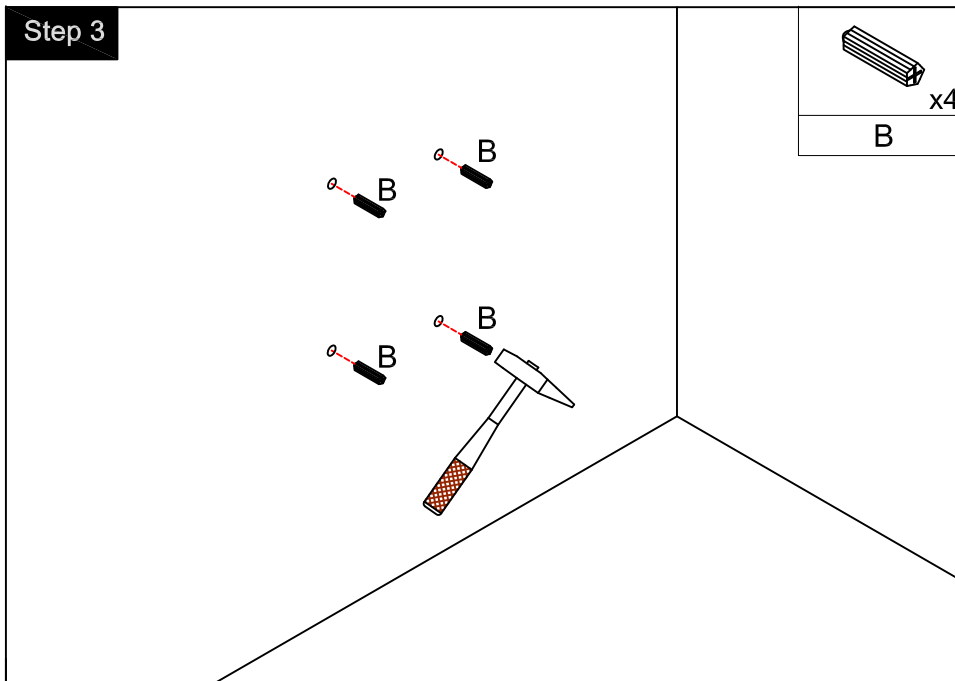


Step 4

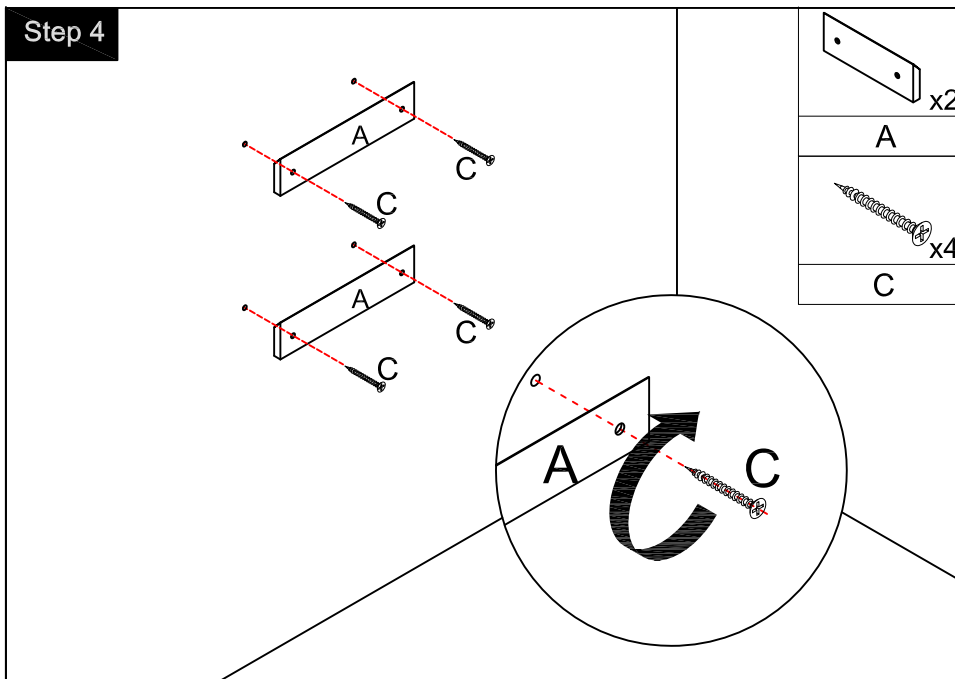


Step 5


Note: The installation direction of the side cabinet can be adjusted according to your own needs, and it can be installed with a left or right door.

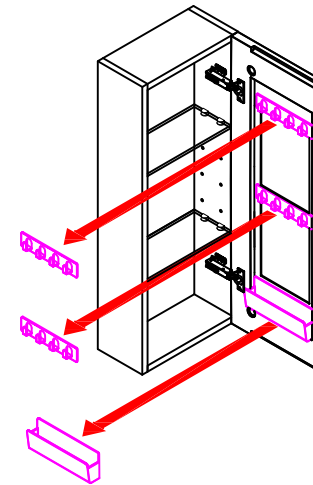

First step: Remove the middle storage accessory according to the picture.

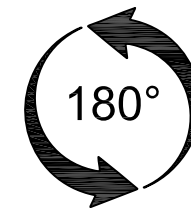

Second step: Rotate the mirror cabinet 180 degrees up and down, open the mirror door.

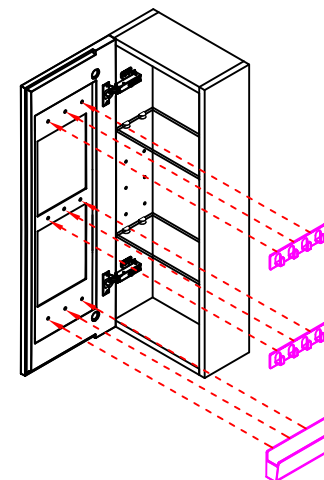

Three step: Align the storage accessories with the holes as shown in the diagram and install them on the back of the mirror door.