





option 1
page1-31

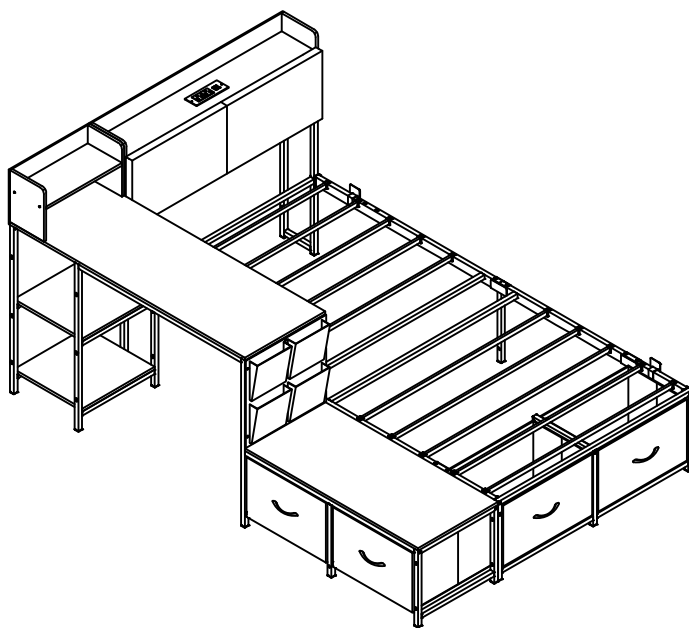




option 2
page1-25, 32-37

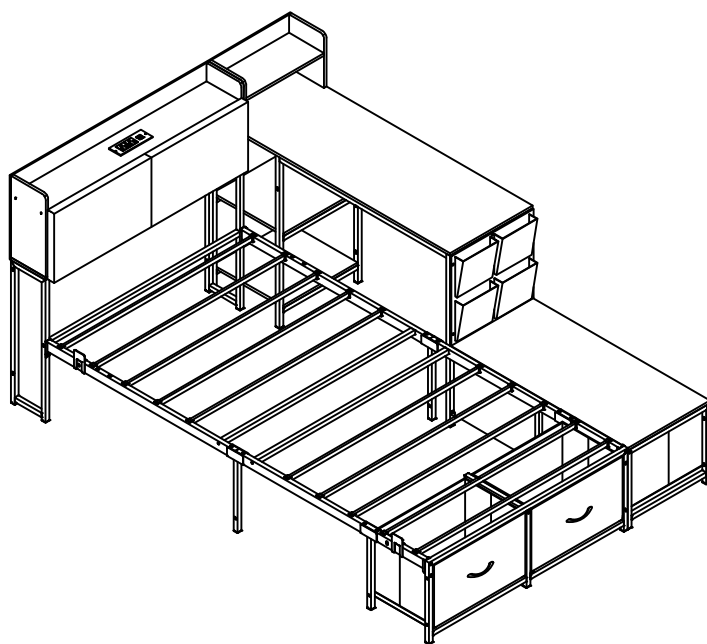


1.Installation precautions

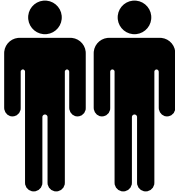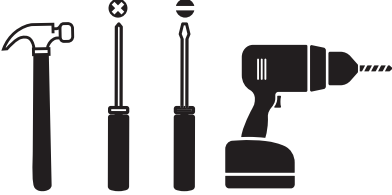 2 PERS.	 Tools required (not included)
--	--
























2.Matters needing attention

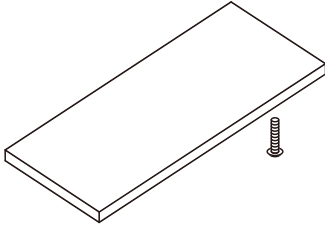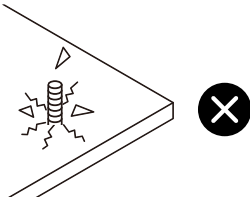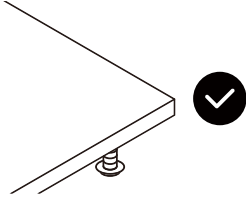 WARNING		
	Children have died from furniture tipover. To reduce the risk of furniture tipover: - ALWAYS install Anti-tip device provided. - NEVER put a TV on this product. - NEVER allow children to stand, climb or hang on drawers, doors, or shelves. - NEVER open more than one drawer at a time. Place heaviest items in the lowes drawers.	
	This is a permanent label. Do not remove!	
 Be sure to use the proper screws to avoid damaging the parts.	 Wrong screws can cause the plank to crack	 The right screw is the right size













Please check that you have all the parts listed before starting assembly, if you find something missing, please stop the assembly and contact us immediately.

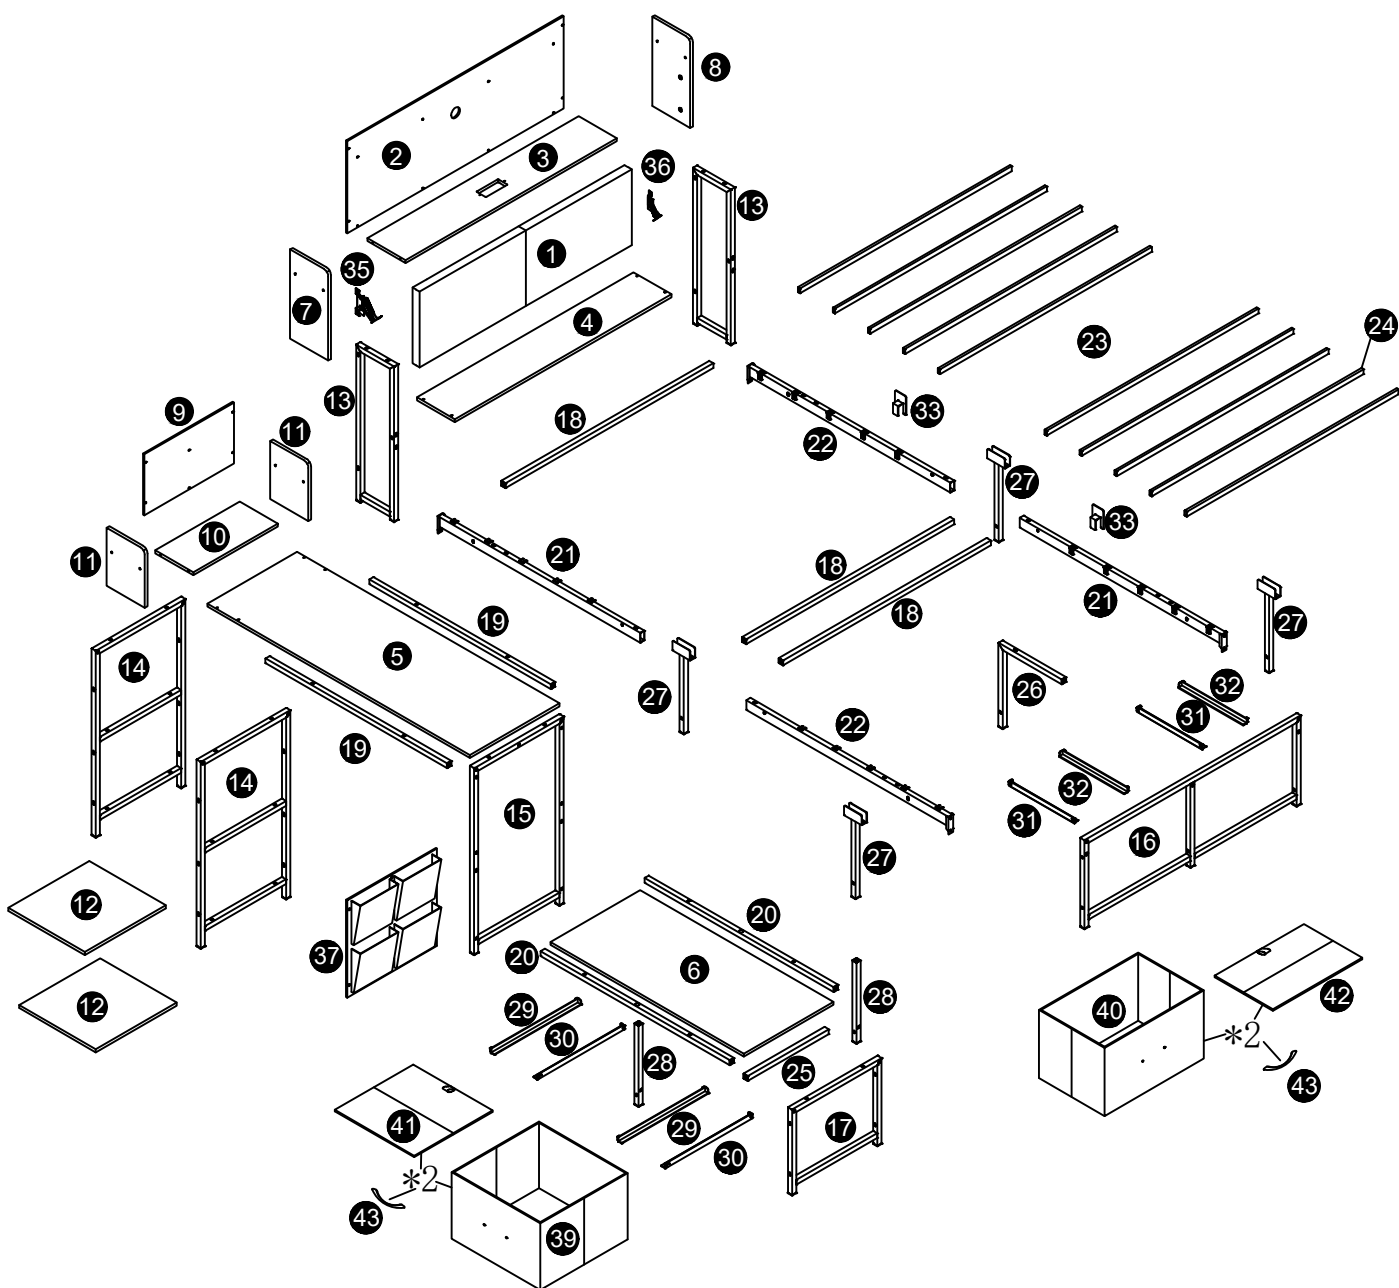






Part list

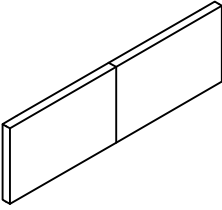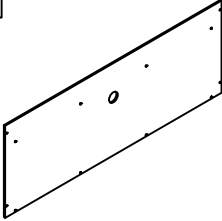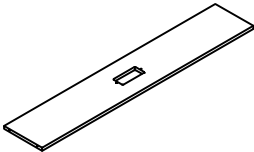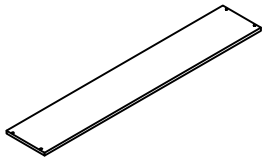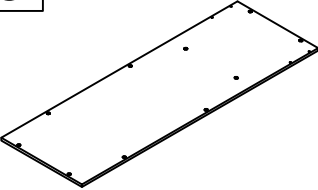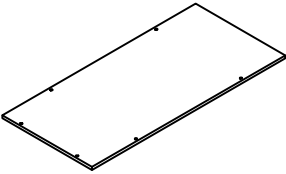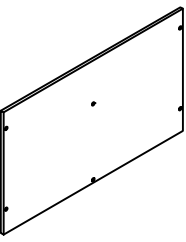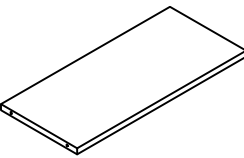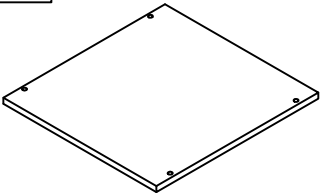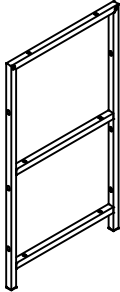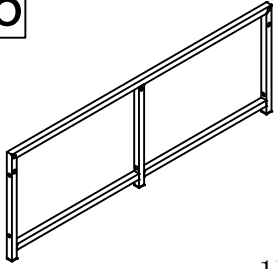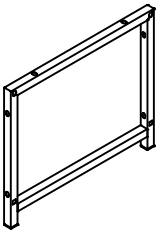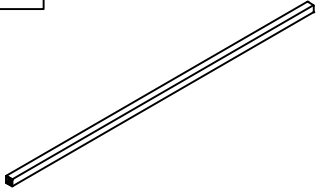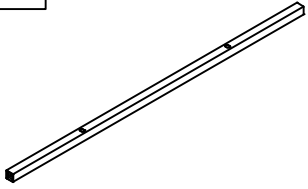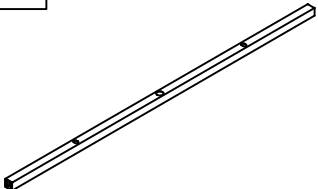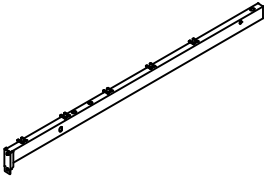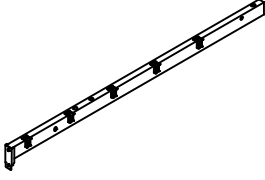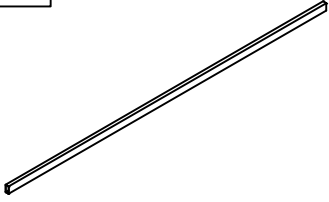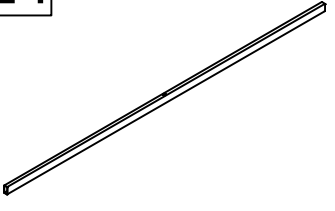1  1PC	2  1PC	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  1PC
9  1PC	10  1PC	11  2PCS	12  2PCS
13  2PCS	14  2PCS	15  1PC	16  1PC
17  1PC	18  3PCS	19  2PCS	20  2PCS
21  2PCS	22  2PCS	23  9PCS	24  1PC







Part list

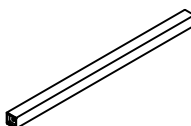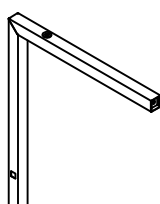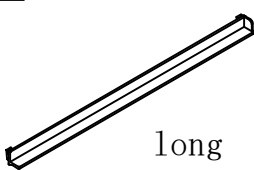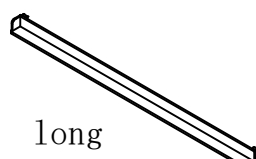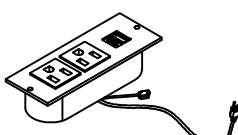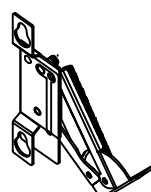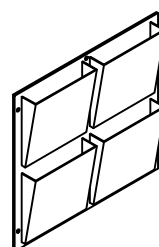
25		1PC	26		1PC	27		4PCS	28		2PCS
29	 long	2PCS	30	 long	2PCS	31	 short	2PCS	32	 short	2PCS
33		2PCS	34		1PC	35	R 	1PC	36	L 	1PC
37		1PC	38	 250mm	1PC	spare parts 		2PCS			

Hardware list

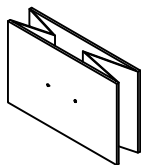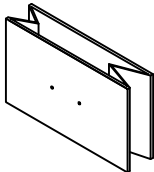
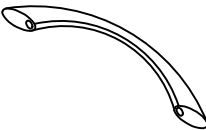
39  406*400*263mm 2PCS	40  454*300*270mm 2PCS	41  short 2PCS	42  long 2PCS
43  4PCS	O  M4*12mm 8PCS		

Hardware list

A  M8*50mm 12PCS	B  M8*35mm 9PCS	C  M8*20mm 4PCS	D  M8*10mm 4PCS	E  M6*35mm 22PCS
F  M6*28mm 32PCS	G  M6*12mm 5PCS	H  M5*30mm 36PCS	I  M4*12mm 3PCS	J  M8 8PCS
K  M8 1PC	L  M5*65MM 1PC	M  M4*65MM 1PC	N  M3*65MM 1PC	

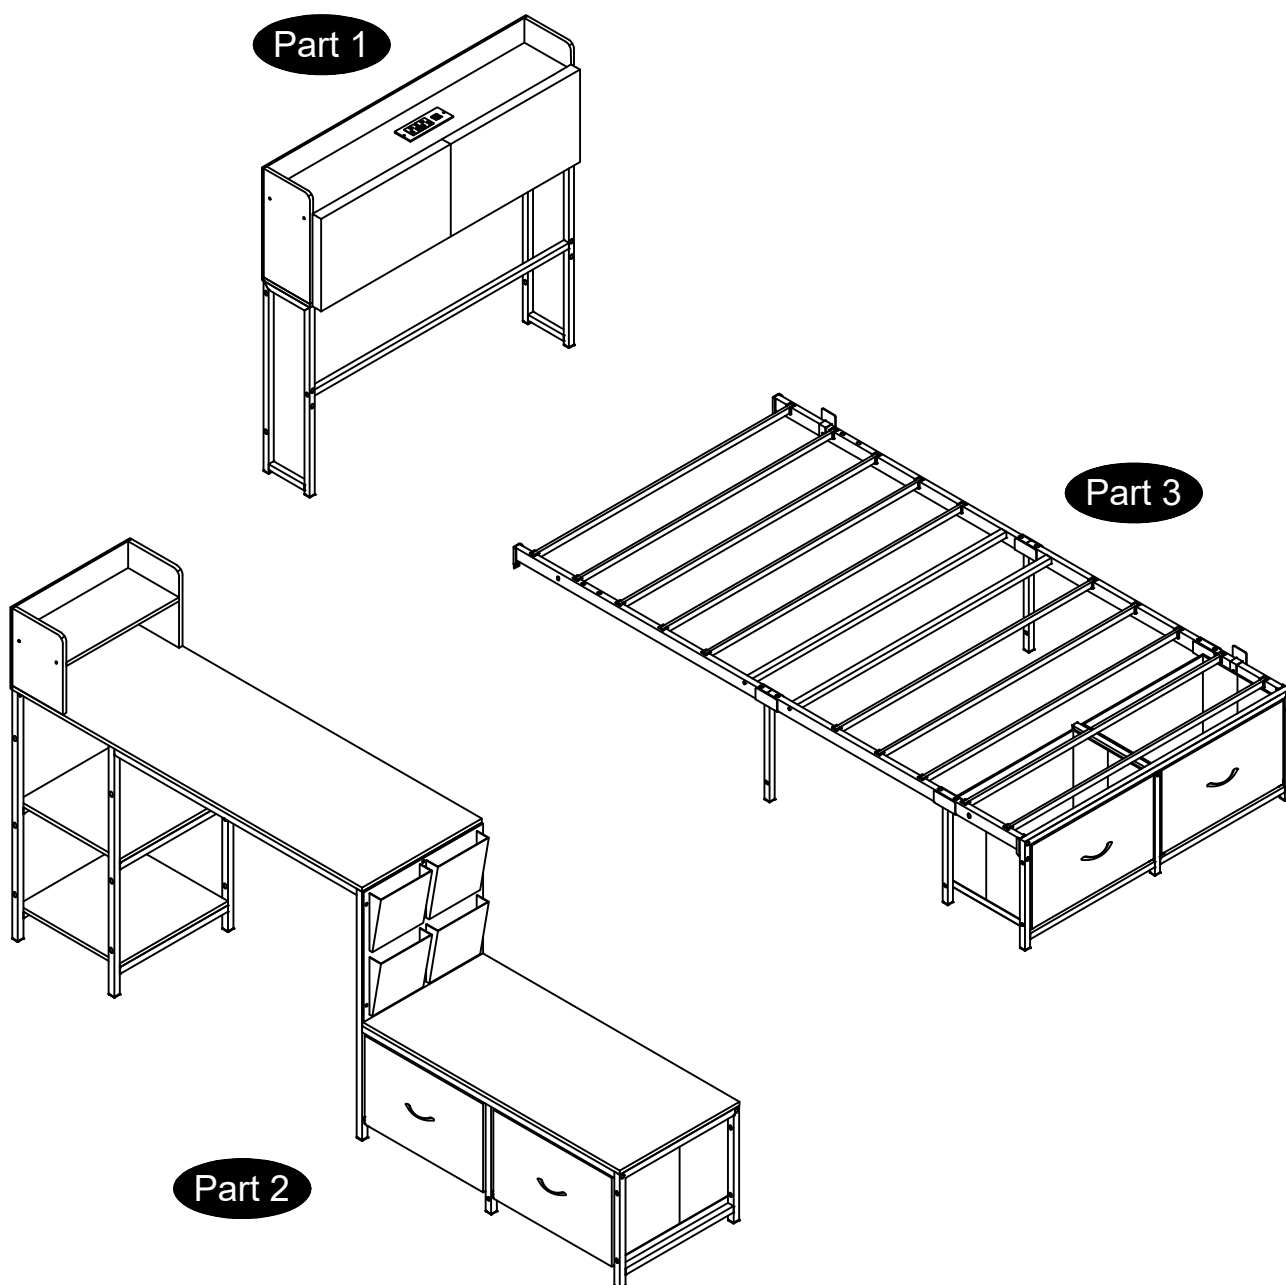


Part 1 Installation

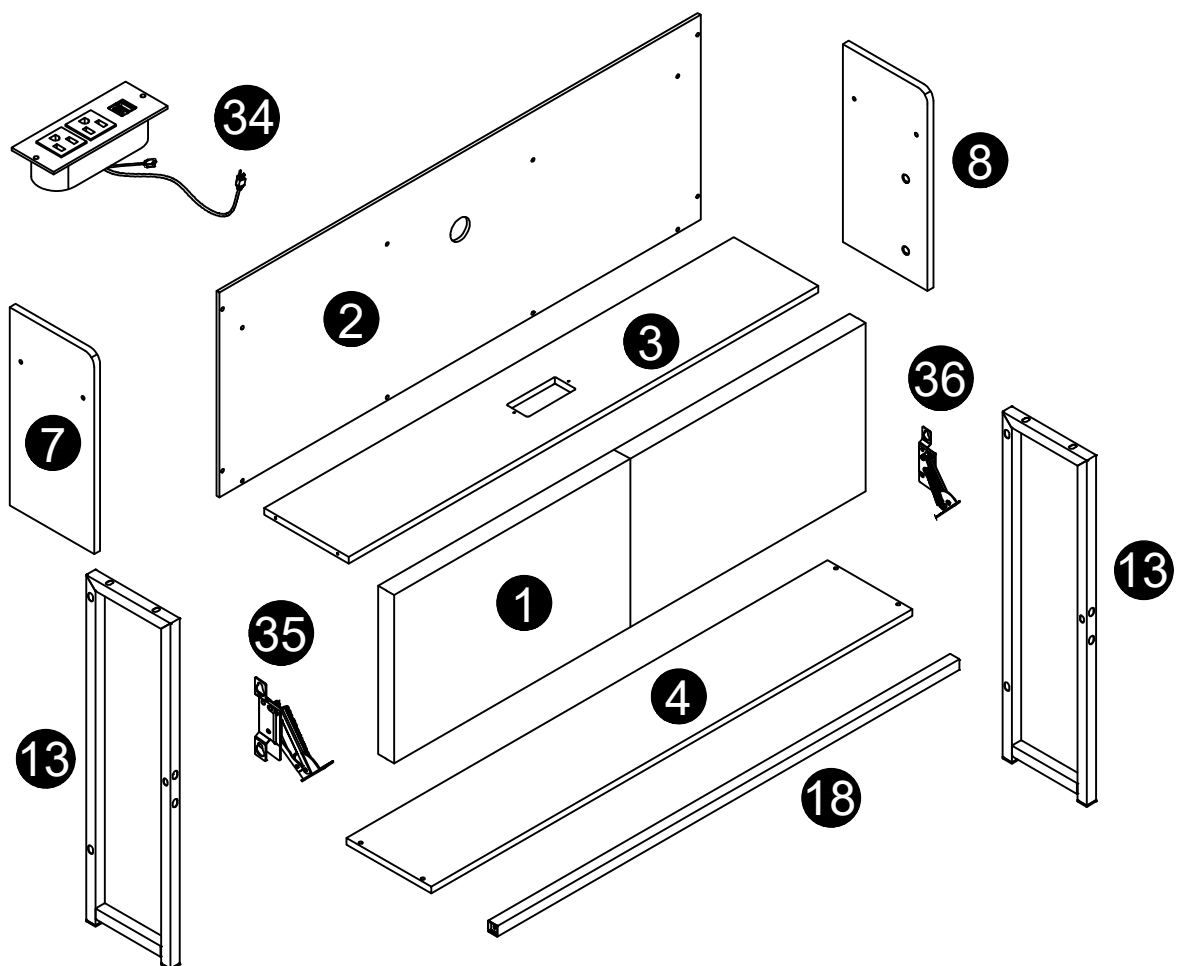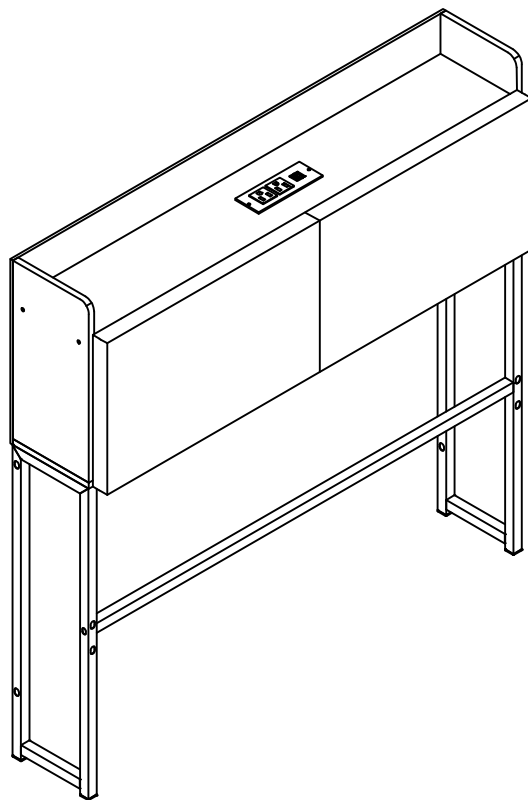


Step1

I		M4*12mm	2pcs
L		M5*65	1pc

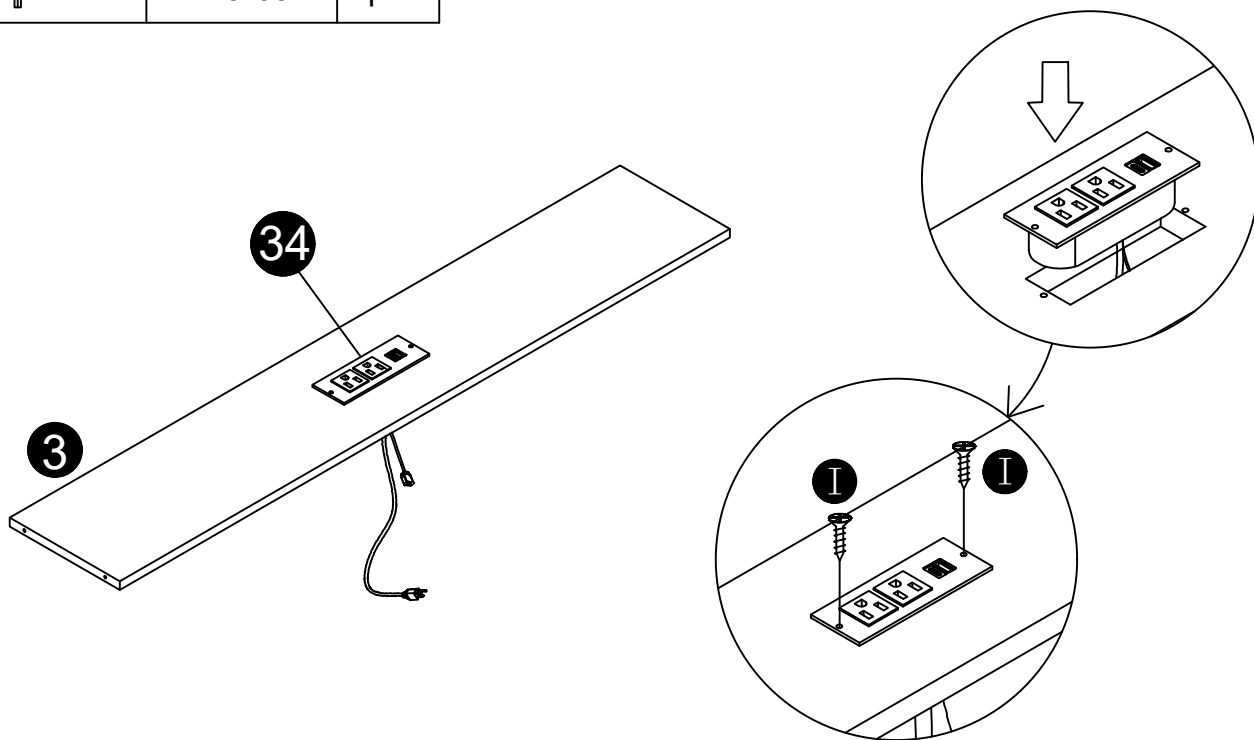


Step2

H		M5x30mm	4pcs
N		M3*65mm	1pc

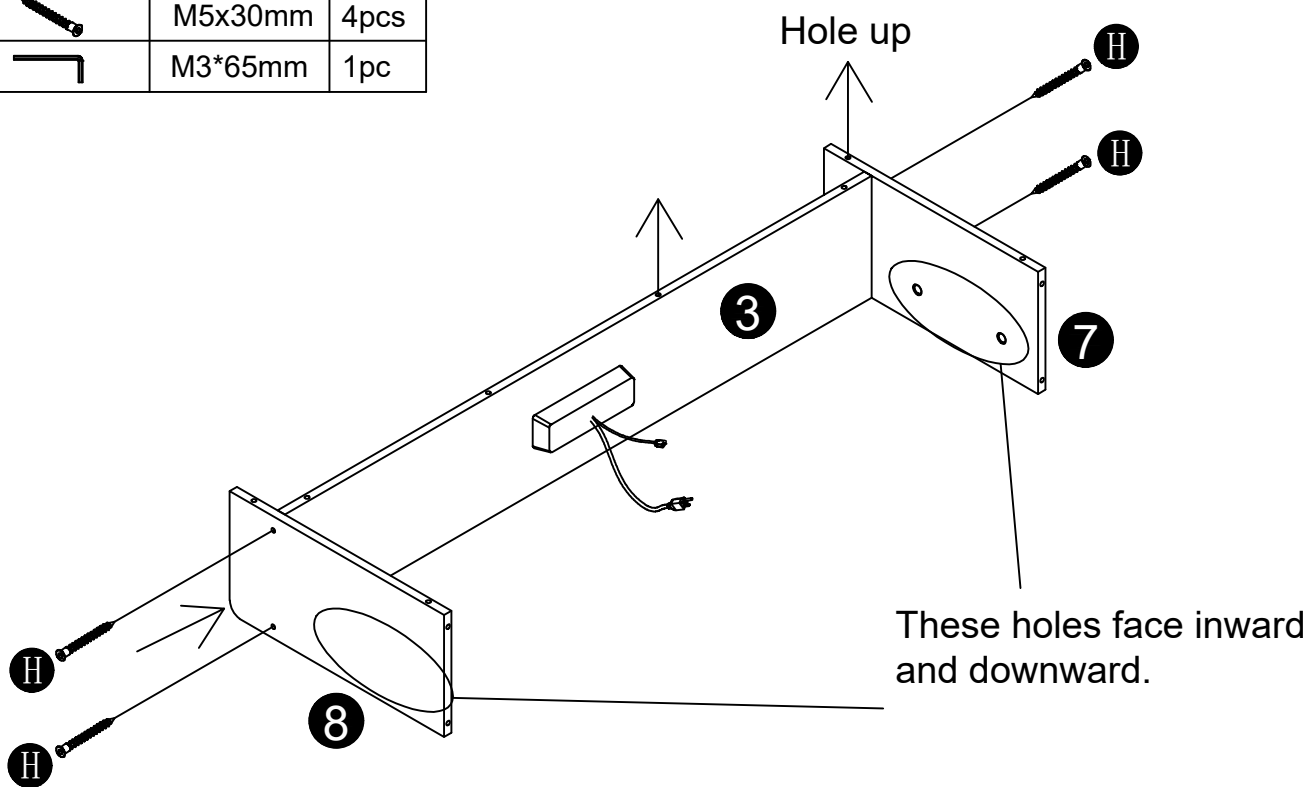


Step3

H		M5x30mm	4pcs
N		M3*65mm	1pc

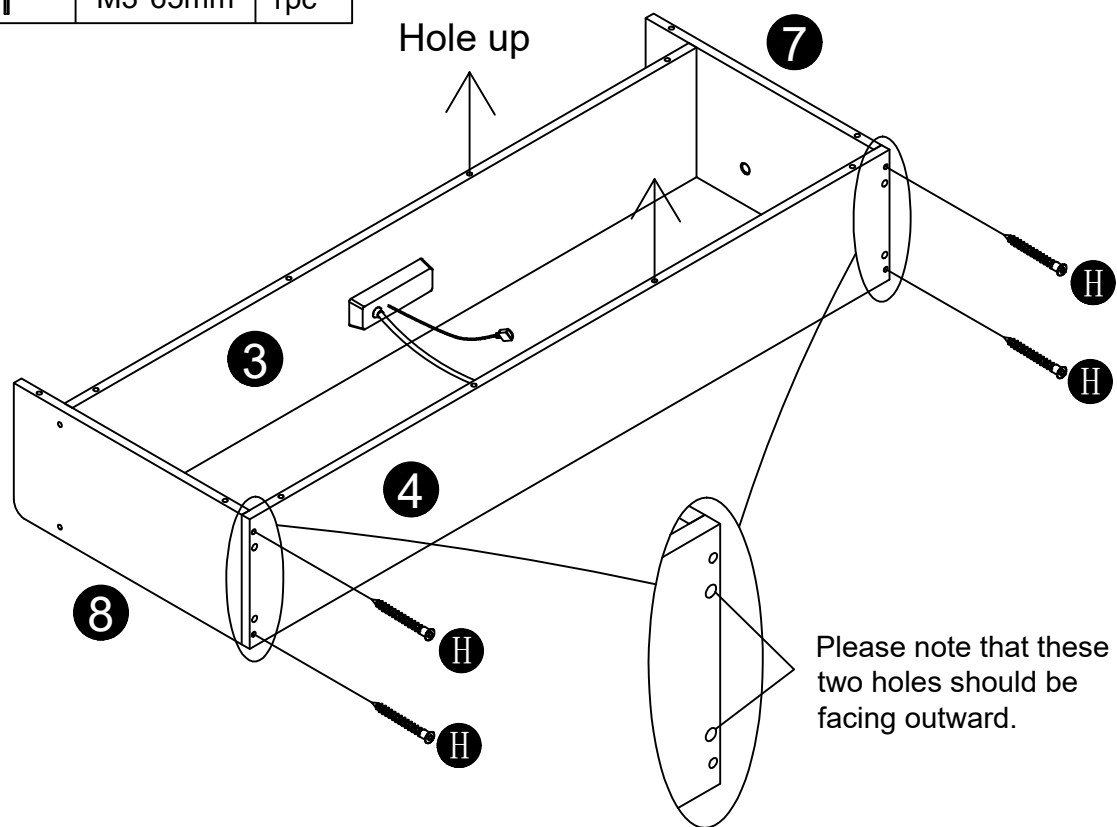


Step4

H		M5x30mm	12pcs
N		M3*65mm	1pc

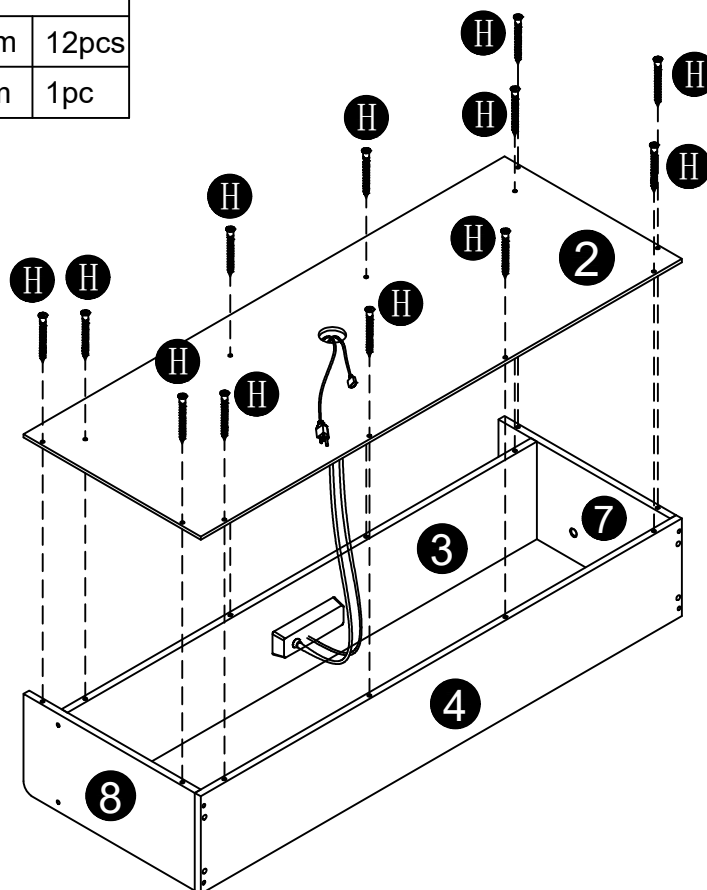


Step5

F		M6x28mm	4pcs
M		M4*65mm	1pc

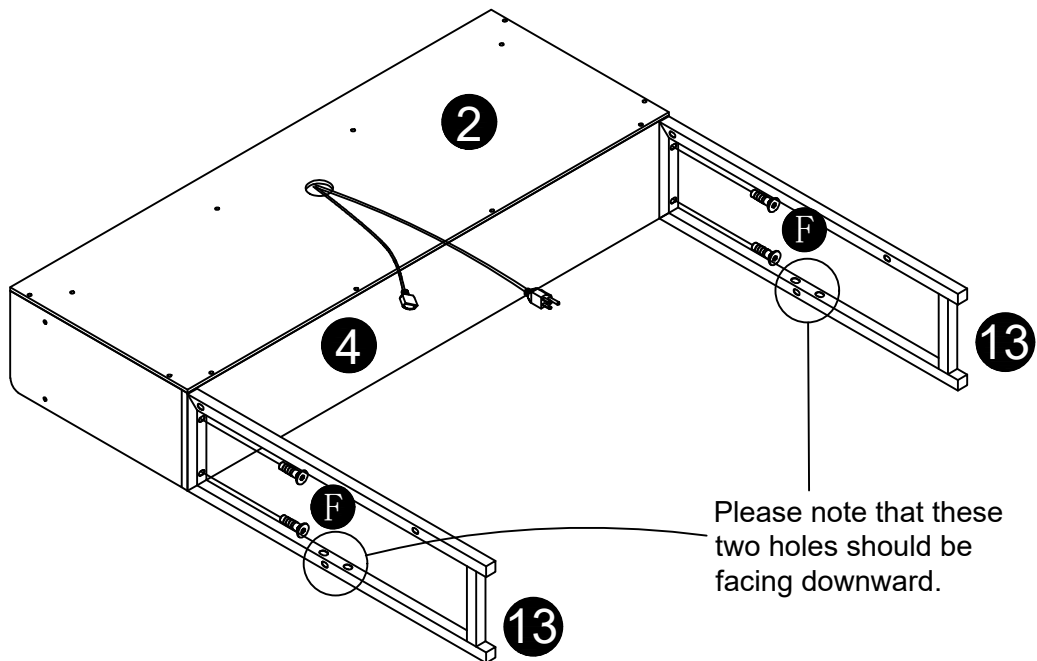

Step6

C		M8x20mm	4pcs
L		M5*65mm	1pc

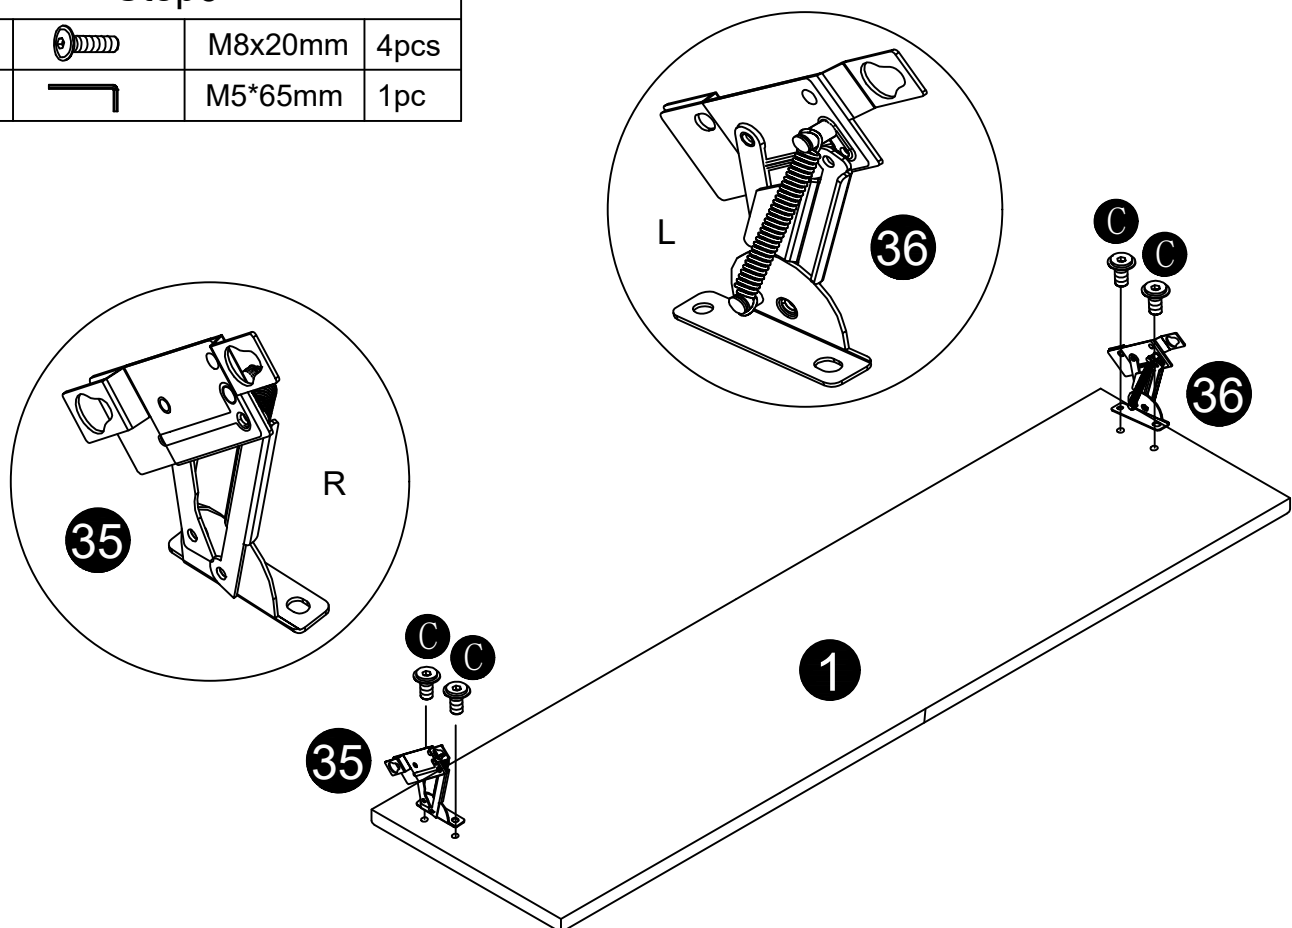


Step7


D		M8x10mm	4pcs
L		M5*65mm	1pc





RECOMMEND 2 OR
MORE ADULTS FOR
QUICKER ASSEMBLY

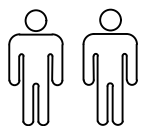


2PERS

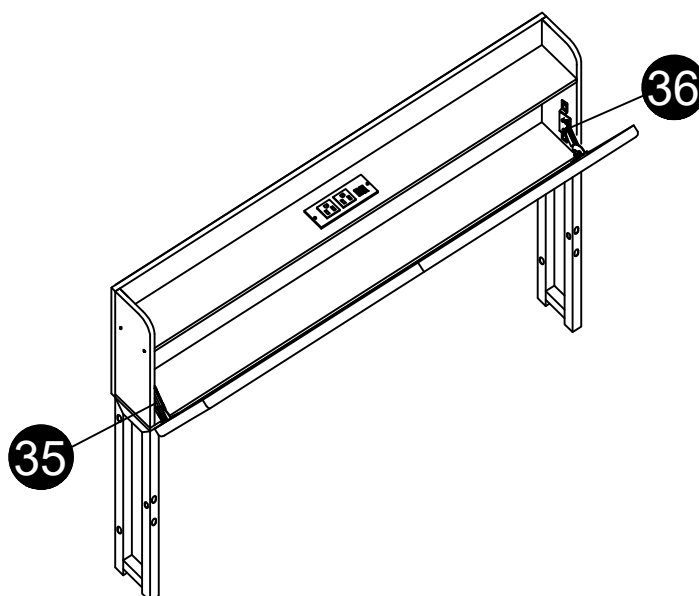

Tighten 50%

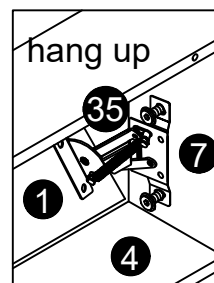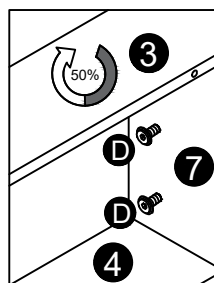


Tighten 100%


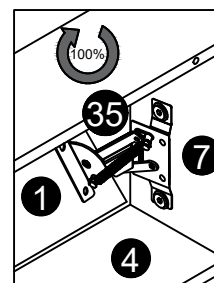


Step8

E		M6x35mm	2pcs
M		M4*65mm	1pc

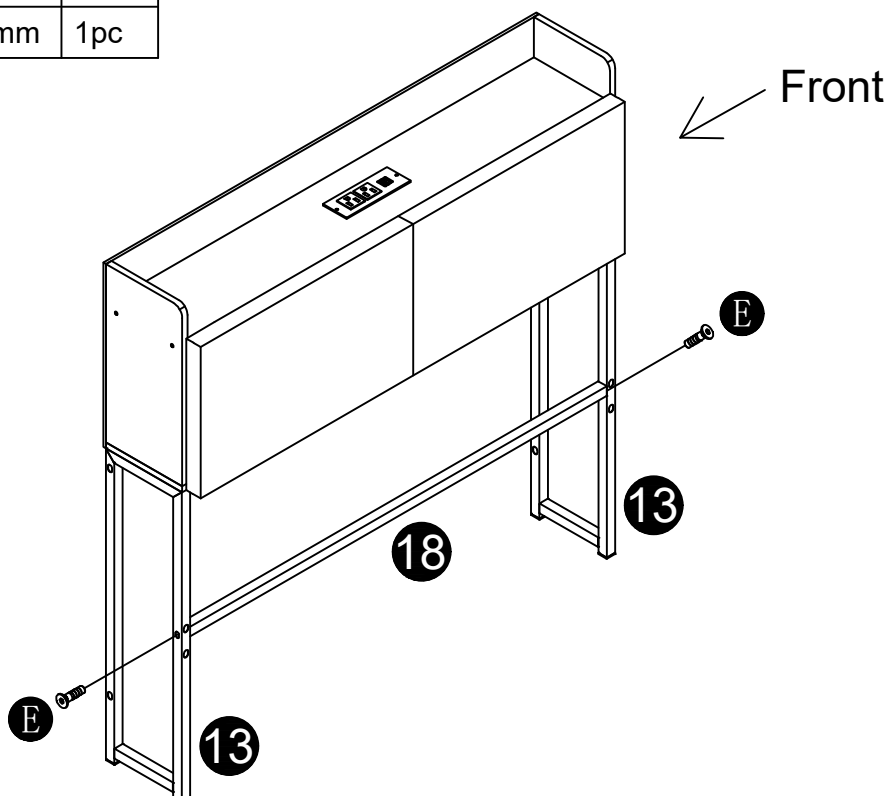


Part 2 Installation

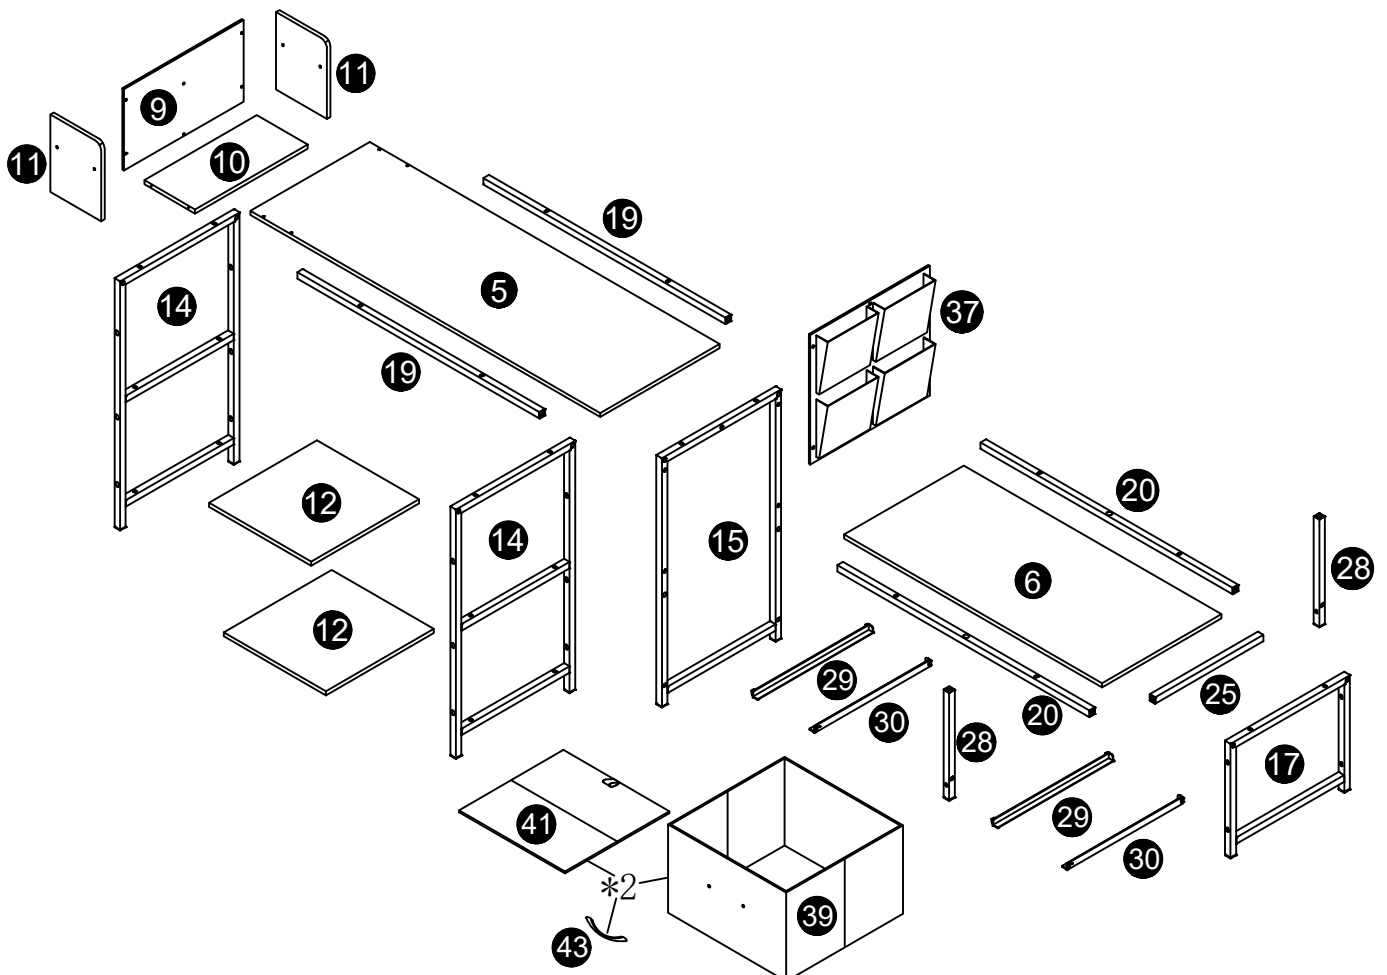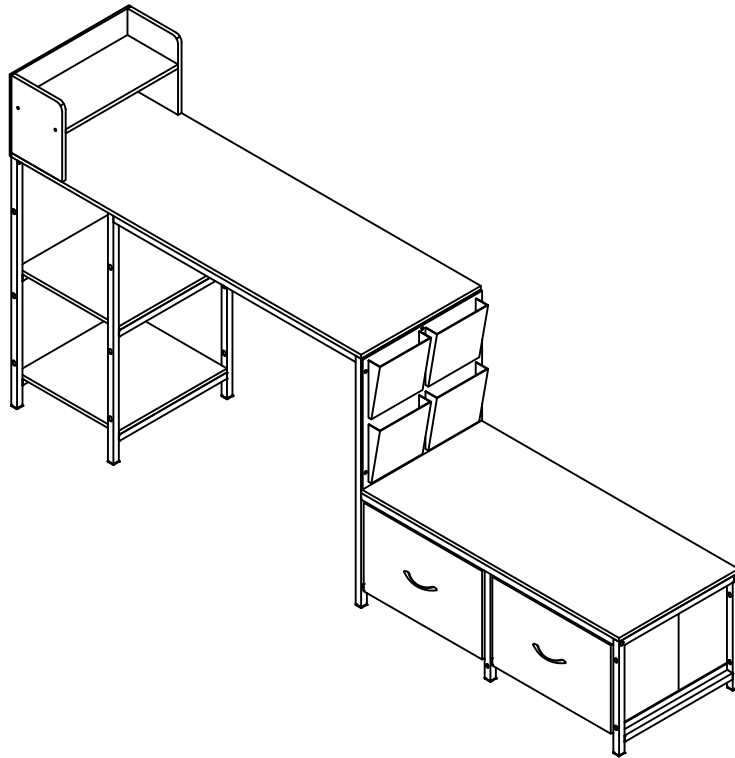


Step9

E		M6x35mm	4pcs
M		M4*65mm	1pc

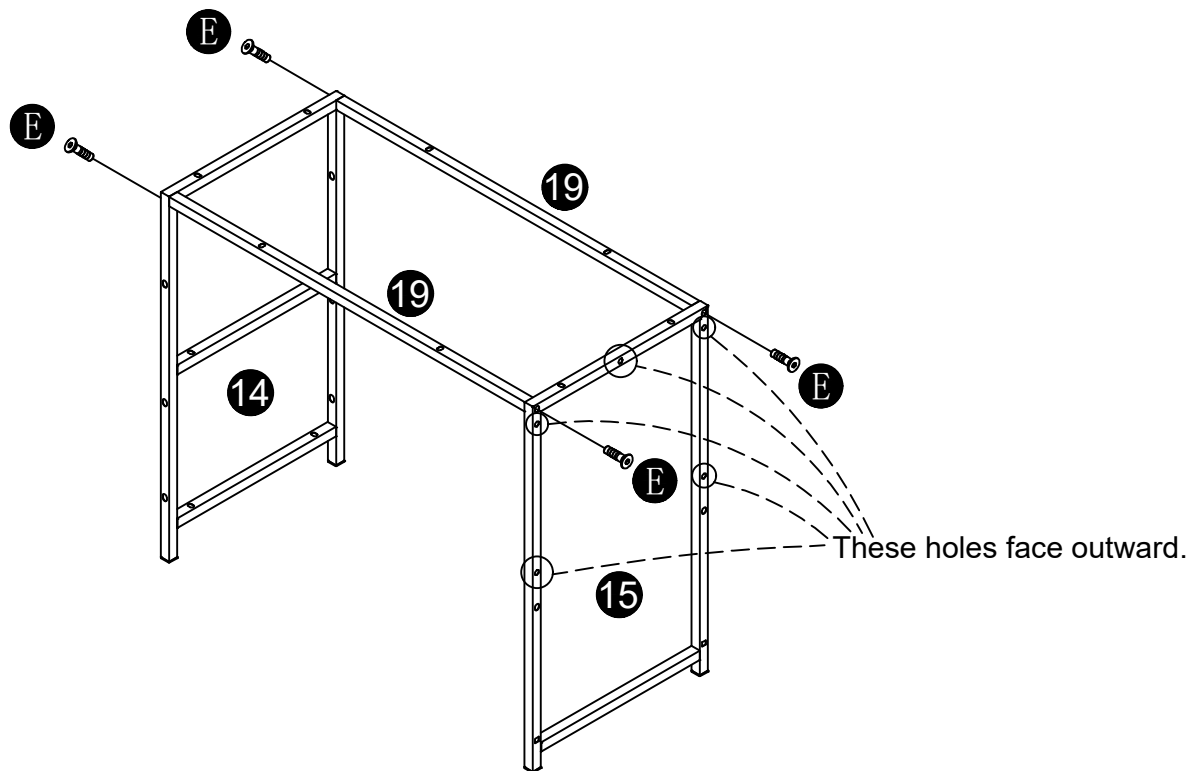


Step10

F		M6x28mm	2pcs
M		M4*65mm	1pc

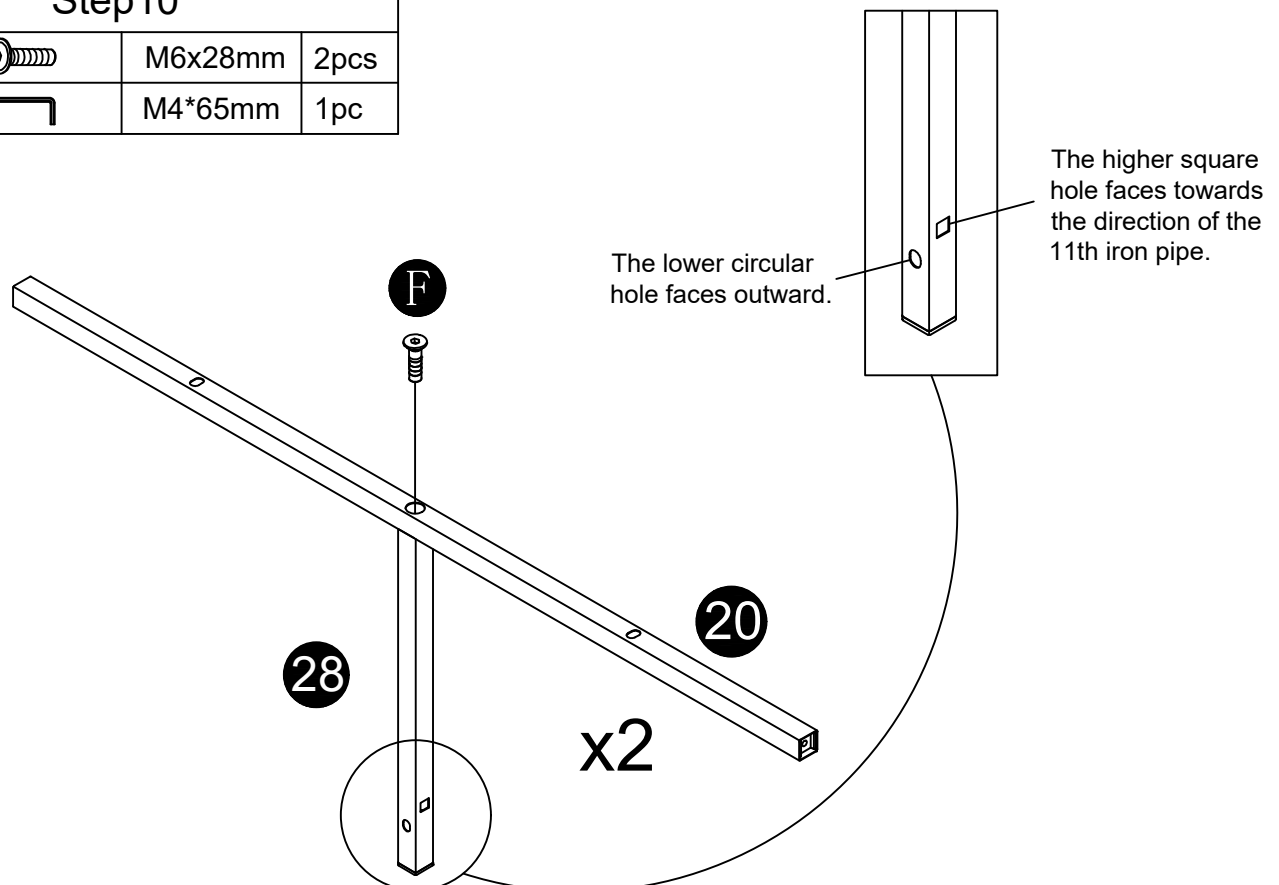


Step11

E		M6x35mm	2pcs
M		M4*65mm	1pc

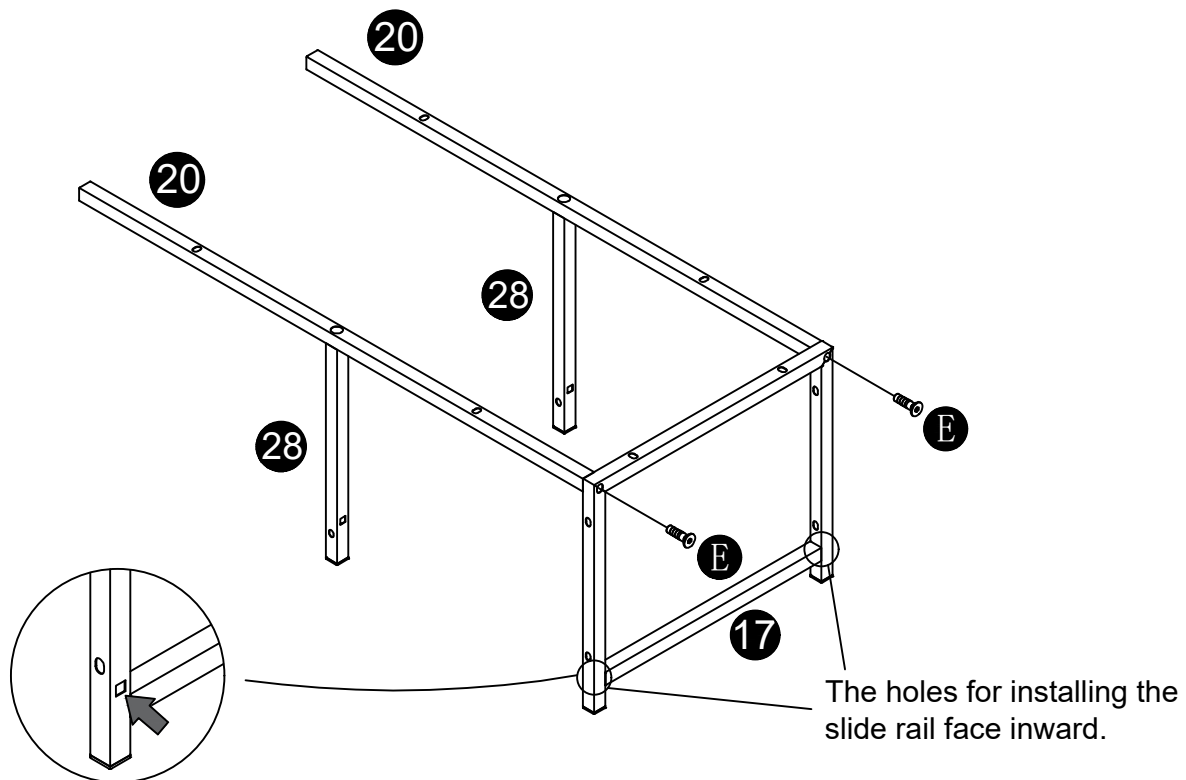


Step12

E		M6x35mm	2pcs
M		M4*65mm	1pc

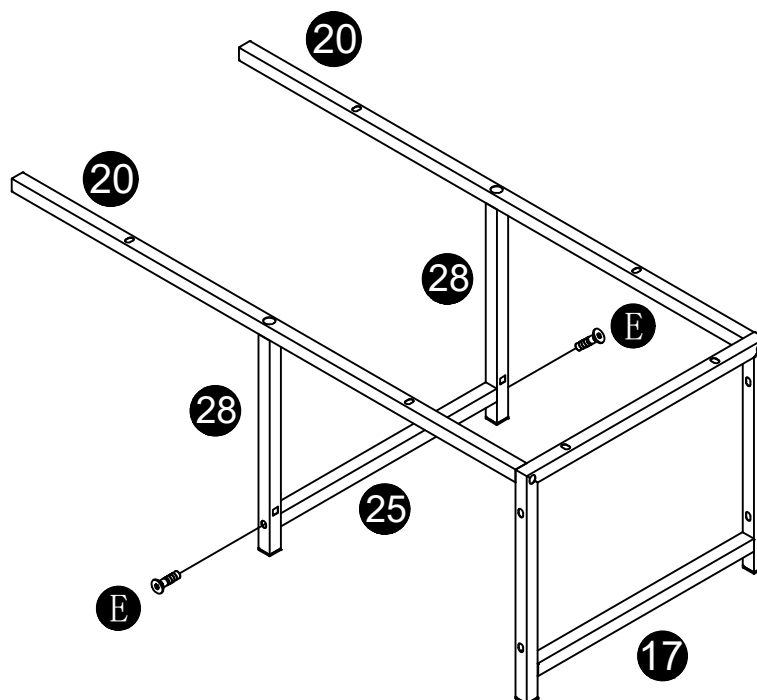


Step13

E		M6x35mm	2pcs
M		M4*65mm	1pc

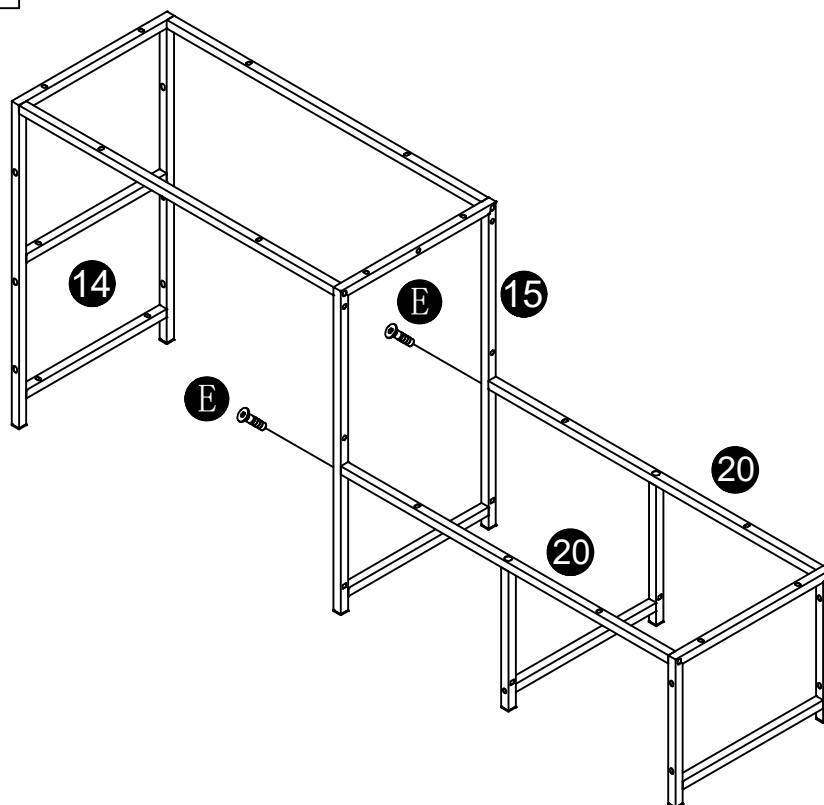


Step14

H		M5x30mm	4pcs
N		M3*65mm	1pc

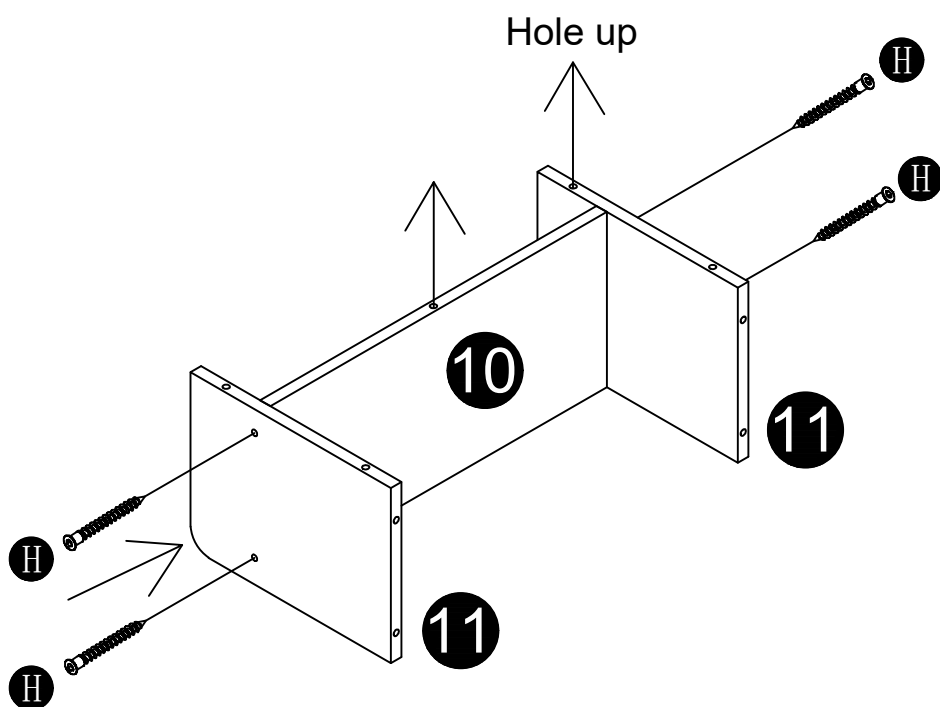


Step15

H		M5x30mm	5pcs
N		M3*65mm	1pc

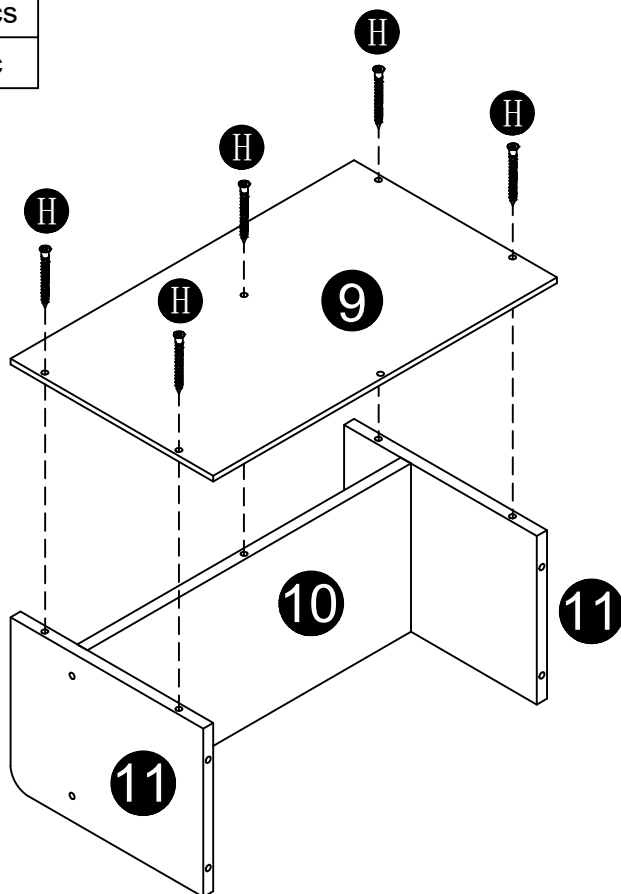


Step16

H		M5x30mm	5pcs
N		M3*65mm	1pc

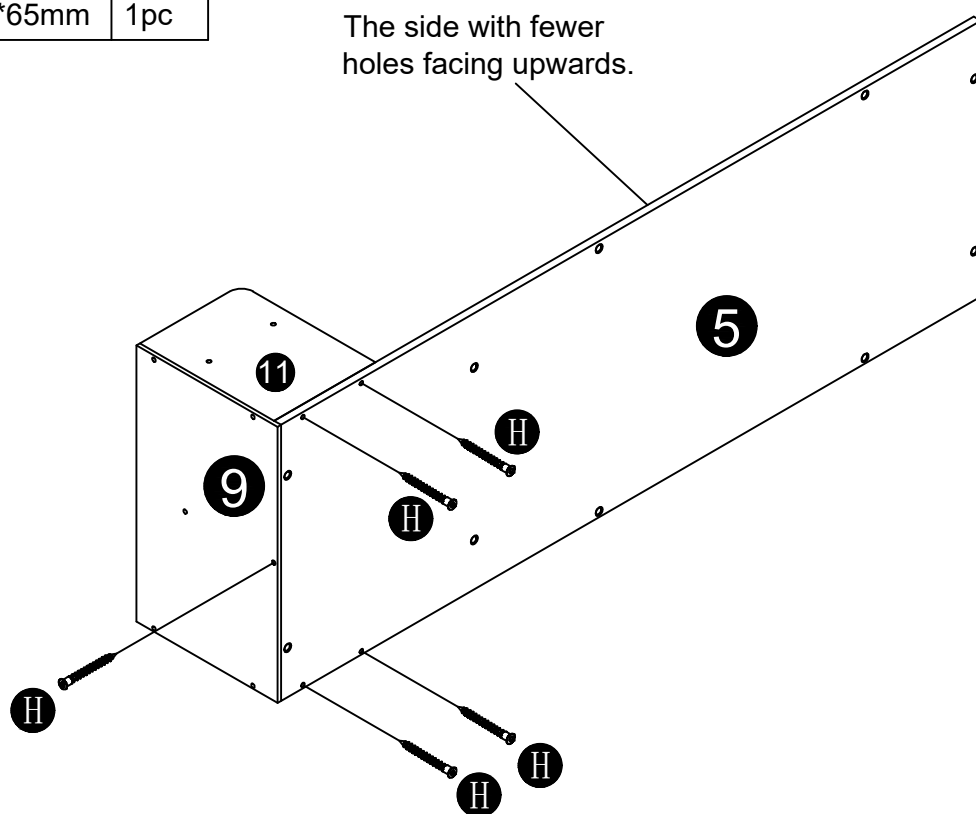


Step17

F		M6x28mm	8pcs
M		M4*65mm	1pc

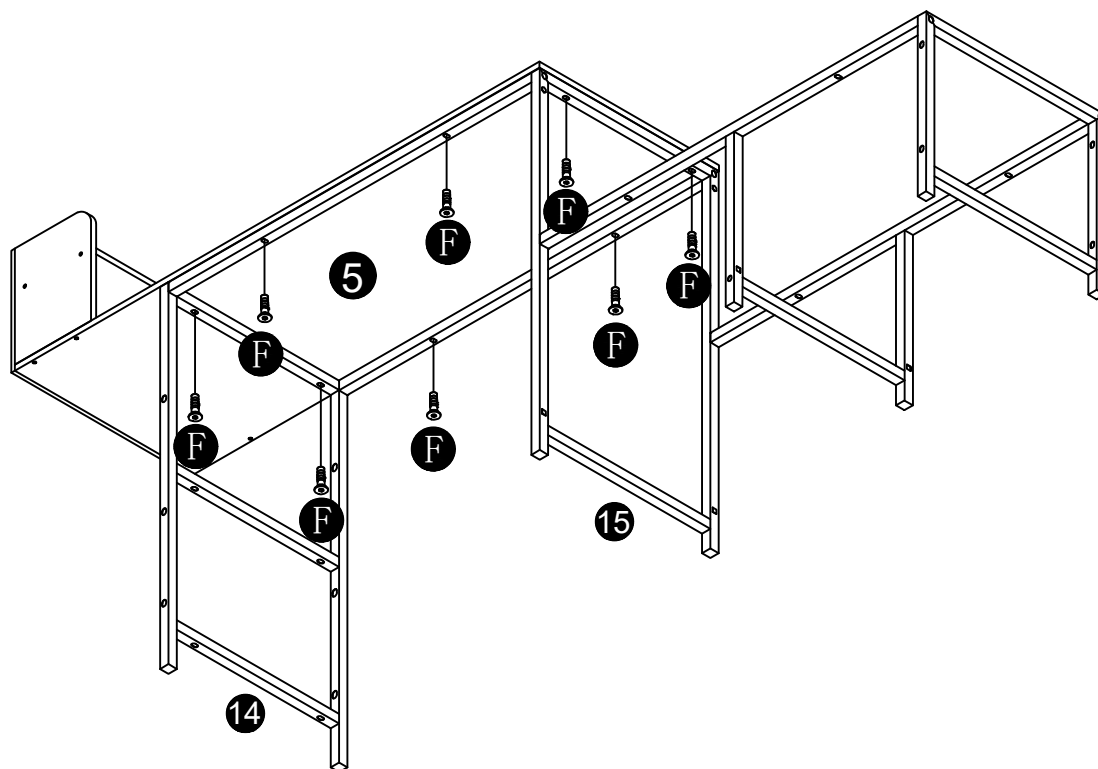


Step18

F		M6x28mm	2pcs
M		M4*65mm	1pc

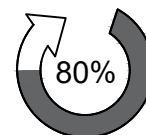

Tighten 80%

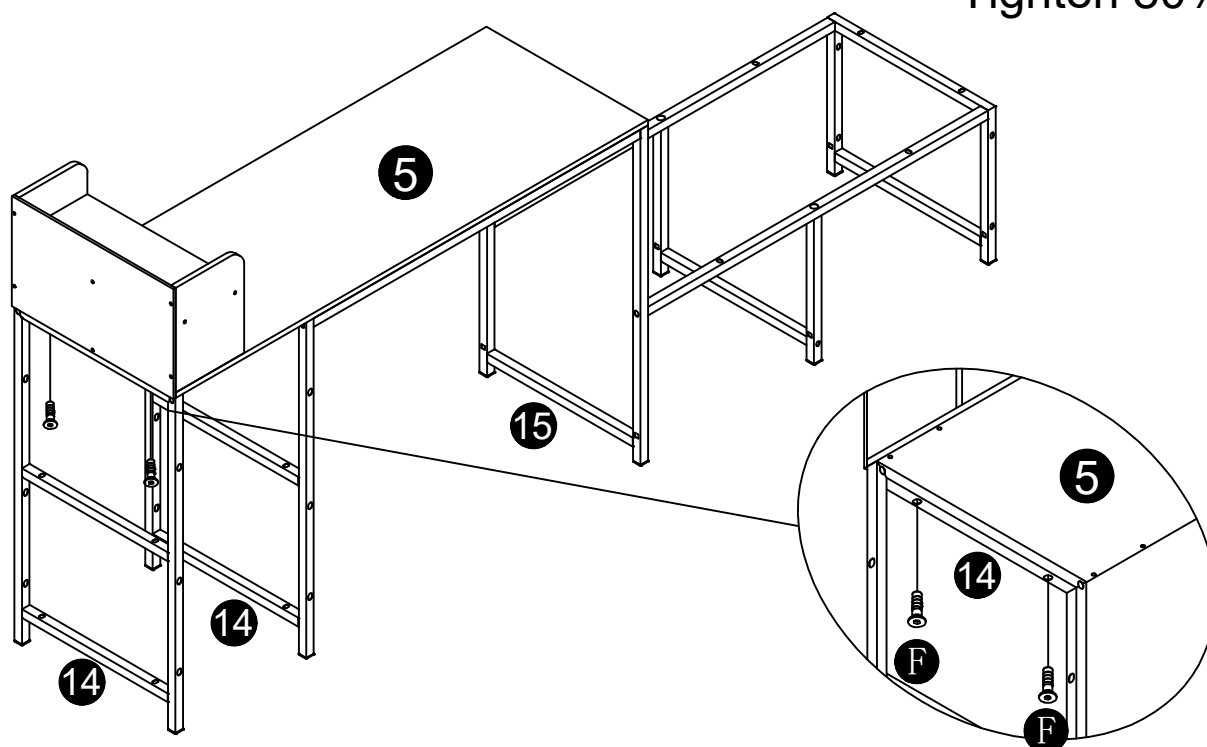


Step19

F		M6x28mm	8pcs
M		M4*65mm	1pc




Tighten 100%

Pay attention to the direction of the board.

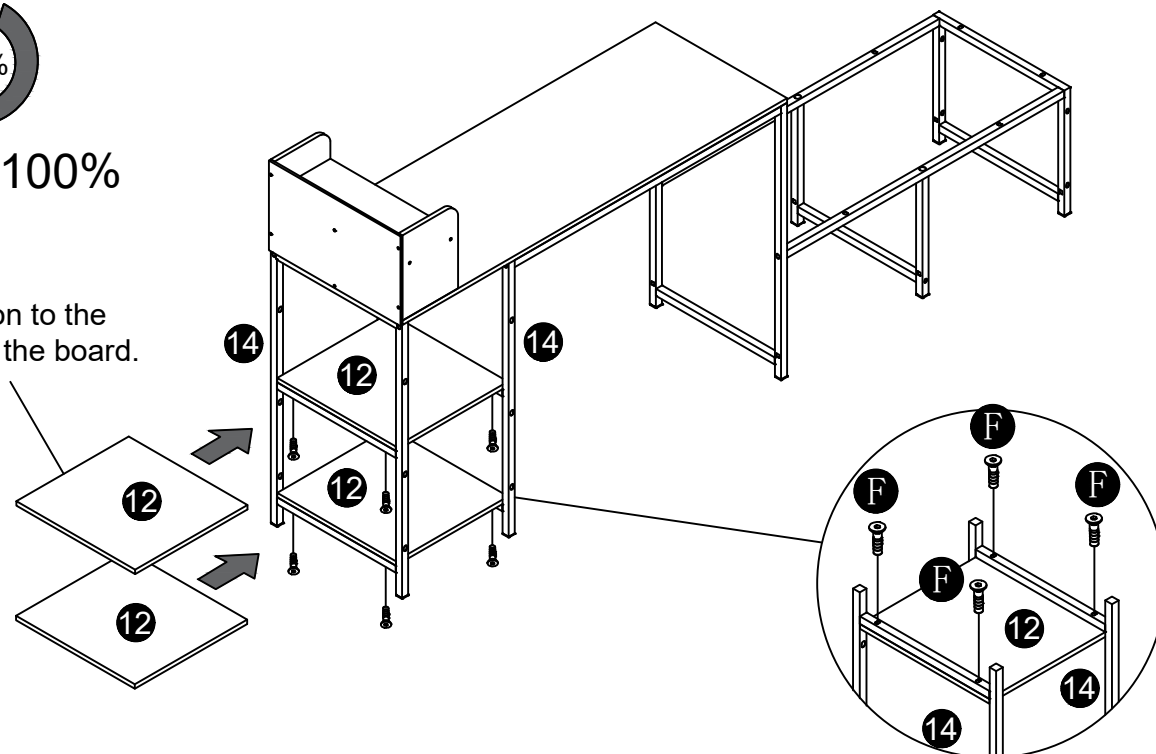


Step20

F		M6x28mm	6pcs
M		M4*65mm	1pc


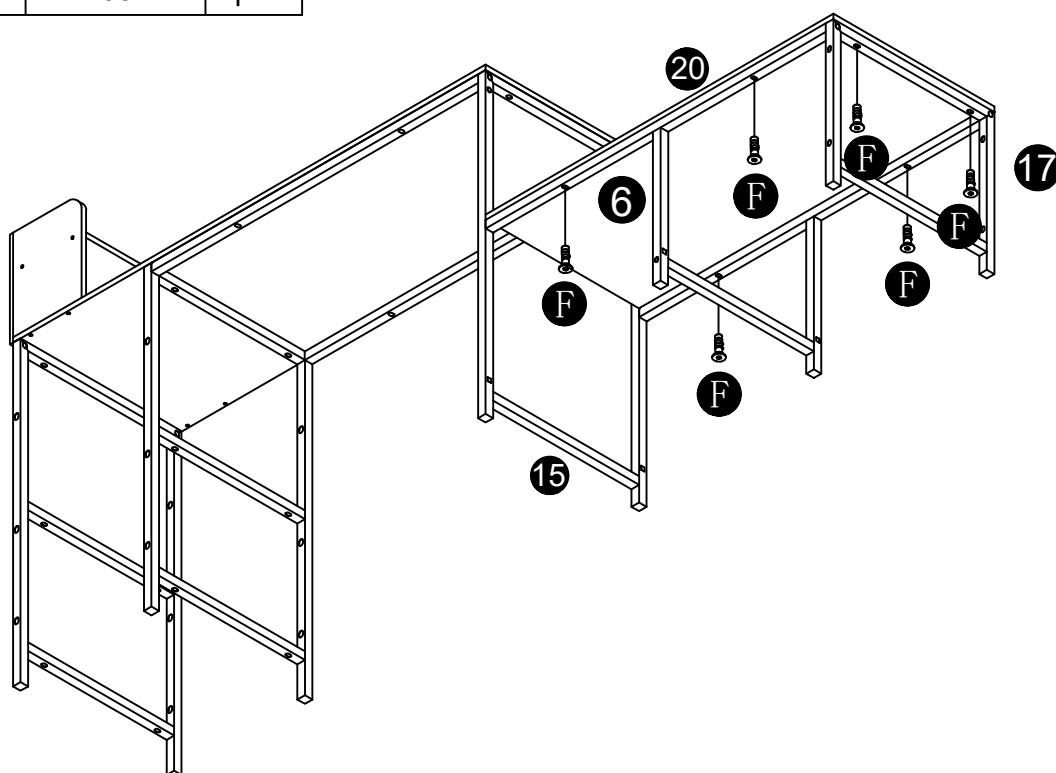


Step21

G		M6x12mm	5pcs
M		M4*65mm	1pc

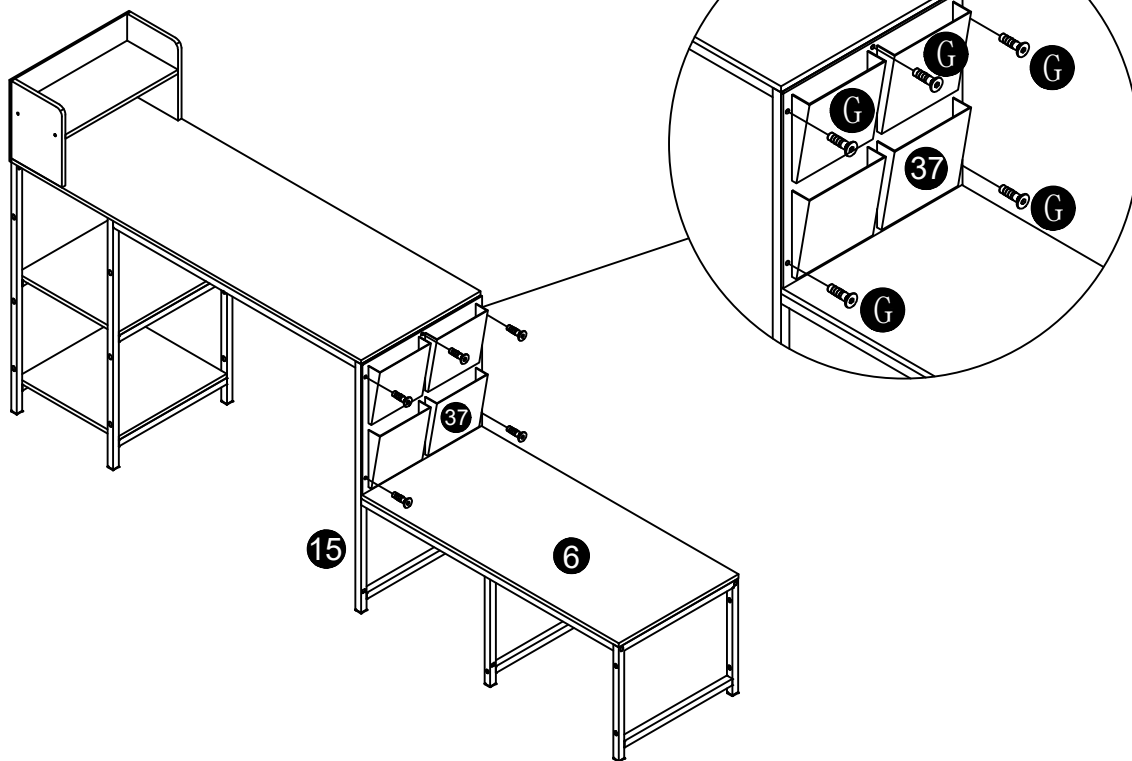


Installation

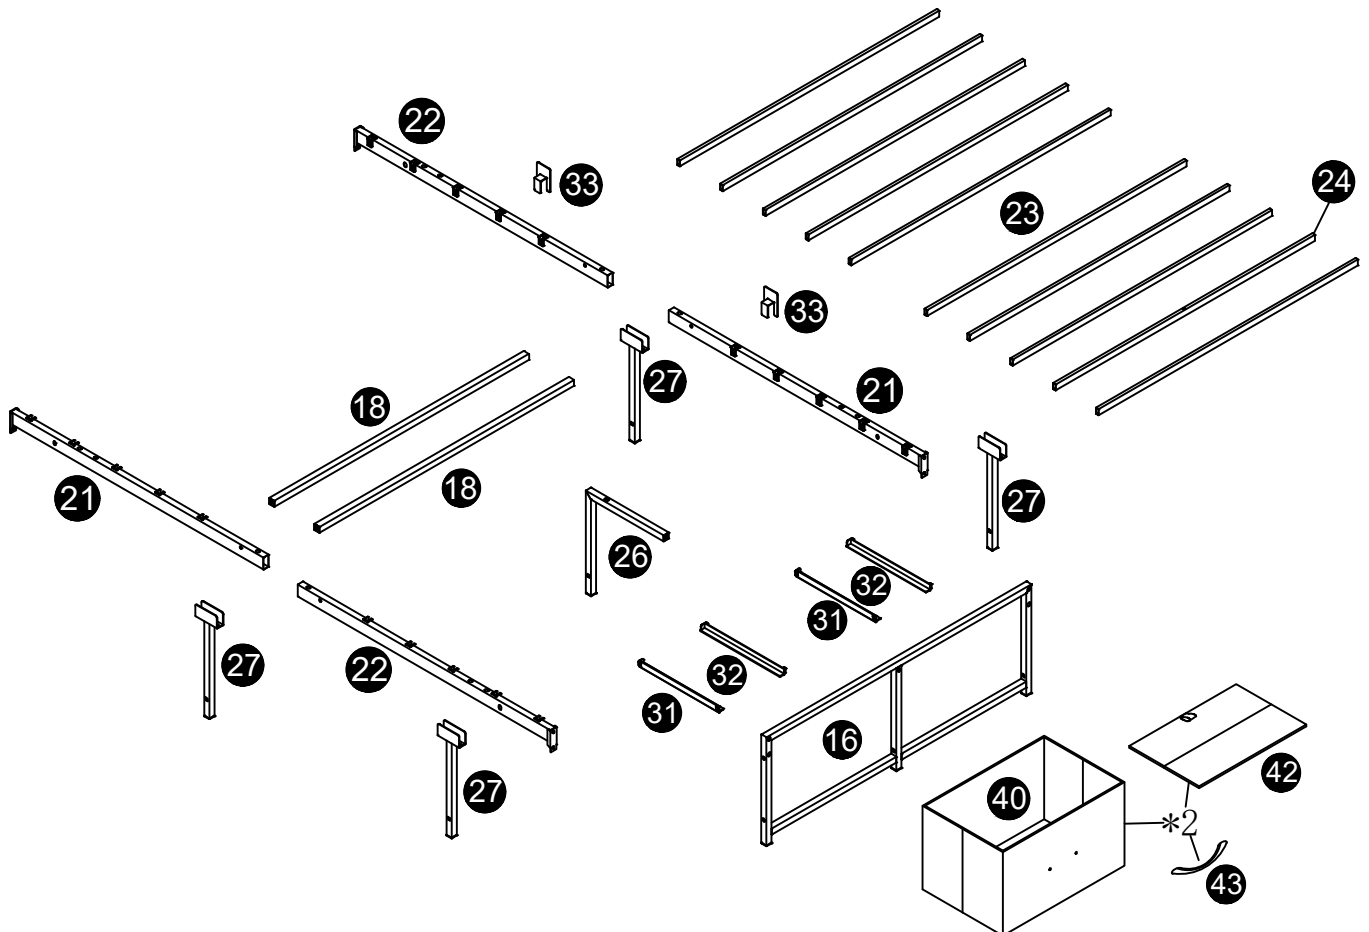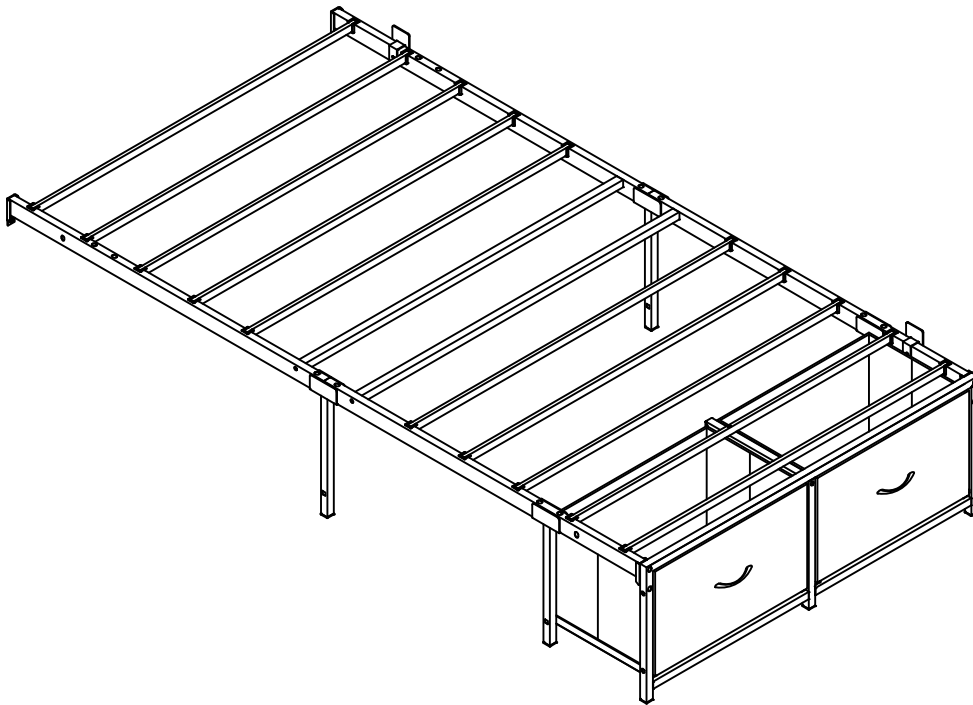


Step22

A		M8x50mm	8pcs
L		M5*65mm	1pc

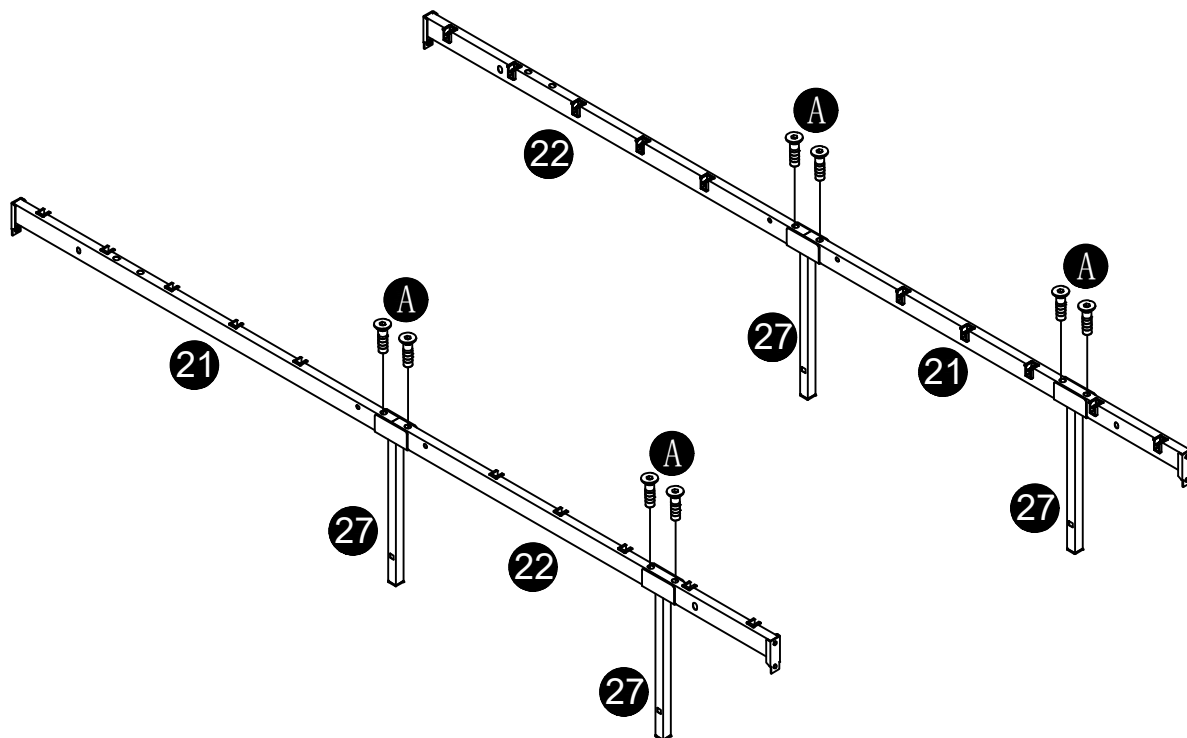


Step23

B		M8x35mm	4pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc

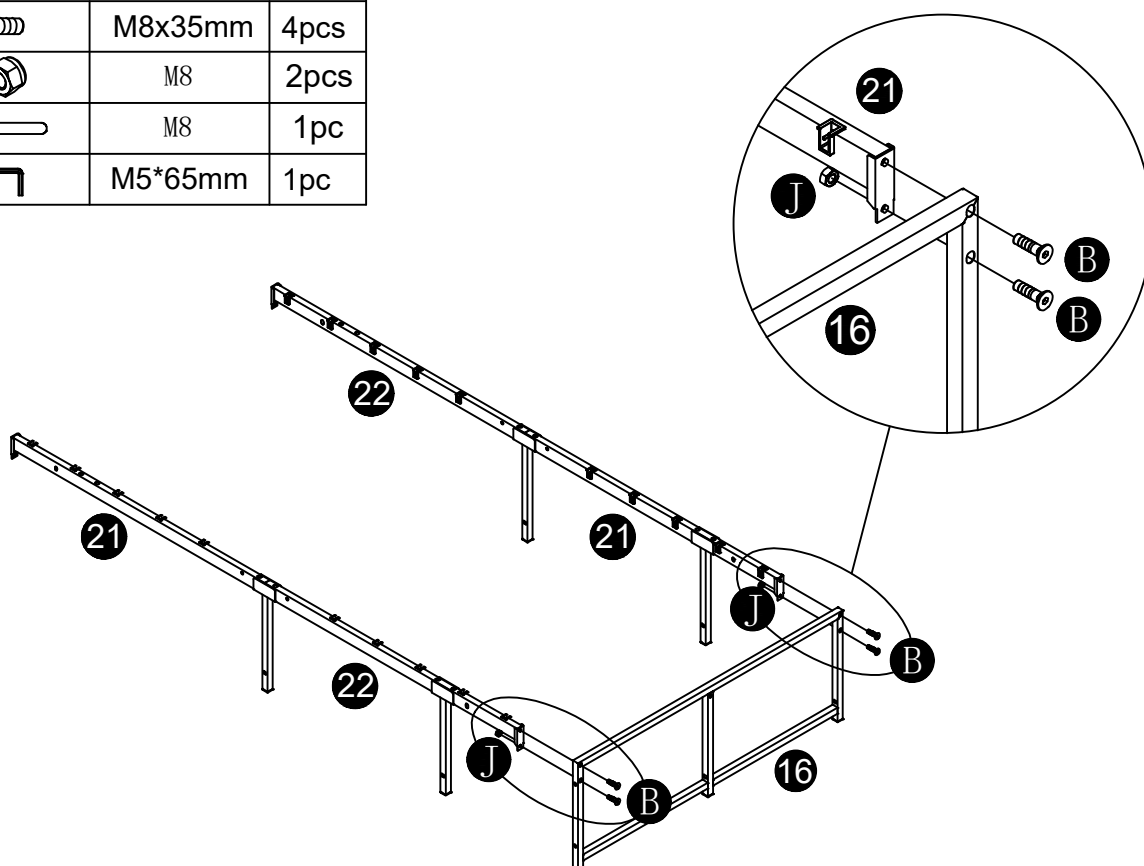


Step24

E		M6x35mm	1pc
M		M4*65mm	1pc

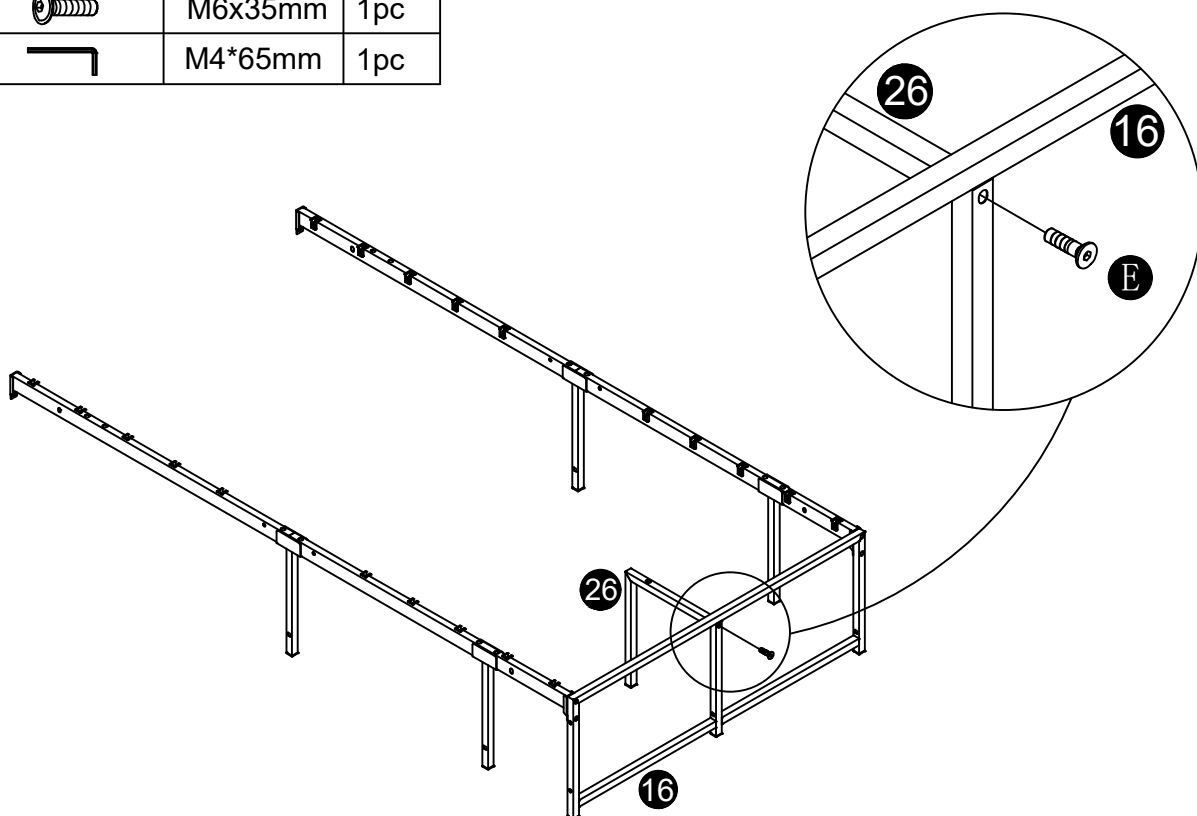


Step25

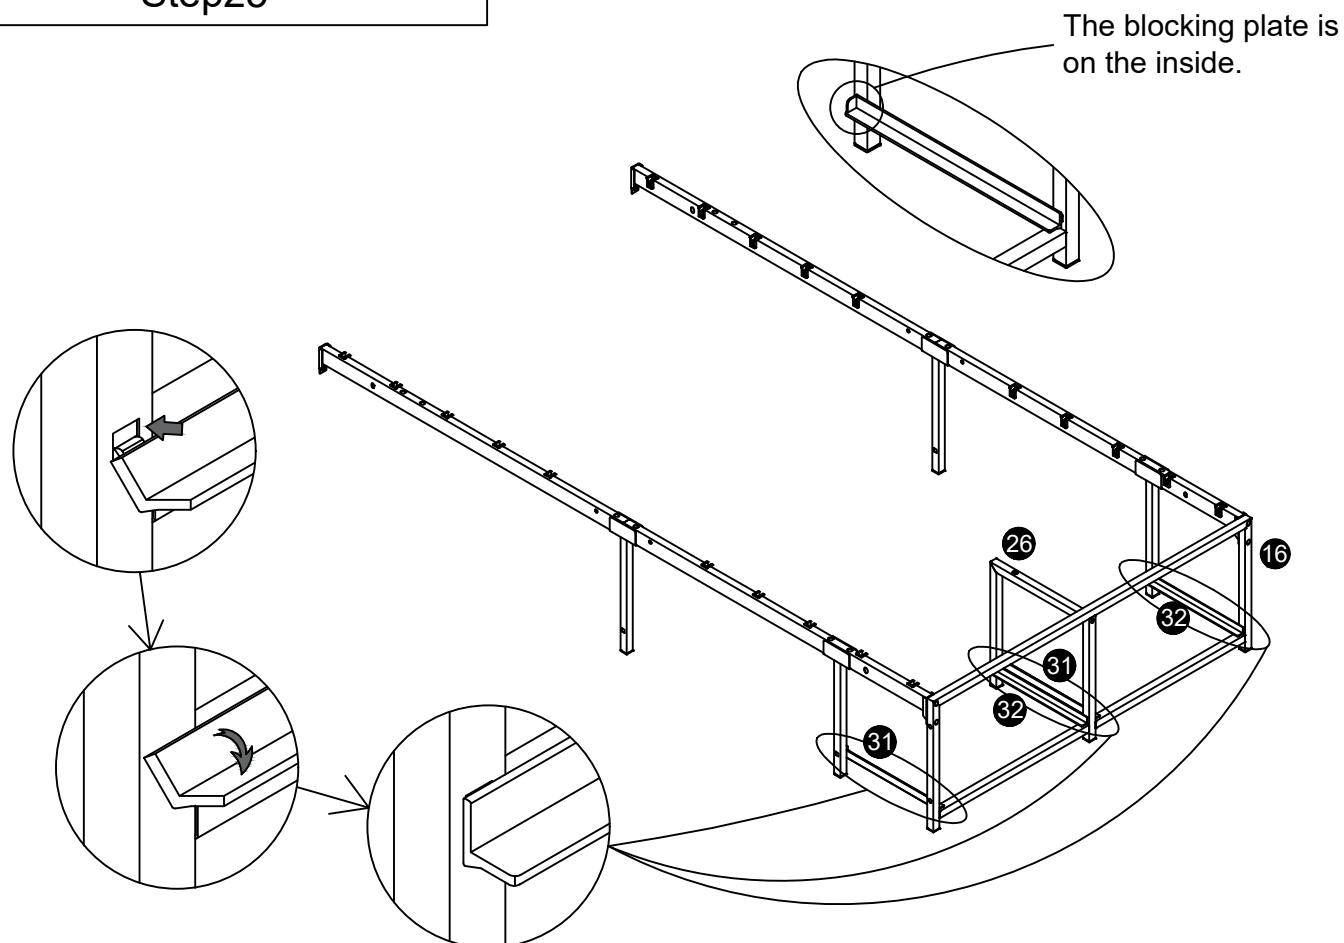


Step26

E		M6x35mm	4pcs
M		M4*65mm	1pc

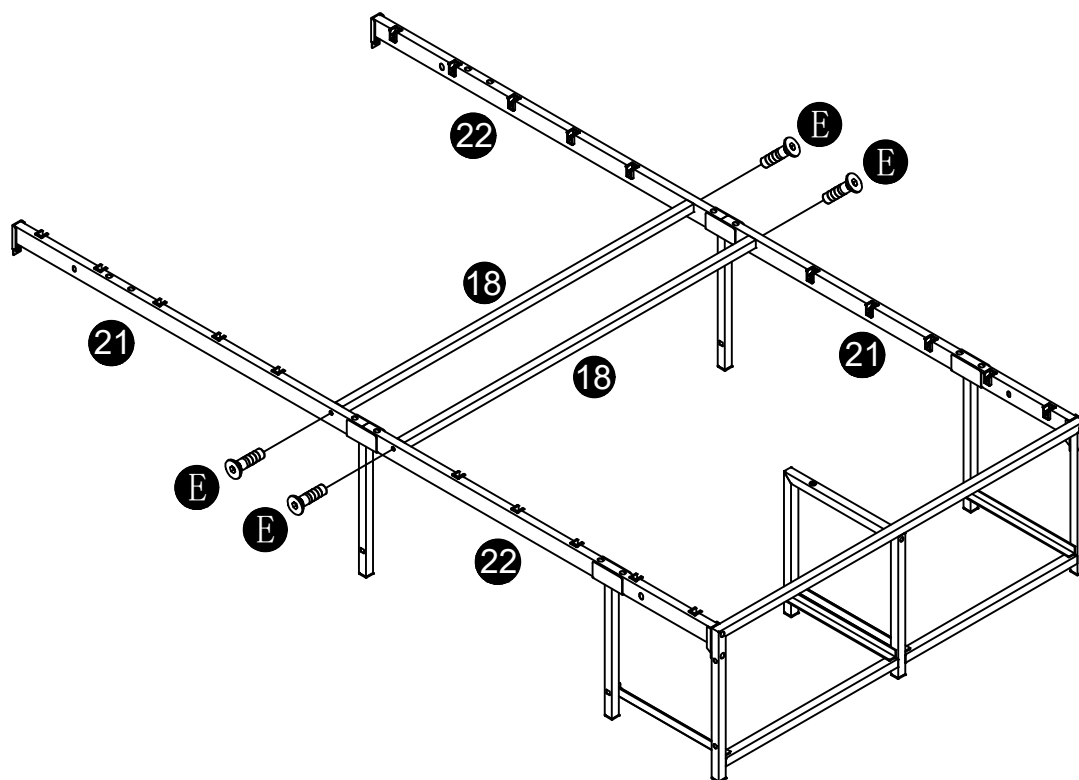


Step27

E		M6x35mm	1pc
M		M4*65mm	1pc

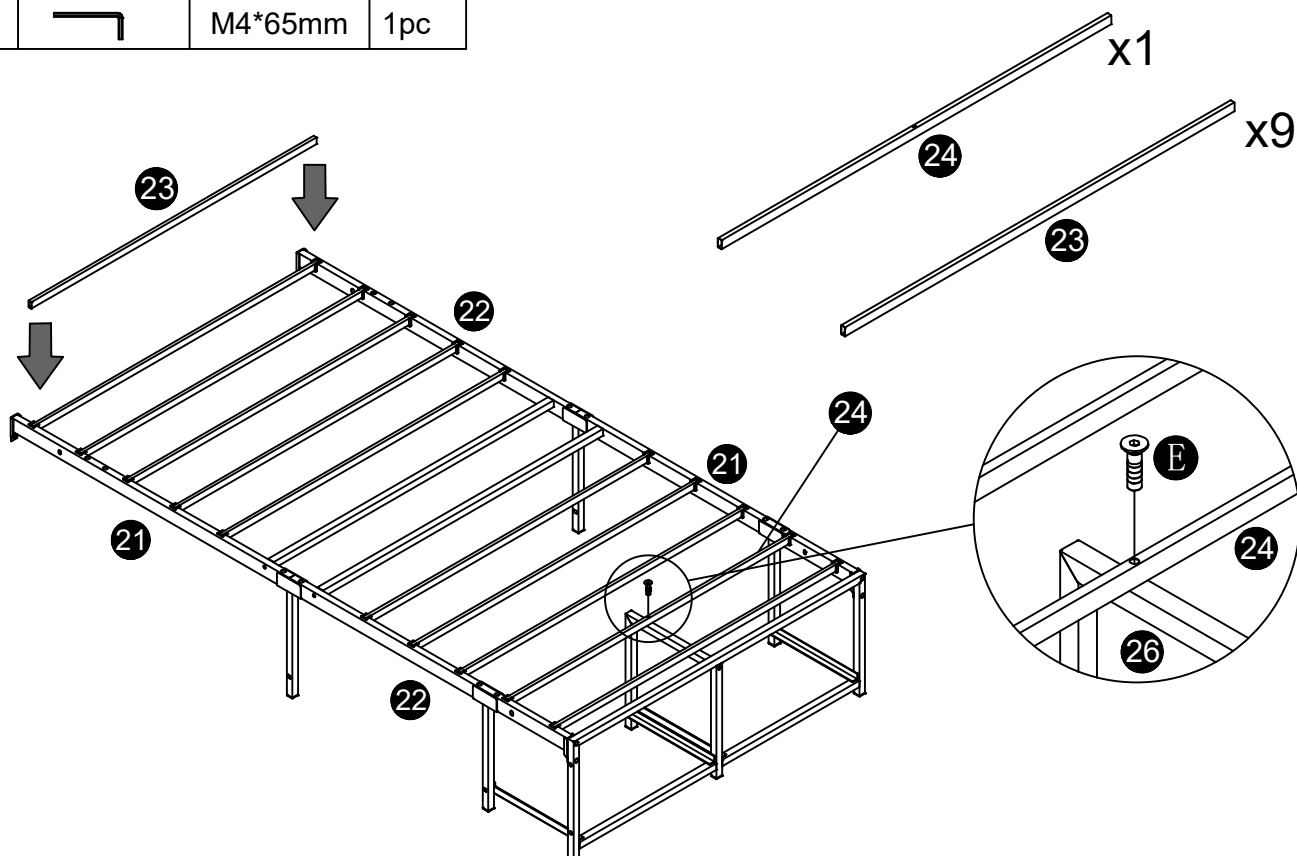


Step28

B		M8x35mm	4pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc

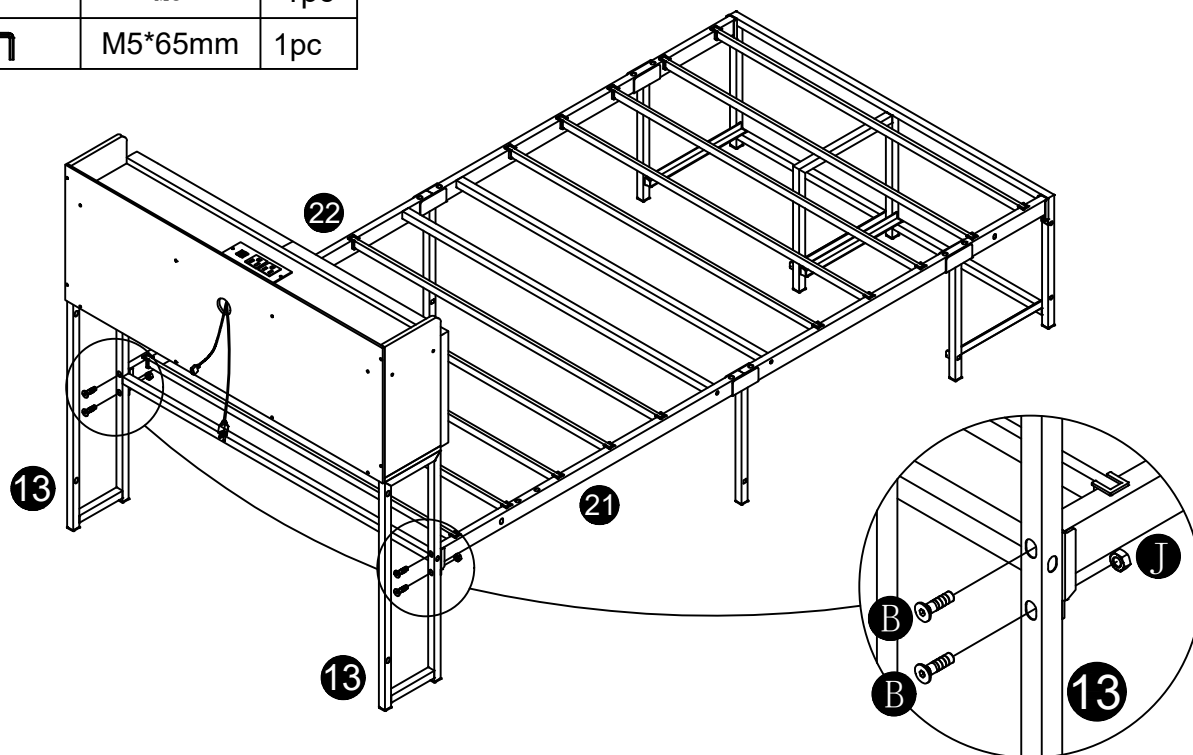


Step29

There are two installation methods for side cabinets.
Please install according to your own preferences.

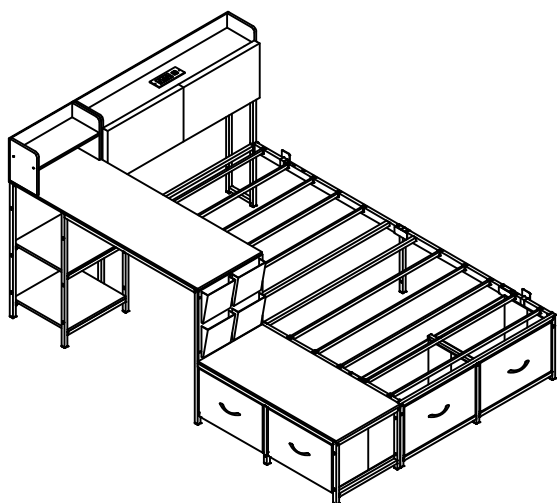


Pages 26 to 31

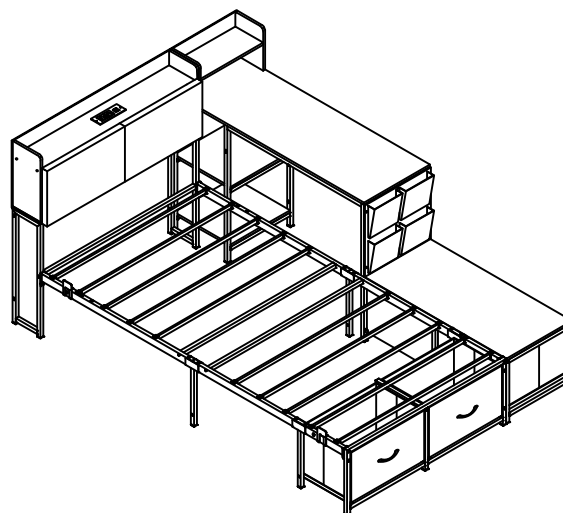

Pages 32 to 37


Step30

A		M8x50mm	2pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc

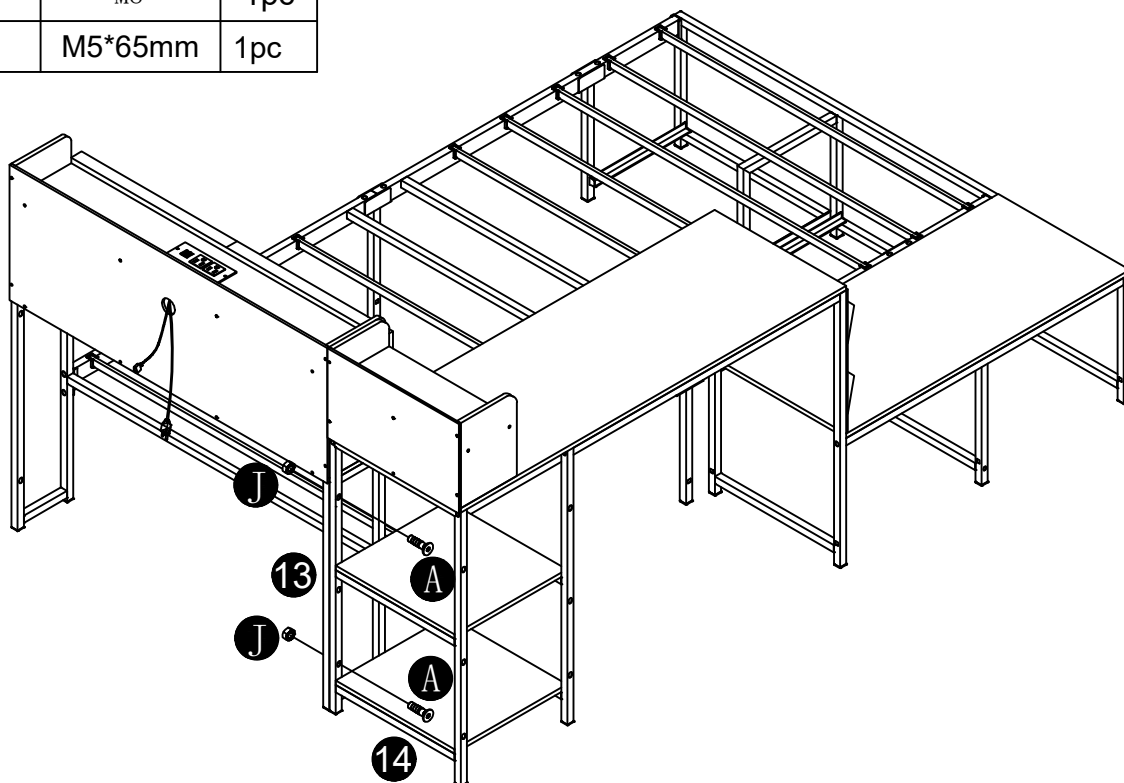




Step31

A		M8x50mm	1pc
J		M8	1pc
K		M8	1pc
L		M5*65mm	1pc


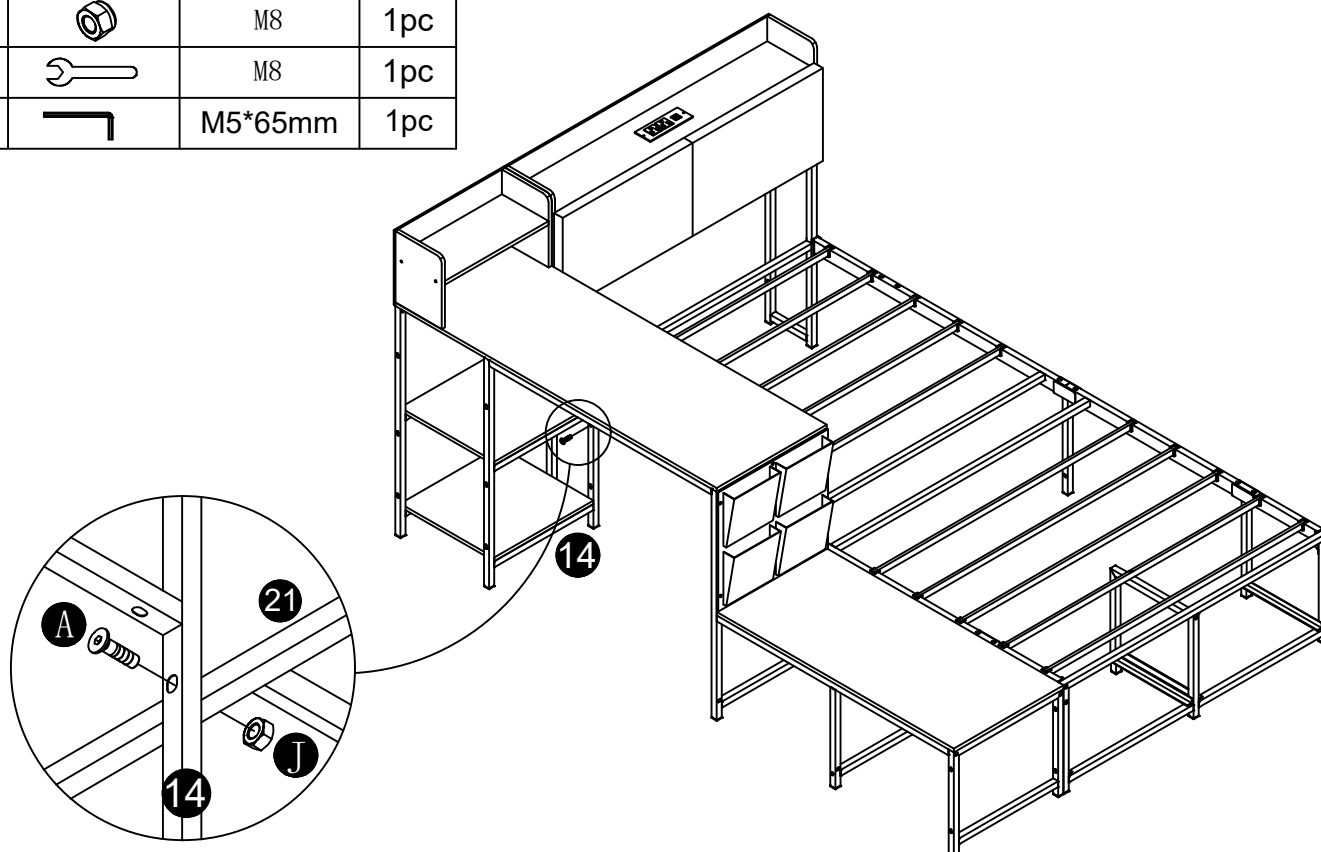


Step32

E		M6x35mm	2pcs
M		M4*65mm	1pc

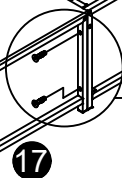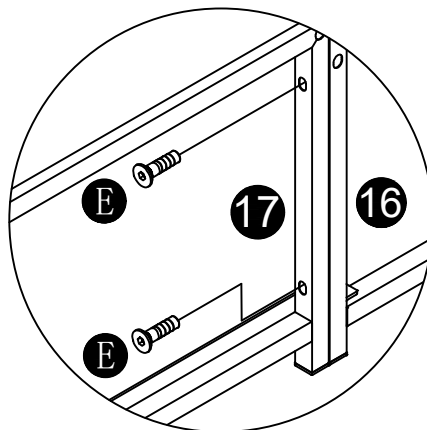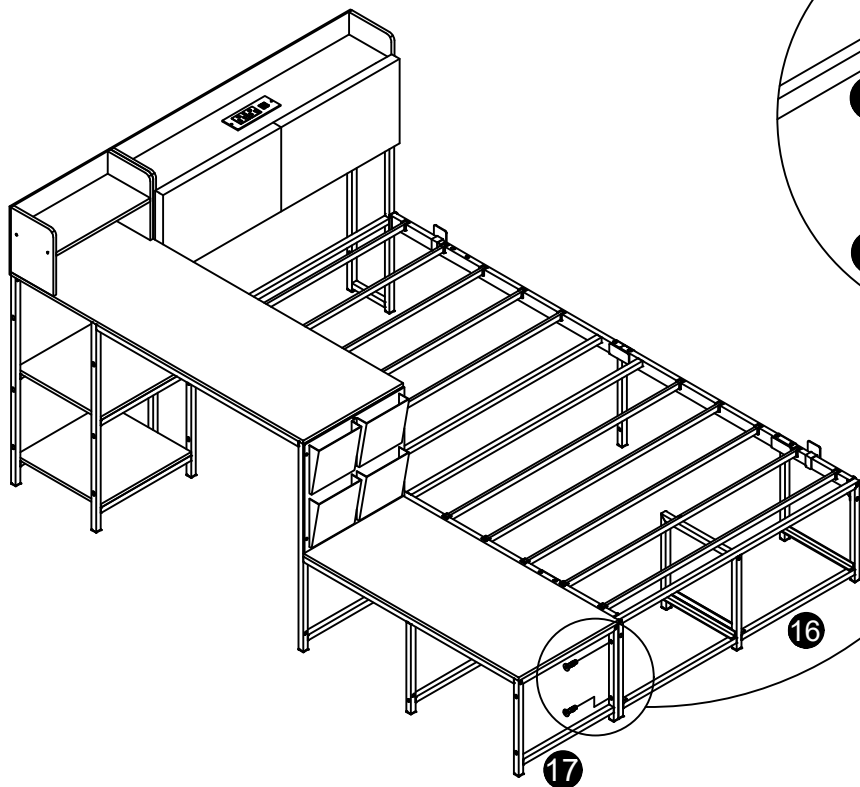

Step33

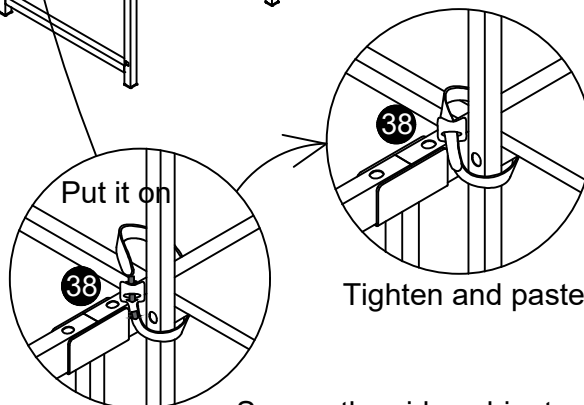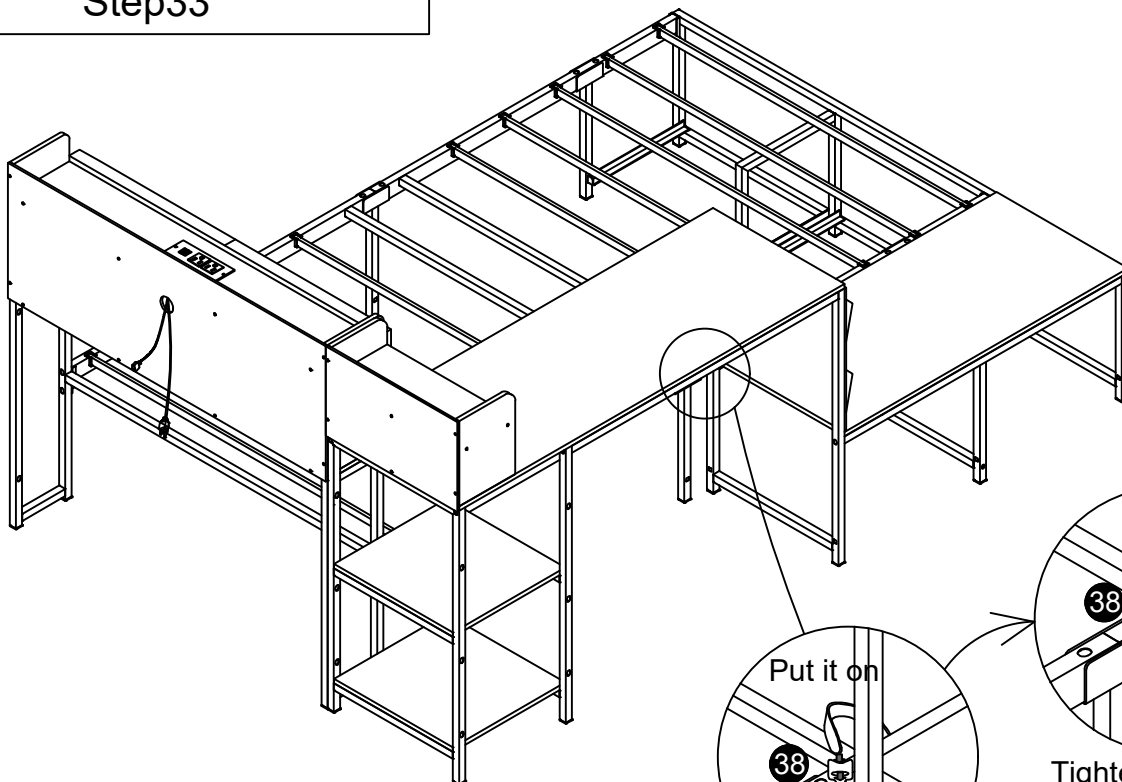


Put it on


Tighten and paste

Secure the side cabinet and bed with Velcro straps.


Step34

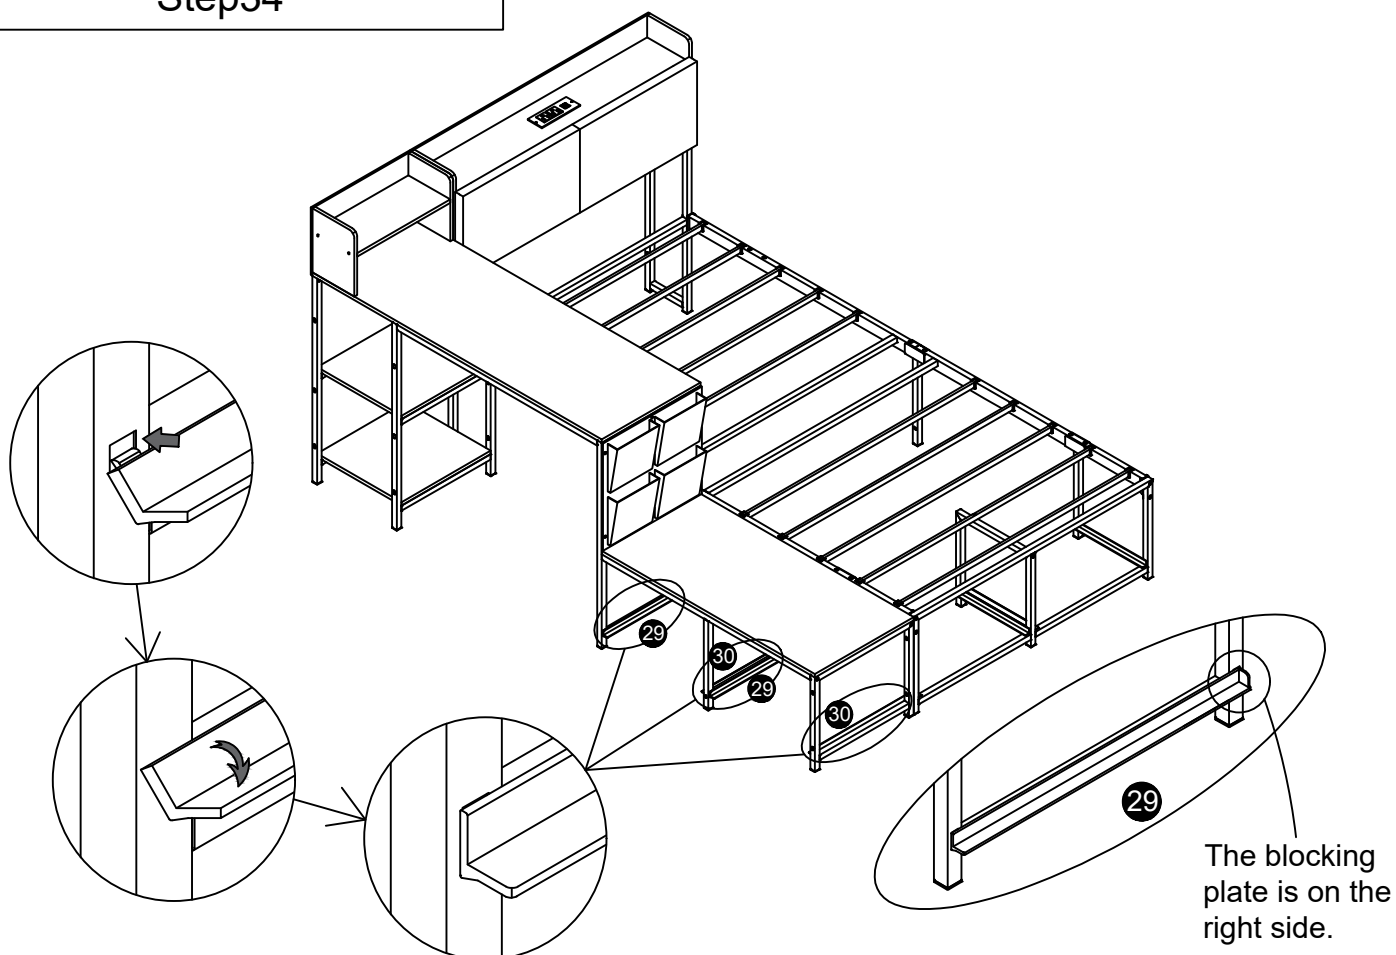


Step35

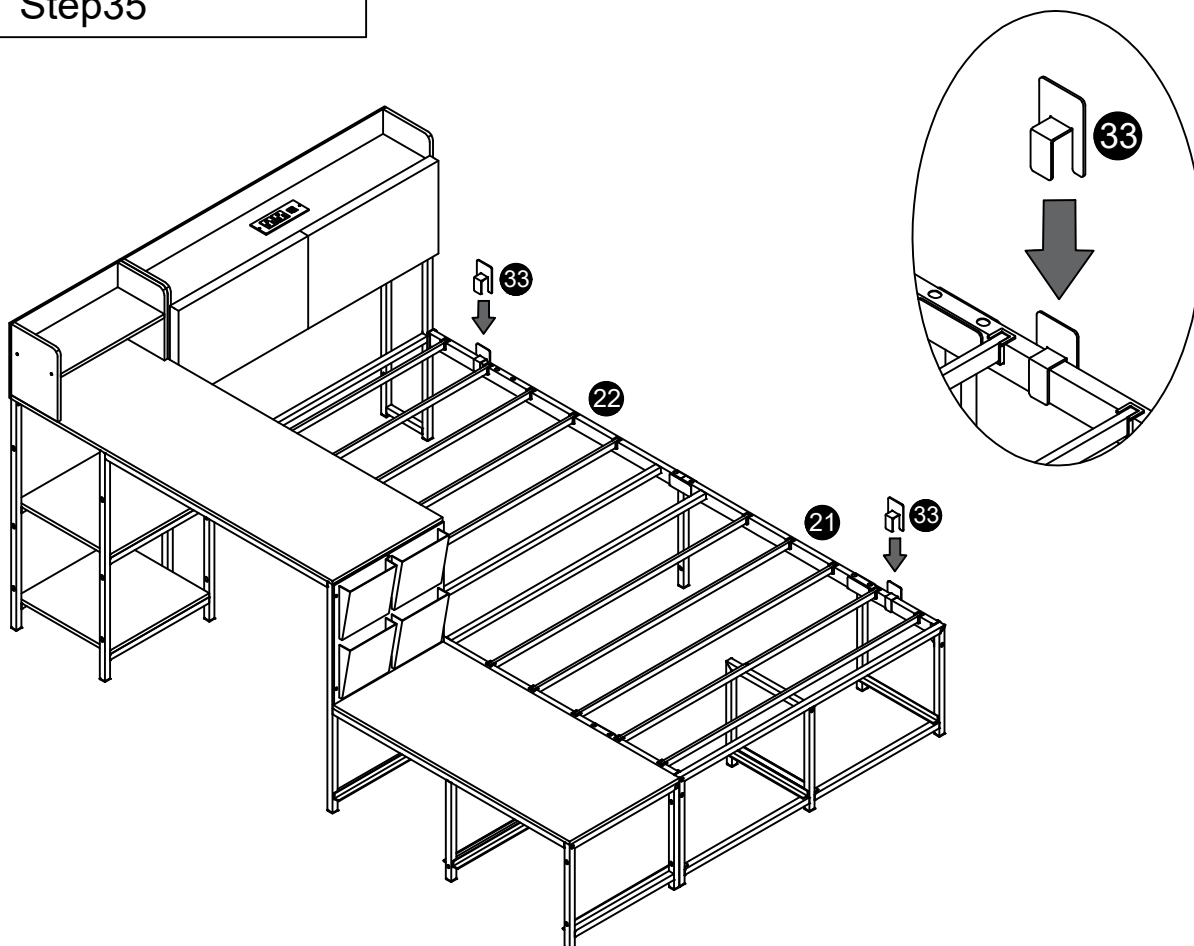

Step36


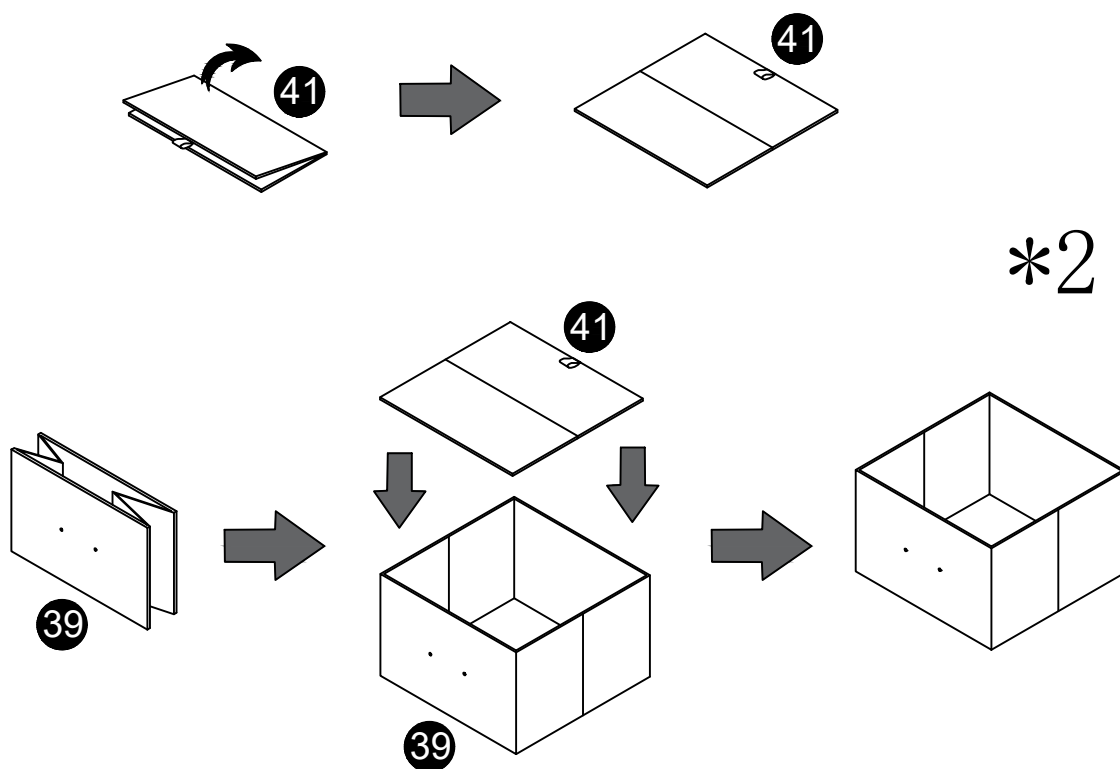


Step37

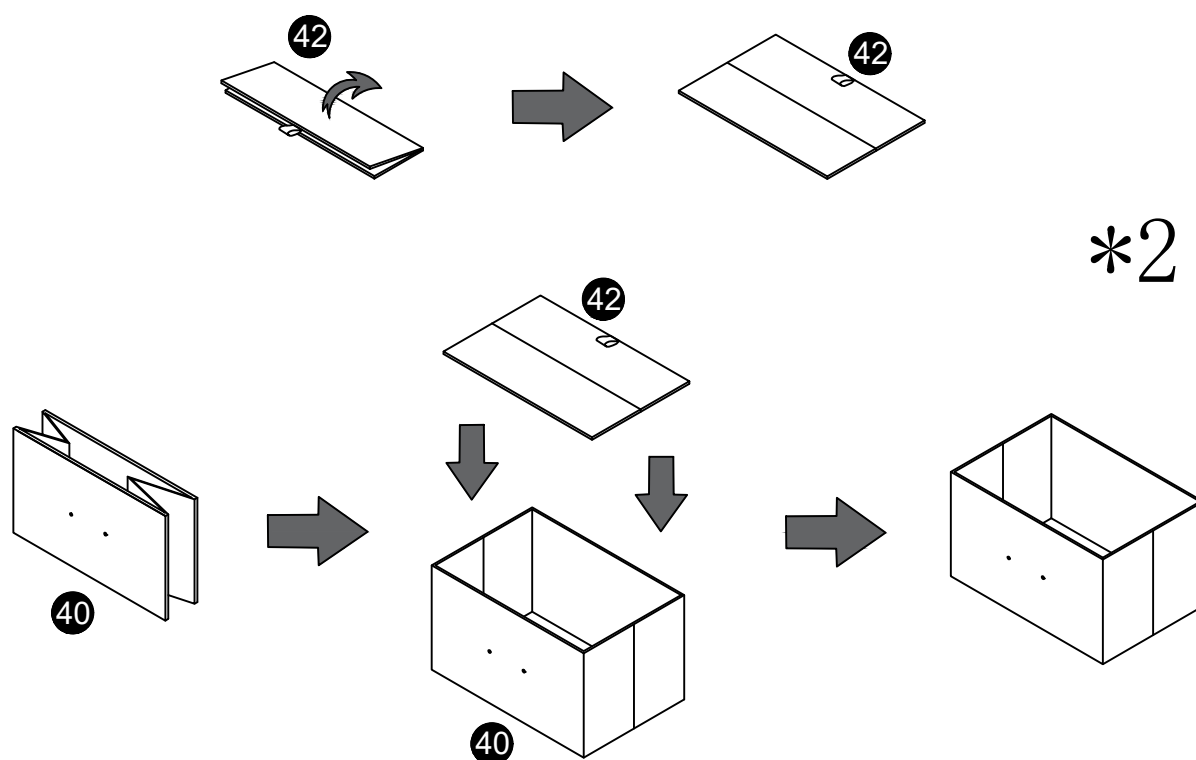



Step38

O		M4*12mm	8pcs
L		M5*65	1pc

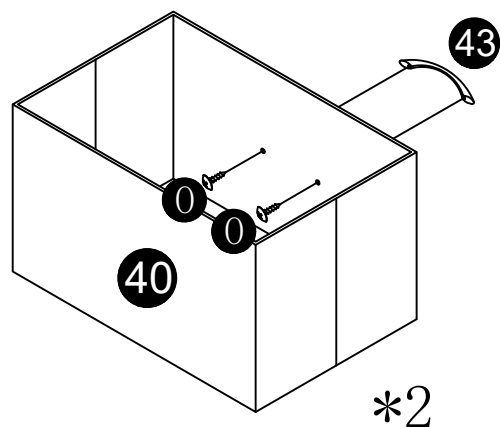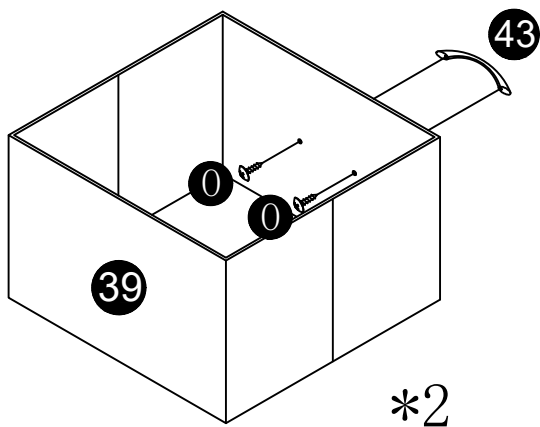


Step39

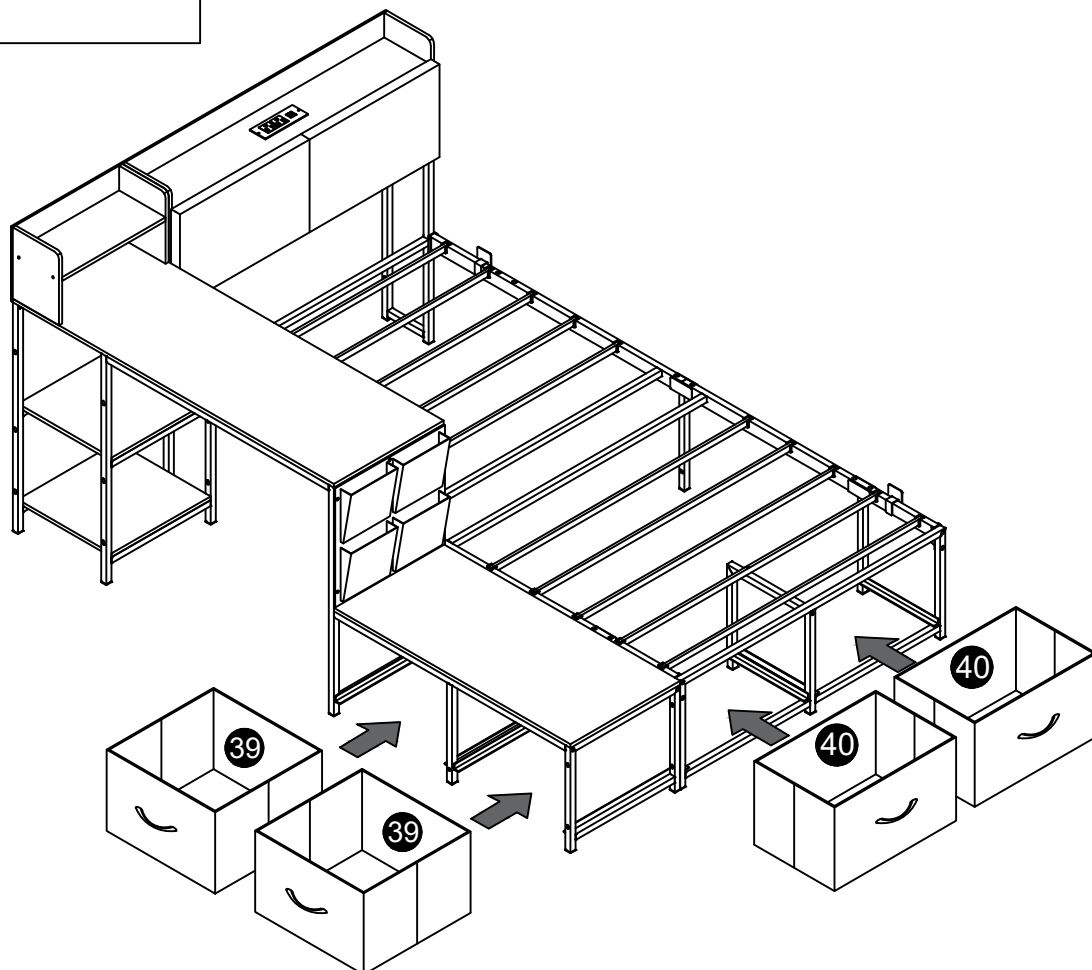

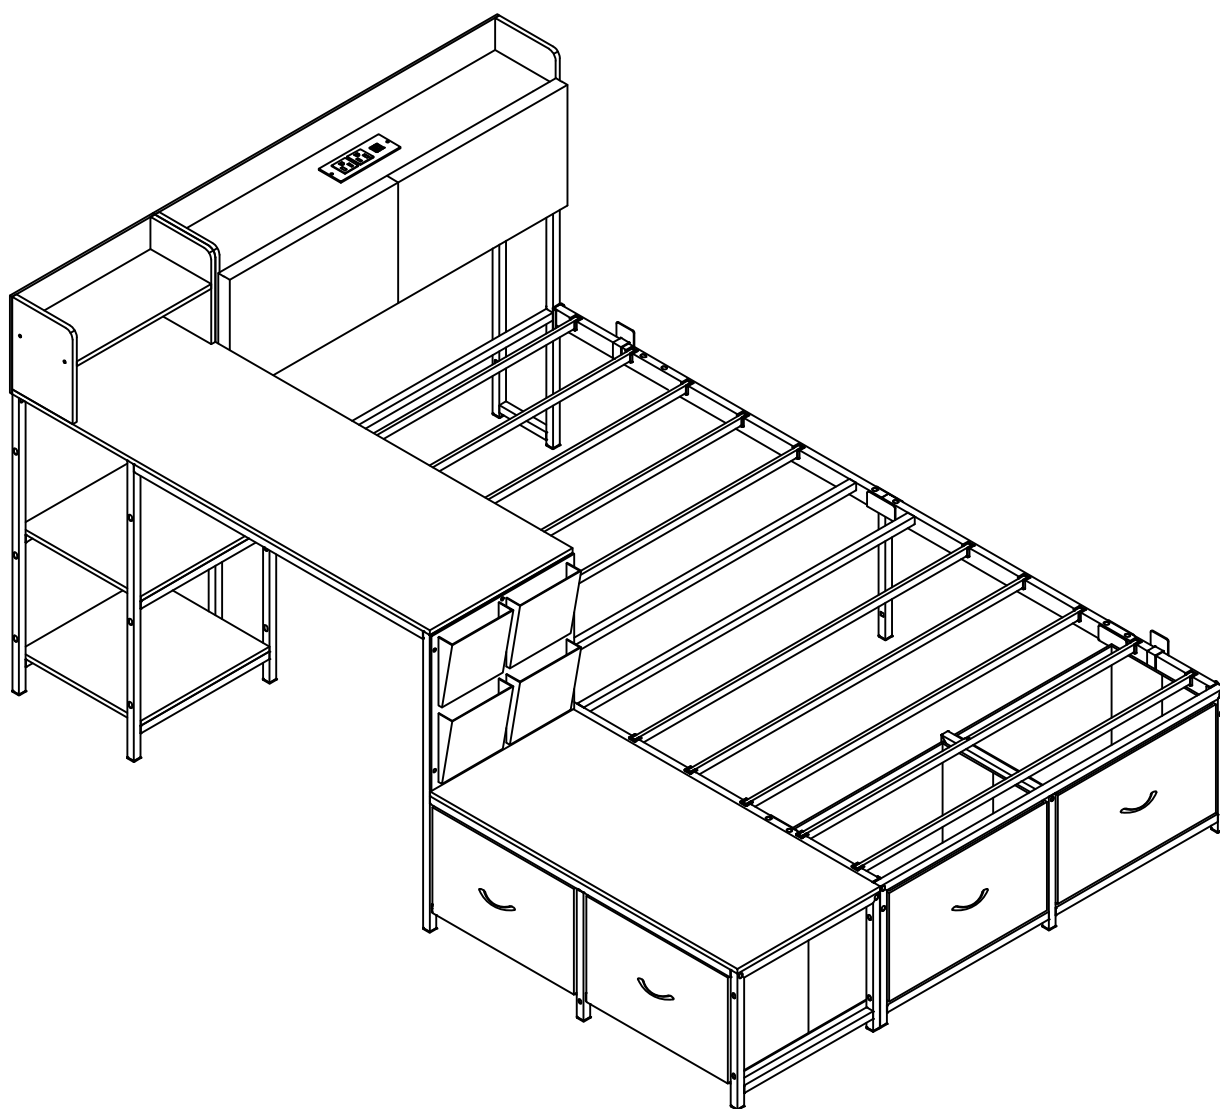



Step41

A		M8x50mm	2pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc

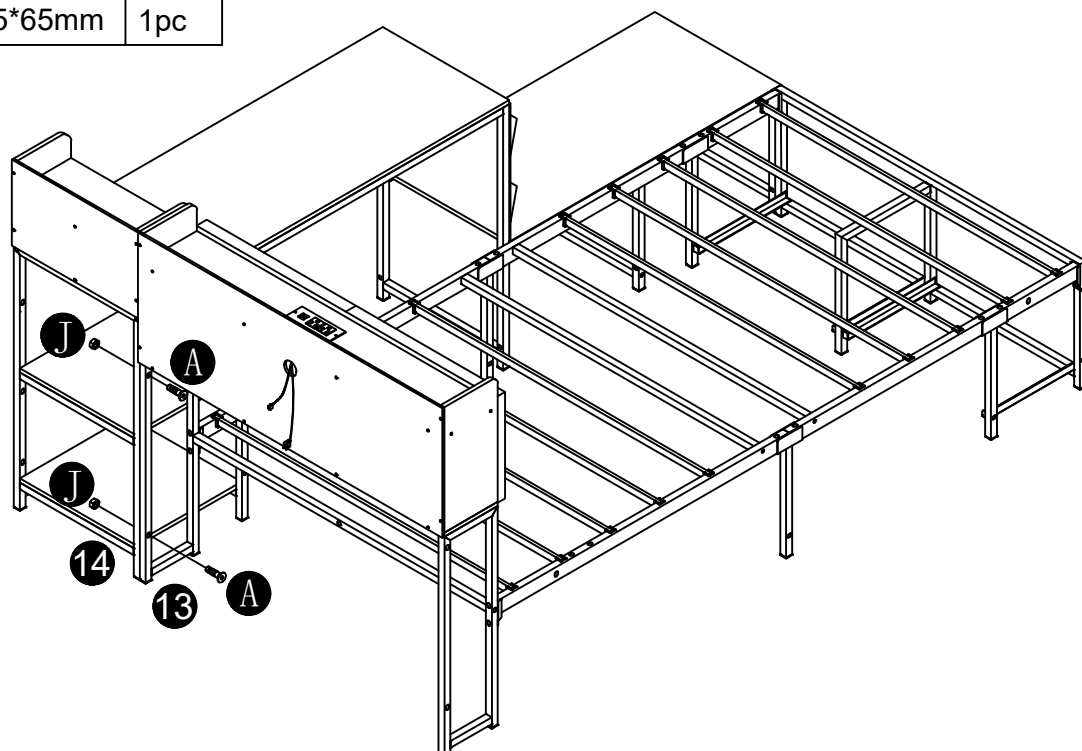


Step42

A		M8x50mm	1pc
J		M8	1pc
K		M8	1pc
L		M5*65mm	1pc

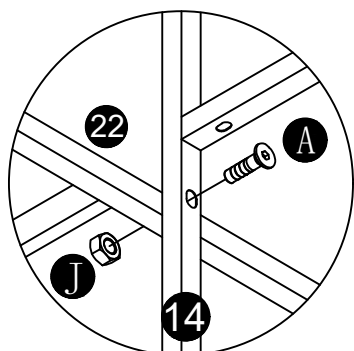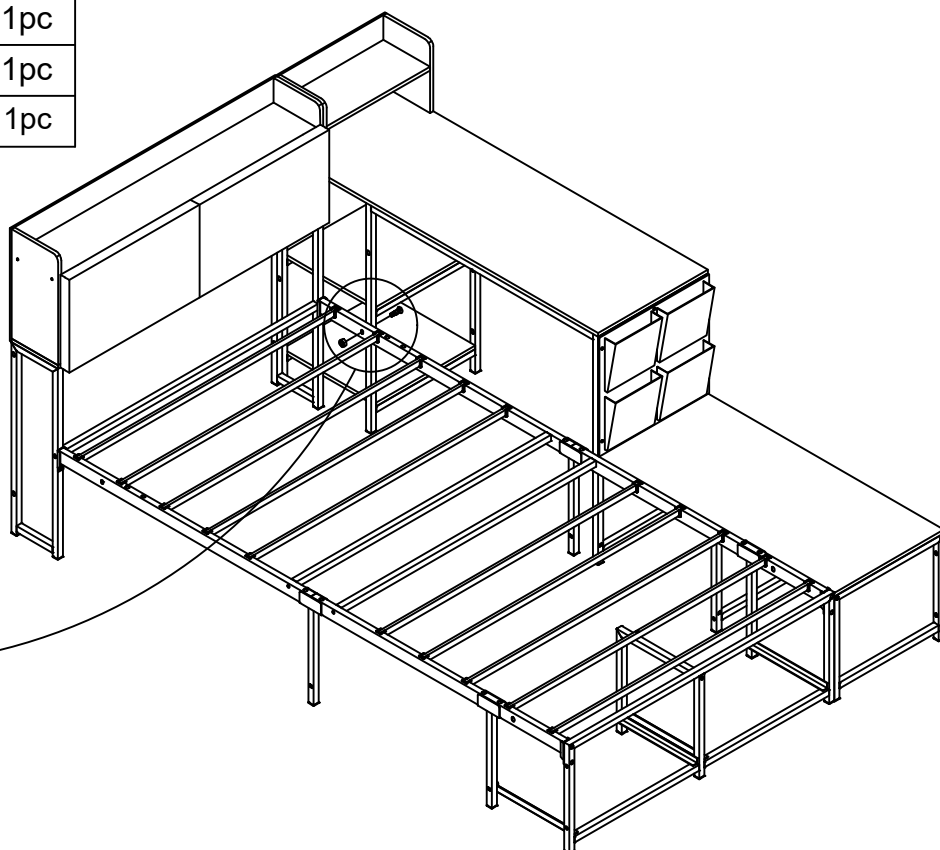


Step43


E		M6x35mm	2pcs
M		M4*65mm	1pc

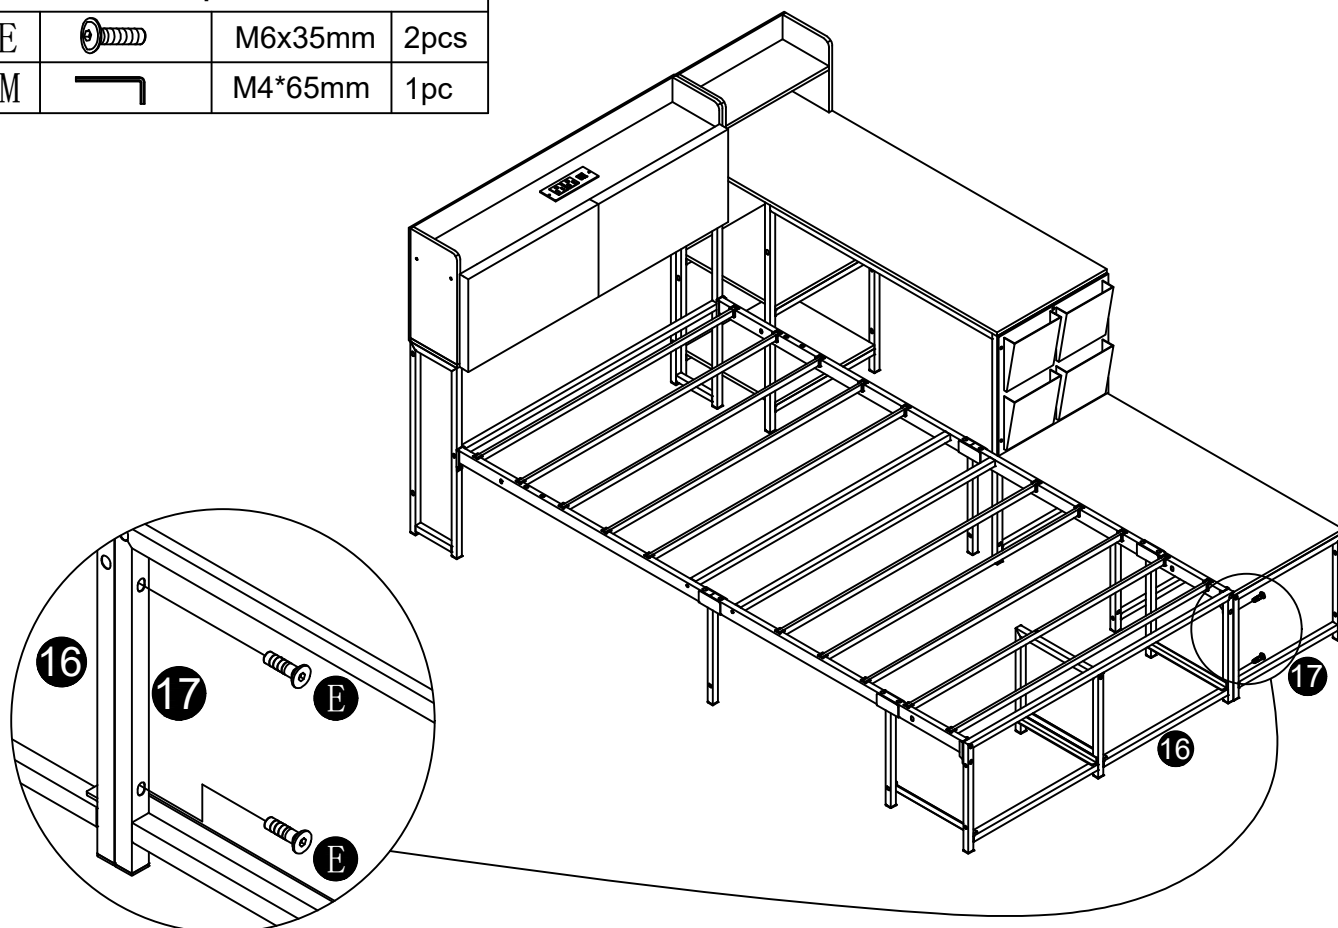


Step44

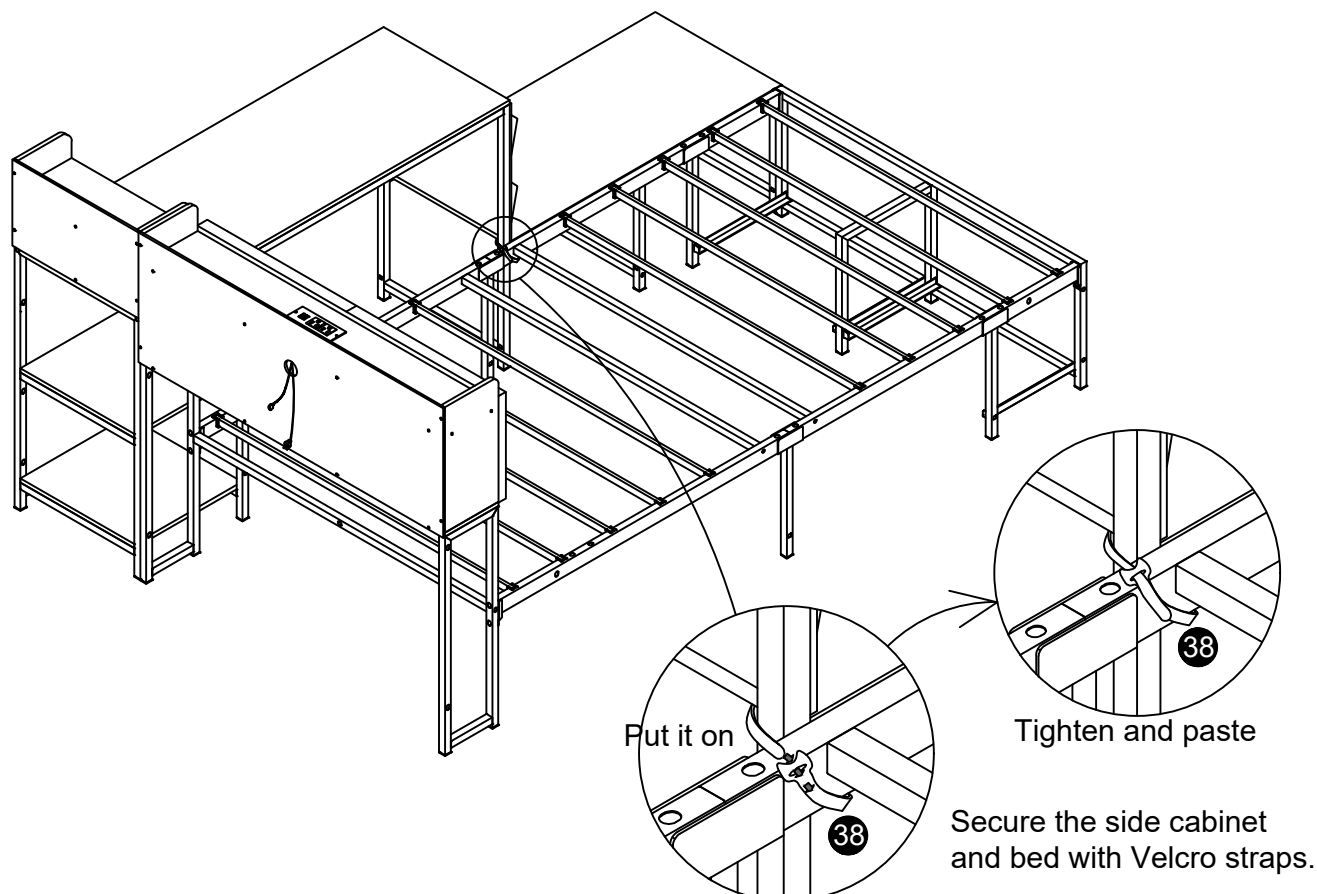


Step45

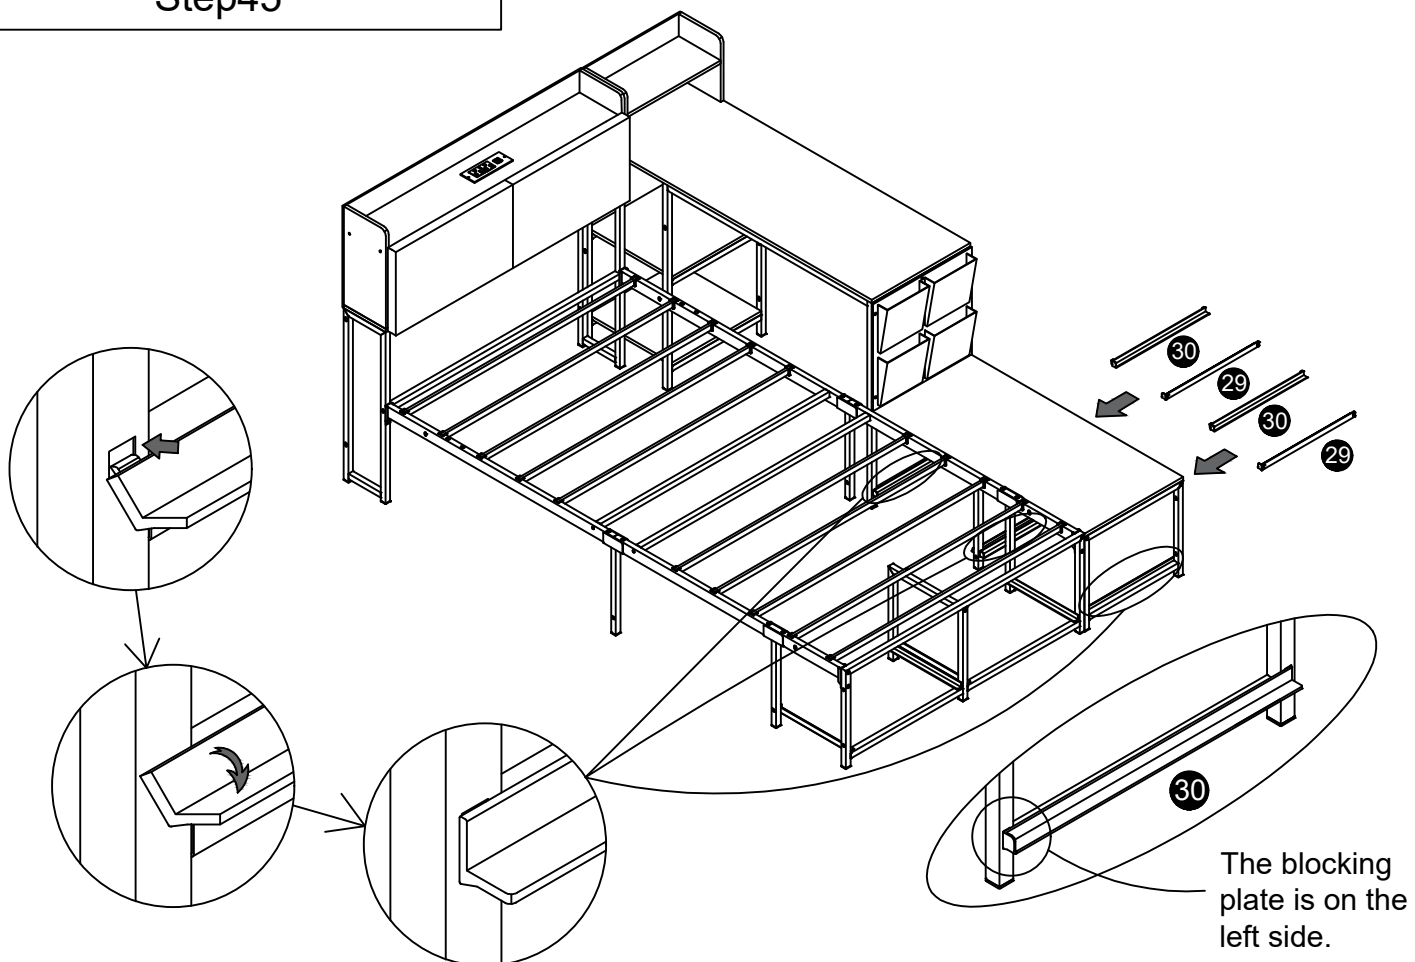


Step46

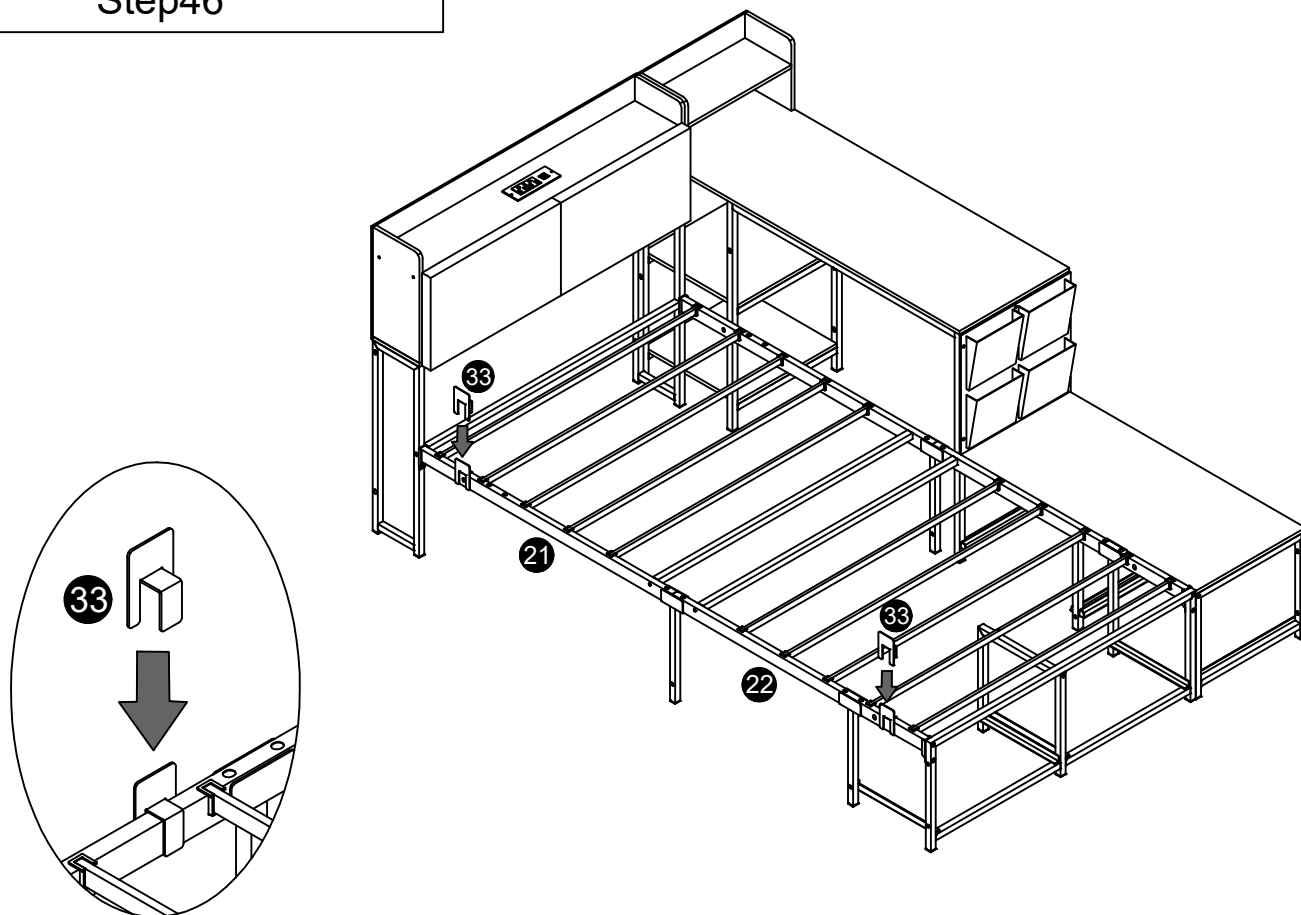

Step47


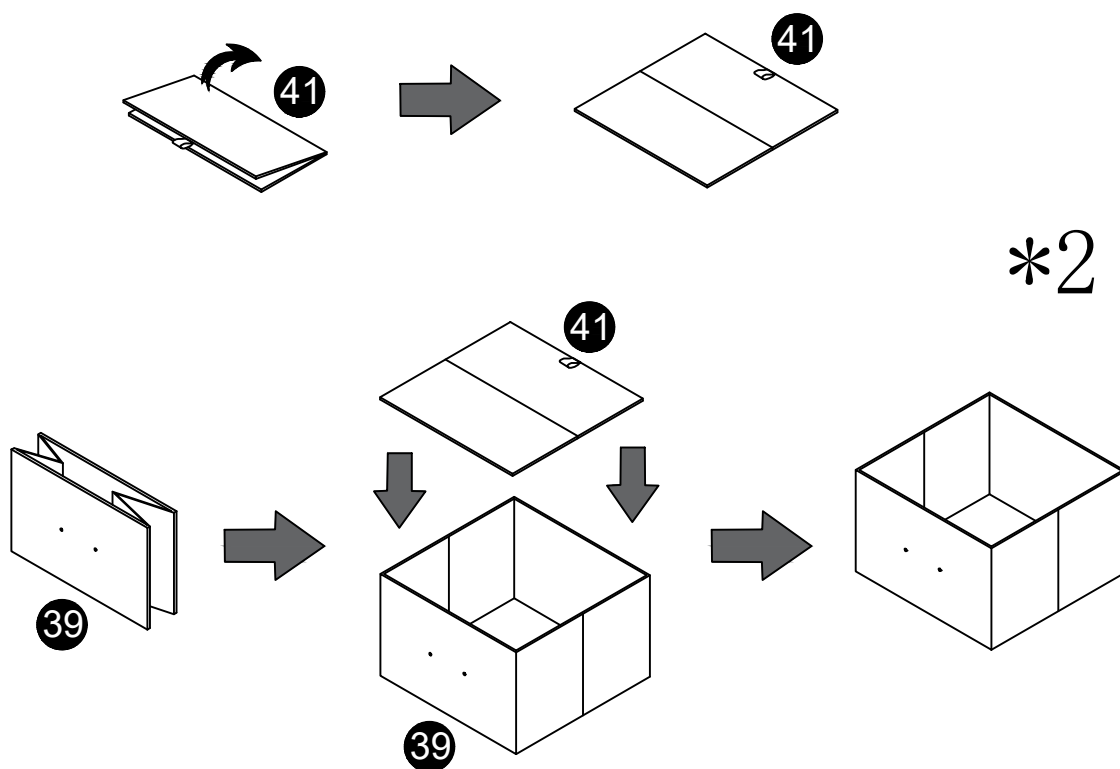


Step48

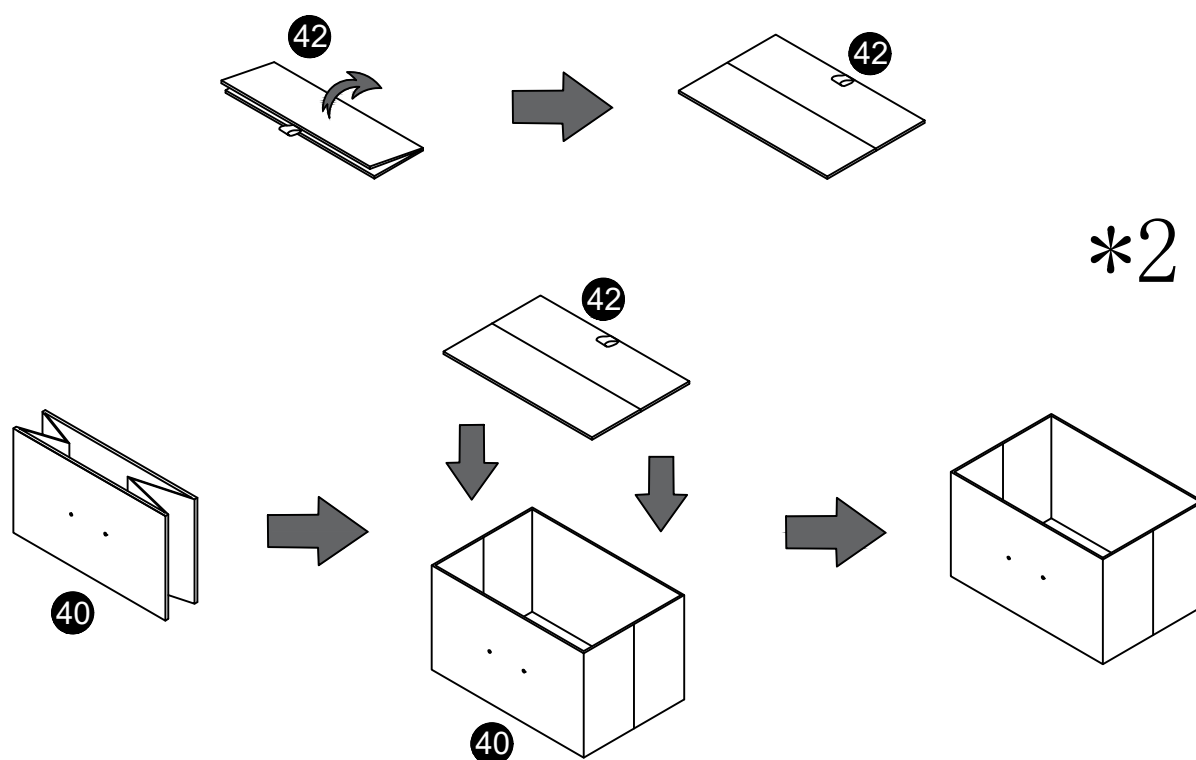

Step49

O		M4*12mm	8pcs
L		M5*65	1pc

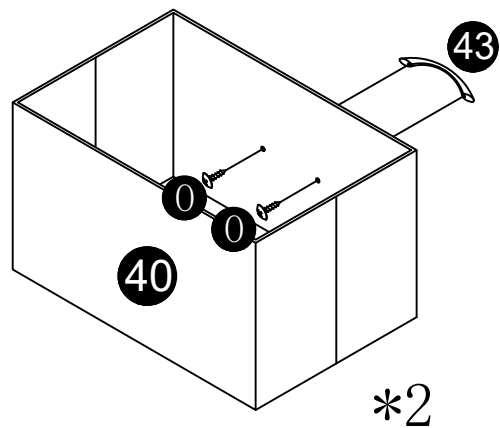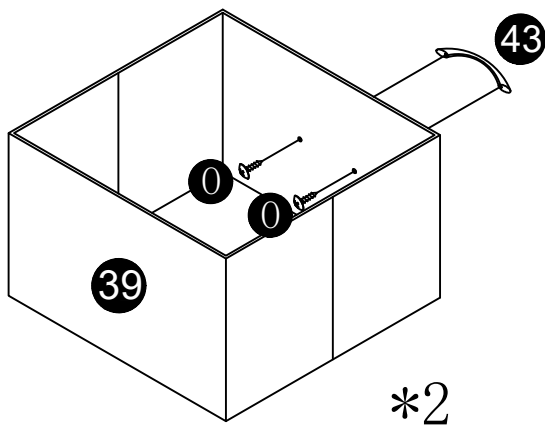

Step50

