


MANUAL INSTRUCTION
10x12.8FT
WQSP255TN



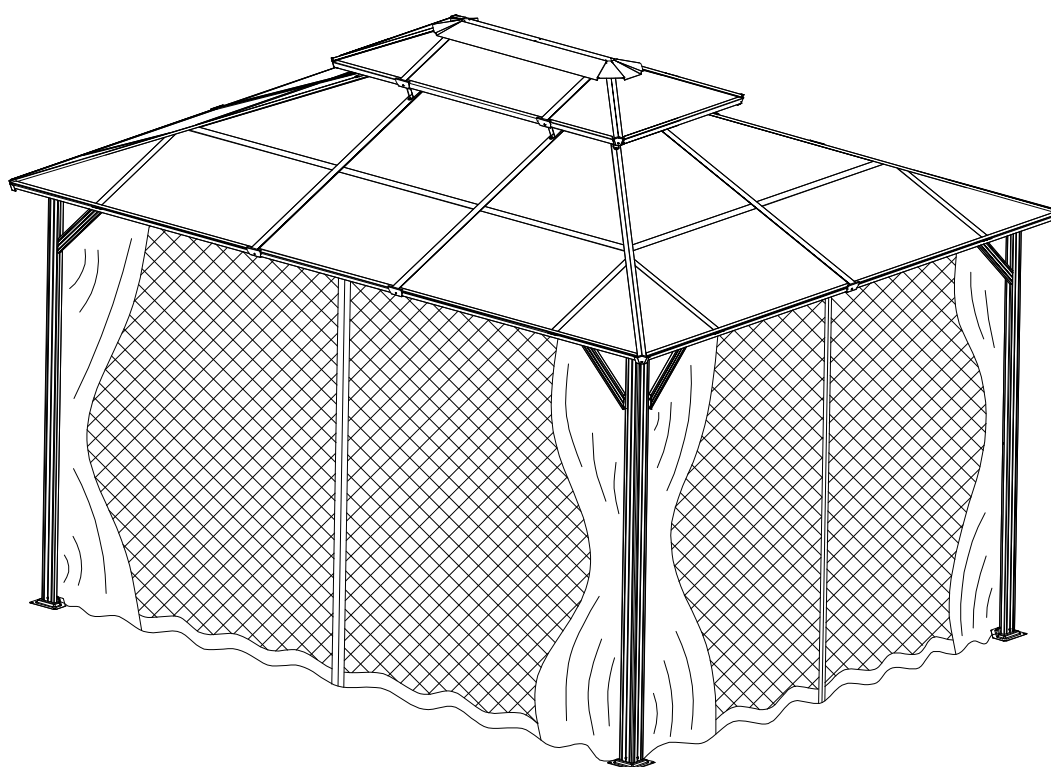


Packing list






Box A			
PARTS NO	QTY	PARTS NO	QTY
C	4	H1	1
C1	4	I	2
D1	4	J	4
D2	4	J1	4
D3	2	J2	4
D4	4	J3	4
E	4	K	4
E1	4	K1	4
E2	4	K2	4
E3	4	K3	2
E4	2	L	2
F2	2	L1	2
F3	2	L2	2
F4	2	Q	1
G	4	Q1	8
G1	4	Q2	2
G2	4	S	4
G3	2	T	4
H	1	T1	1

Box B			
PARTS NO	QTY	PARTS NO	QTY
A	4	R	4
B	2	U	80
B1	2	U1	8
B2	2	V	32
B3	2	W	140
D	4	X	16
F	4	X1	16
F1	4	Y	12
M	4	Y2	11
N	4	Z	12
N1	2	Z1	1
N2	2	Z2	1
O	8	Z3	1
O1	8		
O2	4		
O3	6		
P	8		
P1	10		
P2	3		








ASSEMBLY INSTRUCTION

PARTS NO	DESCRIPTION	QTY
A		4
B		2
B1		2
B2		2
B3		2
C		4
C1		4
D		4
D1		4
D2		4
D3		2
D4		4
E		4
E1		4








ASSEMBLY INSTRUCTION

PARTS NO	DESCRIPTION	QTY
E2		4
E3		4
E4		2
F		4
F1		4
F2		2
F3		2
F4		2
G		4
G1		4
G2		4
G3		2




ASSEMBLY INSTRUCTION

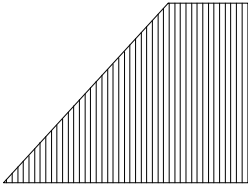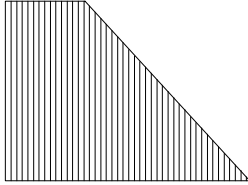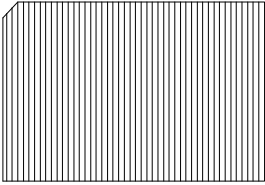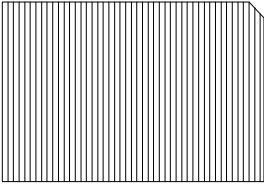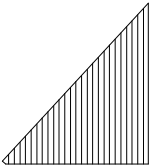PARTS NO	DESCRIPTION	QTY
H		1
H1		1
I		2
J		4
J1		4
J2		4
J3		4
K		4






ASSEMBLY INSTRUCTION

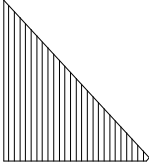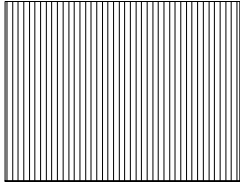
PARTS NO	DESCRIPTION	QTY
K1		4
K2		4
K3		2
L		2
L1		2
L2		2
M		4
N		4
N1		2
N2		2

ASSEMBLY INSTRUCTION


PARTS NO	DESCRIPTION	QTY
O		8
O1		8
O2		4
O3		6
P		8
P1		10
P2	?	3
Q		1
Q1		8
Q2		2
R		4
S		4
T		4
T1		1
U		80

ASSEMBLY INSTRUCTION


PARTS NO	DESCRIPTION	QTY
U1	 Ø11 *Ø6* 20mm	8
V		32
W	 M6 * 15 mm	140
X	 M6 * 35 mm	16
X1	 M4 * 12 mm	16
Y	 ST4.8* 12 mm	12
Y2	 M6	11
Z		12
Z1		1
Z2		1
Z3		1

No.	Qty	Picture	No.	Qty	Picture
A	4		W	12	 M6 * 15 mm
R	4				

Step1

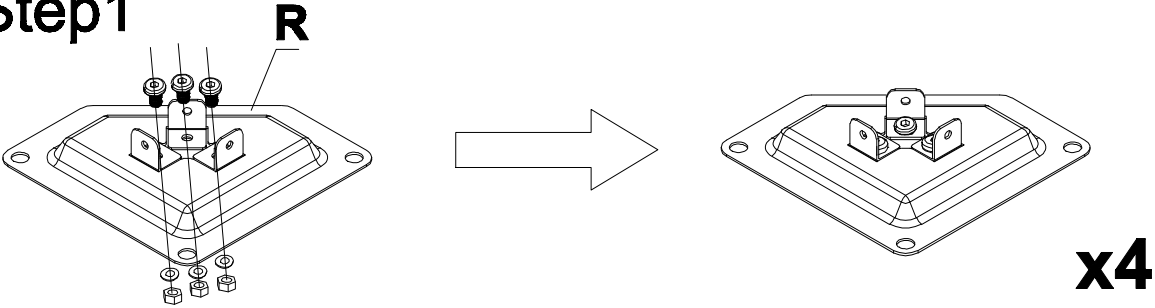


Step2

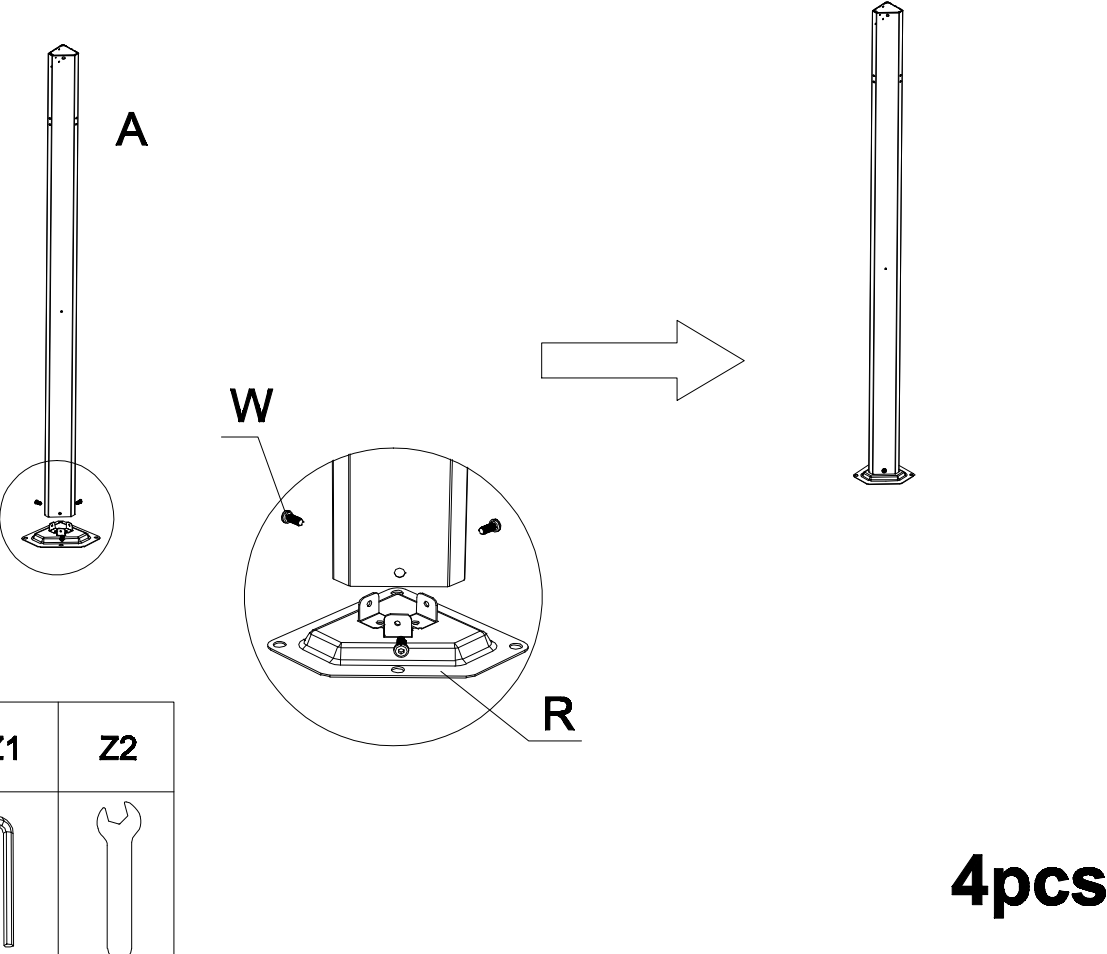

Z1	Z2
	


No.	Qty	Picture	No.	Qty	Picture
B	2		B1	2	
B2	2		B3	2	
W	24	 M6 * 15 mm	M	4	

Step3

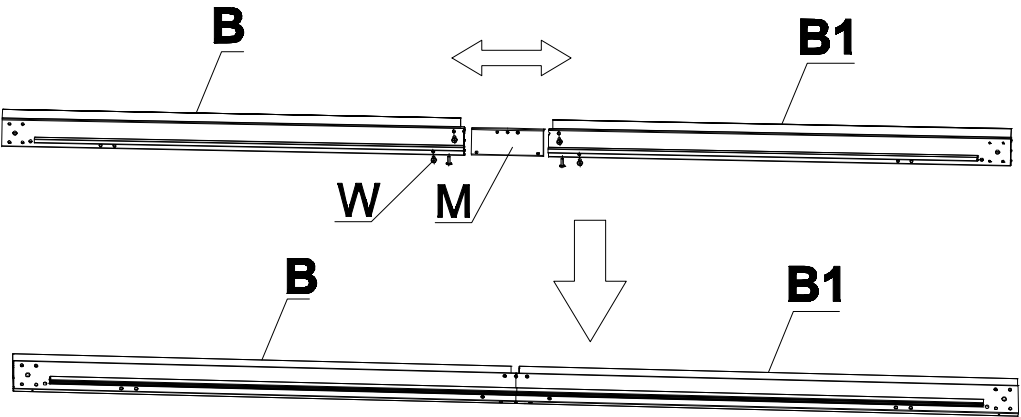


x2



Step4

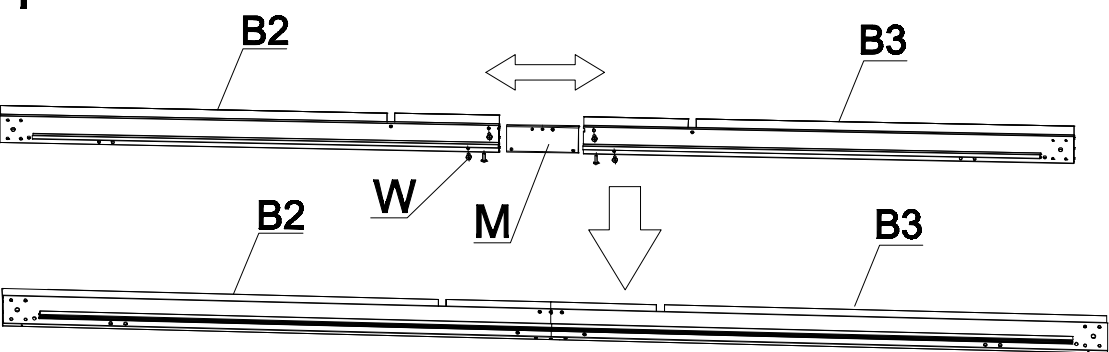


x2

Z1





No.	Qty	Picture	No.	Qty	Picture
V	32		W	24	 M6 * 15 mm
C	4		O	8	
C1	4		X1	16	 M4 * 12 mm

Step5

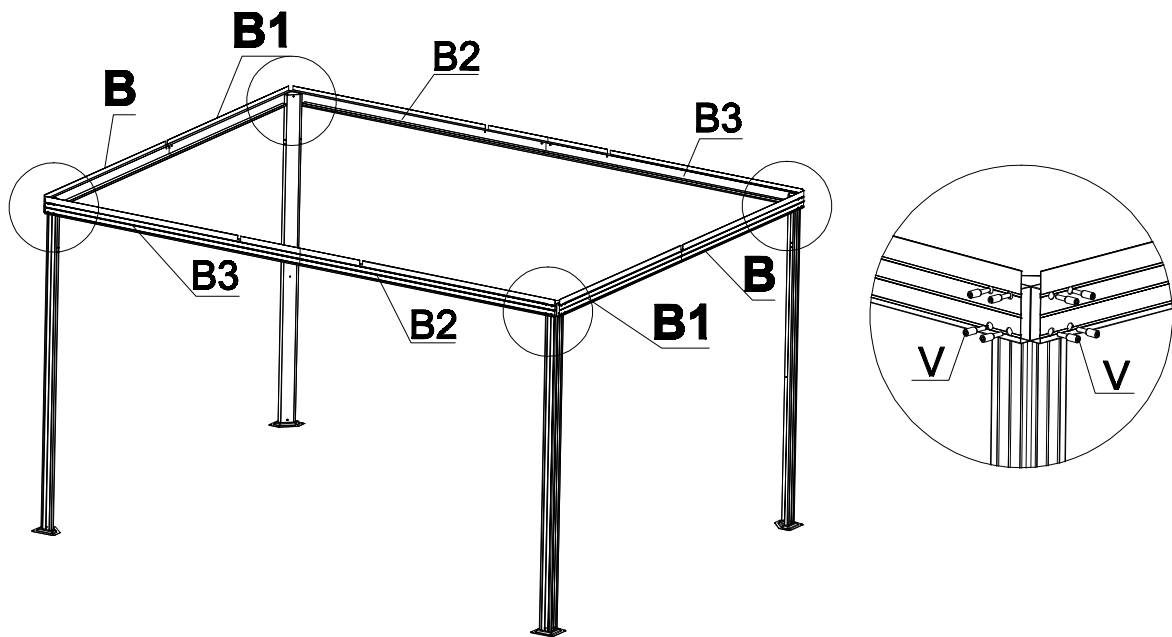





Step6

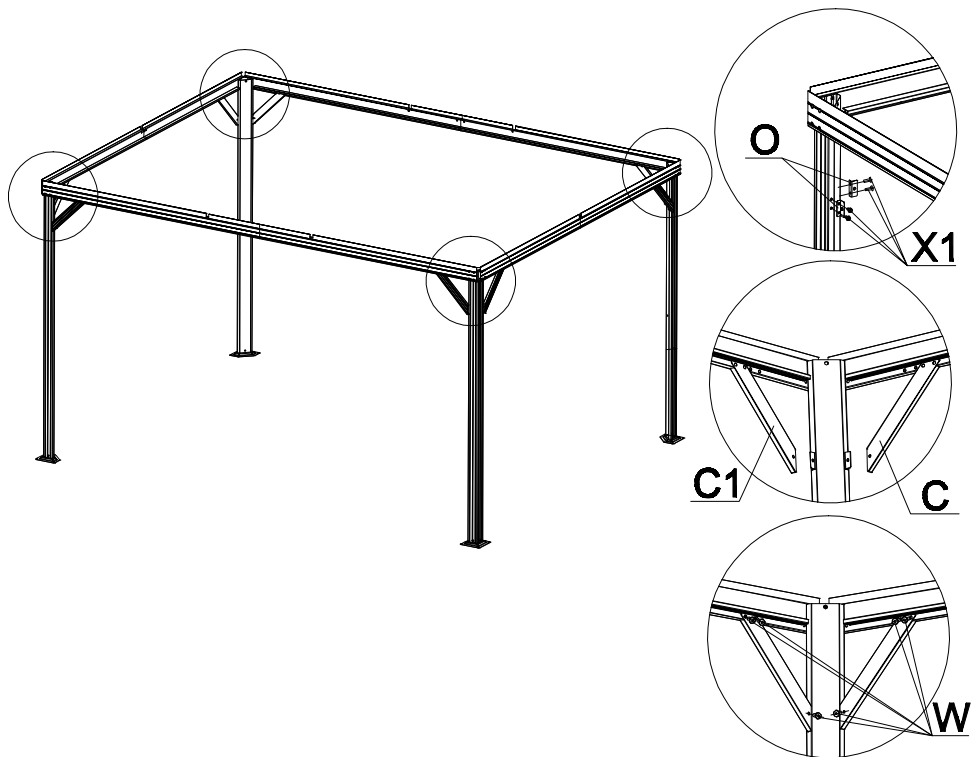

Z1	Z3
	

No.	Qty	Picture	No.	Qty	Picture
N	4		Y	12	
N1	2		N2	2	

Step7

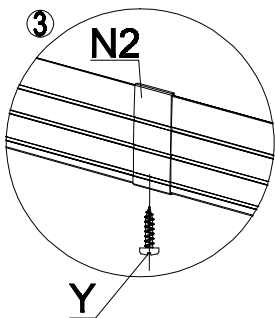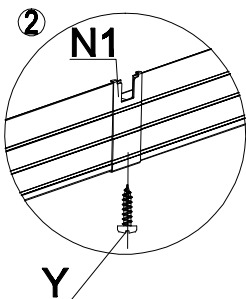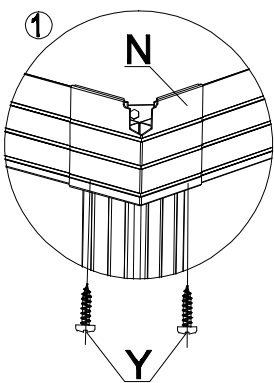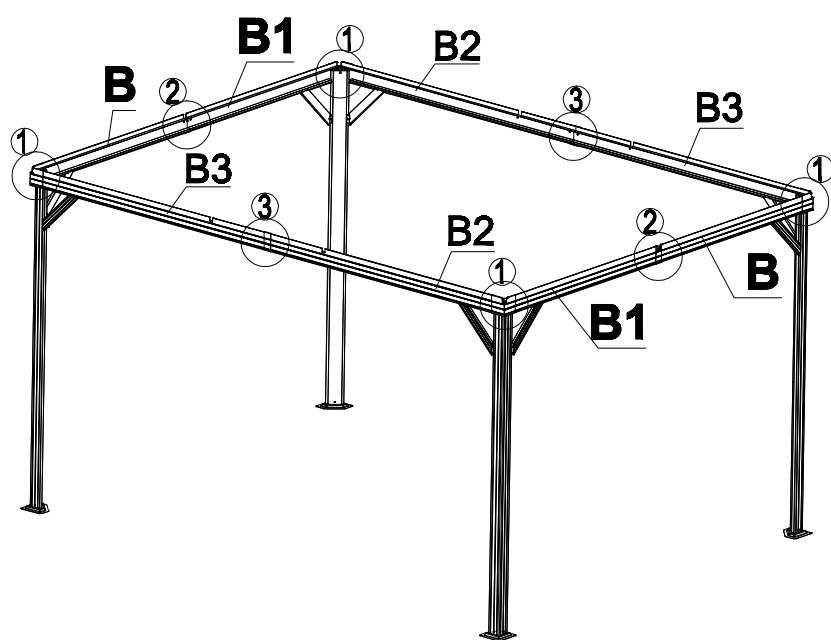



Z3



No.	Qty	Picture	No.	Qty	Picture
D	4		W	12	 M6 * 15 mm
D1	4		X	4	 M6 * 35 mm
O1	4		Y2	4	 M6
O2	4				


Step8

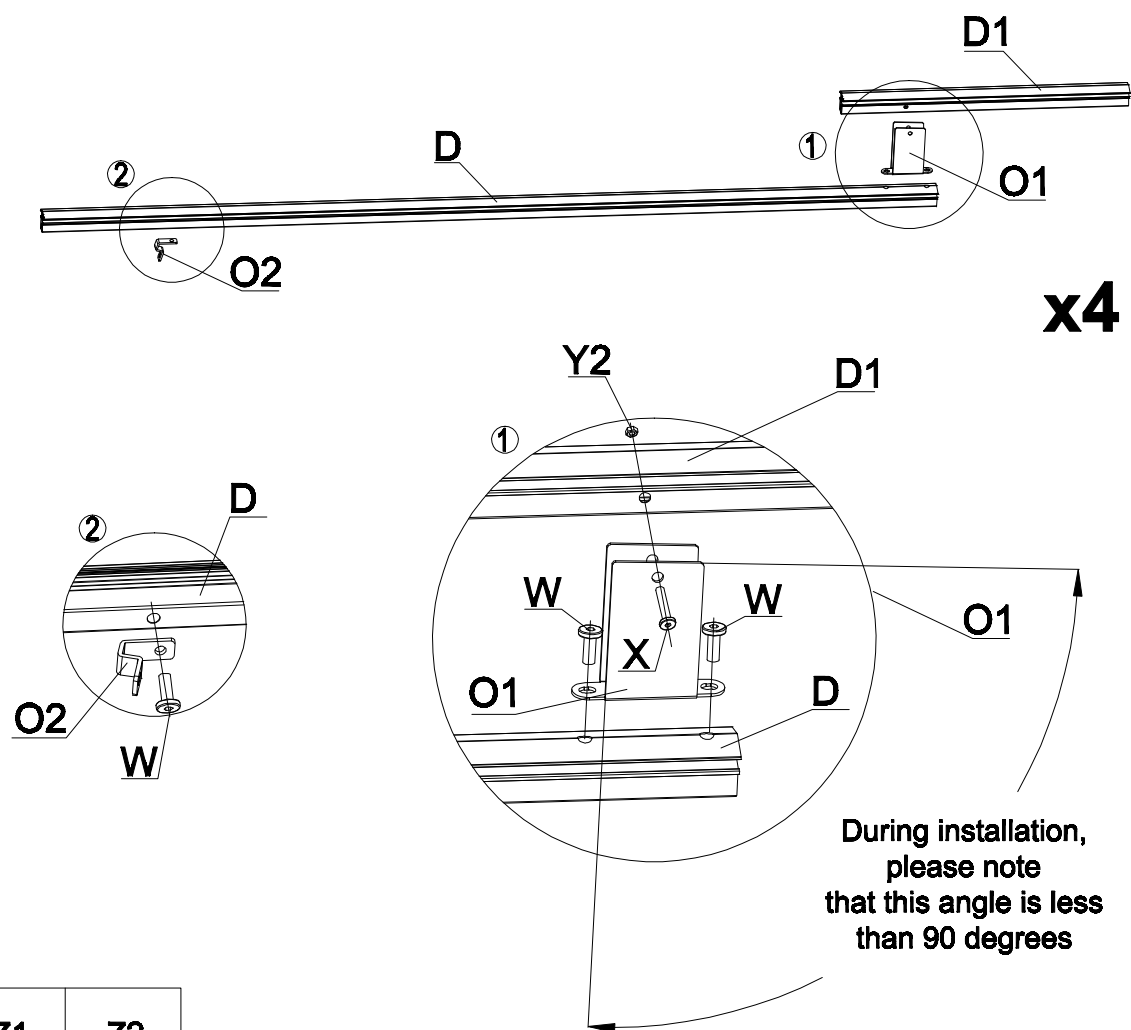


Z1	Z2
	

No.	Qty	Picture	No.	Qty	Picture
H	1		W	12	 M6 * 15 mm

Step9

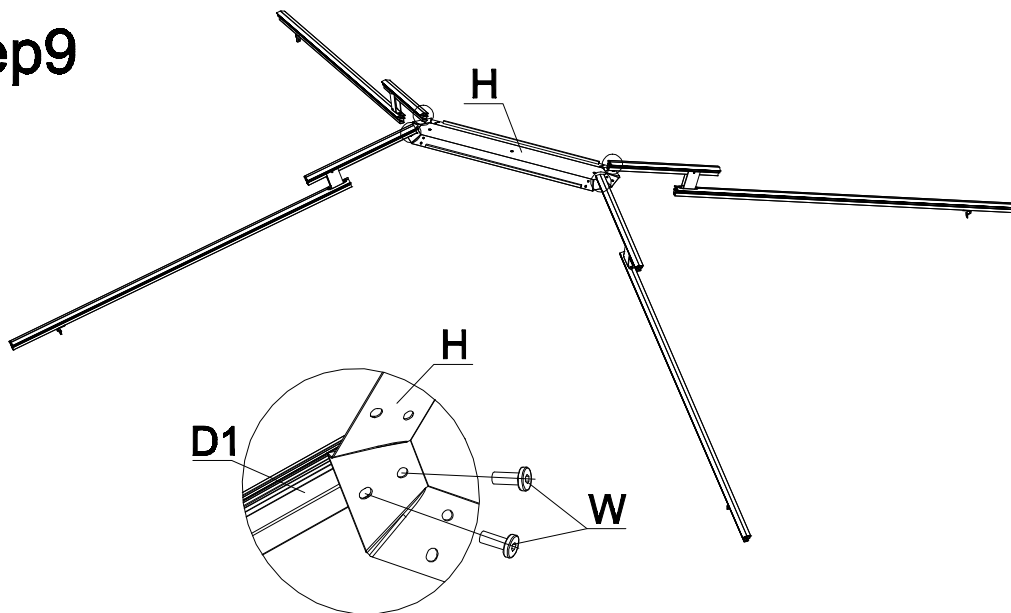

Step10

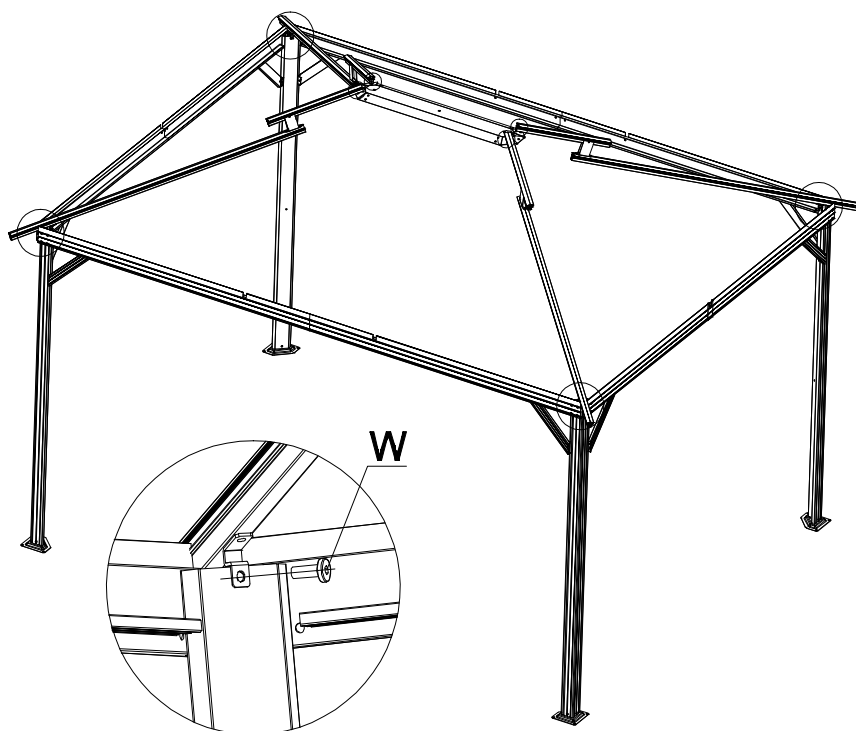

Z1





No.	Qty	Picture	No.	Qty	Picture
D2	4		W	12	 M6 * 15 mm
D4	4		X	4	 M6 * 35 mm
O1	4		Y2	4	 M6
O3	4				

Step11






x4

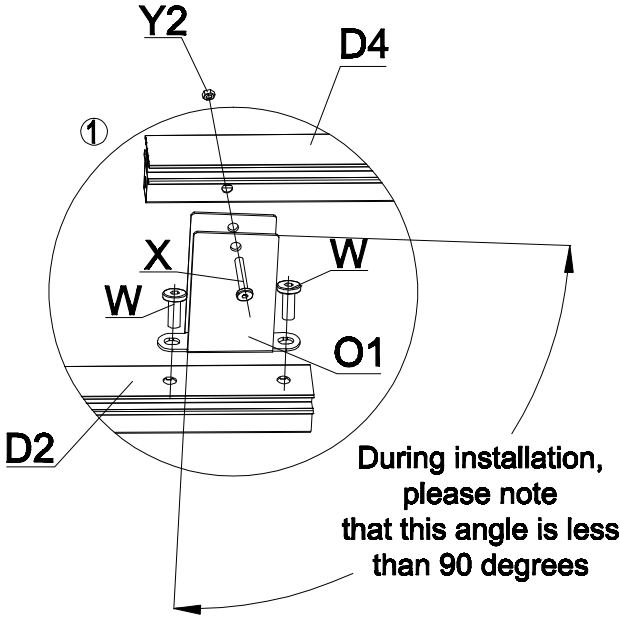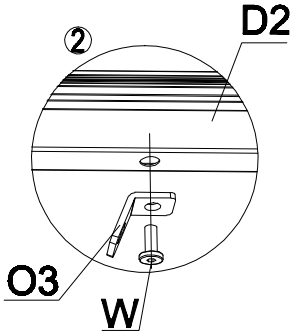

Z1	Z2
	




No.	Qty	Picture
W	12	 M6 * 15 mm


Step12

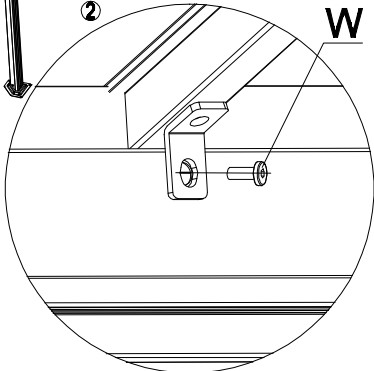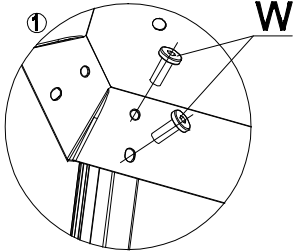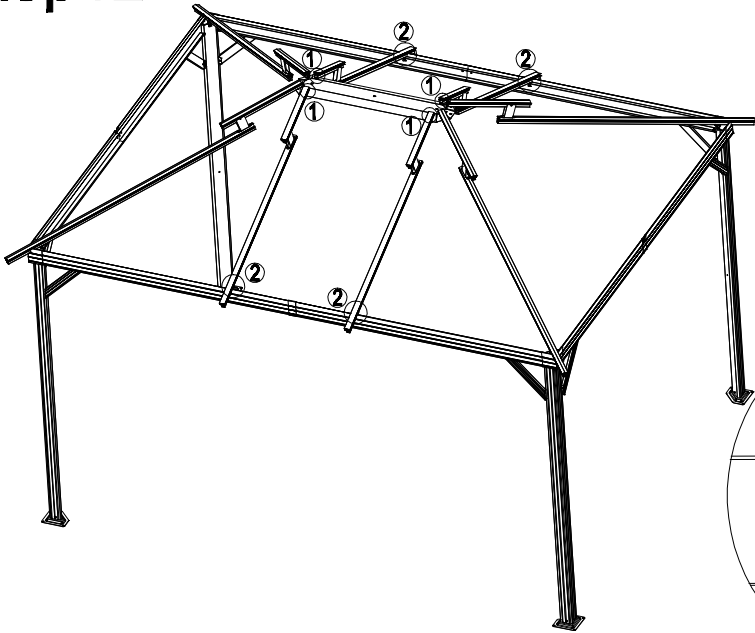


No.	Qty	Picture	No.	Qty	Picture
G1	2		G2	2	
G3	2		W	4	 M6 * 15 mm

Step13

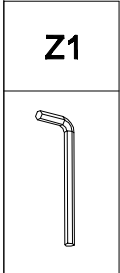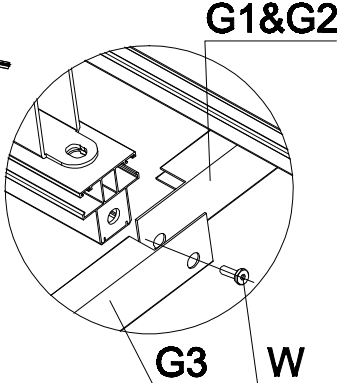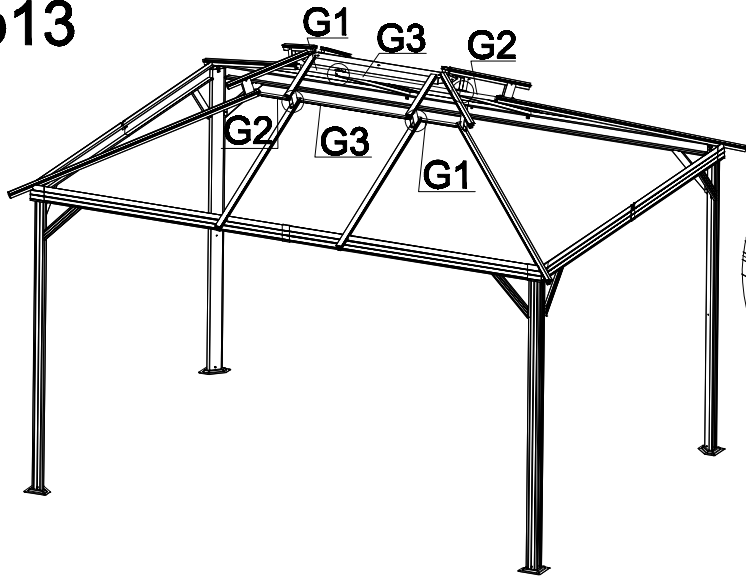


No.	Qty	Picture	No.	Qty	Picture
D3	2		W	4	 M6 * 15 mm
G1	2		G2	2	
I	2		O3	2	



Step14

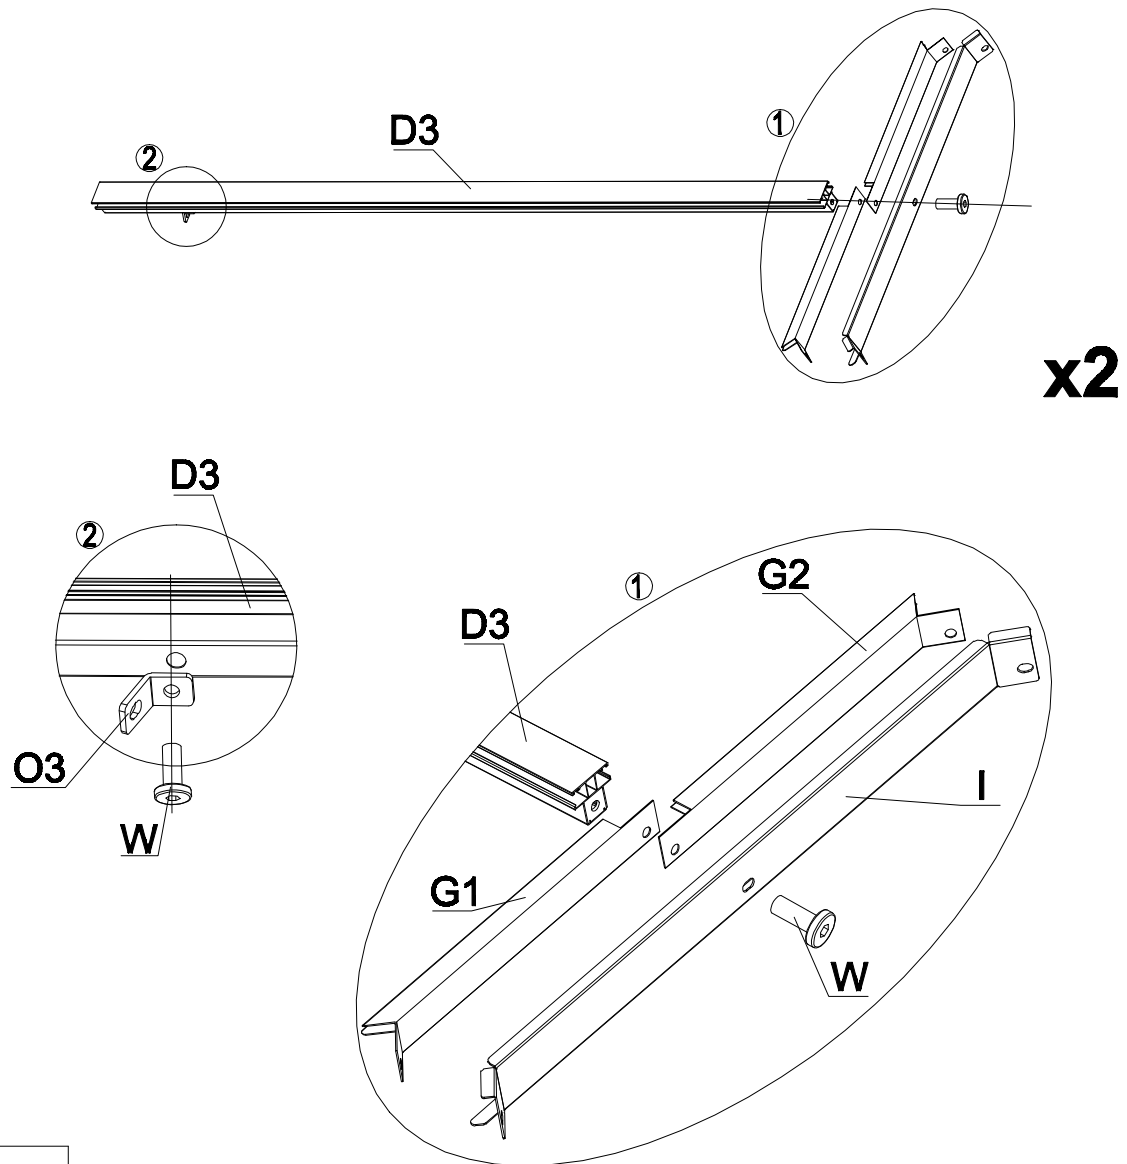

Z1




Step15

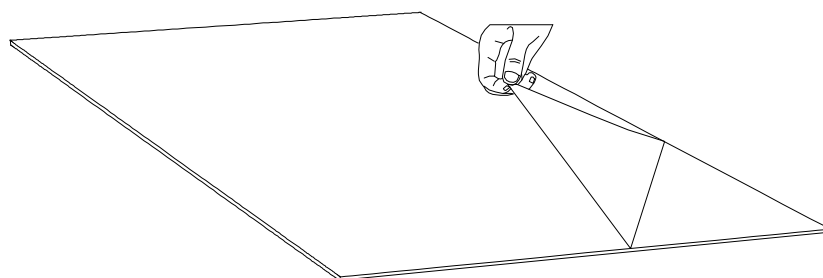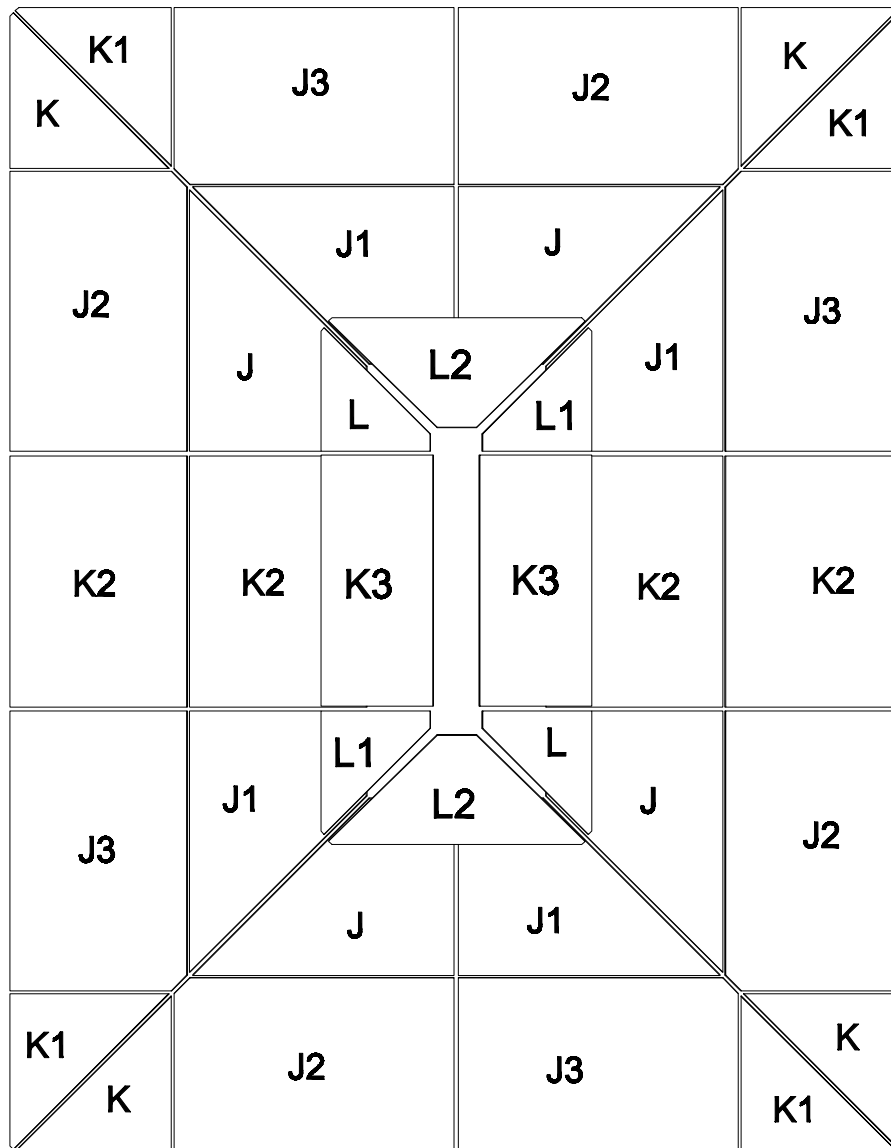


**Remove the protective film
before installation.**


No.	Qty	Picture
W	6	 M6 * 15 mm


Step16

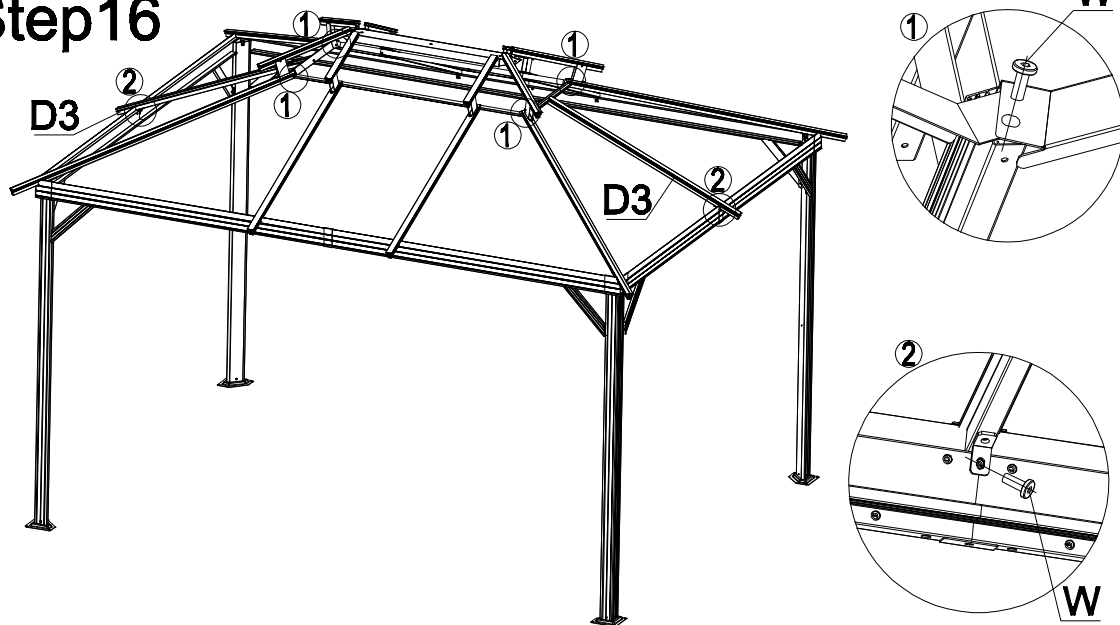


No.	Qty	Picture	No.	Qty	Picture
K3	2		L	2	
L1	2		F3	2	
F4	2		G	2	
P1	4		W	4	 M6 * 15 mm

Step17

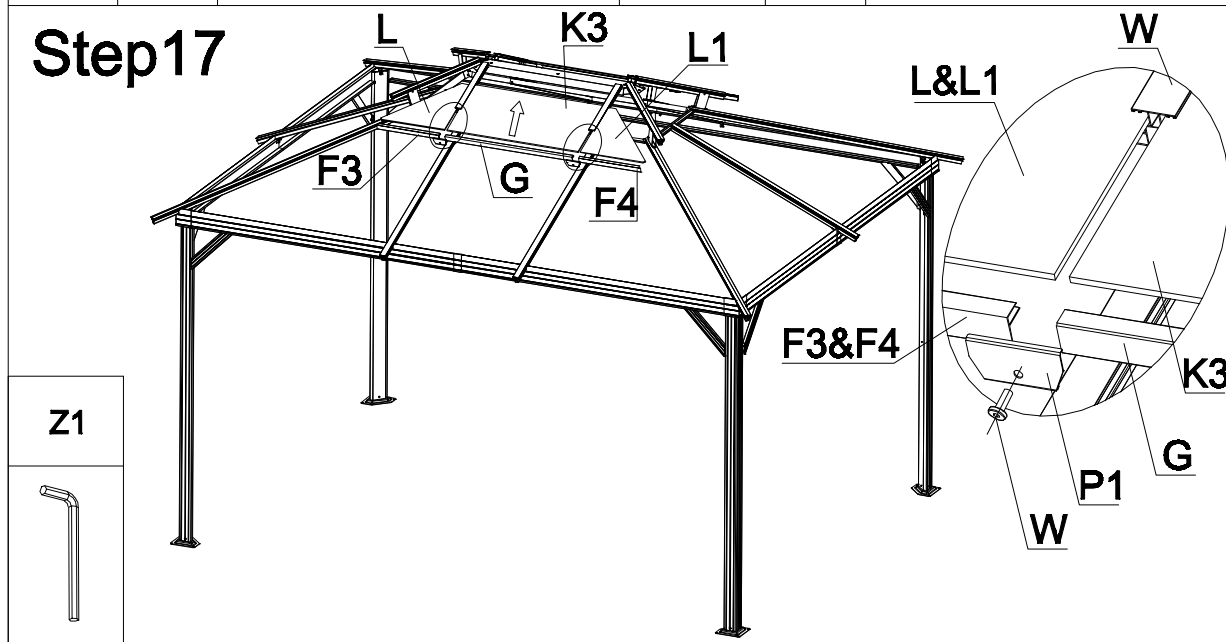


No.	Qty	Picture	No.	Qty	Picture
L2	2		P	4	
F2	2		W	4	 M6 * 15 mm


Step18


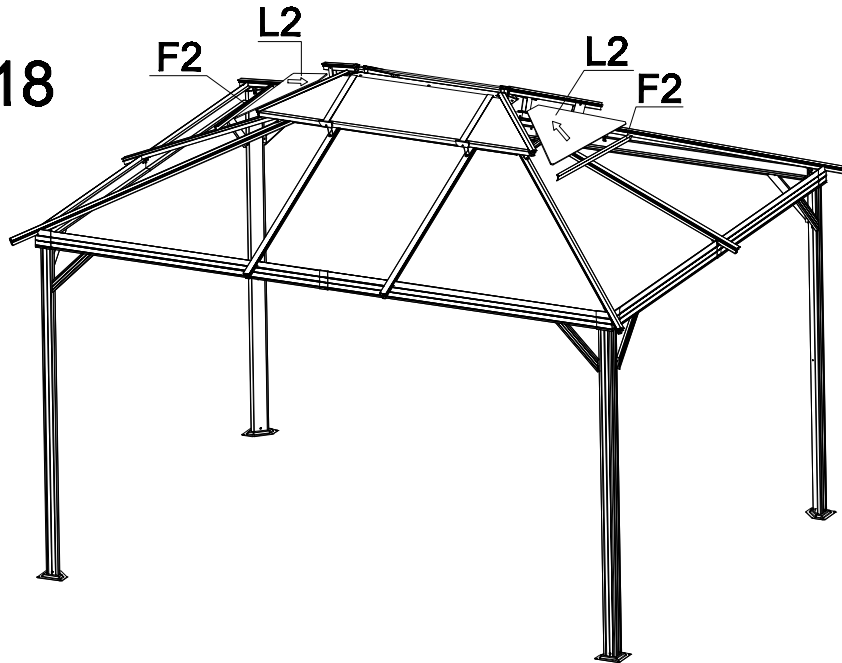


Step19


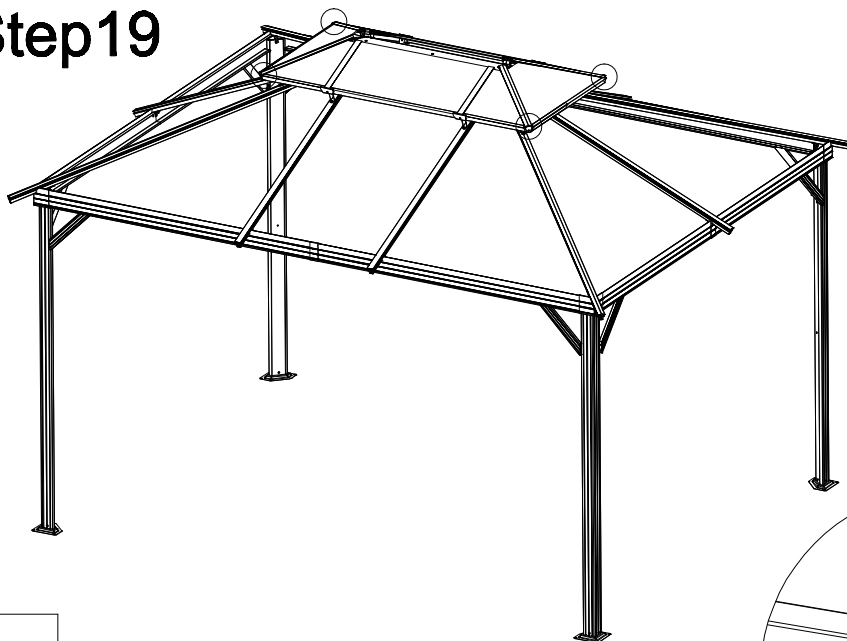


Z1

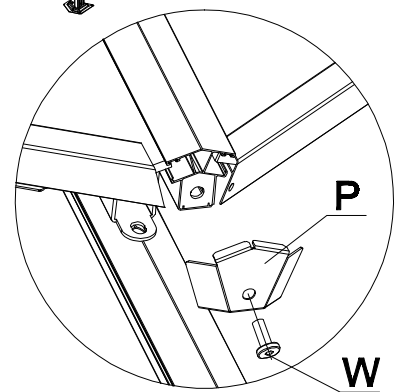



No.	Qty	Picture	No.	Qty	Picture
H1	1		T1	1	
Q	1		P2	3	
Y2	3	 M6			





Step20

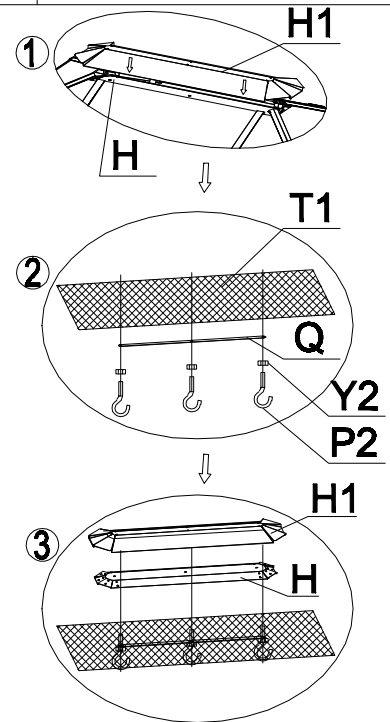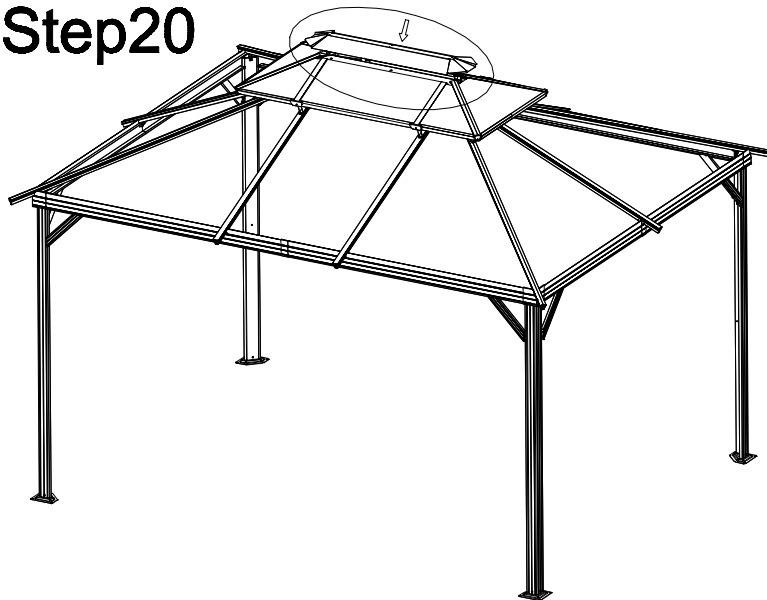



No.	Qty	Picture	No.	Qty	Picture
Q1	8		Q2	2	



Step21

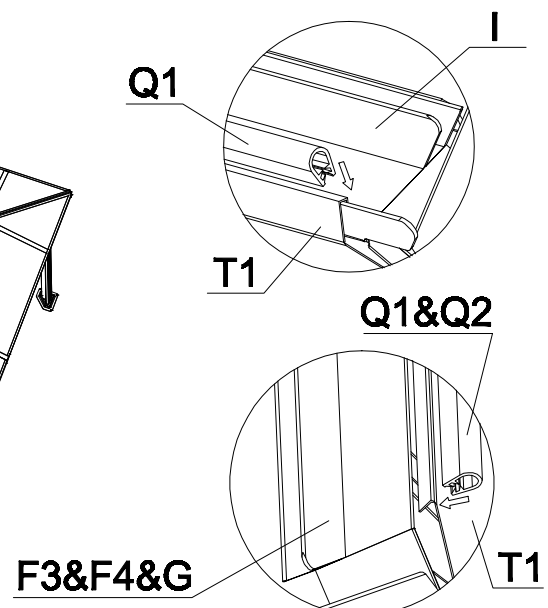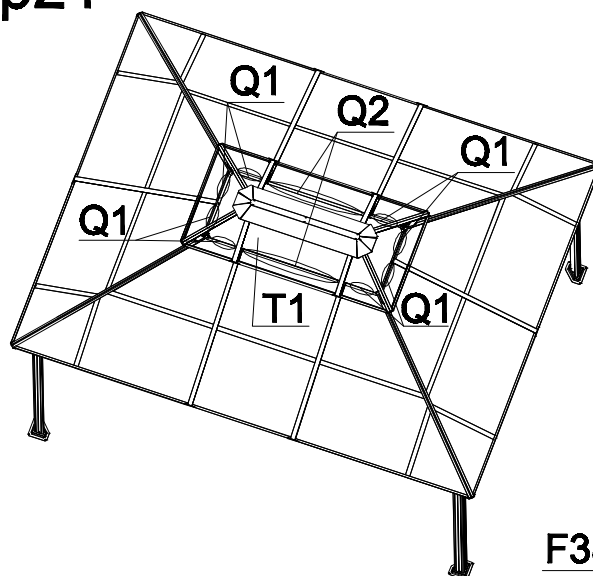



No.	Qty	Picture	No.	Qty	Picture
J	4		J1	4	
E	4		E1	4	


Step22

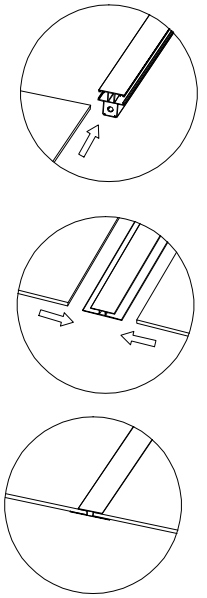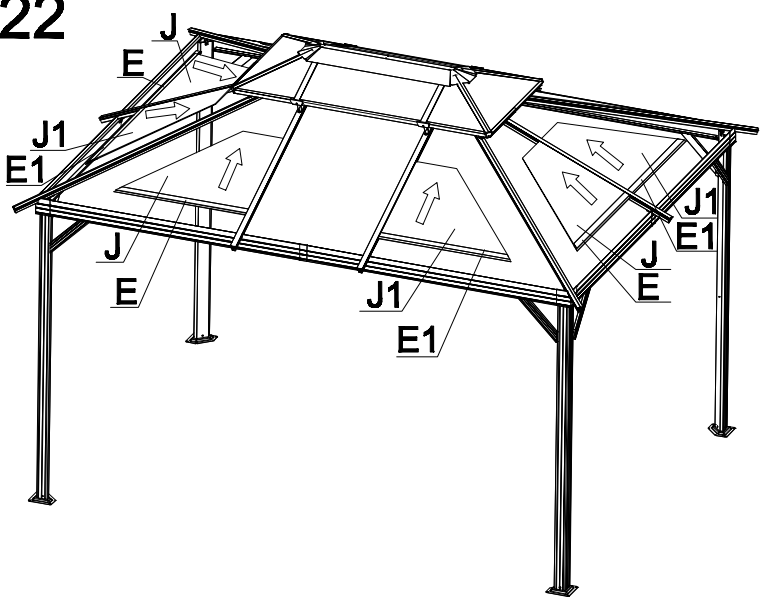


No.	Qty	Picture	No.	Qty	Picture
J2	4		J3	4	


Step23

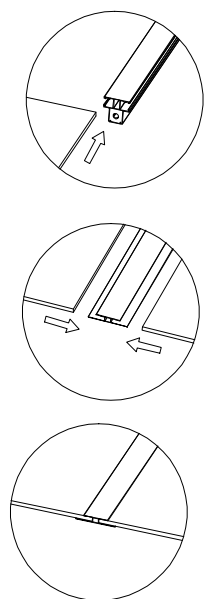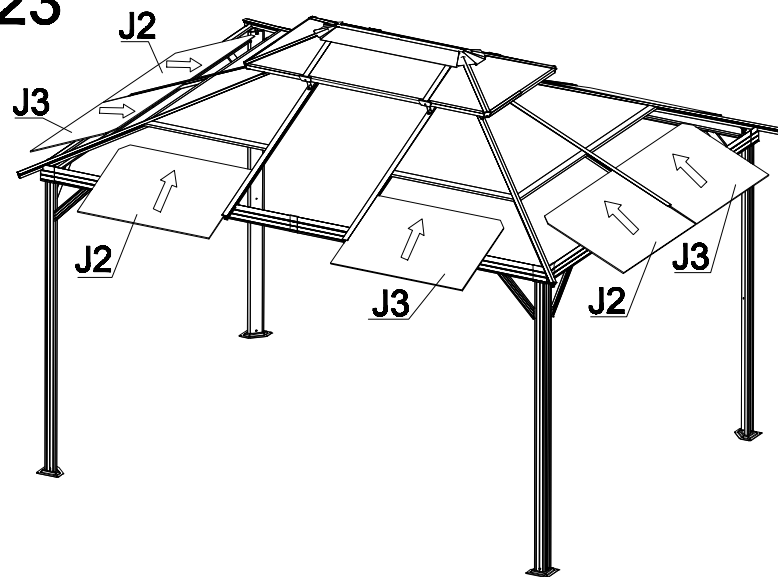


No.	Qty	Picture	No.	Qty	Picture
K	4		K1	4	
E2	4		E3	4	

Step24

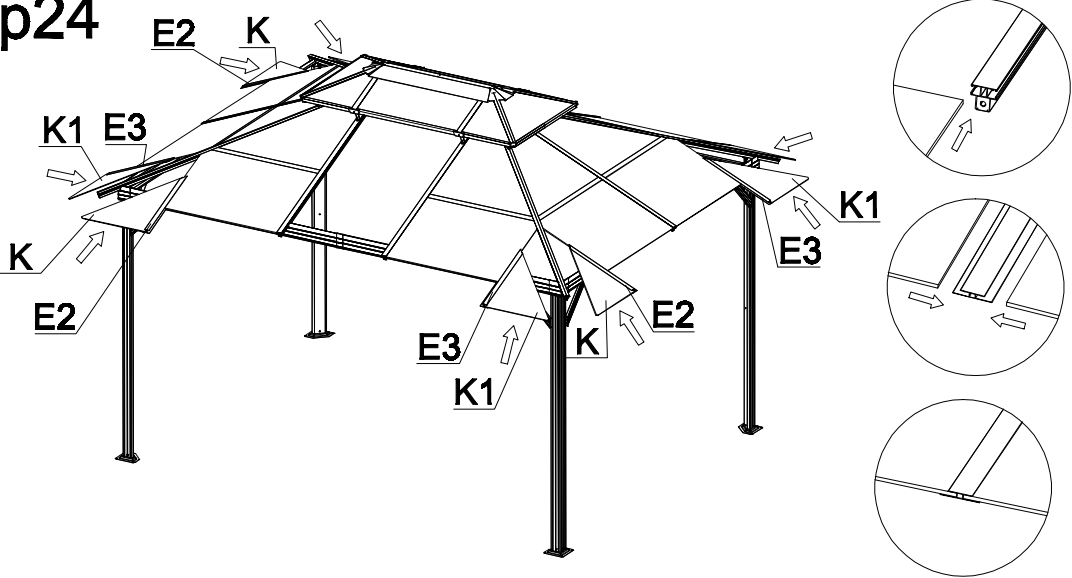


No.	Qty	Picture	No.	Qty	Picture
K2	4		E4	2	

Step25

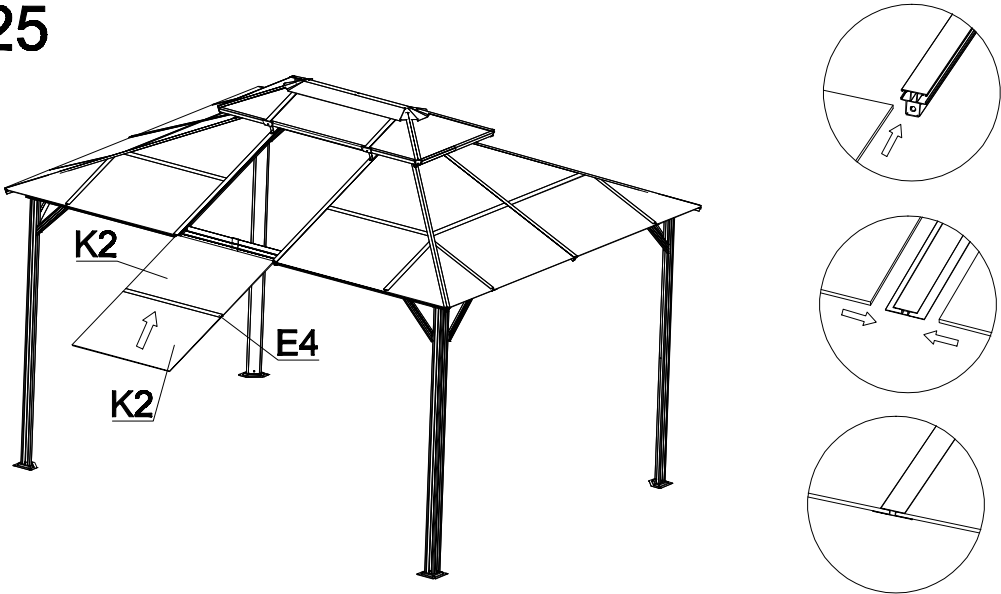


No.	Qty	Picture	No.	Qty	Picture
F	4		P	4	
F1	4		P1	6	
G	2		W	10	 M6 * 15 mm

Step26

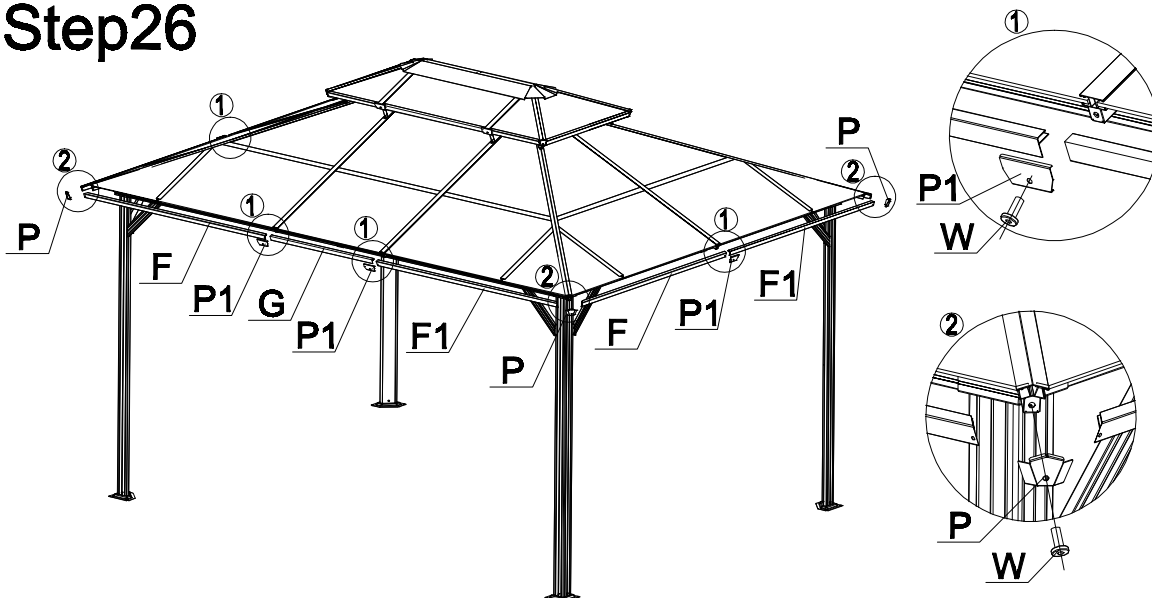


No.	Qty	Picture	No.	Qty	Picture
U	80		U1	8	 Ø11 * Ø6* 20mm
X	8	 M6 * 35 mm			

Step27


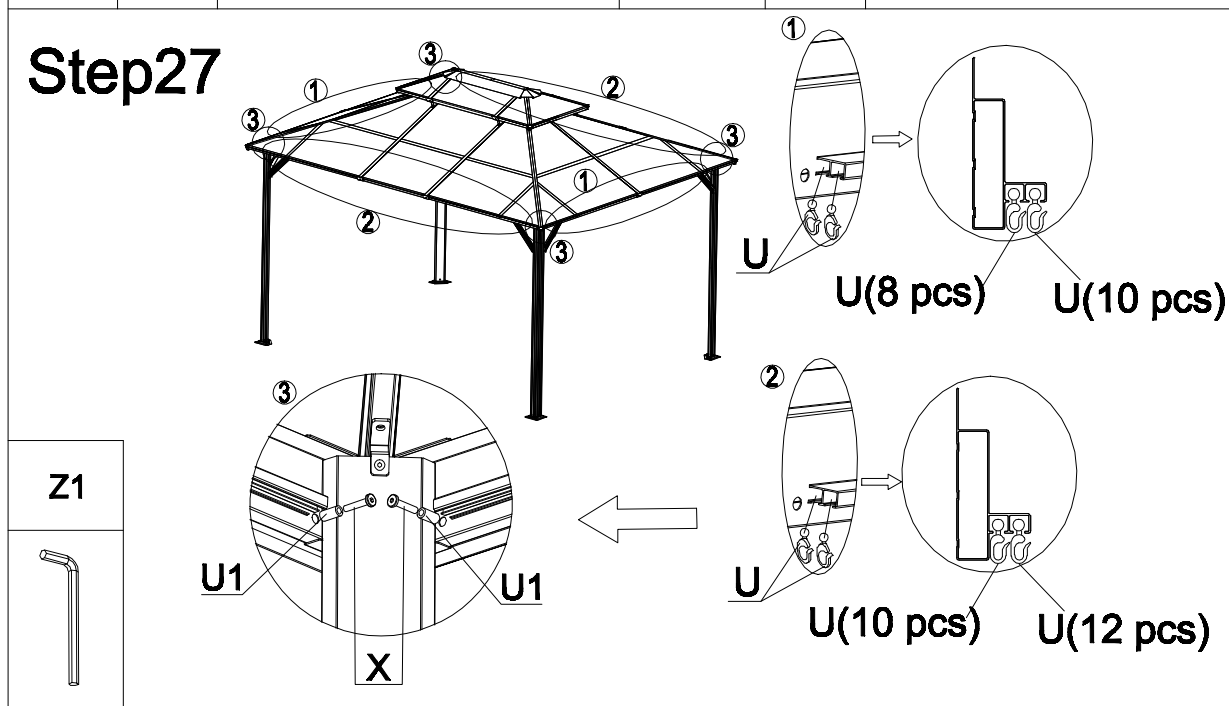


No.	Qty	Picture
S	4	


Step28

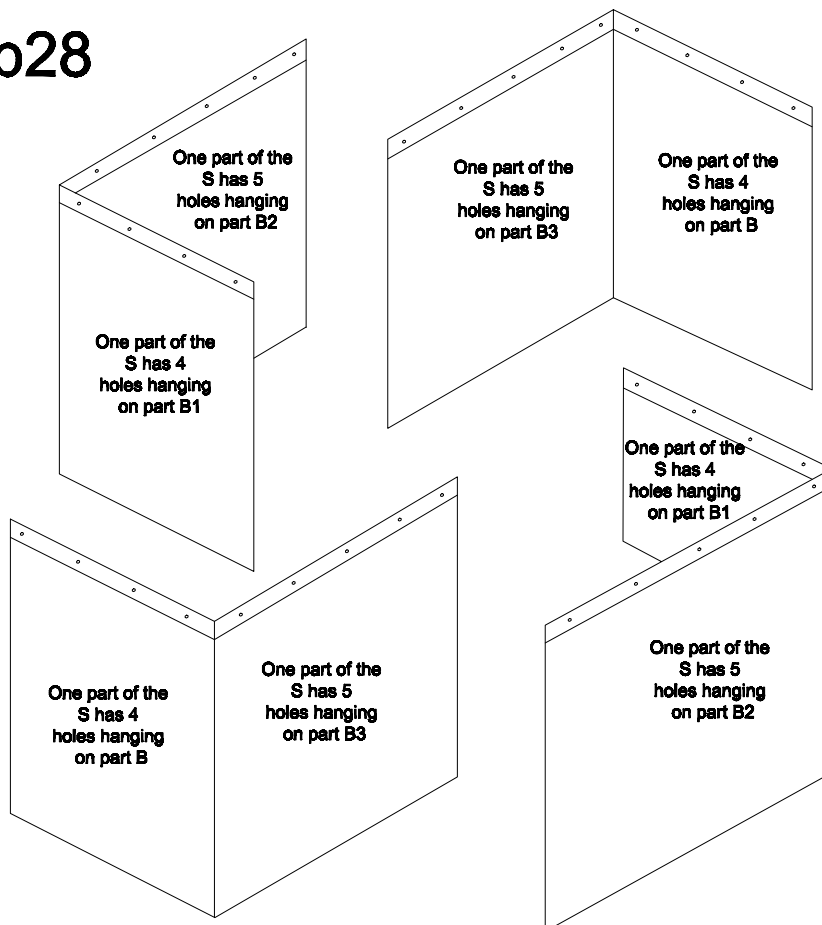


Step29

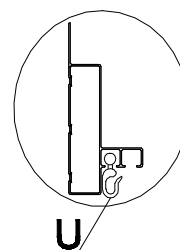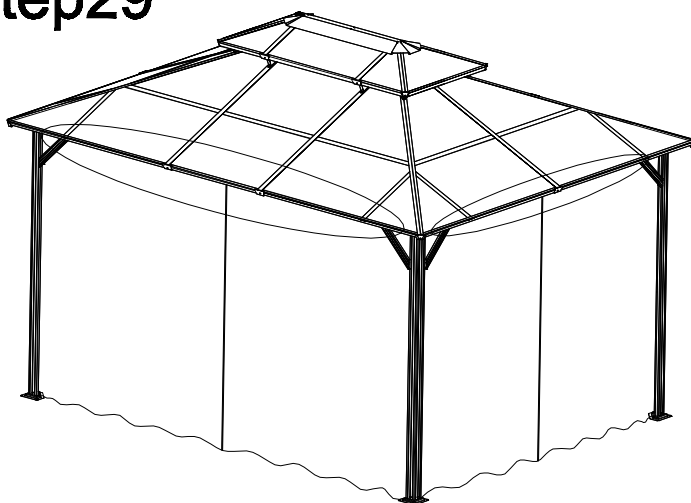


Pay attention to the sidewall curtain's installation position.


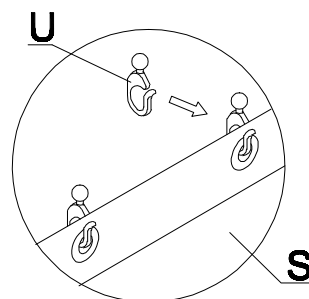


No.	Qty	Picture
T	4	


Step30

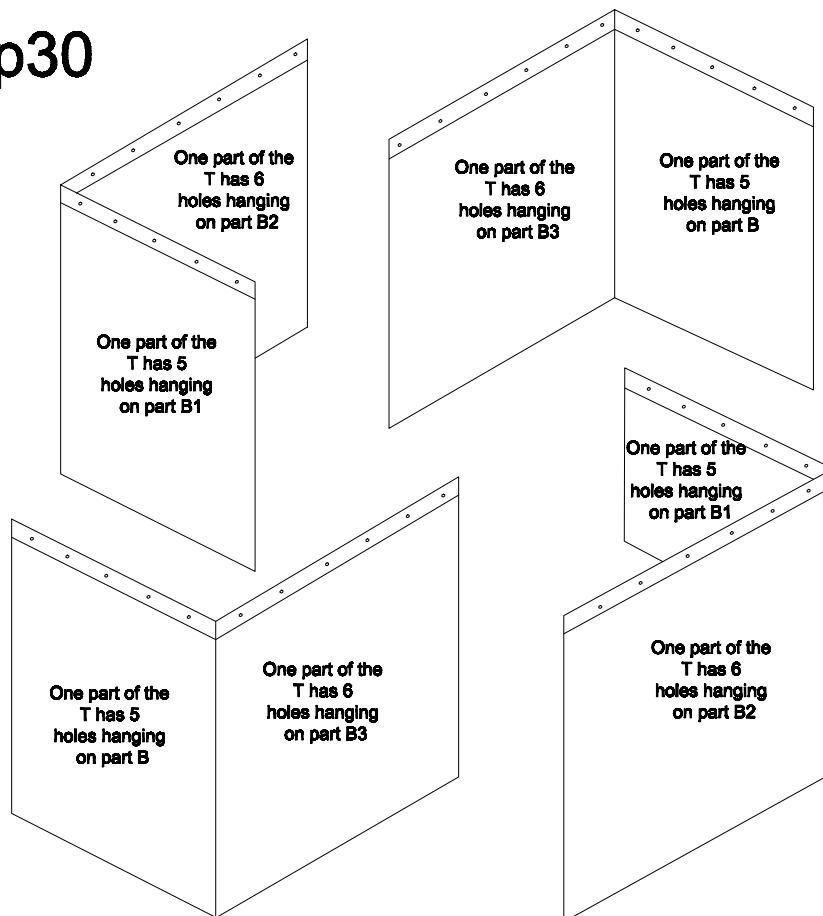

Step31

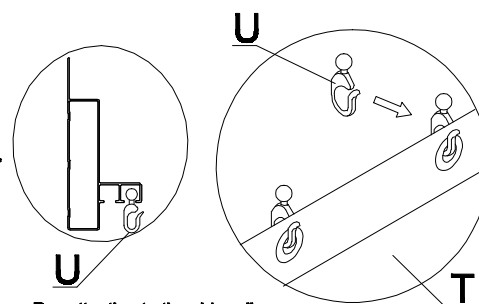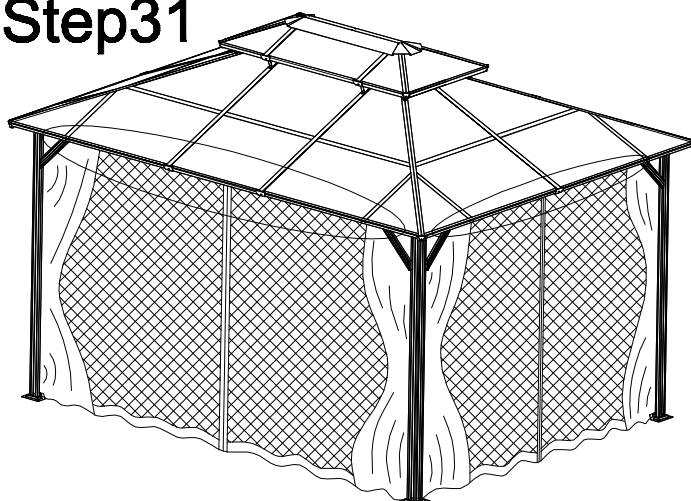



Pay attention to the sidewall netting's installation position.

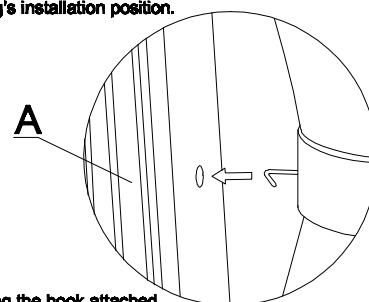

Hang the hook attached to the netting to Part A.

No.	Qty	Picture
Z	12	

Step32

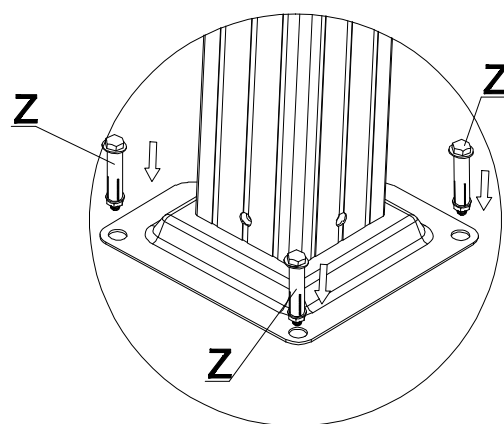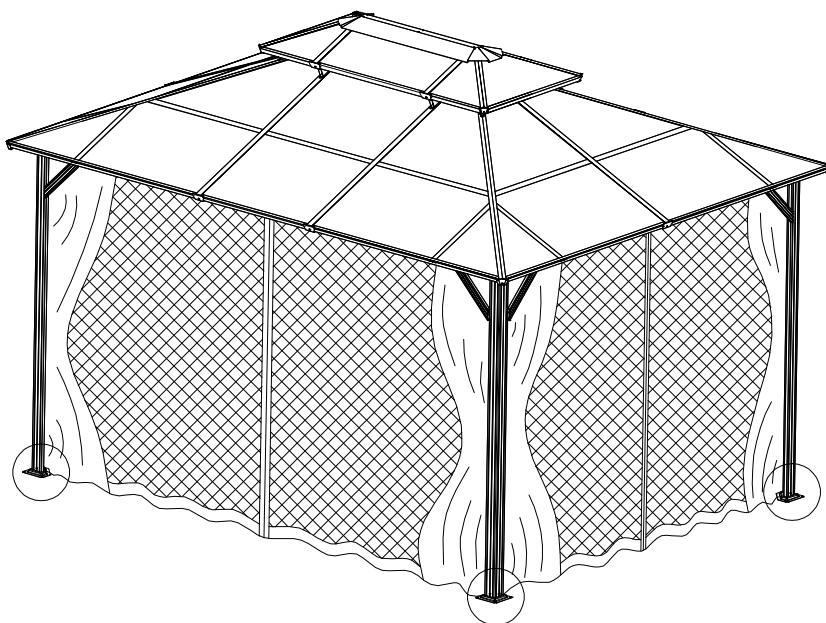

Z2

