


Installation Instruction


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

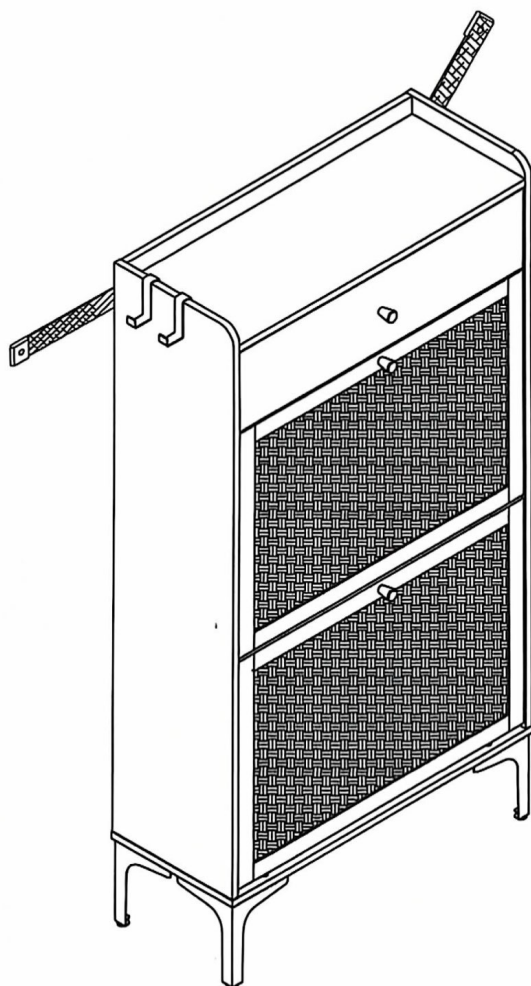


Please carefully review the following precautions before proceeding with the installation:


1. The installation process for this product is complex, and it is highly recommended to have at least two individuals working together during the installation.
2. Prior to each step, please refer to the screw hole positions to ensure that the board is aligned correctly according to the images provided in the instruction manual. This will help prevent any errors.
3. In case power tools are used for installation, it is important to tighten the screws intermittently rather than applying excessive force continuously. This precaution will help avoid potential cracks around the screw holes.
4. If you encounter any difficulties or issues during the assembly process, please don't hesitate to reach out to us via email. We assure you that we will address your concerns and provide a solution within 24 hours.

Thank you for your attention to these important instructions.

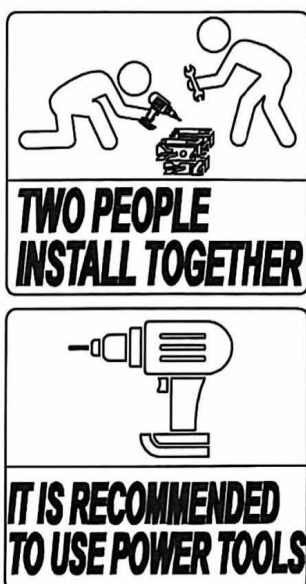

⚠ WARNING	
	Children have died from furniture tip-over. To reduce the risk of furniture tip-over: <ul style="list-style-type: none">• ALWAYS install tip-over restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.
	<i>This is a permanent label, Do not remove!</i>

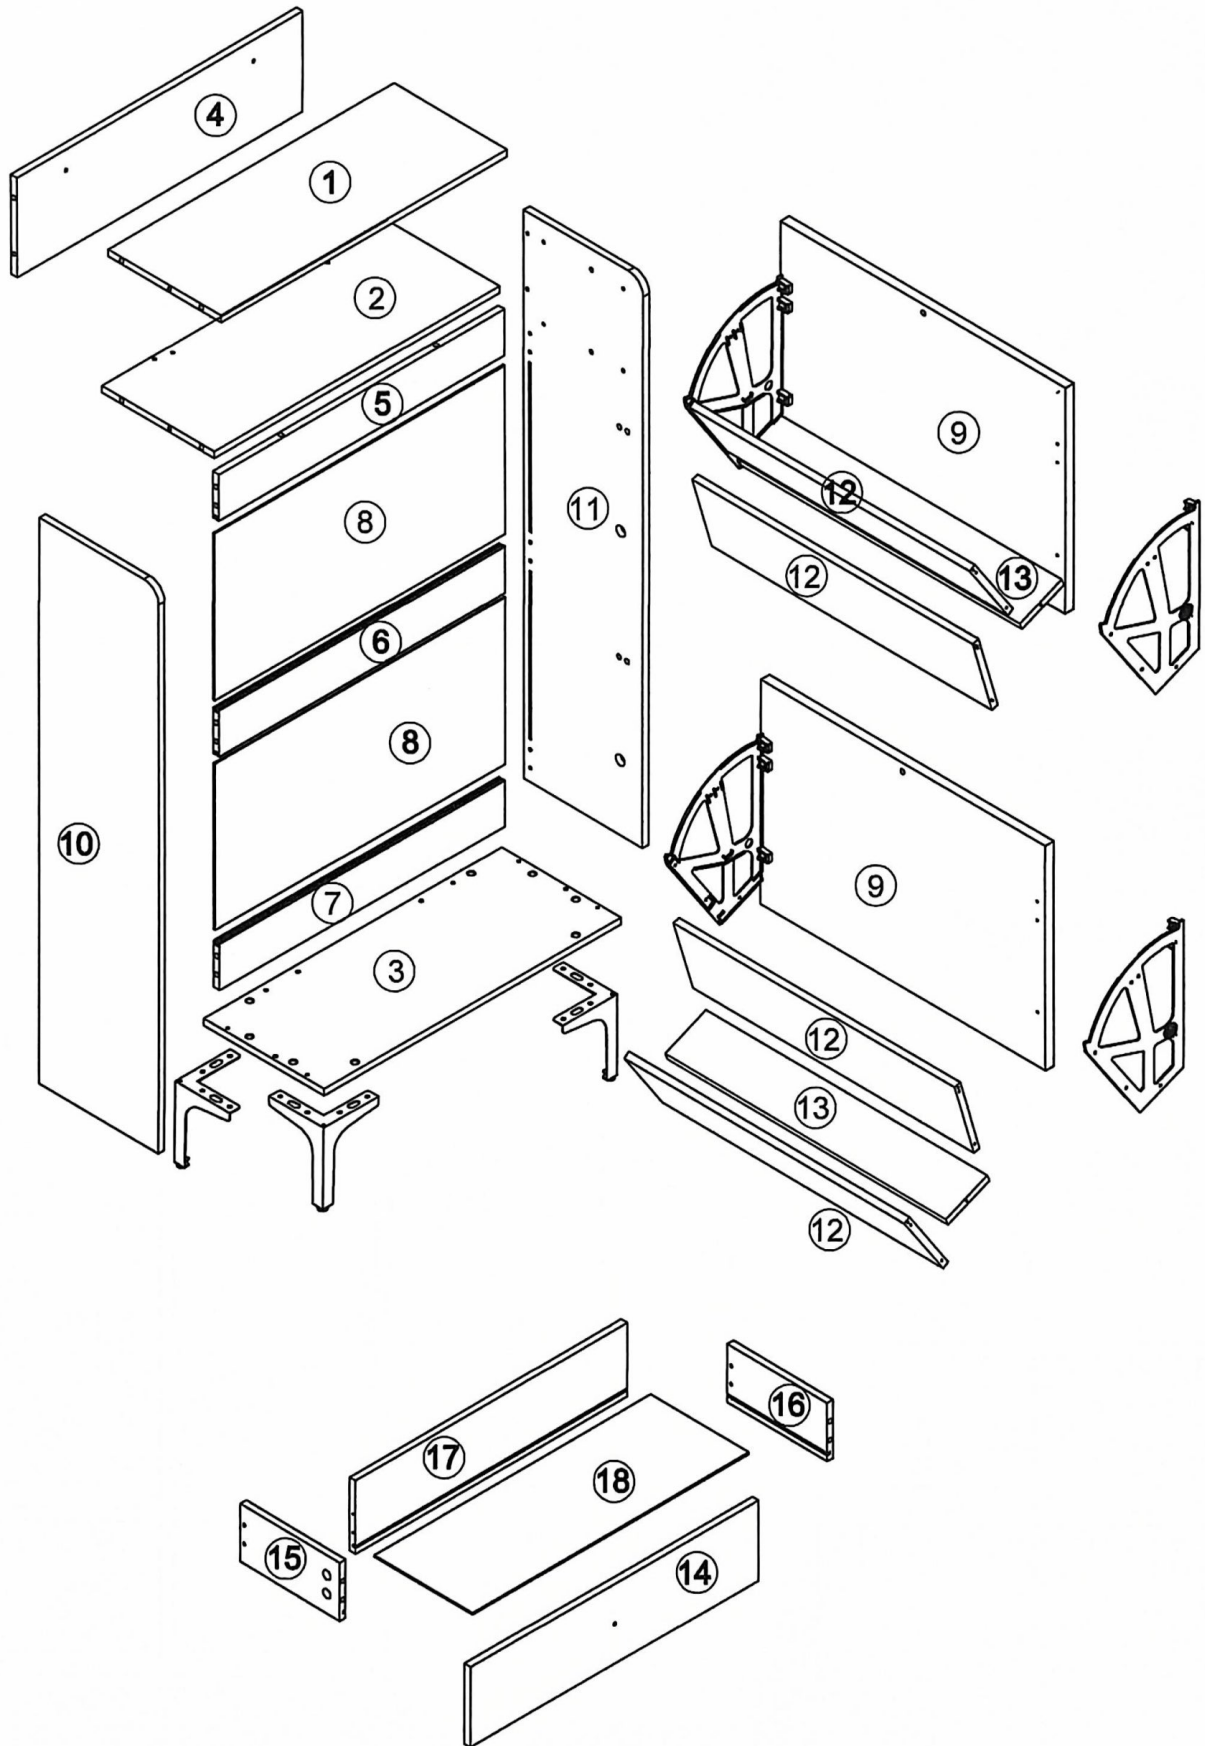


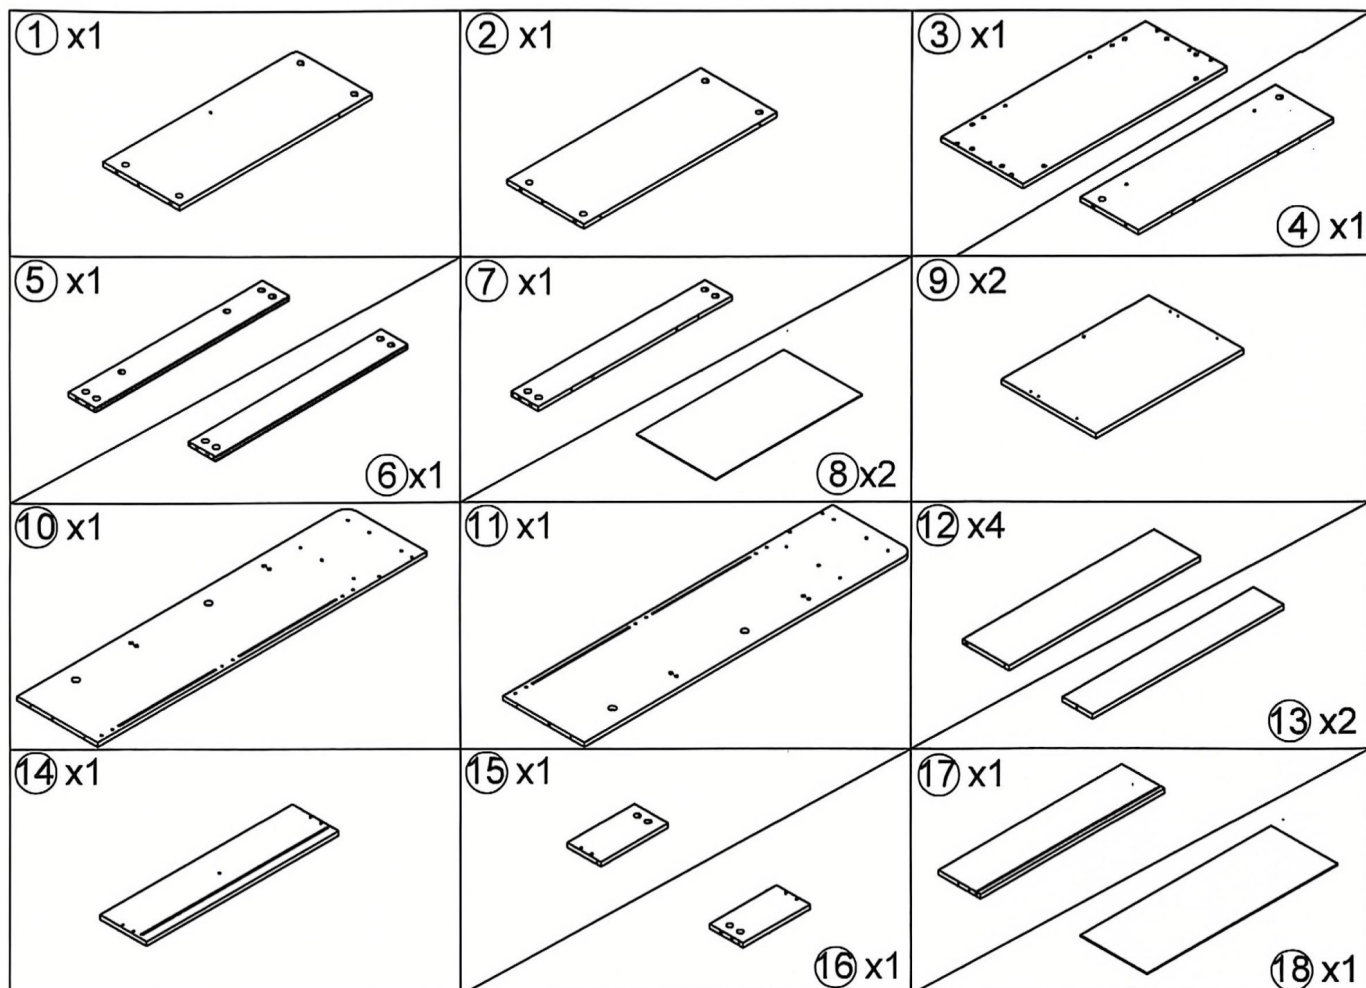

Hardware



A x28 +1(spare) Ø6x32mm	B x28 +1(spare) Ø15x10mm	C x12 +2(spare) Ø6x30mm	D x16 +4(spare) Ø3.5x12mm	E x2 	F x2
G x4 	H x4 	I x4 	J x4 M4x8mm	K x2 	L1 x2 Ø4x14mm
L2 x2 	M x4 	N x8 M8x12mm	O x8 	P x20 +2(spare) Ø3x16mm	Q x3
R x3 Ø4x16mm	S x1 	T x16 +2(spare) M4x35mm	U x2 	V x1 	W x8

1

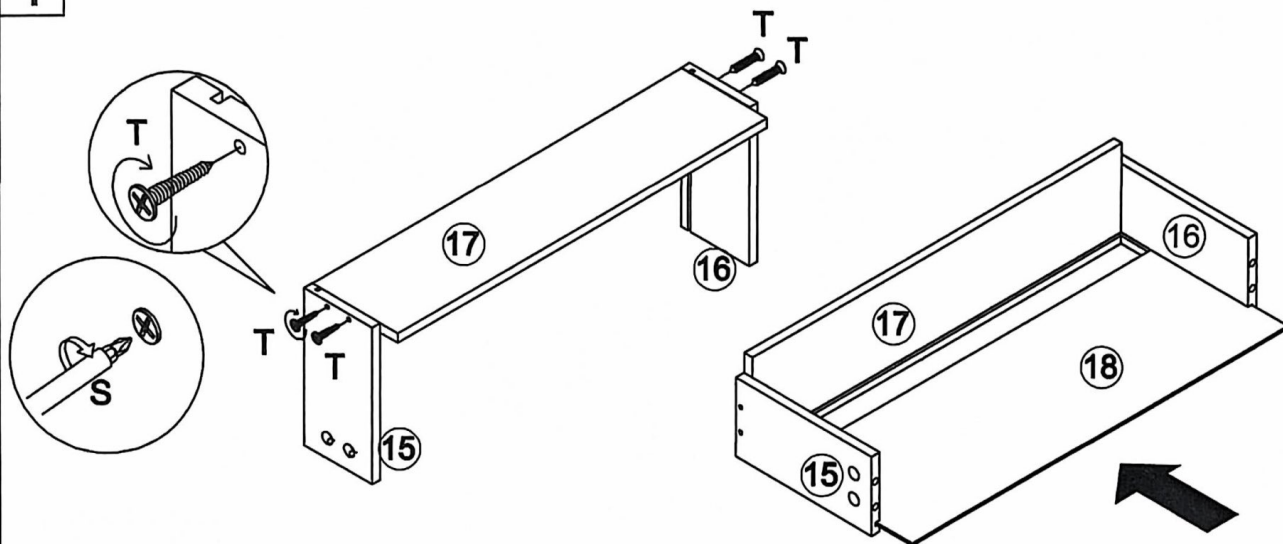


S	x1	T	x4
		M4x35mm	

2

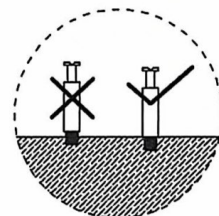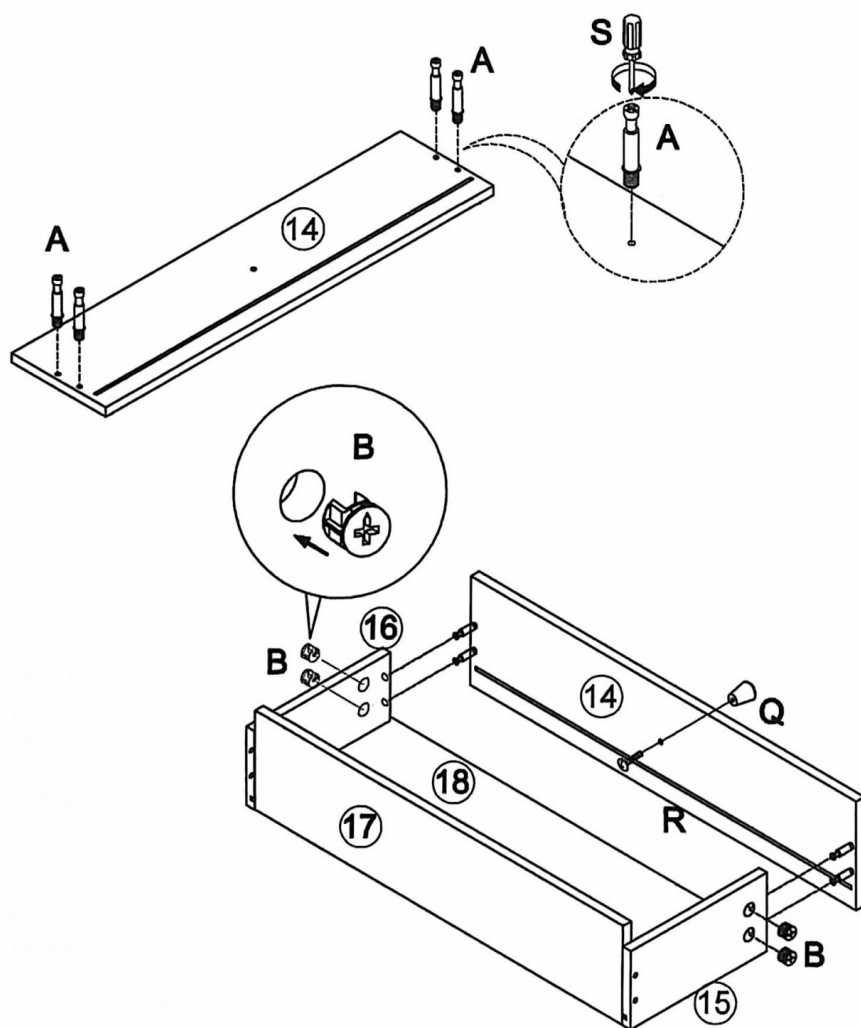


A	x4	B	x4
Ø6x32mm			
Q	x1	R	x1
		Ø4x16mm	

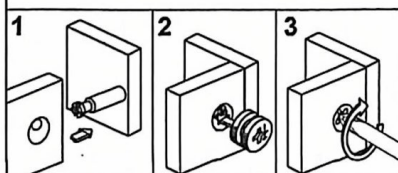


S	x1


3

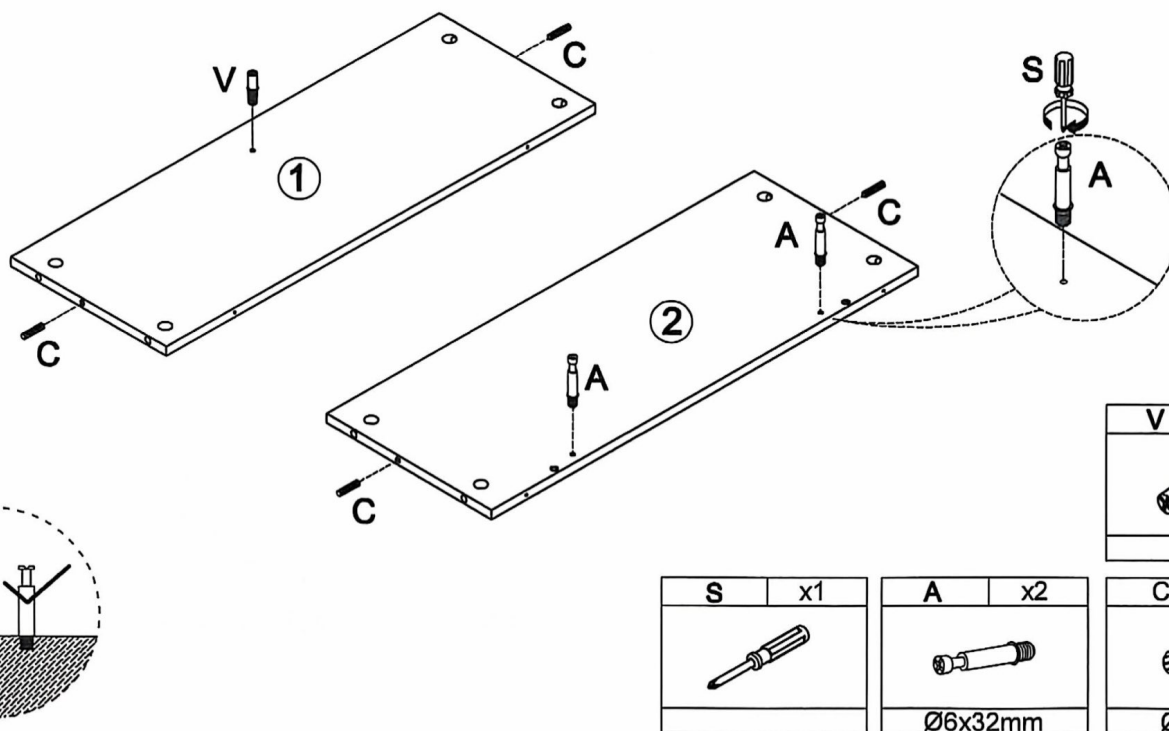


4

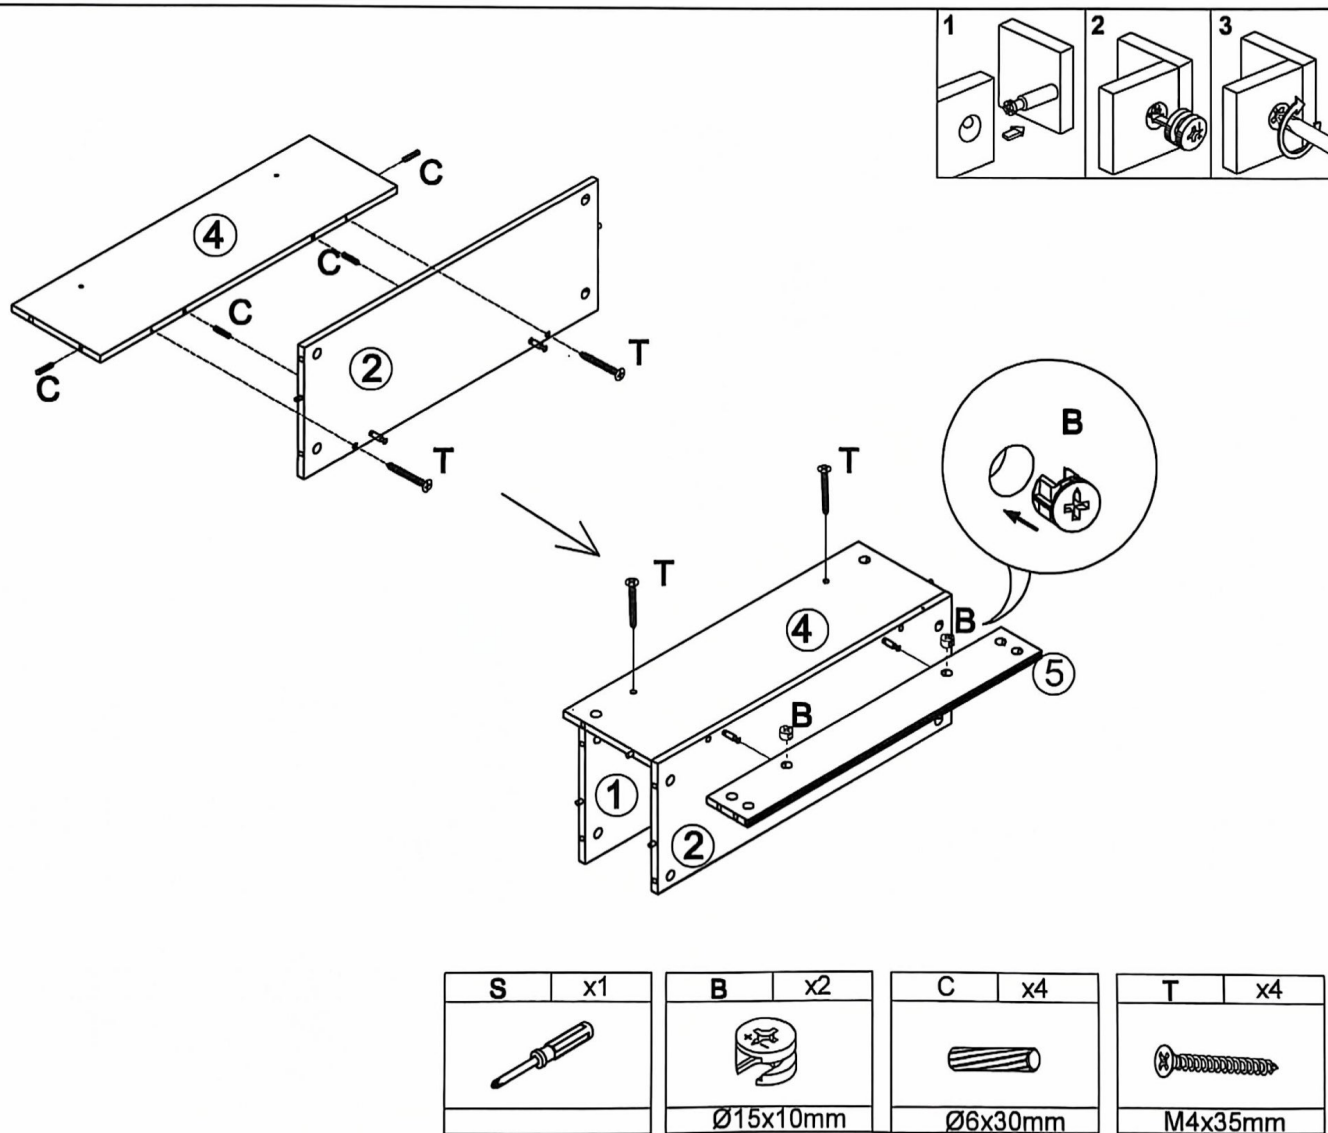


5

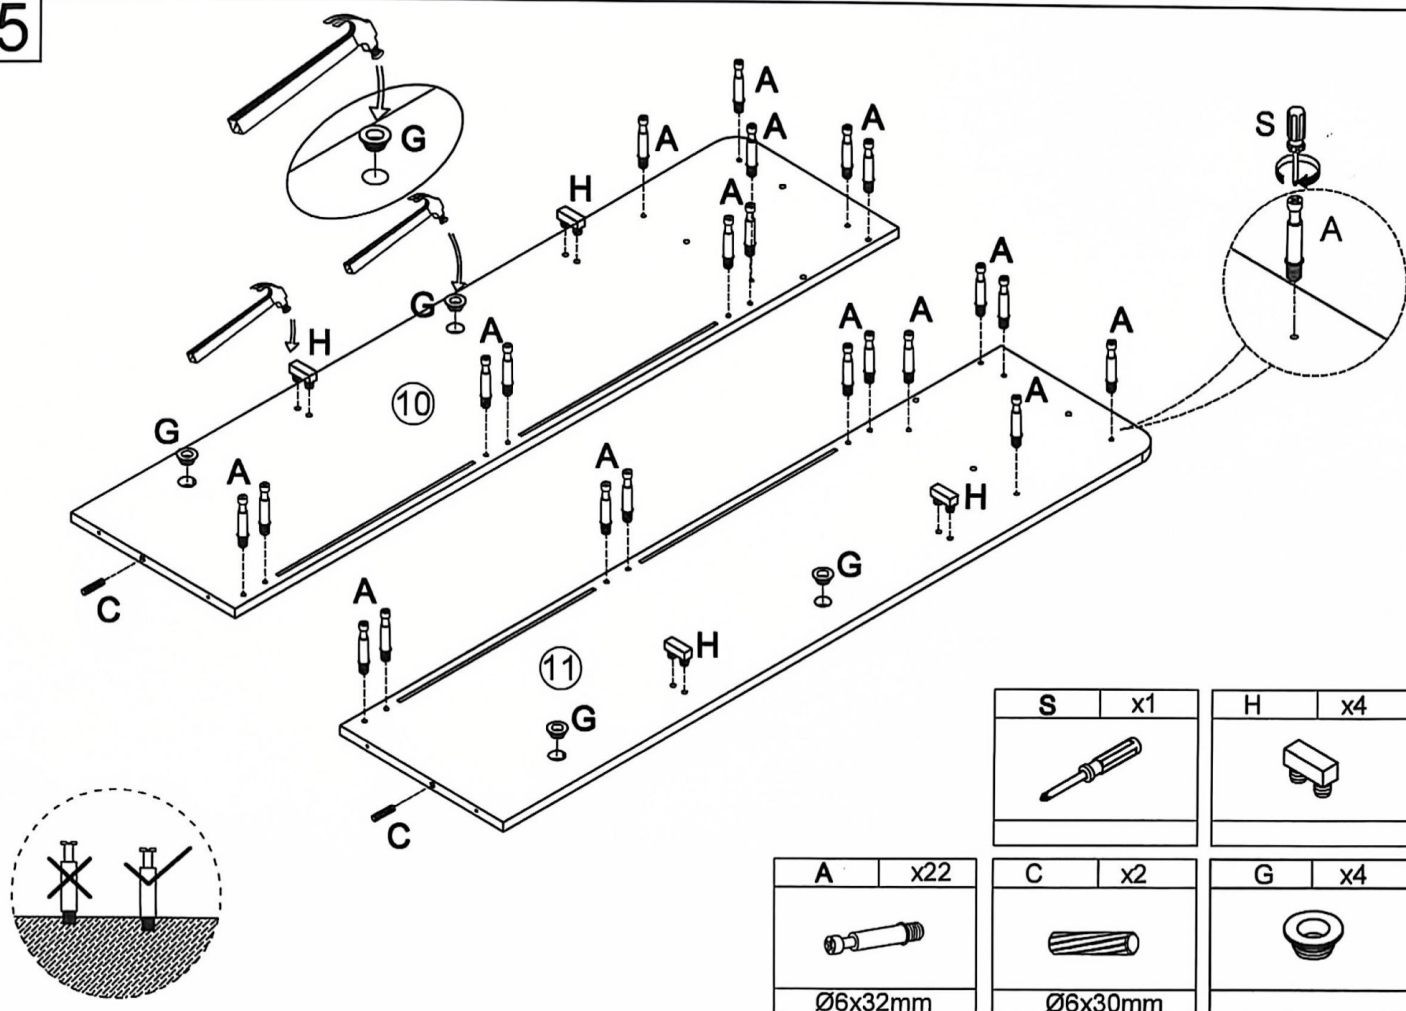



6

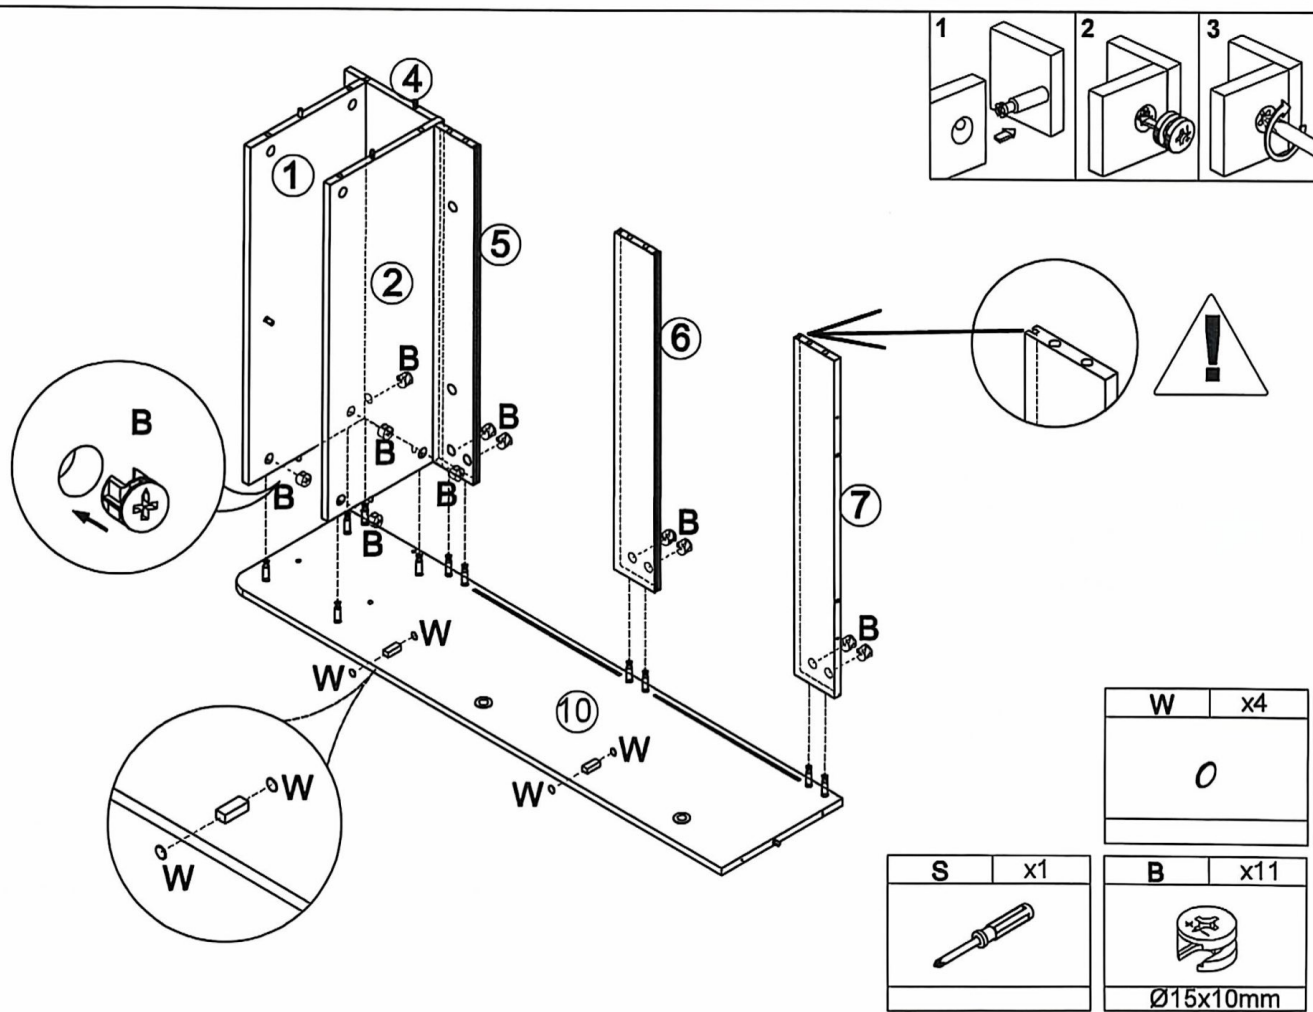

7

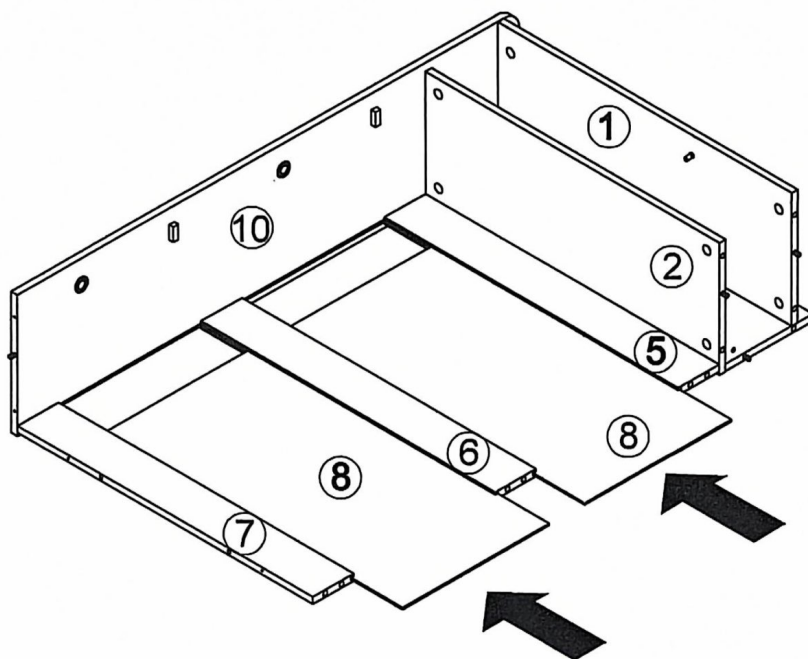

8

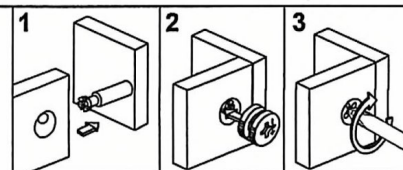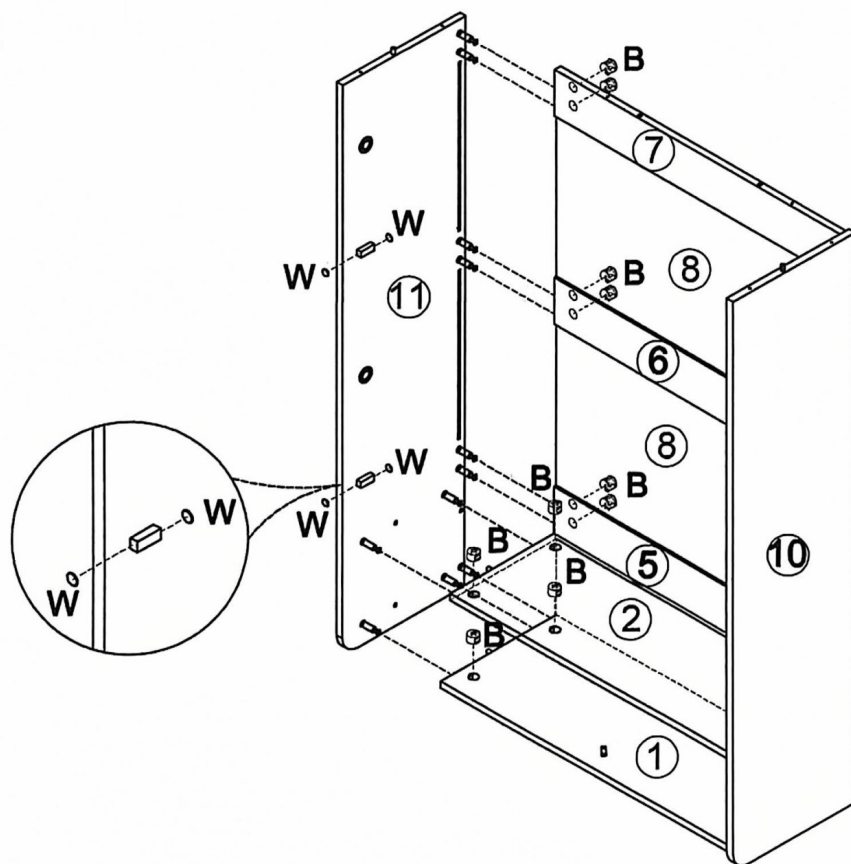





W	x4
0	

S	x1


B	x11
Ø15x10mm	

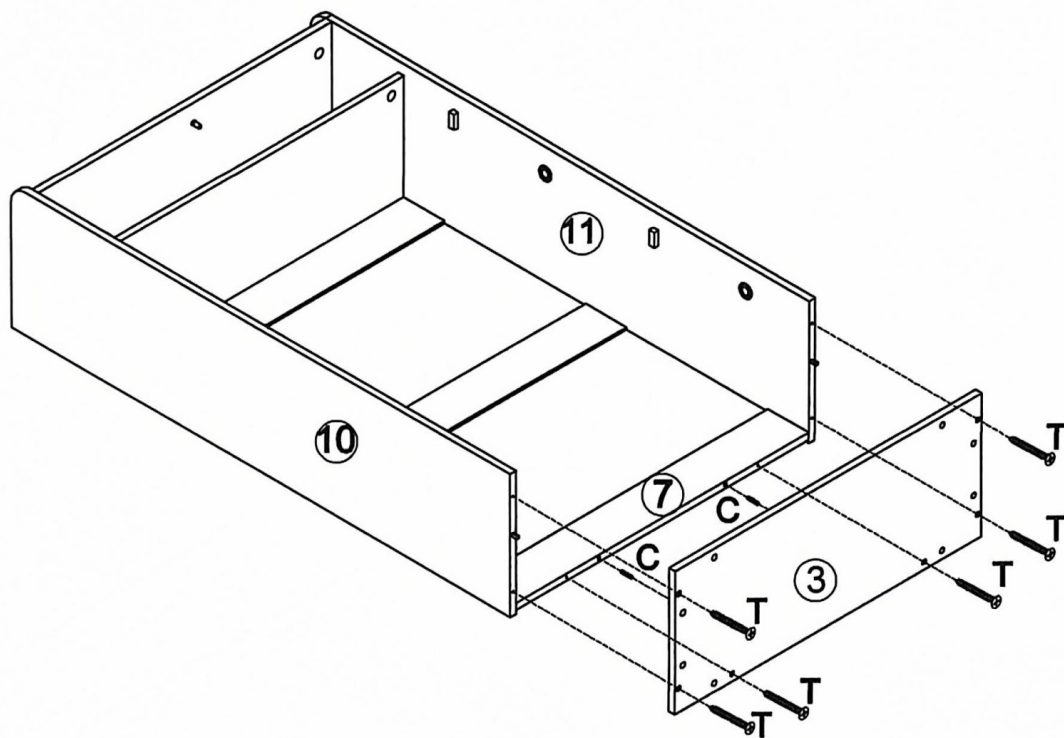


9




S	x1	T	x6	C	x2
					
		M4x35mm		Ø6x30mm	

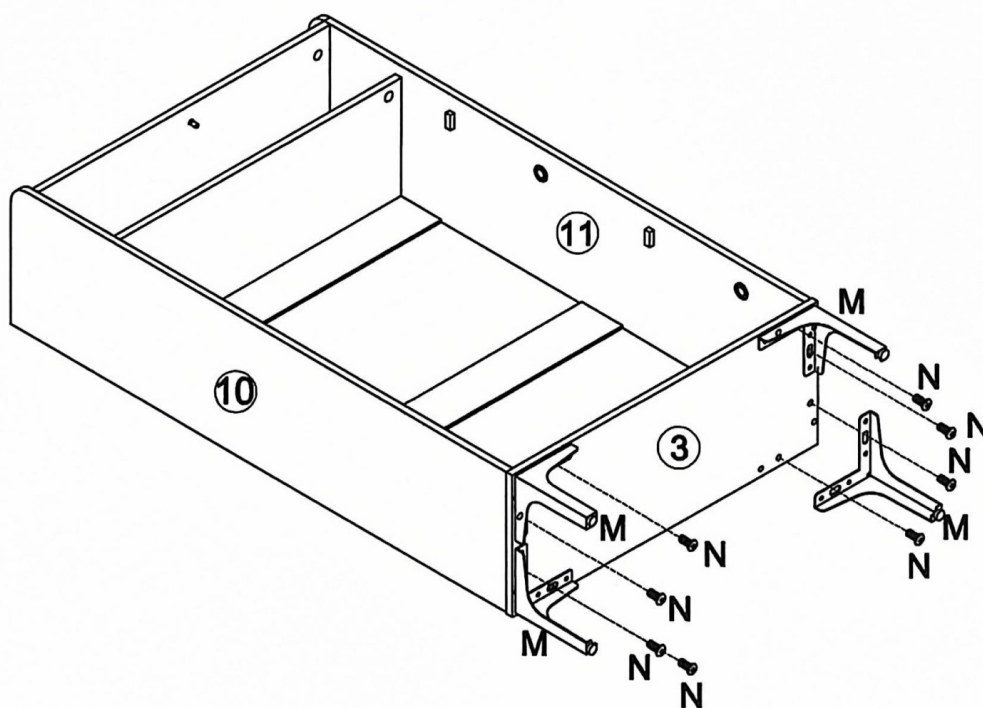10



S	x1	M	x4	N	x8
					
				M8x12mm	

x2

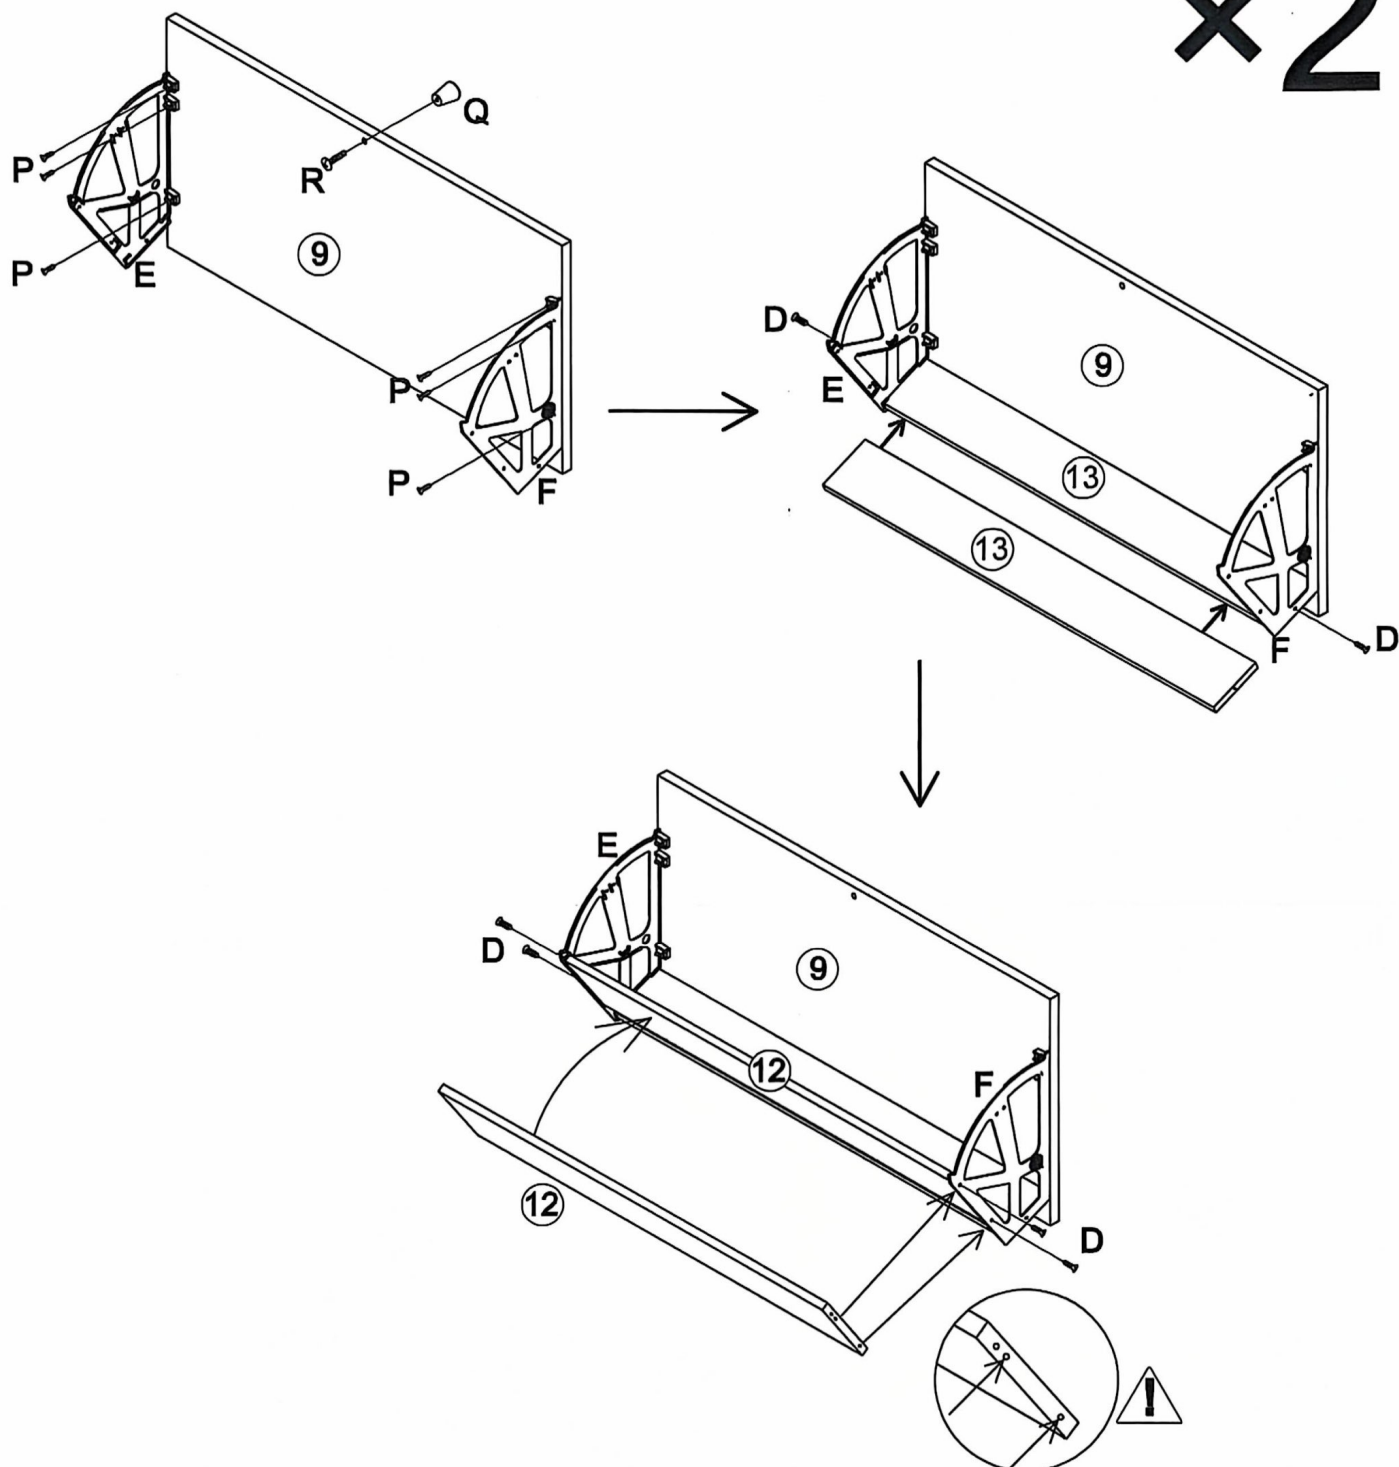

S	x1

D	x12
Ø3.5x12mm	

E	x2


F	x2




R	x2
Ø4x16mm	

P	x12
Ø3x16mm	


Q	x2

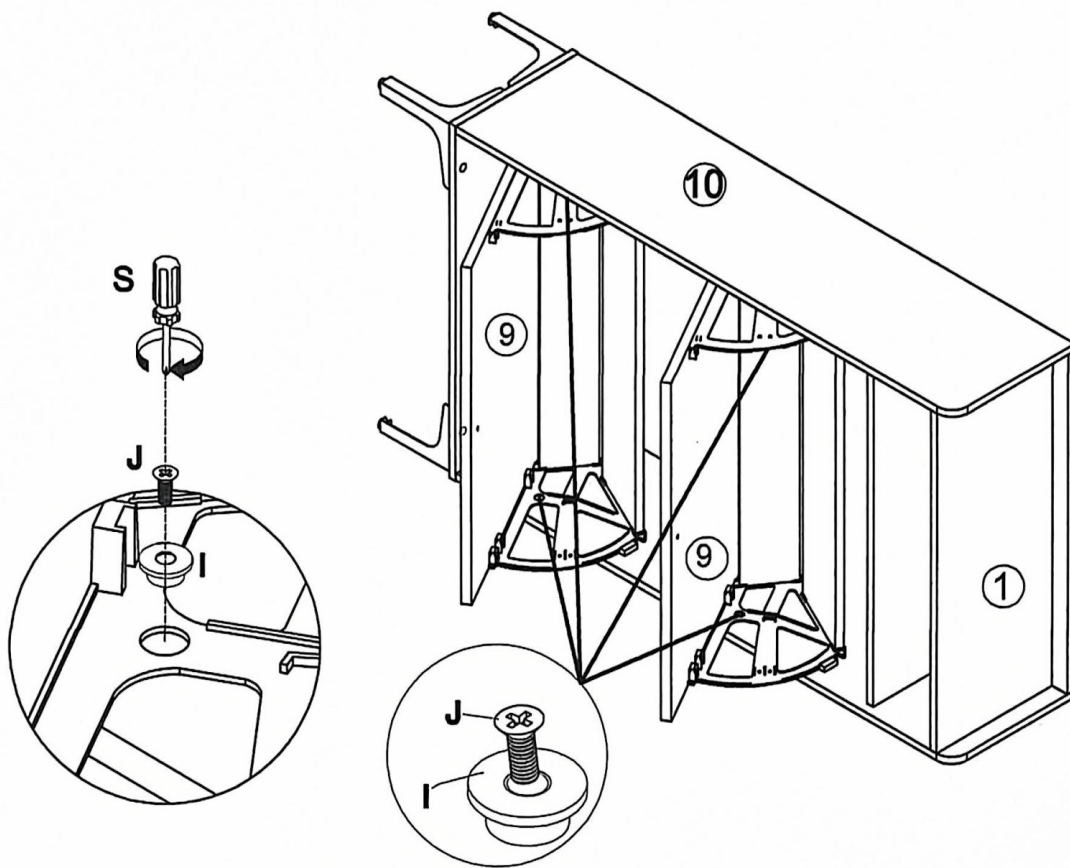

12




S	x1
	
I	x4
	
J	x4
	
M4x8mm	

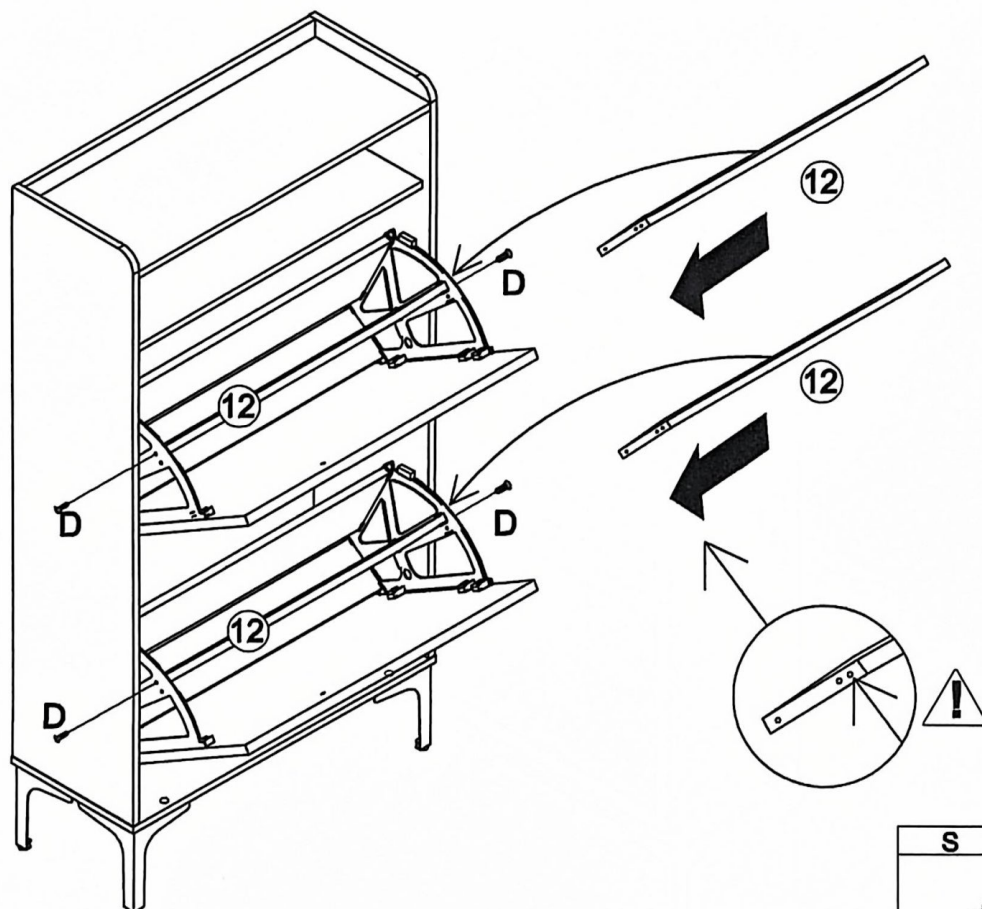13




S	x1
	
D	x4
	
Ø3.5x12mm	




14

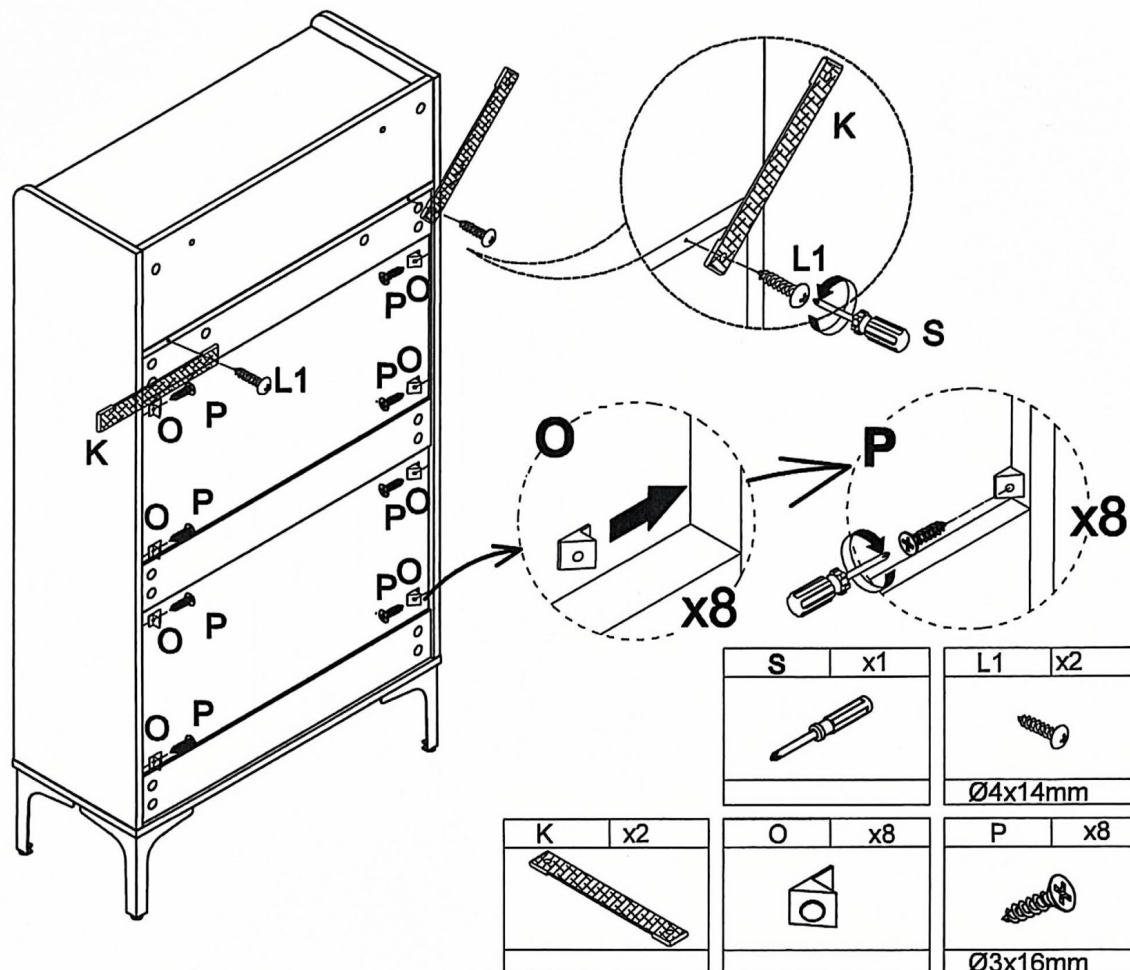

15

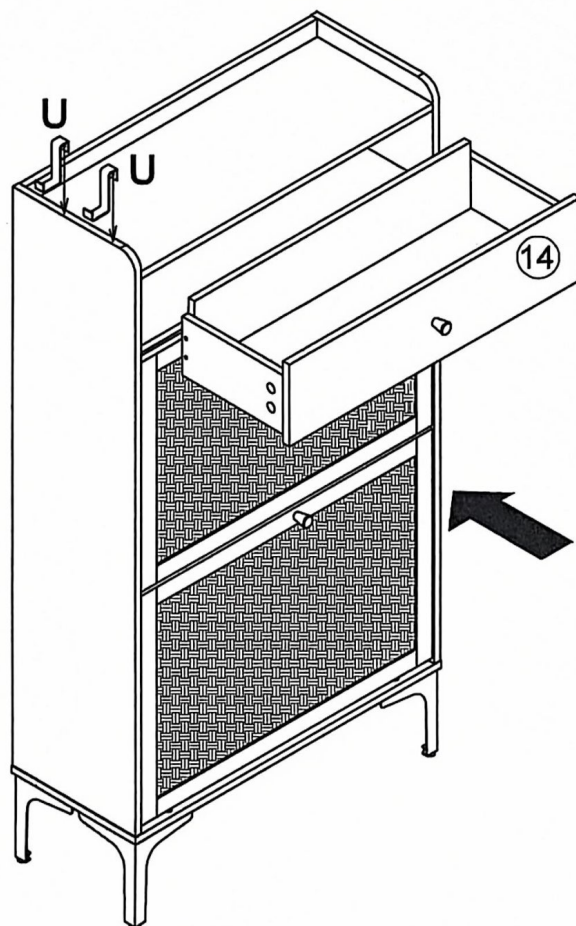

U	x2

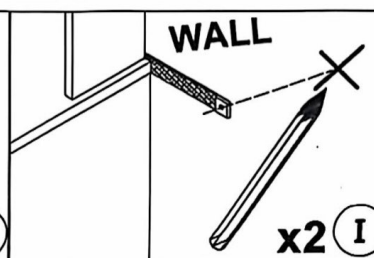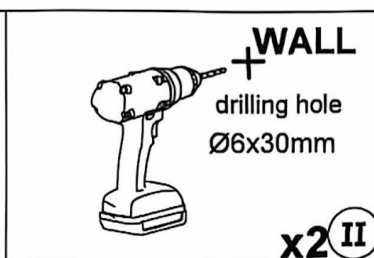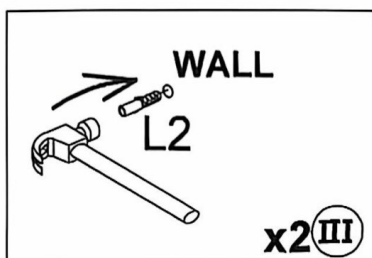

WALL

