

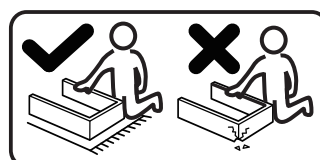
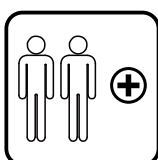
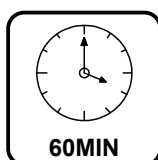


SRN SF7005

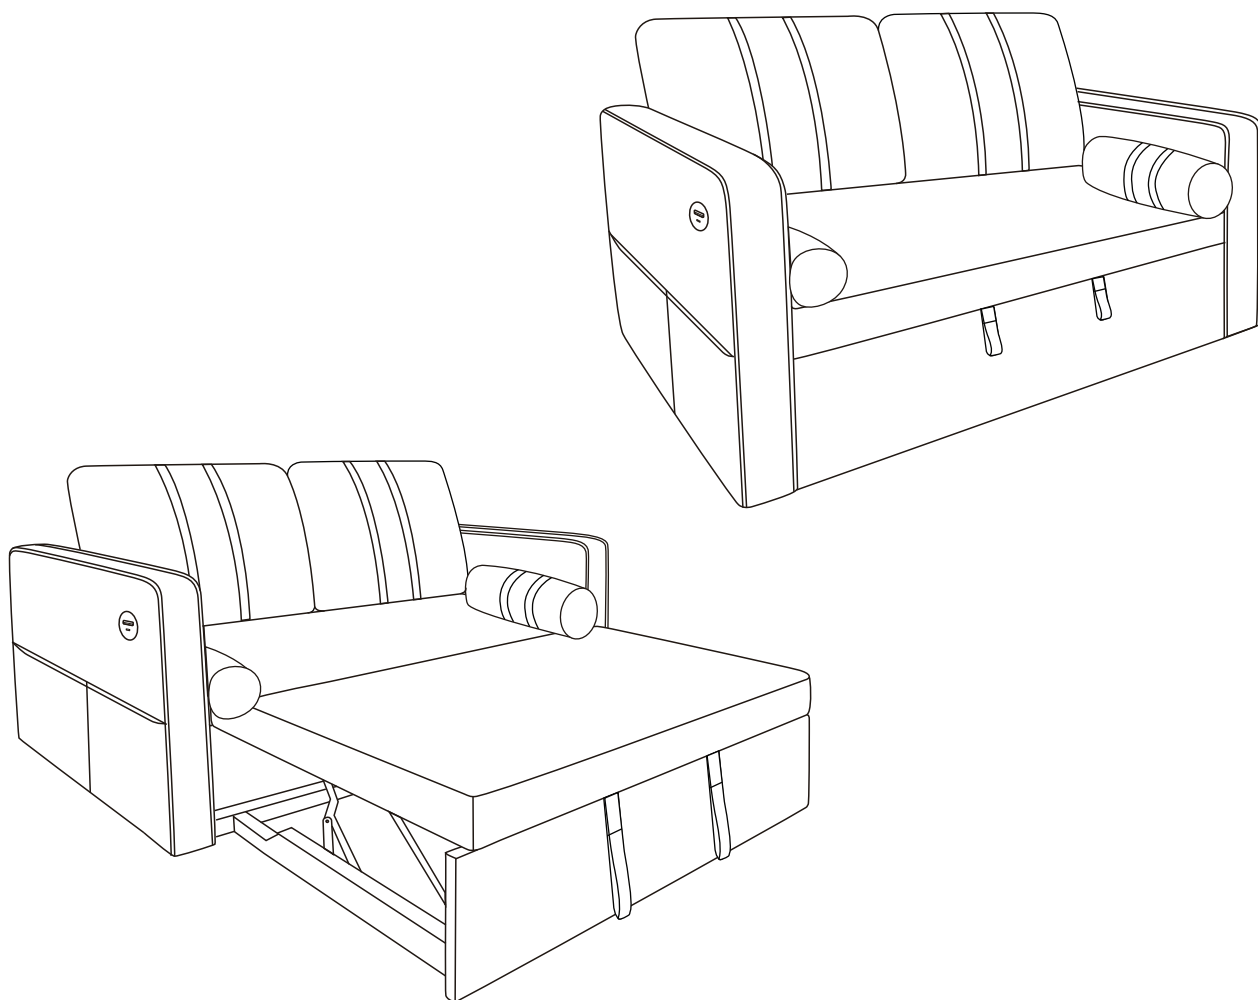


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Please confirm that all components are present before beginning assembly.
- For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Please assemble the furniture by 2 persons or more.
- Do not confuse similar screws.
- Do not tighten bolts fully until all parts are connected!
- Please periodically check all fitting and re-tighten as necessary.

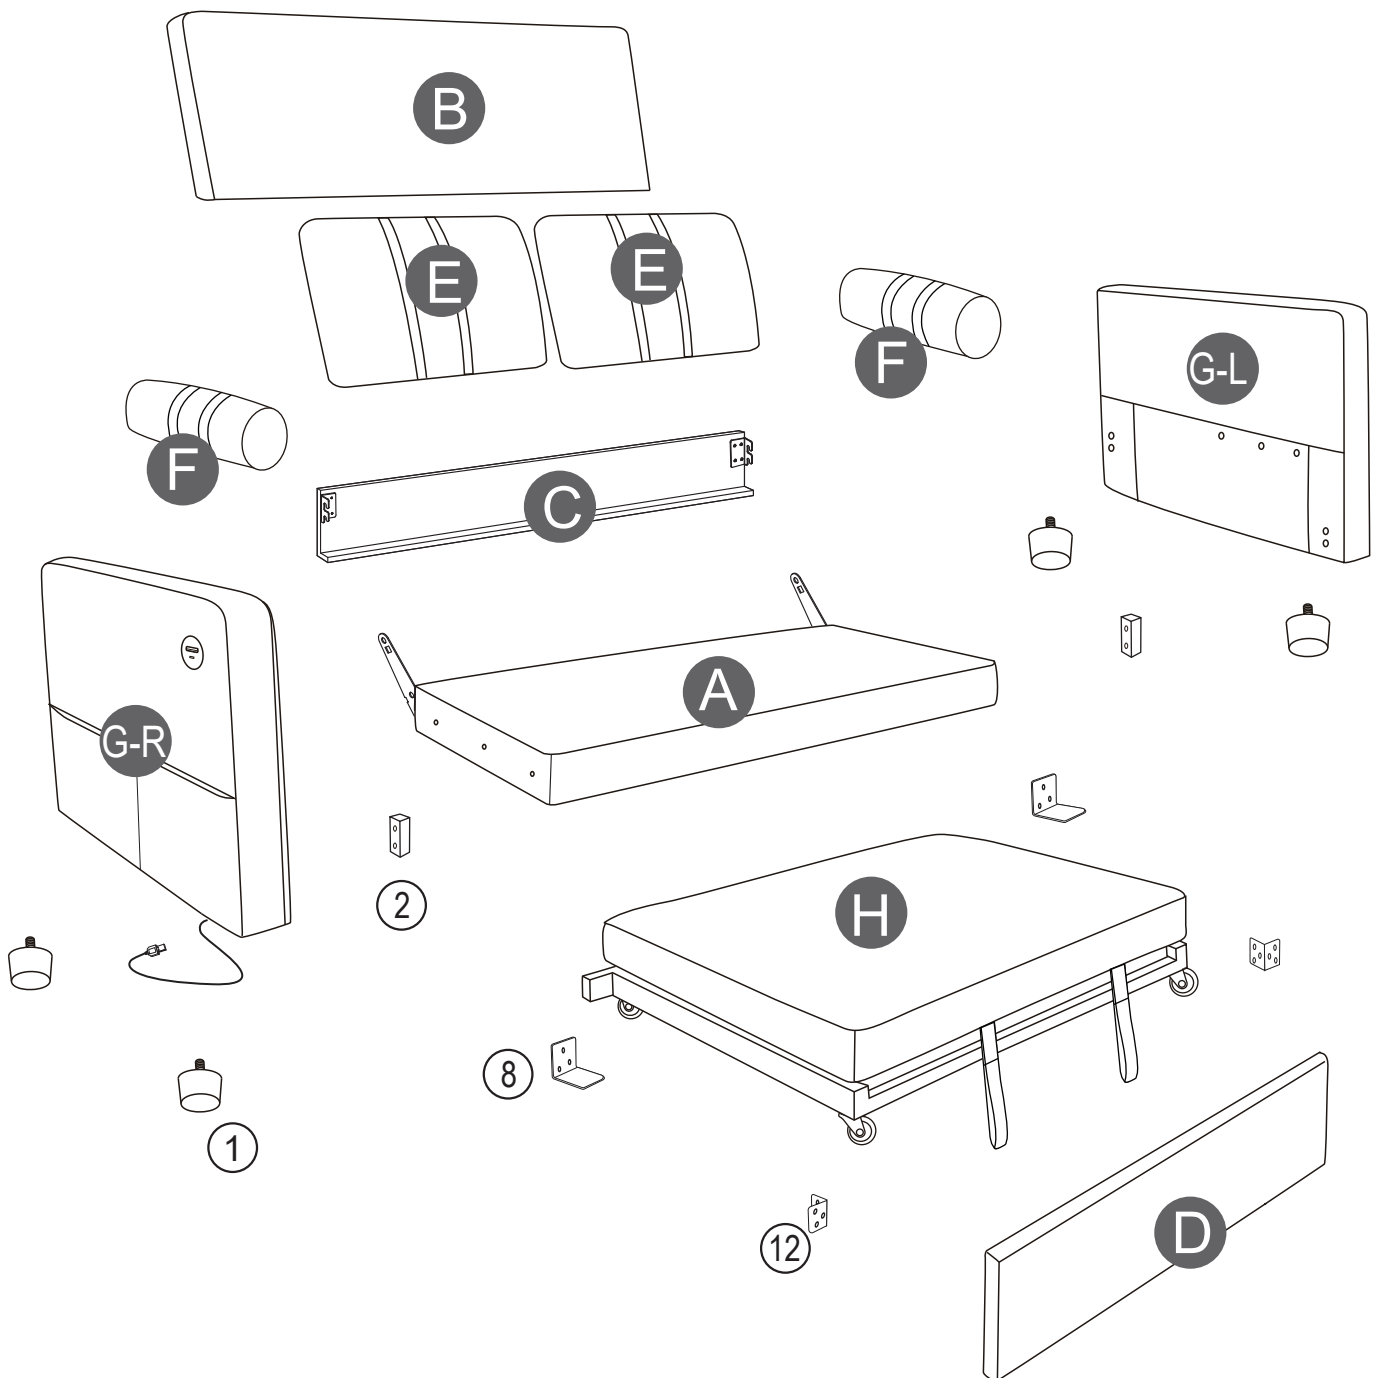


PACKING DETAILS: TOTAL 1 BOXES


BOX -1/2

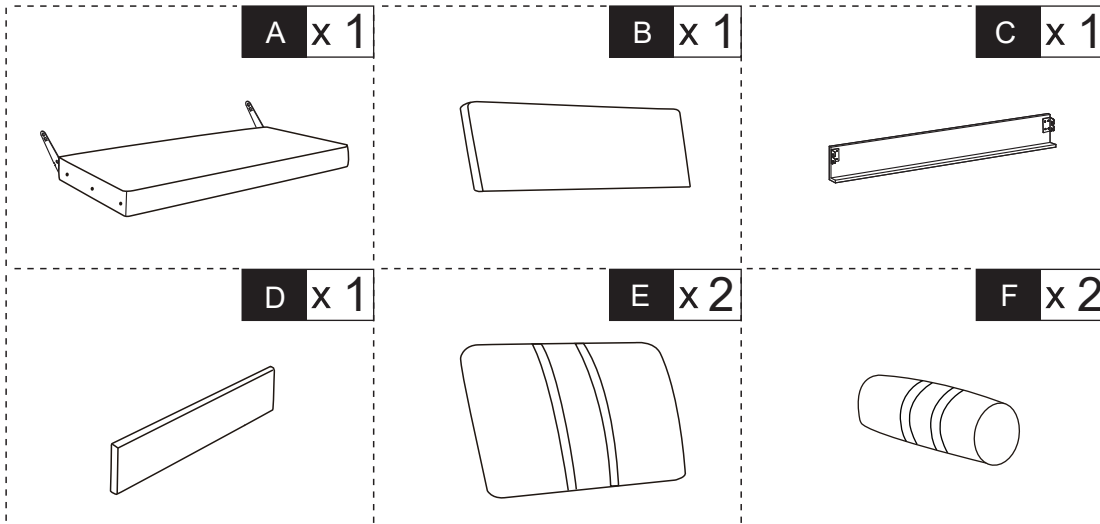

BOX -2/2

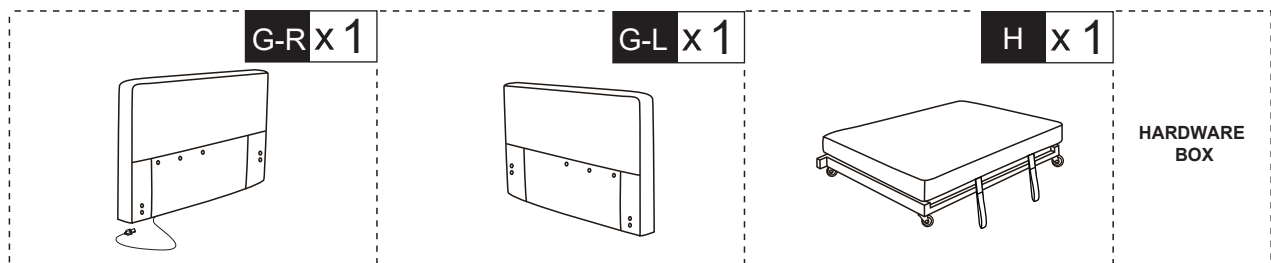


BOX -2/2

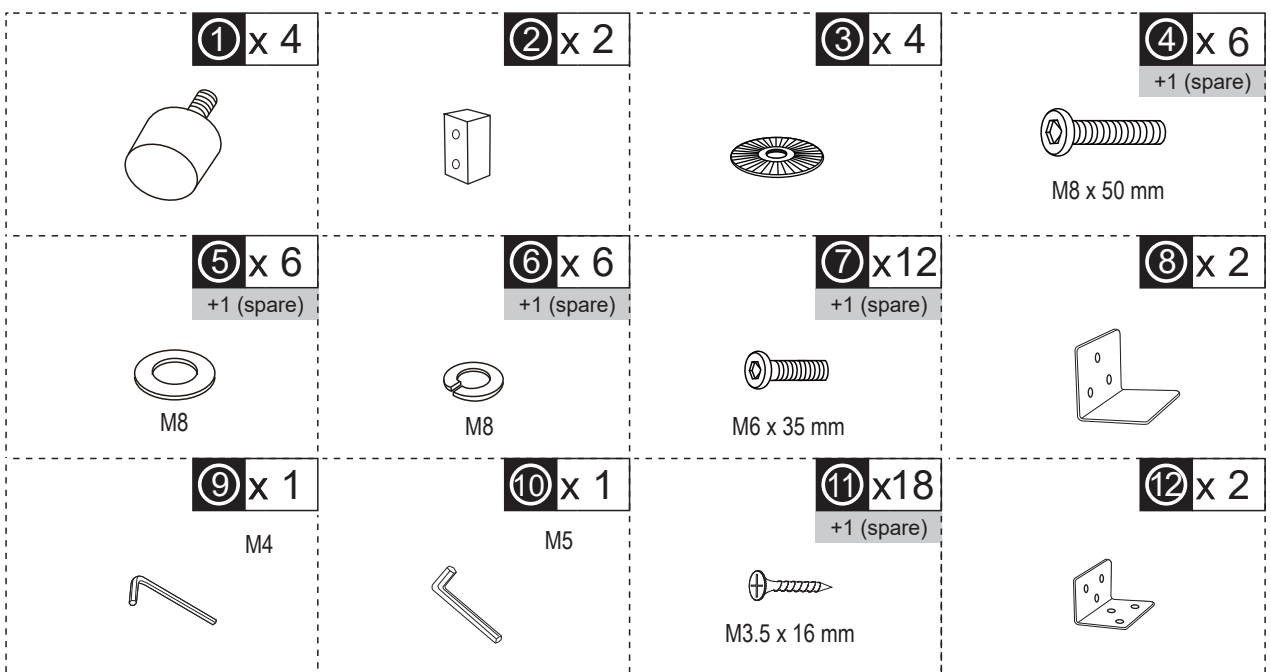



① x 4



② x 2







③ x 4



M6 x 35 mm

⑦ x 4

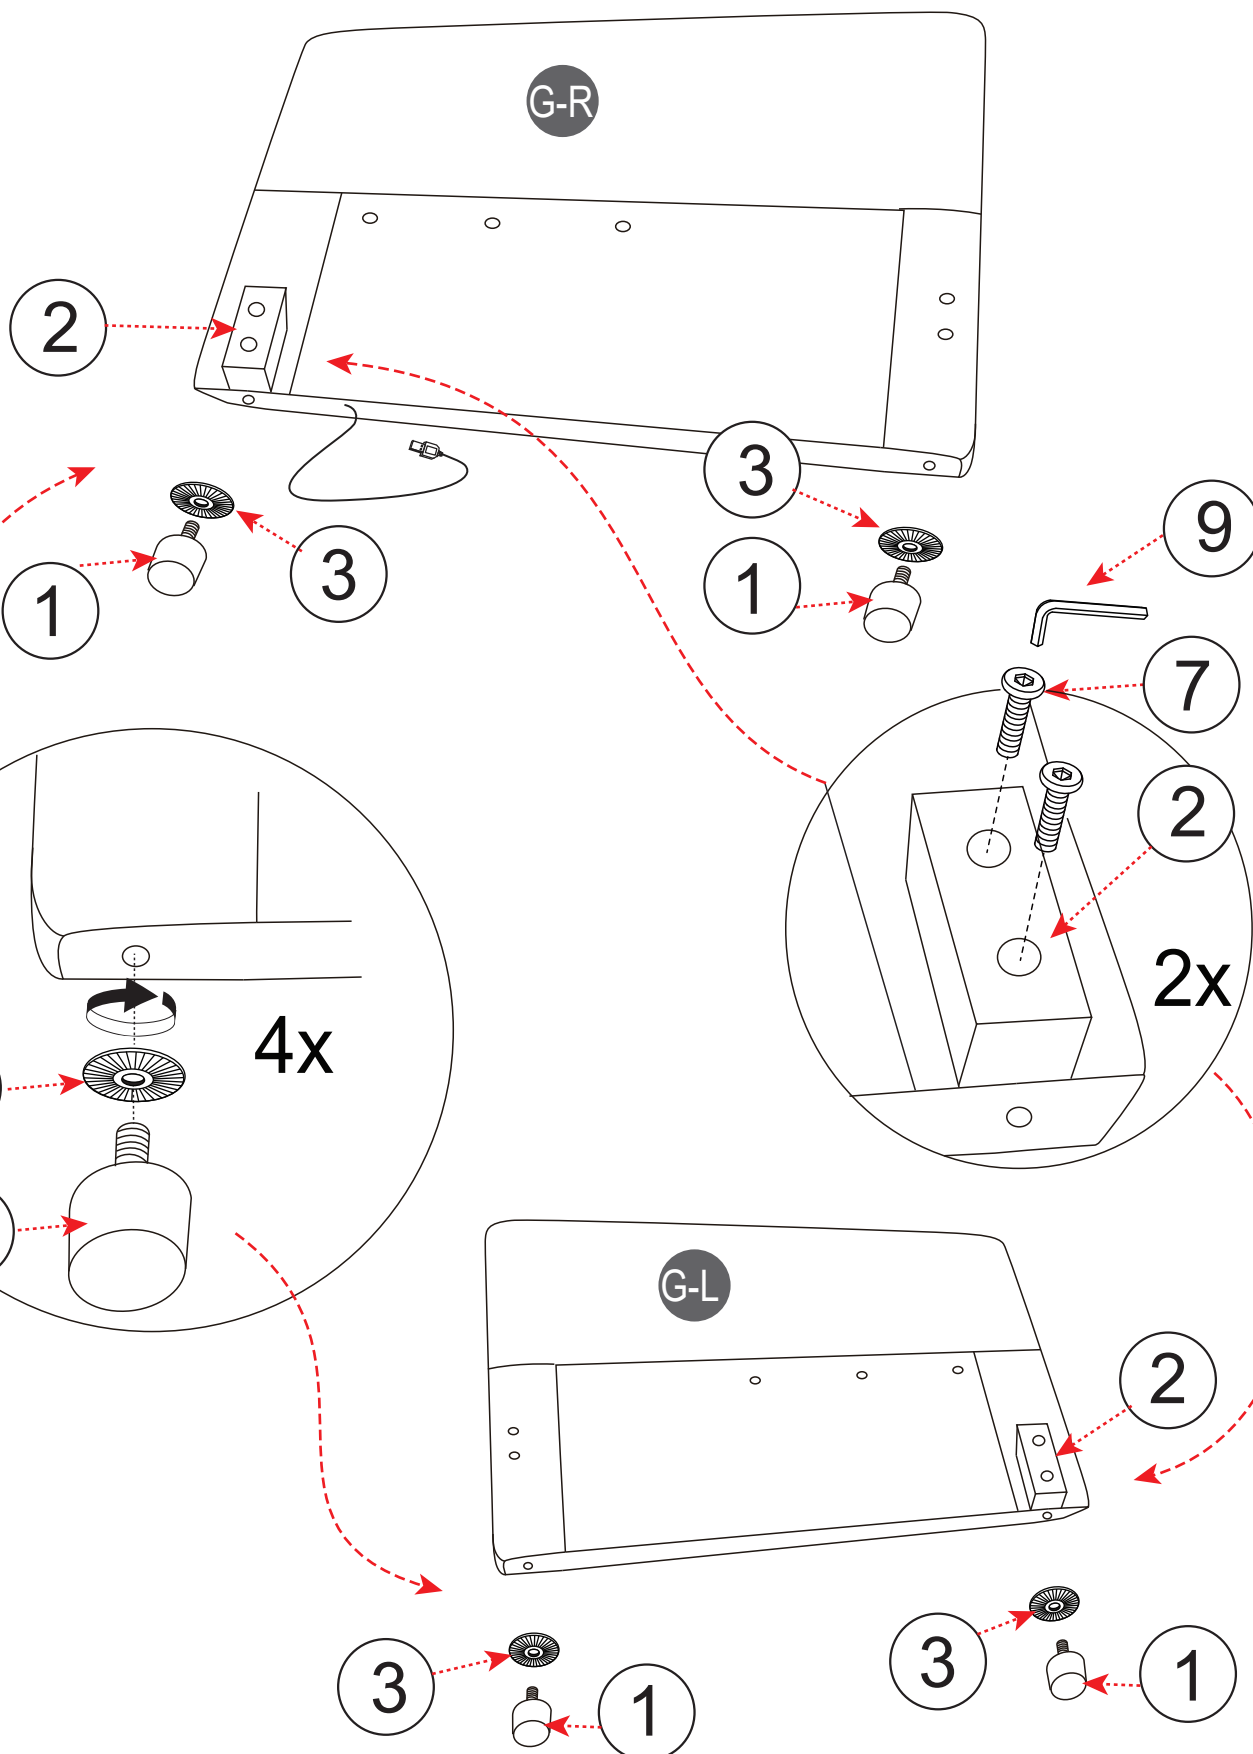

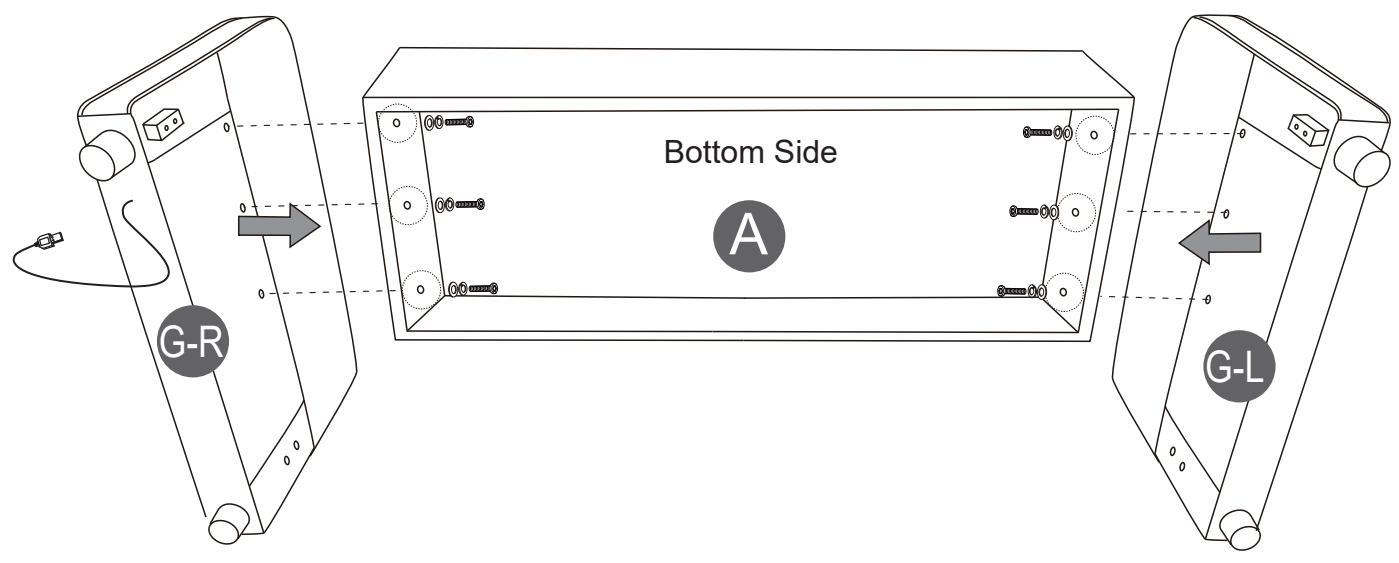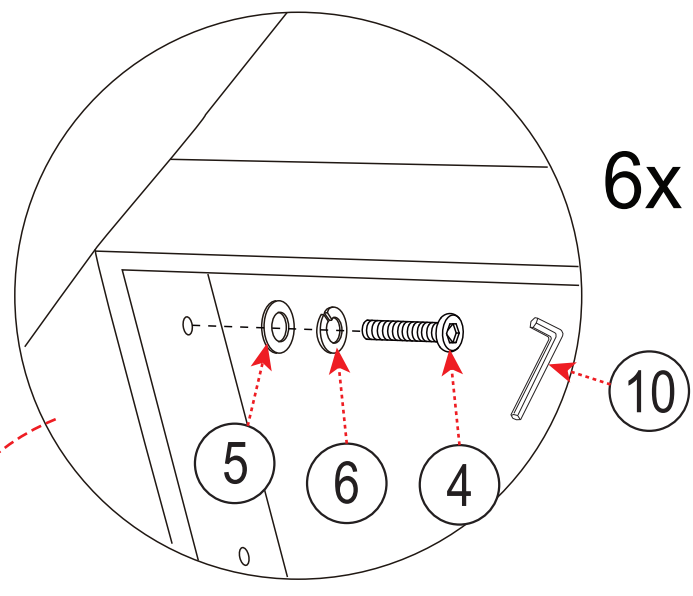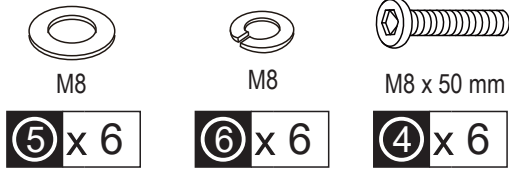





M6 x 35 mm

7 x 4


STEP 3.1

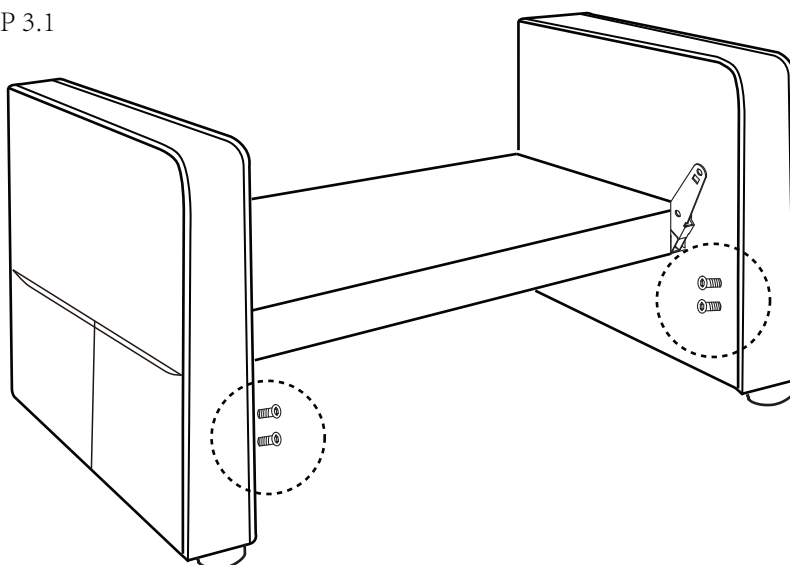



2x




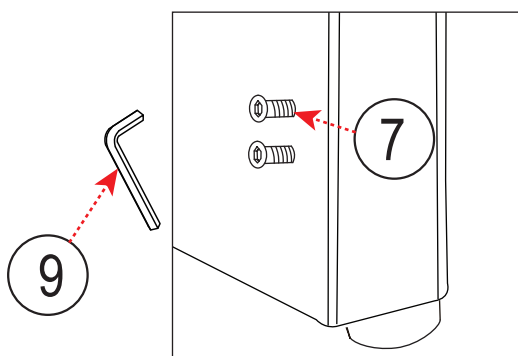


⚠ Do not fully tighten screws before completing step 3.2

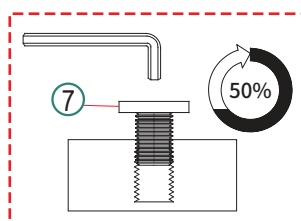


STEP 3.2

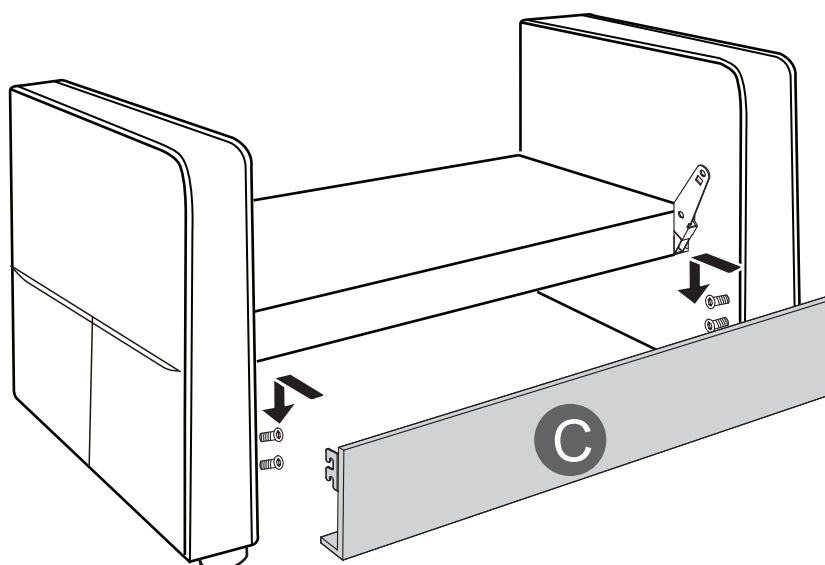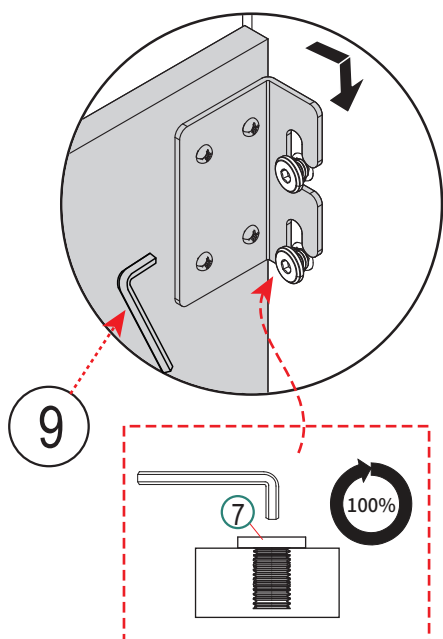

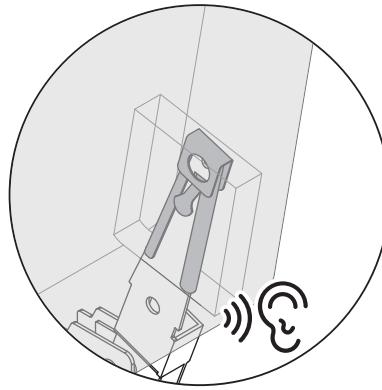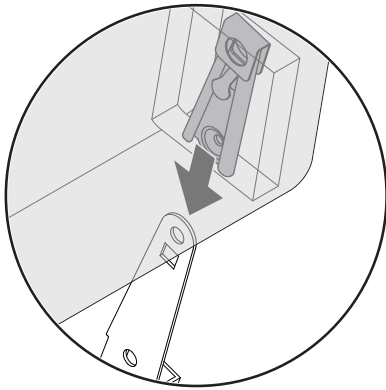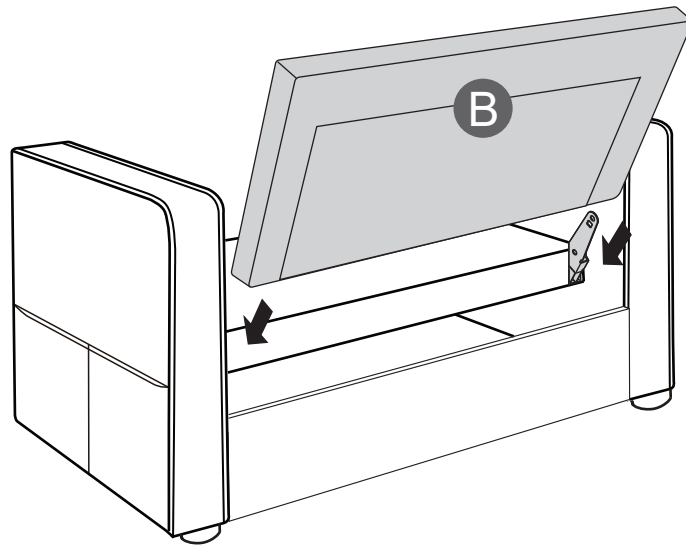


Note: You will hear a click once the hinge is locked.



M6 x 35 mm

⑦ x 4

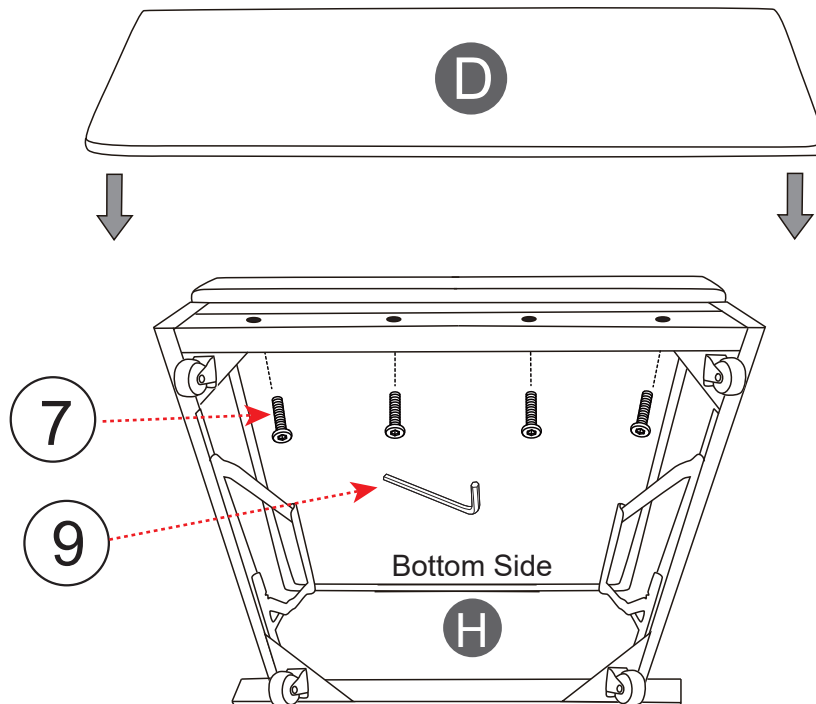





M3.5 x 16 mm




⑪ x 12

⑫ x 2

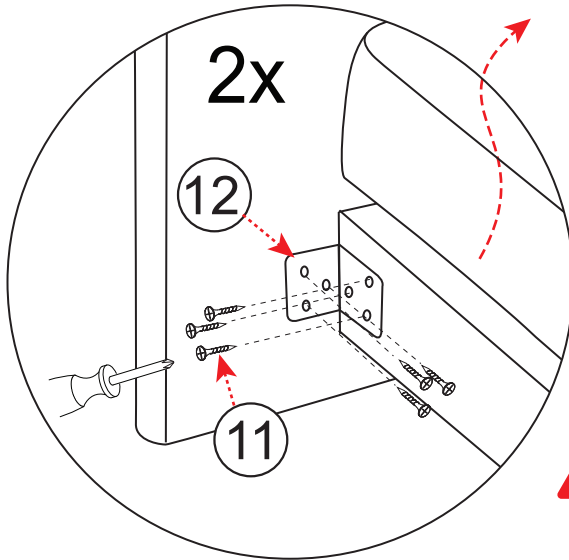
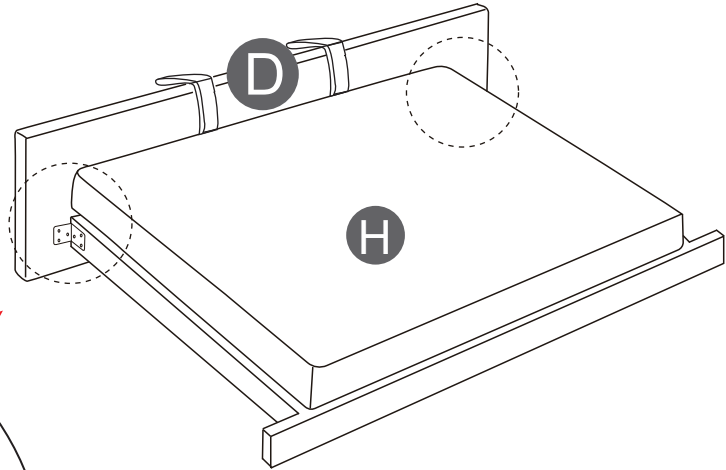
Screwdriver
Not Provided



M3.5 x 16 mm



⑪ x 6

⑧ x 2

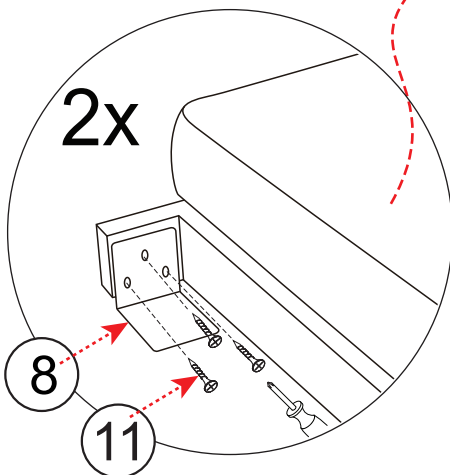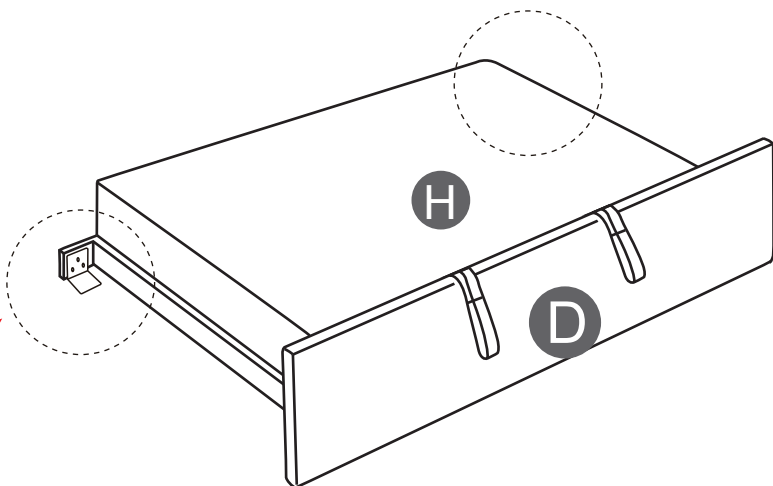
Screwdriver
Not Provided

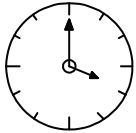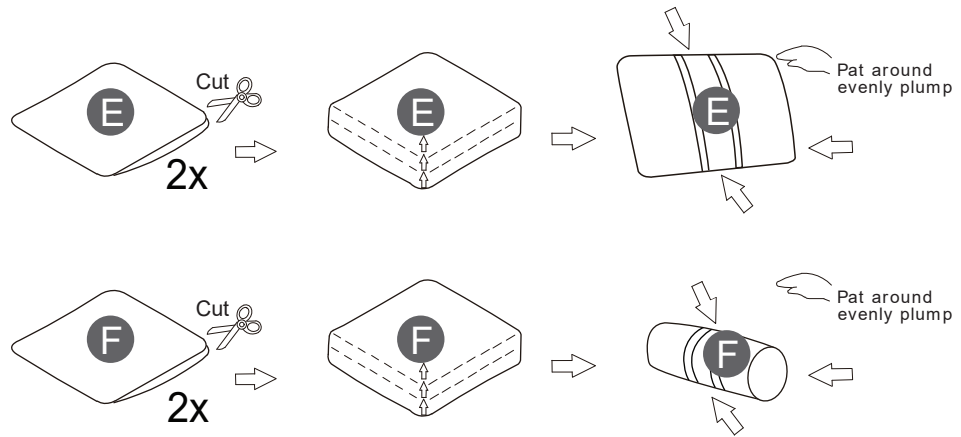

72h


The wrinkles on the cushion can be ironed with a steam iron, or after 72 hours, the wrinkles will disappear slowly.

Make the backrest pillows fuller by tapping and squeezing them.

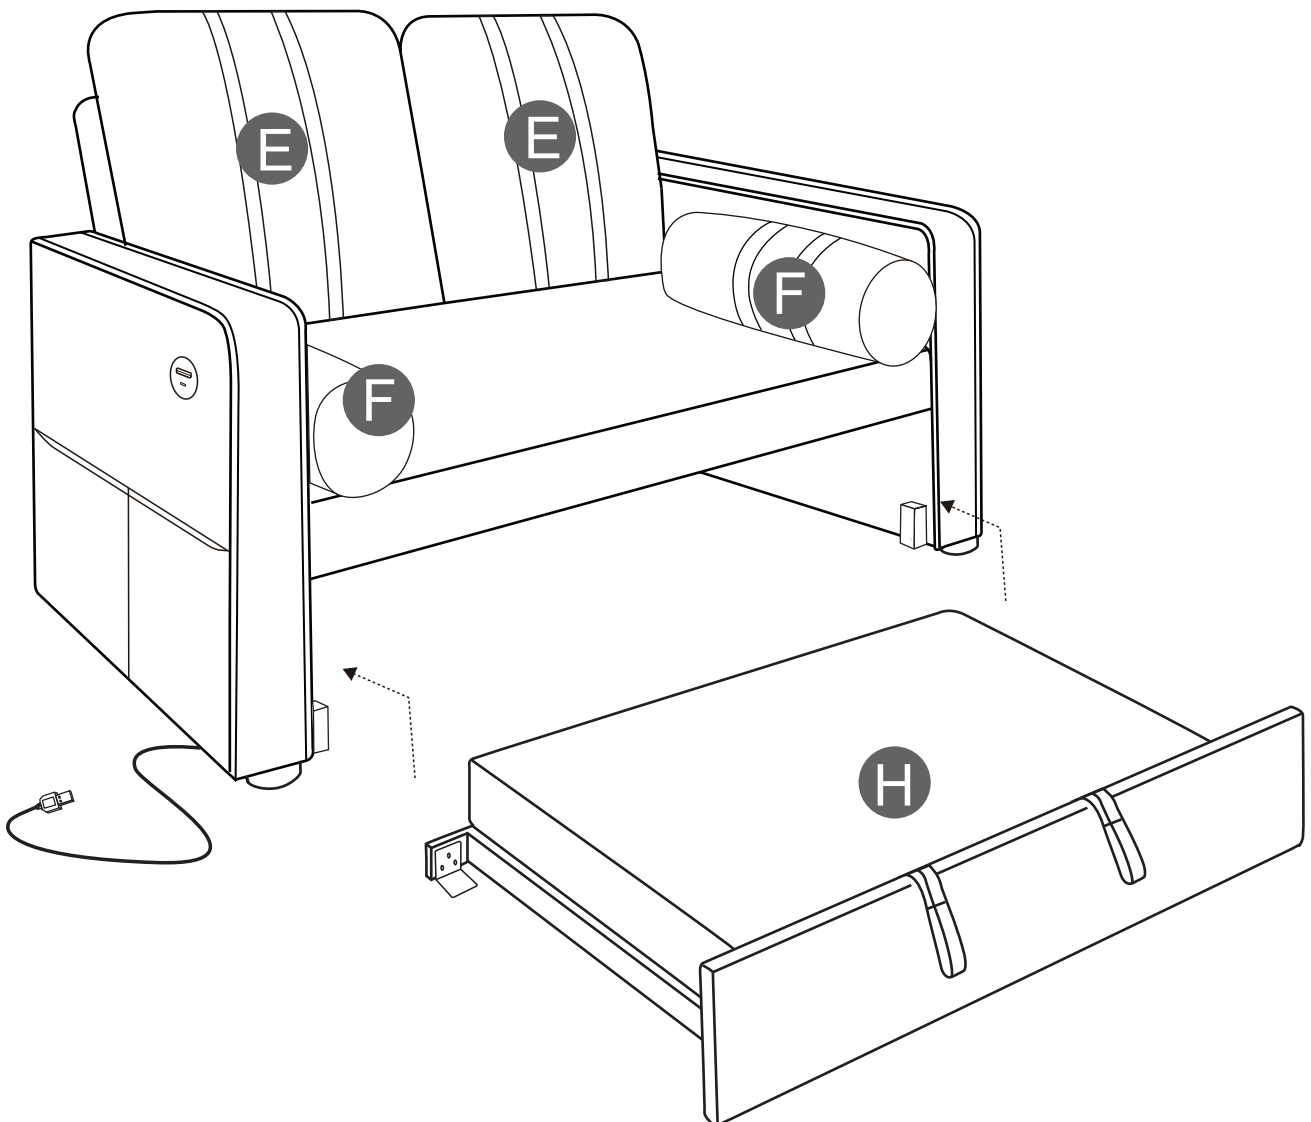



Adapter not provided.
Please use a
5V/2A Power Adapter.

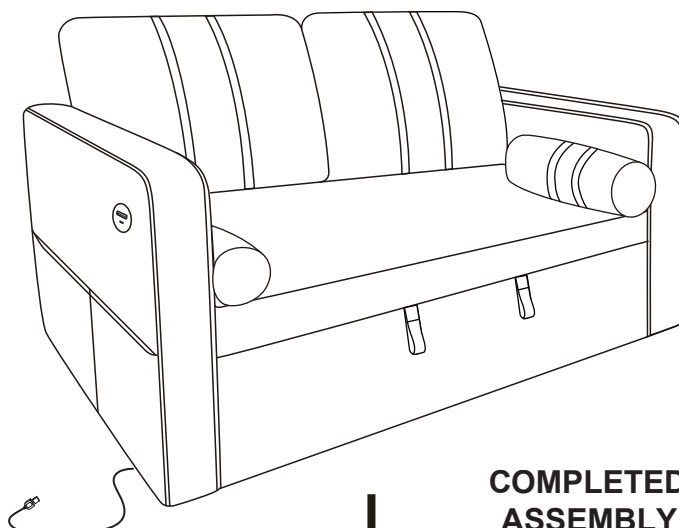

**COMPLETED
ASSEMBLY**

