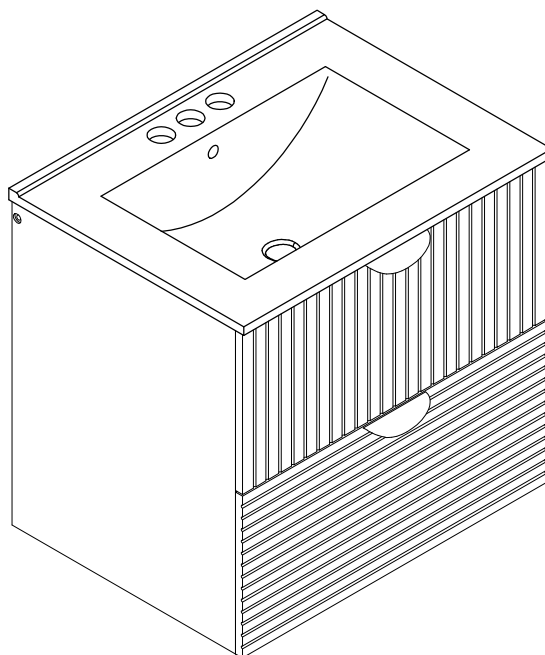


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)

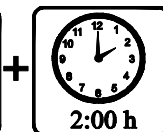
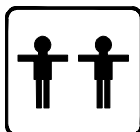


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation







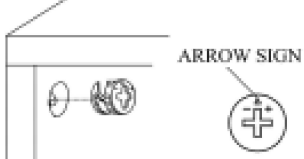
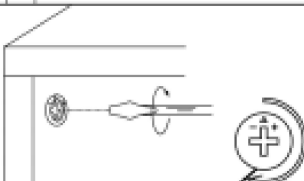
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

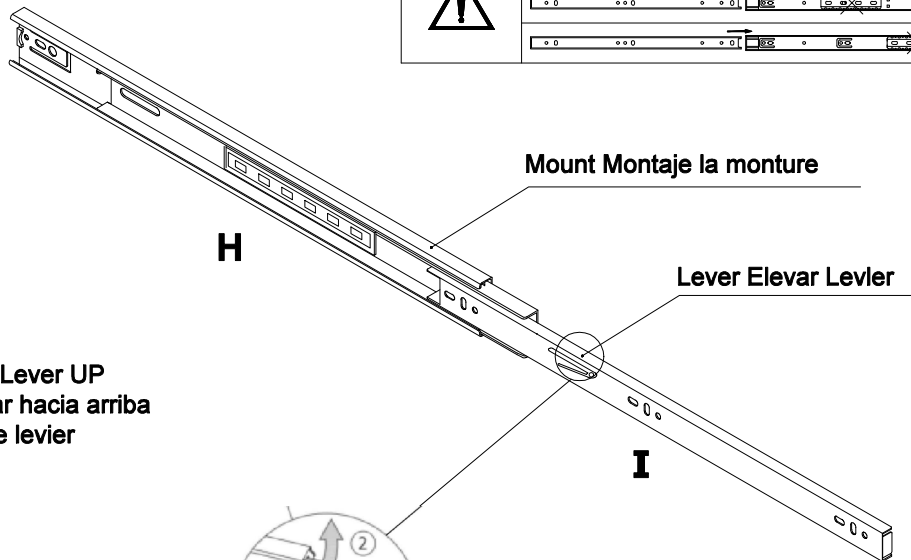
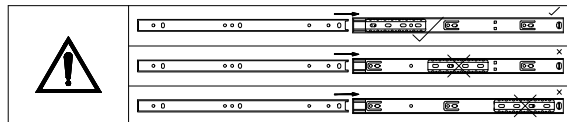
**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


**Pay attention when connecting !
The sliding module must be at the front end.**

**STEP 1 : Extend Slide
Extender la diapositiva**




**STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier**

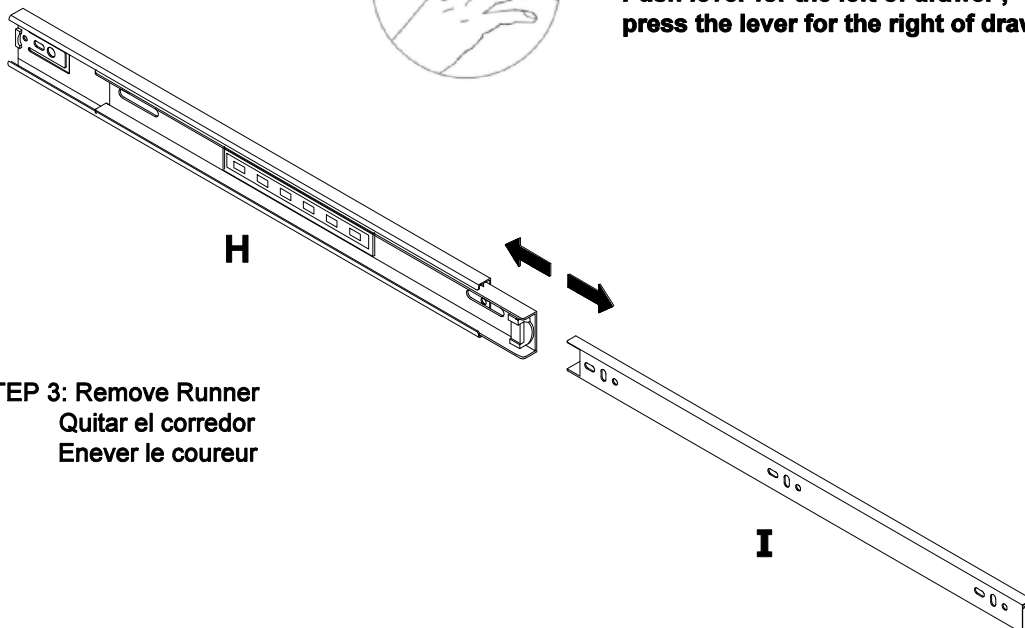**Push lever for the left of drawer ,
press the lever for the right of drawer.**















**STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur**

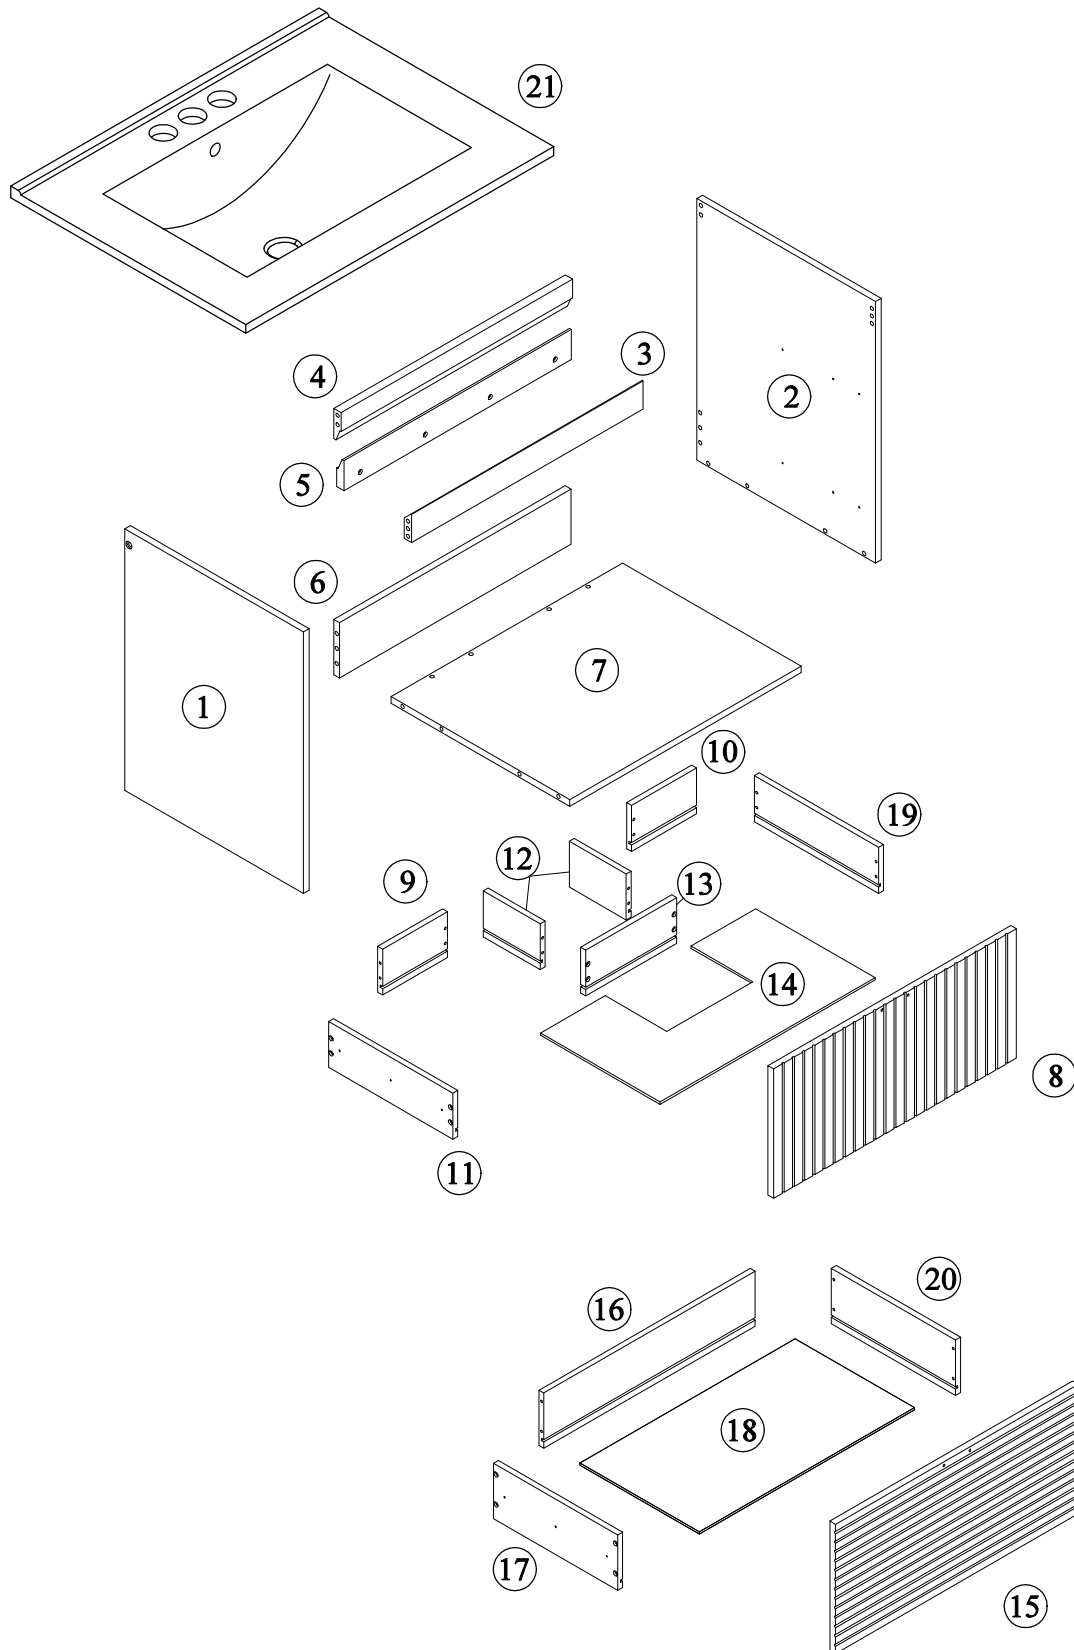Detail View - CABINET










Identifying the Hardware-Identify the hardware using the illustrations below.

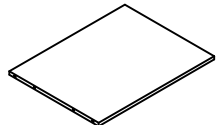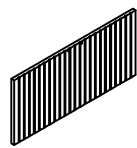
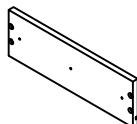

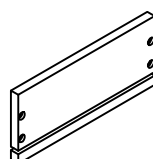
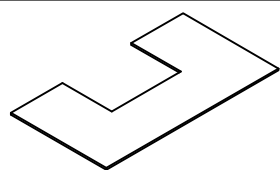
Part List - WF324047

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Front Crossbar Top - 1pc		Rear Crossbar Top - 1pc
5		6	
	Connect Bar - 1pc		Rear Panel Bottom - 1pc
7		8	
	Panel Bottom - 1pc		Top Drawer Face - 1pc
9		10	
	Top Drawer Rear (L) - 1pc		Top Drawer Rear (R) - 1pc
11		12	
	Drawer Panel Side (L) - 1pc		Mid Drawer Side - 2pcs
13		14	
	Mid Drawer Panel - 1pc		Top Drawer Panel Bottom - 1pc

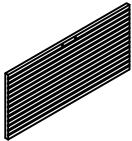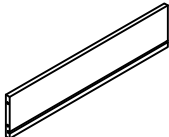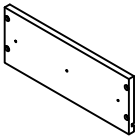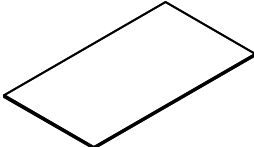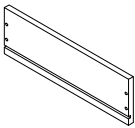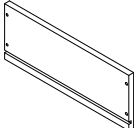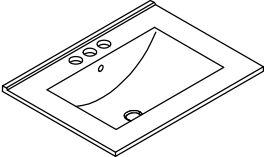Part List - WF324047


15	 Bottom Drawer Face - 1pc	16	 Bottom Drawer Panel Rear - 1pc
17	 Bottom Drawer Panel Side (L) - 1pc	18	 Bottom Drawer Panel Bottom - 1pc
19	 Drawer Panel Side (R) - 1pc	20	 Bottom Drawer Panel Side (R) - 1pc
21	 Sink - 1pc		

Hardware List - WF324047






A	 ø13x1/4"x50mm Hex-Head bolts (2pcs)	B	 ø10x13mm Horizontal-Hole bolts(2pcs)	C	 ø6x35mm Three in one bolts (12pcs)
D	 ø14.5x12mm Three in one lock (12pcs)	E	 ø8xø4x32mm Round head screw (24pcs)	F	 Handle (2pcs)
G	 ø5/32"x15mm Handle screw (4pcs)	H	 ø300x35mm Slide rails (4pcs)	I	 ø298x18mm Slide rails (4pcs)
J	 ø6xø3x12mm Flat head screw (24pcs)	K	 ø8x30mm Wood dowel (14pcs)	L	 ø10xø5x50mm Flat head screw - 4pcs
M	 ø12x55mm Plastic stopper - 4pcs	N	 4mm Allen key (1pc)		

STEP: 1

C



12PCS

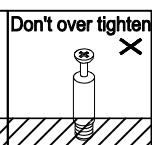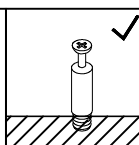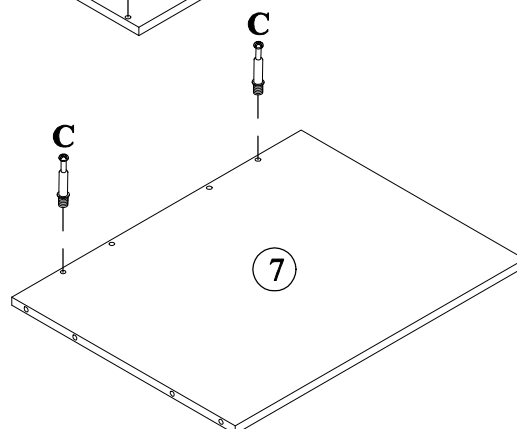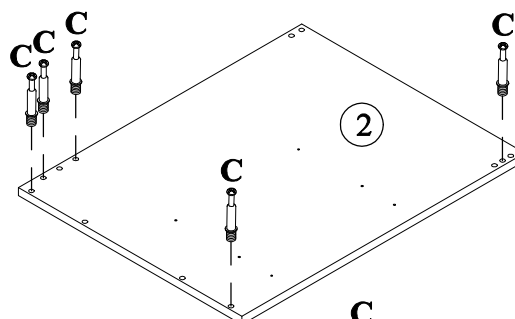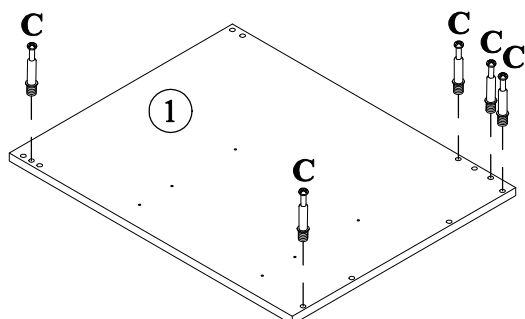

STEP: 2

H



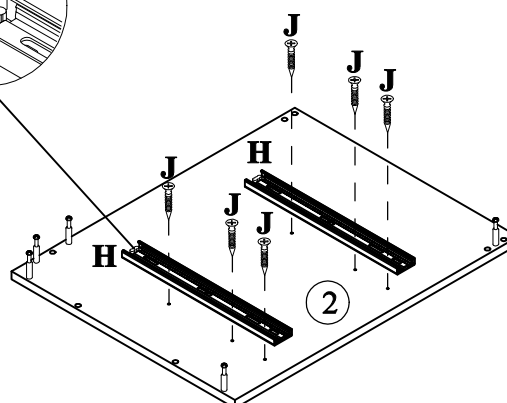
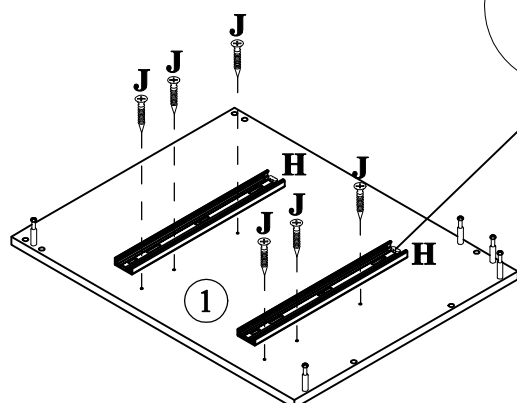
4PCS

J




12PCS

REAR





POSITION OF SCREW

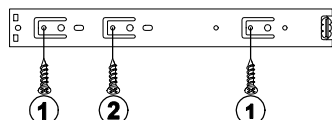



STEP: 3

D		K	
2PCS		2PCS	

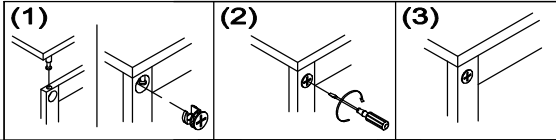
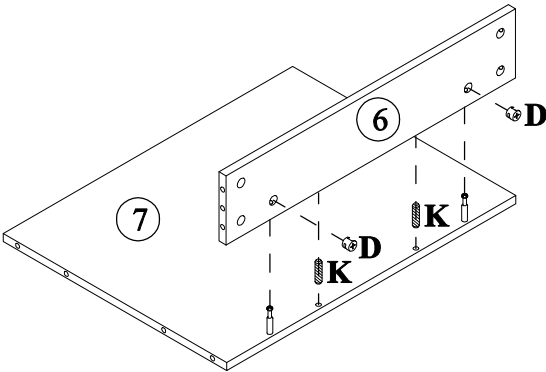




STEP: 4

D		K	
4PCS		3PCS	

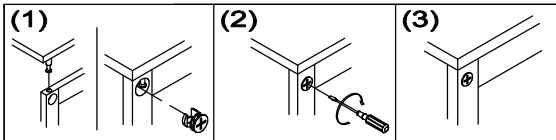
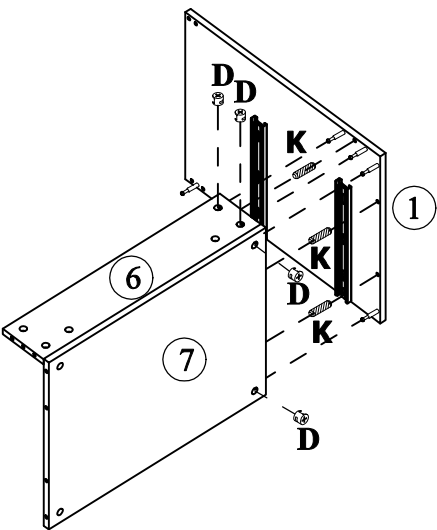




STEP: 5

A	B	D	K
			
1PC	1PC	1PC	3PCS

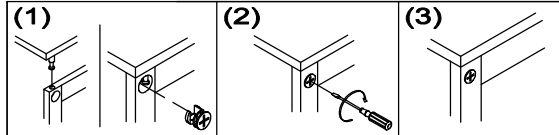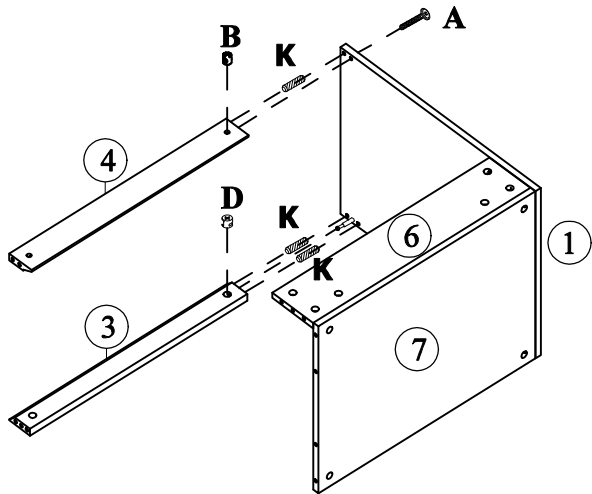


STEP: 6


A	B	D	K
			
1PCS	1PCS	5PCS	6PCS

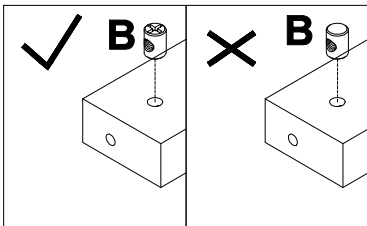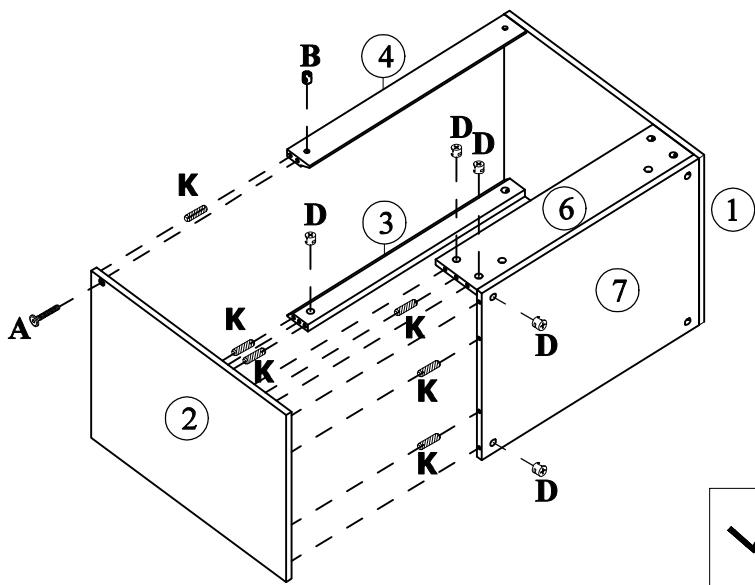

STEP: 7

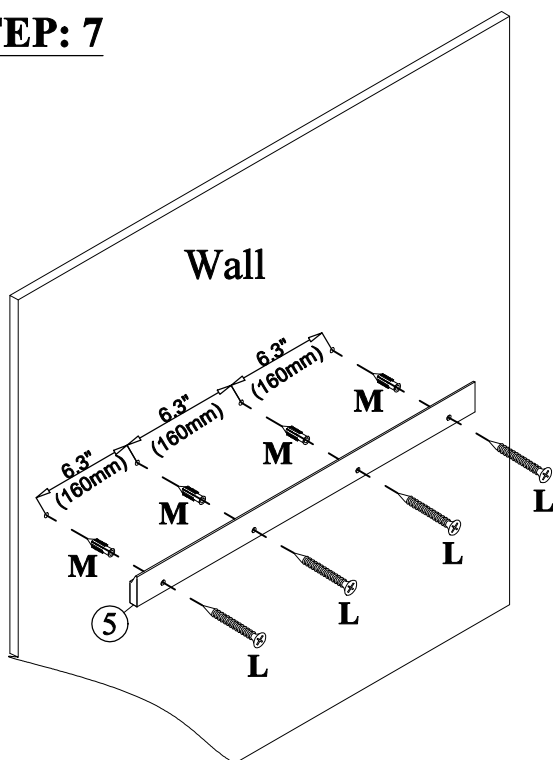


L	M
	
4PCS	4PCS

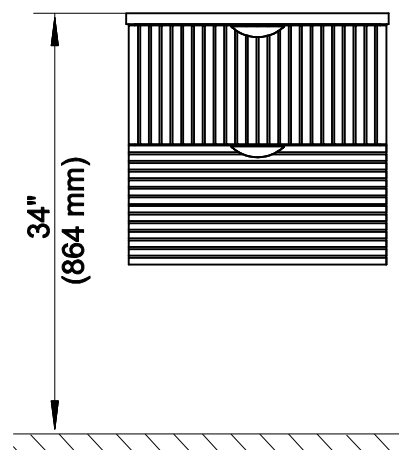



Draw the spacing between the walls and the No.5, punch holes in the wall, and fix the No.5 to the wall with screws.


Note: Appropriate distance from the top of sink to the ground is 34".

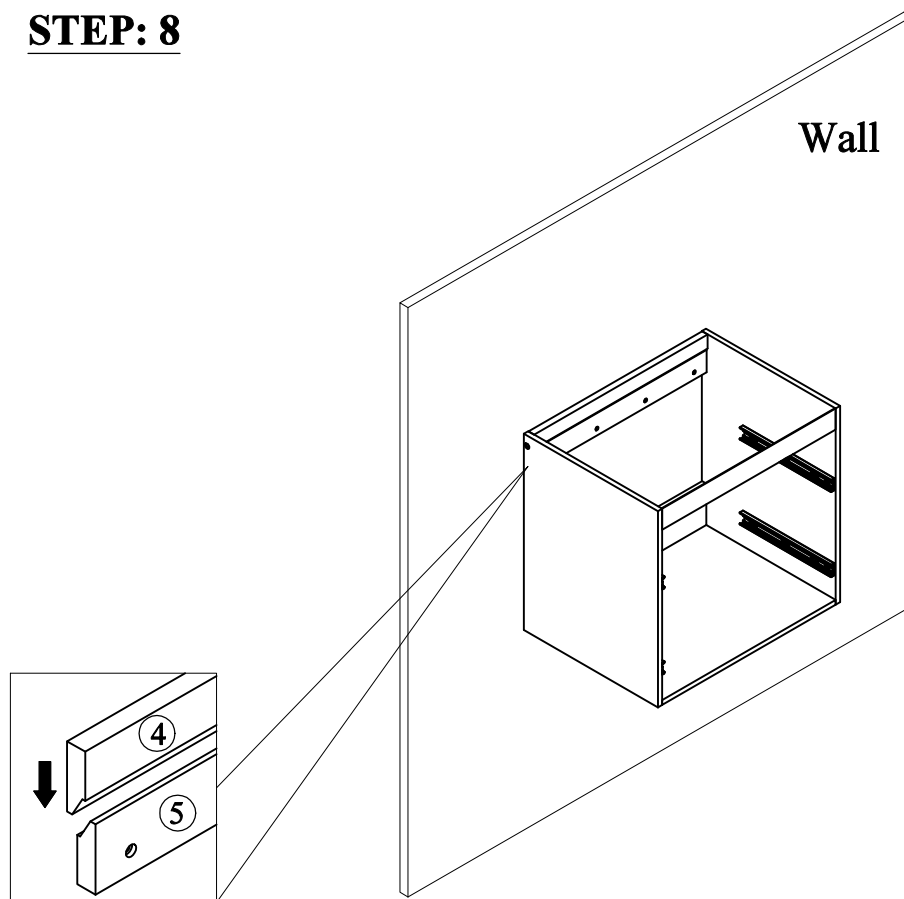STEP: 8






STEP: 9

E	F	G	I	J
				
16PCS	1PC	2PCS	2PCS	6PCS

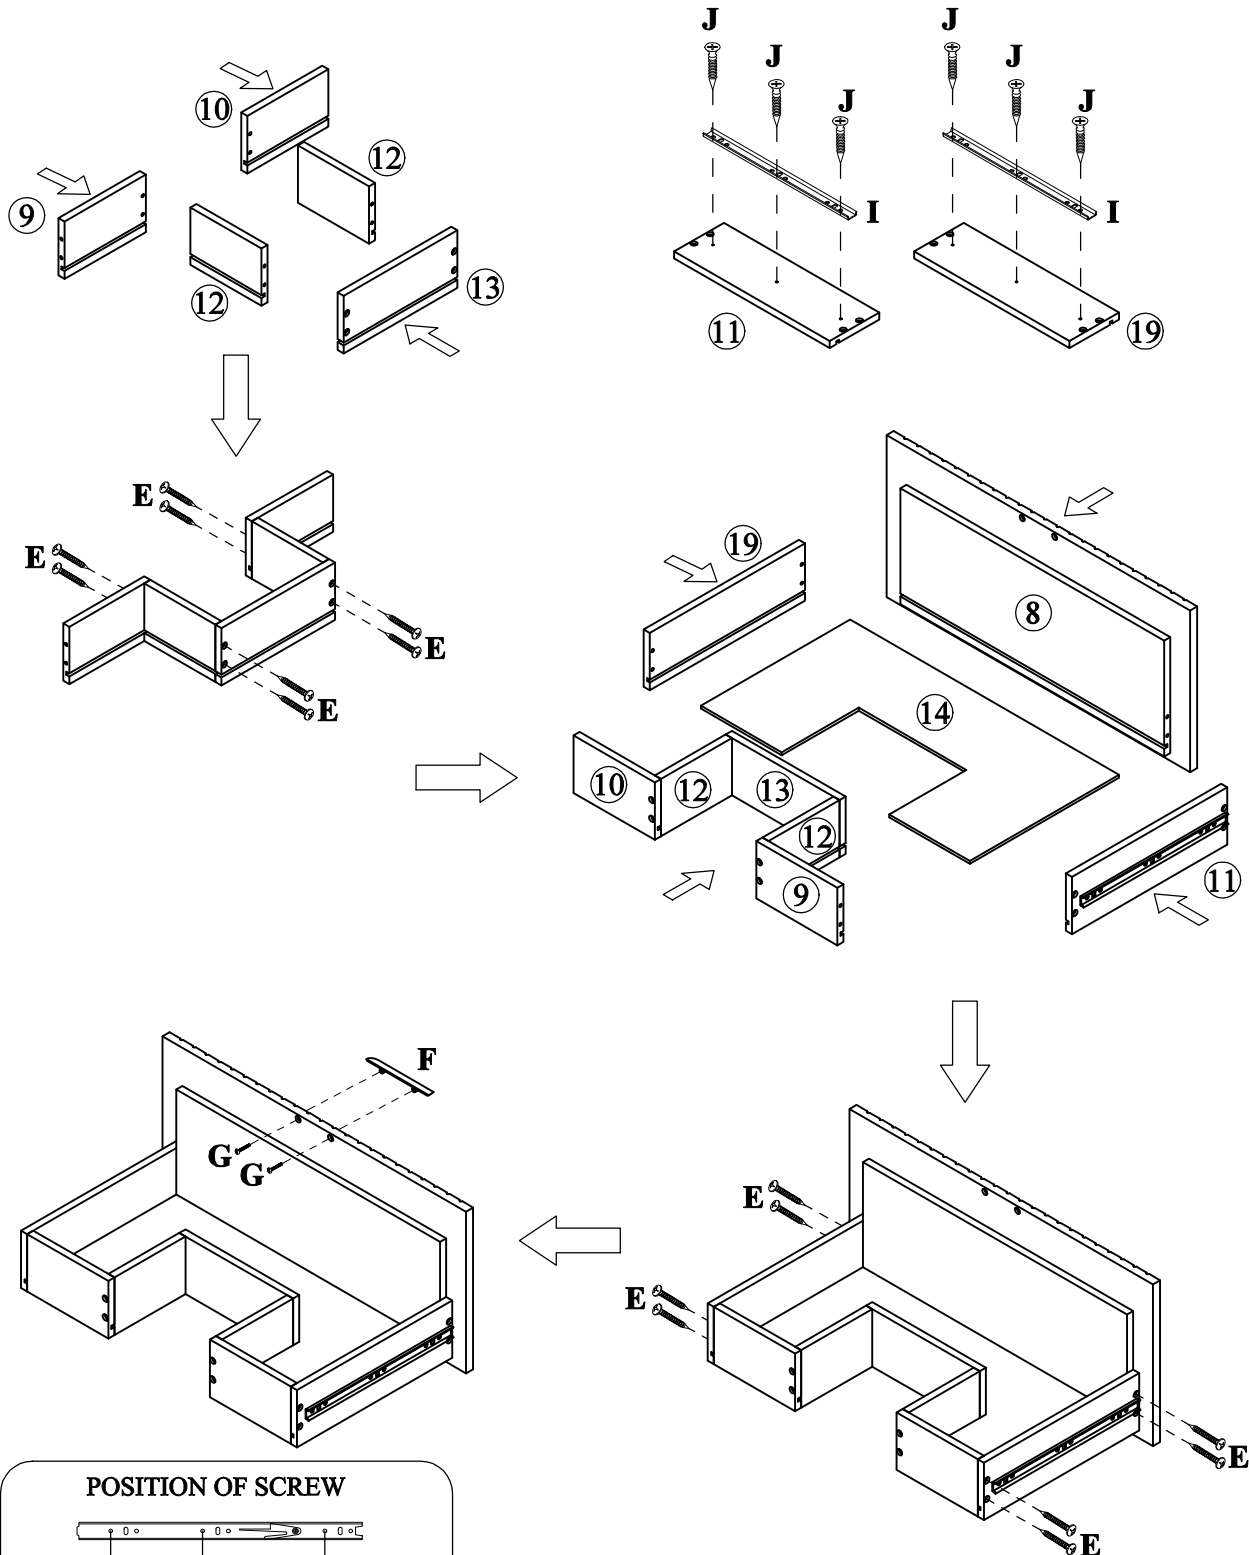


STEP: 10

E	F	G	I	J
				
8PCS	1PC	2PCS	2PCS	6PCS

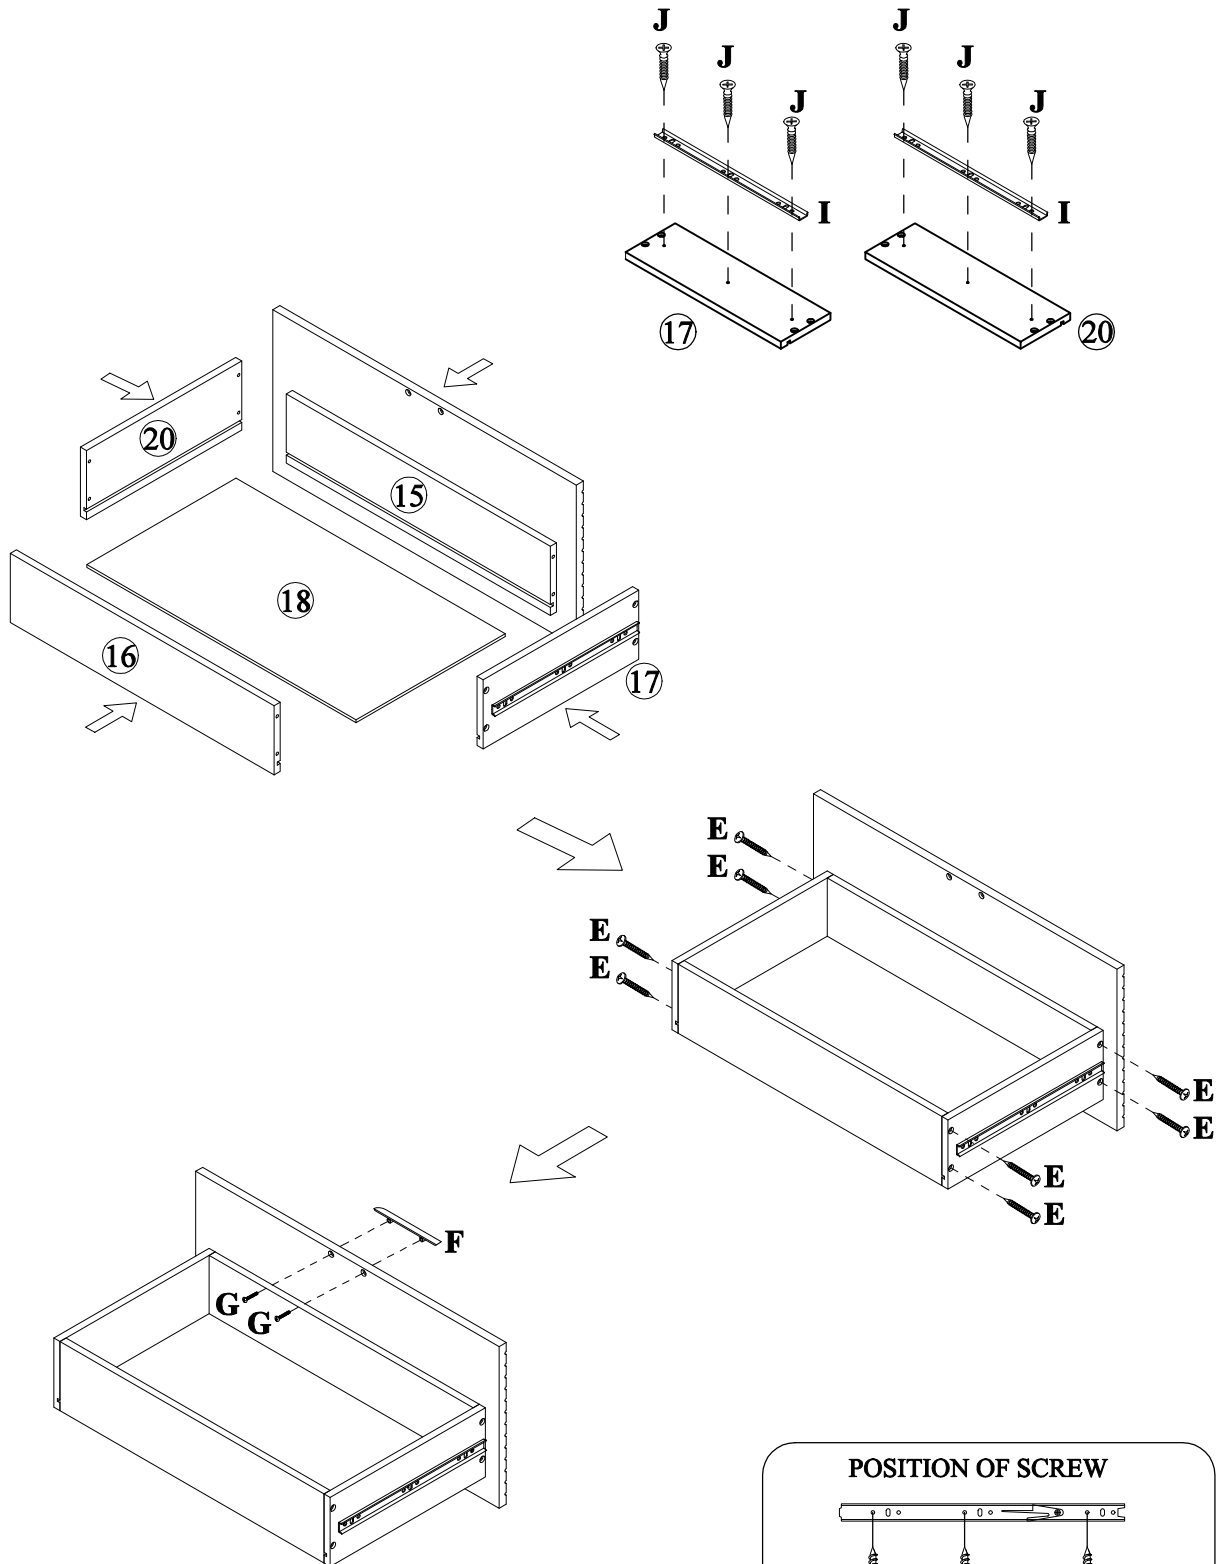


STEP: 11

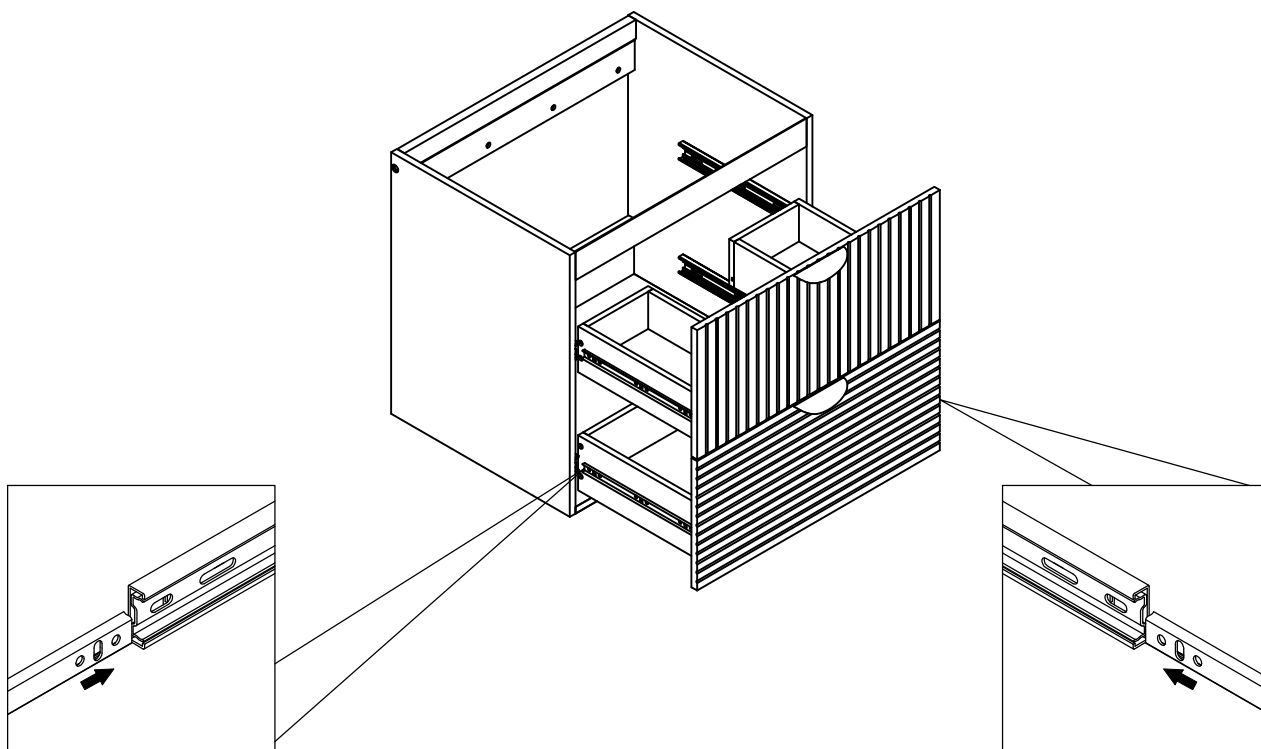

STEP: 12

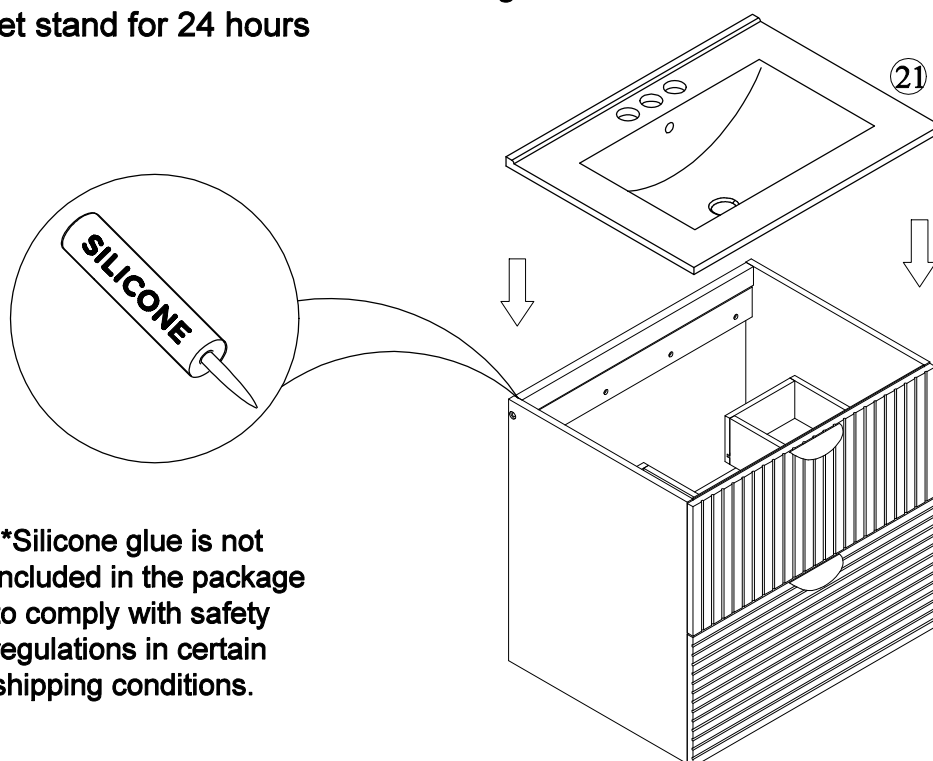Install the sink on the cabinet with glue.
Let stand for 24 hours



*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 13

Wall

