


II. ASSEMBLY INSTRUCTIONS

1. Product Parameters

Specification	Description
Product Model No.	6151-4651
Package Quantity	2
Carton Dimension	6151-4651-1(box1 of 2) 35.4x30.7x12.6 inch 6151-4651-2(box2 of 2) 26x30.3x18.9 inch
Weight Capacity	330lbs
Reclining Angle	120°-145°
Package Contains	Box 1 of 2: Back Cushion,Ottoman Cushion, U-frame,Round Ottoman Base,Left Armrest, Instructions
	Box 2 of 2: Seat Cushion,Right Armrest, Connecting Shaft,Round Chair Base,Screw Pack


2. Part List

Components											
Seat Cushion		Back Cushion		Left/Right Armrest							
											
A*1PC		B*1PC		C*1PC							
Round Chair Base		Connecting Shaft		Round Iron Plate							
											
F*1PC		H*1PC		I*2PCS							
Ottoman Cushion		U-shaped Frame		Round Ottoman Base							
											
D*1PC		E*1PC		G*1PC							
Hardware											
Bolt M8*25mm		Nuts M8		Bolt M8*60mm		Bolt M8*40mm		Bolt M8*55mm		Bolt M6*20mm	
											
J*2PCS		K*2PCS		L*2PC		M*4PCS		N*5PCS		O*4PCS	
Bolt M6*40mm		Washers		Washers M8		Spanner M5		Allen Wrench M5		Allen Wrench M6	
											
P*4PCS		Q*9PCS		R*9PC		S*1PC		T*1PC		U*1PC	

3. Remove the Protective Strips


Step1

1.Take out the Chair Base #F, then use an Allen wrench #T to unscrew and remove strip①.

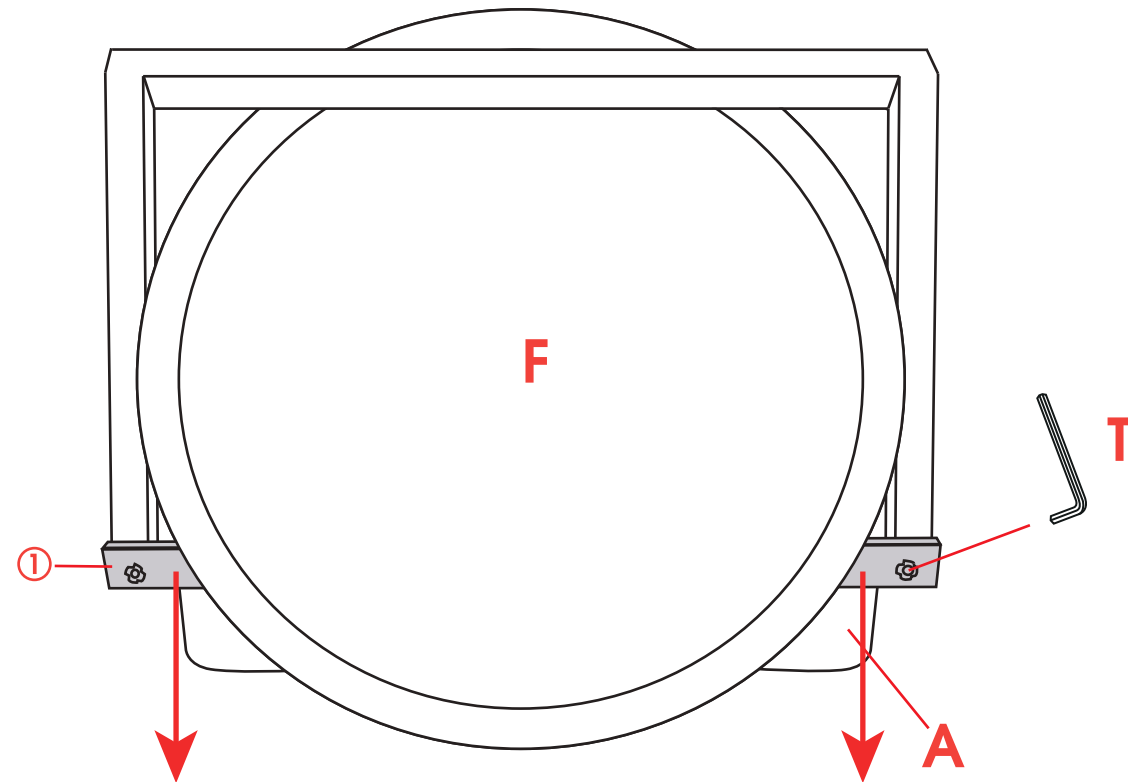

Step2

2.Cut open the EPE around the armrest frame and remove strip ②.


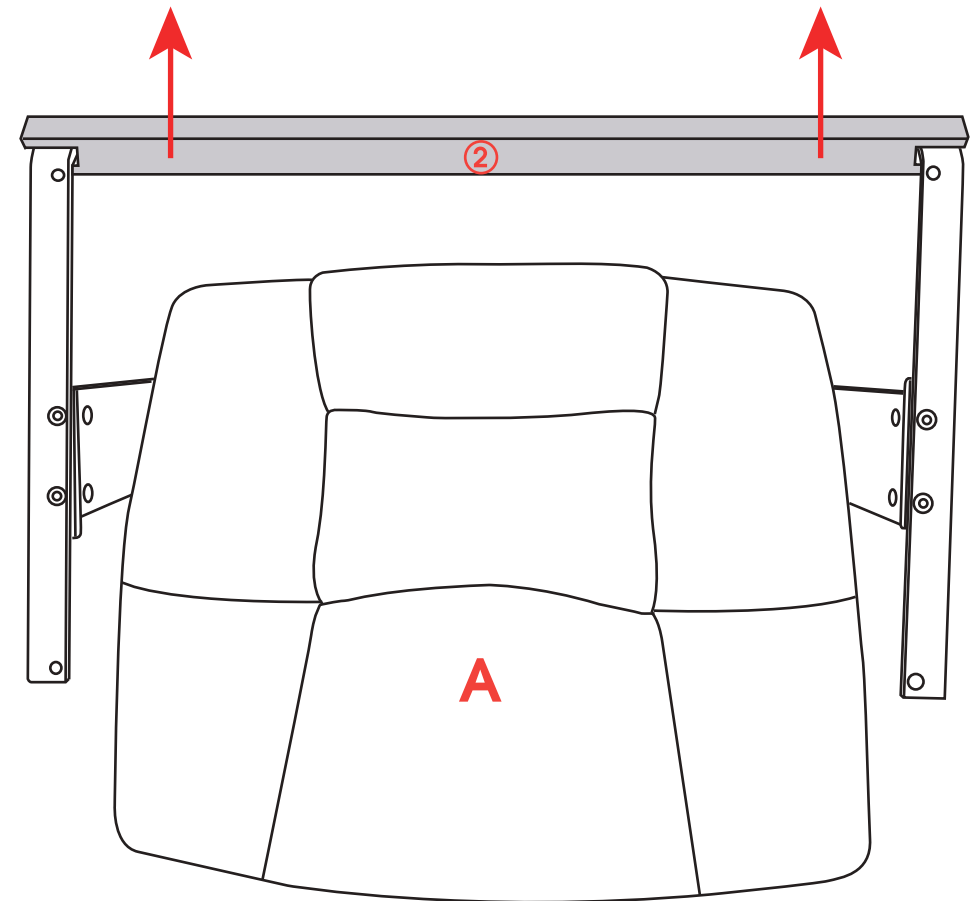


NOTE: The removed screws and strips won't be used in the following assembly.

4. Assembly Steps


Step1 - Assembly of Chair Base

Put the Round Iron Plate #I at both ends of the Round Chair Base #F, put the Washers #R and Washers #Q on the Bolts #N in turn, and then fasten the Connecting Shaft #H on the Round Chair Base #F with the Bolts #N. Tighten the Bolts with an Allen Wench #U. As shown in the figure.

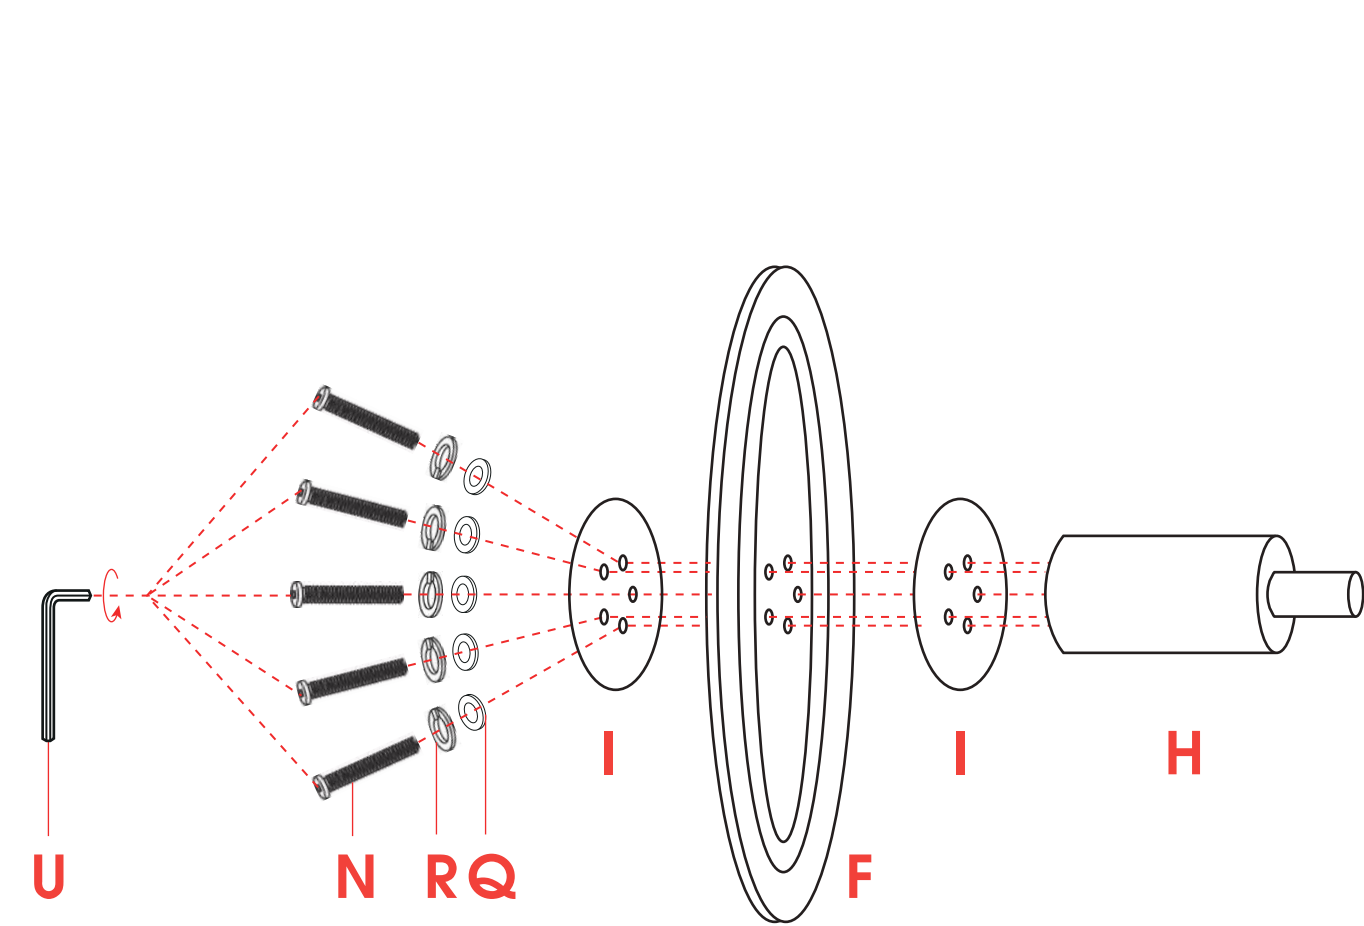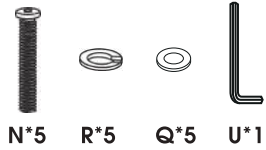



Step2 - Assembly of Seat Cushion

Insert the Seat Cushion #A into the Connecting Shaft of the Round Chair Base assembled in the previous step.

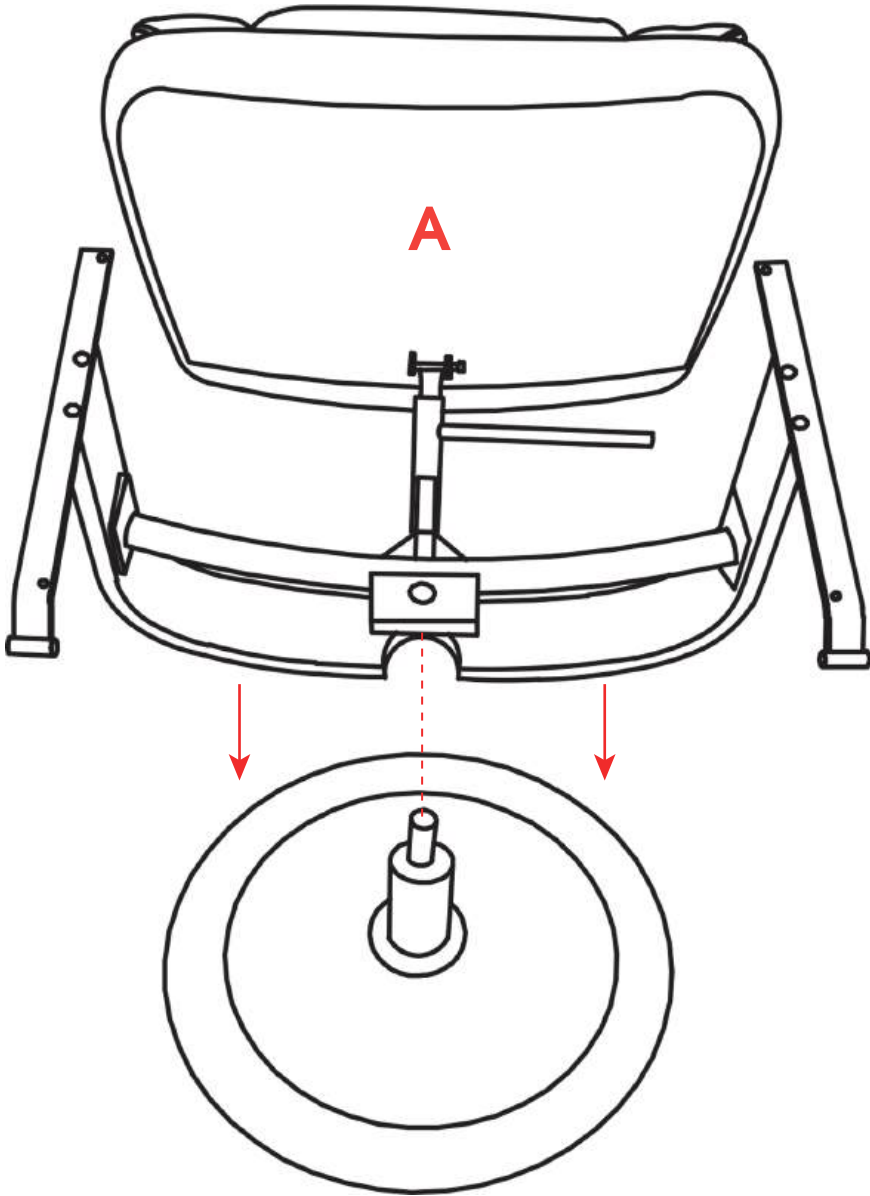



Step3 - Assembly of Backrest

Place the Back Cushion **#B** flat on the Seat Cushion **#A**, align the holes on both sides with the holes on the seat cushion armrest, and tighten them with Bolts **#L**. Tighten the Bolts with an Allen Wrench **#U**.

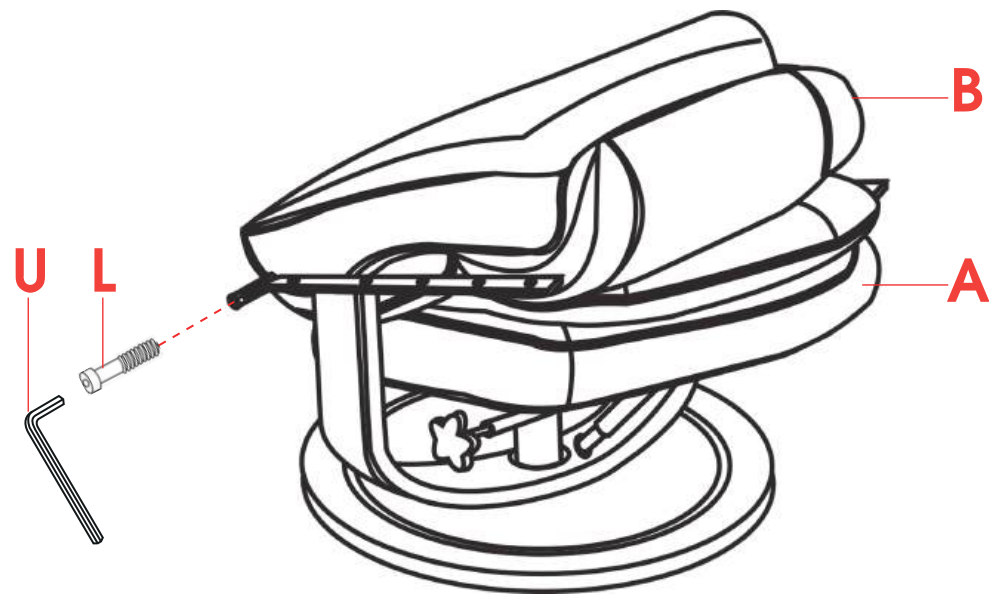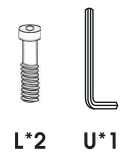



Step4 - Combine Backrest and Seat Cushion

Put the Back Cushion **#B** up. Align the hole at the bottom of the Back Cushion **#B** with the hole in the Seat Cushion **#A** and tighten it with Bolts **#J** and Nuts **#K**. Tighten the Bolts with an Allen Wrench **#U**.

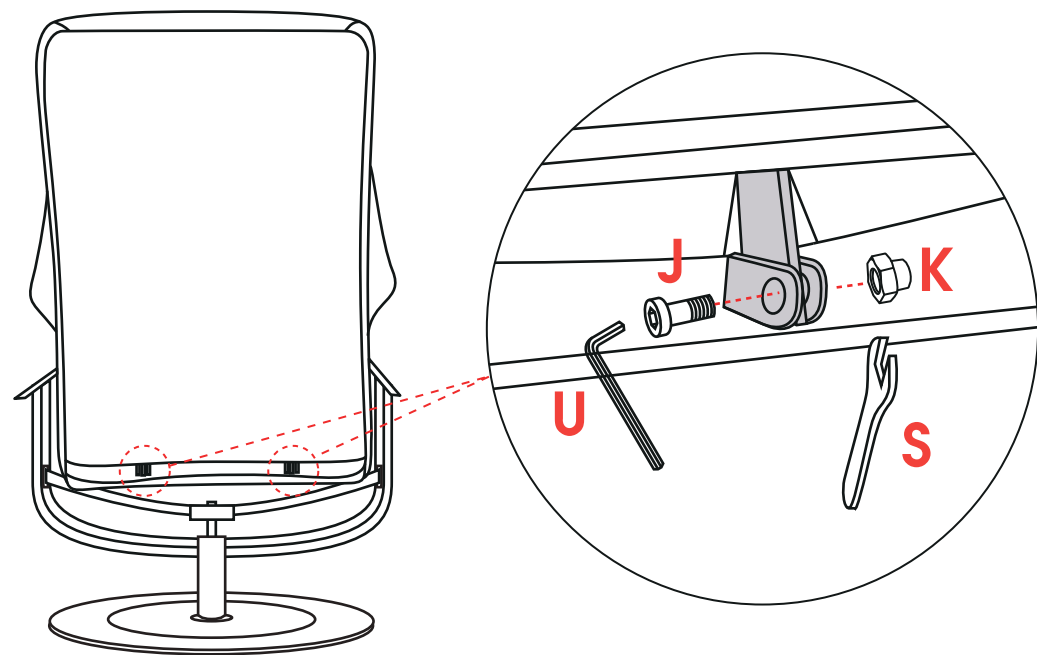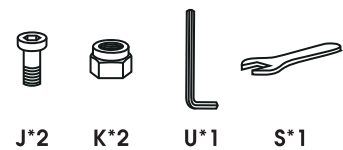



Step5 - Assembly of Armrest

Insert Bolts **#P** under the handrail frame to tighten the Left and Right Armrest **#C**. Tighten the Bolts with an Allen Wrench **#T**.

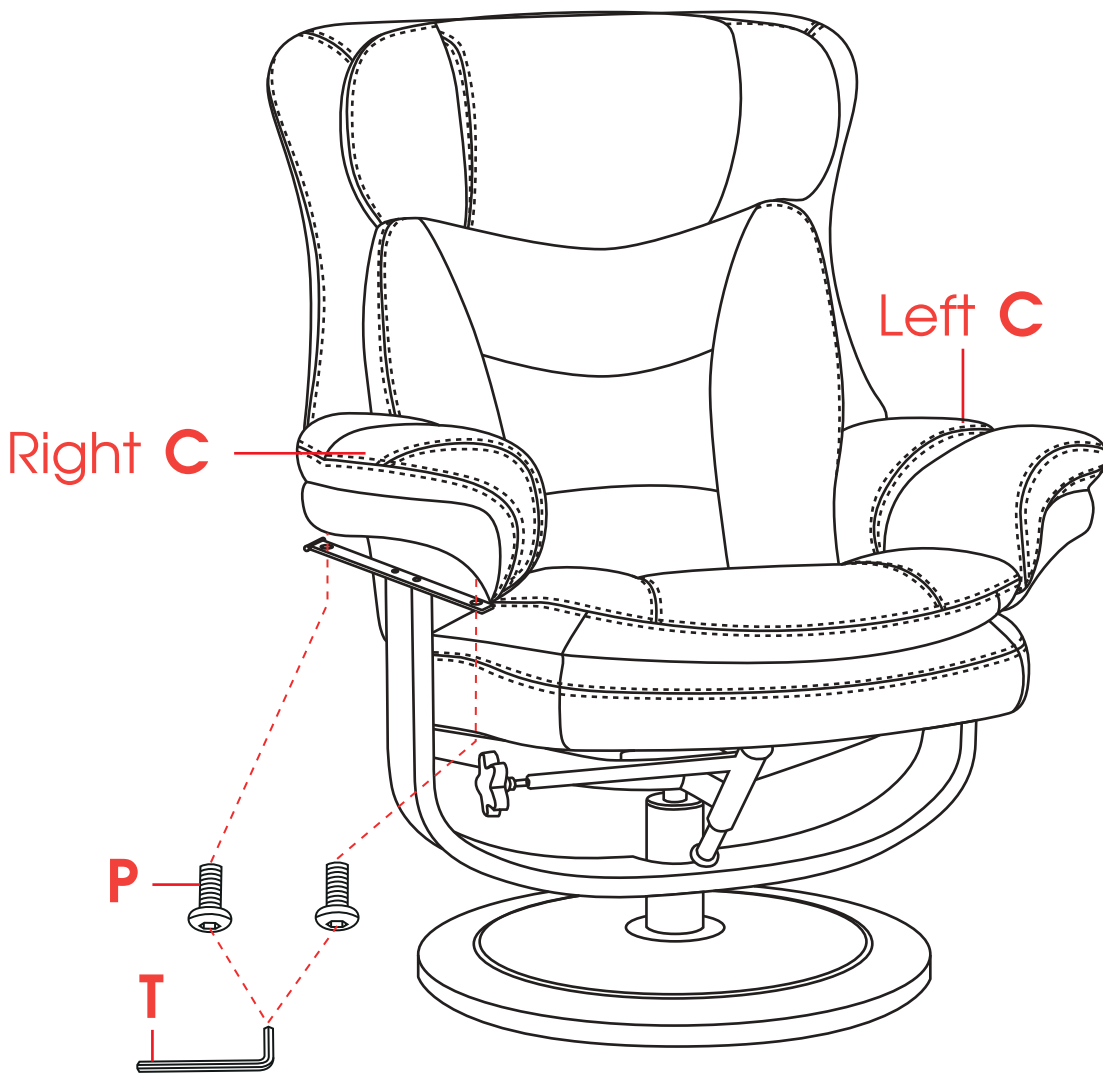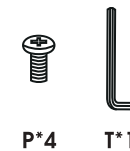



Step6 - Assembly of Ottoman Base

Insert Washers #R and Washers #Q on Bolts #M in turn, and connect the Round Ottoman Base #G and U-shaped Frame #E with Bolts. Tighten the Bolts with an Allen Wrench #U.

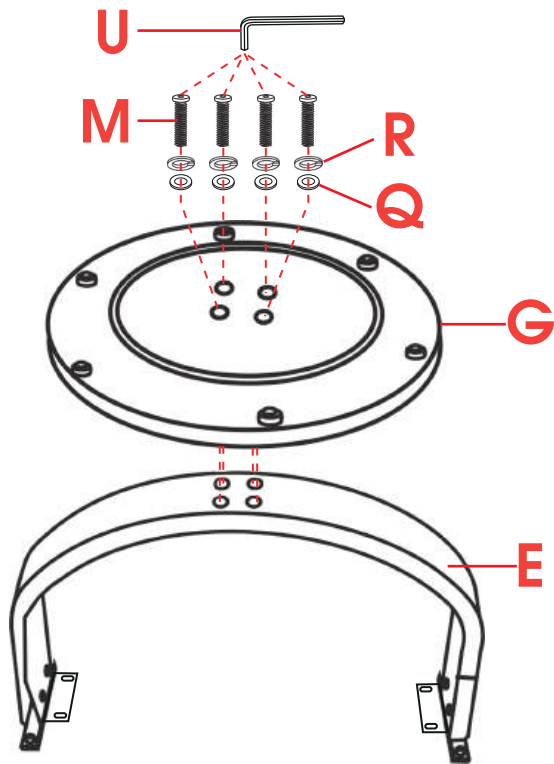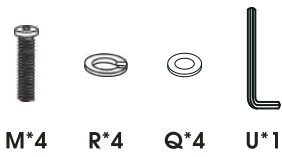

Step7 - Assembly of Ottoman Cushion

Fasten Ottoman Cushion #D to U-shaped Frame #E with Bolts #O. Tighten the Bolts with an Allen Wrench #T. Pay attention to the direction of the Ottoman Cushion #D.

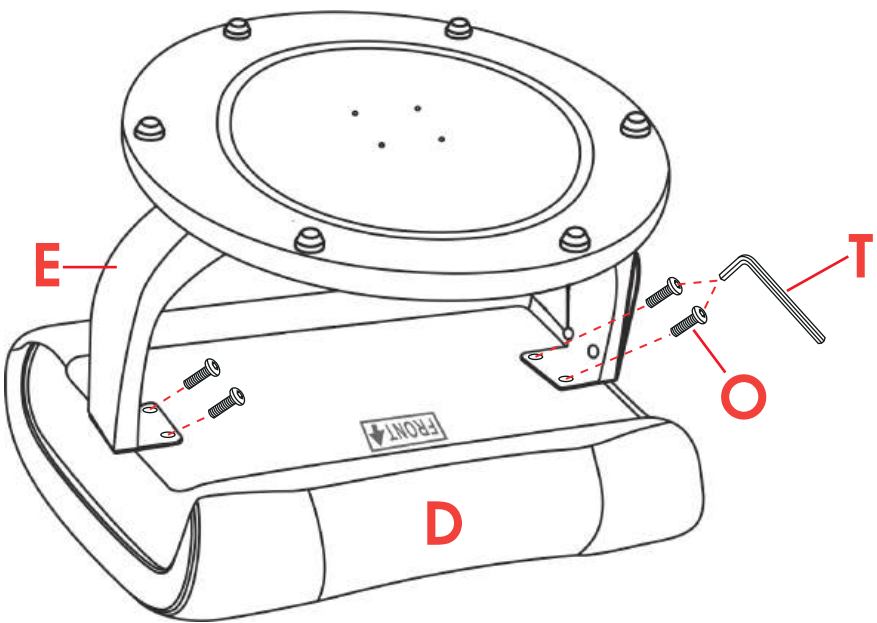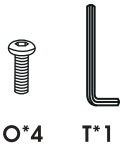

Step8 - Congratulations

Check and confirm all screws are tightened. Now you can relax your body on this chair and even decorate your living room.

