



DSN041BN045A

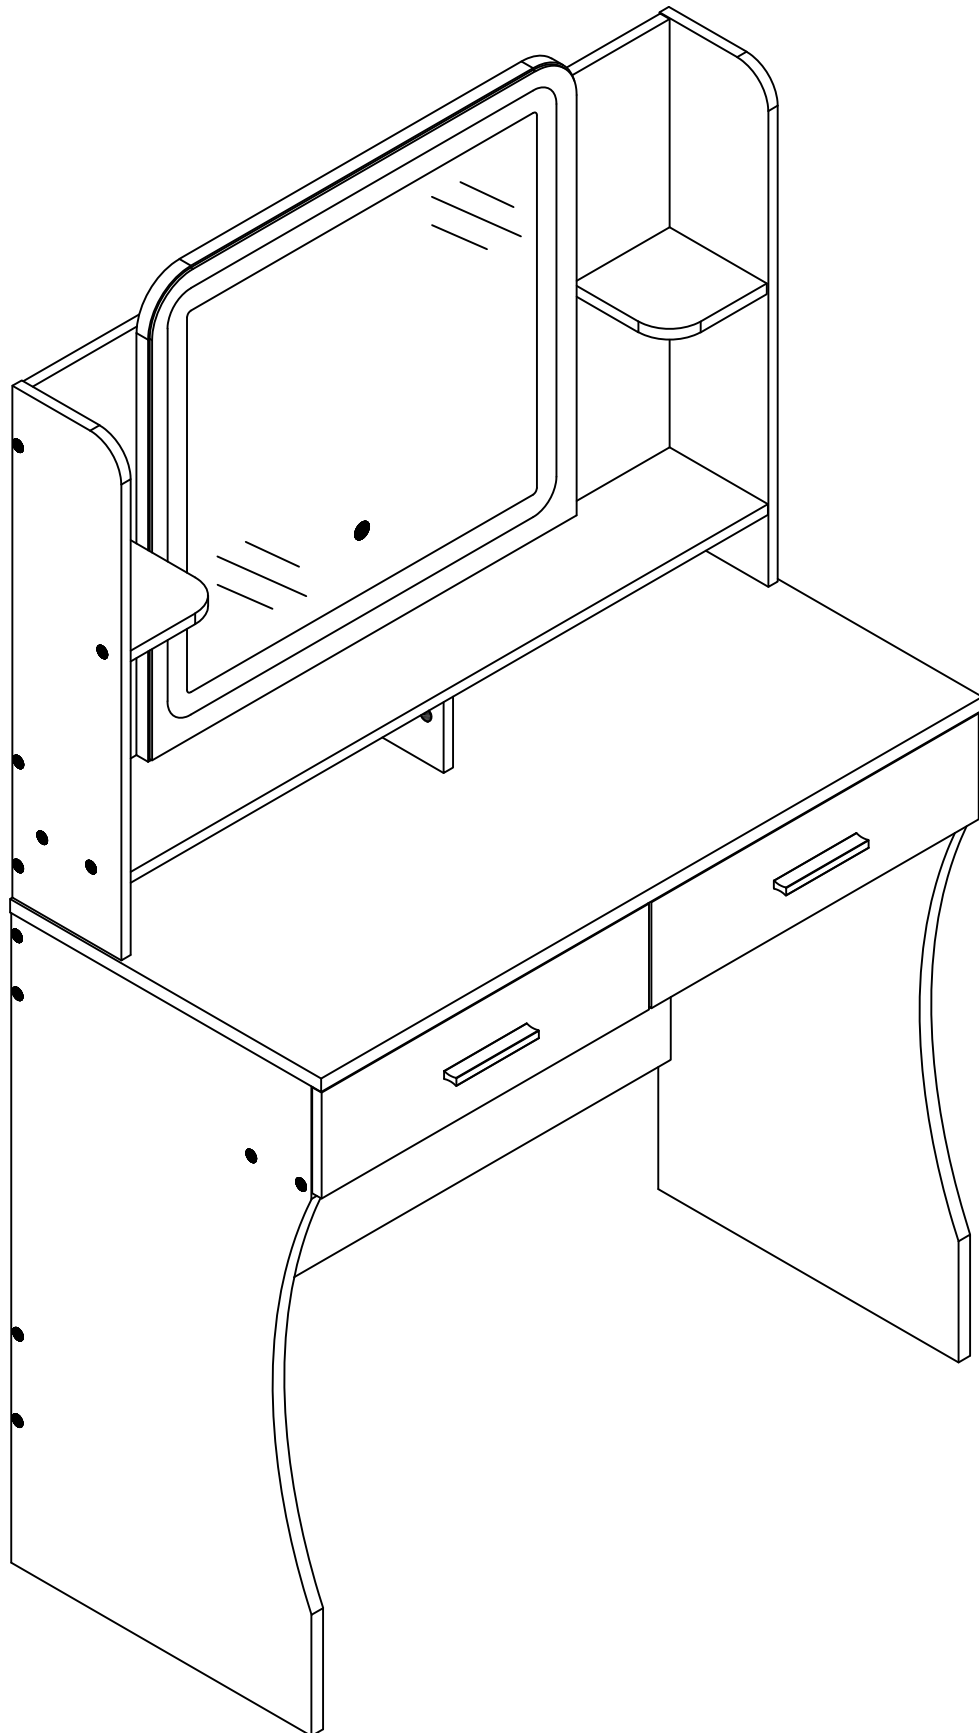

Before You Start

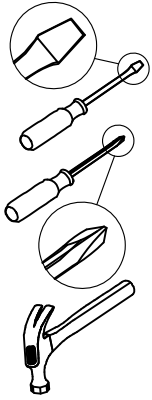

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

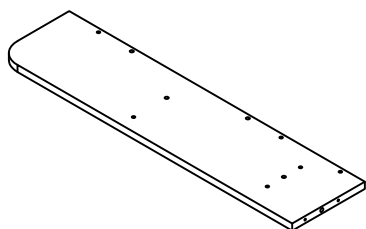


Ⓐ X1

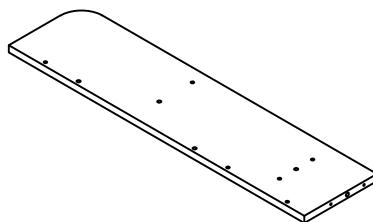


Ⓑ X1

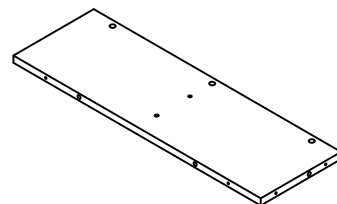


Ⓒ X1

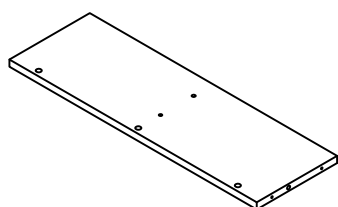


Ⓓ X1




Ⓔ X2

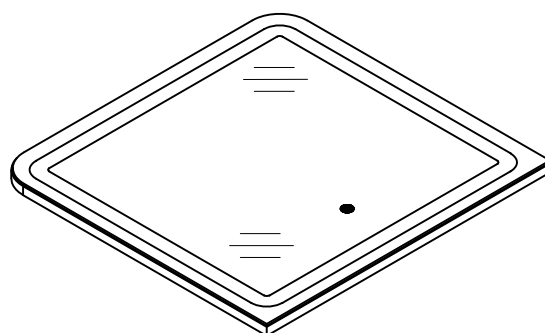


Ⓕ X1

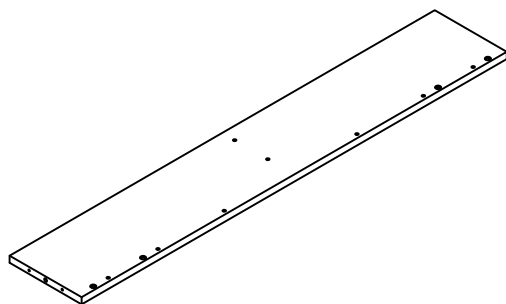


Ⓖ X1

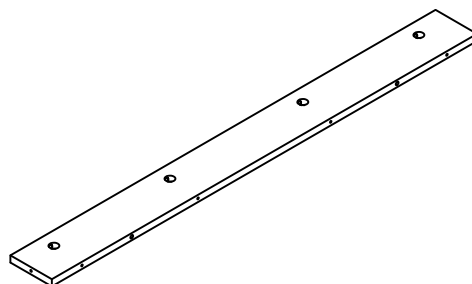


Ⓗ X1



Ⓖ X1

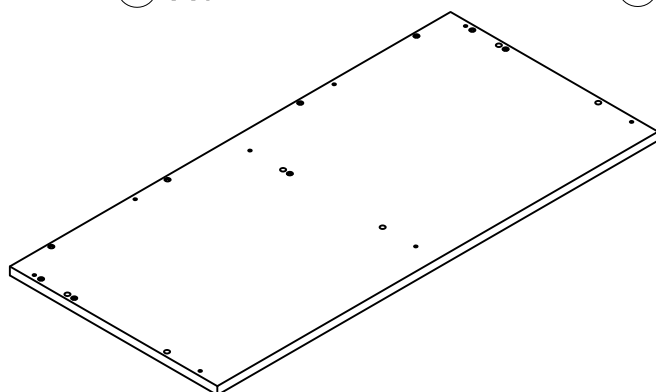












Ⓙ X1

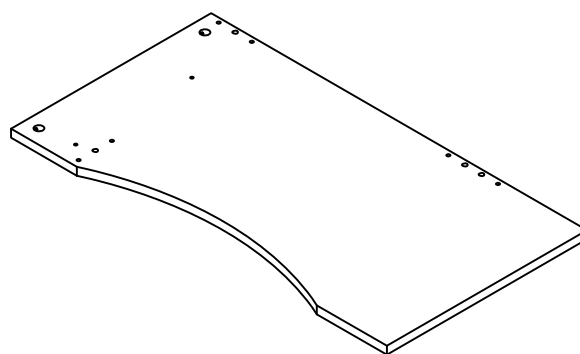


Ⓚ X1

Board Identification


Not actual size

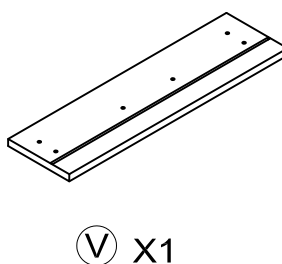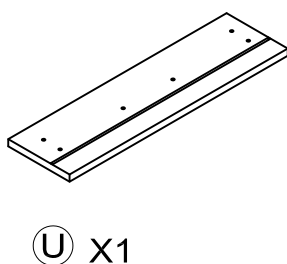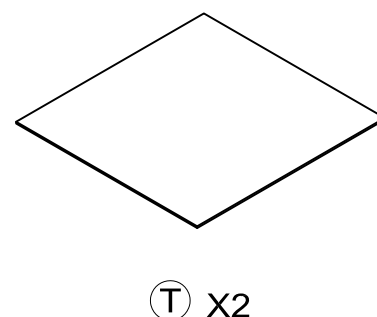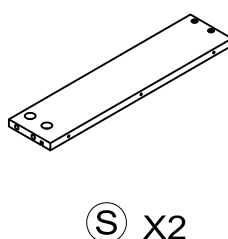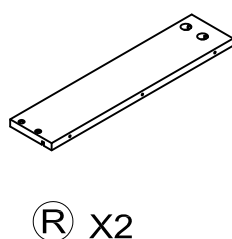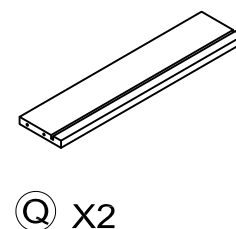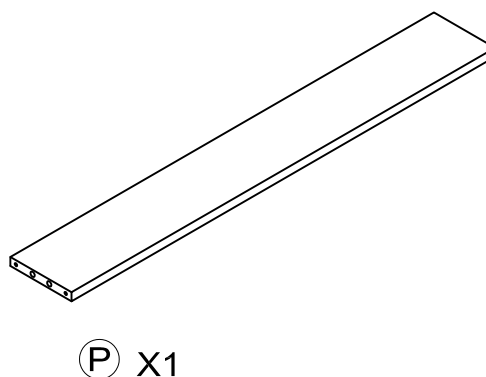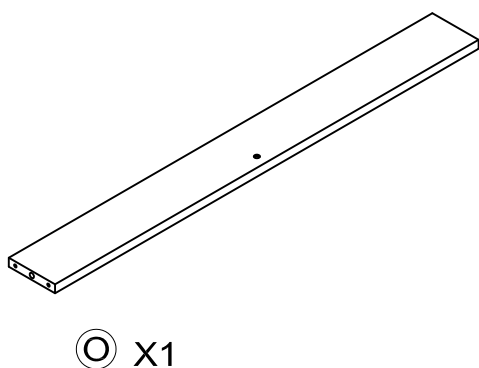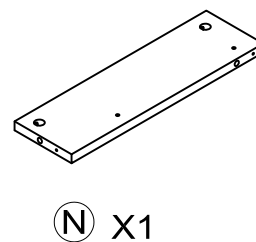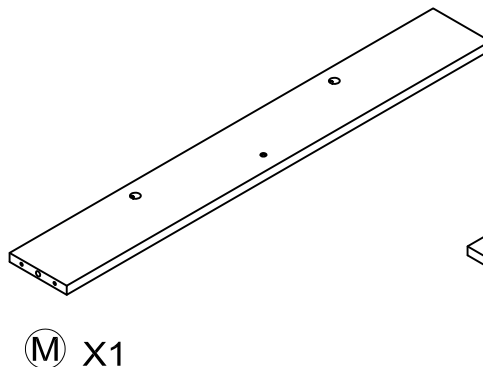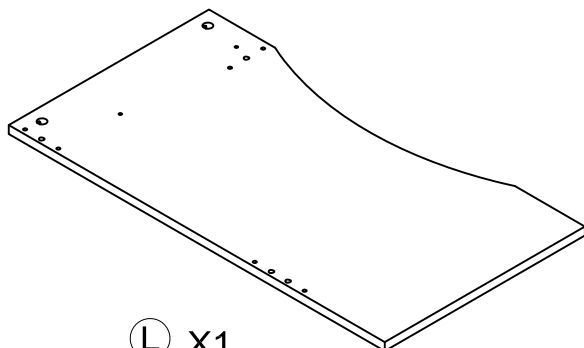


Part List

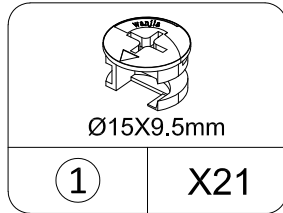


CAM LOCK
spare:2

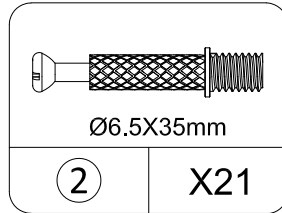


CAM BOLT
spare:2

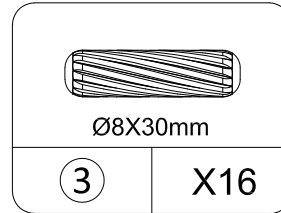


WOODEN DOWEL
spare:2

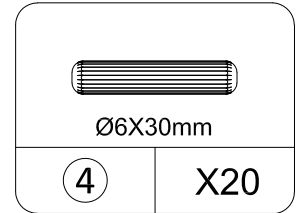


WOODEN DOWEL
spare:2

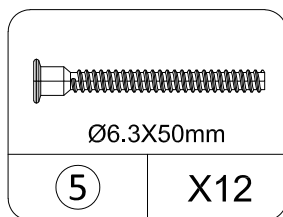


SCREW
spare:1

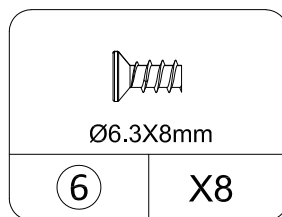


SCREW
spare:1

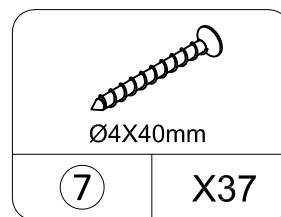


SCREW
spare:2

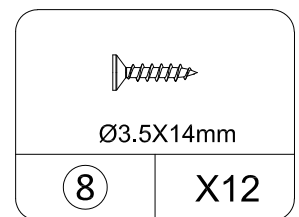


SCREW
spare:1

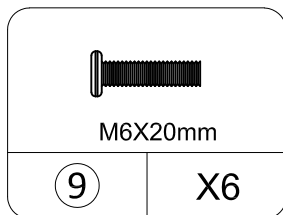


SCREW

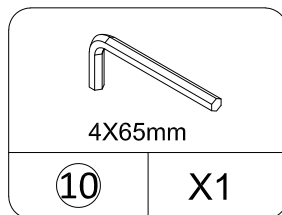


HEX KEY

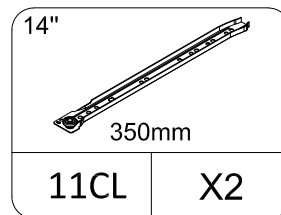


LEFT CABINET MEMBER

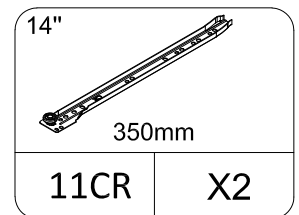


RIGHT CABINET MEMBER

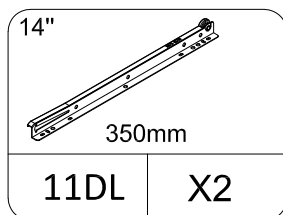


LEFT DRAWER RUNNER

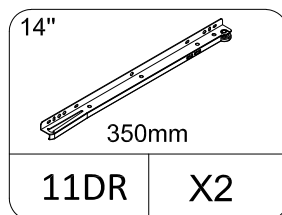


RIGHT DRAWER RUNNER

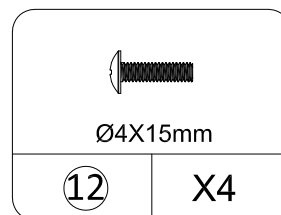


SCREW
spare:1

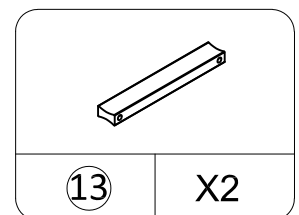


HANDLE

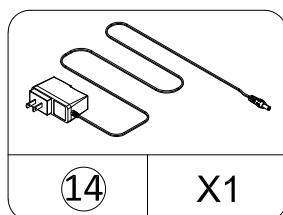

THE POWER PLUG

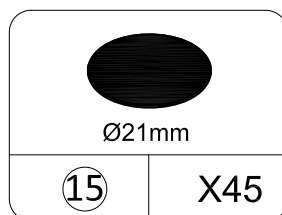


HOLE STICKERS
spare:3

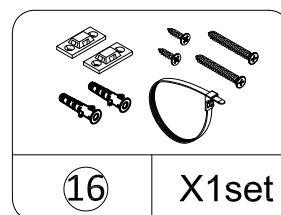




ANTI-TIPPING HARDWARE

Board Identification

Not actual size










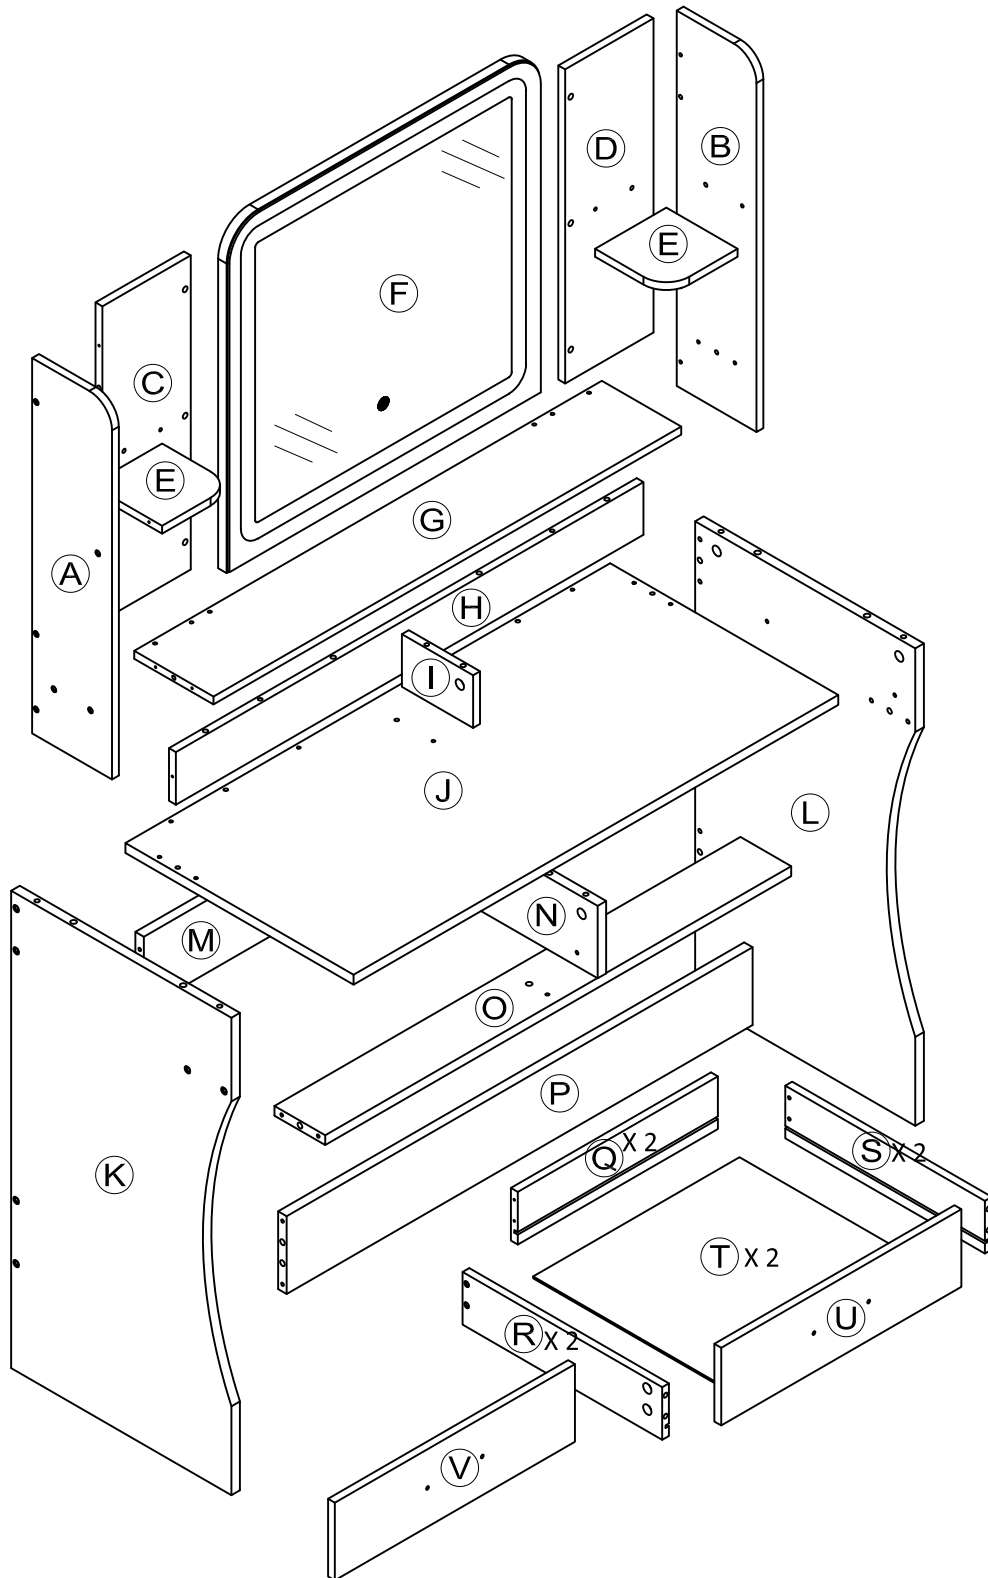


STEP1








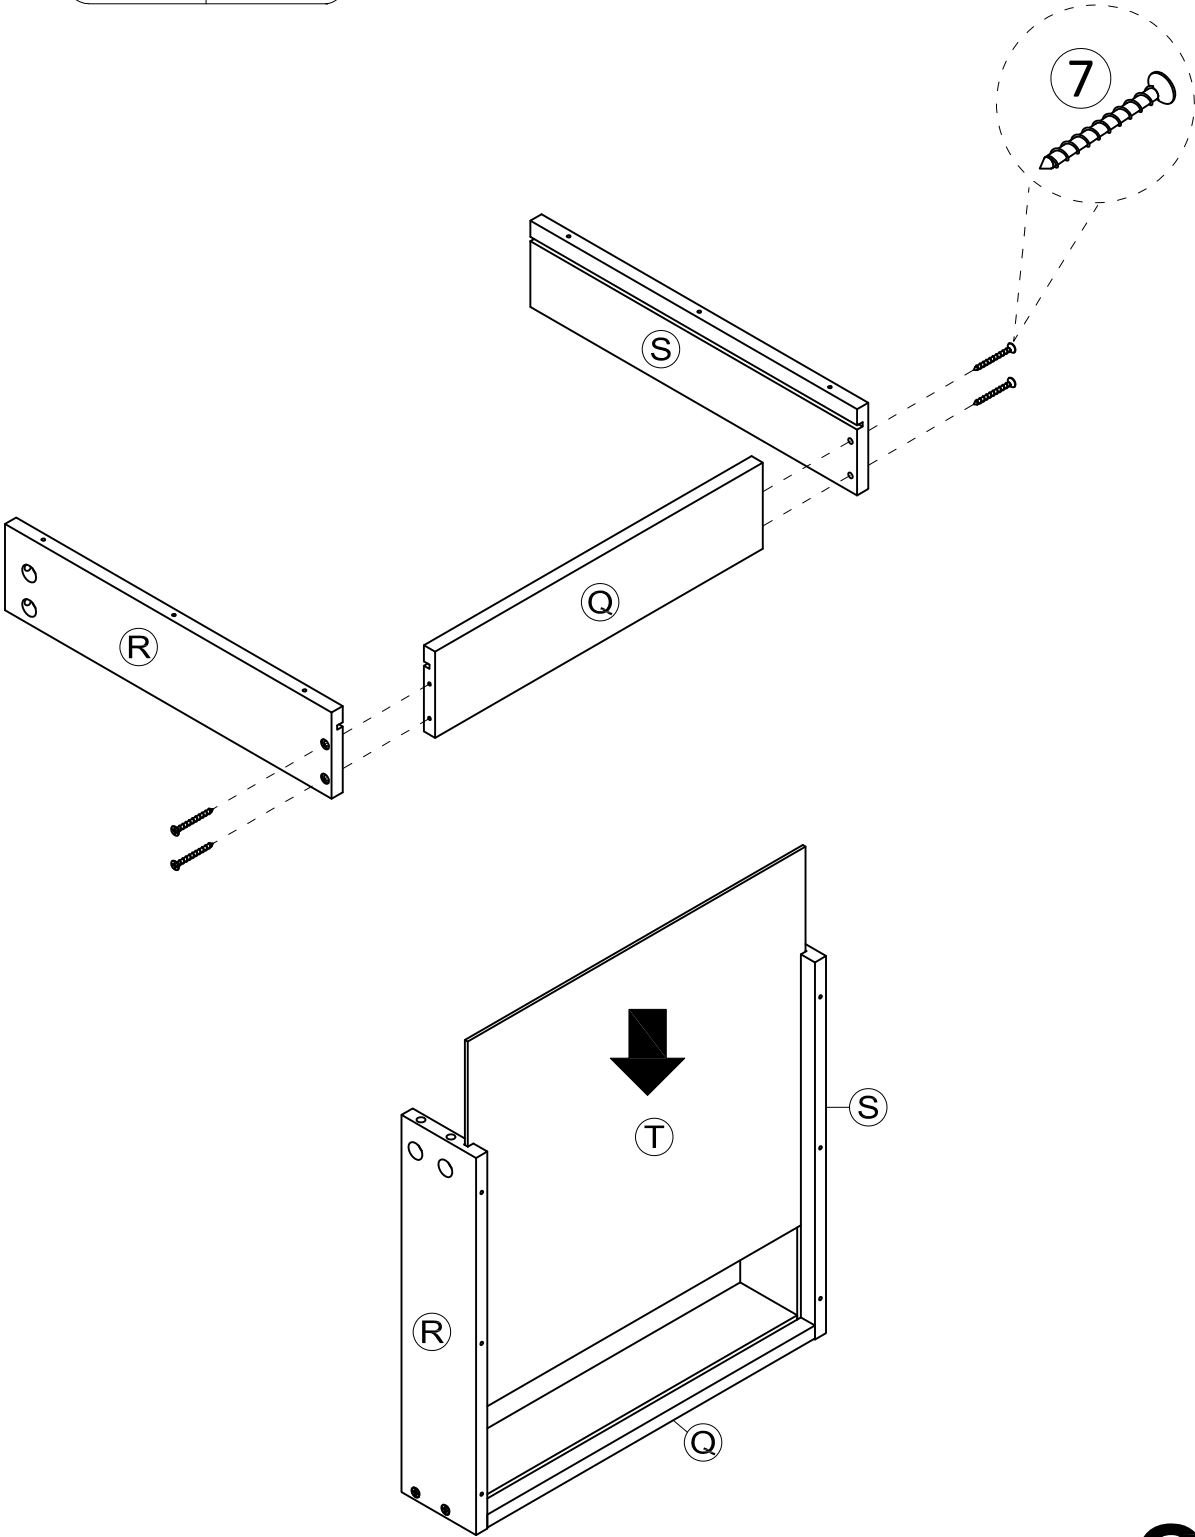
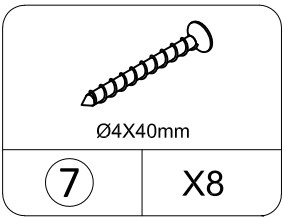
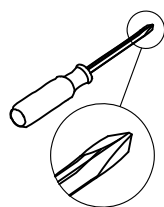


x 2


STEP2

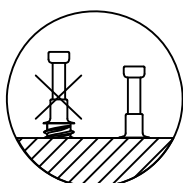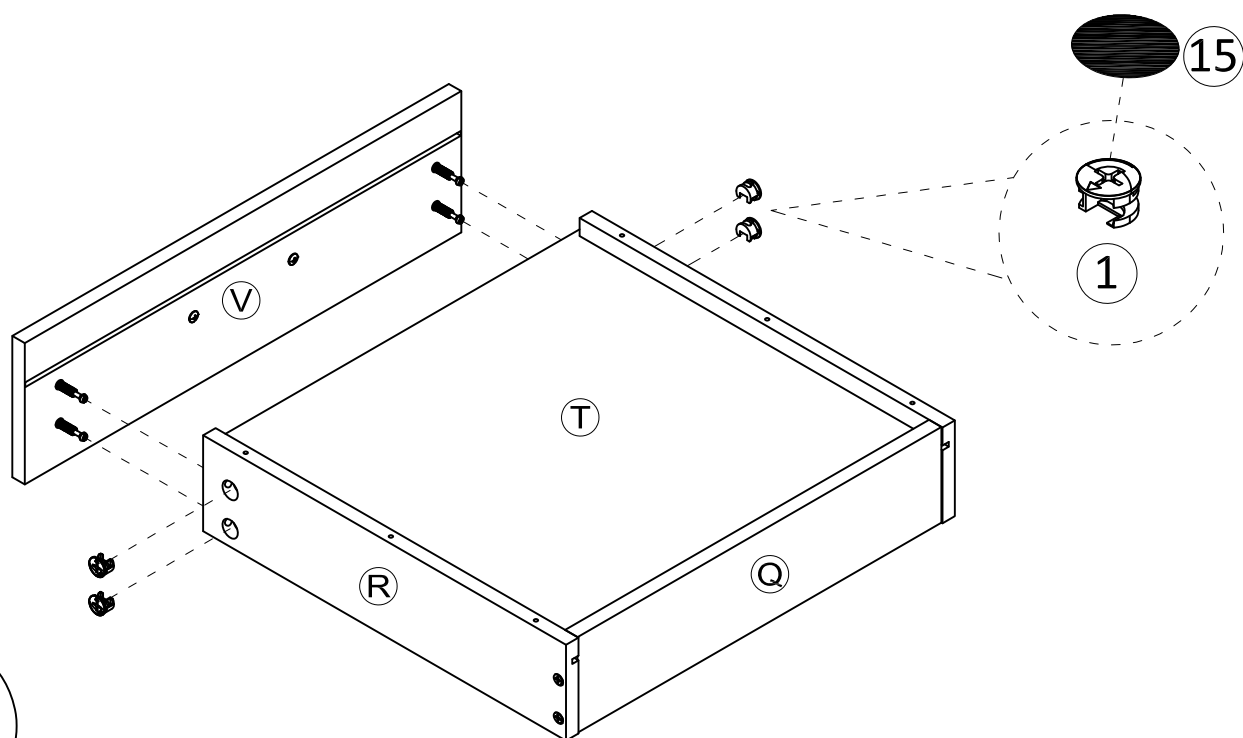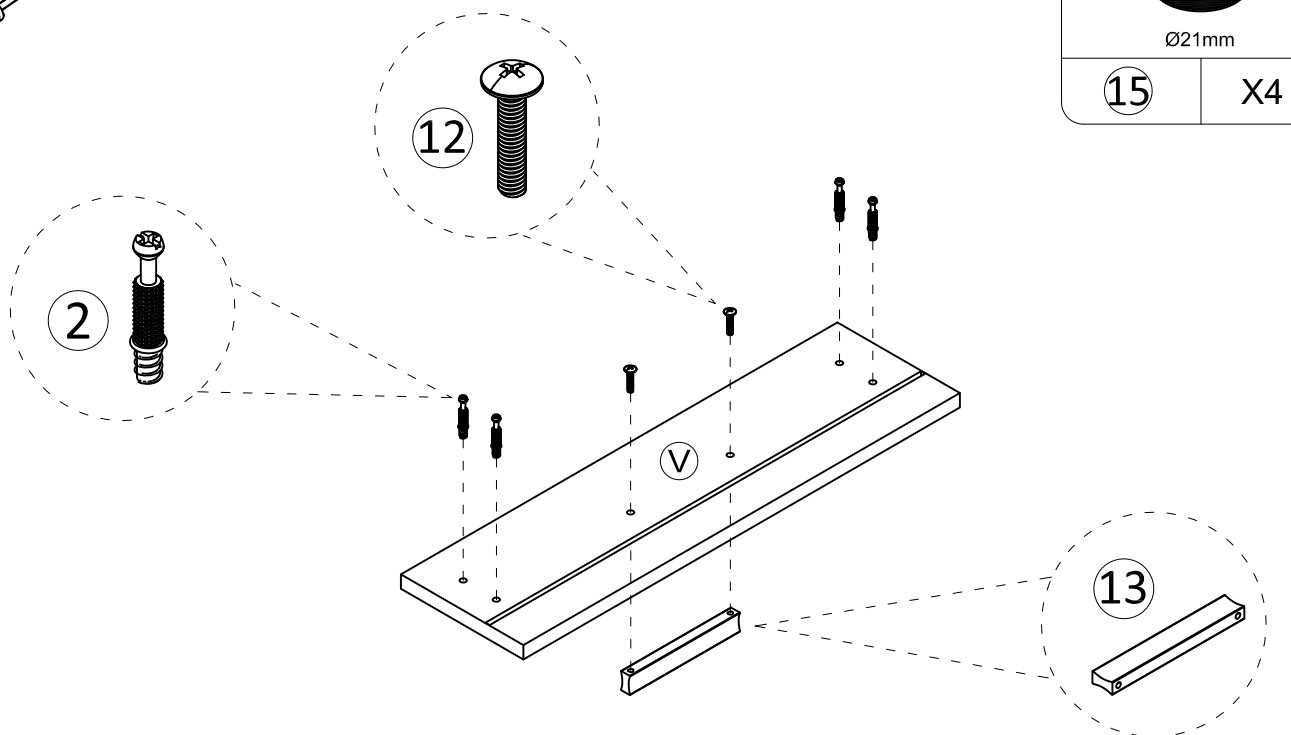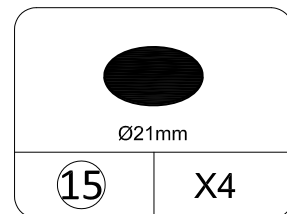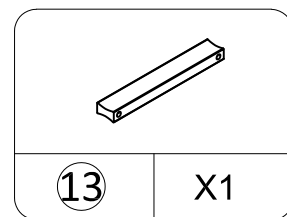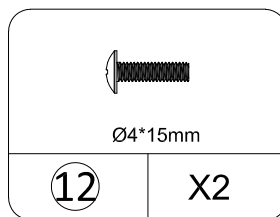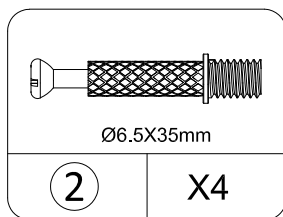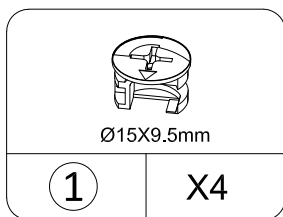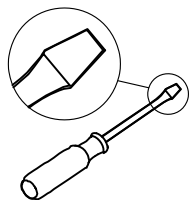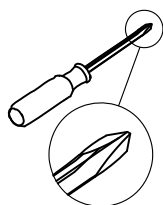


STEP3

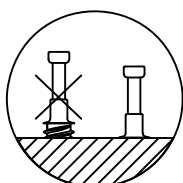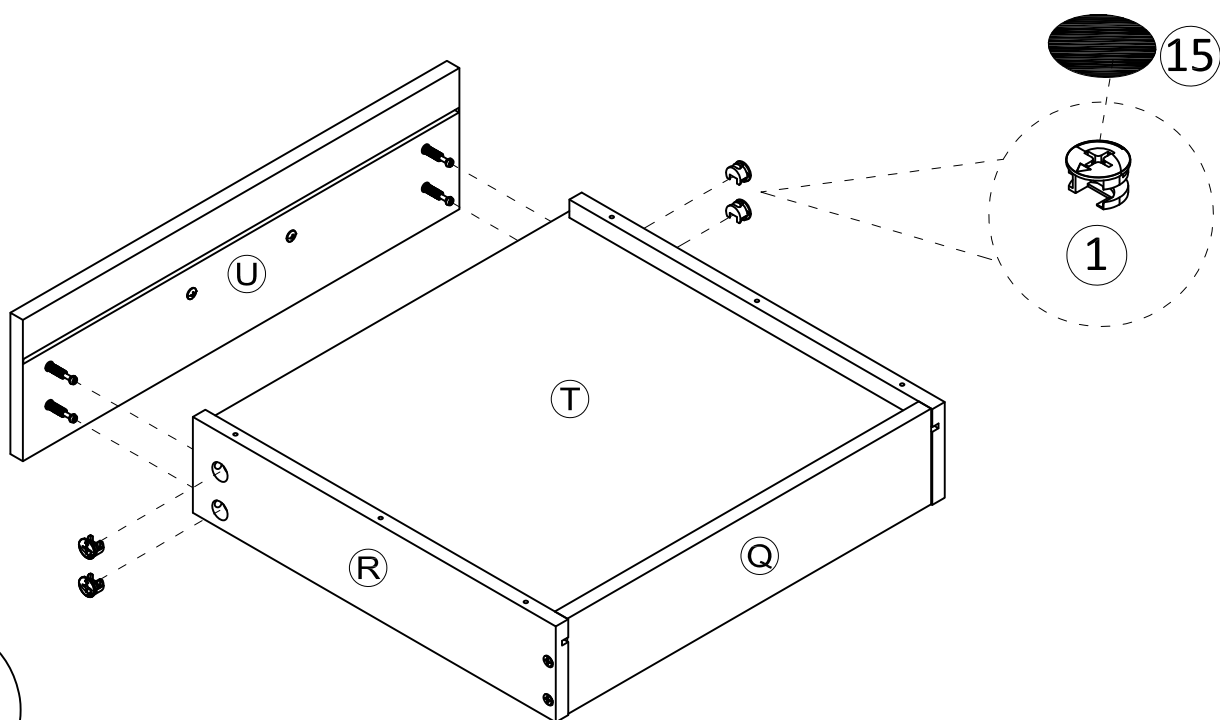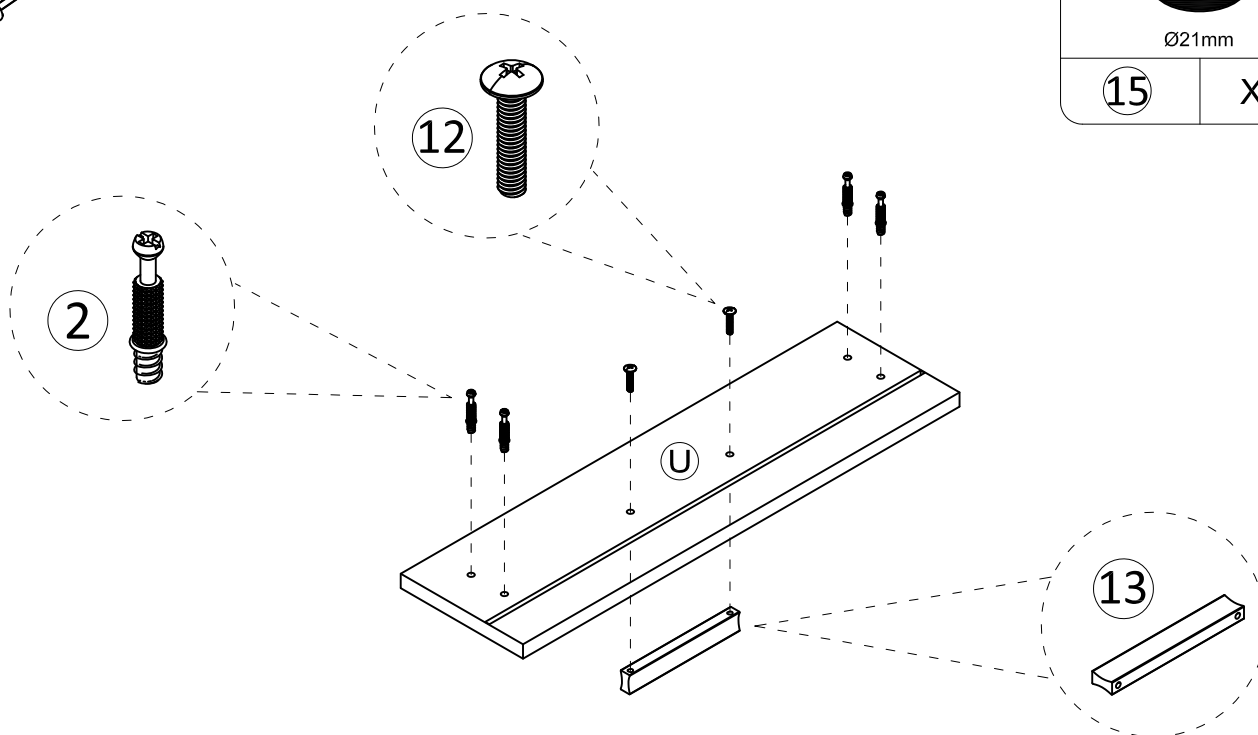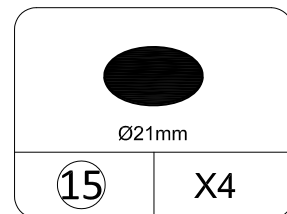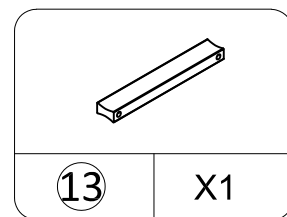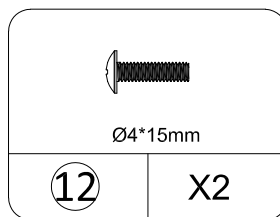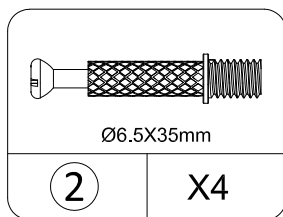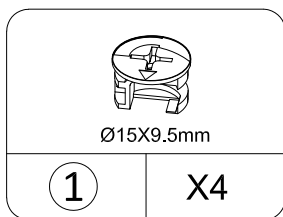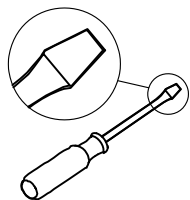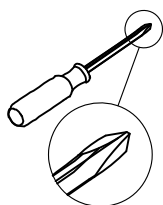




STEP4

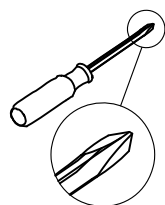











 Ø3.5X14mm	
8	X12

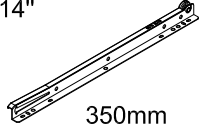 14" 350mm	
11DL	X2




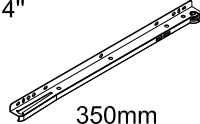
 14" 350mm	
11DR	X2

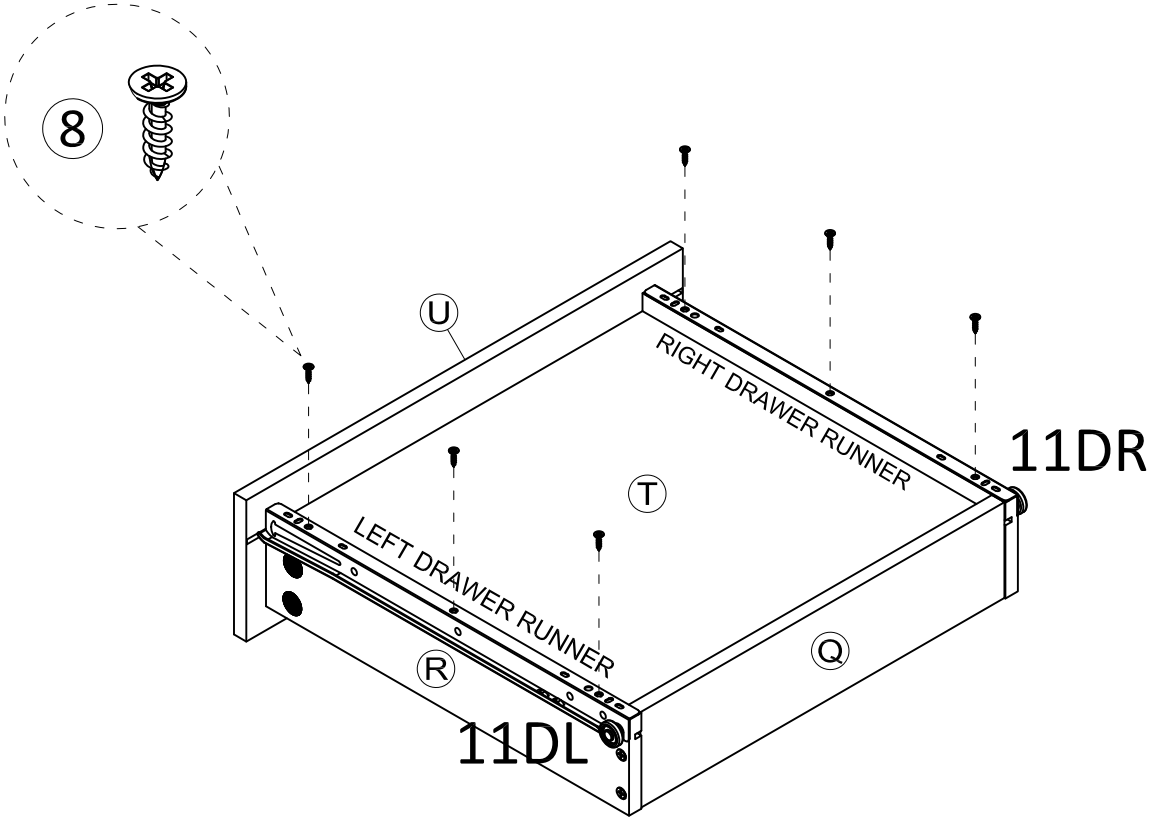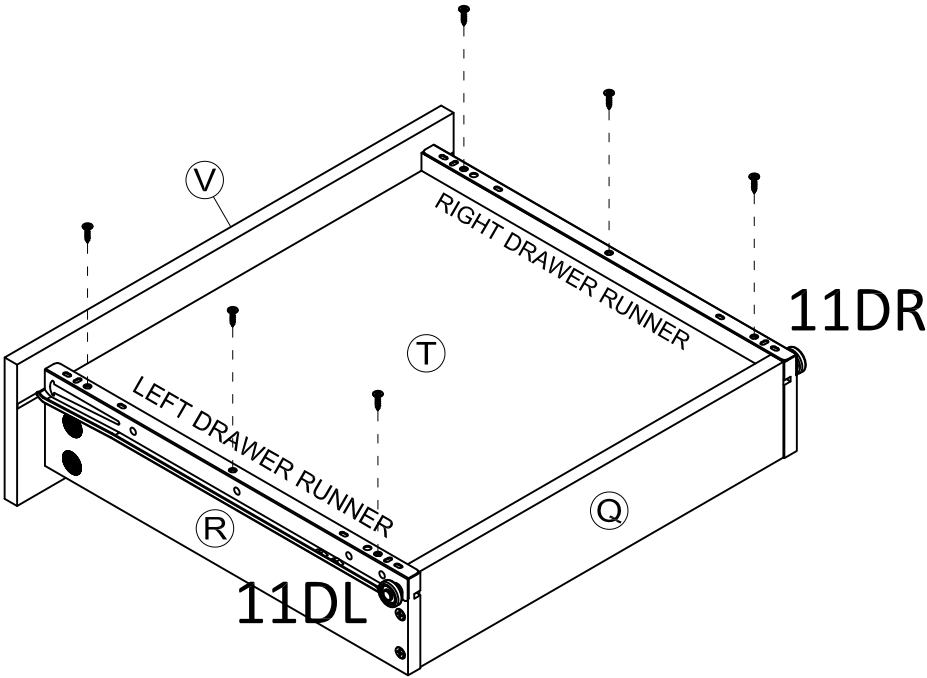



STEP5

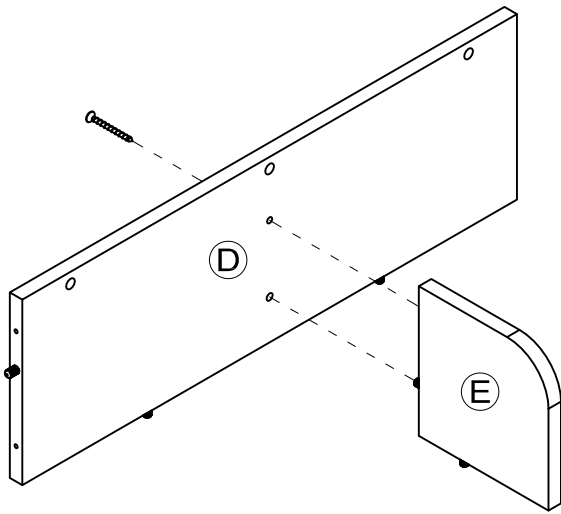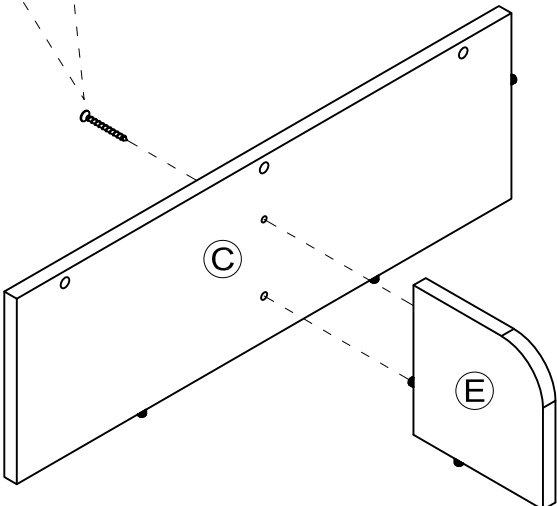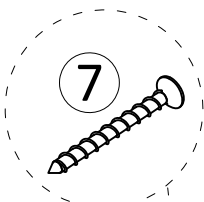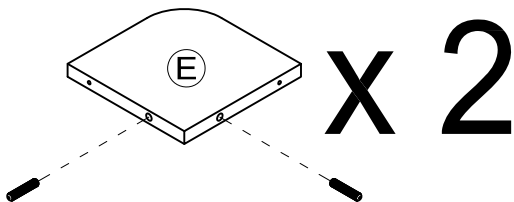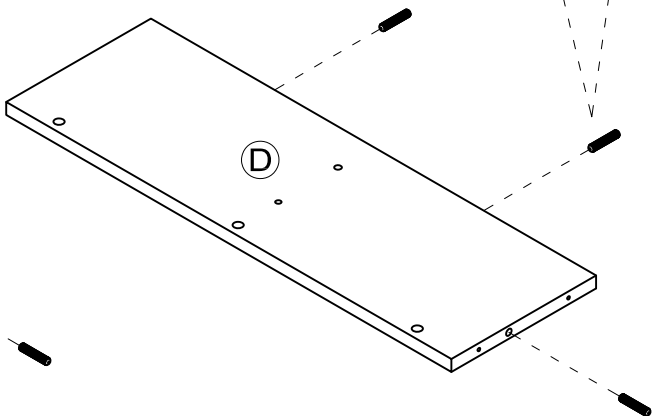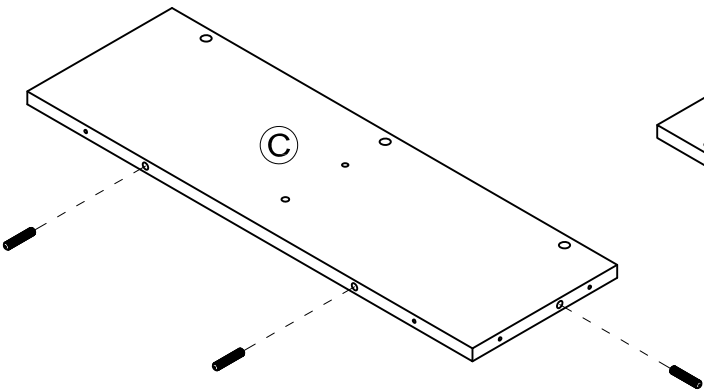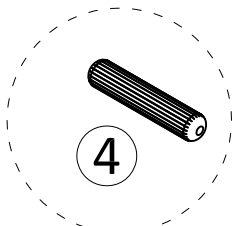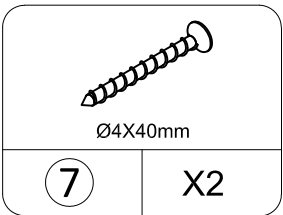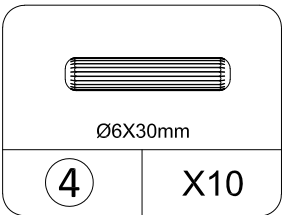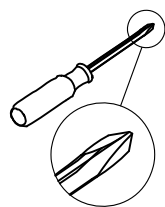

STEP6

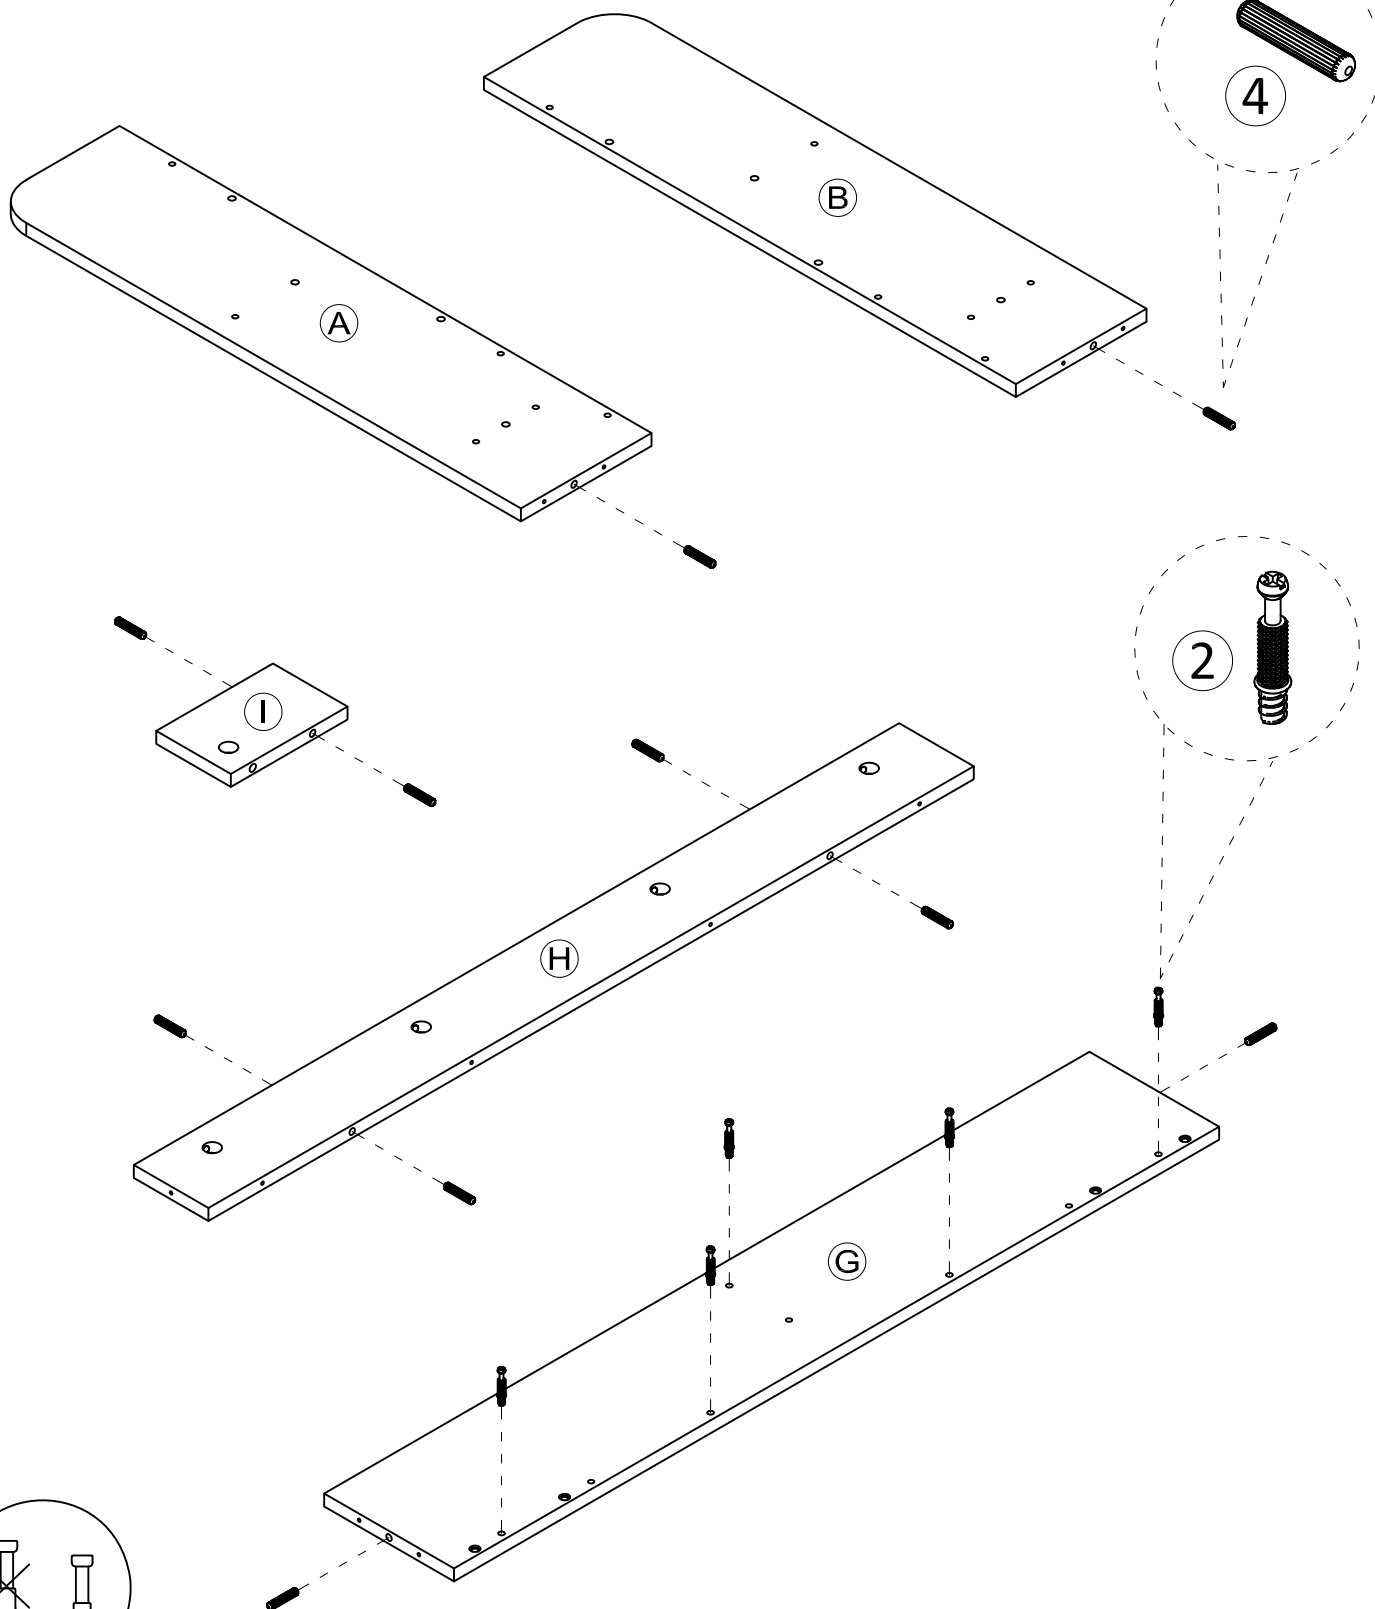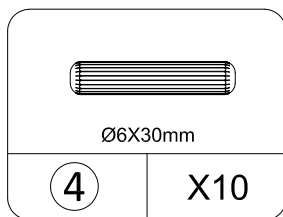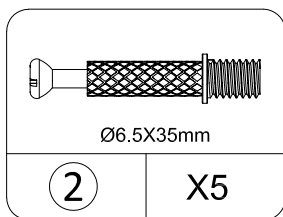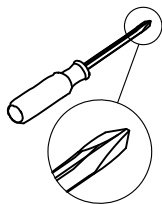


STEP 7

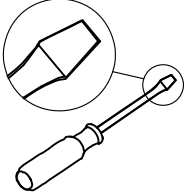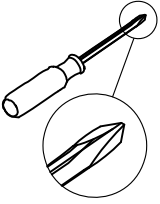








 Ø15X9.5mm	
1	X4

 Ø4X40mm	
7	X4



 Ø21mm	
15	X4

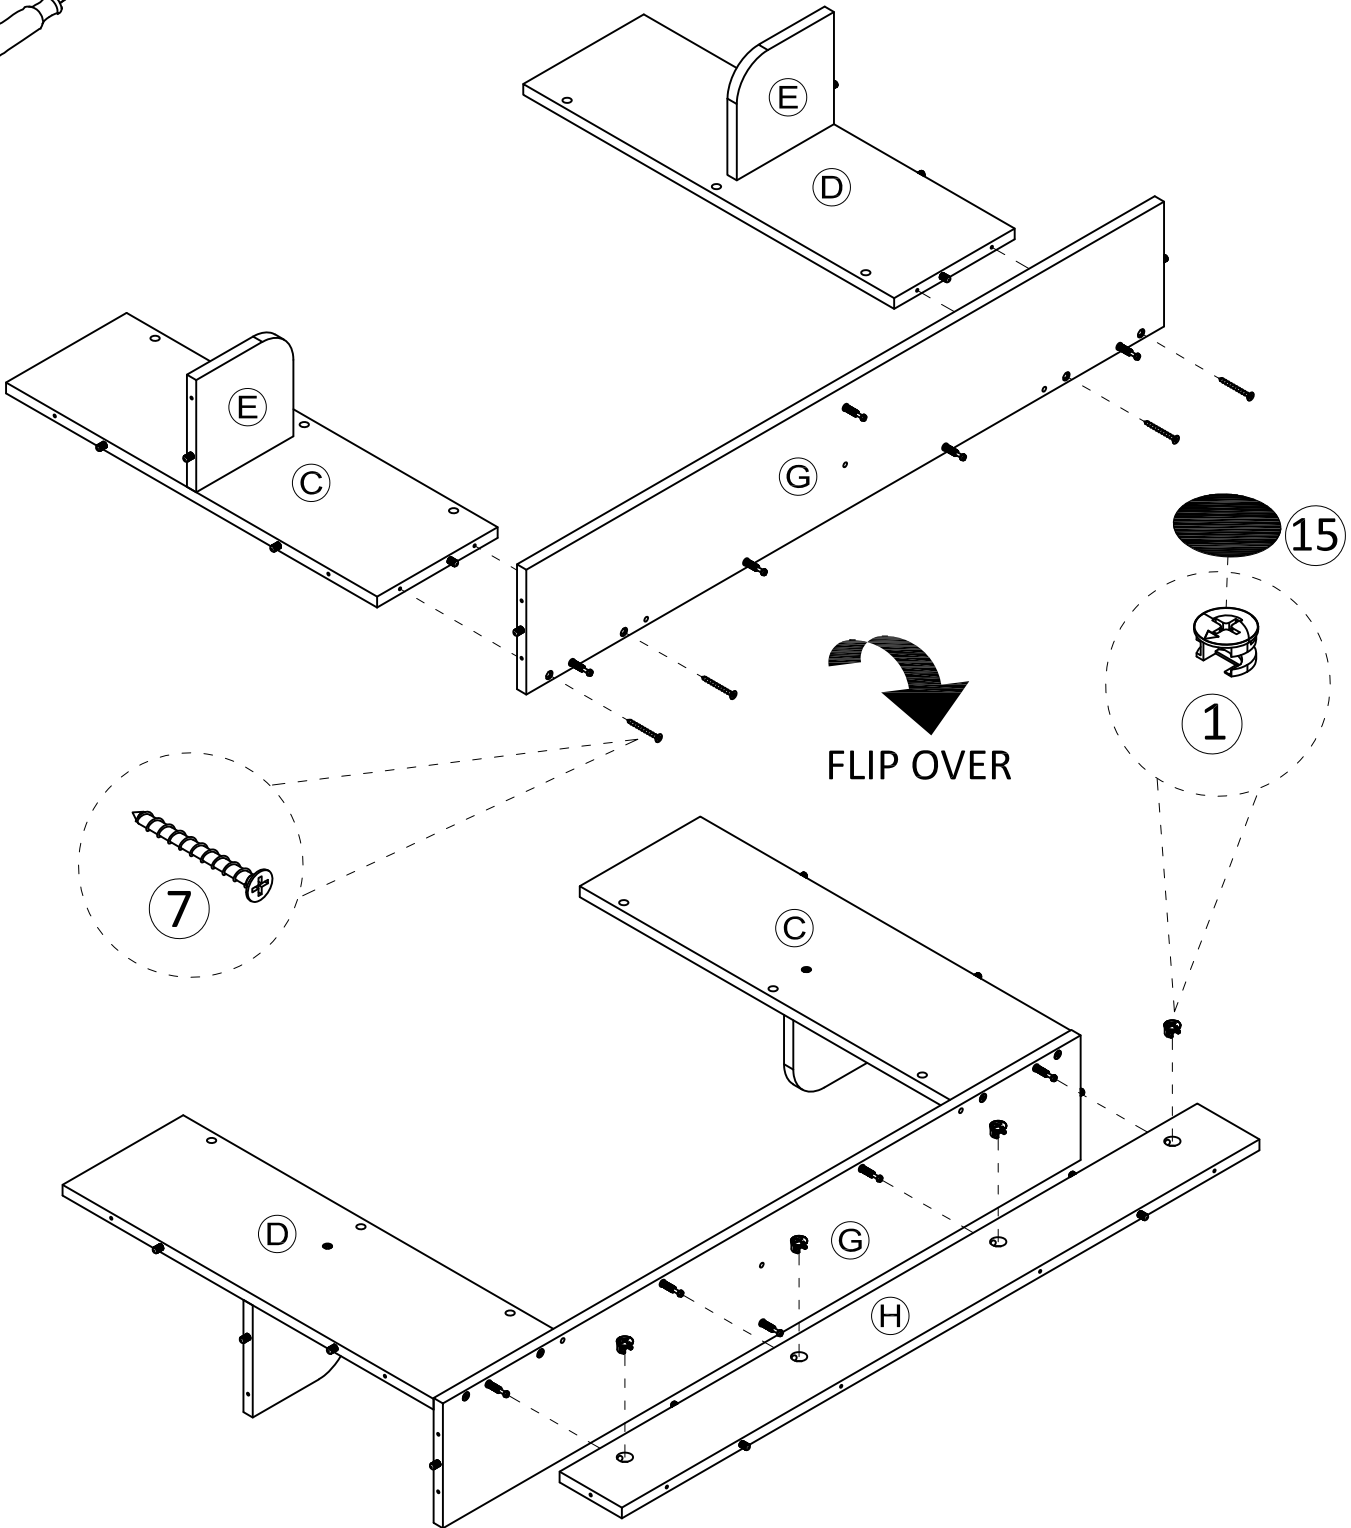





STEP8

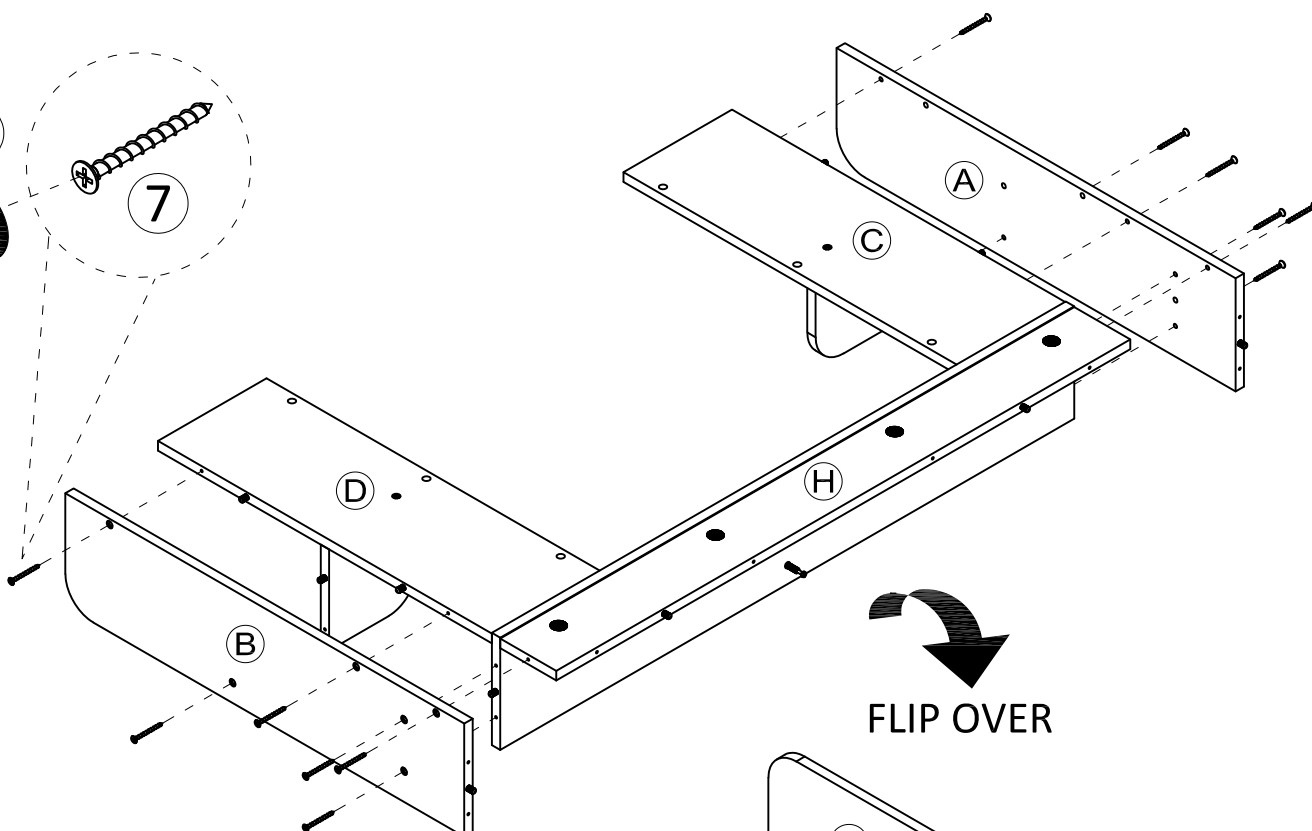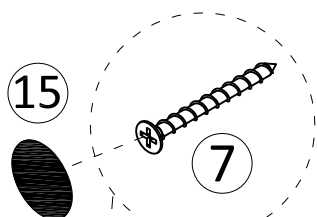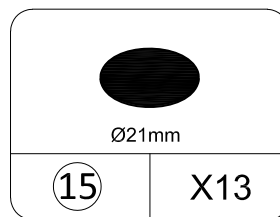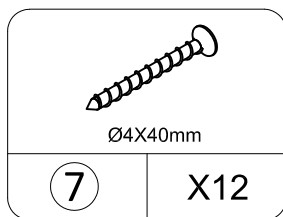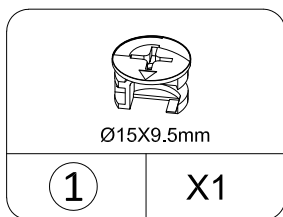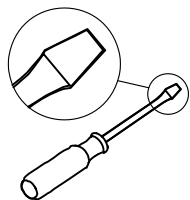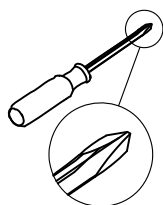







FLIP OVER

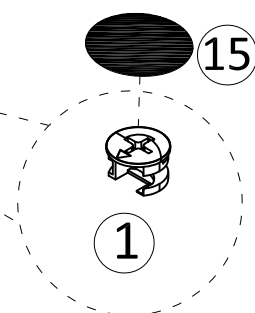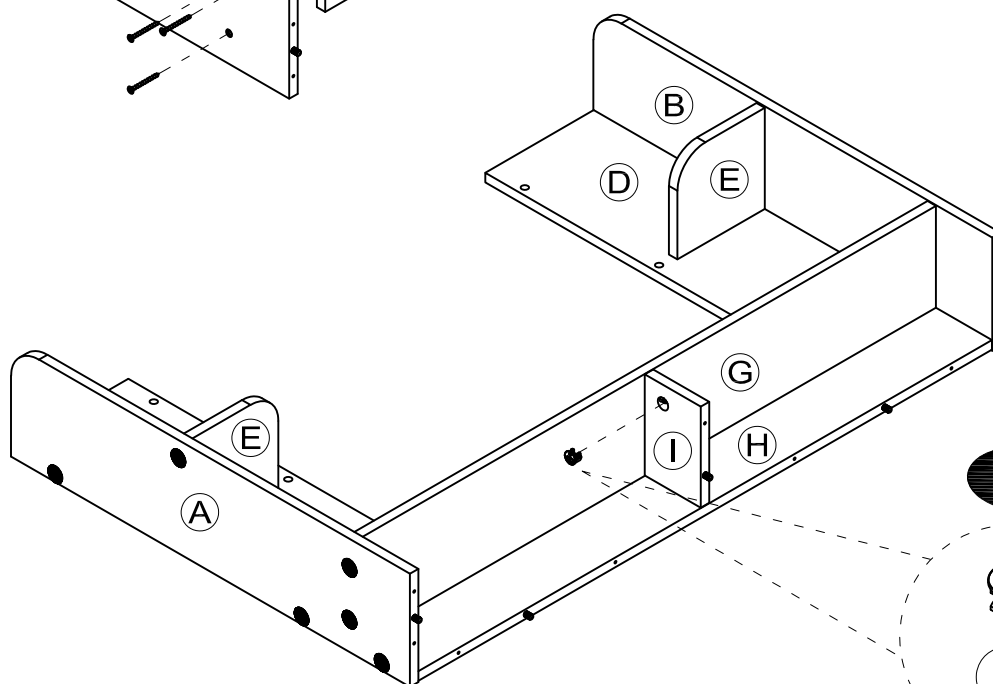


STEP9

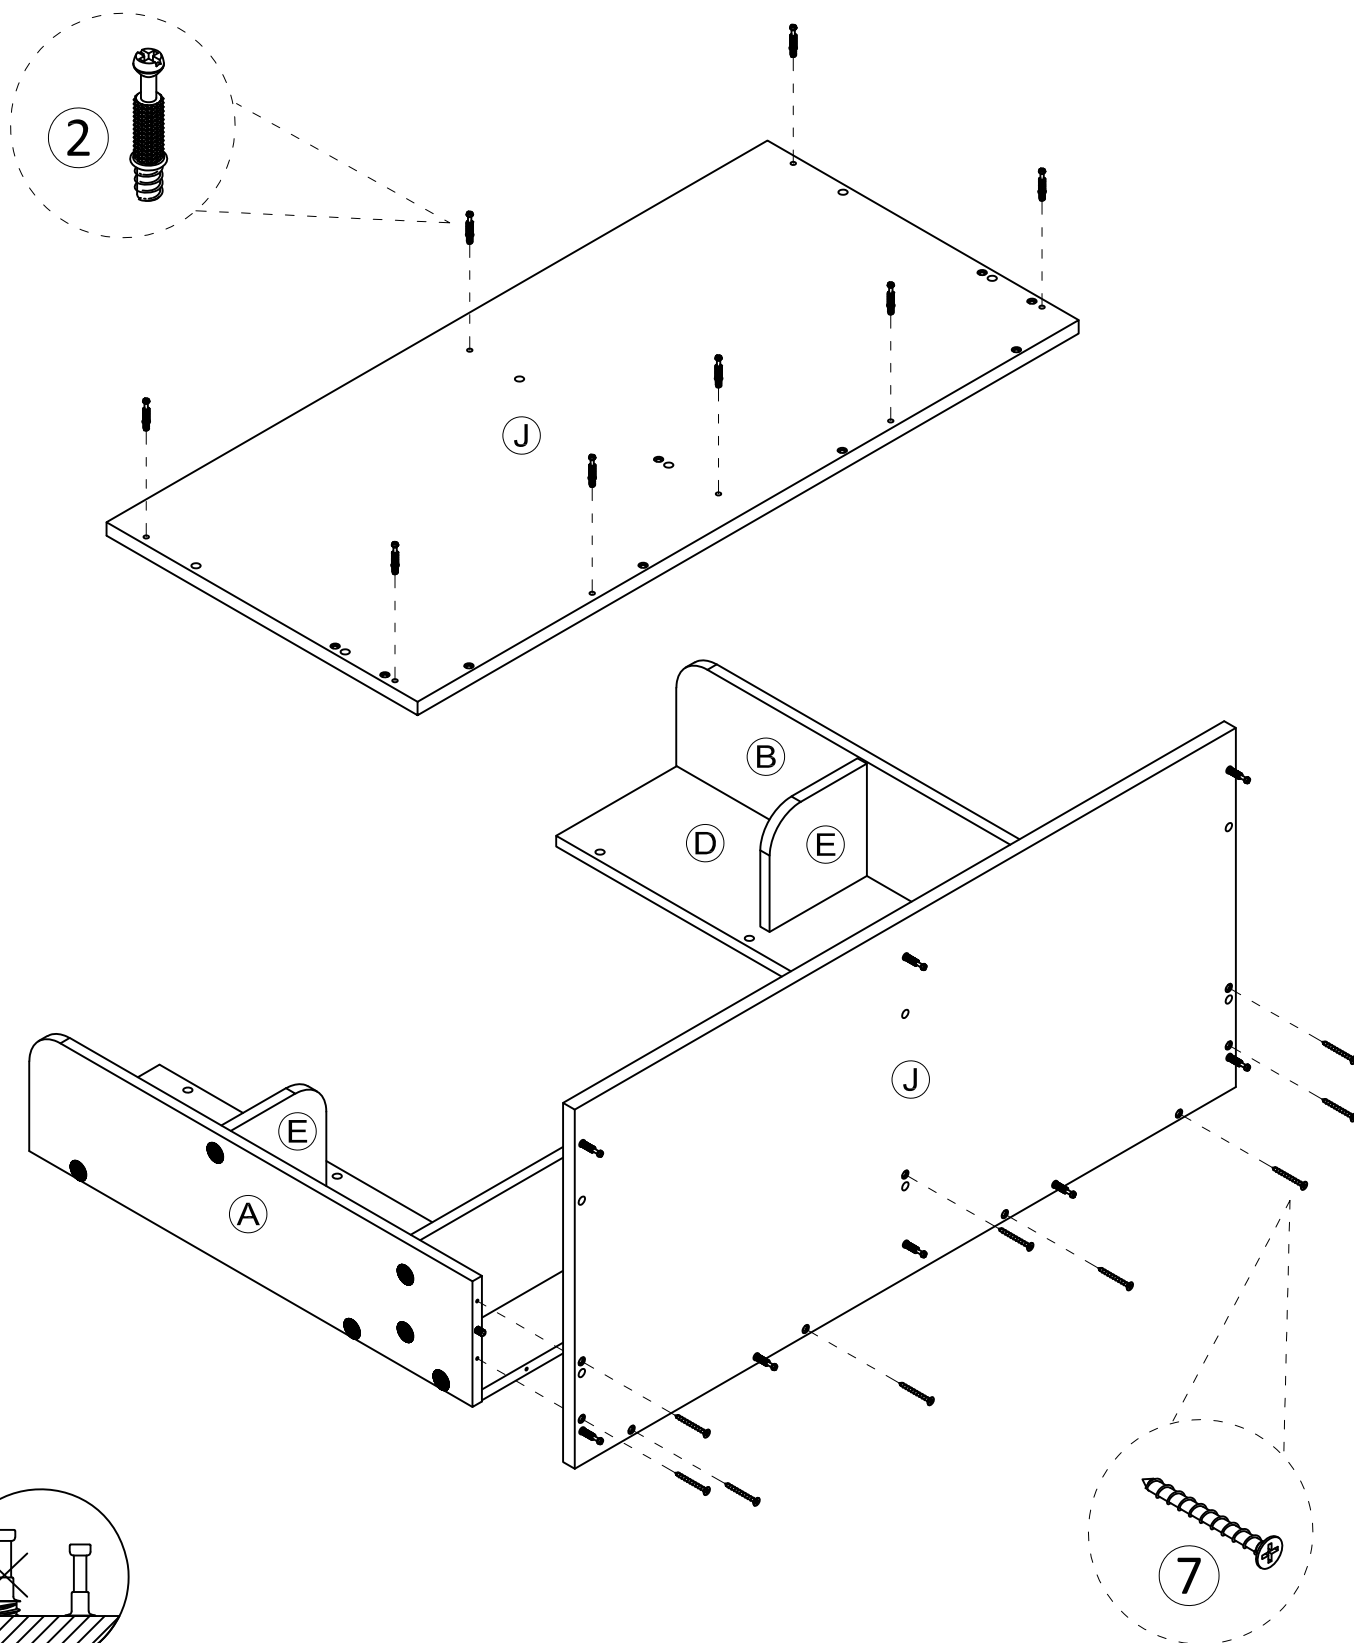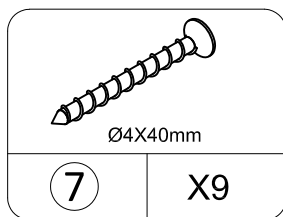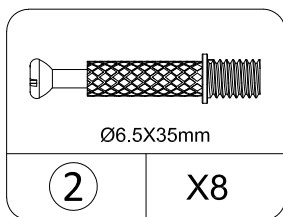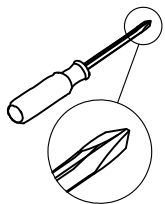

STEP10

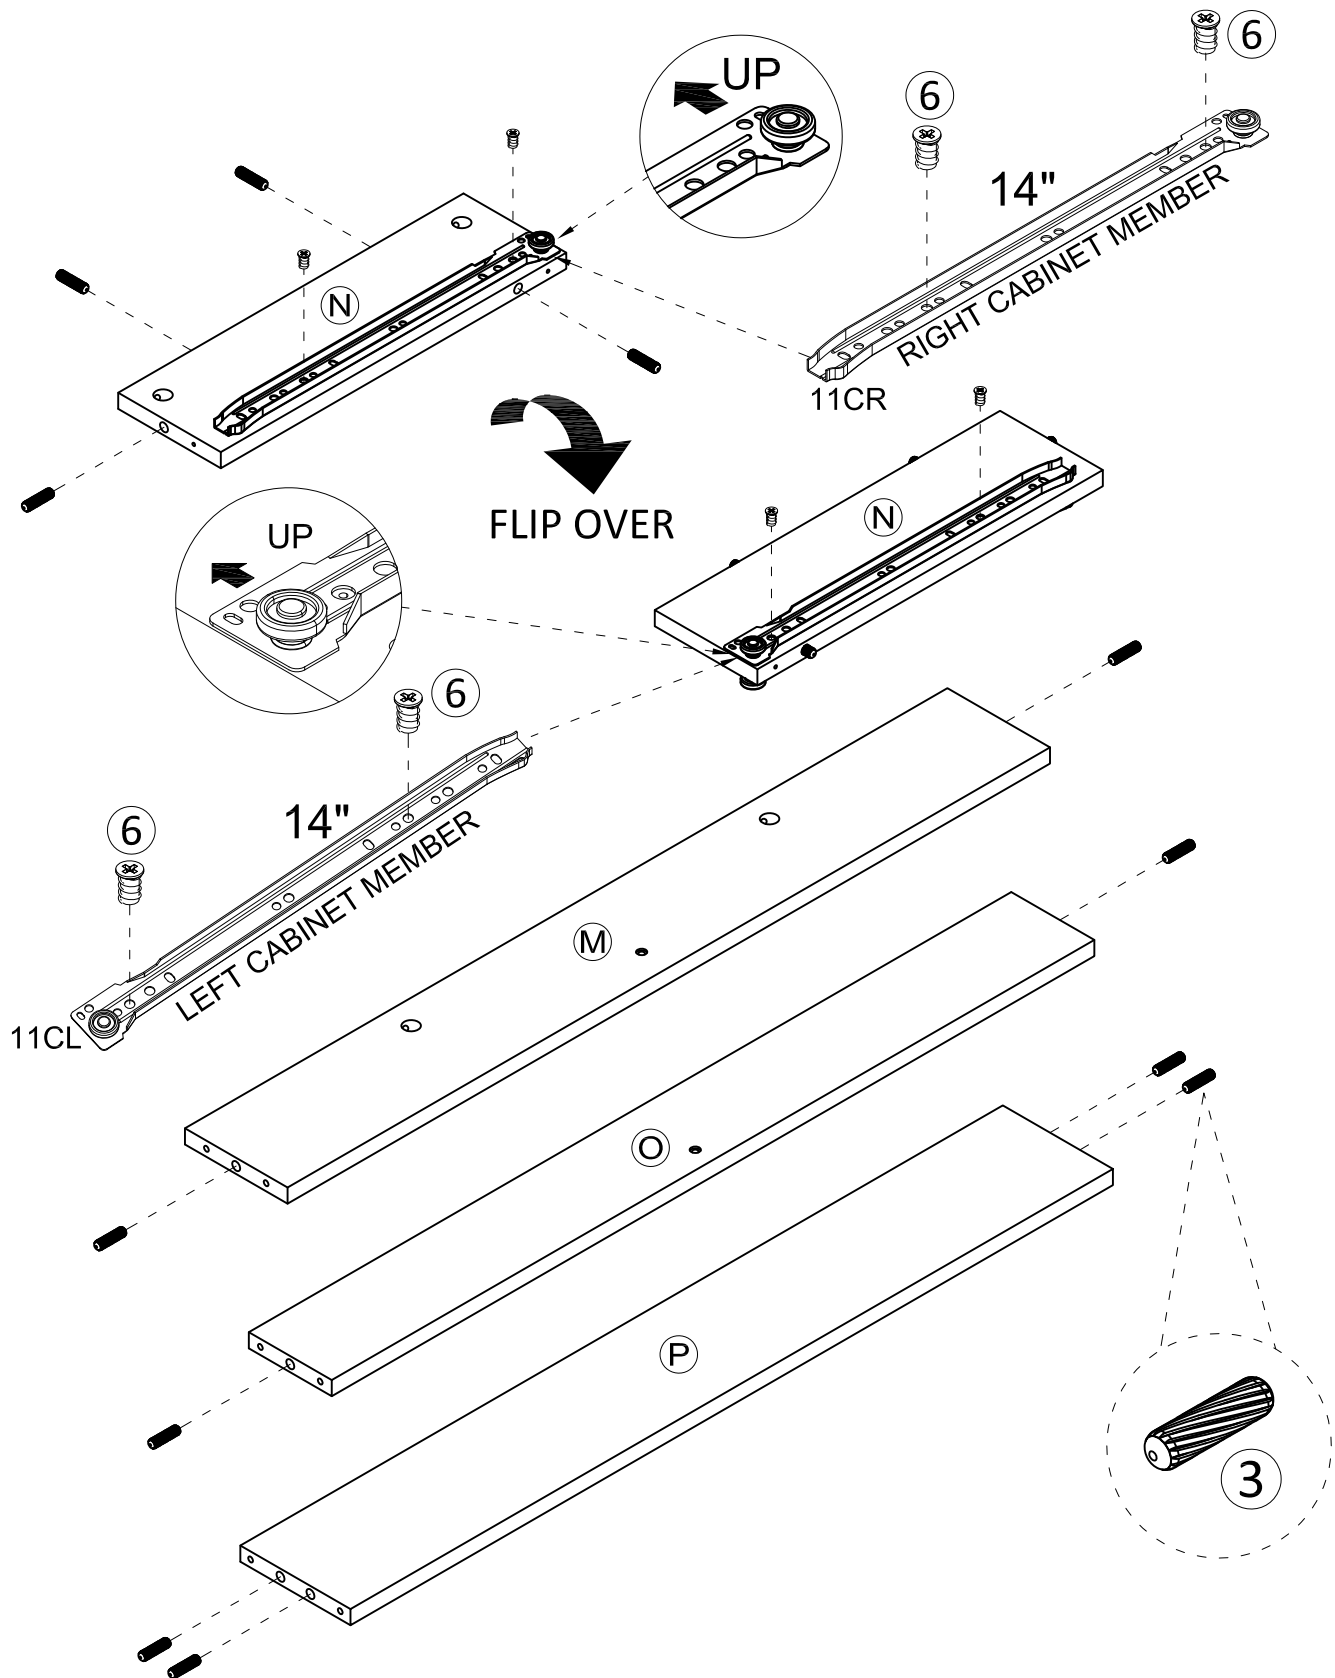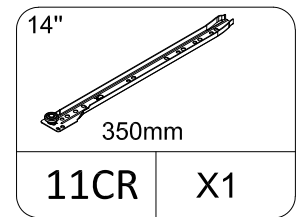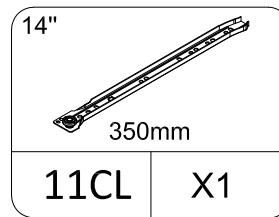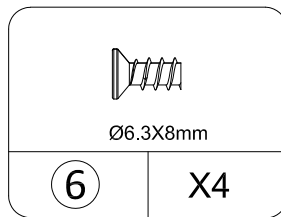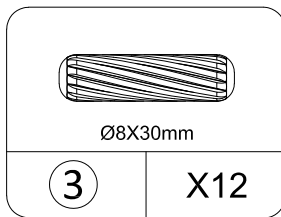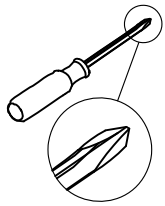


STEP11

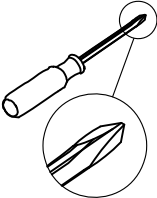


 Ø8X30mm	
3	X4




 Ø6.3X8mm	
6	X4

 350mm	
11CL	X1




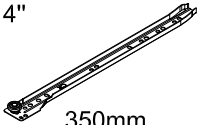
 350mm	
11CR	X1

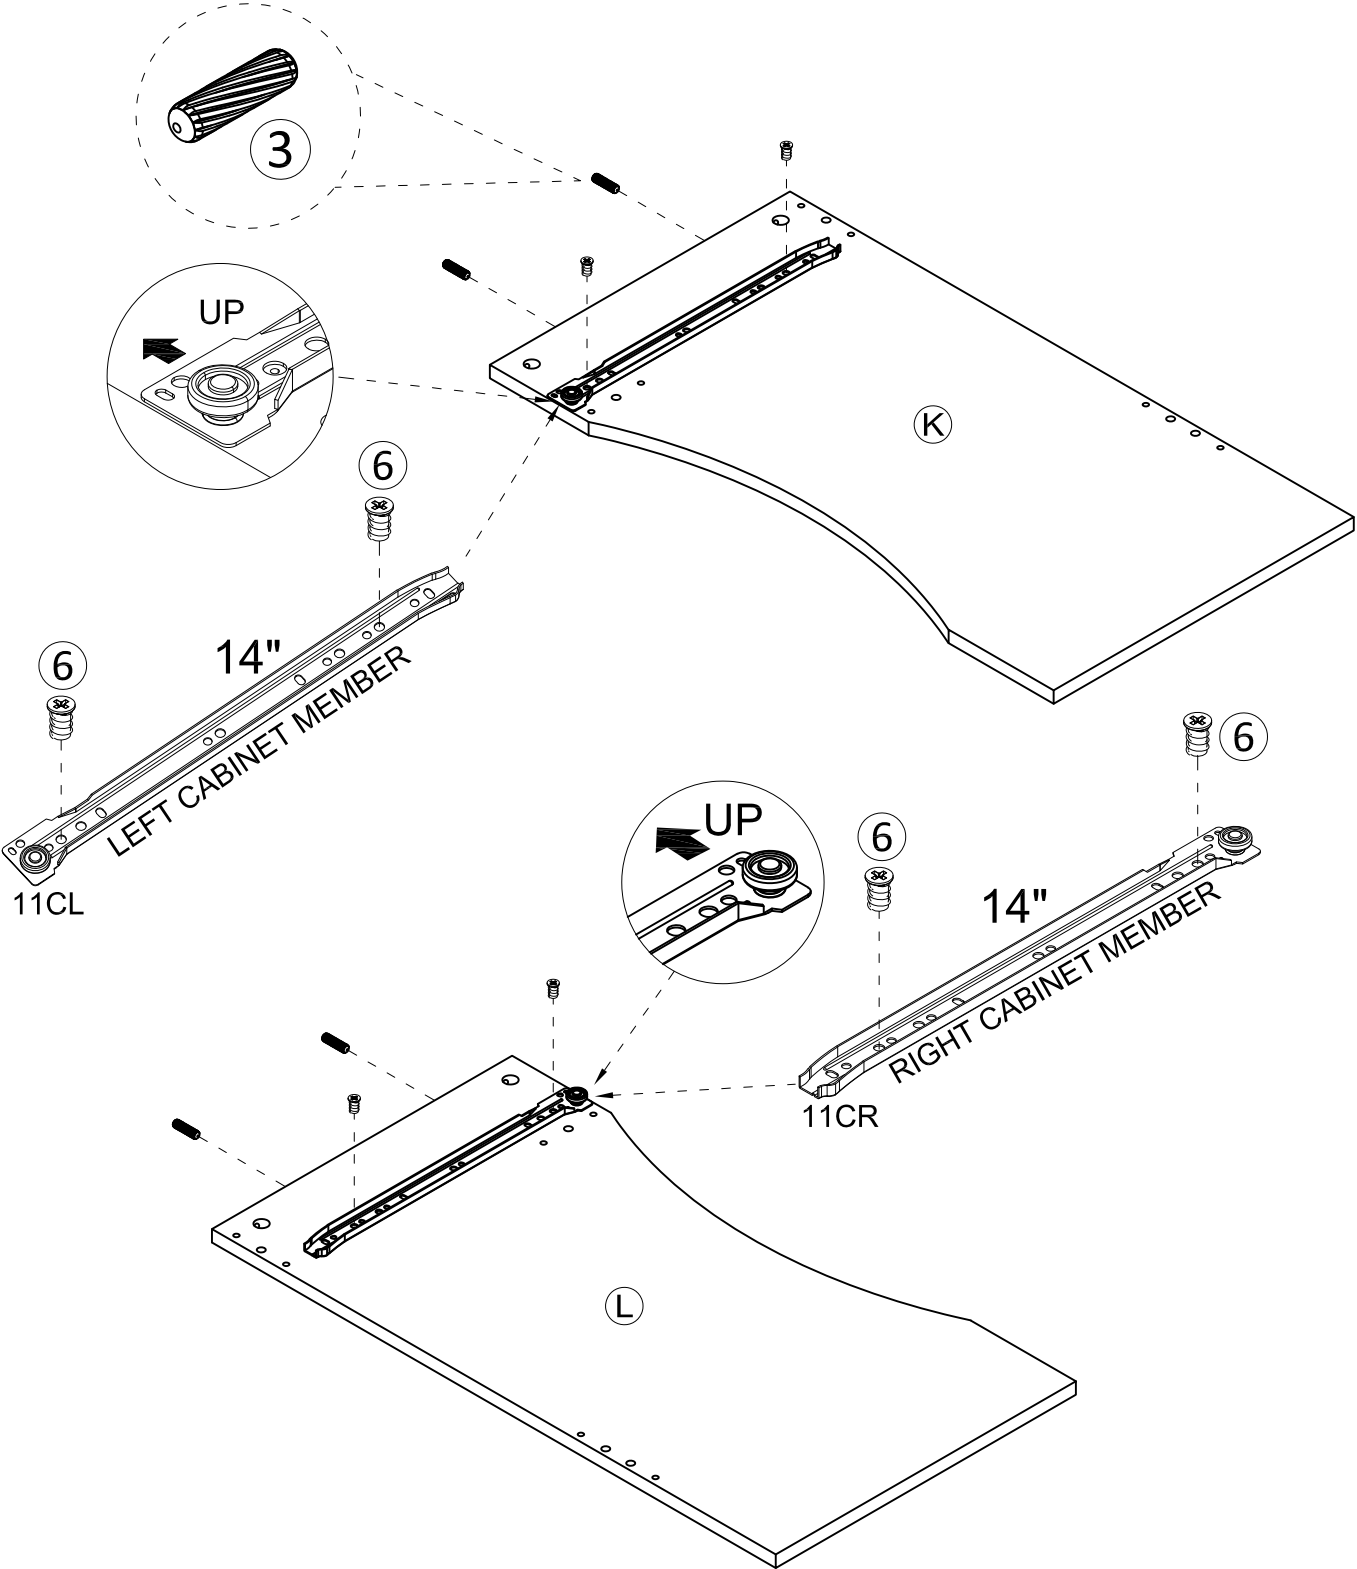


STEP12

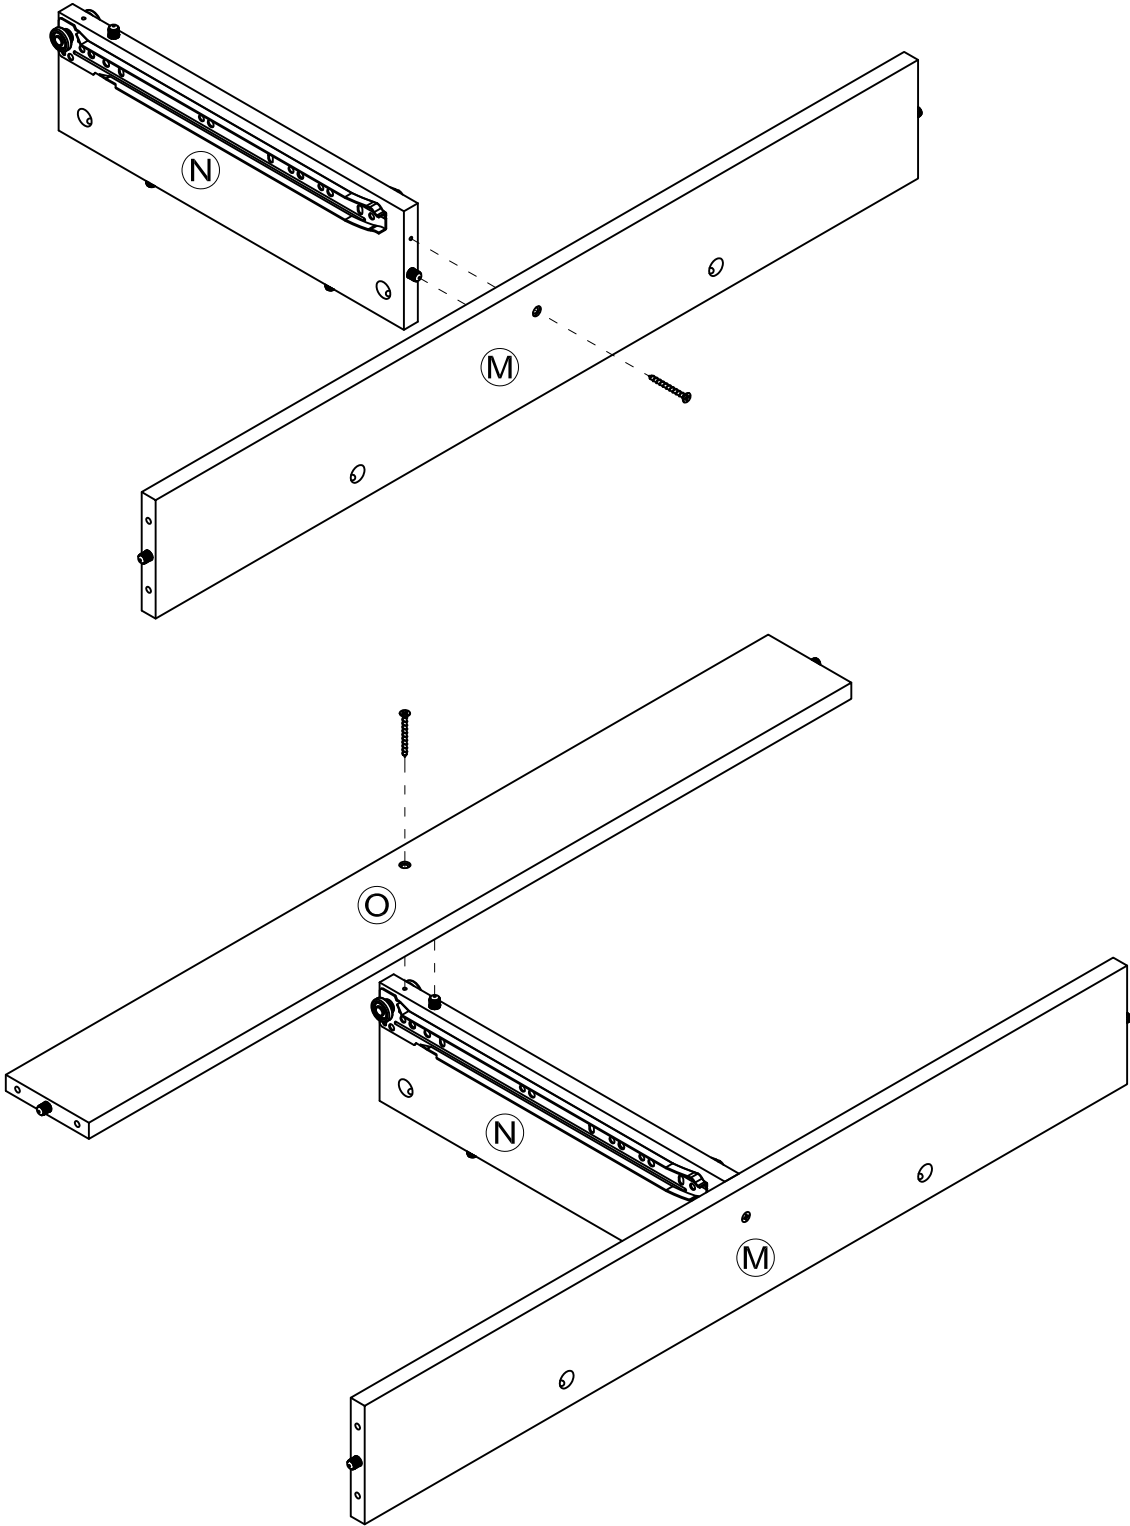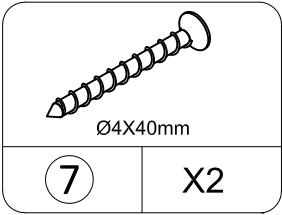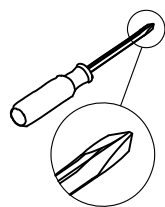




STEP13

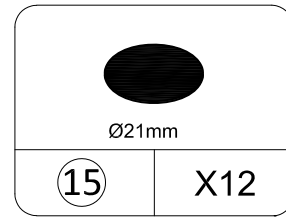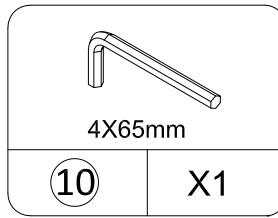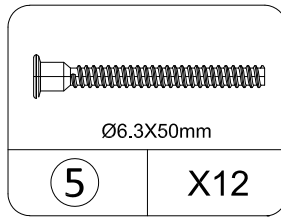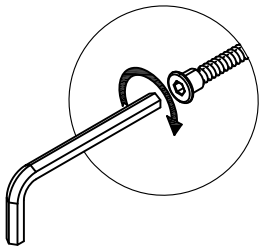


THIS STEP REQUIRES 2 PEOPLE

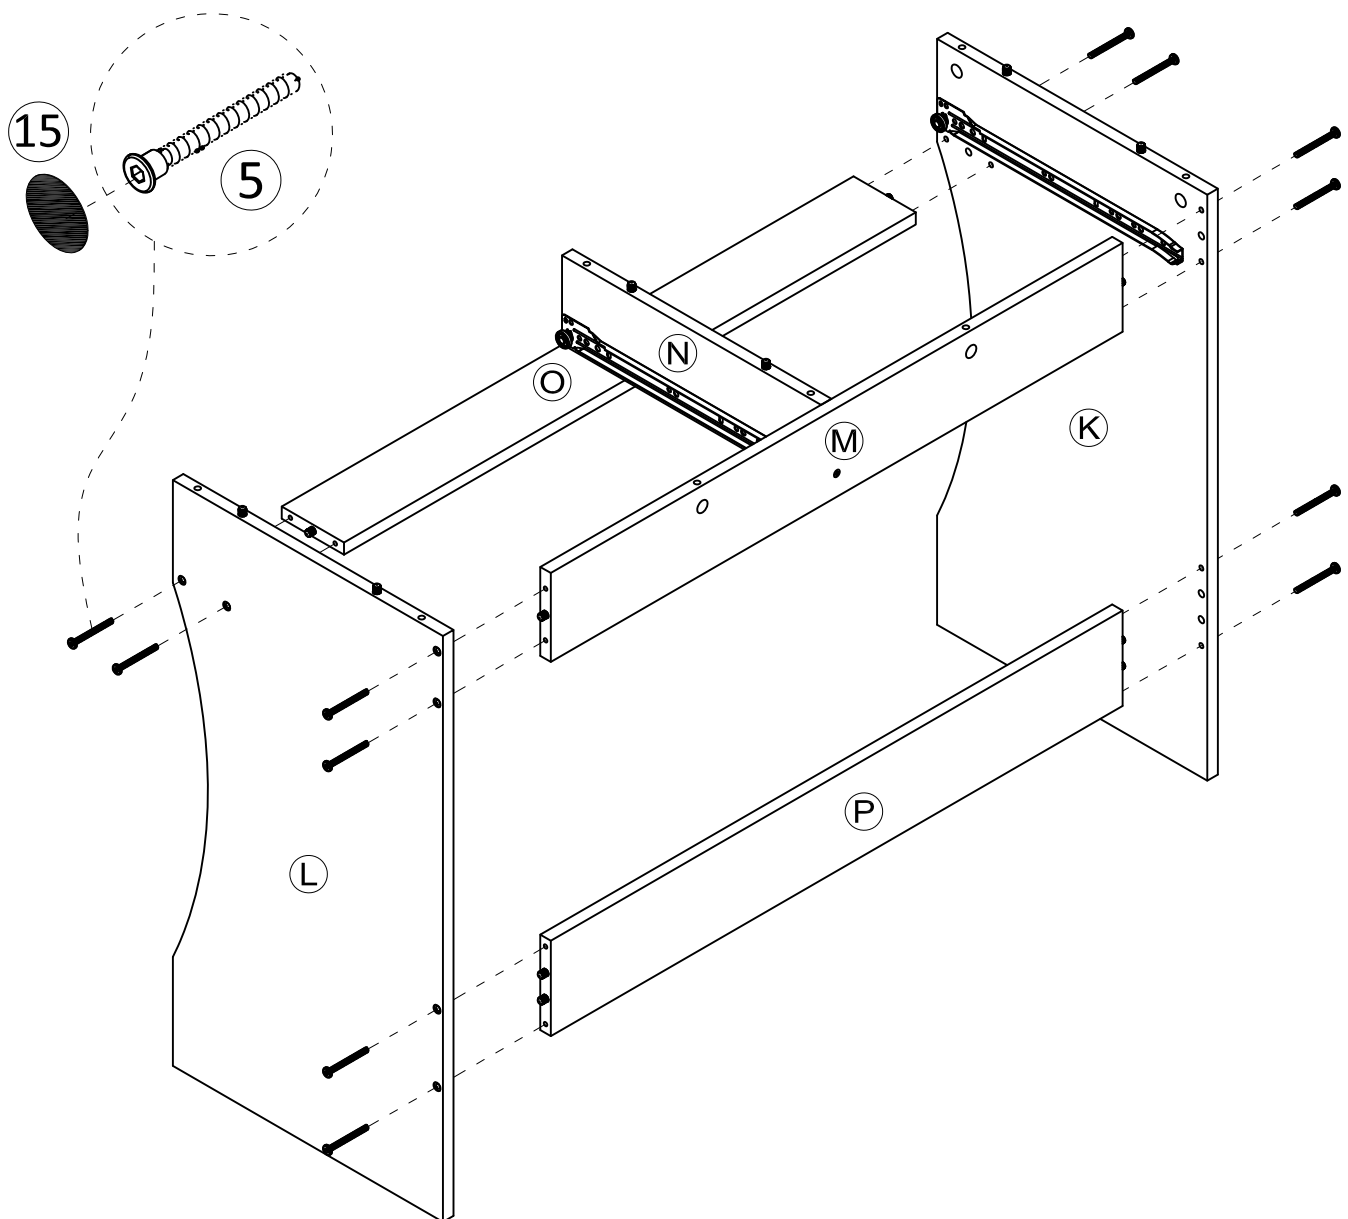






STEP14

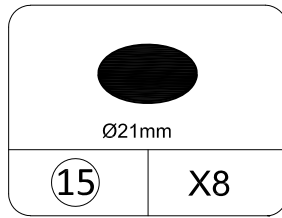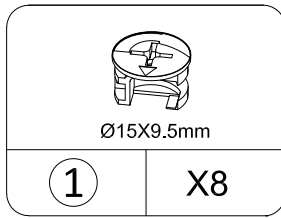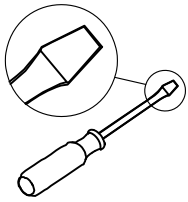



THIS STEP REQUIRES 2 PEOPLE

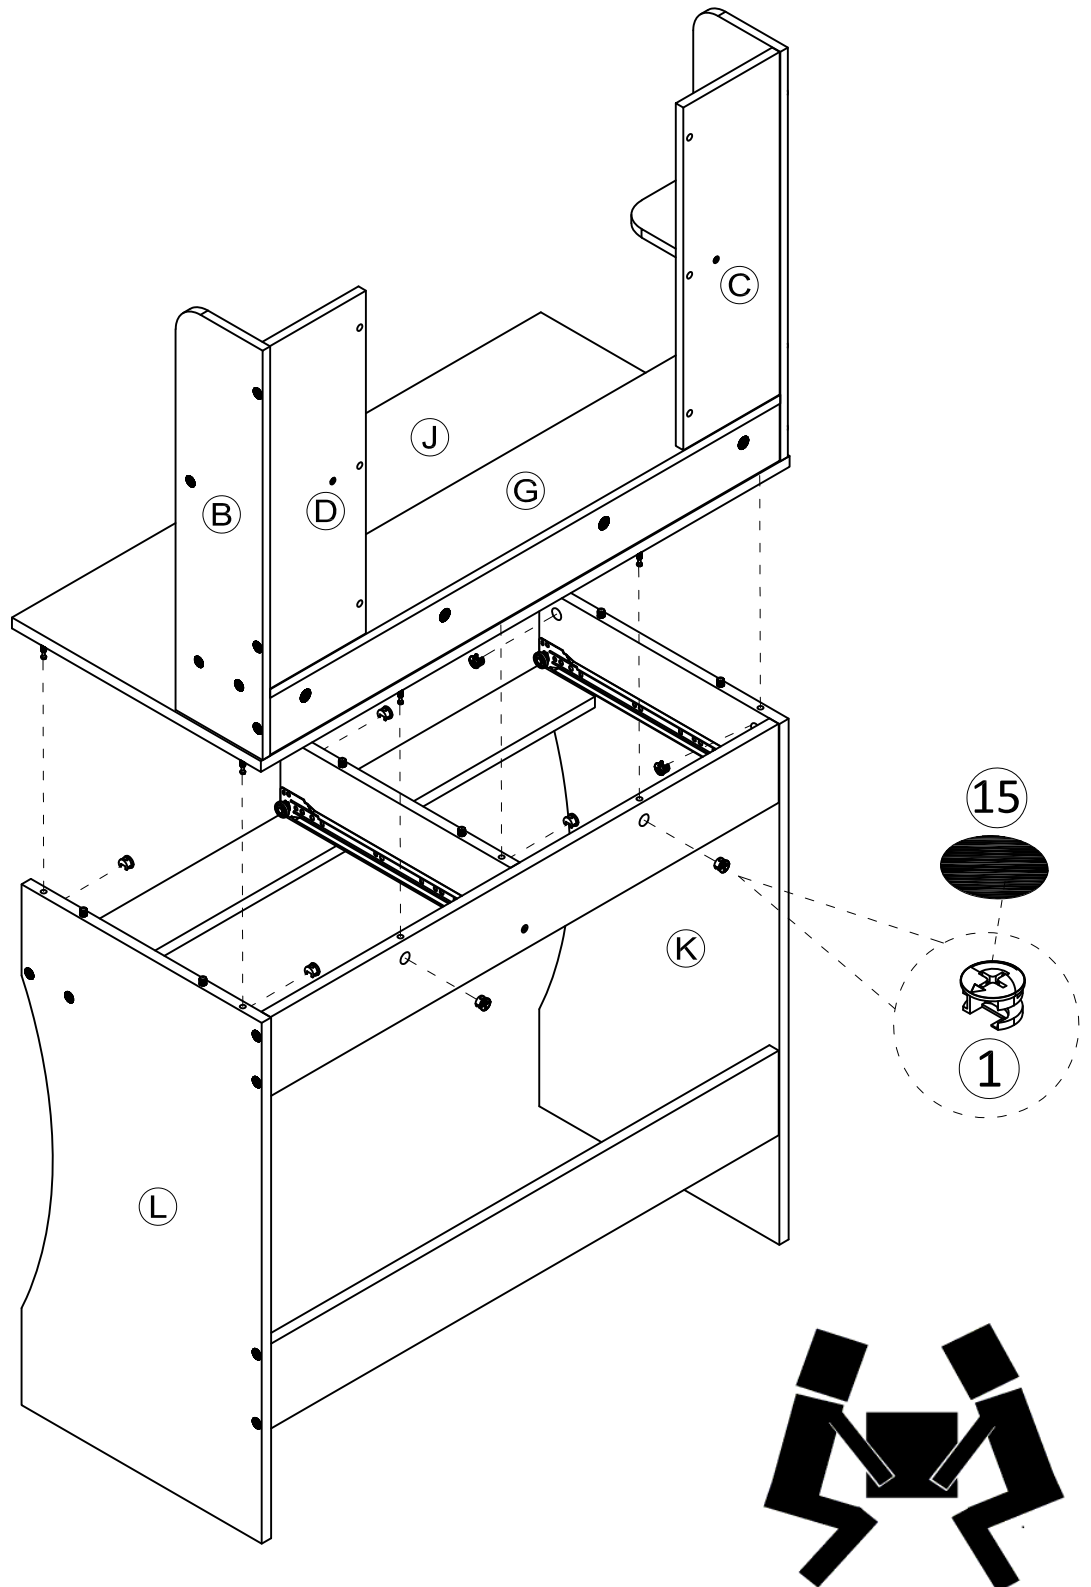

STEP15

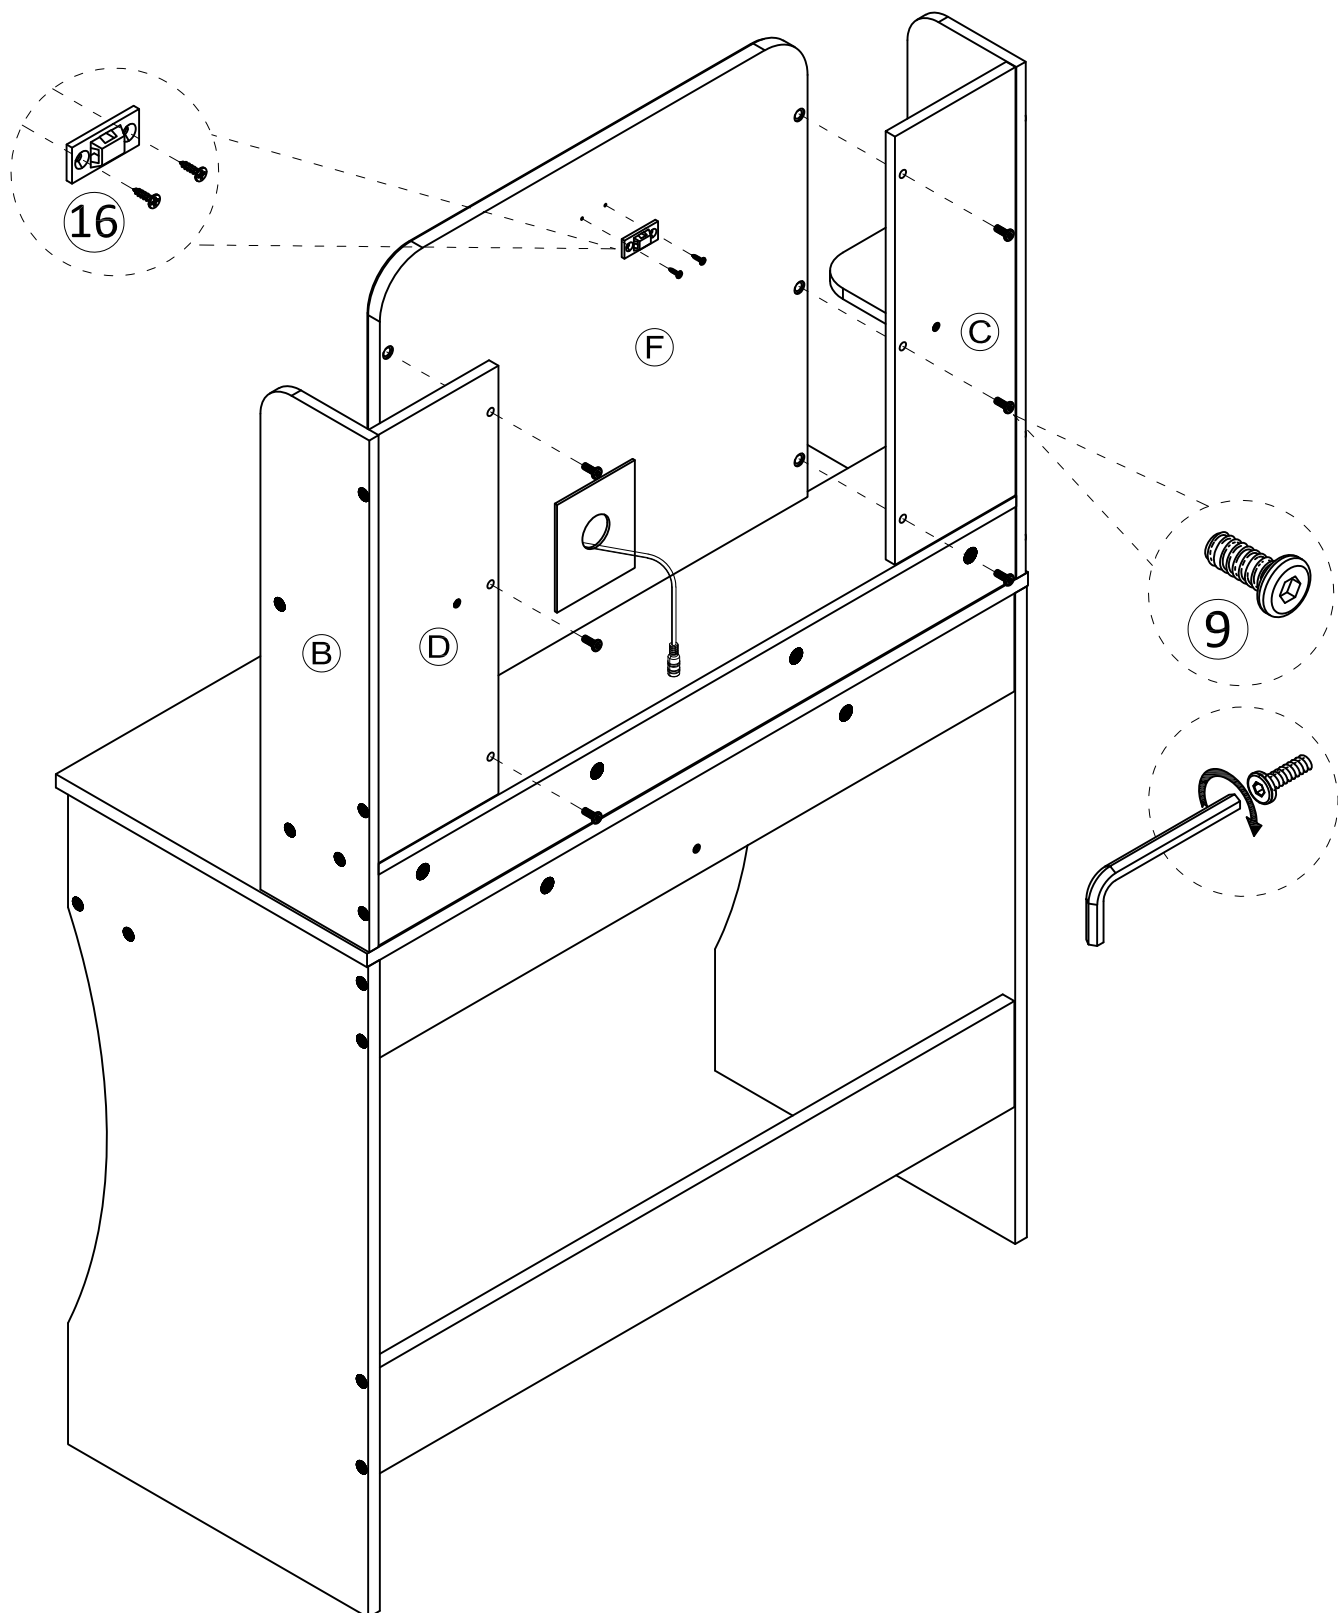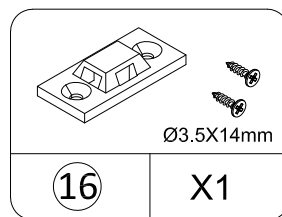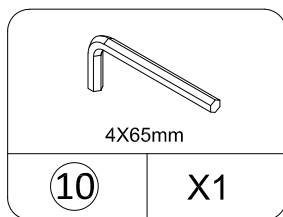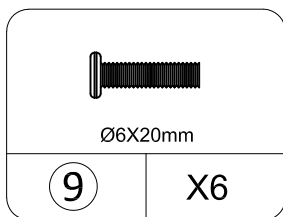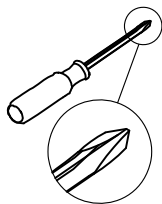


STEP16

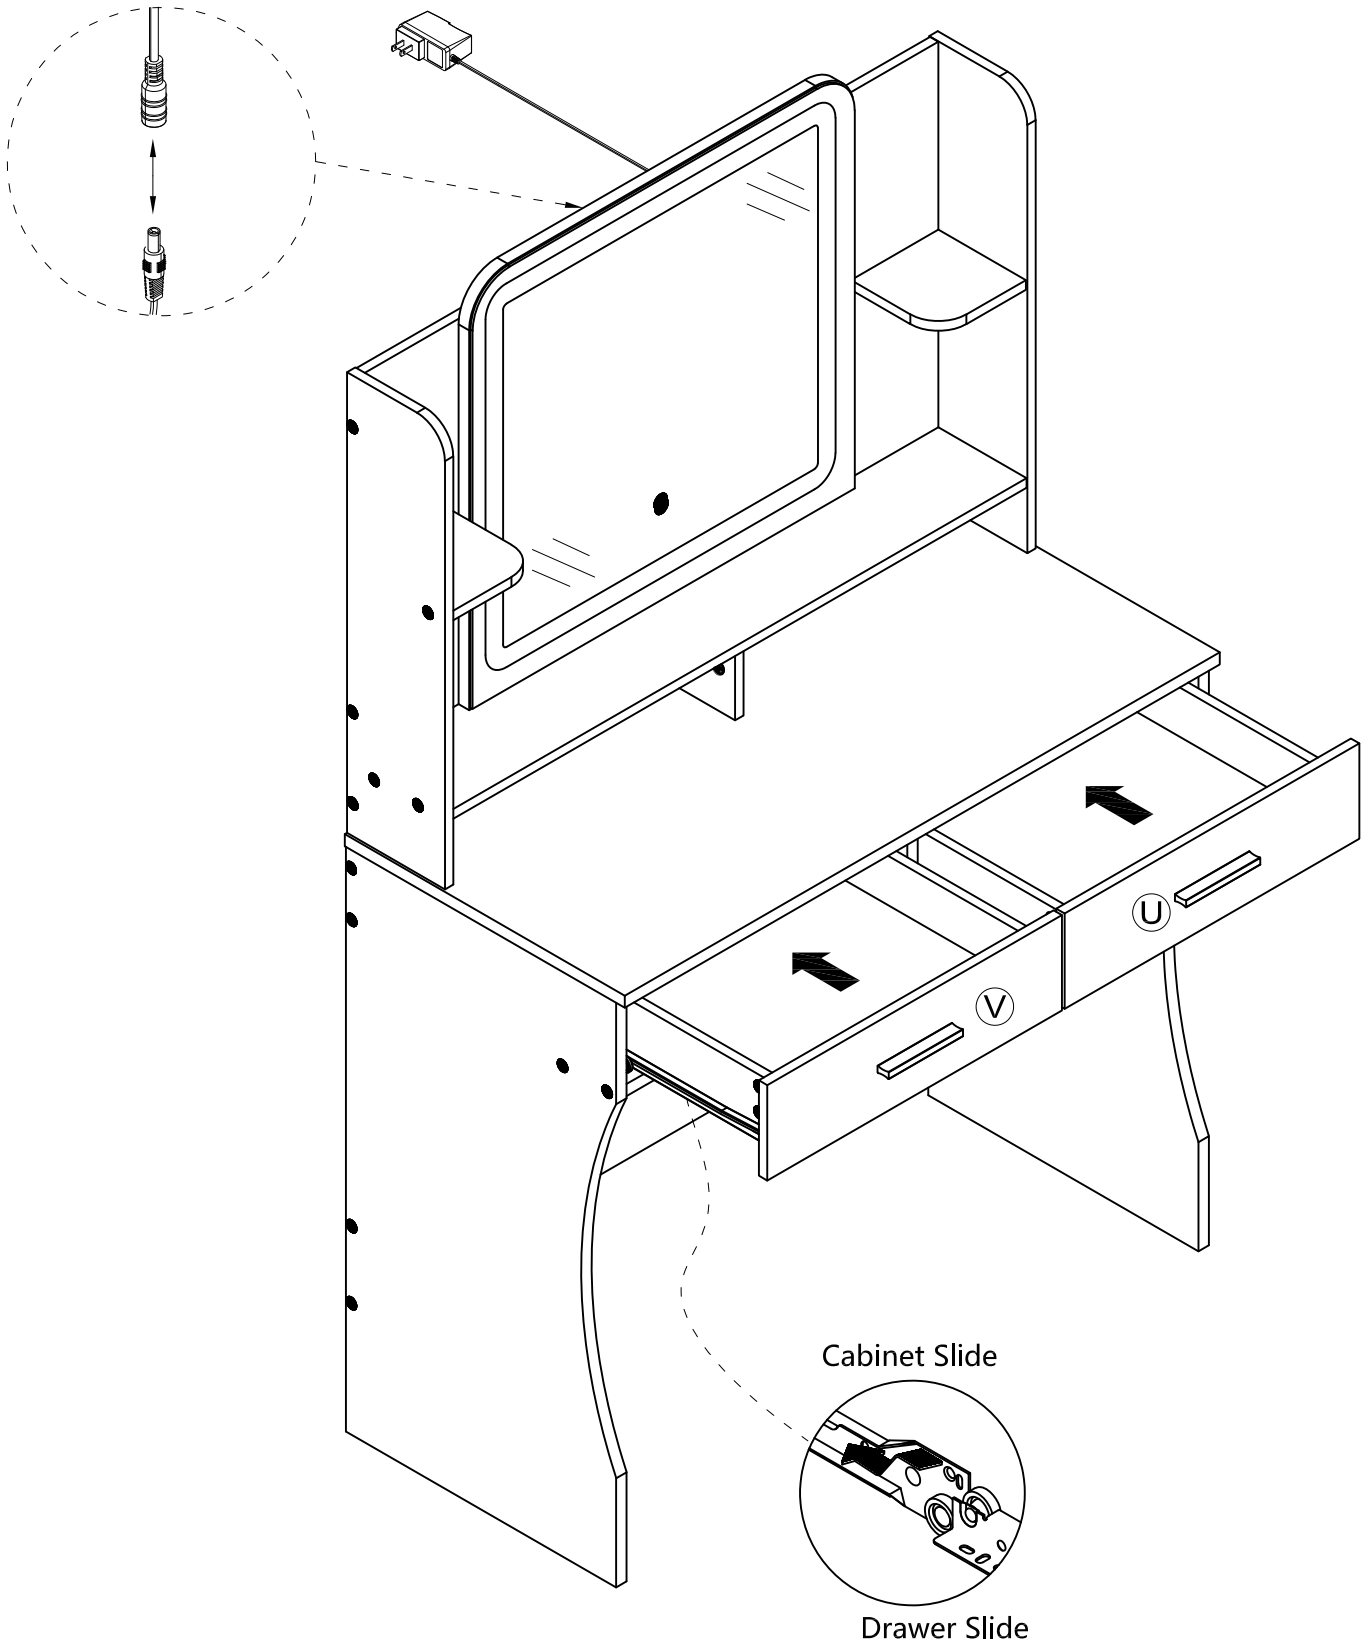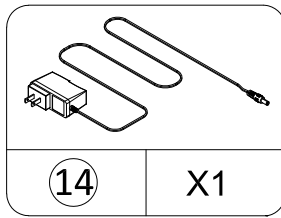


STEP17


When making up can use the switch to turn on or off the light. the dressing table brings you 3 temperature light modes, touch the button you can easy light up the mirror and change your different needs, long press to adjust the brightness.

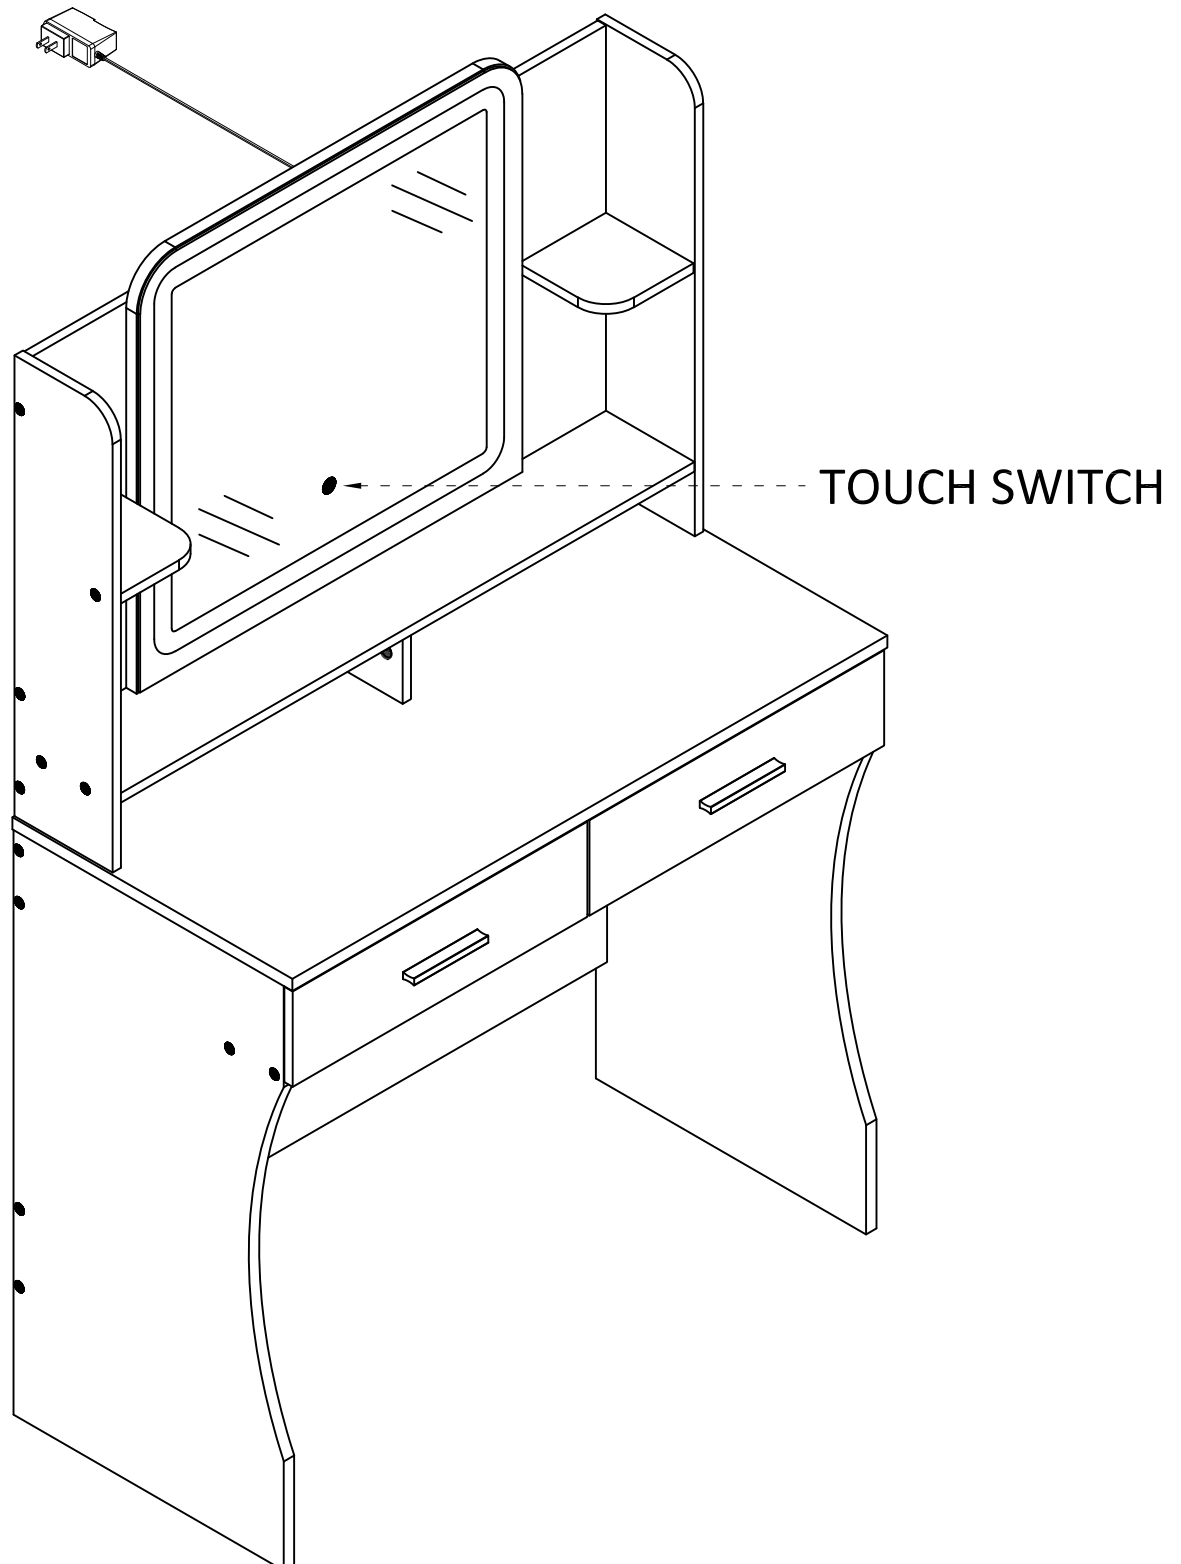


STEP18

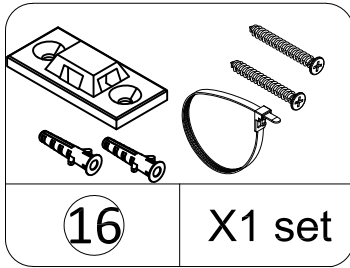


Install the tipping restraint hard ware

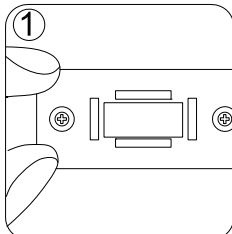


1. make mark on the wall

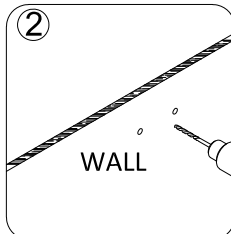


2. drill two Ø6 holes on the wall

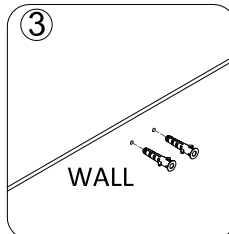

3. put two anchors in the holes

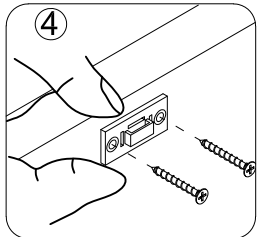

4. fix the device on the wall by the long screws

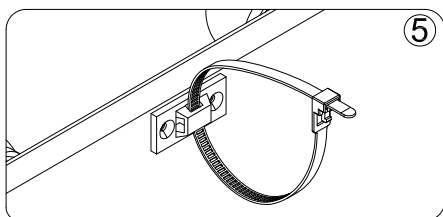

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

