
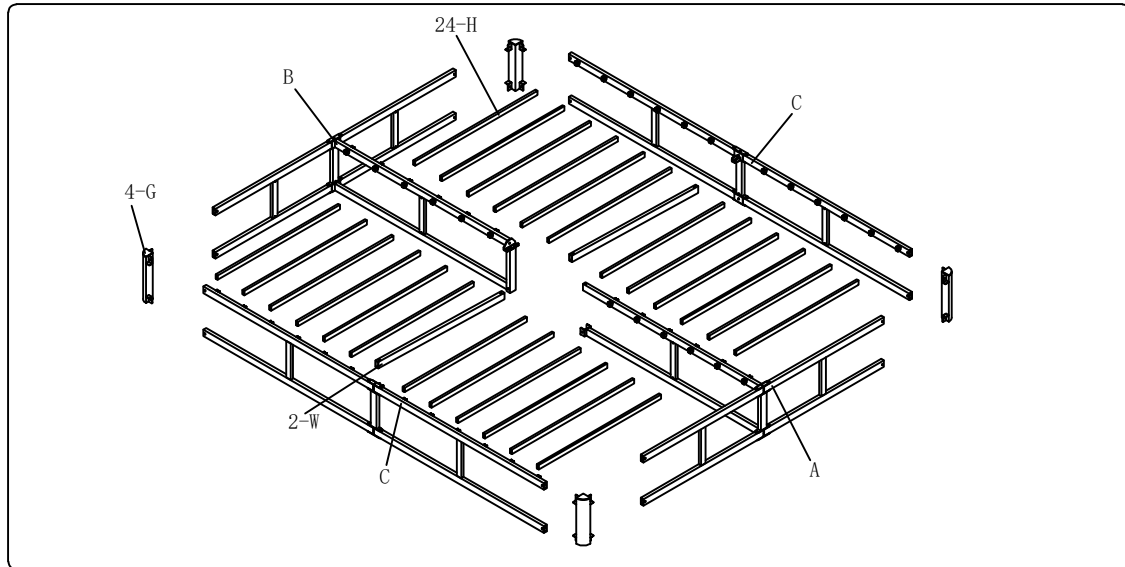


BOX SPRING





Set-up Instruction

SBS25X:03/04/05/06




Size:Full/Queen/ King/ Cal King

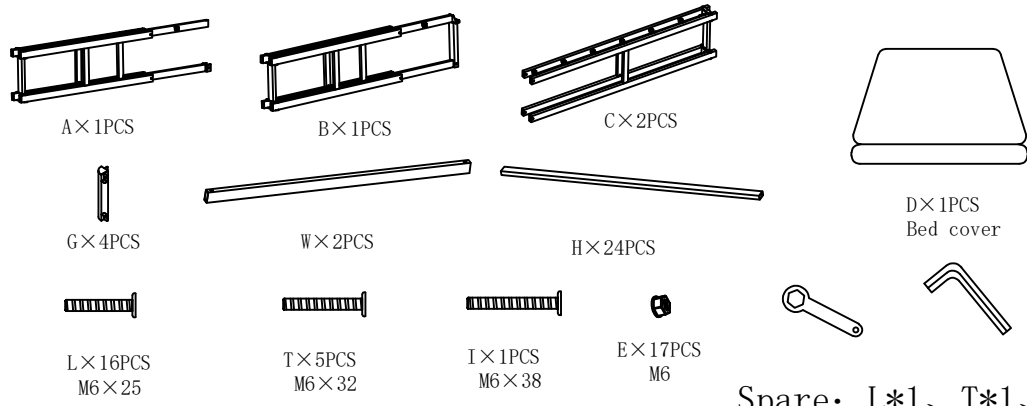



Step1:Unfold and layout parts A&B;
Joint them with screws as shown

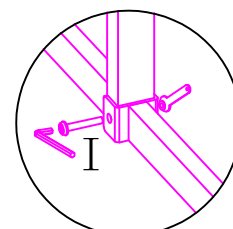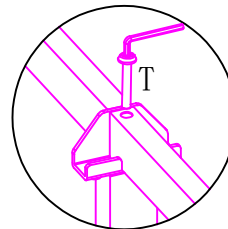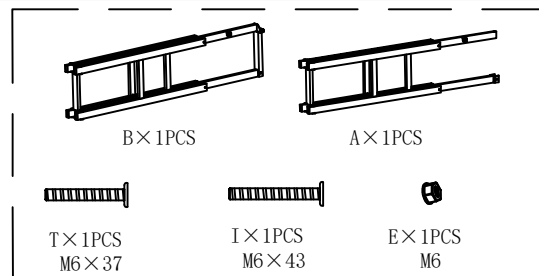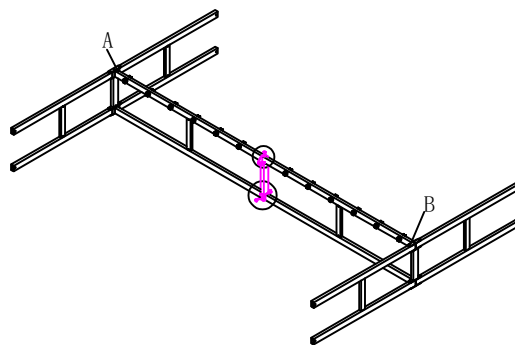



Step2:Joint four corners with screws as shown

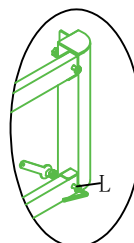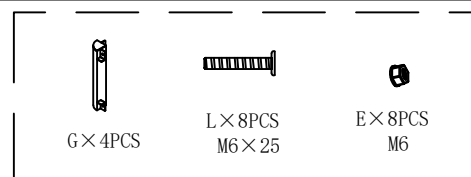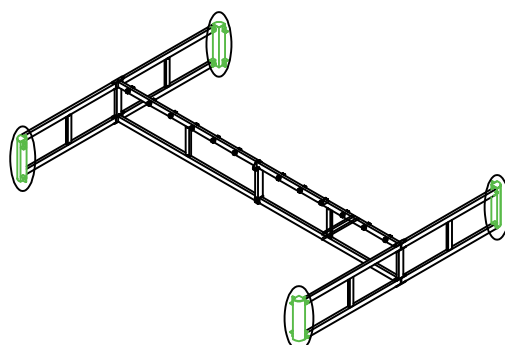



Step3:Joint parts C with screws as shown

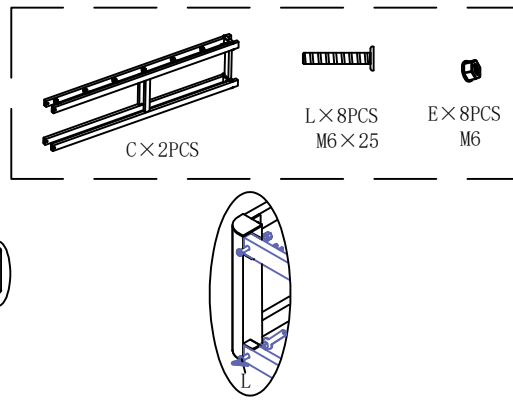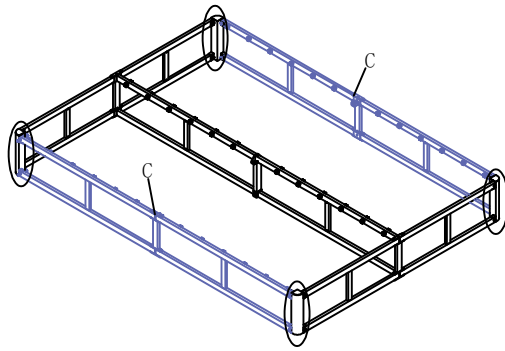



Step4:Joint parts E with screws as shown

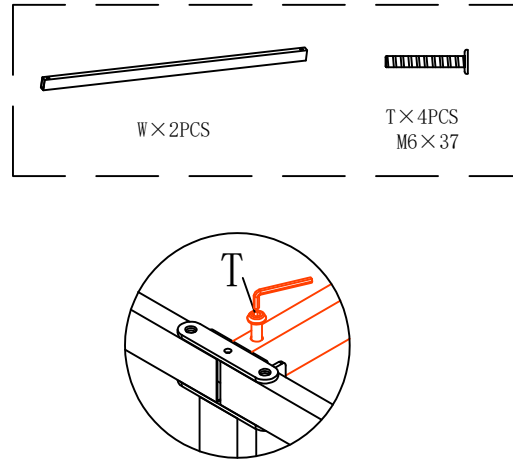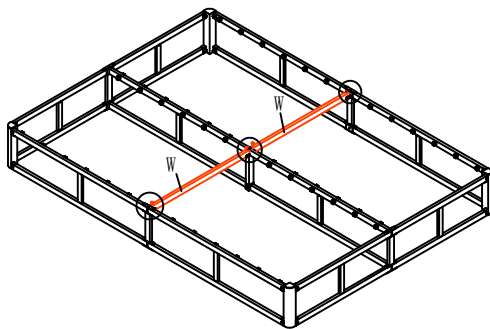

Step5:Insert 24 F slats

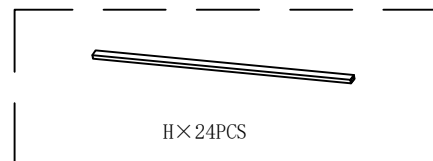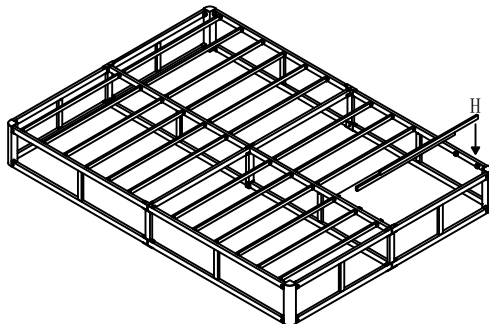

Step 6: Put on the fabric cover-D, completed

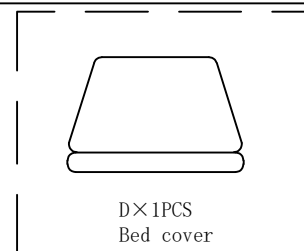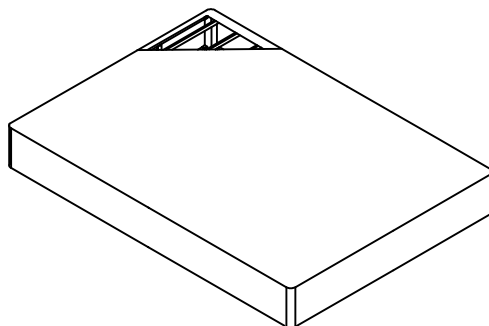

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!