

656 - 856 ASSEMBLY INSTRUCTIONS

Figure 1

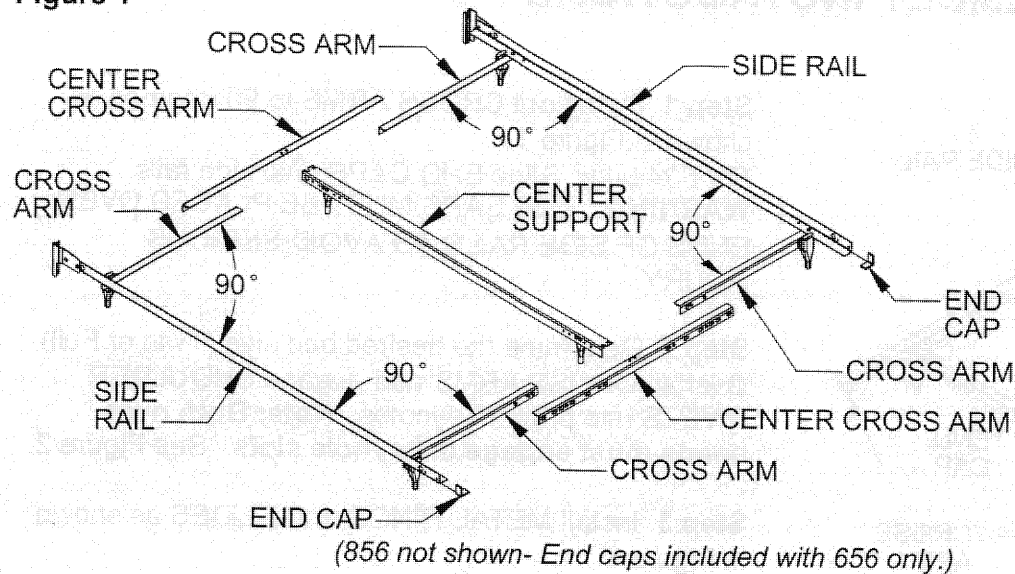


Figure 2


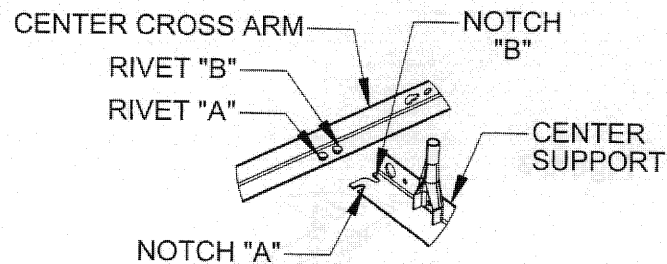


Figure 3

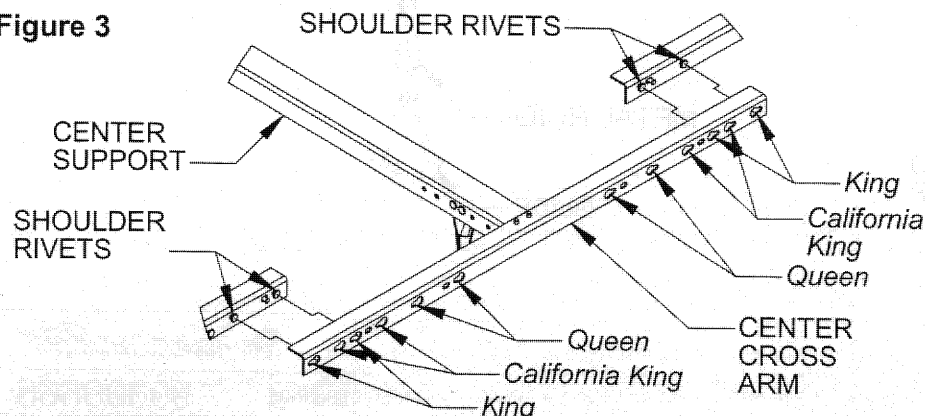

Step 1 Swing out CROSS ARMS to 90 degrees as shown in Figure 1.


For 656 only: Slide END CAPS onto end of side rails. **WARNING:** END CAPS MUST BE PLACED OVER ENDS OF SIDE RAILS TO AVOID SERIOUS INJURY.

Step 2 Turn CENTER SUPPORT over with legs pointing up. Attach CENTER CROSS ARM by inserting RIVET "A" into NOTCH "A" then pivot so RIVET "B" locks into NOTCH "B" as shown in Figure 2. Repeat with both CENTER CROSS ARMS.

Step 3 Determine desired bedding size (Queen, Cal. King, or King). *Note: The 856 Bed Frame does not accommodate California King bedding.* Slide SHOULDER RIVETS into proper keyholes of CENTER CROSS ARMS as indicated in Figure 3. **Note: Both rivet heads must engage in keyhole slots.**

Step 4 Install GLIDES as shown in Figure 4. METAL RINGS should be used on corner GLIDES.

Figure 4

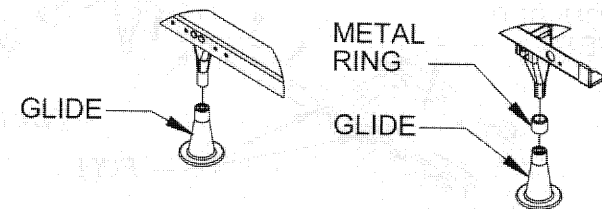

Lippert & Mott

DATE 09-26-03 DWG. NO.

99300565