ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

CANNON VALLEY UPH COUNTER STOOL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment


Parts Key				Hardware kit		
No	Qty	Description	No		Description	Qty
1	1Pc	Chair Back	A	9	Hex nut M8	4 Pcs
2	1Pc	Complete Seat	В	0	Lock washer M8	11 Pcs
3	1Pc	Right Facing Front Leg	C	0	Flat washer M8 x 18	11 Pcs
4	1Pc	Left Facing Front Leg	D	9	Long bolt M6 x 70mm	4 Pcs
5	1Pc	Right facing side stretcher	E	0	Short bolt M6 x 40mm	3 Pcs
6	1Pc	Left facing side stretcher	F		Allen key	1 Pc
7	1Pc	Front Stretcher	G	~	Key wrench	1 Pc
8	4Pcs	Floor Glide	I	(MINITED	Screw M4x40	6 Pcs

FABRIC CARE INSTRUCTIONS REGULAR CARE

Wipe gently using a clean soft damp cloth and mild detergent DO NOT SATURATE FABRIC CONTENT: 100%Polyester -Cleaning code W

STEP 1

- Carefully lay Chair Back flat on a smooth flat surface to prevent scratches.
- Attach Complete Seat (2) to Chair Back (1) by inserting a Flat Washer, Lock Washer and Short Bolt (E) into each of the hole on the back of the seat. Tighten screws with provided Allen Key by turning clockwise until secure. (See Detail A).

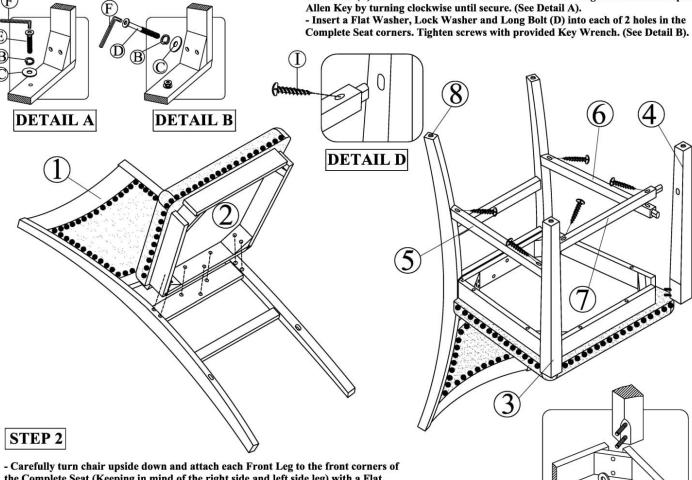

- Carefully turn chair upside down and attach each Front Leg to the front corners of the Complete Seat (Keeping in mind of the right side and left side leg) with a Flat Washer (C), Lock Washer (B) and Nut (A). (See detail C). Keep nut loose at this point. Insert right side stretcher and left side stretcher between the Front and Back Legs, then insert the Front Stretcher between the two Front Legs. (Make sure that the side stretchers are not at an angle as the front legs are on the wrong side). Fasten stretchers to legs with Screws (I) using a Screwdriver (not provide).

- Be sure to level the chair prior to tightening front leg nuts with wrench provided (G).

DETAIL C