


Assembling Guide

Thank you for choosing our product!

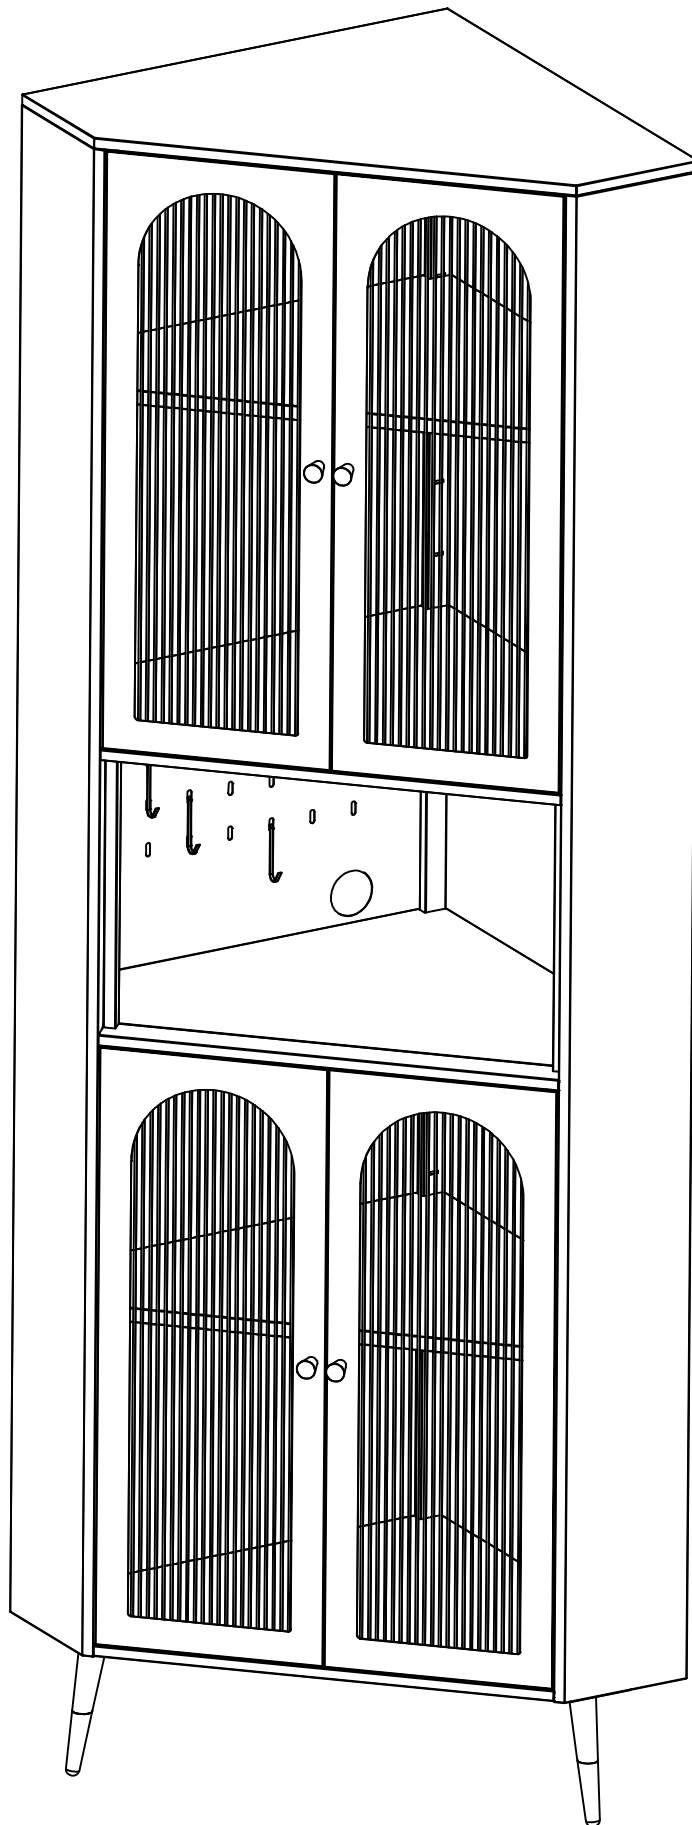

2 PERS




30 MINS








 WARNING!










If furniture is tipped over, it may cause serious injury or even death. To prevent tip-over of this furniture, be sure to use it with the wall attachment devices provided. Use the appropriate screws and plugs for your wall.

If the supplied wall attachment devices do not match the walls in your home, consult your local professional to use screws and plugs that fit your walls. Please read and follow each step in the instructions carefully.

Please pay attention to the iron corner protectors and cabinet parts inside the package. If the iron corner guard is damaged, you can just discard it; if you find any broken or damaged cabinet parts, please contact customer service immediately for replacement. Sharp edges of metal parts can cause serious injury.

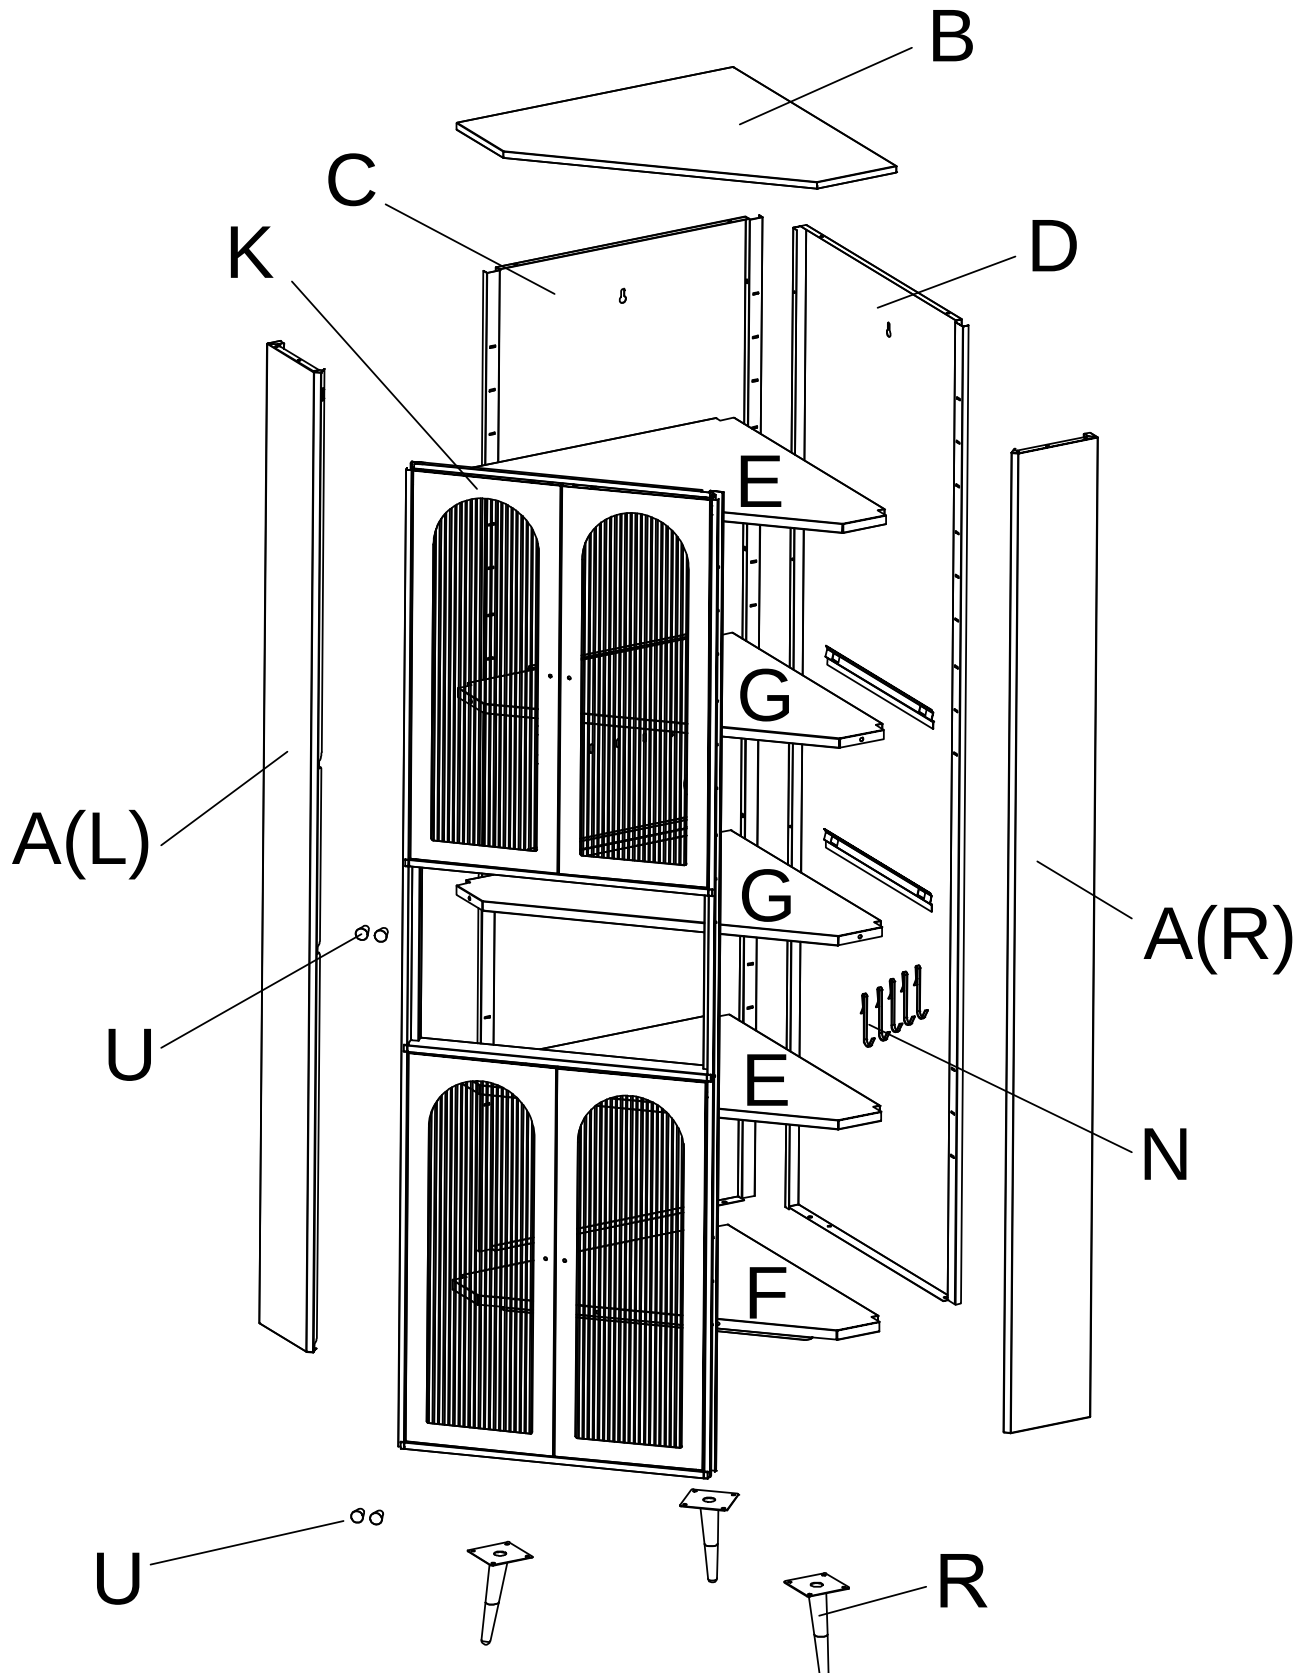

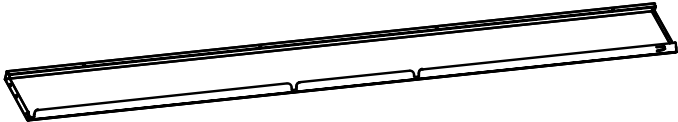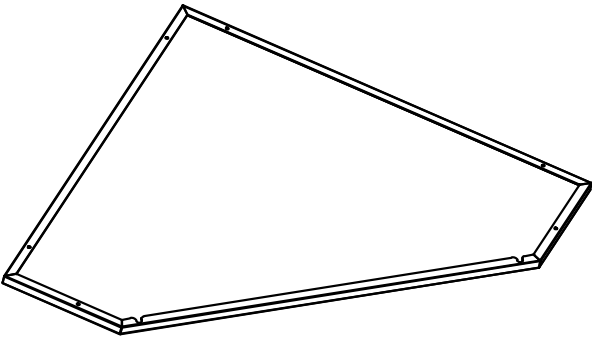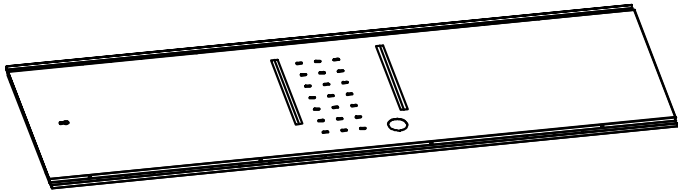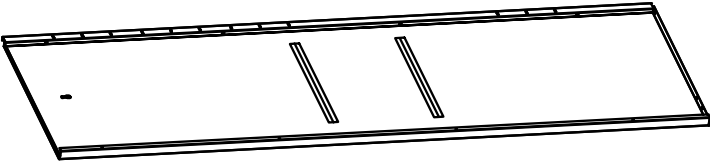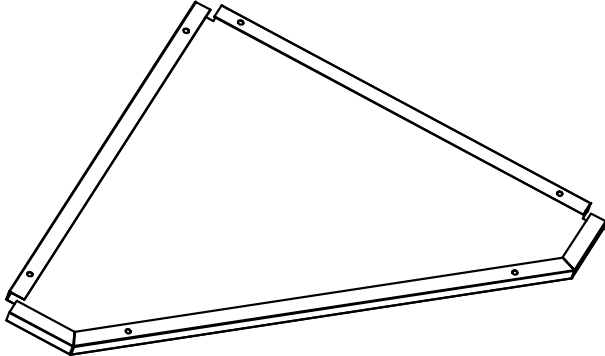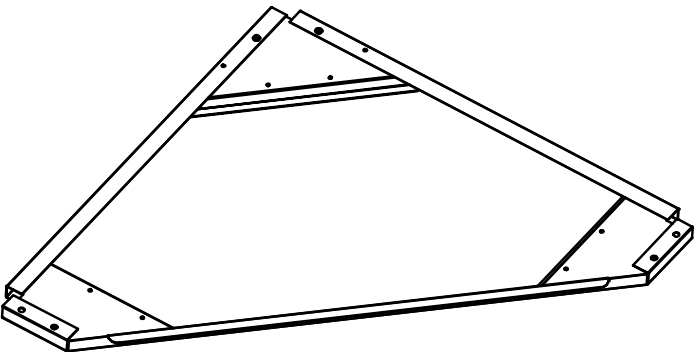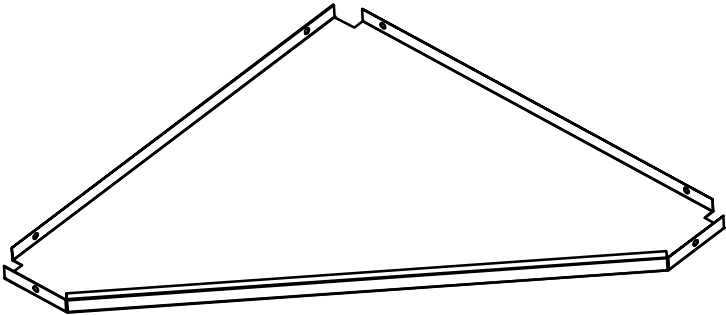
A(L) x1 Left Panel 	A(R)x1 Right Panel 
Bx1 Top Panel 	Cx1 Left Back Panel 
Dx1 Right Back Panel 	Ex2 Shelf 
Fx1 Bottom Panel 	Gx1 Middle Panel 

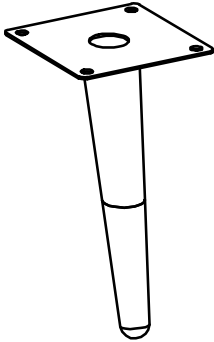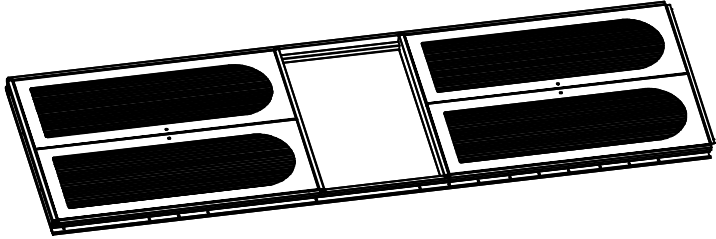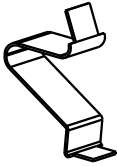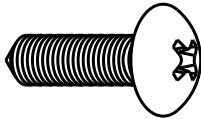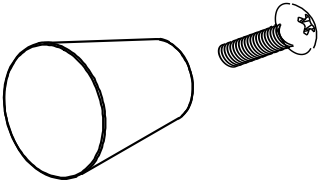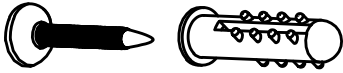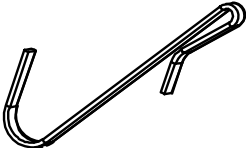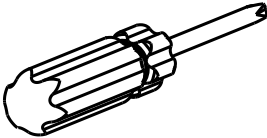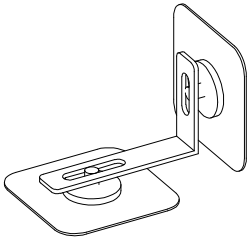Rx3 Foot Stand	Kx1 Door
	
Tx14 Shelf Clip	Sx34 Screw
	
Ux4 Handle with screws	V x2 Expansion screws
	
Nx5 Hook	Screwdriver
	
Wx2 anti-tip patch	
	


We always provide some extra screws for backup. Don't worry if you have some left over after installation.

STEP 1 Install the back.

Sx4

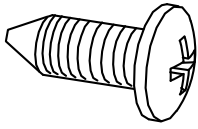



Attach D to C, and secure with 4 S screws.

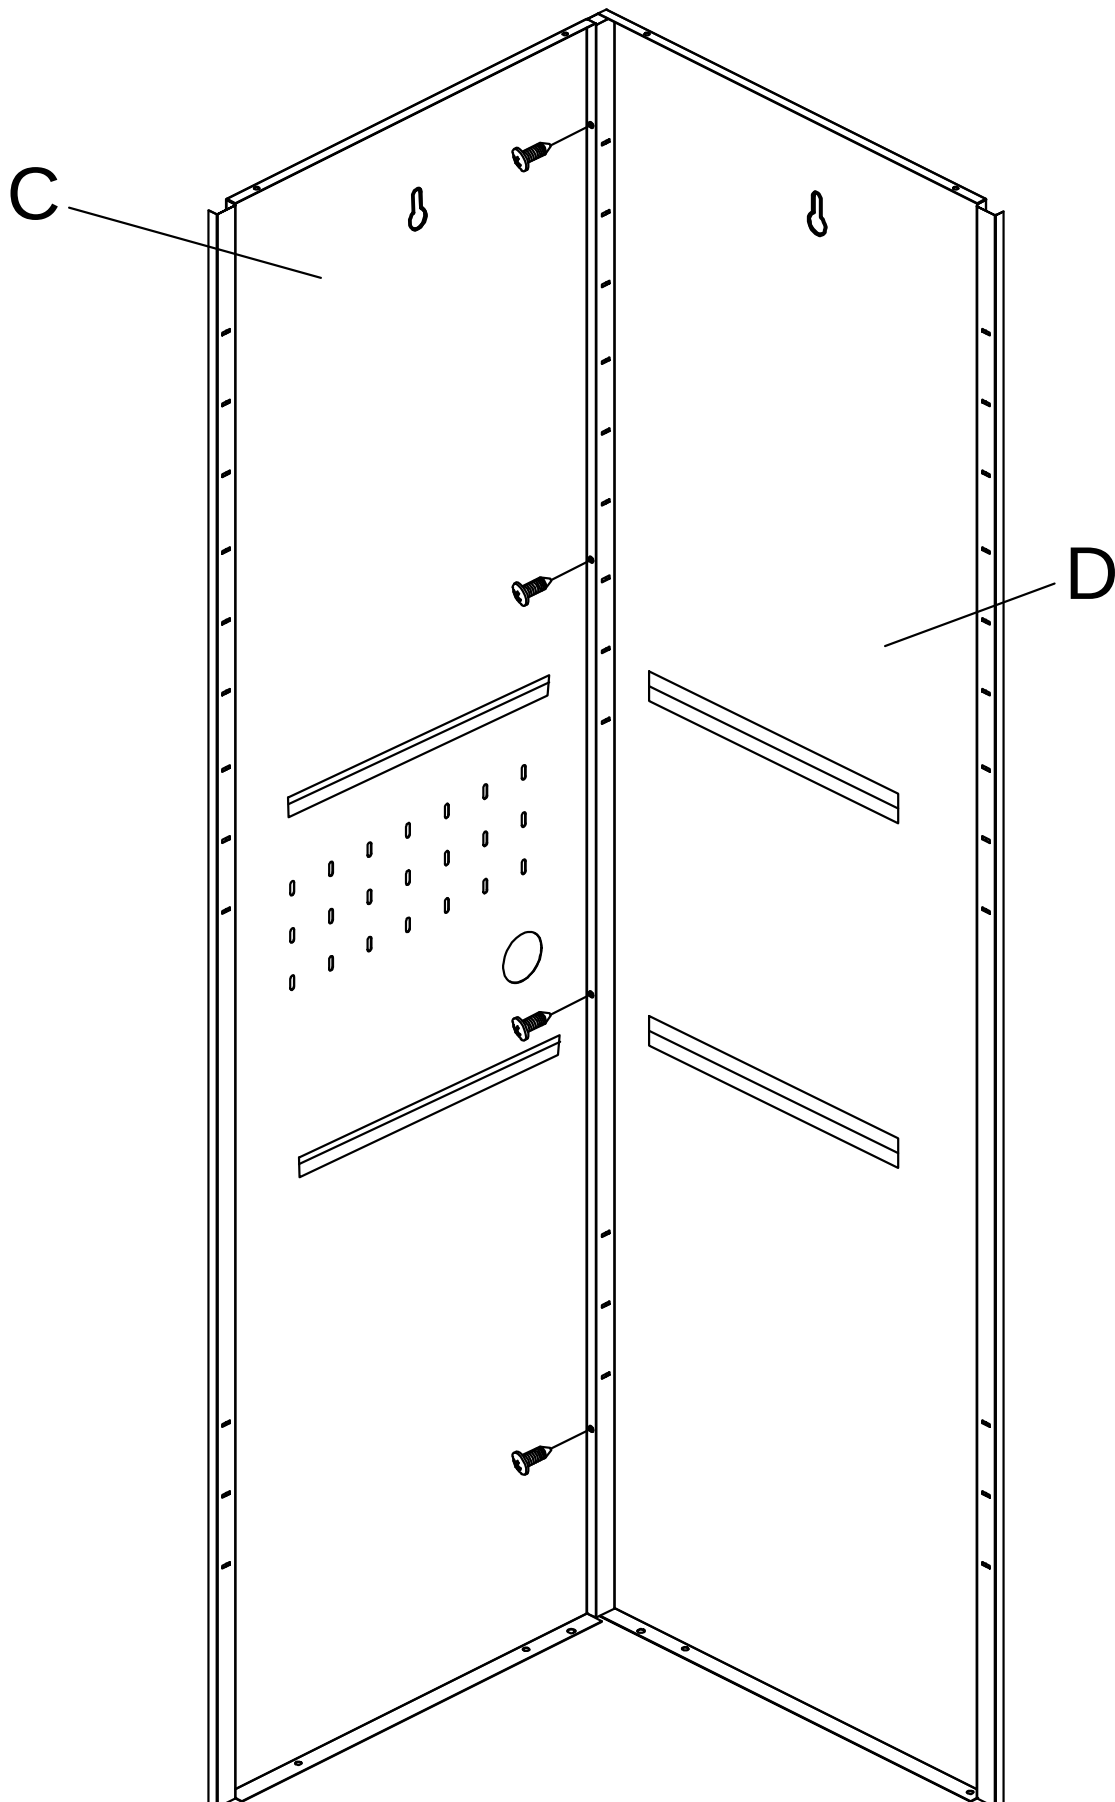

STEP 2 Install the sides.

Attach A (L) and A(R)to the back, and secure with 8 S screws.

S x8

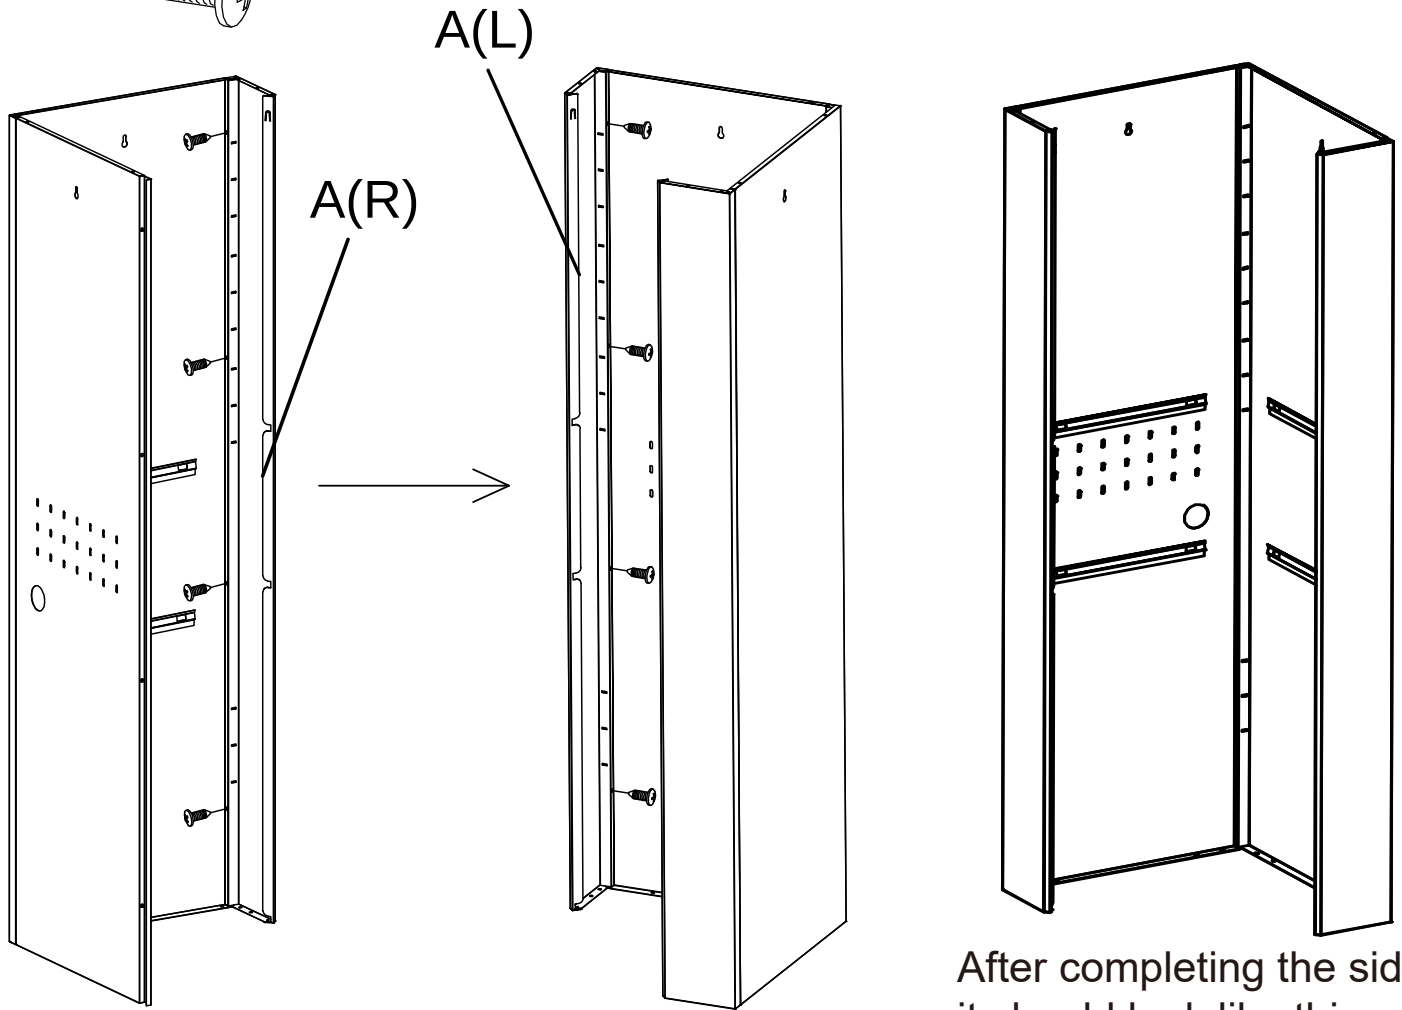
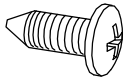


After completing the sides, it should look like this.

STEP 3 Install the door handles.



Secure the U handles to the door with its screws .

Ux4

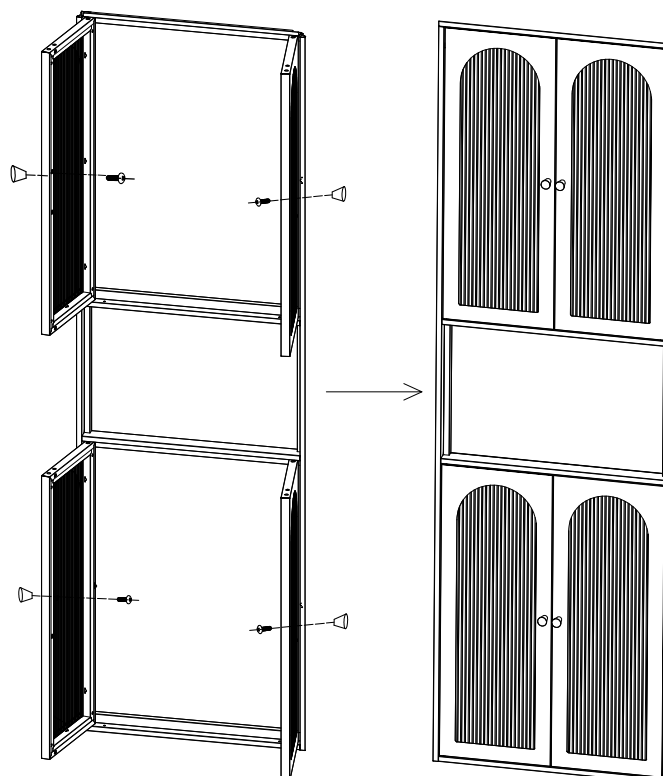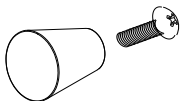


STEP 4 Install the door.

First, fully place the door panel inside the cabinet body, then pull it outward, and click into the edge of A(L) & A(R).

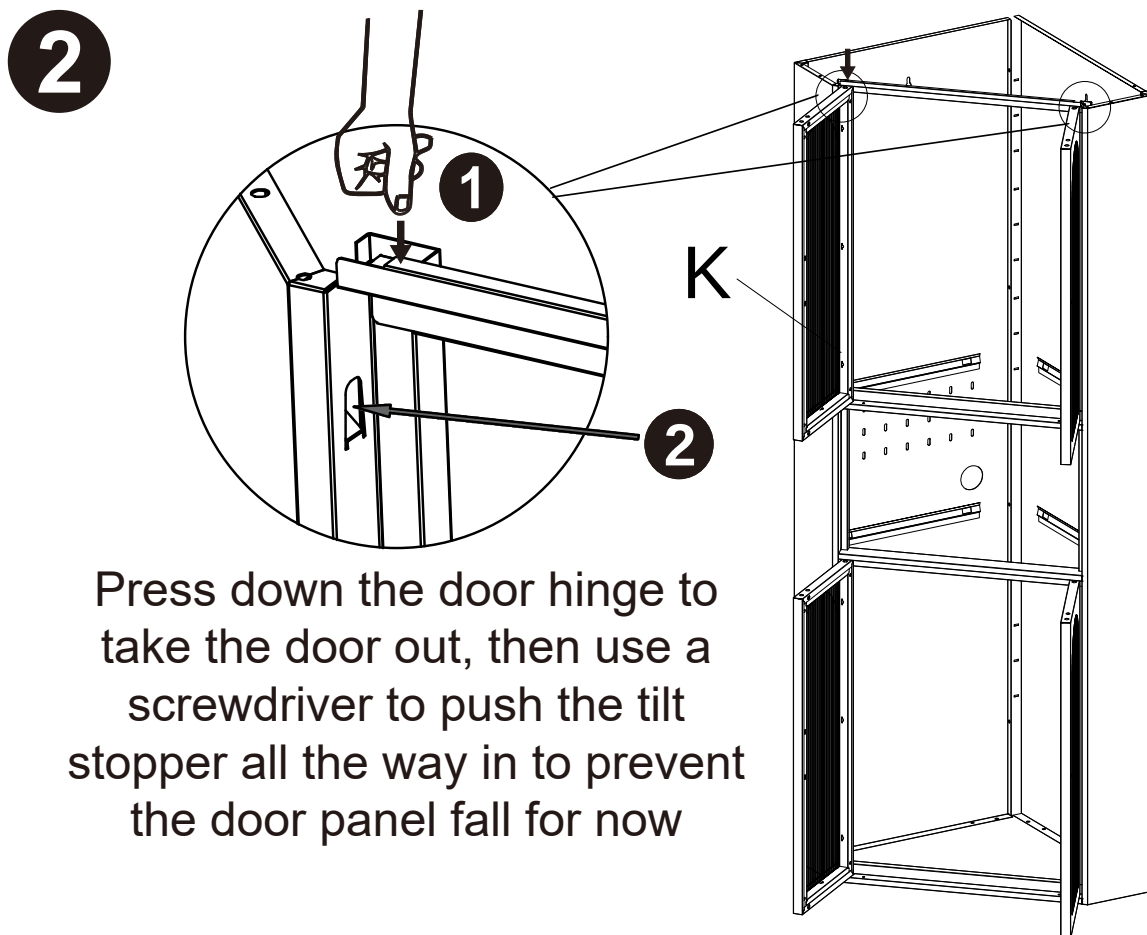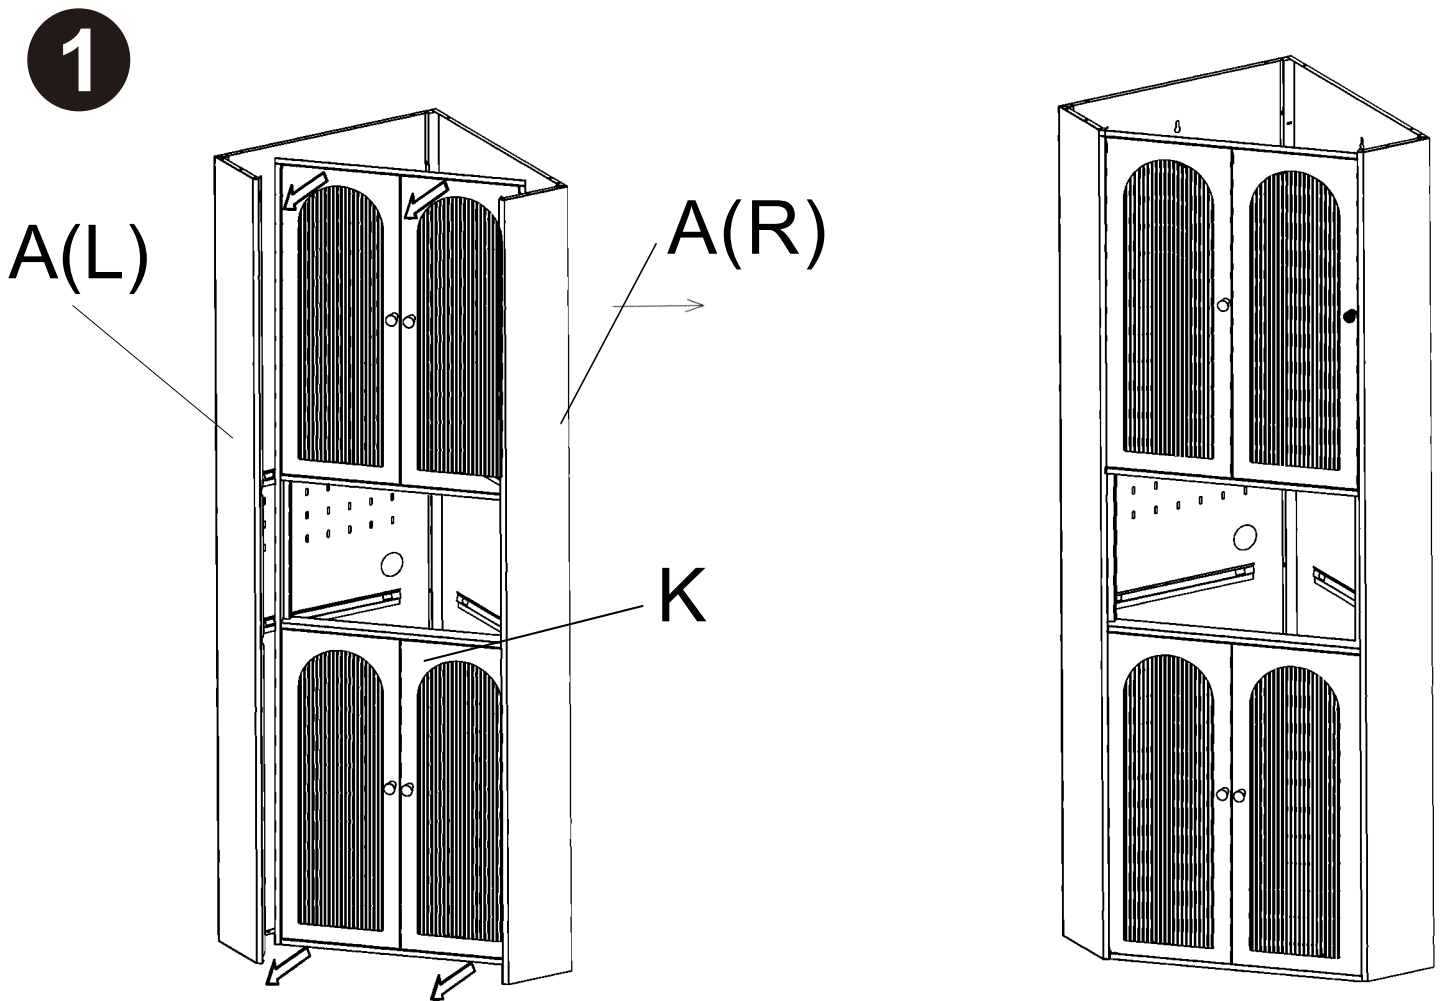

STEP 5 Install the top and bottom.

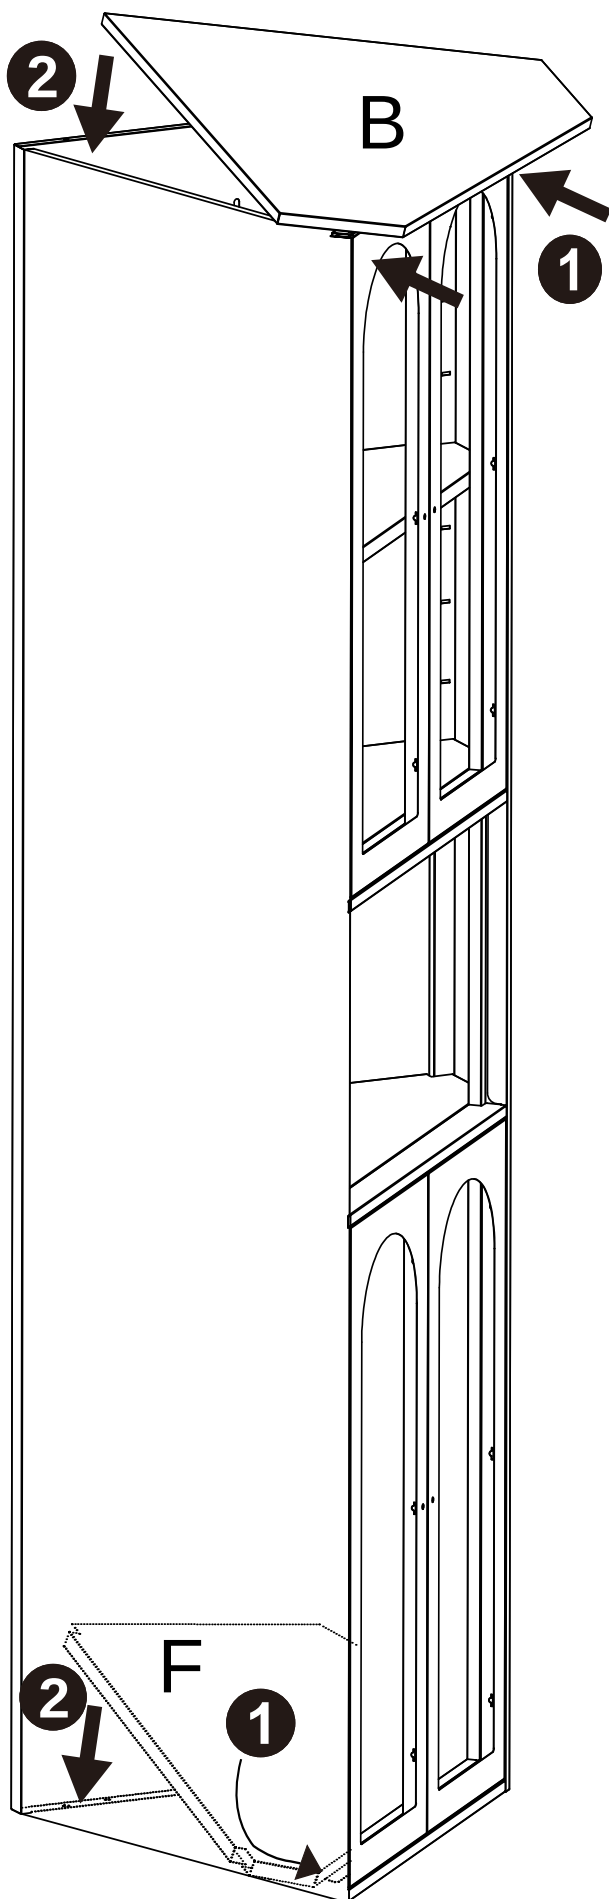


First, insert the front end of the top panel into the gap of the upper door frame.


Second, lower the rear end of the top panel onto the cabinet body


First, insert the front end of the bottom panel under the lower door frame.


Second, lower the rear end of the bottom panel.


*If the bottom plate cannot be placed smoothly, it indicates that the cabinet body is not aligned. Please continuously sway the cabinet until the bottom panel can be pressed down smoothly.

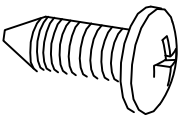
S x22 

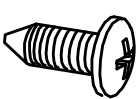
1 S x6 

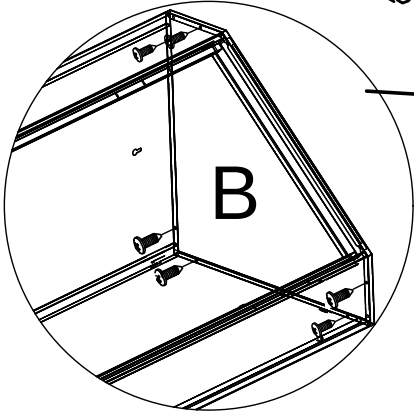

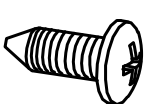
2 S x4 

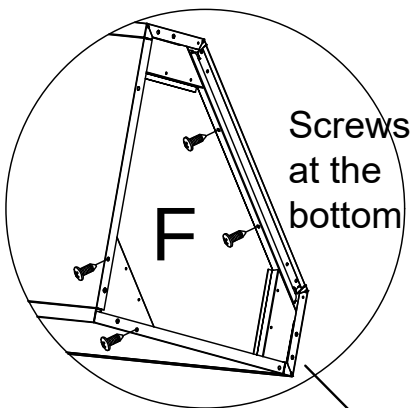

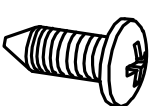3 S x12 

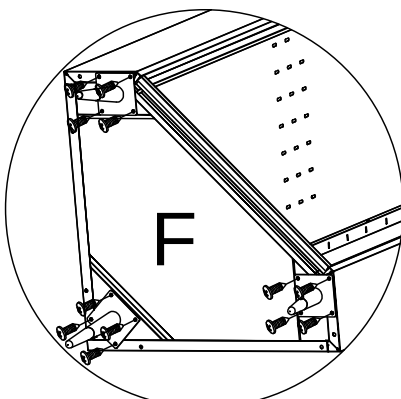


Install the legs

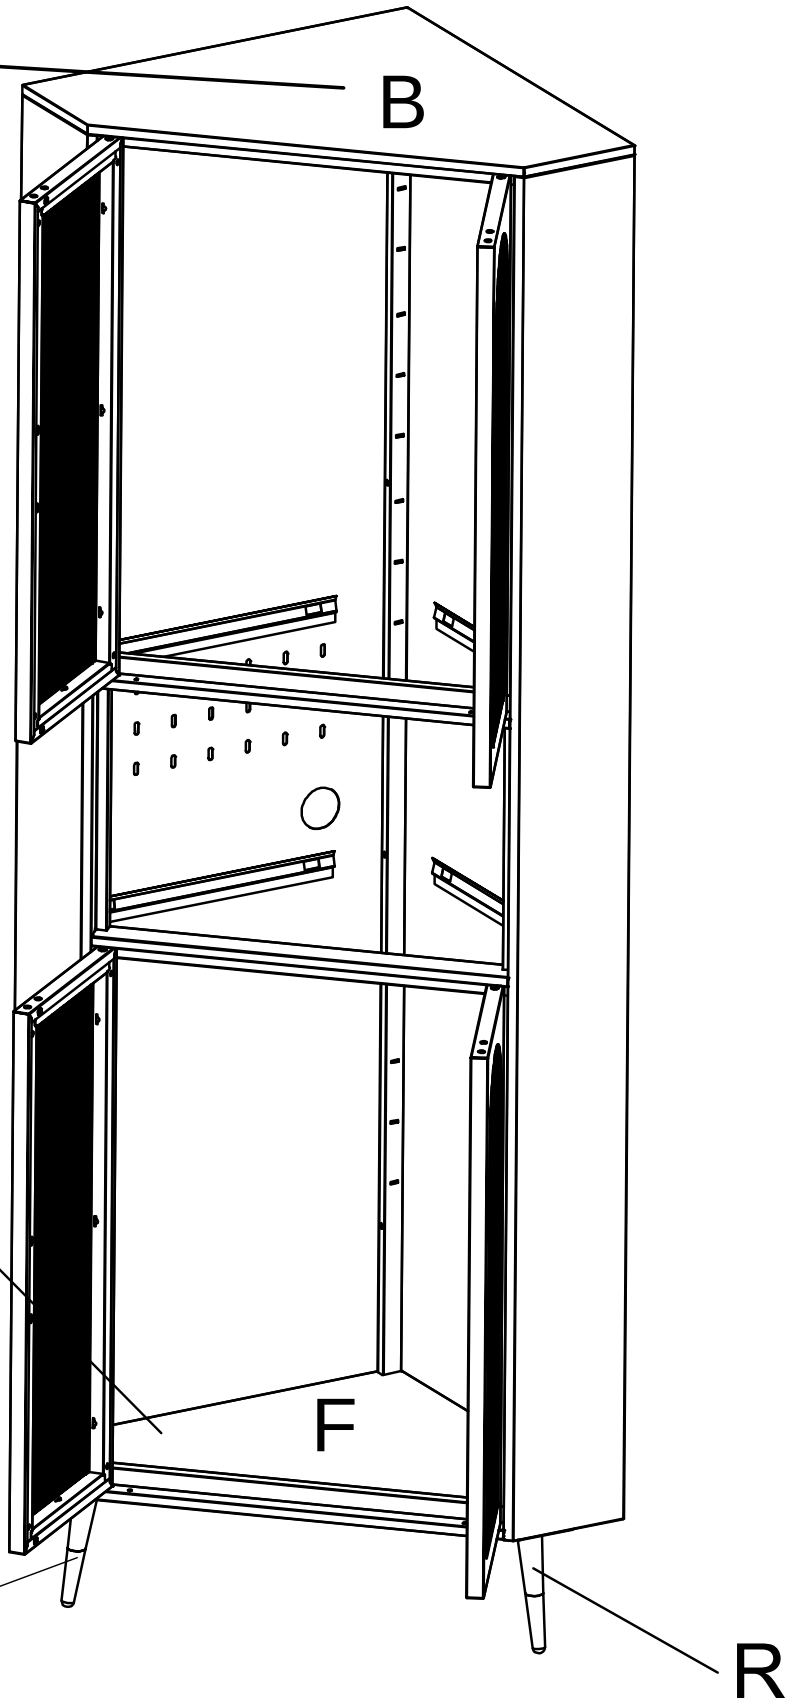

STEP 7 Install the shelf.



First to clip in T, then put G and E on it.

Tx14

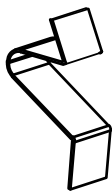

1. Insert bending side first
2. Fall down the flat side to secure


Now shelf can safely sits on it
Make sure the clips at corners
are at the same height.

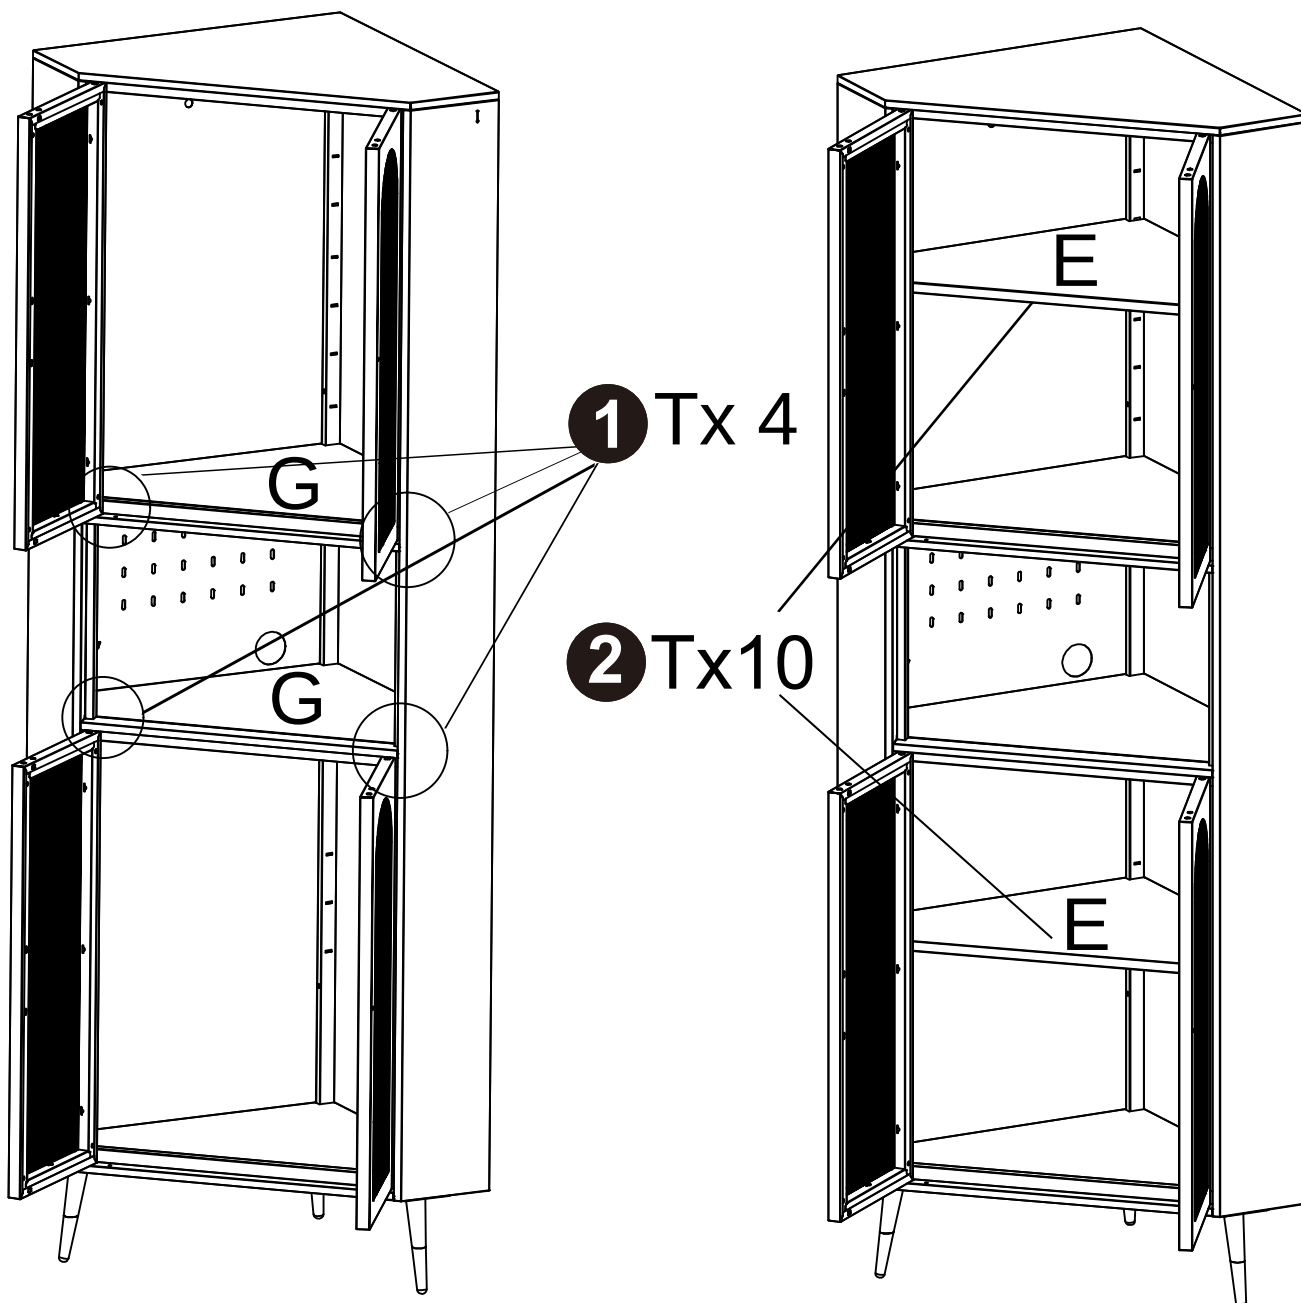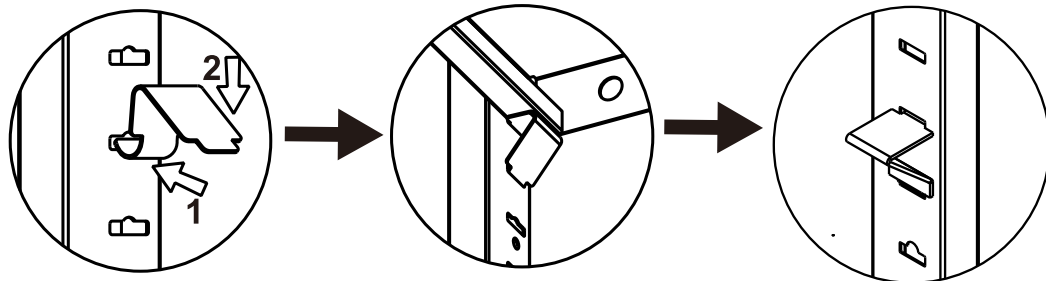

Nx5




Hook N to the C panel as shown.

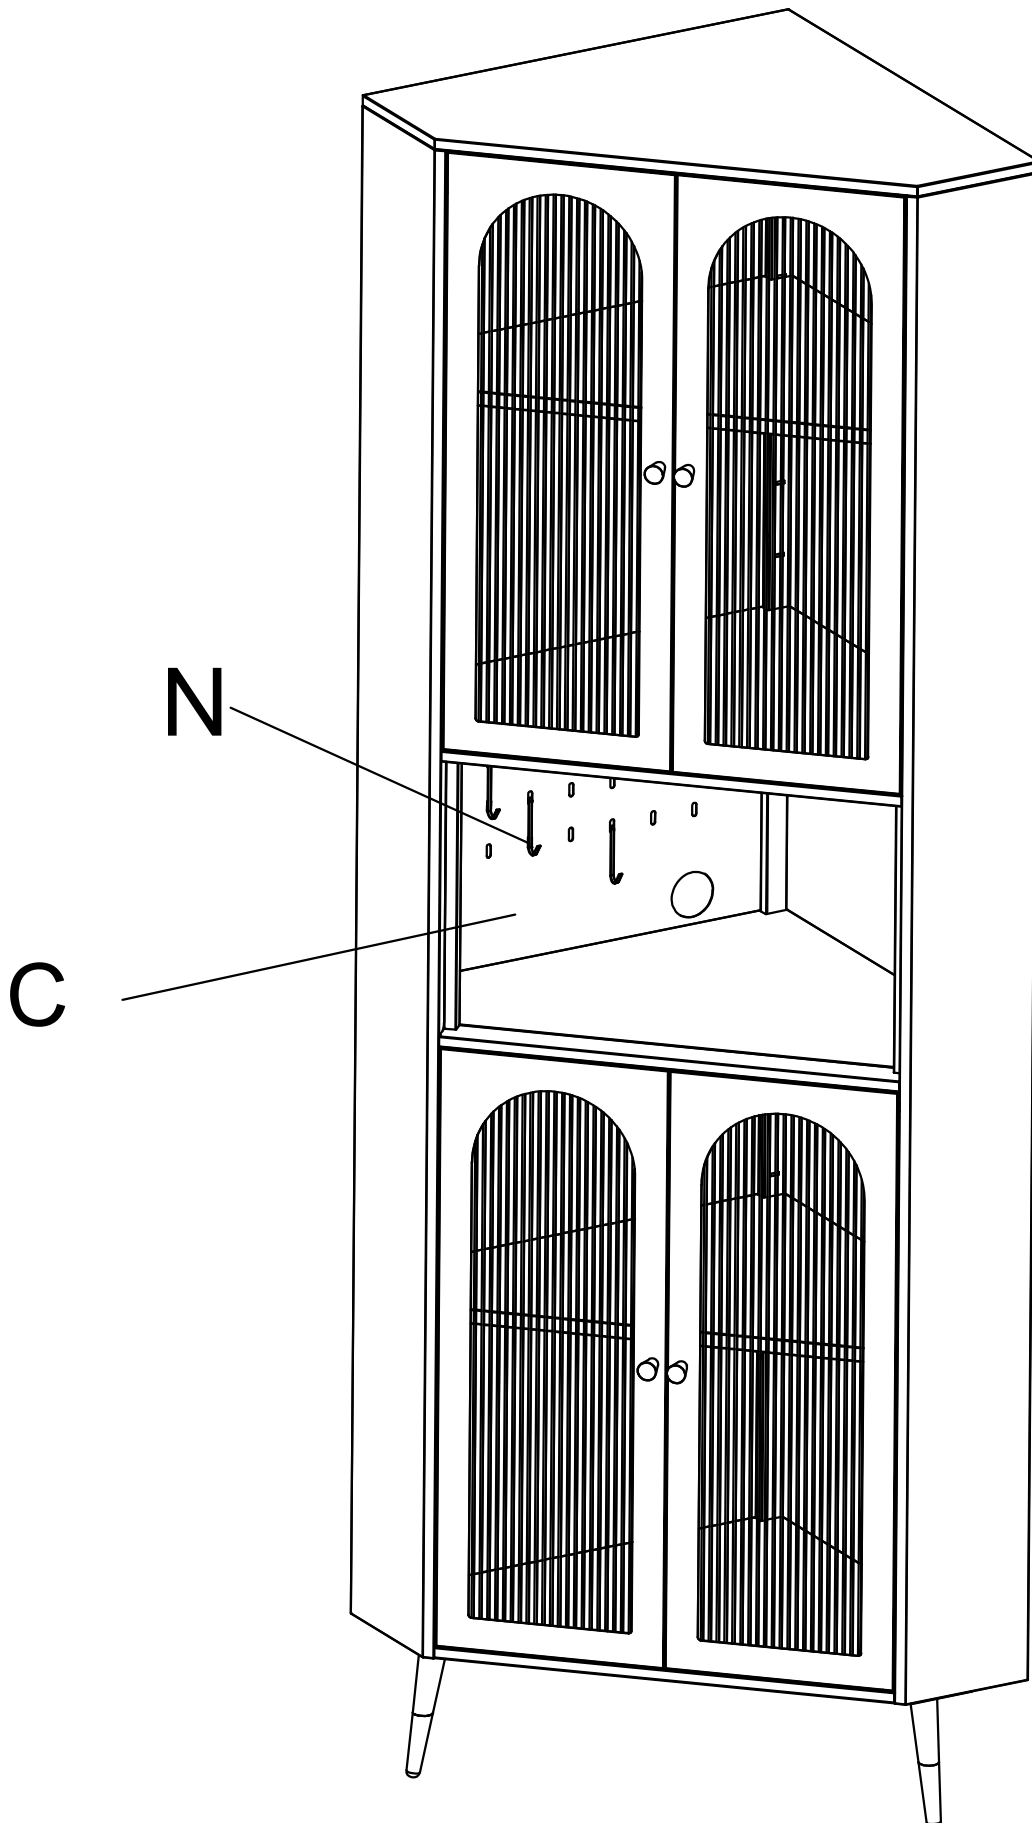


STEP 9 Install the anti-tilt device.


 This step **MUST** be fully completed to prevent the cabinet from tipping over.

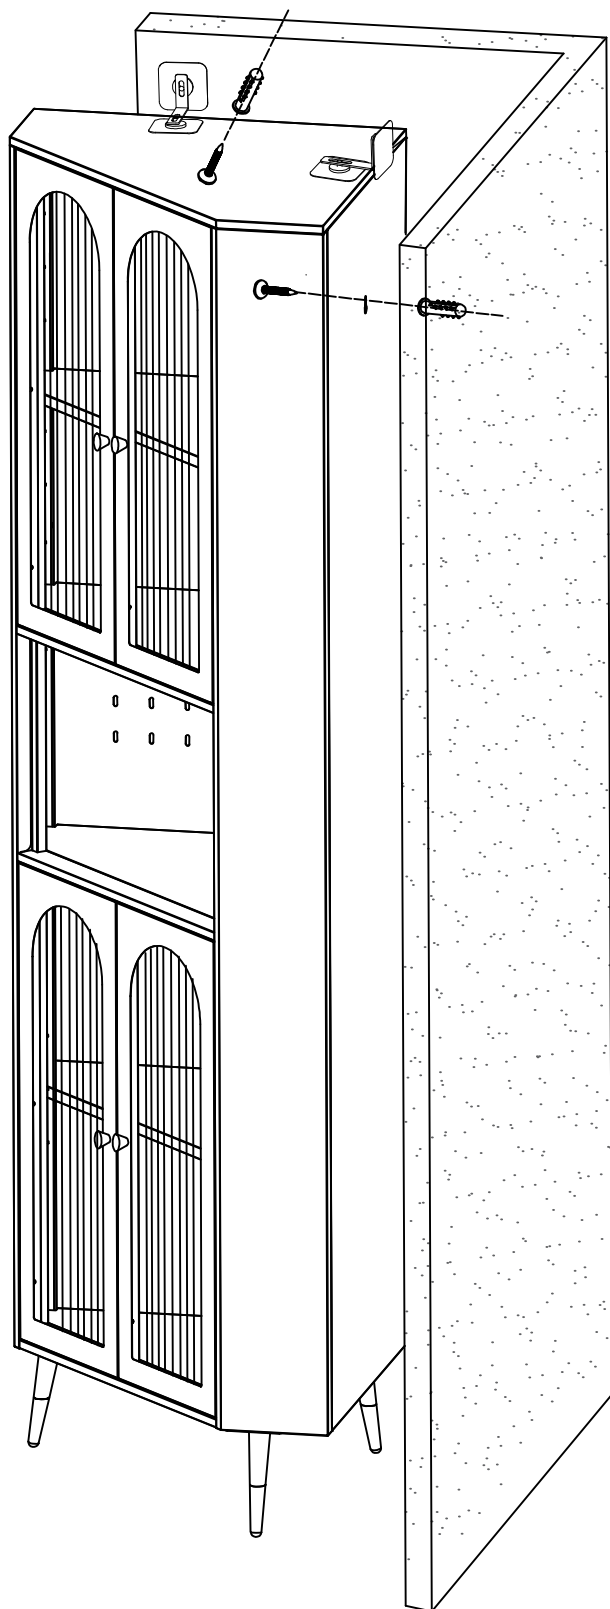


1 Install expansion screws

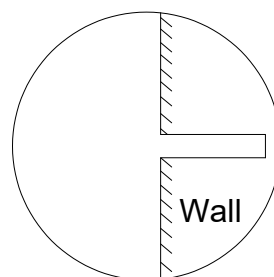

1. Drill holes on the wall

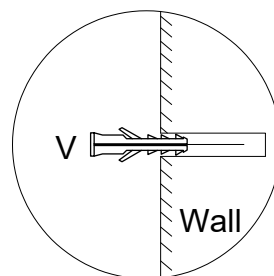

2. Insert V

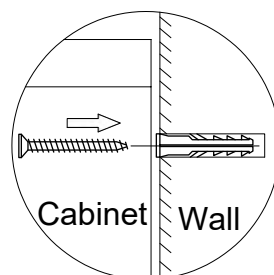

3. Fasten the screw from cabinet

2 Install anti-tip patch



1. Clean the surface

2. Peel off the sticker

3. Align it with the wall and the cabinet, then press firmly to remove excess air



4. Put the metal bar on



5. Put the cap on



6. Positioning the cabinet against to the wall, fully tighten all the nuts.