JAMIE YOUNG Co


INTERWOVEN MIRROR

SAFETY, INSTALLATION AND CARE INSTRUCTIONS


ITEM DESCRIPTION:	
ITEM NO: 6INTE-MIBL	NAME: Interwoven Mirror
MATERIAL TYPE: WOOD & BONE	
FINISH: NATURAL WITH LACQUER	
ITEM NET WEIGHT: 12.500KG	

PARTS INCLUDED

(A) WALL PLUGS (10)
(B) SCREWS (10)
(C) CLEATS (2)
(D) MIRROR (1)

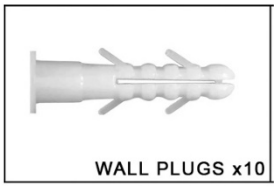

(A)

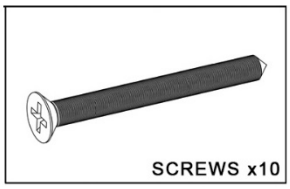


(B)


TOOLS NEEDED

(IF APPLICABLE)

(A) ELECTRONIC STUD FINDER
(B) DRILLING MACHINE
(C) PENCIL
(D) BUBBLE LEVEL

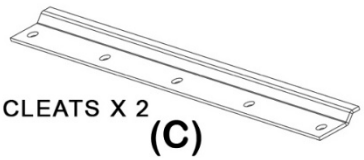

(C)

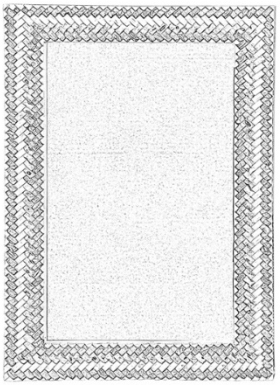

(D)

www.jamieyoung.com

JAMIE YOUNG Co

INTERWOVEN MIRROR

SAFETY,INSTALLATION AND CARE INSTRUCTIONS

WARNING


YOUNG CHILDREN MAY BE INJURED BY TIPPING PRODUCTS, SO THE USE OF TIPPING RESTRAINTS ID HIGHLY RECOMMENDED. THIS PRODUCT IS ONLY A DETERRENT AND NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. THE MANUFACTURER ASSUMES NO LIABILITY FOR IMPROPER INSTALLATION OR EXCESSIVE LOADS PLACED ON SCREWS, CLEATS OR STRAPS. WHEN PROPERLY INSTALLED, THIS RESTRAIN WILL HELP PREVENT THE PRODUCT FROM TIPPING OVER.

SAFETY INSTRUCTIONS


THIS HANGING SYSTEM IS INTENDED FOR DRYWALL STUD MOUNTING ONLY. IF YOUR WALLS ARE MADE OF CONCRETE, BRICK OR PLASTER, PLEASE CONSULT YOUR LOCAL HARDWARE STORE FOR ASSISTANCE. FOR SAFETY AND EASE OF INSTALLATION, WE RECOMMAND HAVING TWO PEOPLE PERFORM THE INSTALLATION.



ASSEMBLU INSTRUCTIONS

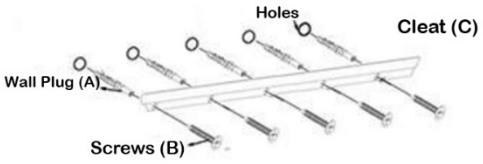

1. Unpack all the parts and place on a protected work surface.
2. Hold mirror(D) at the desired location, so that mounting cleat (C) will be over a stud. With a pencil, mark the centre-top of the mirror(D) on the wall.
3. Measure down from the centre-top of the panel to the centre-top of the mounting cleat on the back of the panel, and mark this point on the wall. Make a hole in the wall with use of a drill. Before drilling additional holes, put the bubble level on the wall cleat (C) to test and make sure the wall cleat is level. Then hold the cleat (C) against the wall and drill holes for all wall plugs(A) as shown in the illustration. Please the respective plugs (A) in the holes, then set the cleat(C) on Top of them.
4. Attach the wall cleat(C) by screwing screws(B) into the inserted plugs. Then, tightly screw all mounting screws(B) through remaining holes of Wall cleat(C).
5. Mount the mirror(D) to the wall by sliding the mirror until the mounting Cleat rests on the wall cleat(C).
6. Installation is complete.

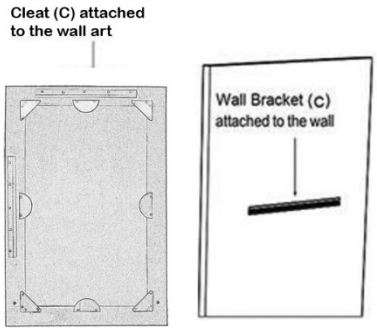

CARE INSTRUCTIONS

To clean, wipe gently with soft, dry cloth. Avoid the use of harsh chemicals Or abrasive cleaners, as they may damage the finish.

www.jamieyoung.com