

ASSEMBLY INSTRUCTION

SRN-CB6001T

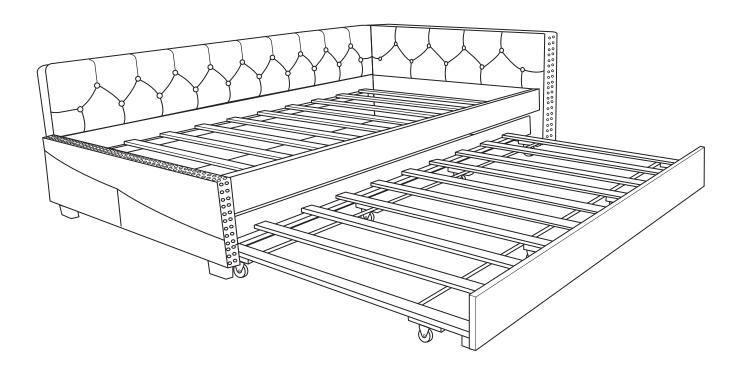

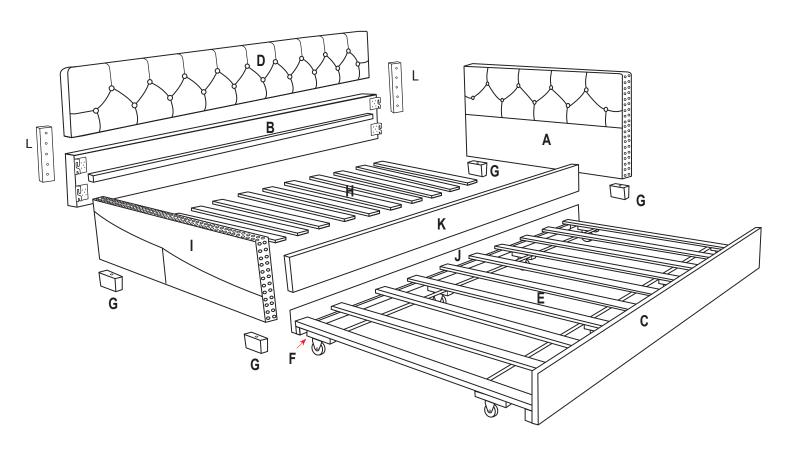

NO	PART LIST ((IN CARTON 1 OF 2)	QTY
A	Headboard		1 pcs
I	Footboard		1 pcs
Н	Bed Slat		10 pcs
E	Trundle Bed Slat		10 pcs
F	Trundle Slat Cube		8 pcs
G	Bed Leg		4 pcs
L	Bed frame Support Rail		2 pcs

NO	PART LIST (IN CARTON 2 OF 2)	QTY
D	Back Support	1 pcs
В	Side Rail (i)	1 pcs
K	Side Rail (ii)	1 pc
С	Trundle Long Panel (i)	1 pcs
J	Trundle Long Panel (ii)	1 pcs


NO	HARDWARE LIST	QTY
1	JCBB M8 x 20 mm	12 pcs
2	JCBC M6 x 30 mm	14 pcs
3	JCBC M6 x 70 mm	4 pcs
4	CSK M4 x 16mm	32 pcs
5	CSK M4 x 30mm	40 pcs
6	CSK M4 x 35mm	16 pcs
7	Wheel	8 pcs
8	Allen Key M4(100mm)	1 pc
9	Allen Key M5(65mm)	1 pc
10	Flat Washer M6	14 pcs
1 1	Dowel M8	8 pcs

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.


CAUTION:


- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.



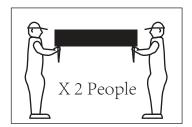





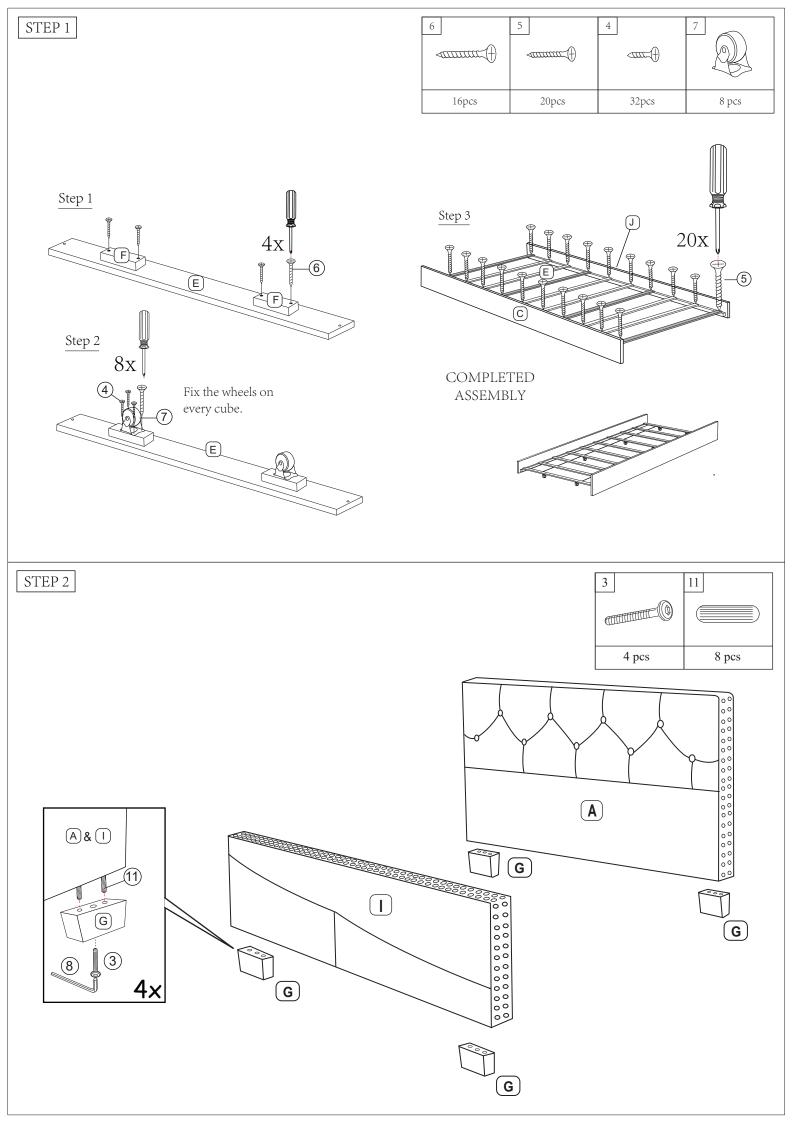





Step 1

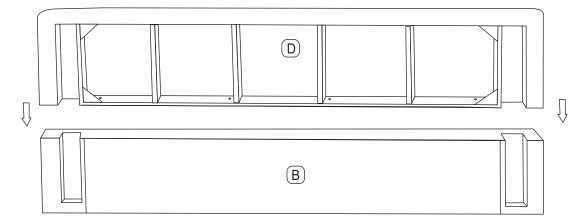

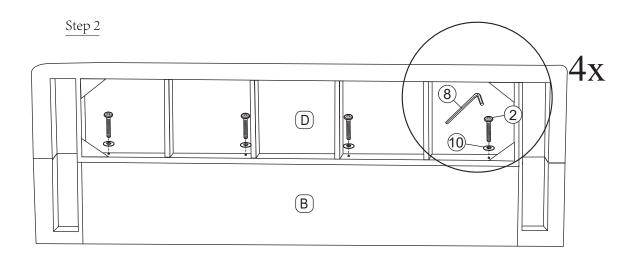

Step 3

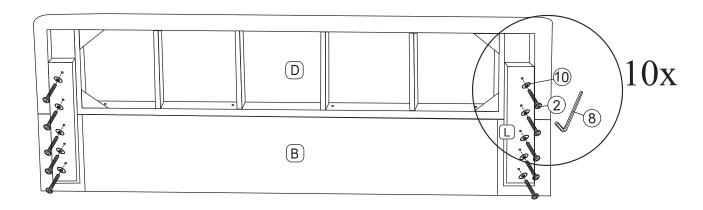

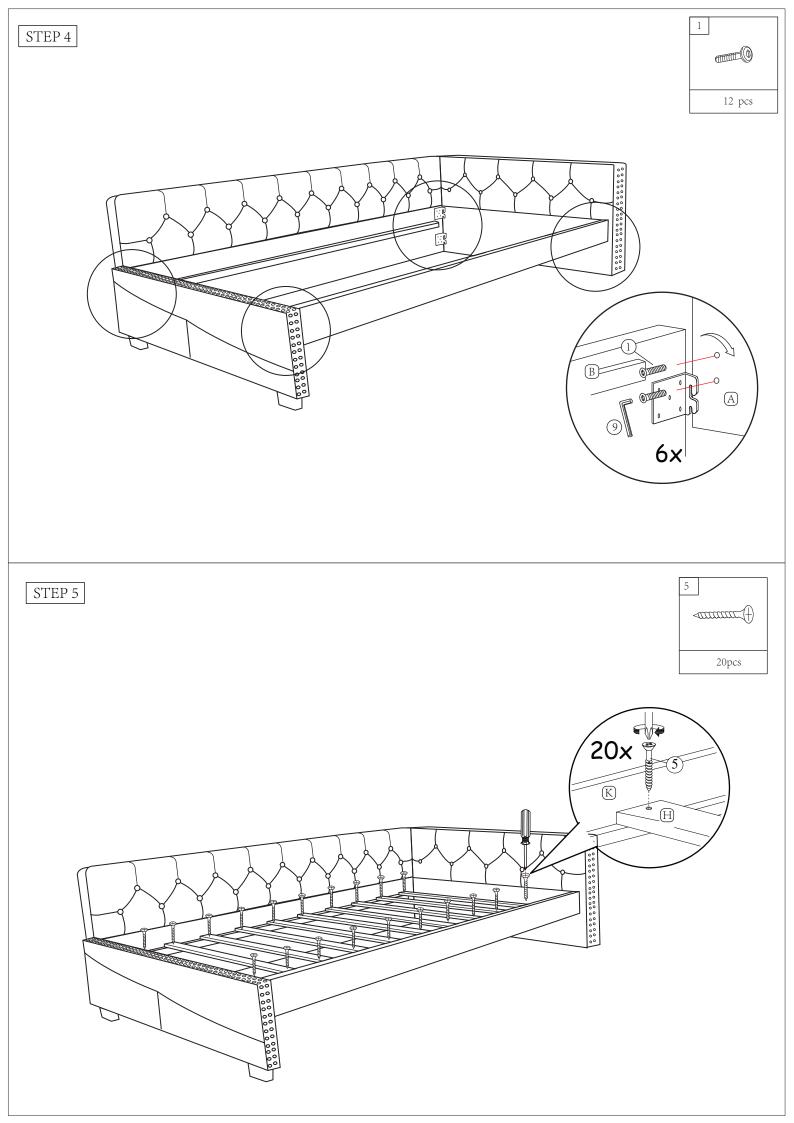

COMPLETED ASSEMBLY

