


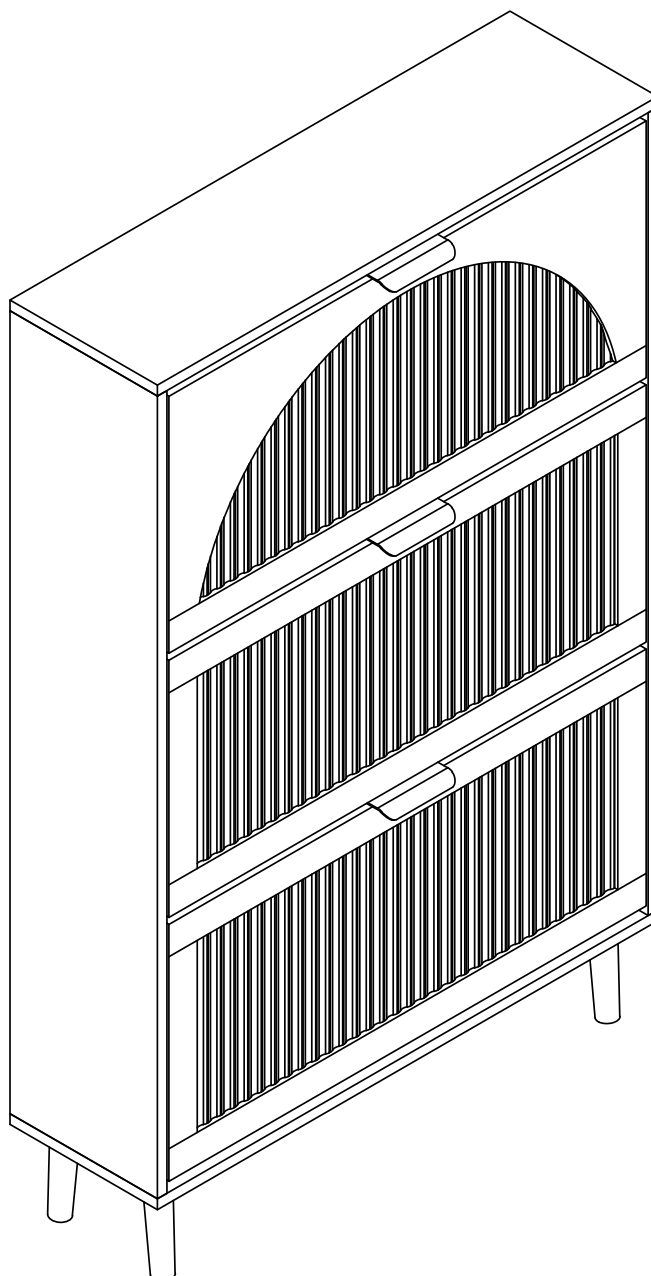




Please note: Items cannot be returned once assembled

Installation & Assembly


Version:1.0



IT IS RECOMMENDED
TO USE POWER TOOLS

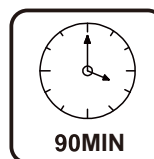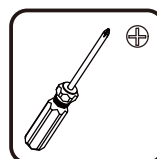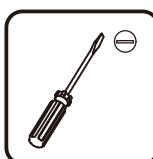

90MIN

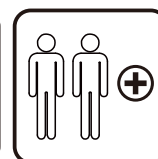

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---




If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US?

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

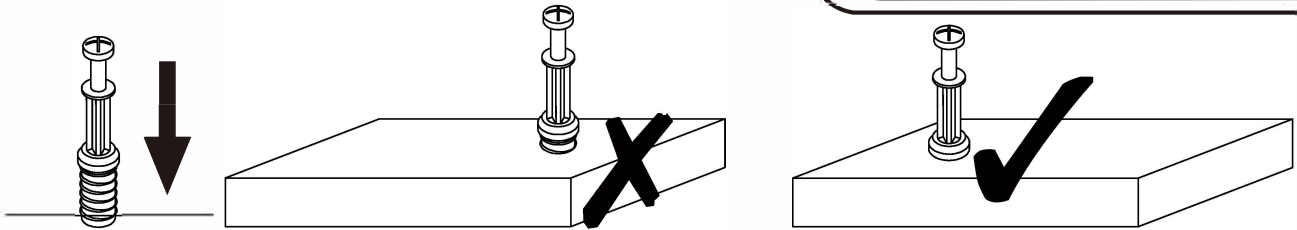


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

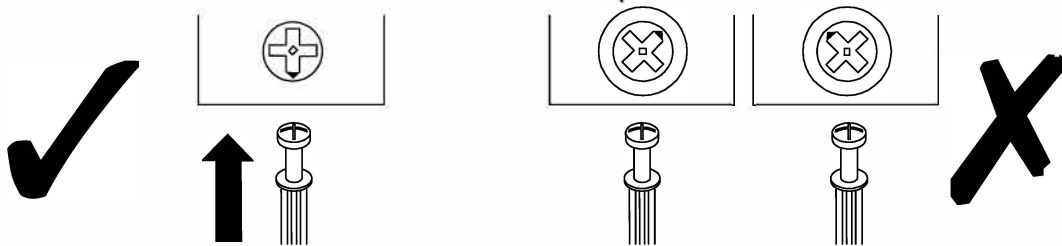










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.



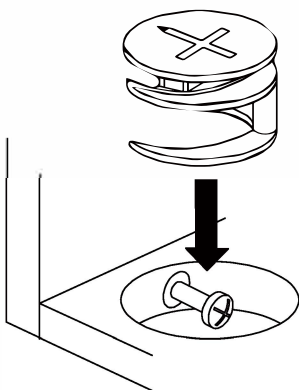





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










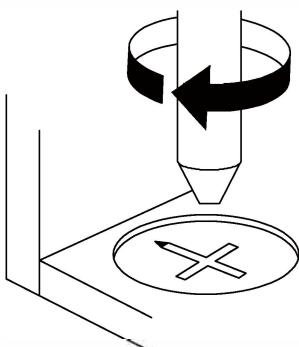



EN_Turn cam lock clockwise to tighten.

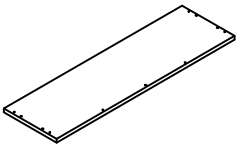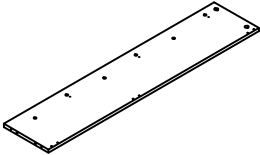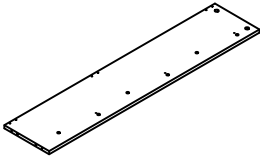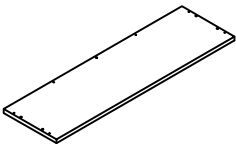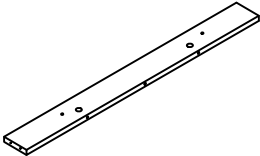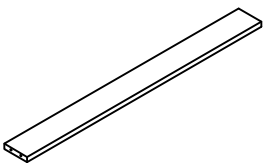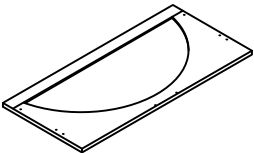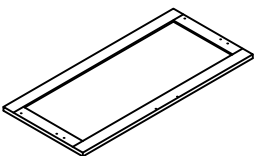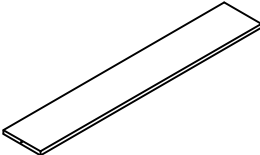NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x2	
⑩		x3	

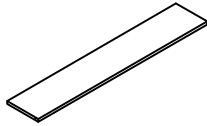NO.		QTY	SPARE
⑪		x6	
⑫		x1	
	 Hardware Kit	x1	

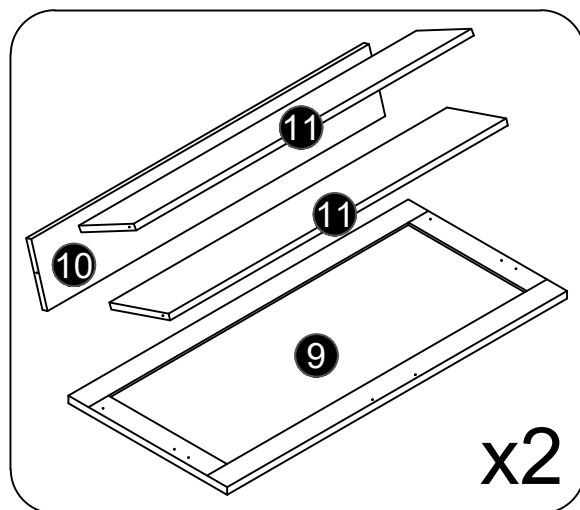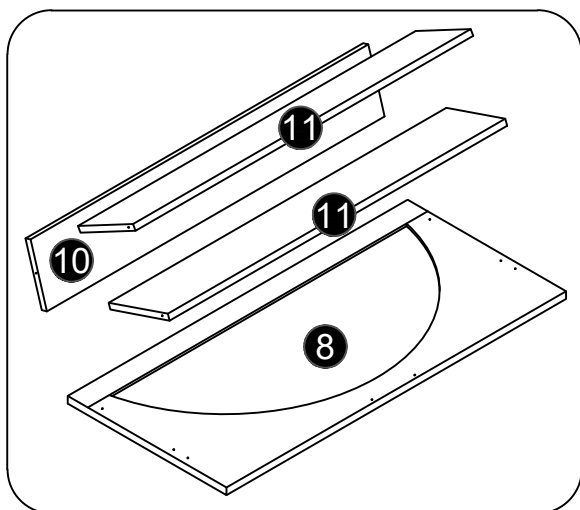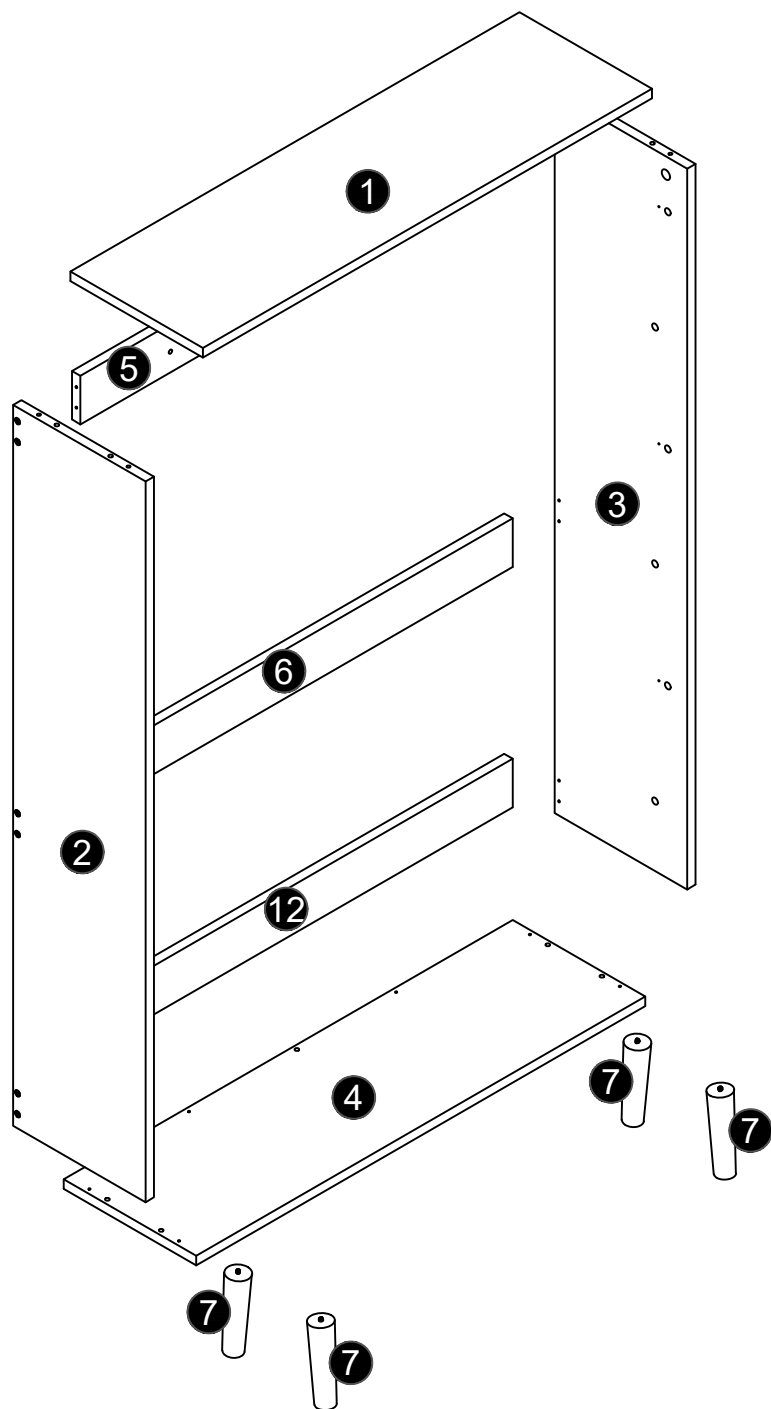

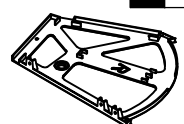
A x6 Ø6x35mm 	B x6 Ø15x10mm 	C x10 Ø6x30mm 	D x18 Ø4x35mm +1(spare) 	E x42 Ø3.5x12mm +2(spare) 	F x6 +1(spare) 
G x6 +1(spare) 	H x6 +1(spare) 	I x1 	J x4 	K x20 Ø4x14mm +2(spare) 	L x3 
M x4 	N x3 	O x2 O-1 O-2  	P x12 +2(spare) 	Q x6 	R x3 

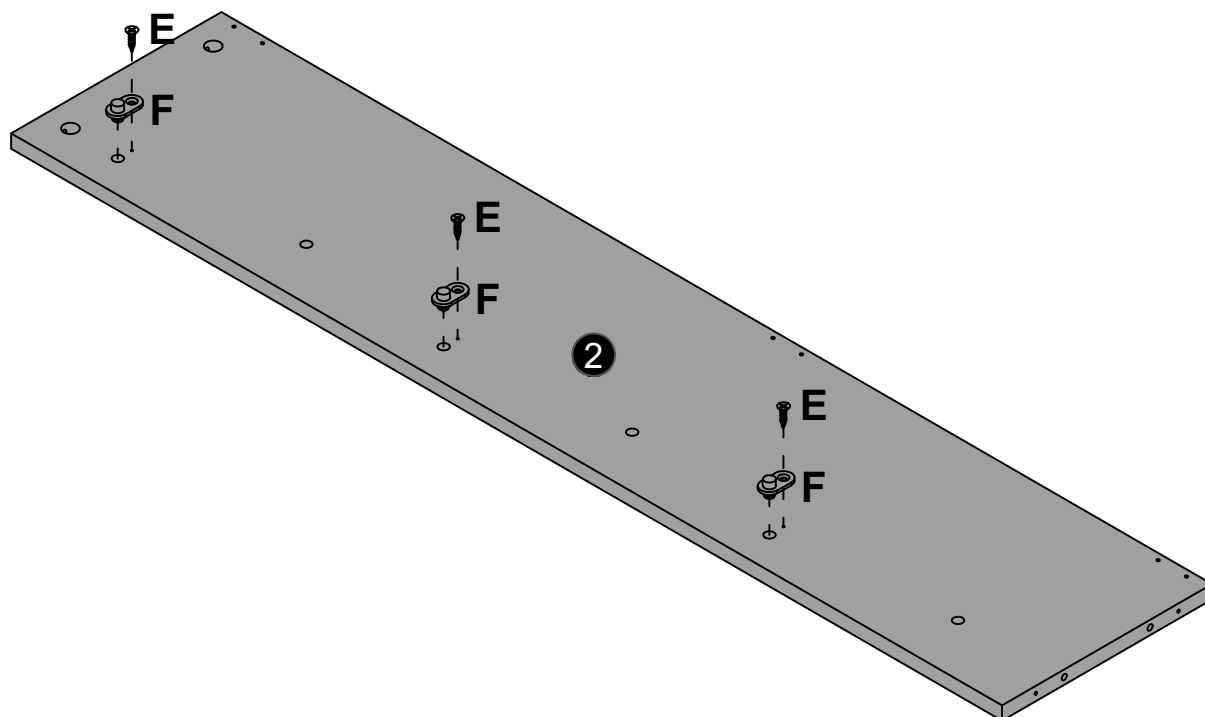E x3**F** x3**01**



E x3





F x3

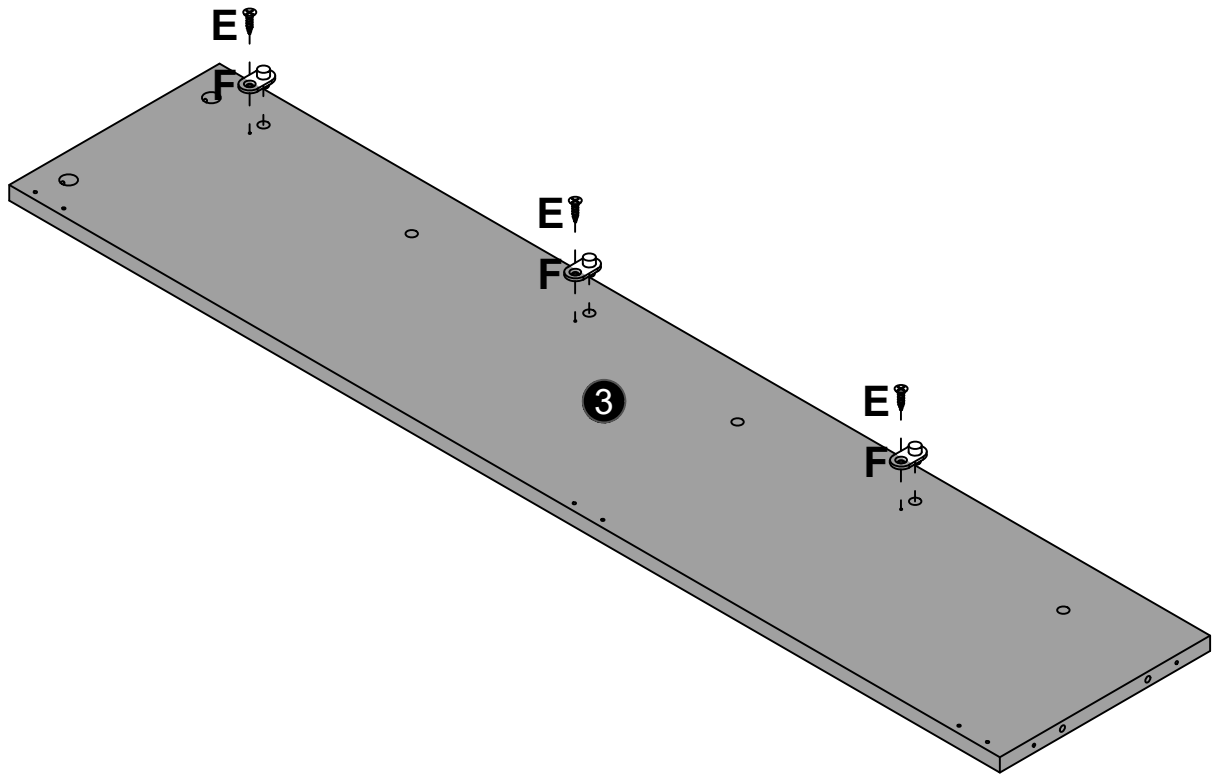


D x6

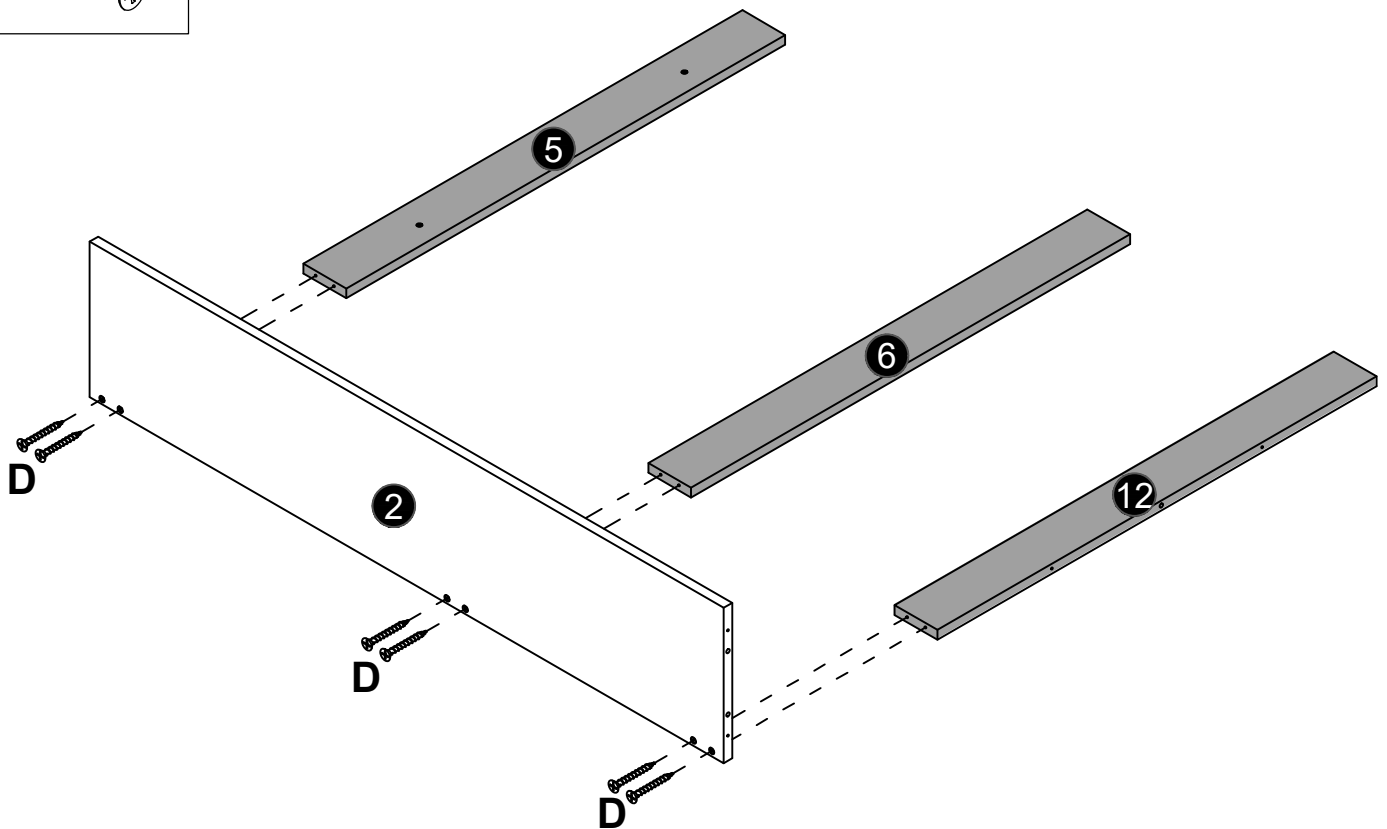



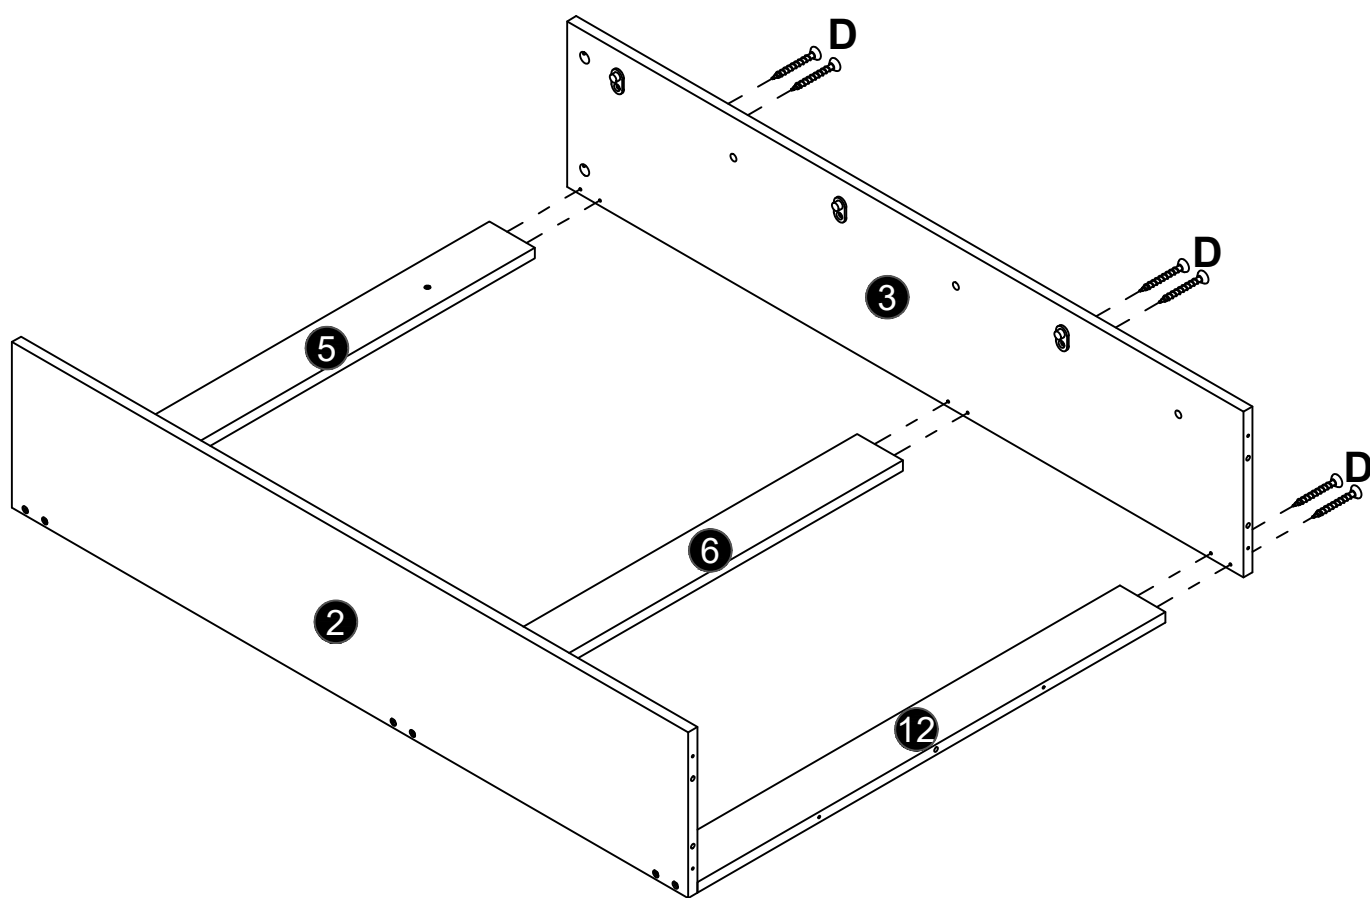


C x5



D x6

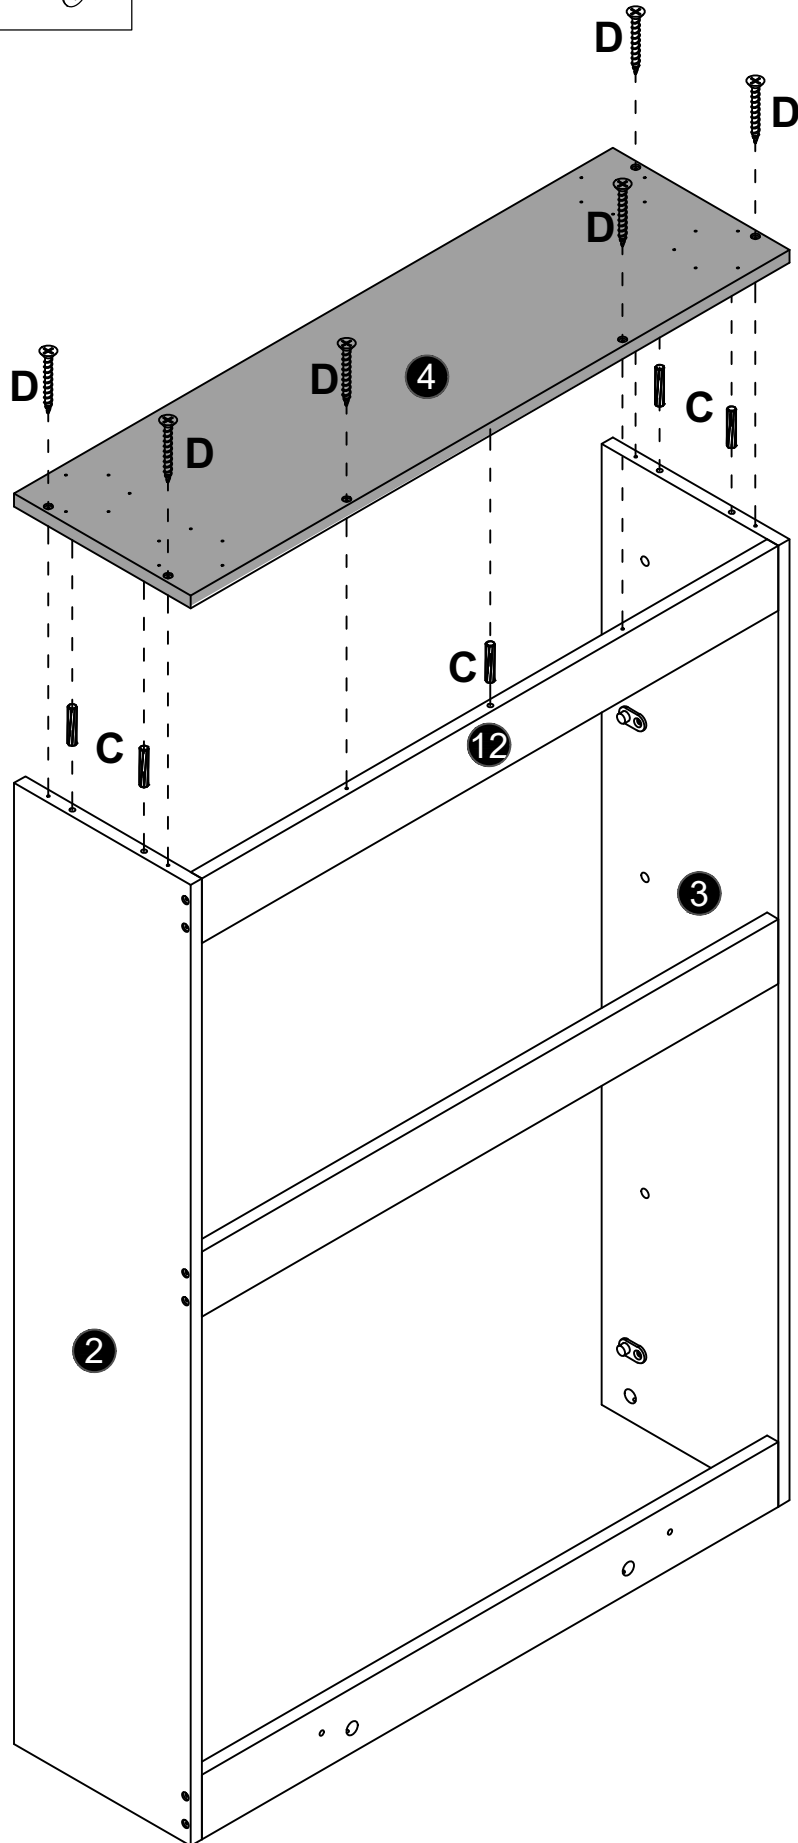


J x4




K x20




06

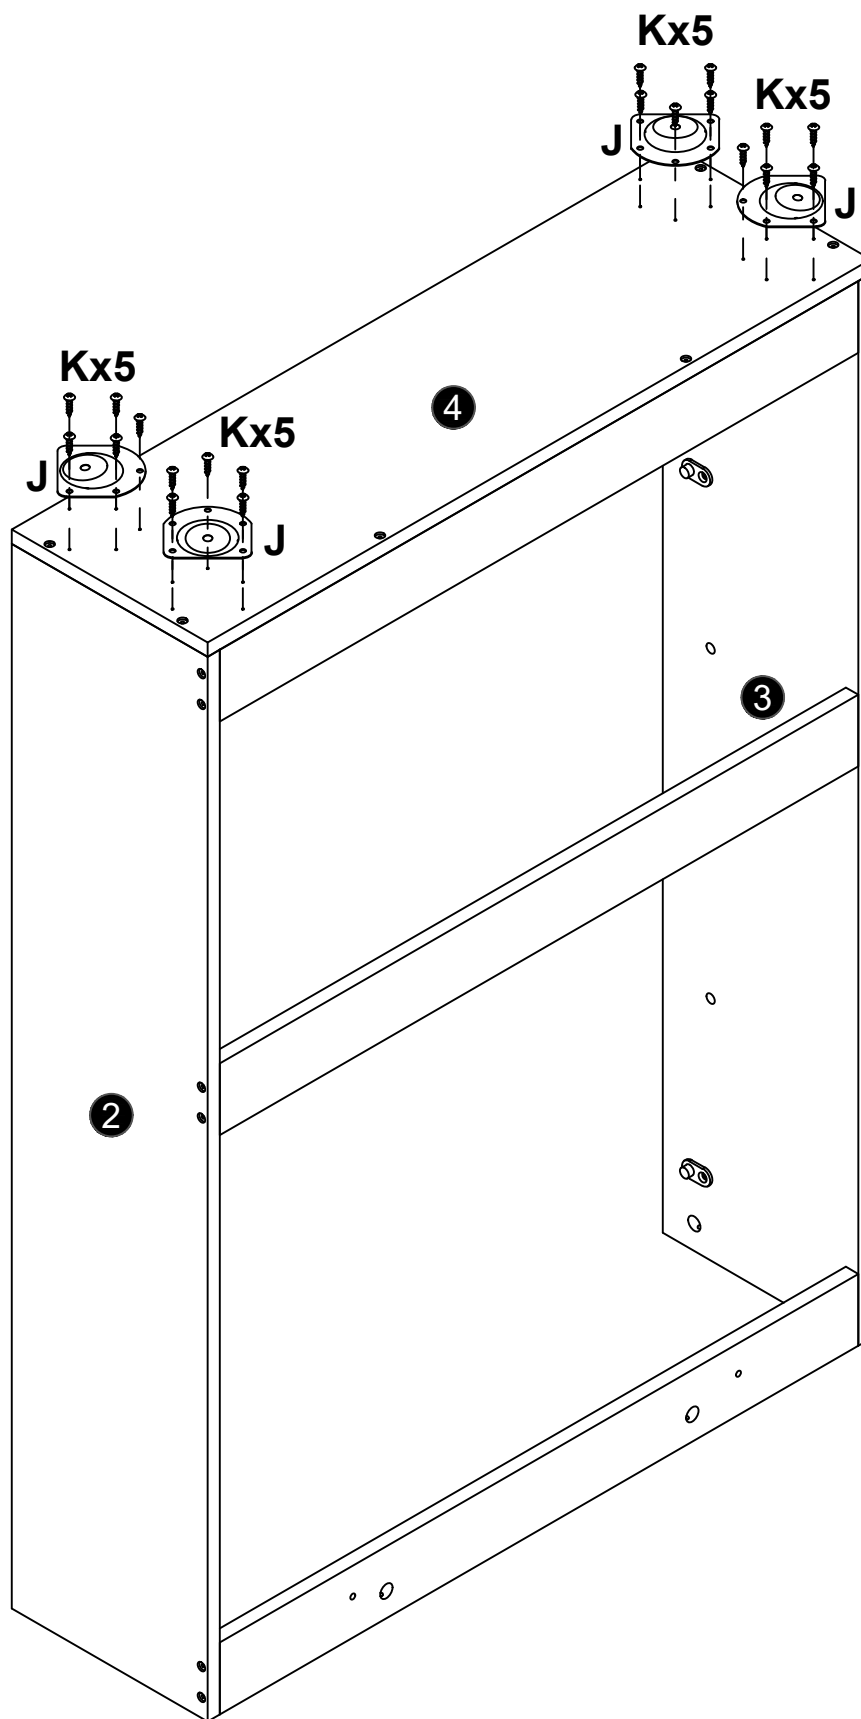


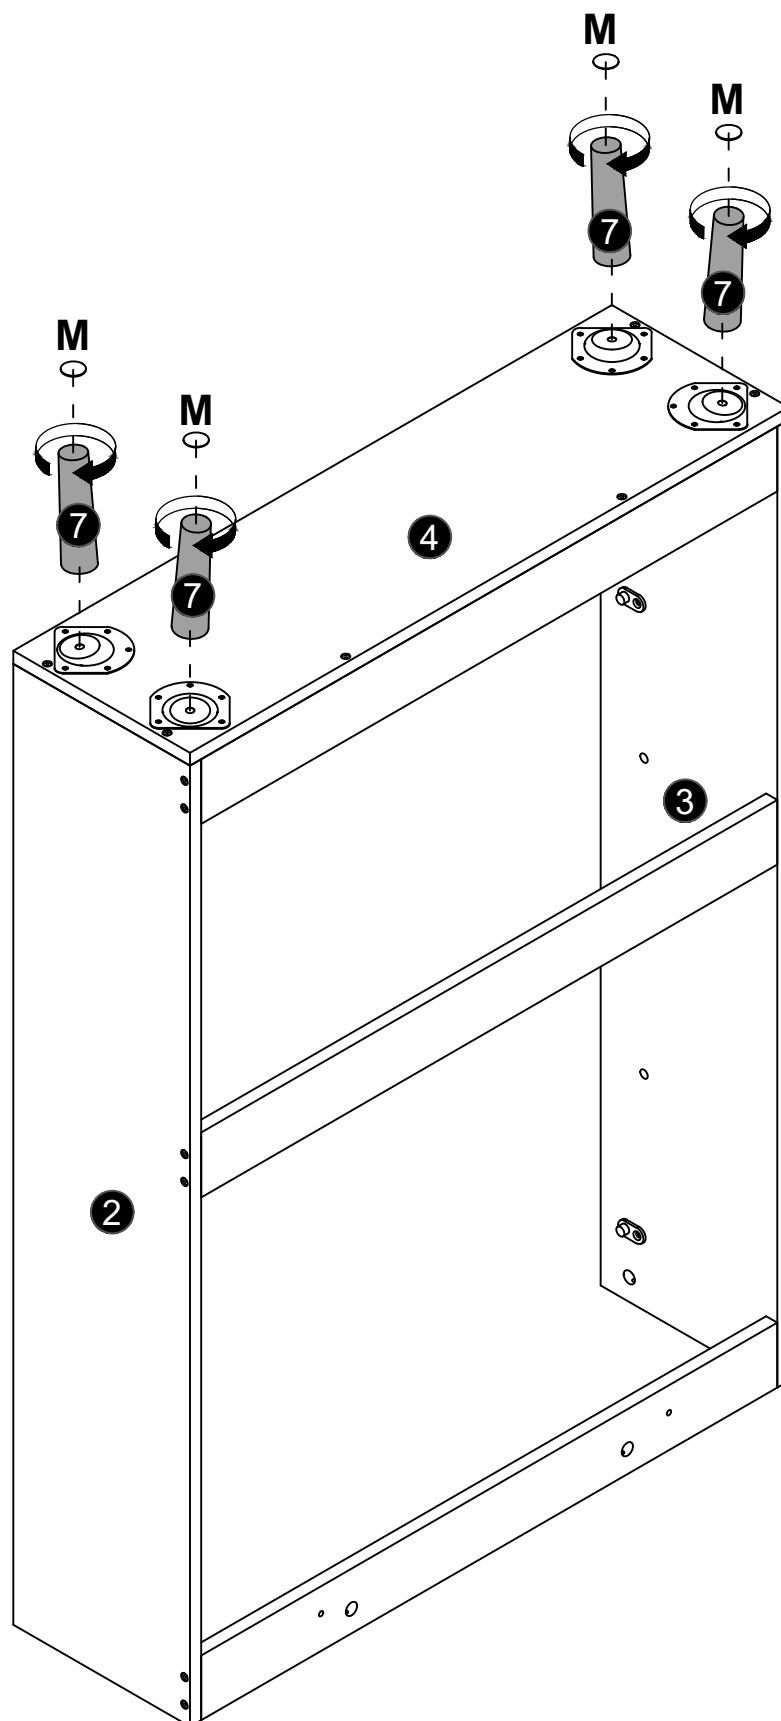

A x6



08

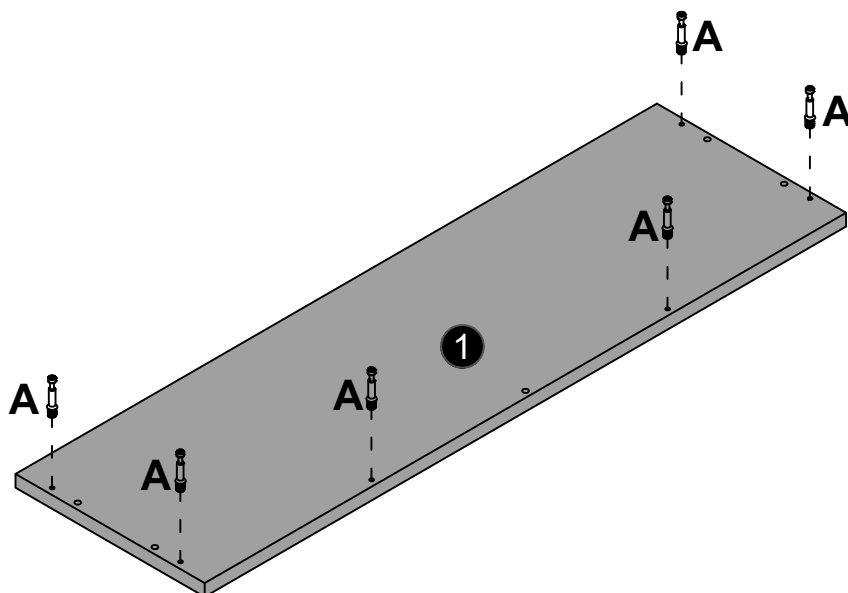


B x6



C x5




09

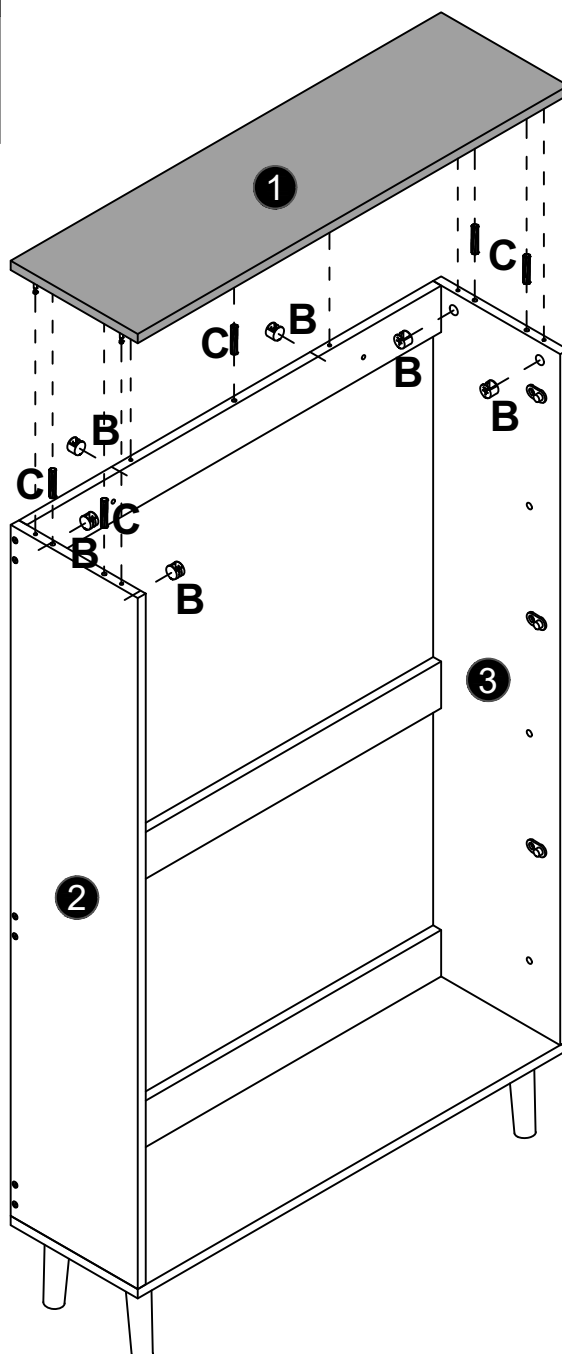

O x2



O-1 O-2

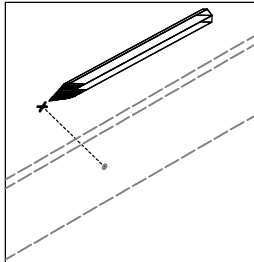

(1)x2

WALL

+
drilling hole
Ø6x30mm

(2)x2



First fix the anti-rewind screw in the reserved hole of the product.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

O-1

(3)x2

WALL


O-1

(4)x2

O-2

Then, put the expansion bolt into the hole




Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

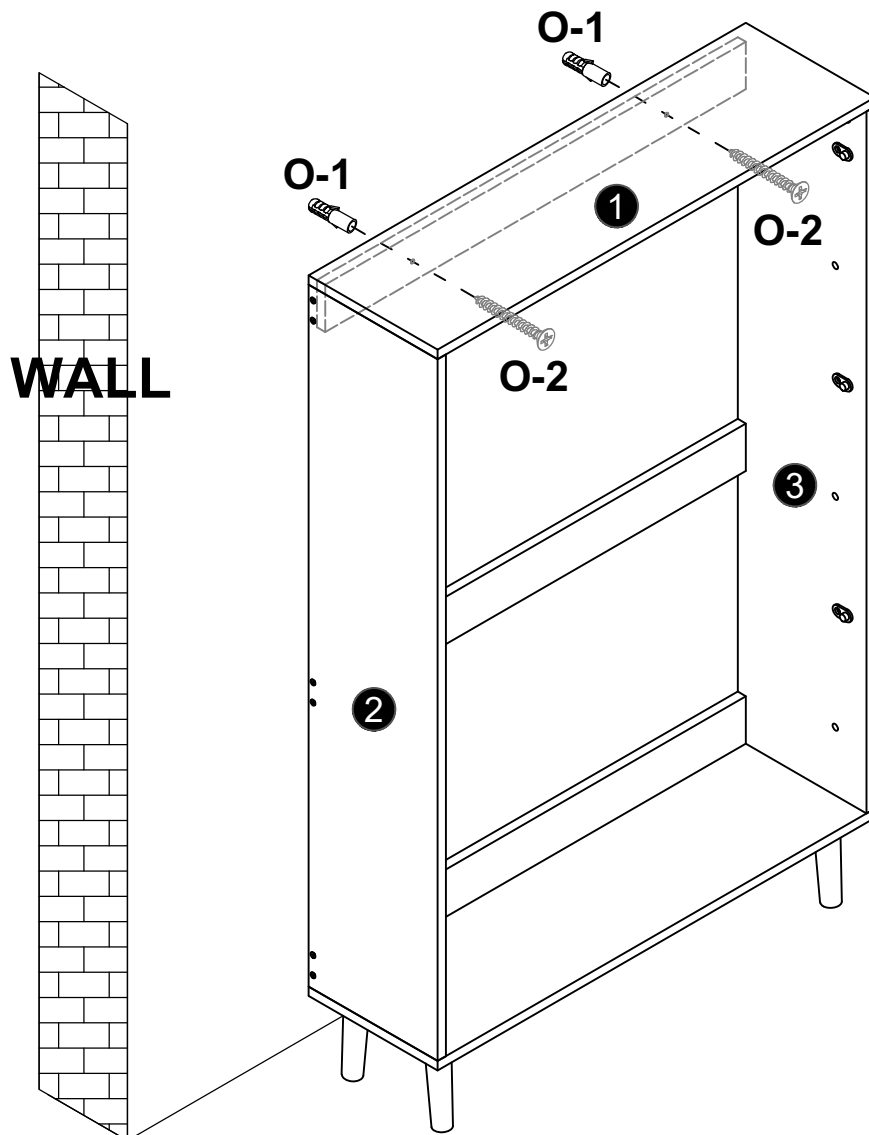

E x6

L x1


R x1

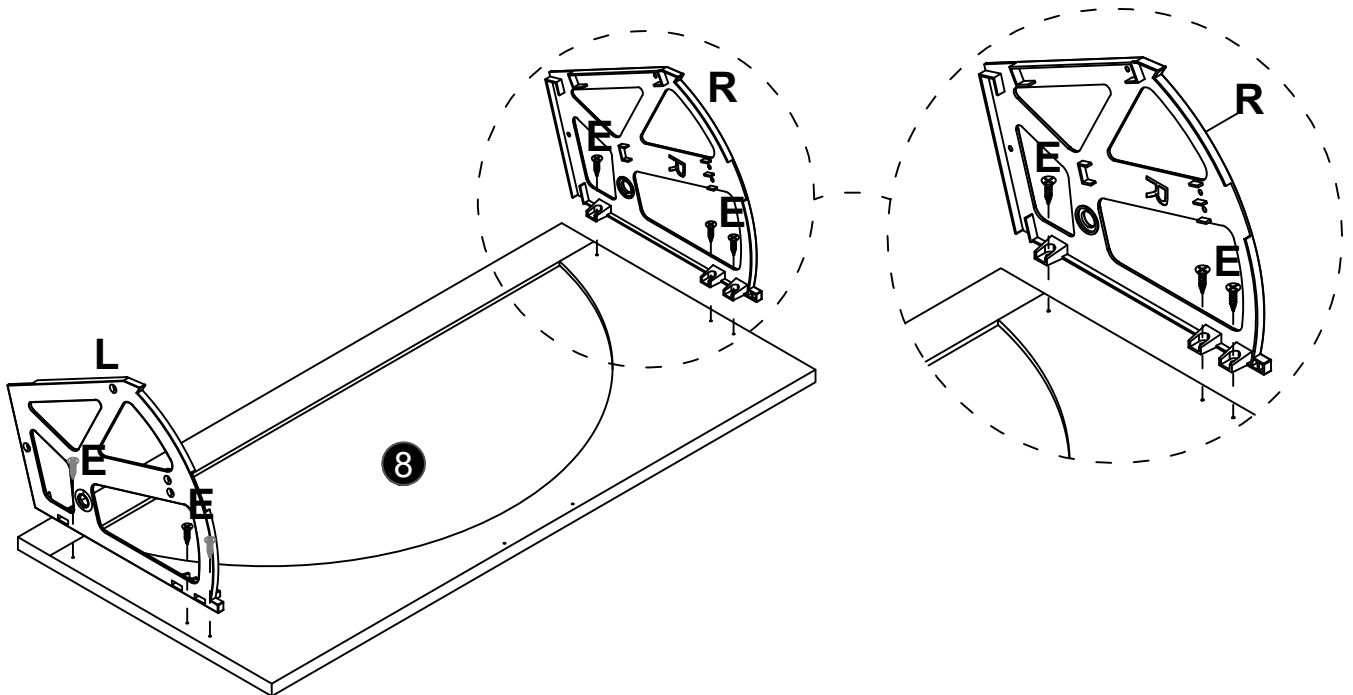

E x2






Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

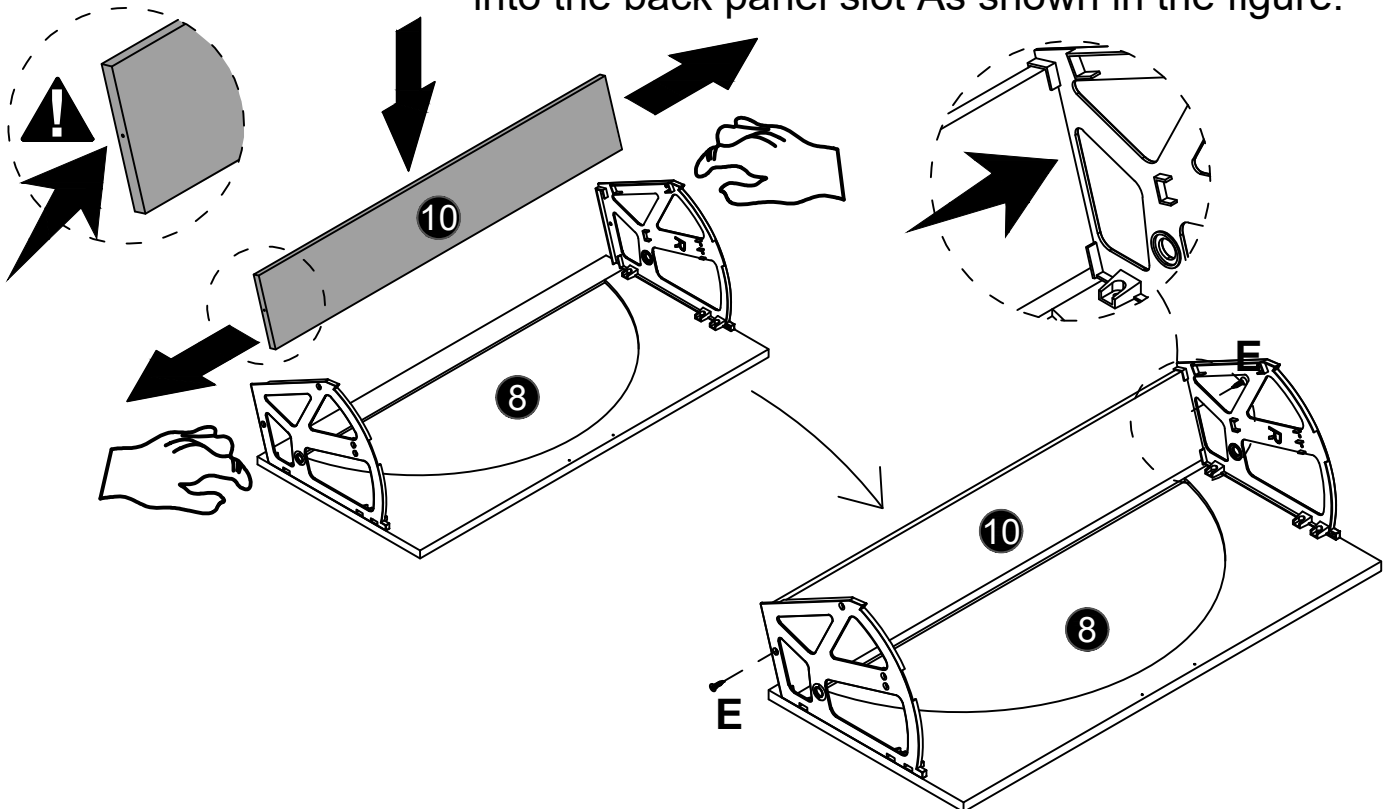

E x2**13**




Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

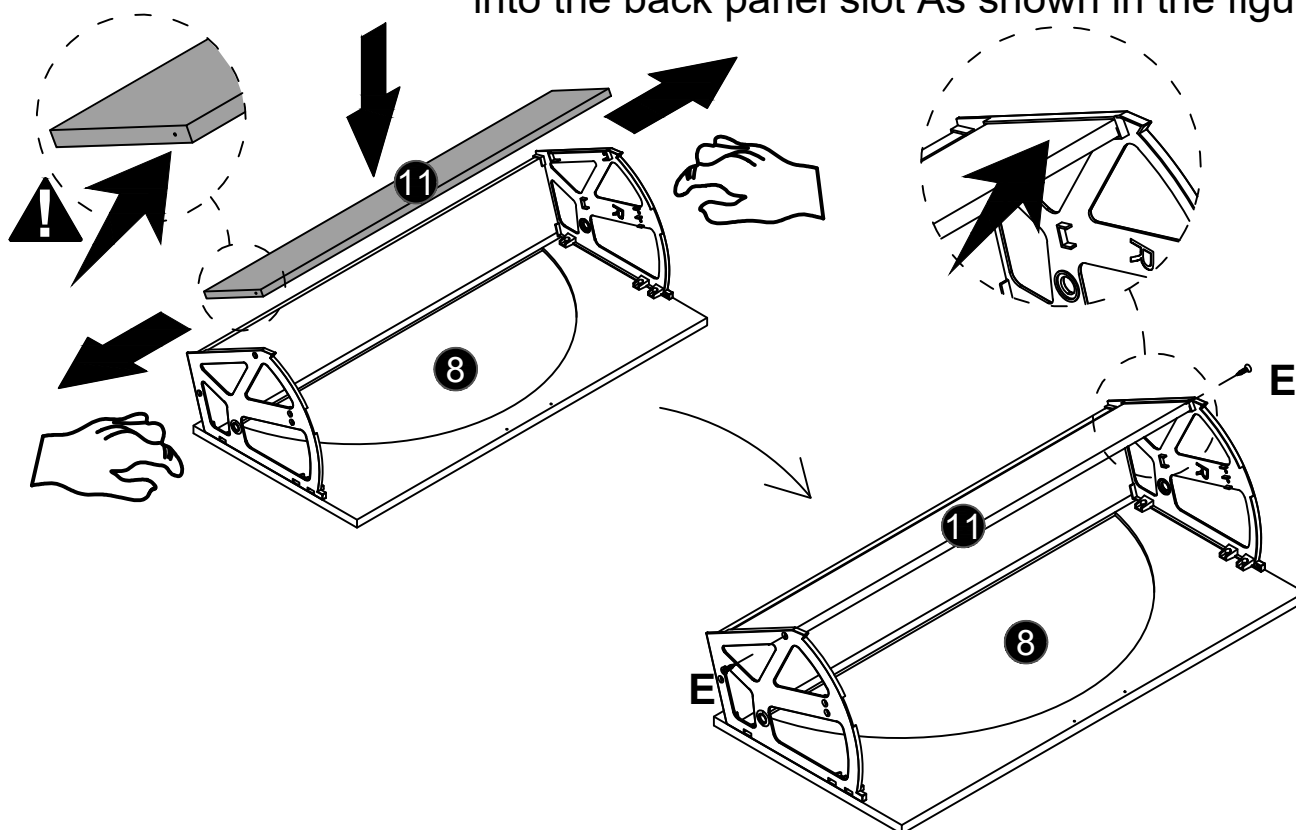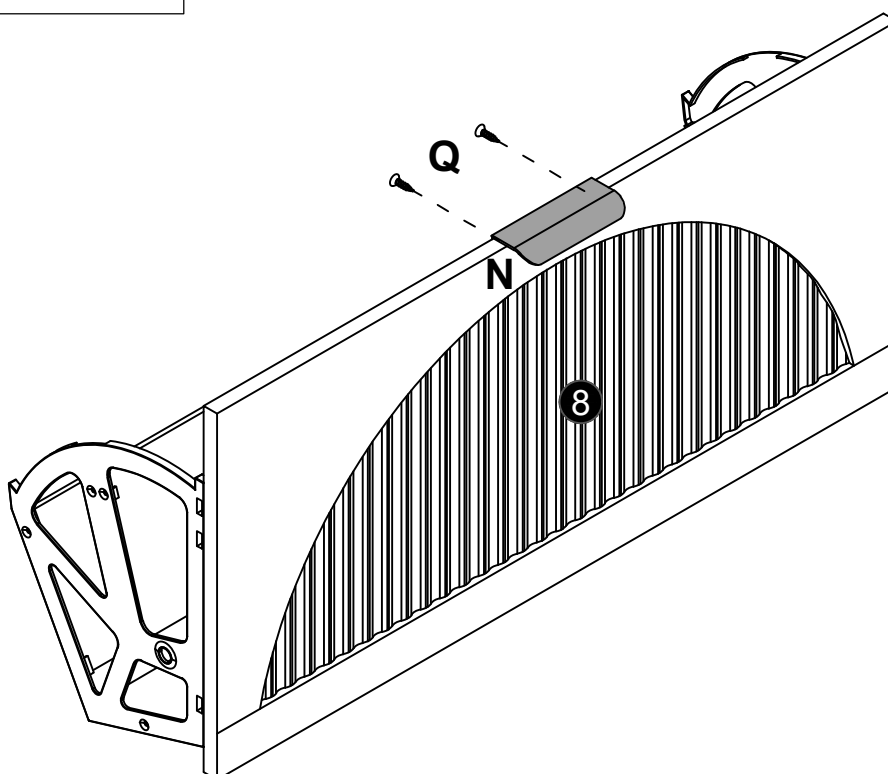**N** x1**Q** x2**14**

E x12

L x2

R x2

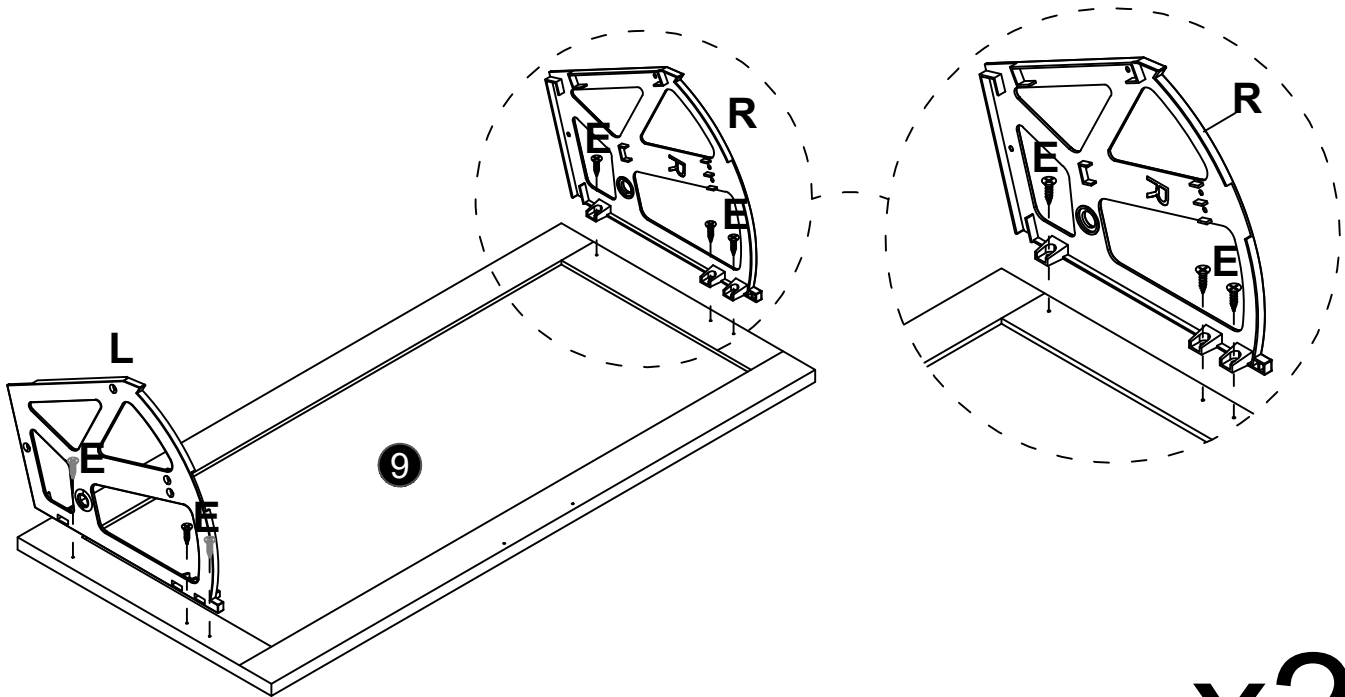


x2

E x4



Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

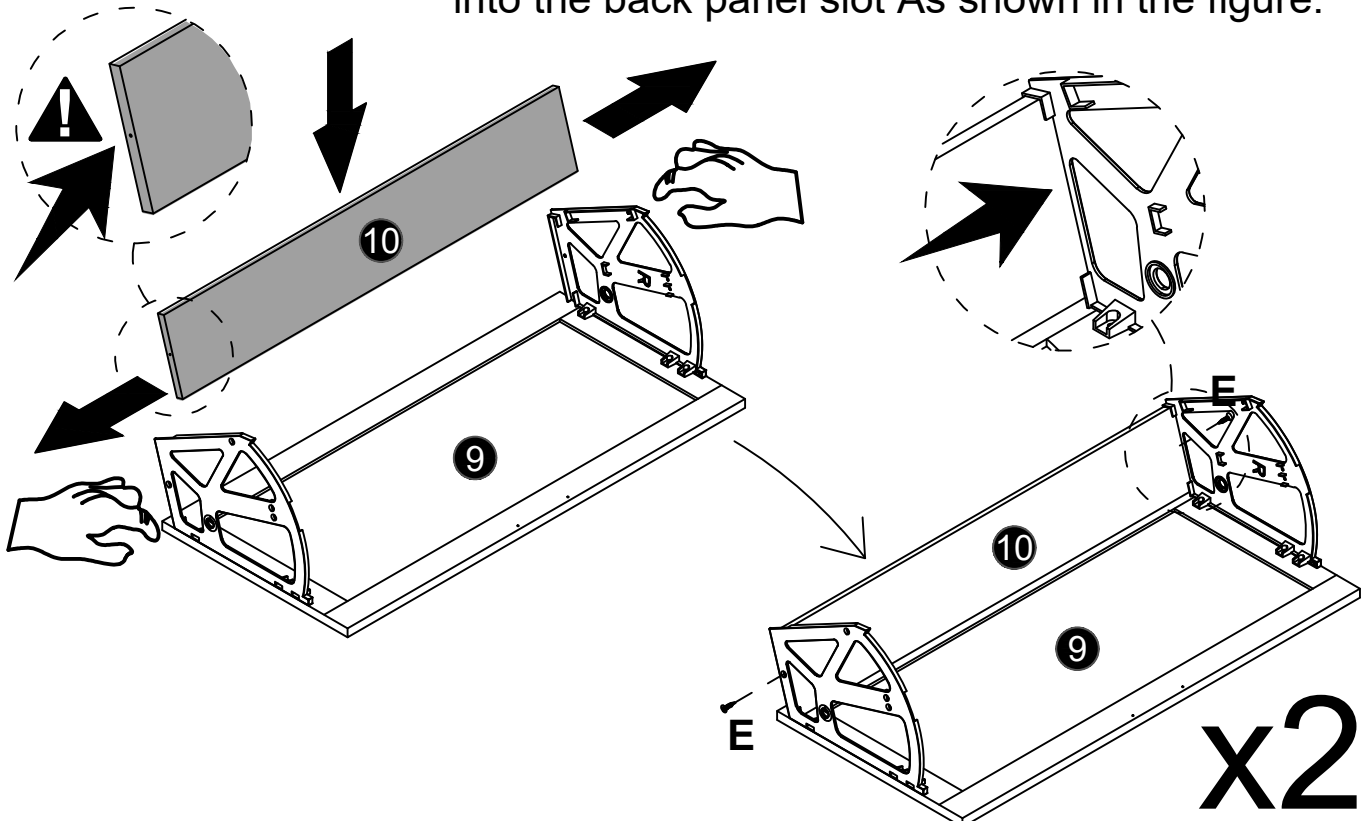


x2

E x4

17


Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

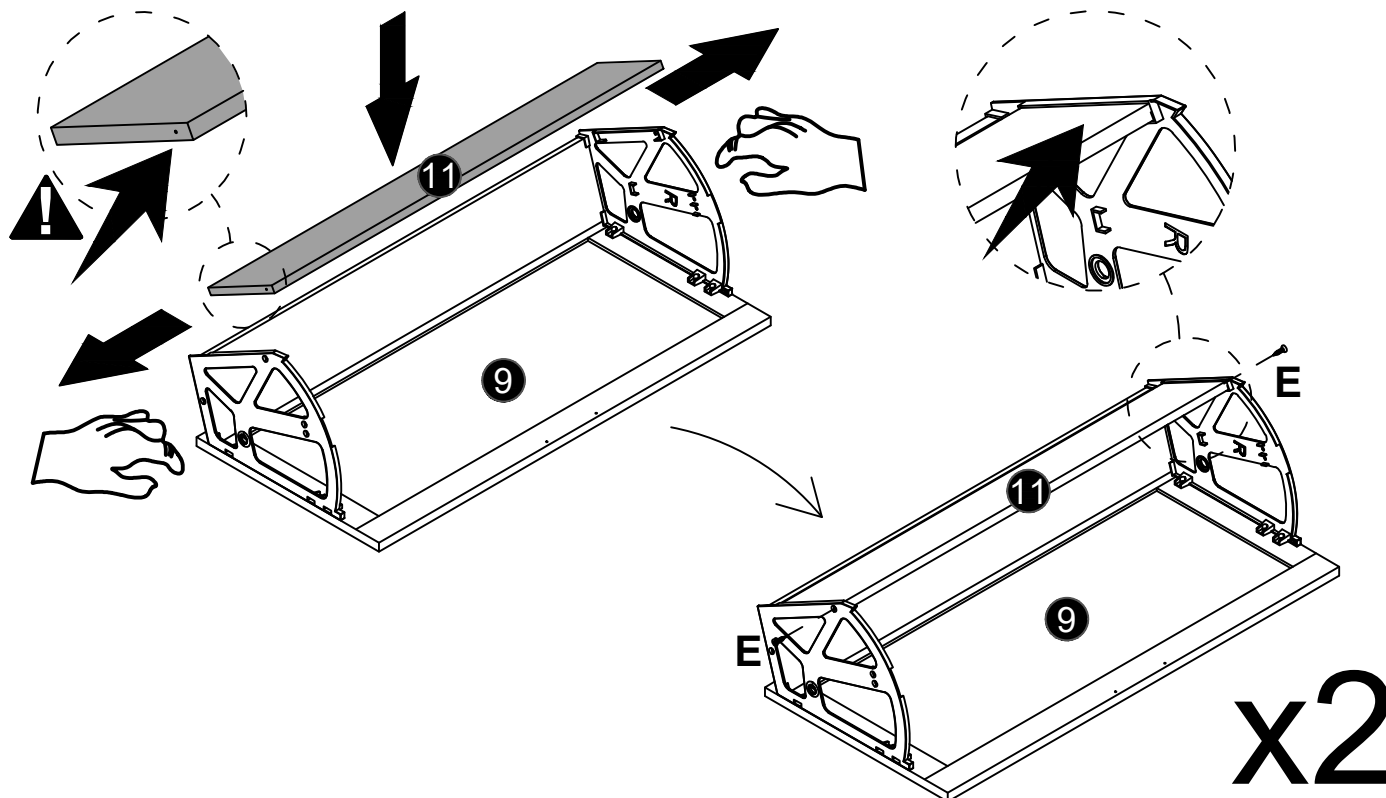




N x2

Q x4


18

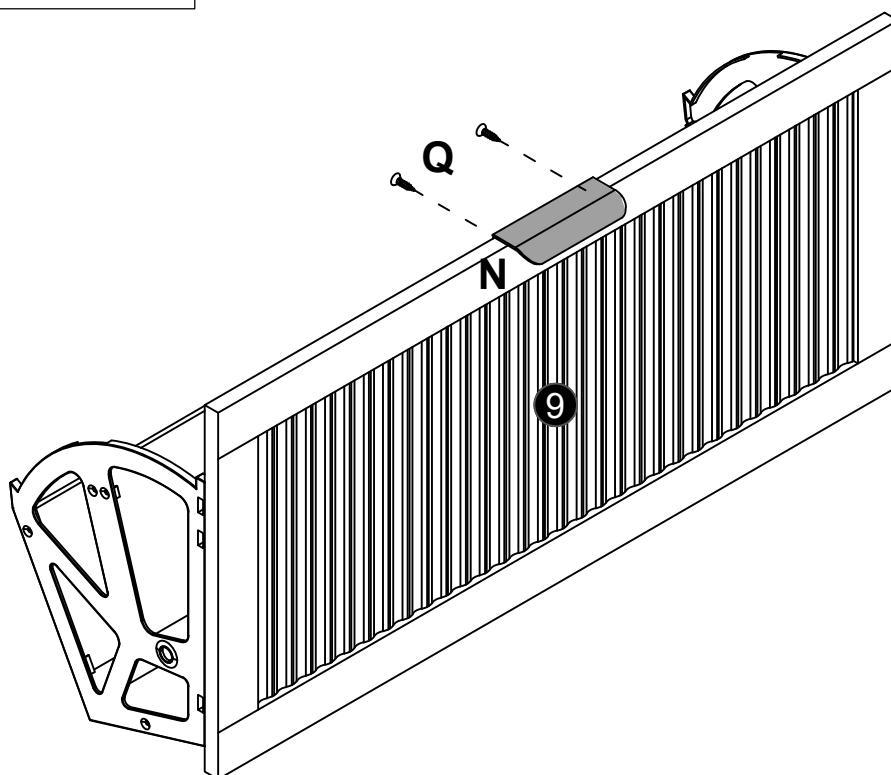


x2

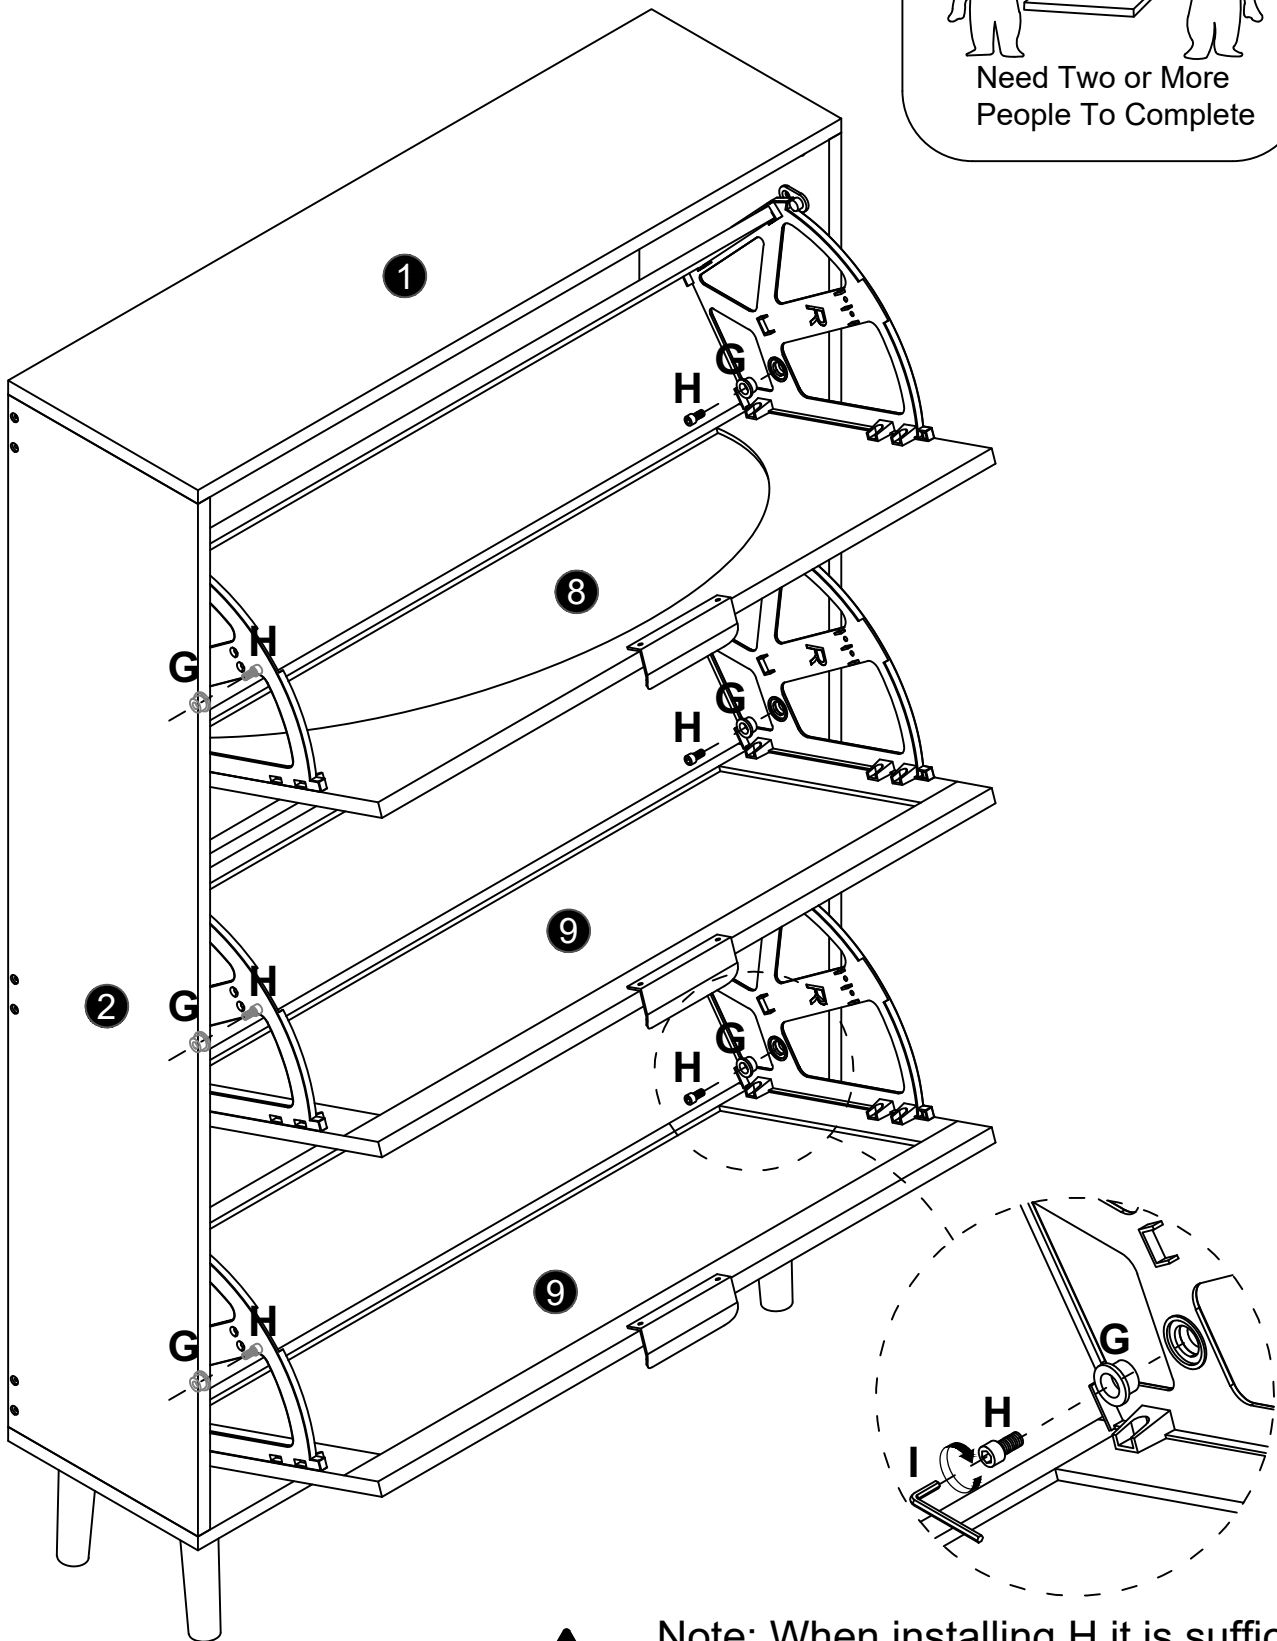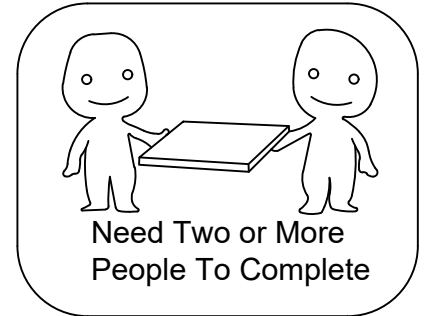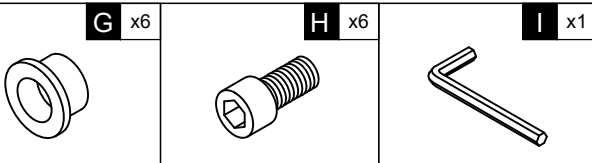


Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

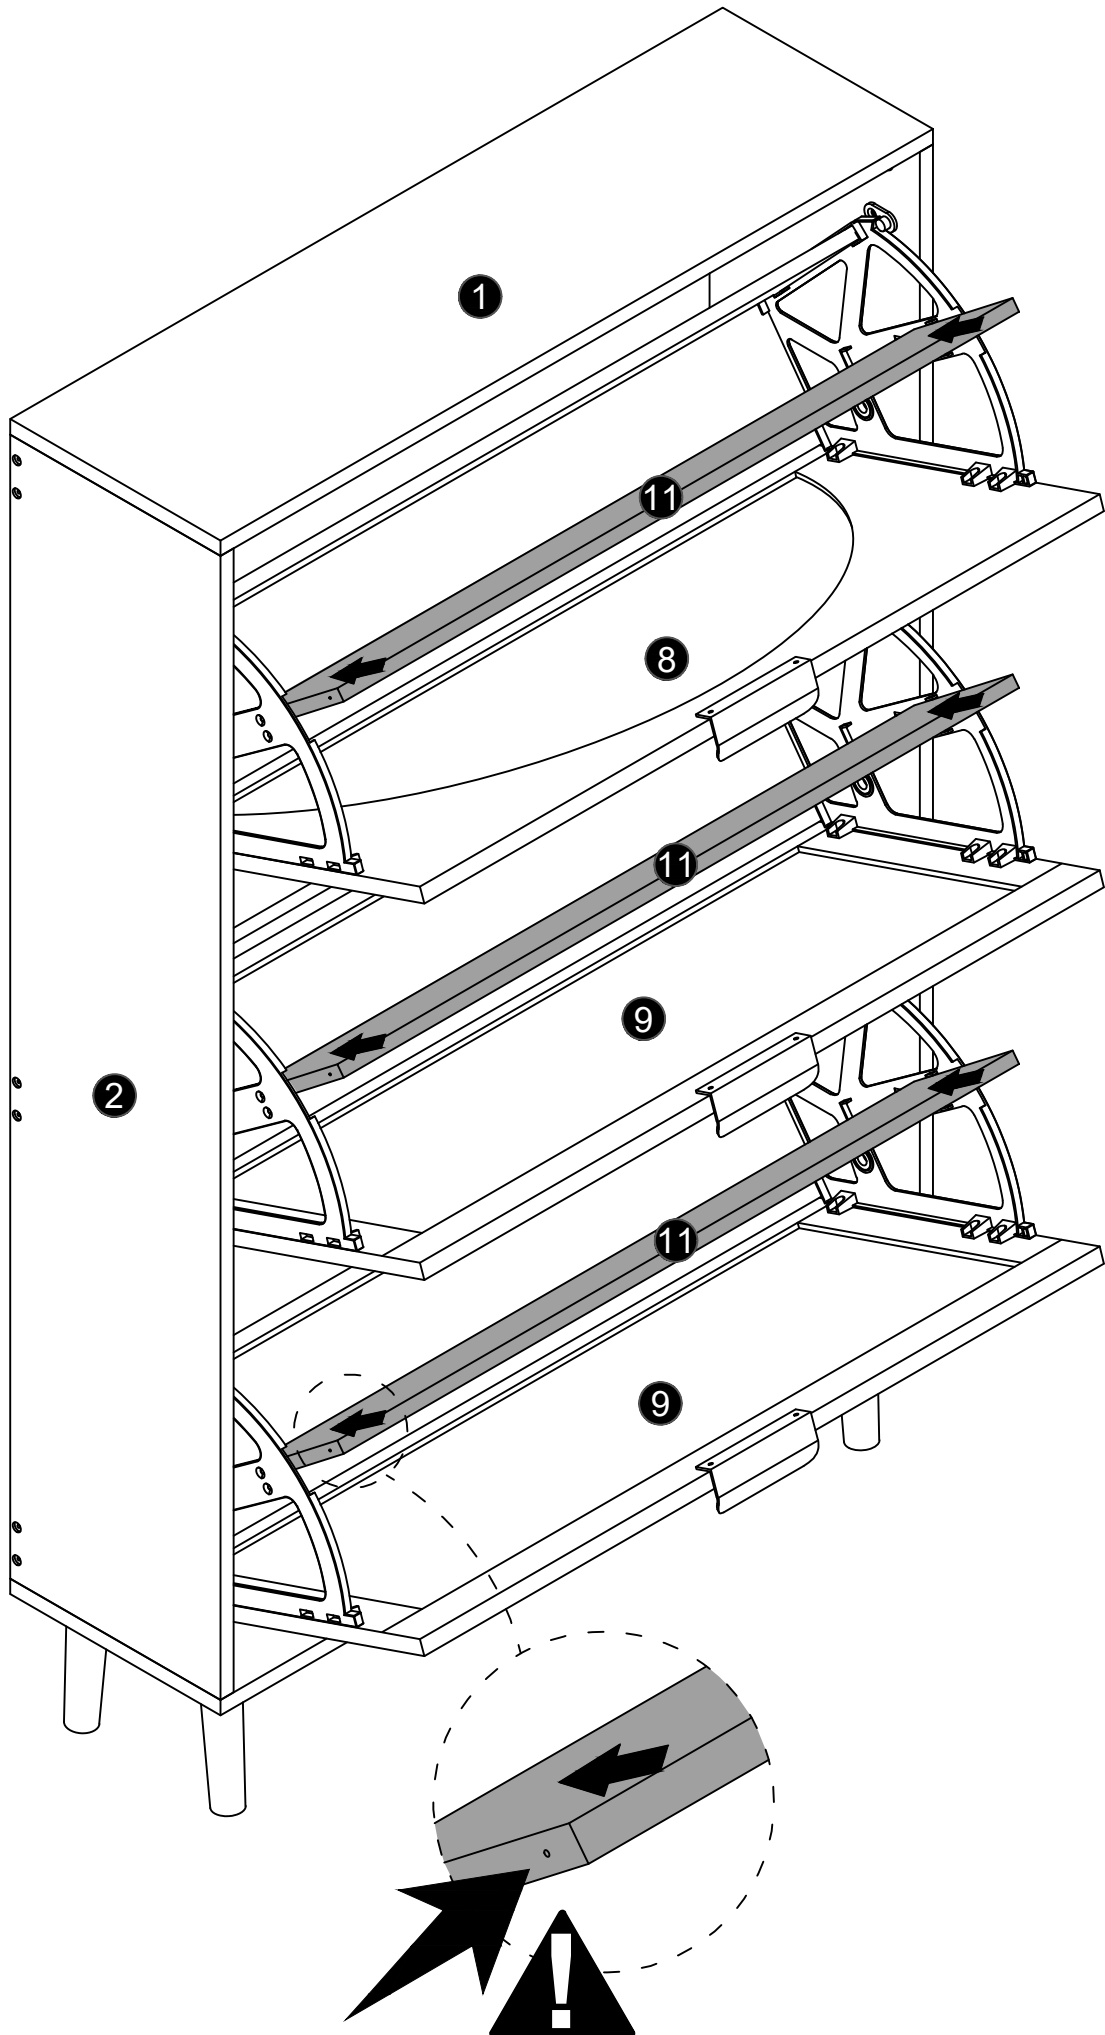

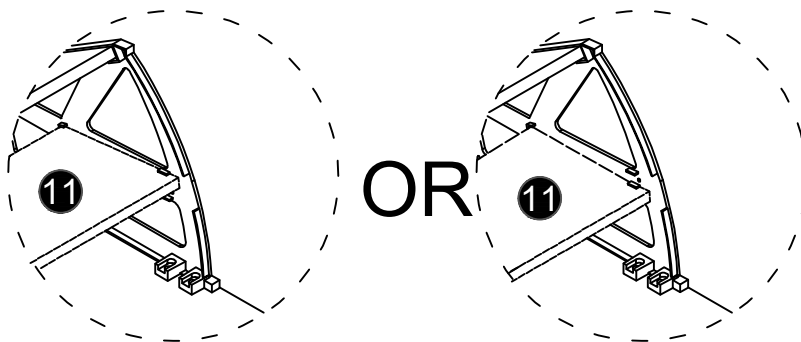

Adjustments can be made according to your own needs.

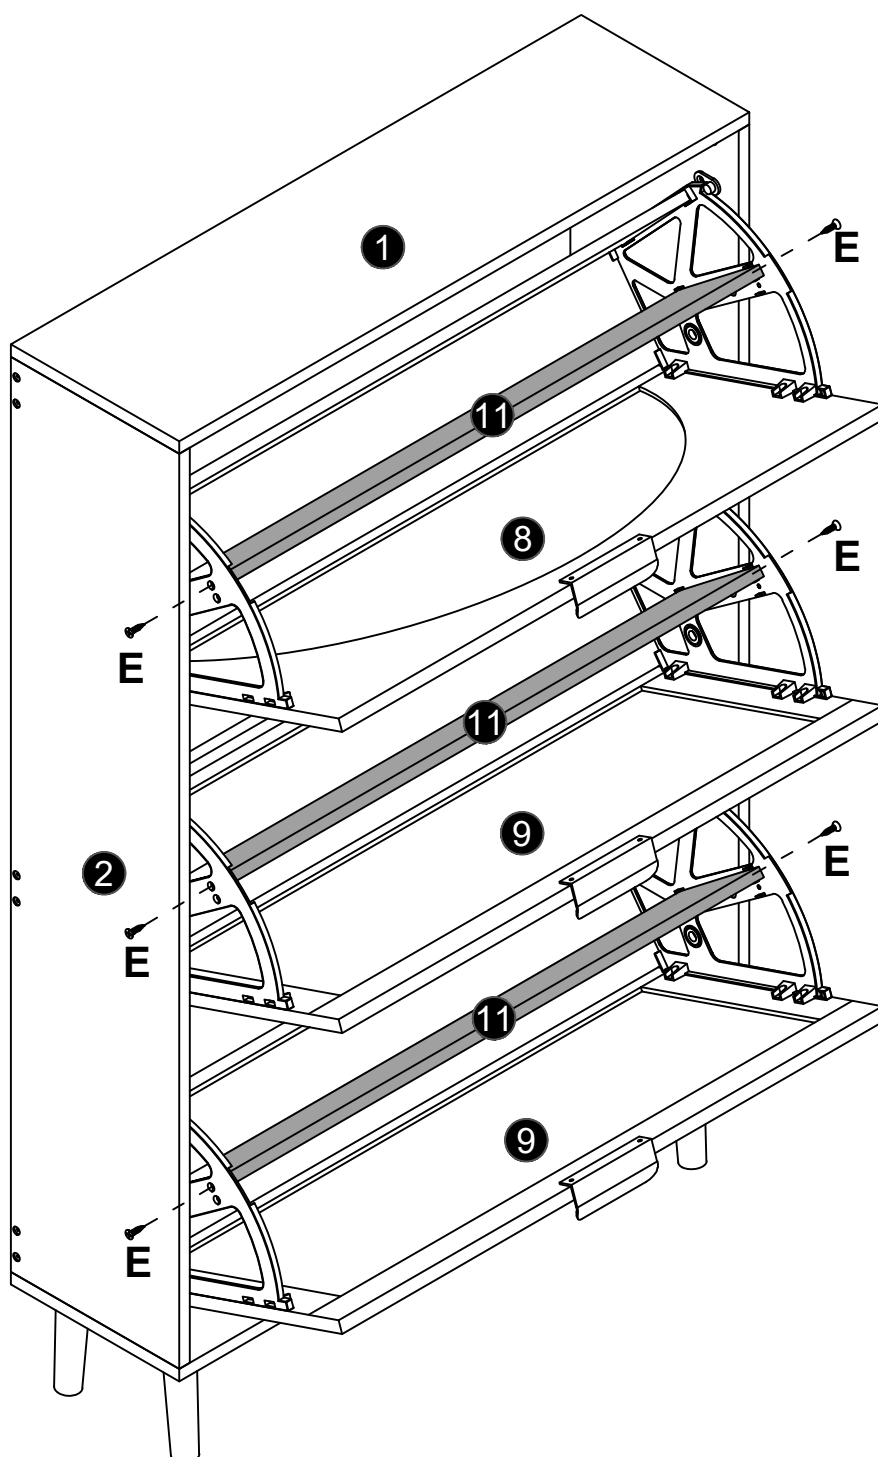

P x12

Done

