



















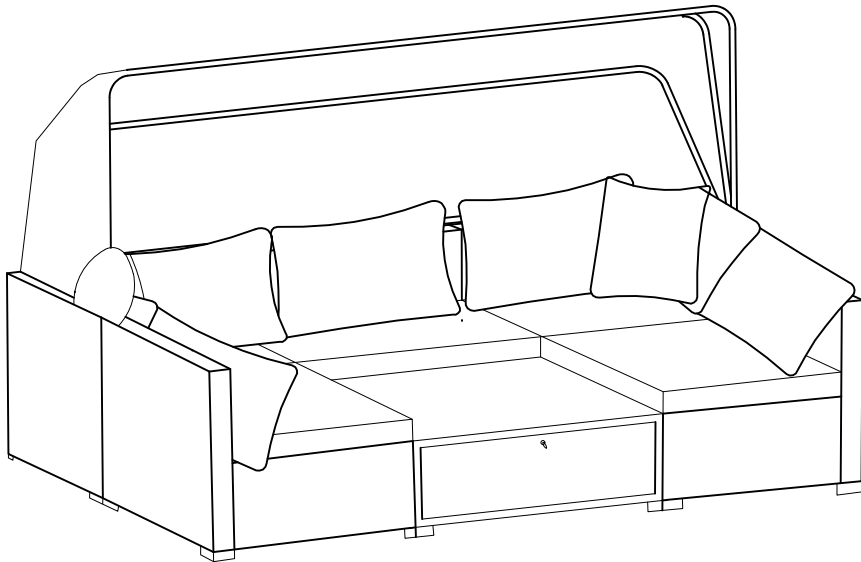


6-PIECE PATIO FURNITURE SET WITH CANOPY
ASSEMBLY INSTRUCTIONS
YS250601 SERIES





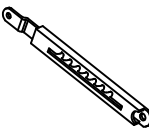






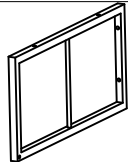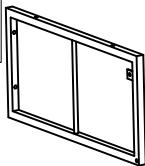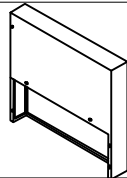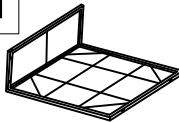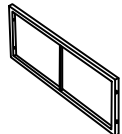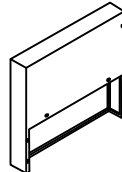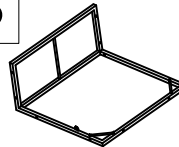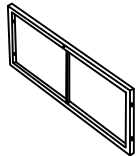

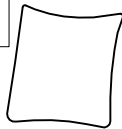








ATTENTION





THANKS FOR CHOOSING OUR PRODUCTS!

- 1.This 6-PIECE PATIO FURNITURE SET WITH CANOPY comes in 2 boxes,please check the part list carefully to make sure you've received all the parts.
- 2.If there are any missing parts ,please contact us with the part # and quantity,we will send them to you ASAP.
- 3.If there are any damaged parts,please contact us with clear pictures or video,we will offer you the best solution after confirming it.







Assembly Instructions			
Parts List (BOX A)			
A 	B 	C 	D 
1 PC	1 PC	1 PC	1 PC
E 	F 	M 	N 
1 PC	1 PC	1 PC	1 PC
O 	P 	R 	S 
1 PC	1 PC	1 PC	1 PC
T 	U 	V 	W 
1 PC	1 PC	1 PC	1 PC
X 	K 	L 	Q 
1 PC	2 PCS	2 PCS	2 PCS

Assembly Instructions			
f 	Y  200N	m  50N	n 
2 PCS	2 PCS	1 PC	1 PC
o 	a  M6x45mm	b  M6x35mm	c  M6x25mm
1 PC	6 PCS	64 PCS	46 PCS
d  M6x20mm	e  M6x90mm	l 	q  M6x40mm
10 PCS	2 PCS	1 PCS	10 PCS
g 	h 	i 	j 
104 PCS	14 PCS	10 PCS	24 PCS
k 	r 	t 	① 
1 PC	1 PC	8 PCS	2 PCS

Assembly Instructions

②		③		④		⑤	
2 PCS		2 PCS		2 PCS		4 PCS	

Parts List (BOX B)





<div>G</div> <div></div>	<div>H</div> <div></div>	<div>I</div> <div></div>	<div>J</div> <div></div>
3 PCS	3 PCS	3 PCS	3 PCS
<div>K</div> <div></div>	<div>L</div> <div></div>		
3 PCS	3 PCS		

NOTE



- 1.If one or some screws are fully tightened during assembly,the other screws may not be aligned with screw holes.70% tighten before fastening all screws.Allen wrench is recommended instead of an electric drill.
- 2.If some screws are not alignes sith holes during assembly,please loosen all the other screws to 70% and continue the assembly process.
- 3.If the items is not stable,please loosen all the screws,adjust it on a flat ground and tighten all the screws.

Assembly Instructions

Step 1

	A*1
	C*1
 M6x35mm	b*2
	g*2

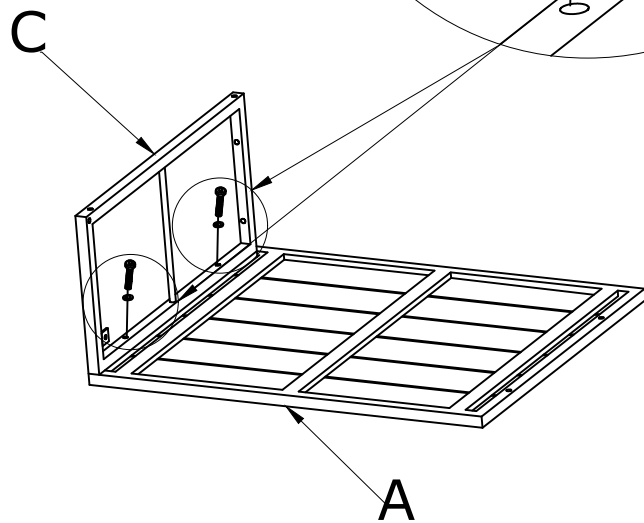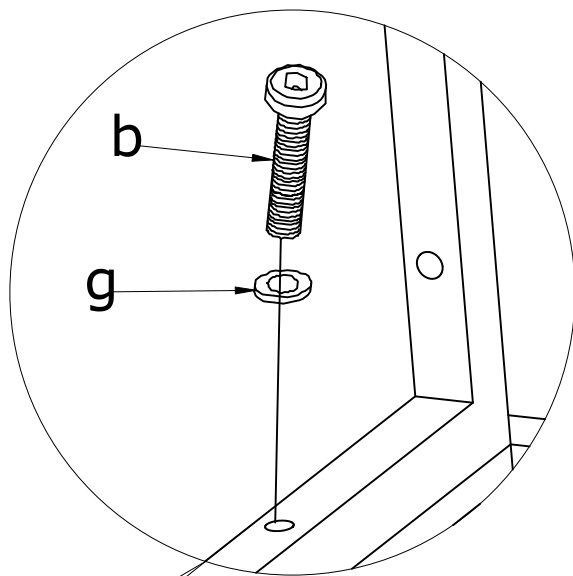


Suggestion: It will be easier and faster to do every step with 2-3 people.
It is not recommended that one person complete the entire installation process.





6

Assembly Instructions

Step 2

	B*1
 M6x35mm	b*2
	g*2

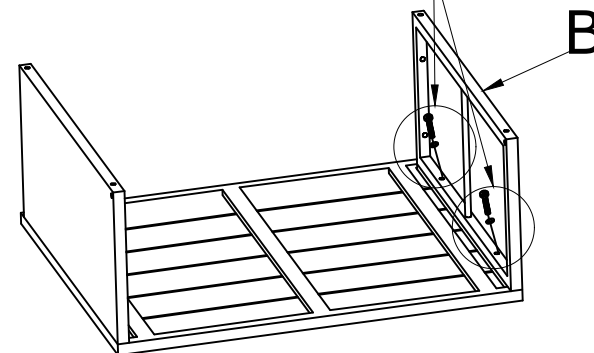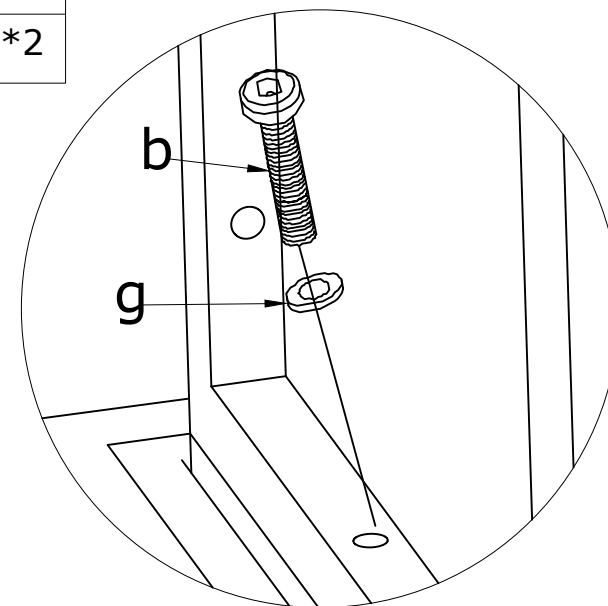

7

Assembly Instructions

Step 3



D*1





M6x35mm

b*4




g*4

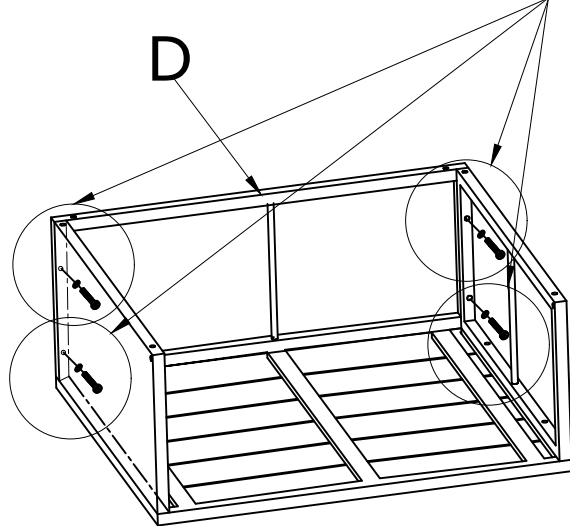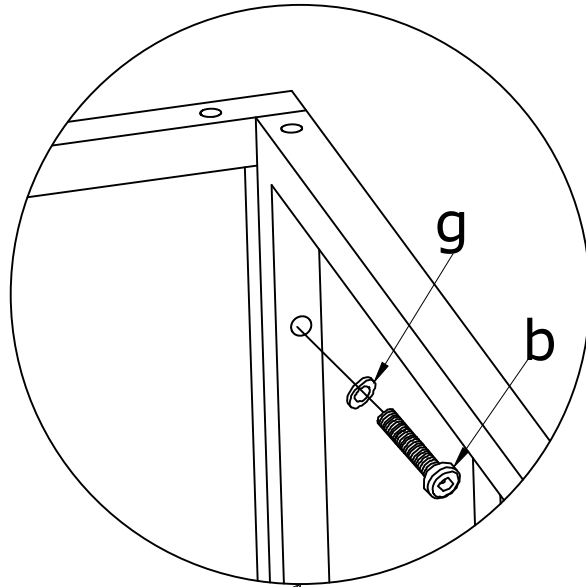

8

Assembly Instructions

Step 4



E*1



M6x35mm



b*2



g*2





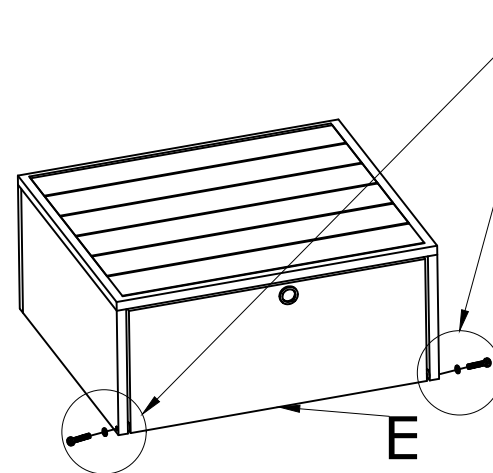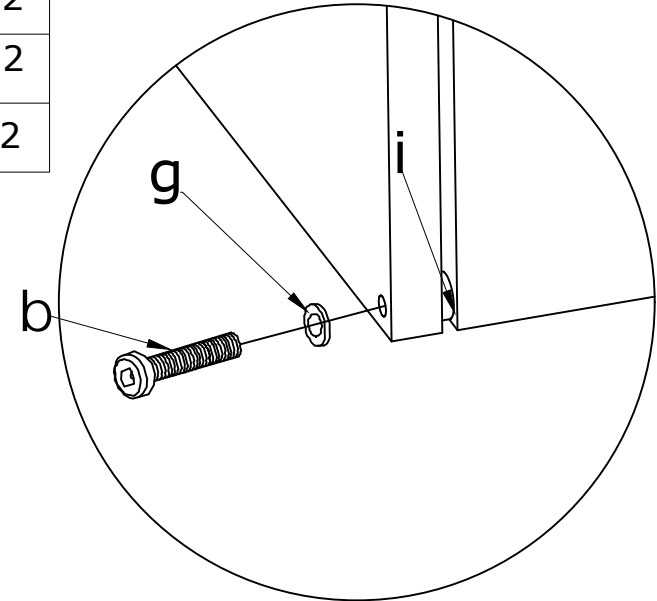


i*2




9

Assembly Instructions

Step 5



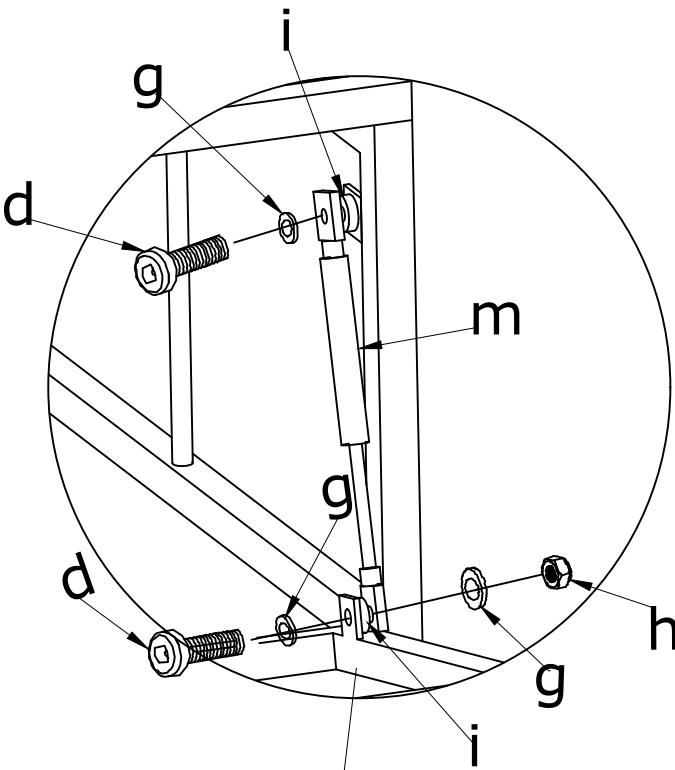

 M6x20mm	d*2
 g*3	
 h*1	
 i*2	
 50N m*1	




A circular inset diagram showing a close-up of the assembly process. It depicts a vertical support structure with a horizontal beam. A screw (d) is being inserted through a hole in the beam, passing through a washer (g), a nut (h), and another washer (i) into the support. The diagram is labeled with letters: d, g, i, m, h, and g. Below the circular inset is a perspective view of the assembled unit, with a circular callout indicating the location of the assembly point.

Assembly Instructions

Step 6



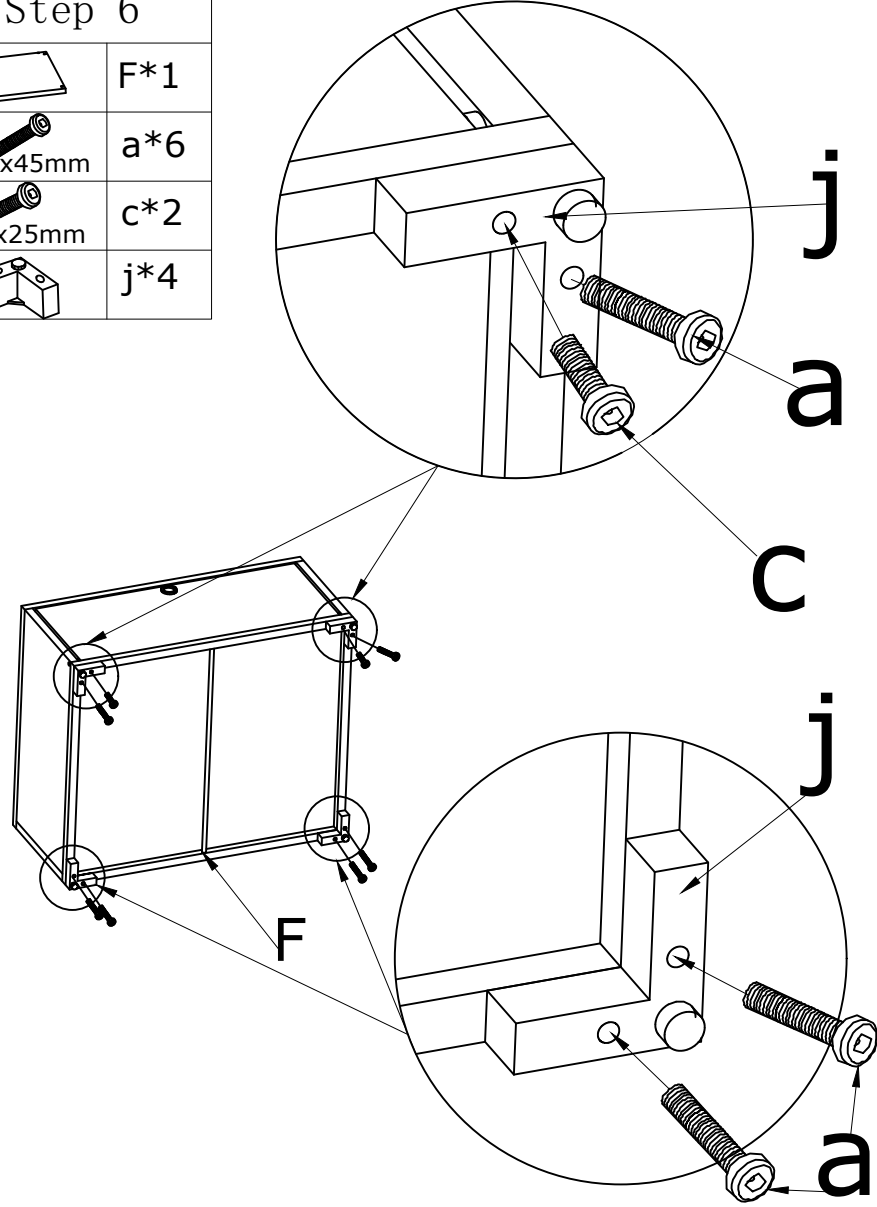

 F*1	
 M6x45mm	a*6
 M6x25mm	c*2
 j*4	




A diagram showing the assembly of a rectangular frame. A circular inset at the top right shows a close-up of a corner where a plate (F) is being attached to a vertical support using a screw (a) and a bracket (j). Another circular inset at the bottom right shows a close-up of a corner where a screw (a) is being inserted through a bracket (j) into the support. The main diagram shows the perspective view of the frame with arrows indicating the placement of the components. The diagram is labeled with letters: j, a, c, j, F, and a.

Assembly Instructions

Step 7



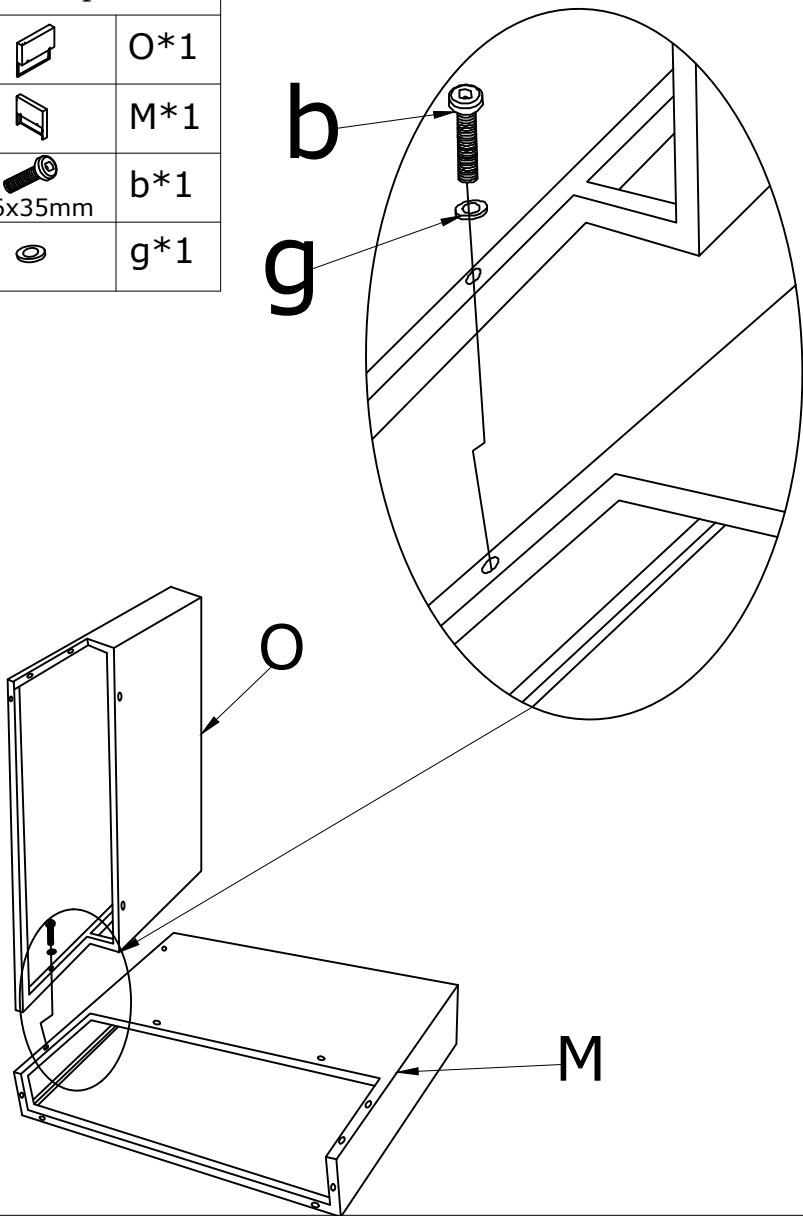

	O*1
	M*1
 M6x35mm	b*1
	g*1




12

Assembly Instructions

Step 8

	N*1
 M6x35mm	b*6
	g*7
 M6x90mm	e*1

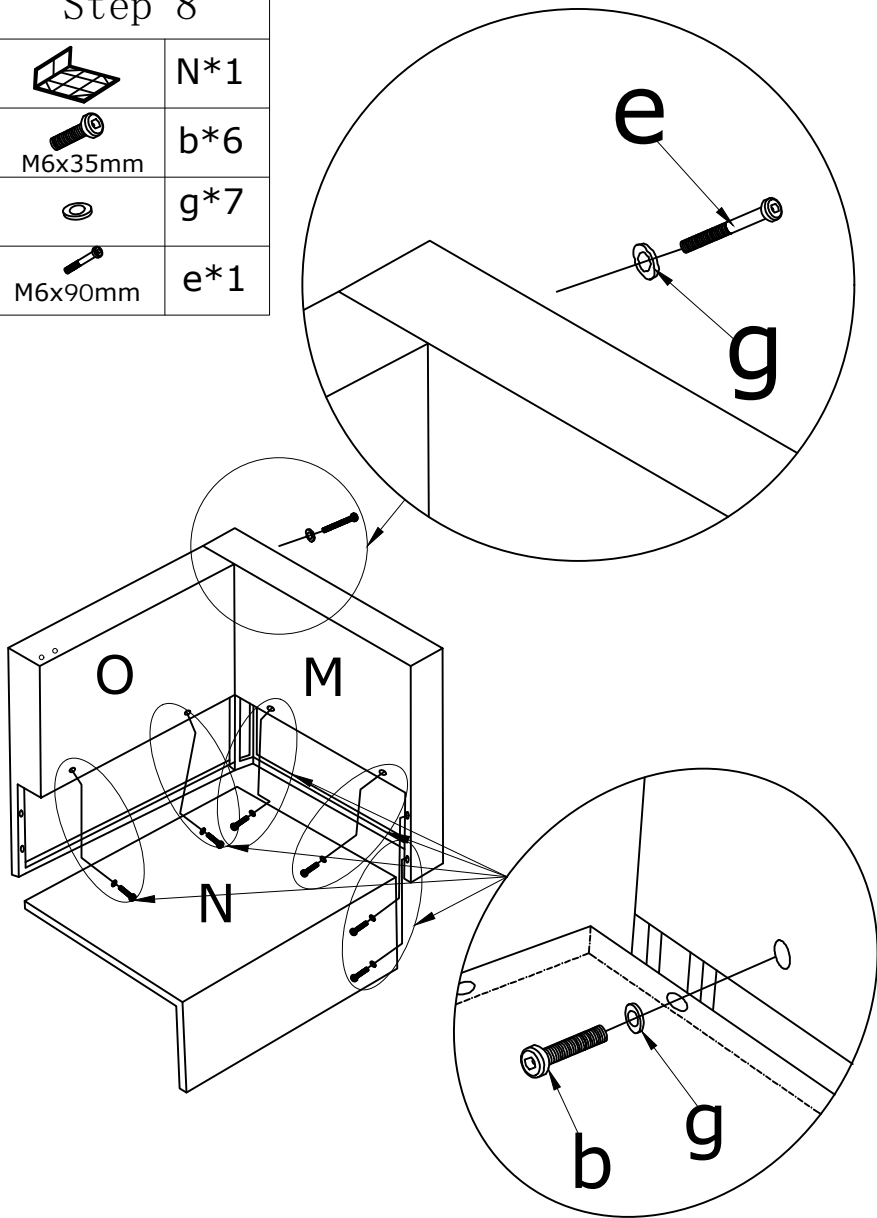

13

Assembly Instructions

Step 9



P*1





M6x35mm

b*4



g*4

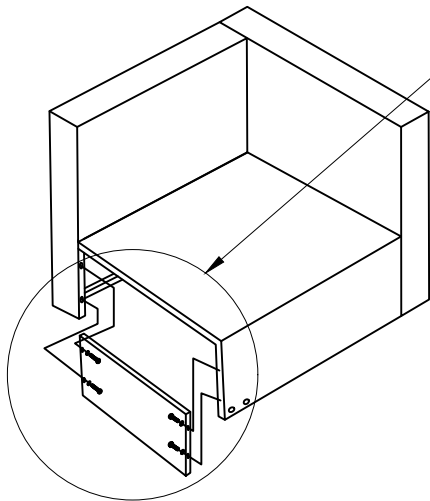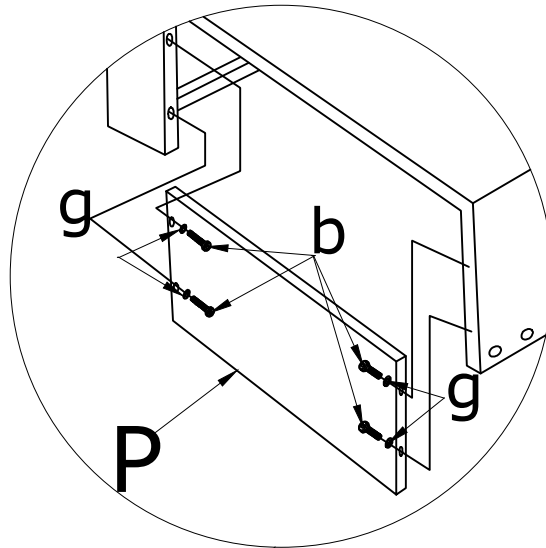

14

Assembly Instructions

Step 10





M6x25mm

c*8





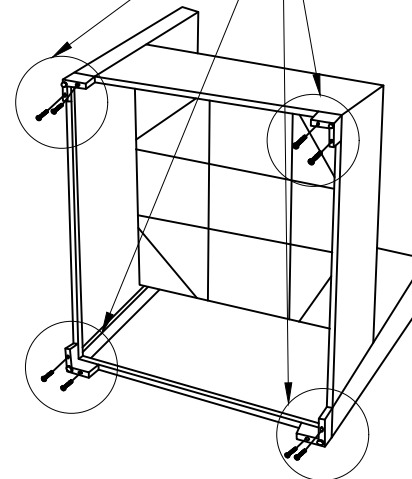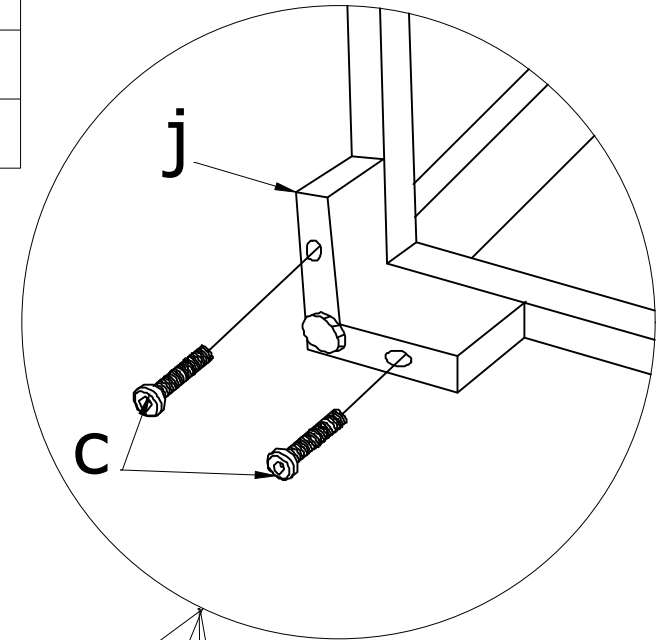

j*4




15

Assembly Instructions

Step 11

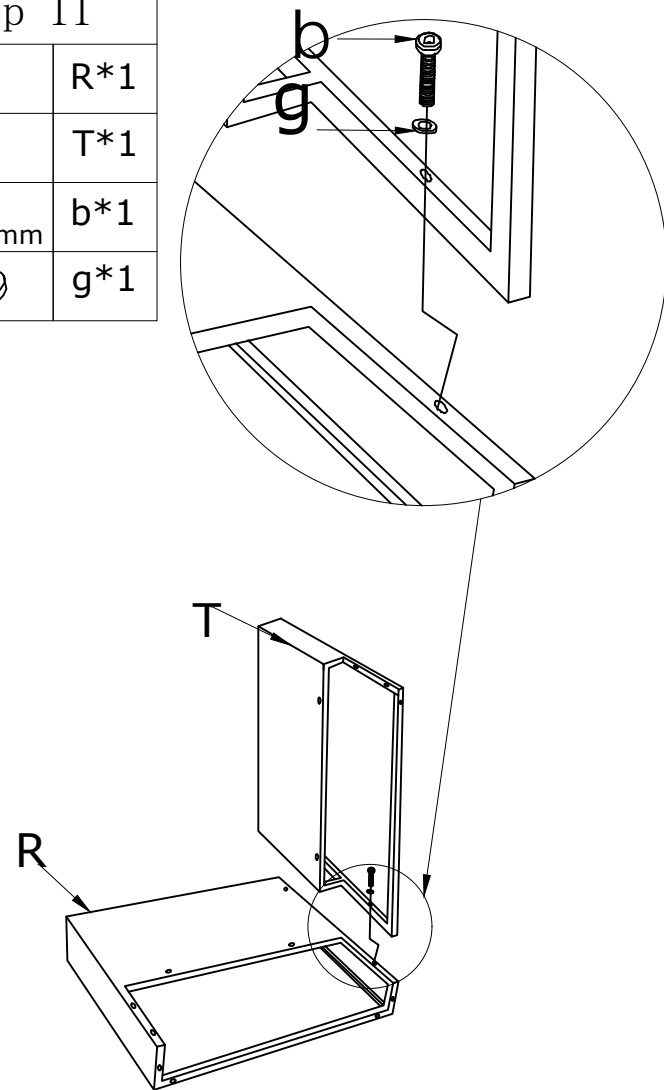

	R*1
	T*1
	b*1
	g*1




16

Assembly Instructions

Step 12



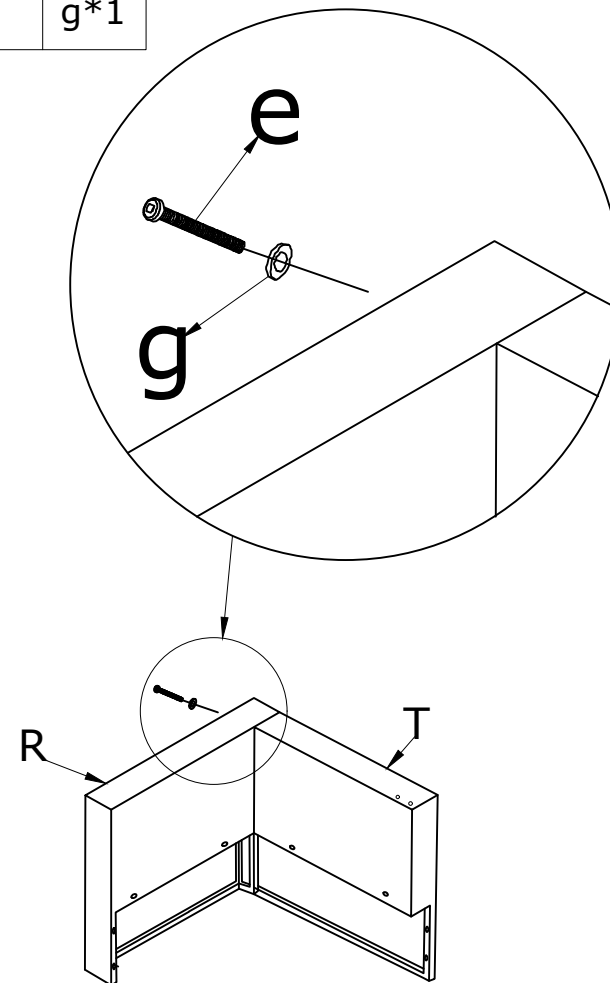


	e*1
	g*1





17

Assembly Instructions

Step 13



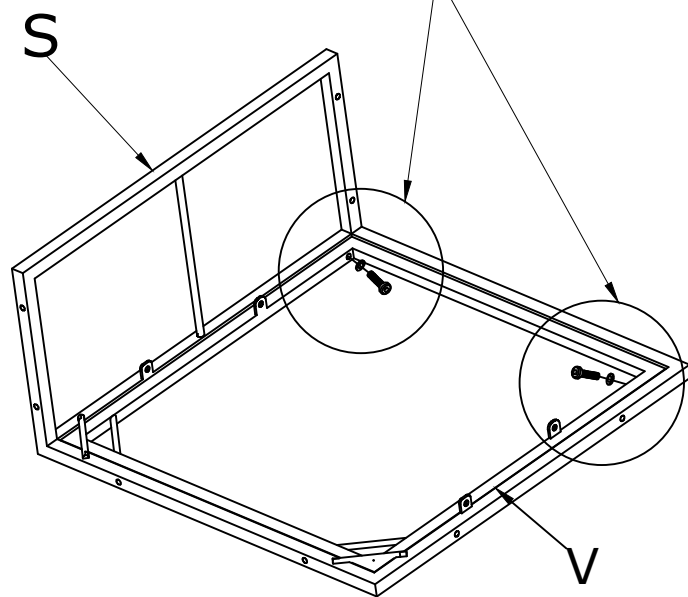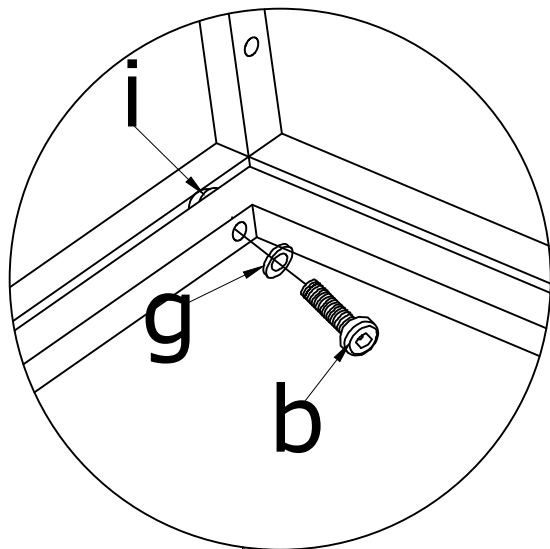


	S*1
	V*1
	i*2
	b*2
M6x35mm	
	g*2





18

Assembly Instructions

Step 14



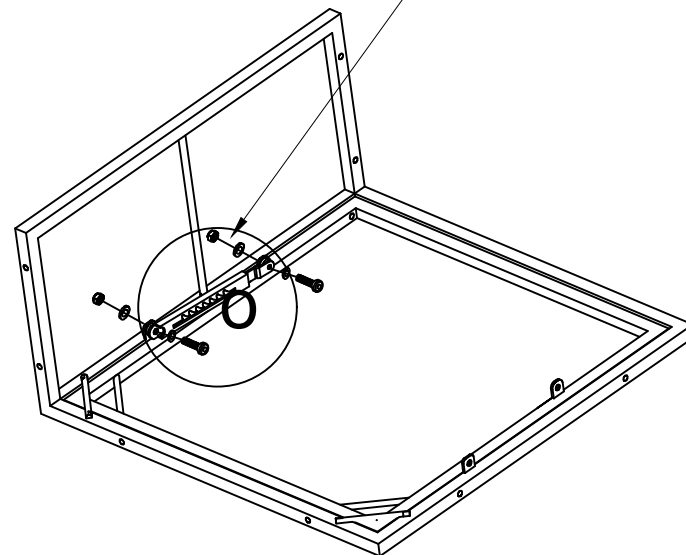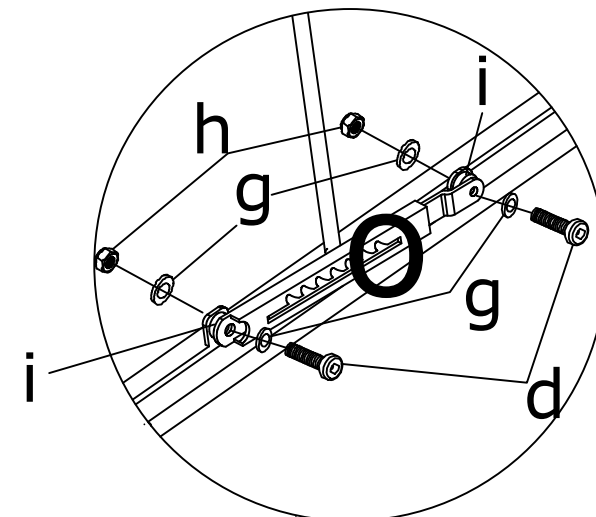


	o*1
	i*2
	h*2
	d*2
M6x20mm	
	g*4




19

Assembly Instructions

Step 15

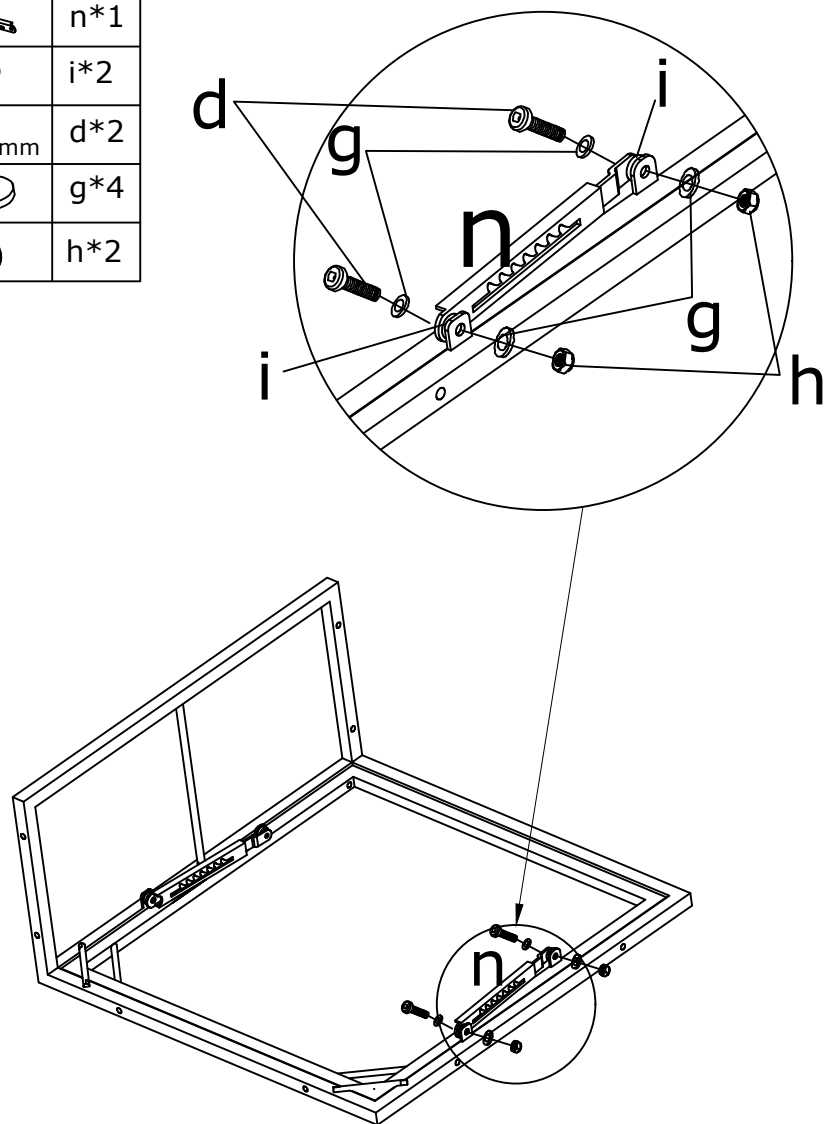


	n*1
	i*2
 M6x20mm	d*2
	g*4
	h*2




20

Assembly Instructions

Step 16

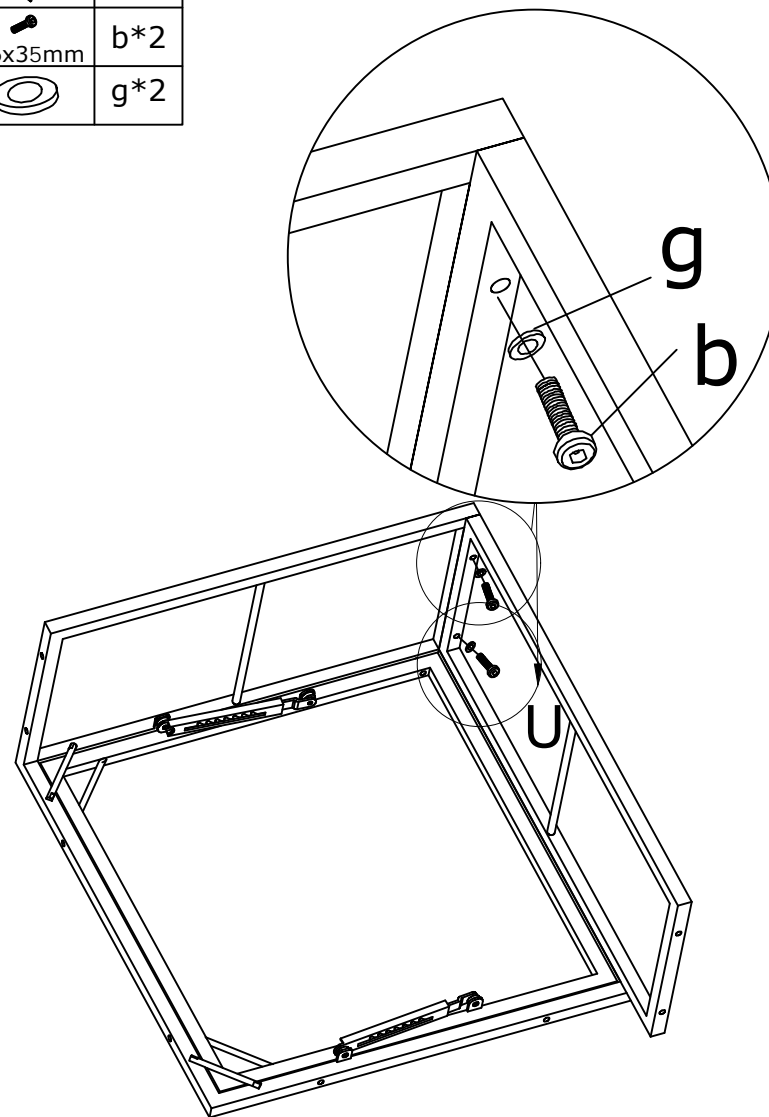

	U*1
 M6x35mm	b*2
	g*2




21

Assembly Instructions

Step 17

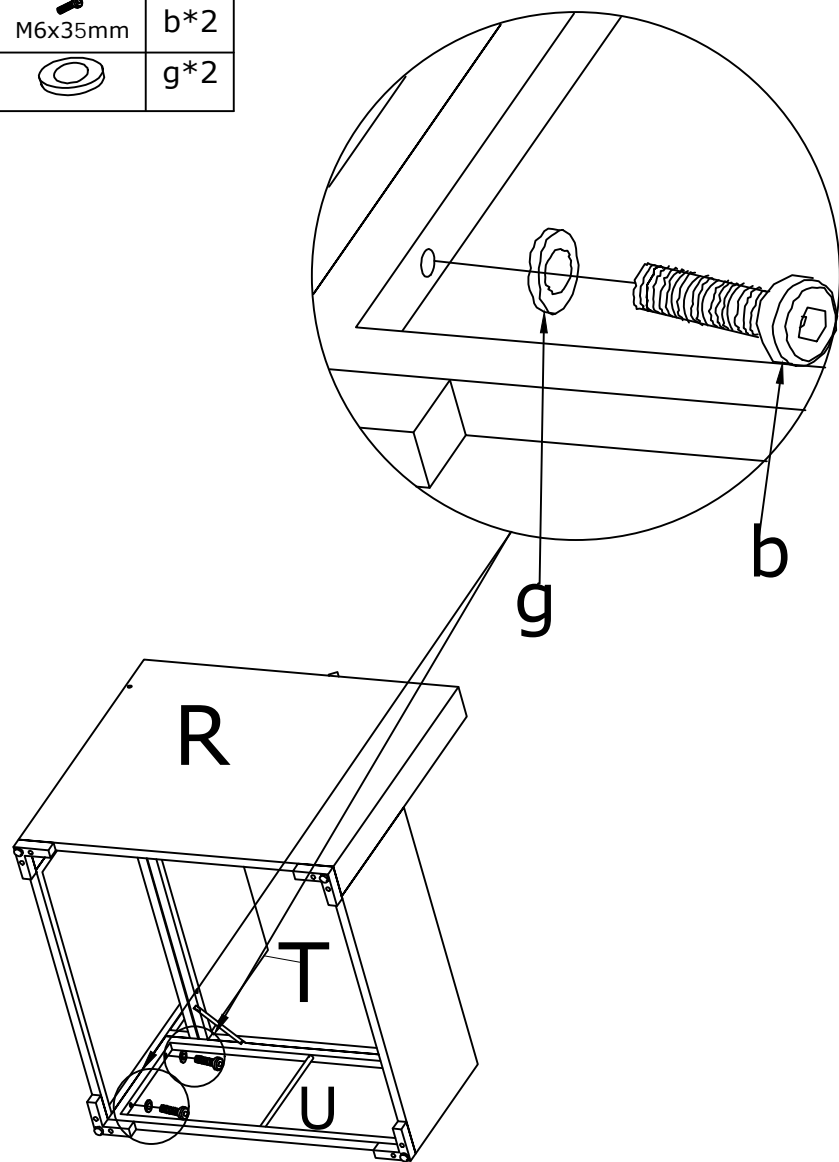

 M6x35mm	b*2
	g*2




22

Assembly Instructions

Step 18

 M6x35mm	b*4
	g*4

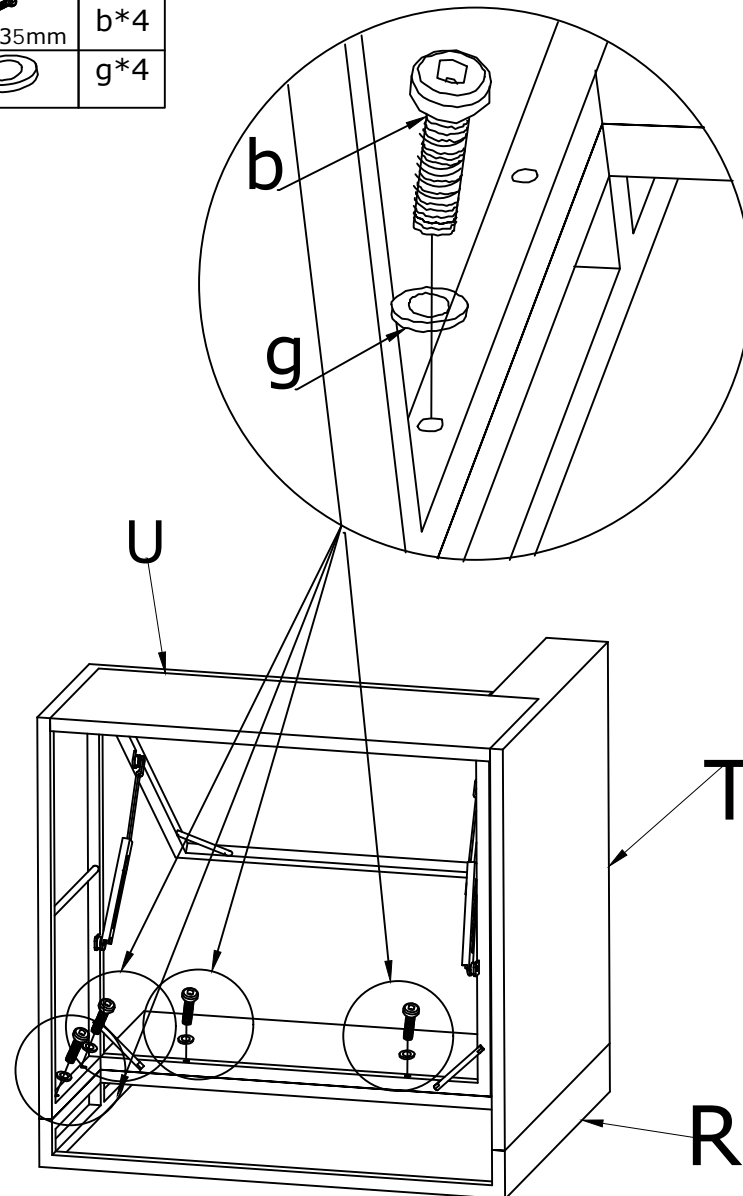


23

Assembly Instructions

Step 19

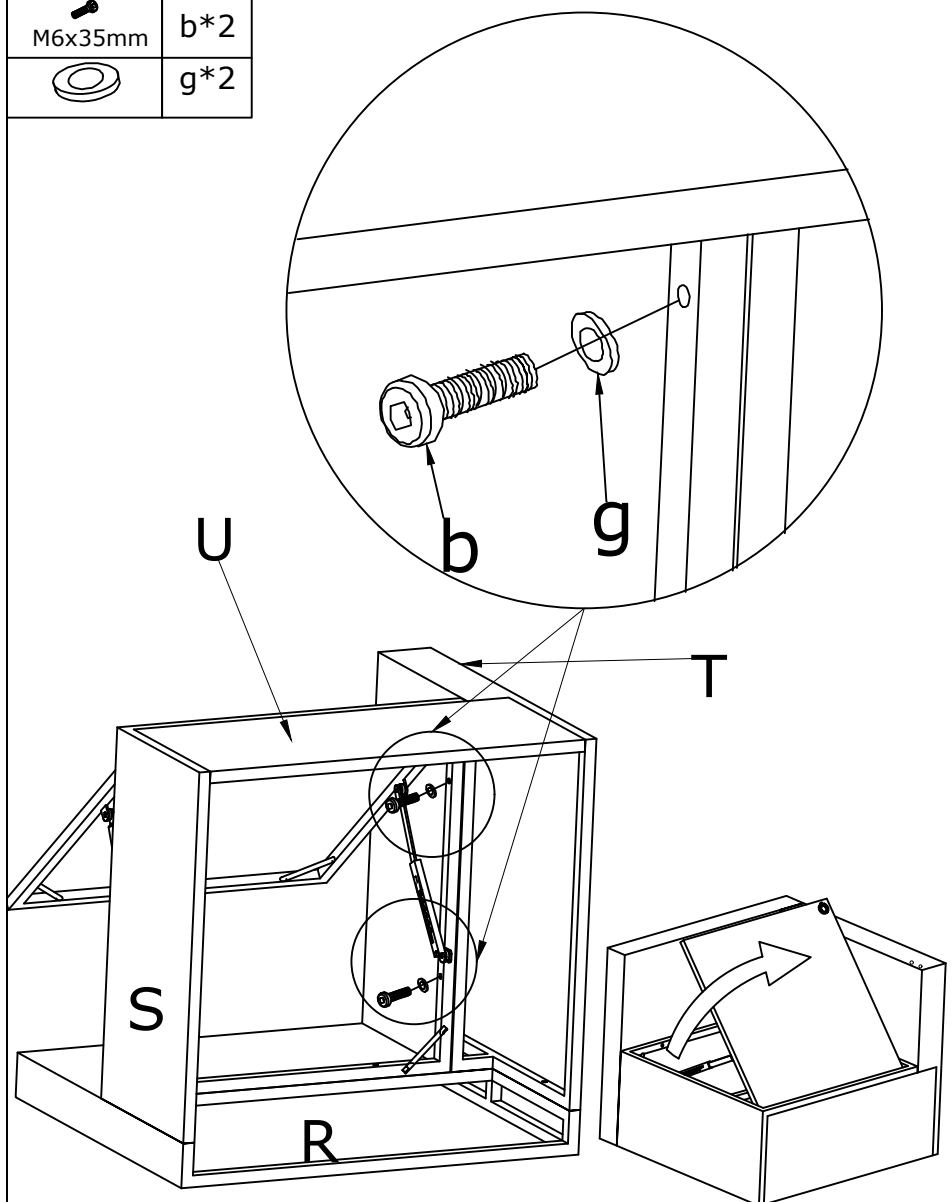

 M6x35mm	b*2
	g*2




24

Assembly Instructions

Step 20



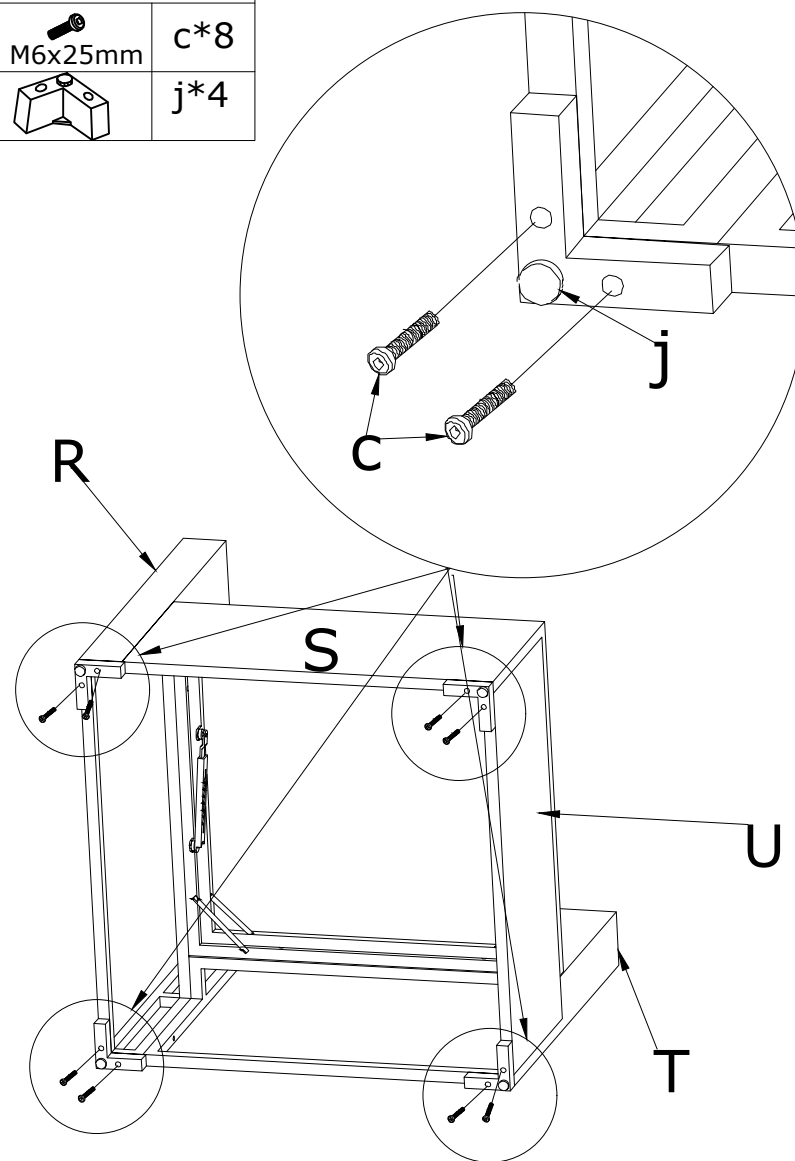

 M6x25mm	c*8
	j*4




25

Assembly Instructions

Step 21

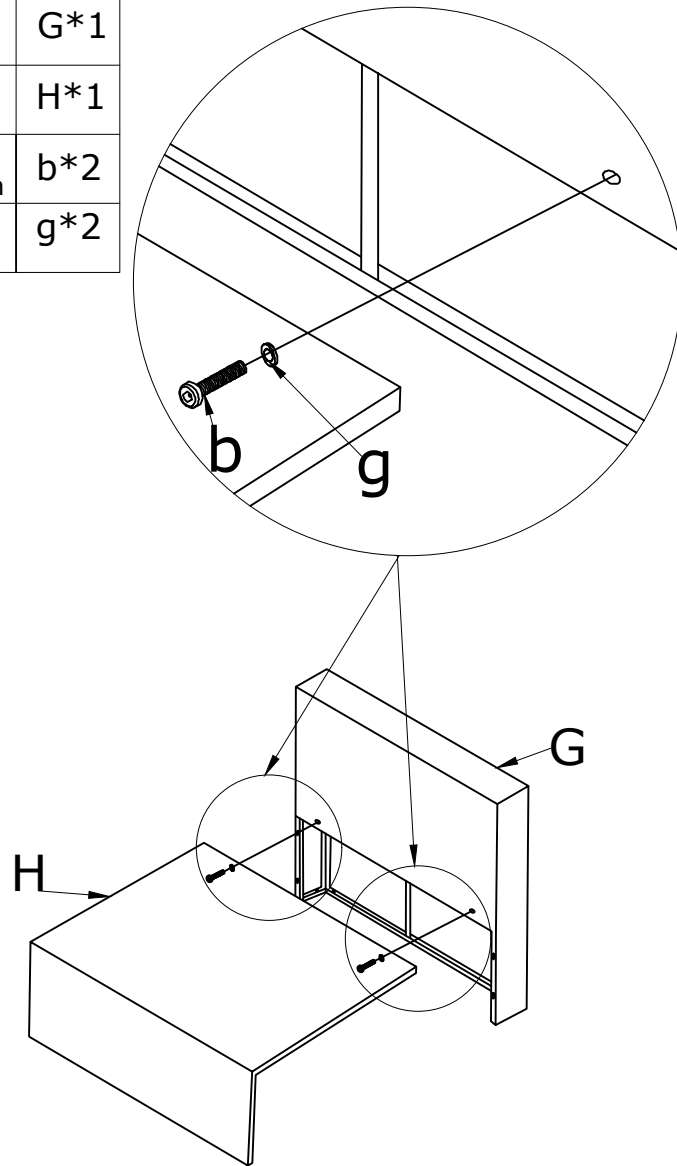


	G*1
	H*1
	b*2
	g*2




26

Assembly Instructions

Step 22

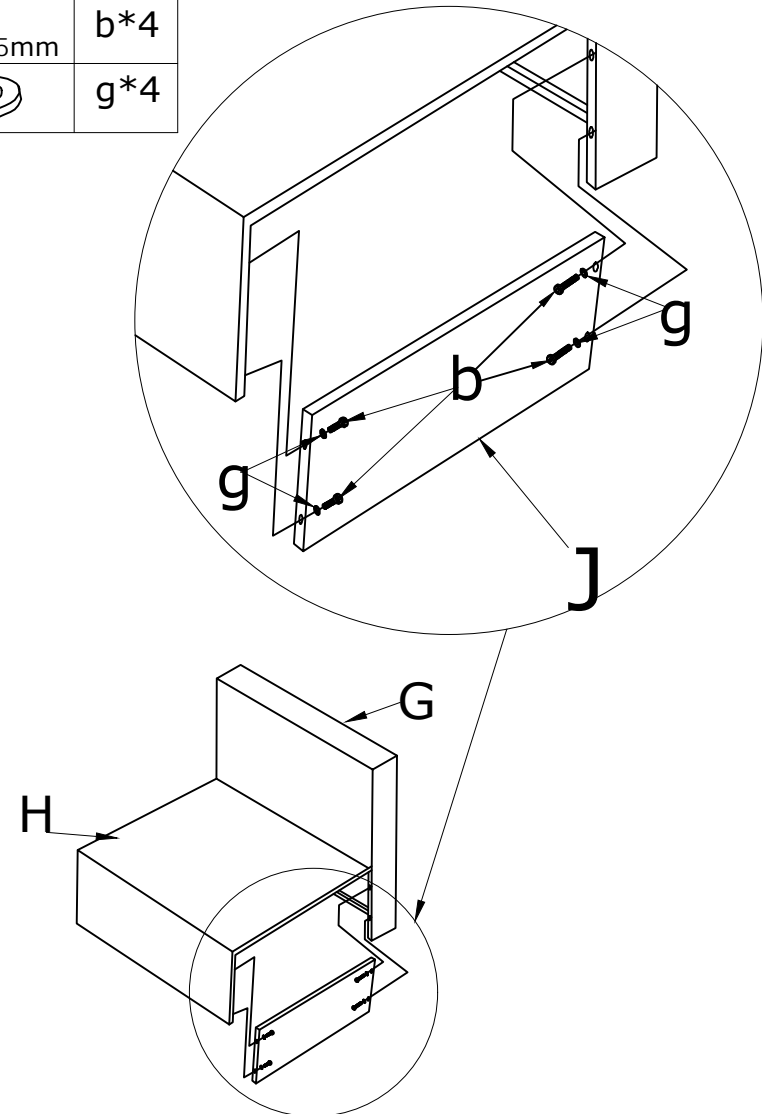


	J*1
	b*4
	g*4




27

Assembly Instructions

Step 23

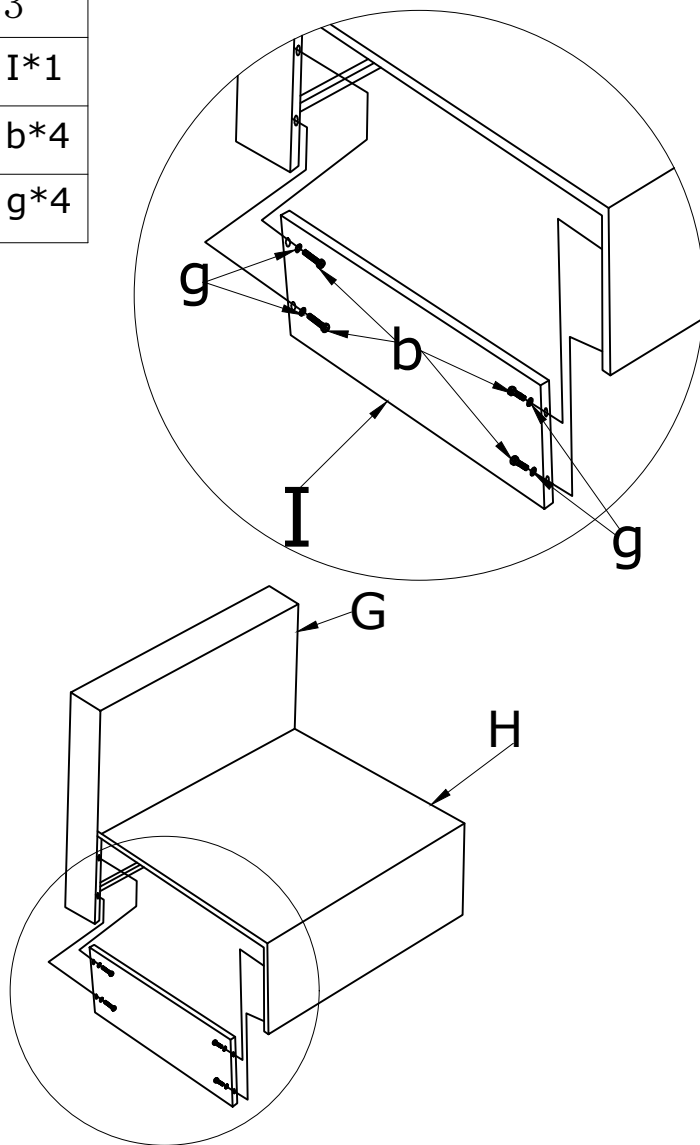

	I*1
 M6x35mm	b*4
	g*4




28

Assembly Instructions

Step 24

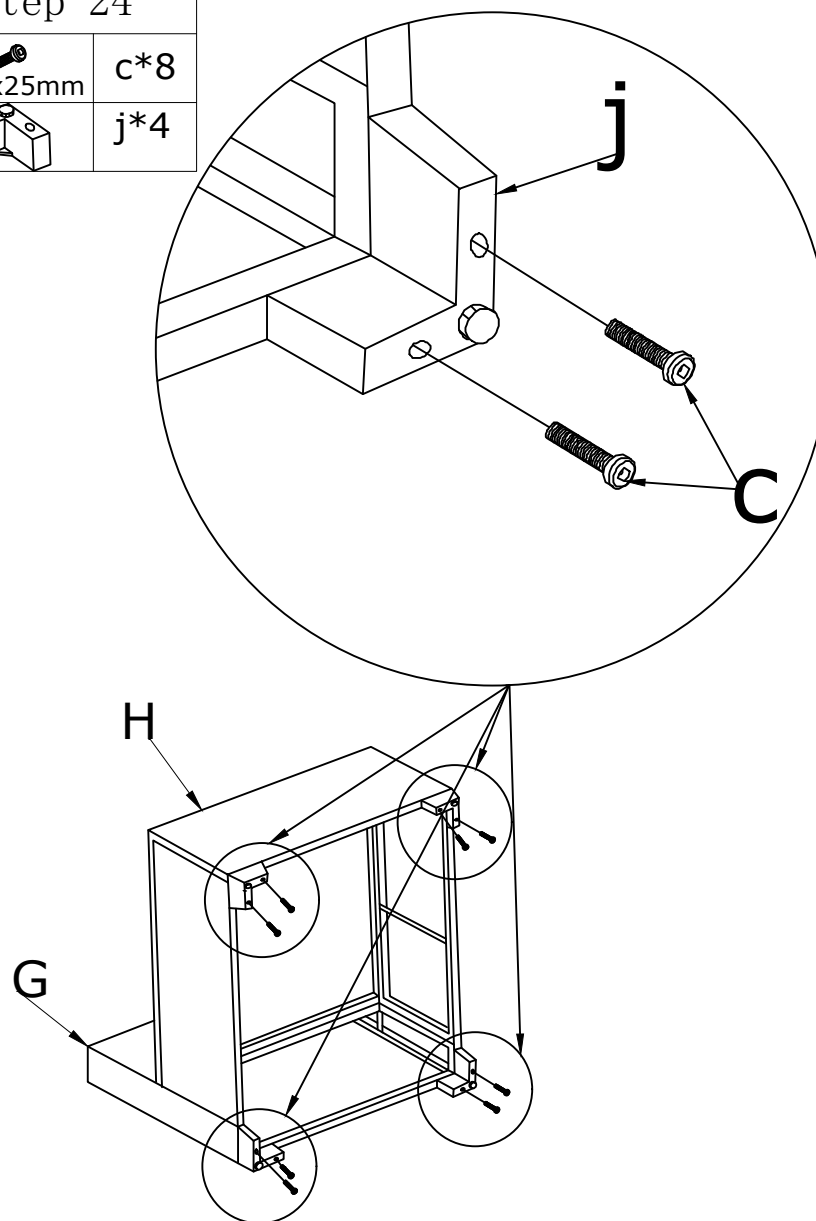


 M6x25mm	c*8
	j*4




29

Assembly Instructions

Step 25



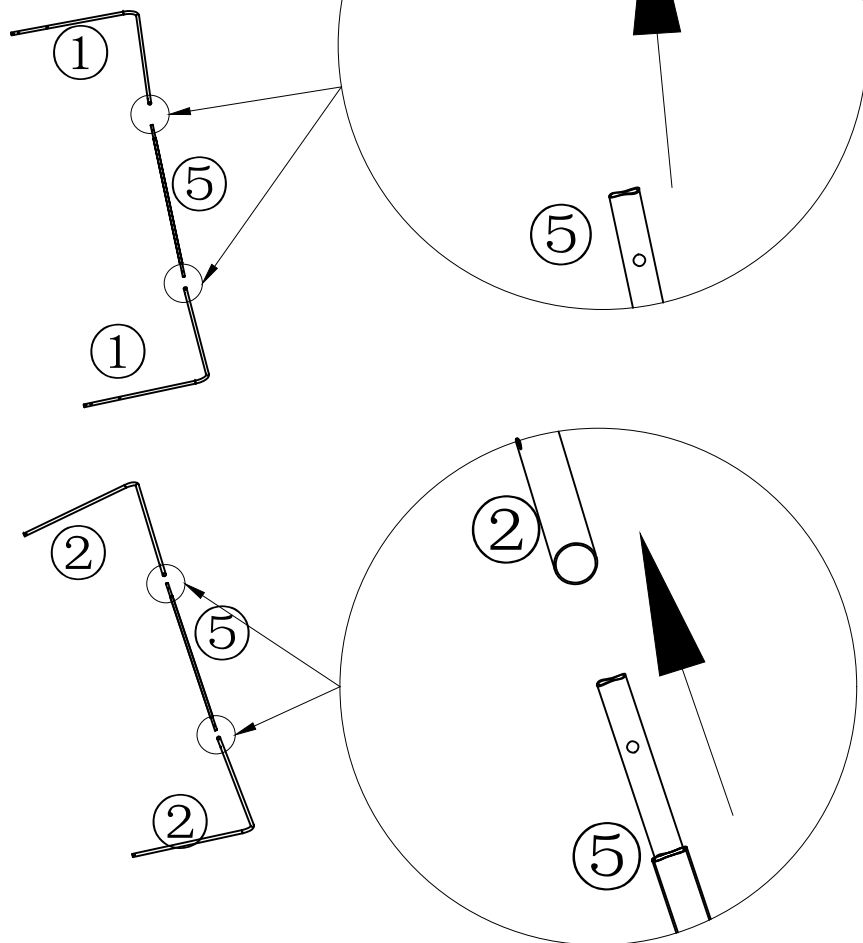
	①*2
	②*2
	⑤*2




30

Assembly Instructions

Step 26



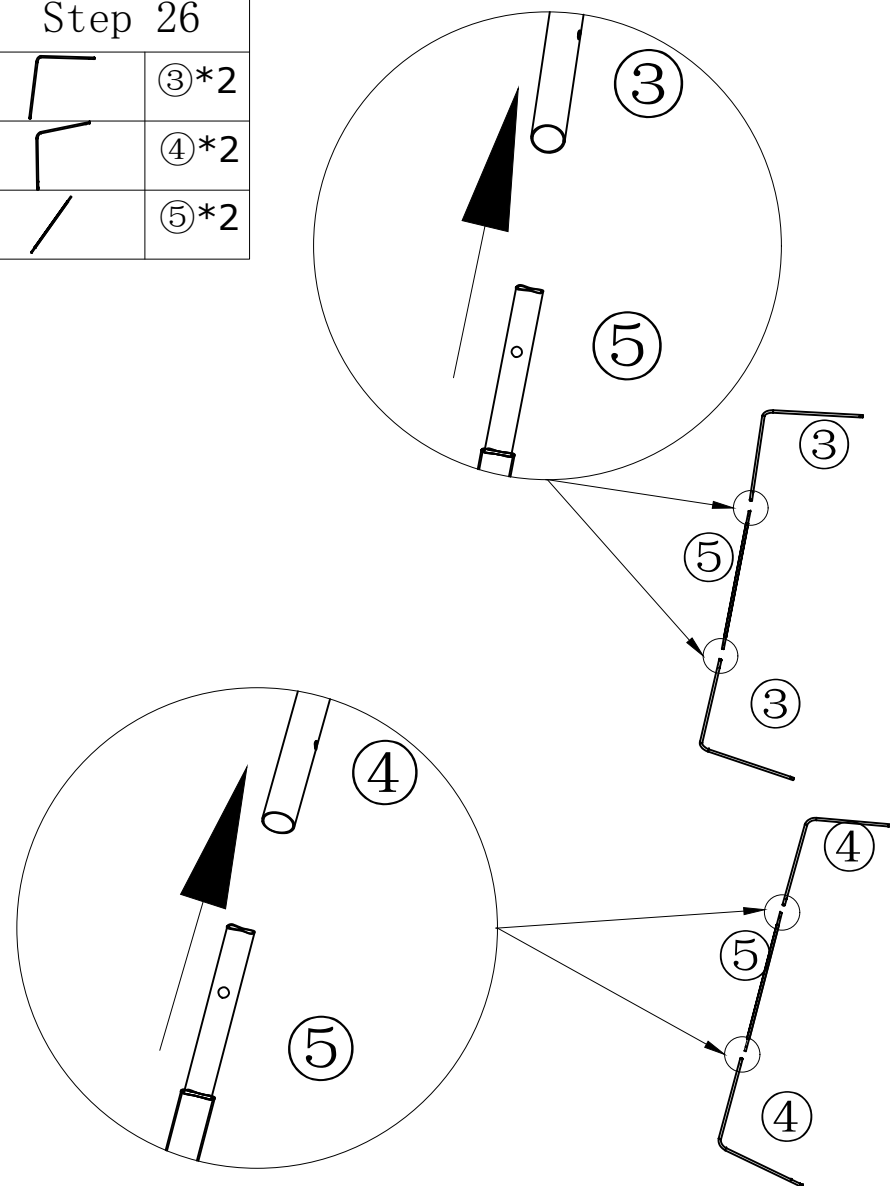

	③*2
	④*2
	⑤*2




31

Assembly Instructions

Step 27

	W*1
	X*1
	d*4
	g*4

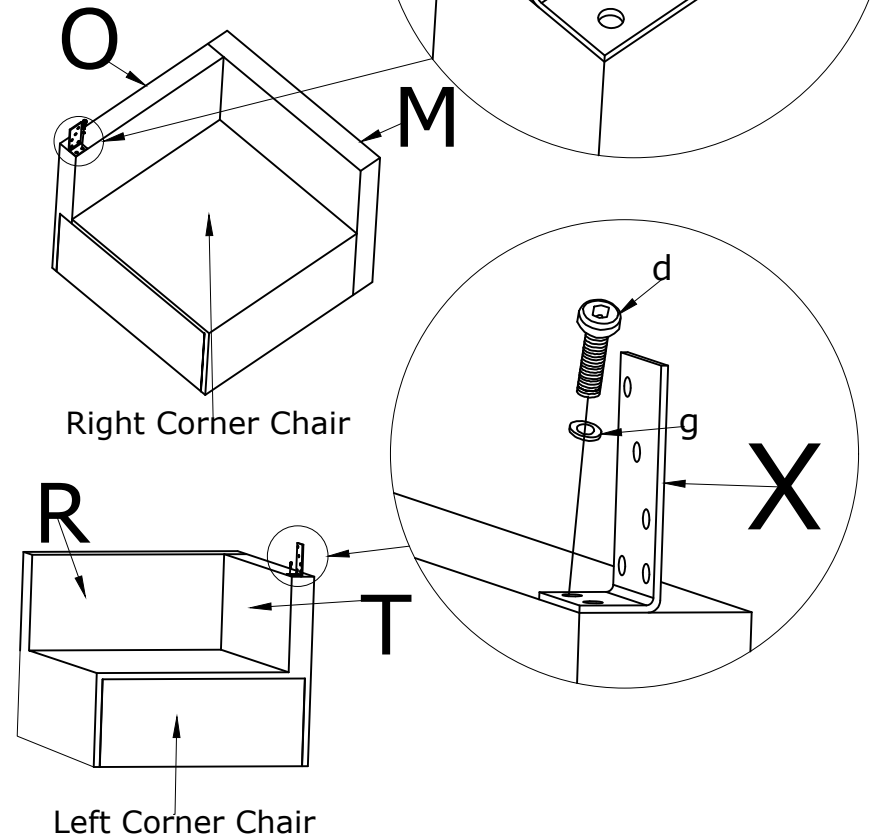

Assembly Instructions

ATTENTION:

1. When installing the canopy, you will need to thread four metal pipes through it. Each pipe is labeled with a corresponding letter for easy identification. Make sure to follow the correct order of the poles as indicated in the instructions. Installing them in the wrong sequence will prevent proper assembly. The metal pipes are labeled 1, 2, 3, and 4. Installing the pipes in the wrong sequence will prevent the adjustable metal rod (Part Y) from being properly attached to the metal pipes.

2. First, determine the correct orientation of the fabric cover (Part R). When installing the canopy fabric, thread the metal poles labeled 1, 2, 3, and 4 through the fabric in the order indicated in the instruction manual.

3. After threading all four metal poles through the fabric, adjust the poles and fabric to ensure they are fully aligned and fit together properly. Since the metal poles are not straight and have a U-shape, if you experience difficulty pulling the fabric, move the poles that are already inside the fabric about 20% out to loosen it.

4. Suggestion: It will be easier and faster to do every step with 2-3 people. It is not recommended that one person complete the entire installation process.

Assembly Instructions

Step 28





①*1



②*1



r*1

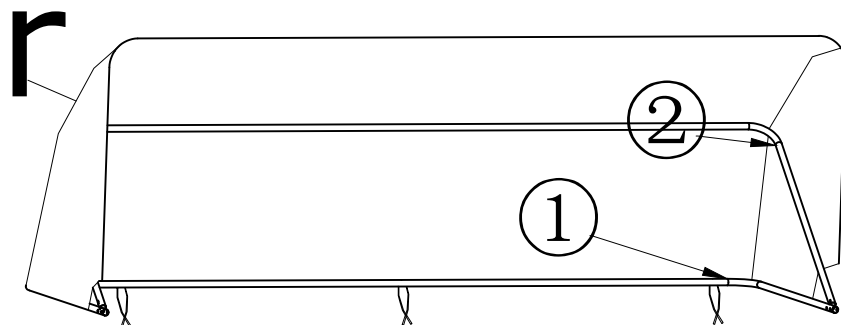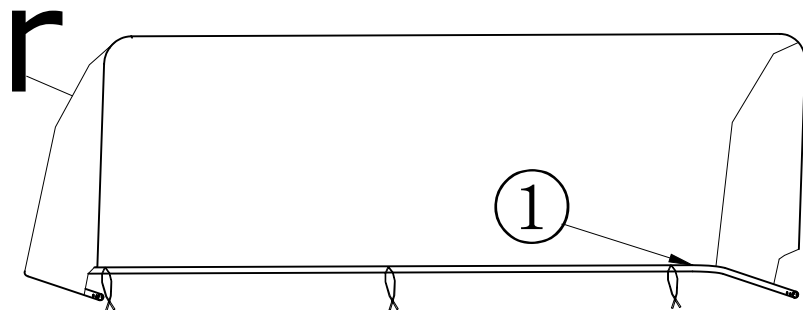

34

Assembly Instructions



Step 29



③*1



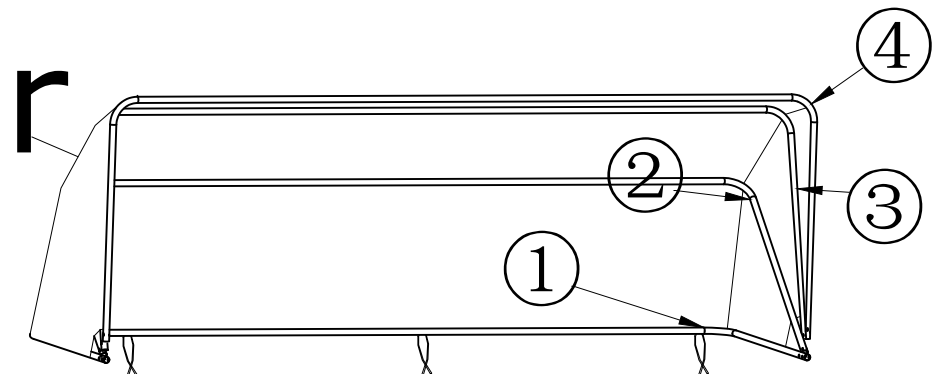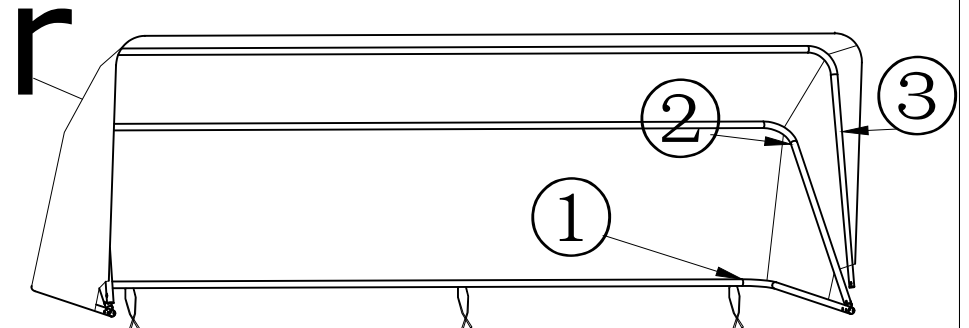


④*1





35

Assembly Instructions

Step 30

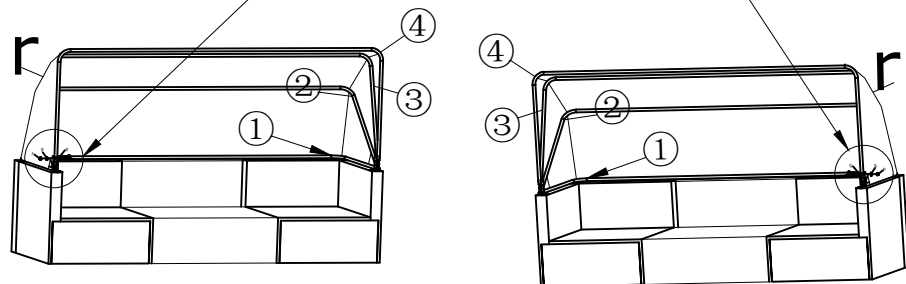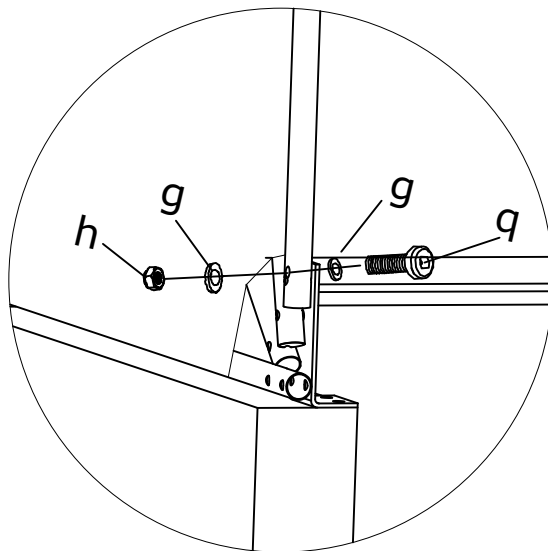


 M6x40mm	q*10
 g*20	g*20
 h*10	h*10





36

Assembly Instructions

Step 31

 200N	Y*2
 g*4	g*4
 M6x25mm	c*4

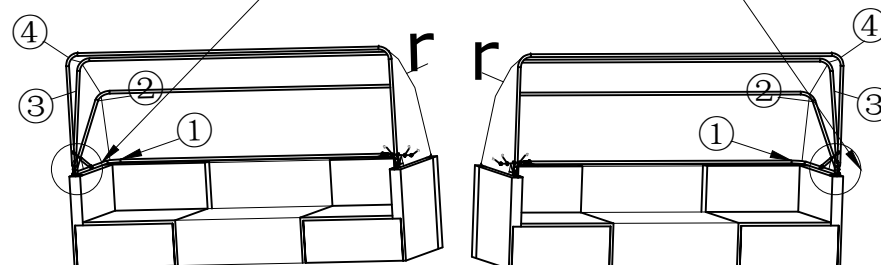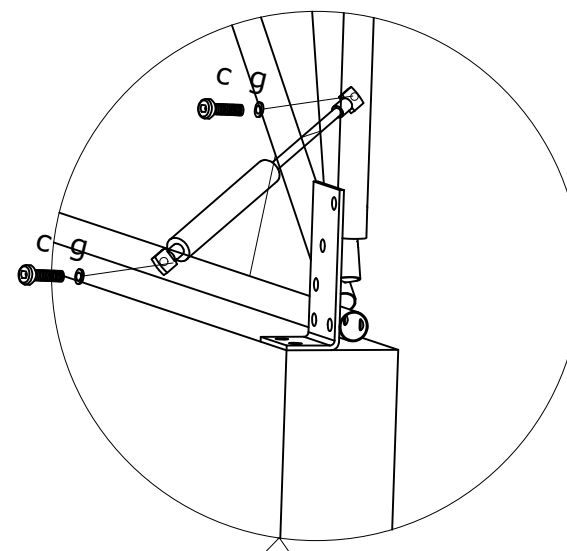



37

Assembly Instructions

Step 32



t*8

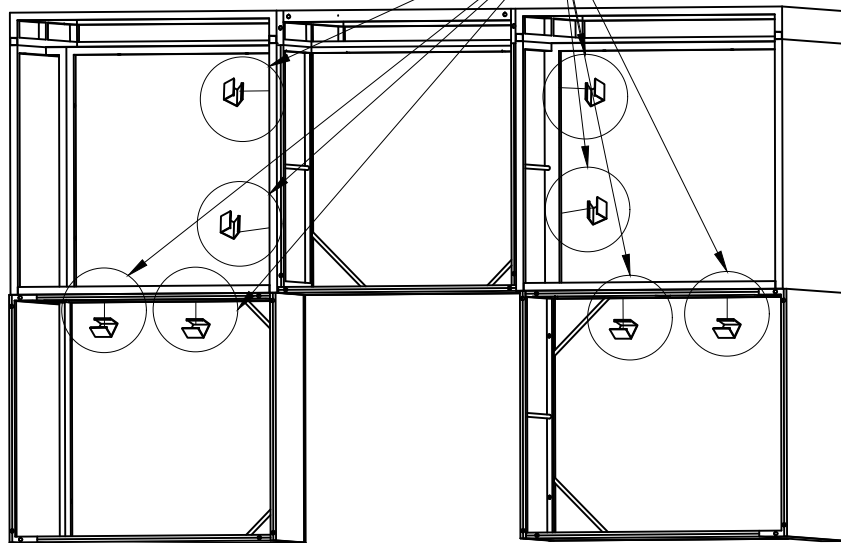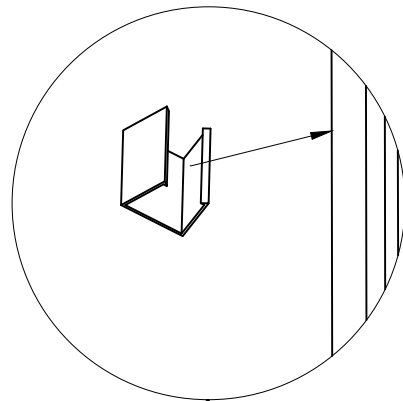


Little Tips: To minimize movement between patio chairs, you can attach the entire set by using the clips to fasten the bottom of the 6 pieces wicker sofa.

38

Assembly Instructions

Step 33



K*5




L*5



Q*2



f*2

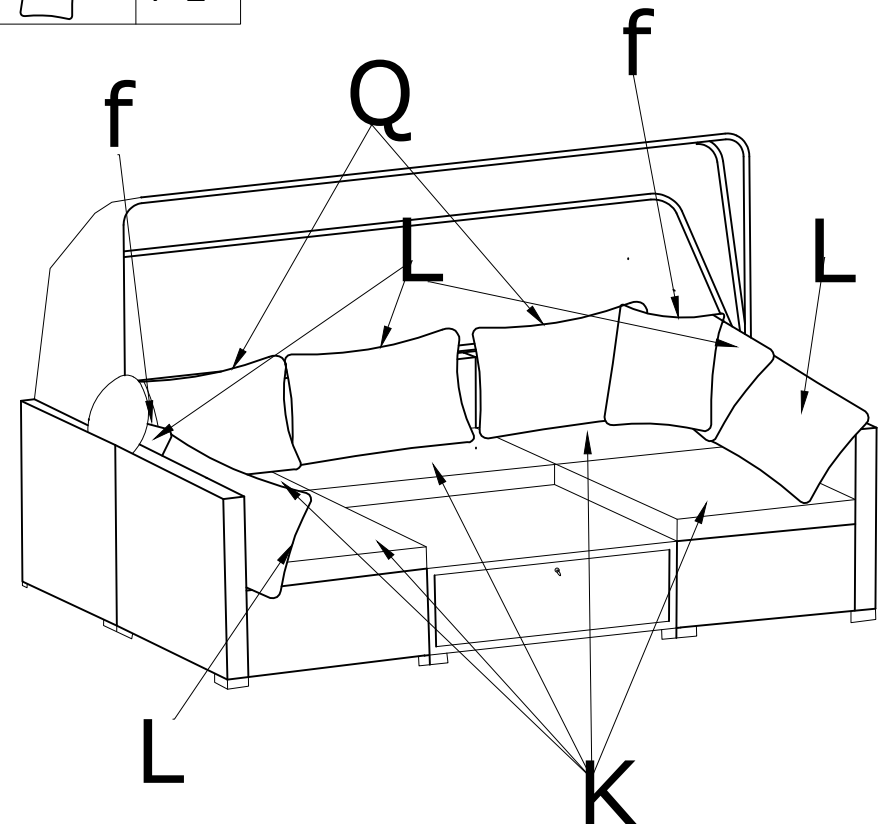

39

CONTACT US

If you order products on our store:

Please contact our service team if you need help. The service email is xinshenga202311@163.com.

(Guaranteed response within 24 hours)

If you order our products on Amazon/Walmart/Wayfair etc.

Log in Amazon/Walmart/Wayfair etc, to contact the seller.
Order>Sold By>Contact Seller

WARRANTY

So glad you have completed the assembly and can enjoy it.

If you are satisfied with our products, thank you for showing your favored 6-PIECE PATIO FURNITURE SET WITH CANOPY to your around.

Customer Service:

Any problem with the product or shipping issue, please feel free to contact, we will try our best to serve and help.