



# ASSEMBLY INSTRUCTION

## Barstool


### Parts List

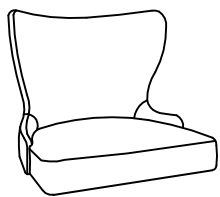

(A) Barstool Seat x 1PC

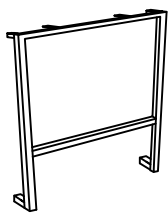


(B) Front Metal Support x 1PC

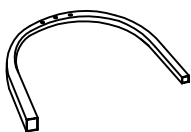

(C) Lower Metal Hoop x 1PC



(D) Rear Metal Support x 1PC

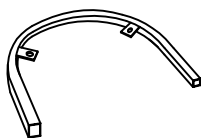

(E) Upper Metal Hoop x 1PC

### Hardware List



(F) Short Bolt x 12PCS  
M6 x 18mm



(G) Long Bolt x 6PCS  
M6 x 30mm



(H) Spring Washer X 18 PCS



(I) Flat Washer X 18 PCS




(J) Allen Key X 1 PC

### Step 1

Remove all the parts from the carton and place them on a protected surface or carpet.


- 1) Put the front metal support on the protected floor as below instructed.
- 2) Attach the upper metal hoop (E) to the upper bracket of the front metal support (B).
- 3) Attach the lower metal hoop (C) to the lower bracket of the front metal support (B).

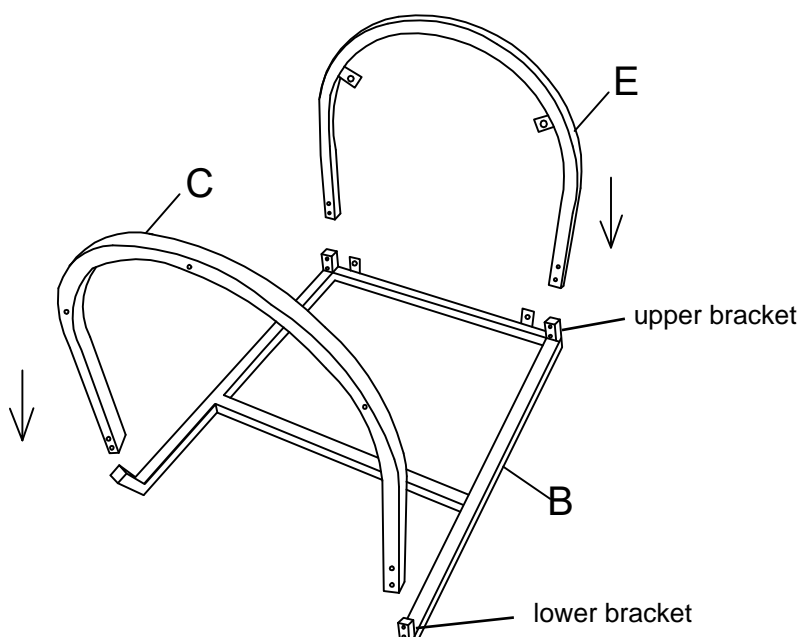

\* Please ensure that the barstool is assembled on a protected surface to avoid scratching the metal frame.

## Step 2


Align with the holes and insert the short bolt (F) x 8pcs with spring washer (H) x 8pcs and flat washer (I) x 8pcs by using allen key (J), Just screw the bolts a little at the step, and keep the two metal hoops slightly adjustable, which can make the next assembly more smoothly.

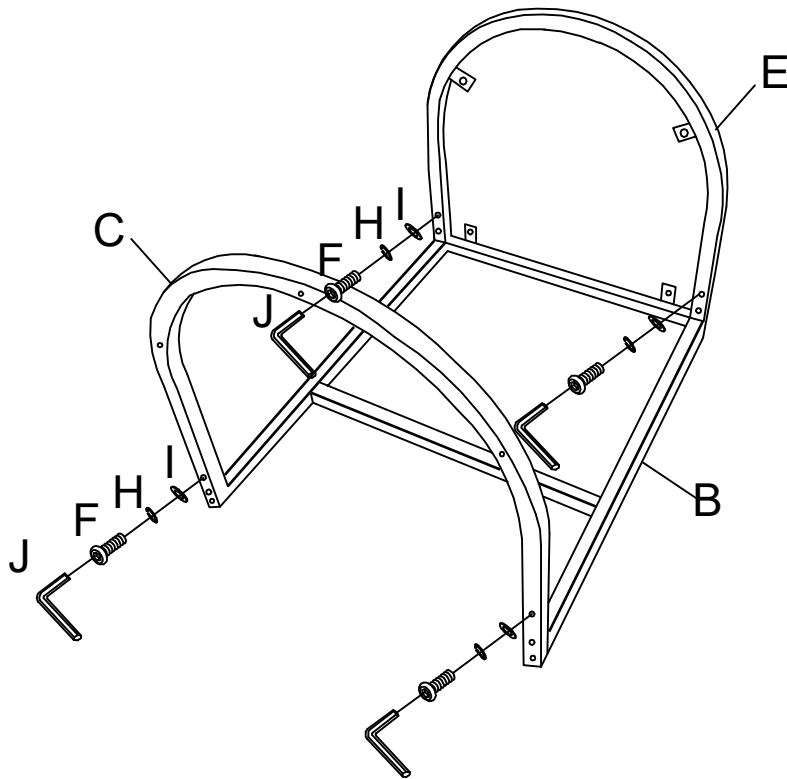

## Step 3

Fit the rear metal support (D) between the upper metal hoop (E) and the lower metal hoop (C).


- 1) Align with their hole positions, insert the long bolt (G) x 2pcs from the bottom of lower metal hoop with spring washer (H) x 2pcs, flat washer (I) x 2pcs by using allen key (J)
- 2) Insert the short bolt (F) x 4pcs from the rear metal support with the spring washer (H) x 4pcs, flat washer (I) x 4pcs by using allen key (J)
- 3) Then tighten all the bolts securely, including the short bolts from the last step.

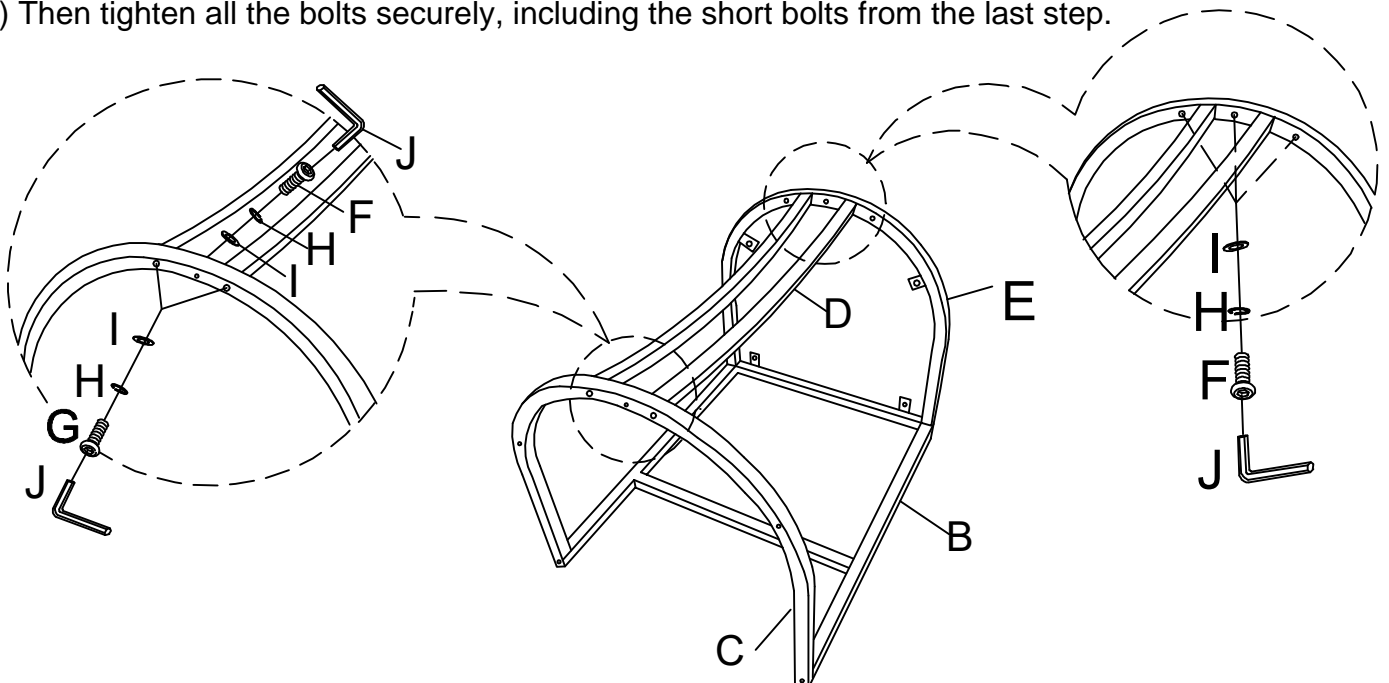

## Step 4

When the metal frame base assembly is complete, attach it to the bottom of barstool seat (A) align their hole positions, and insert the long bolt (G) x 4pcs with spring washer (H) x 4pcs, flat washer (I) x 4pcs by using allen key (J), then fully tighten all the bolts securely.

\* Remark: Insert the 4pcs of bolts first, Fully tighten the bolts later.

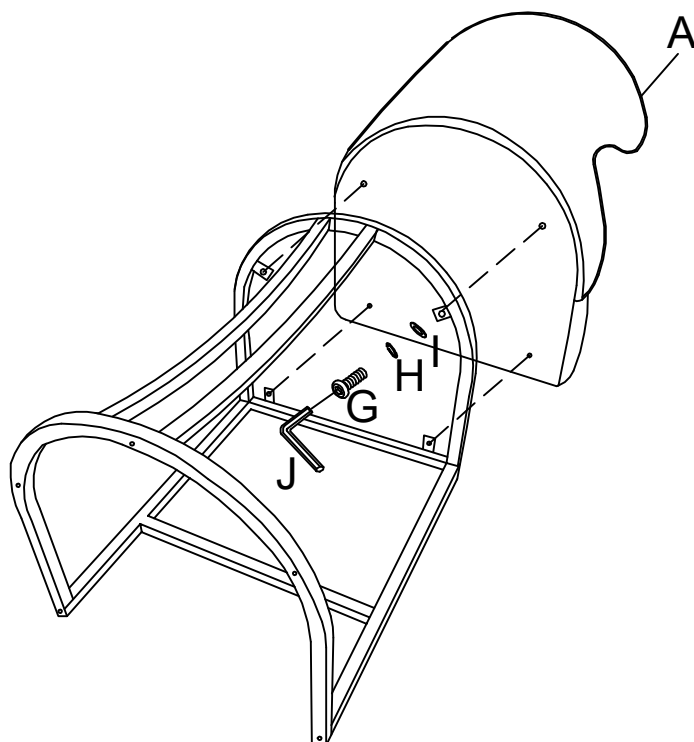

## Step 5

Place barstool chair upright on the floor, if need, you can adjust the bottom adjustable feet to make the chair at the same level, then the assembly is complete.

