
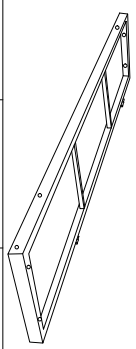
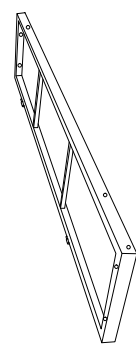
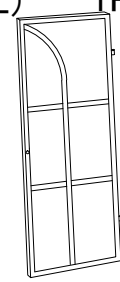








ASSEMBLY INSTRUCTION

(DON'T FULLY TIGHTEN THE SCREWS BEFORE FINISHING ASSEMBLY)


COMPONENTS:

A) 1PC	F) 1PC	I) 1PC	J) 1PC	K) 1PC	L) 1PC
					
B) 8PCS	C) 12PCS	G) 2PCS			
					
D) 2PCS	E) 2PCS	H) 1PC		M) 2PCS	N) 2PCS
					


STEP1

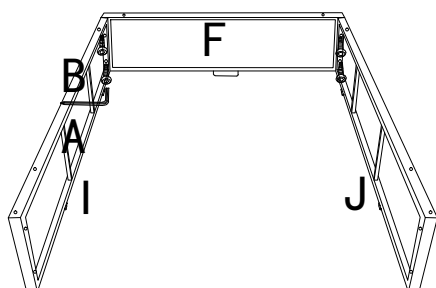


STEP2

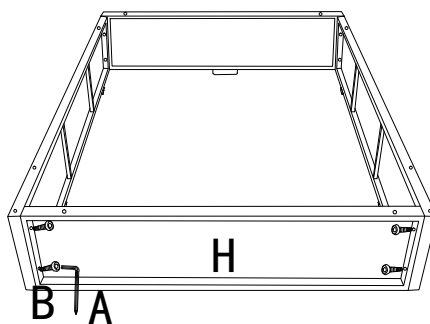


STEP3

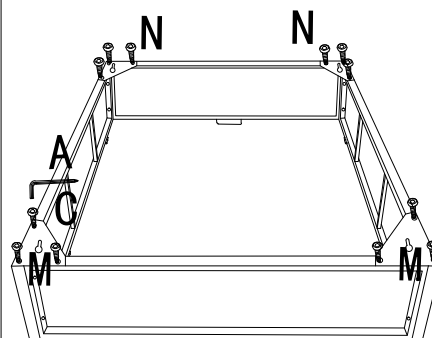


STEP4

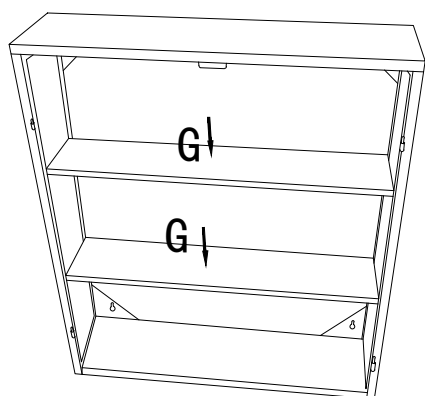


STEP6

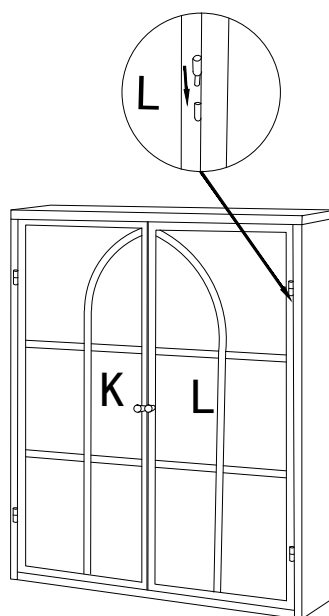

STEP7

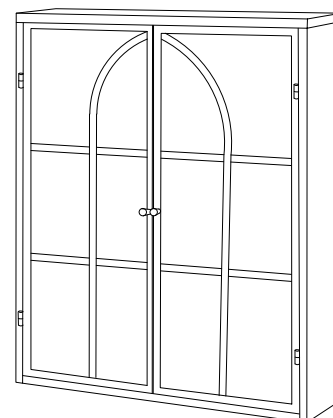


STEP5

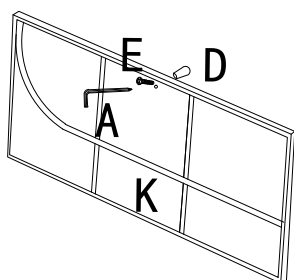


NOTE: AFTER ASSEMBLY, PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED.


①

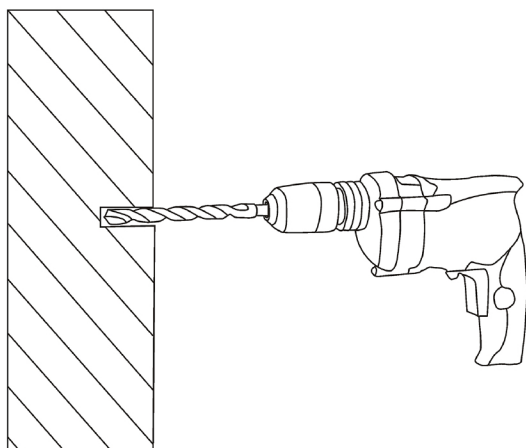

②

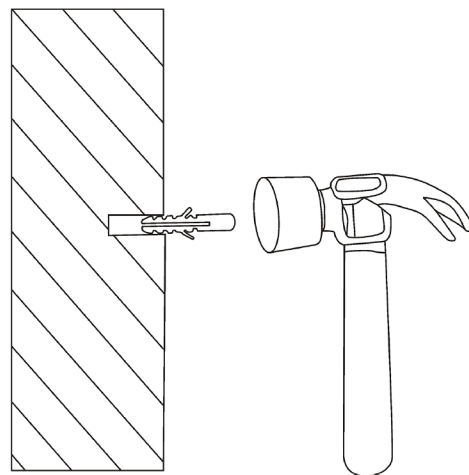

③

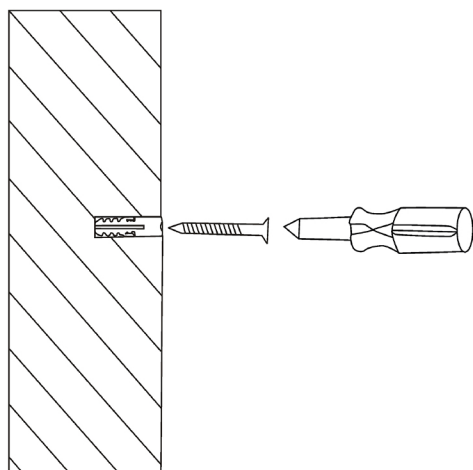

④

