


Bed Frame SE-12.14A


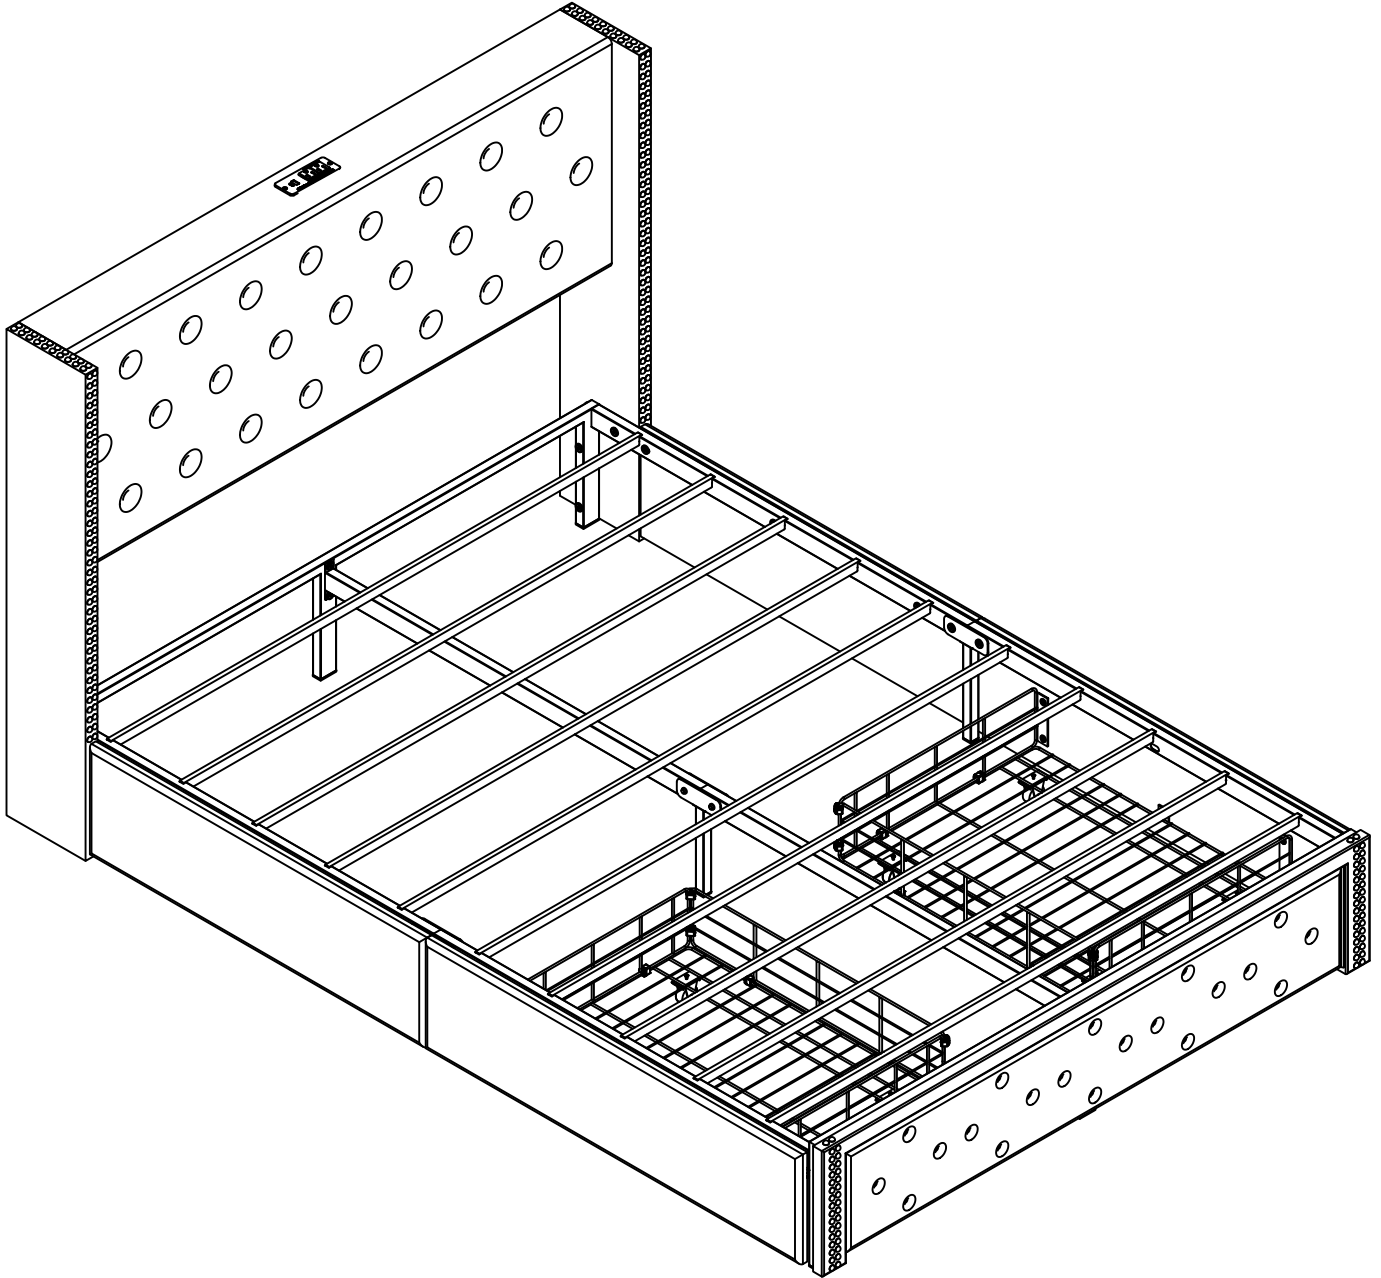


Model:C254-F-BK



PRODUCT GUIDE AND INSTALLATION MANUAL








Parts List:

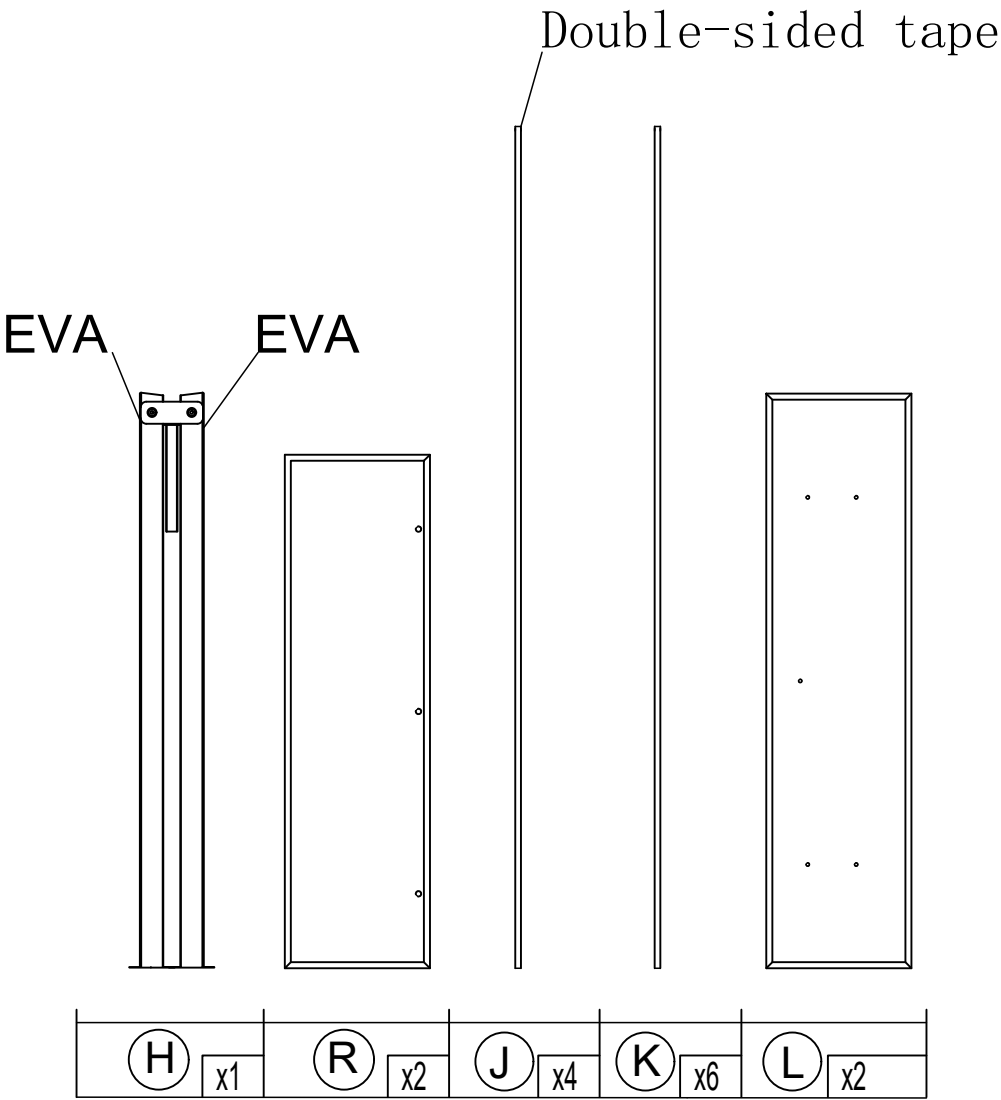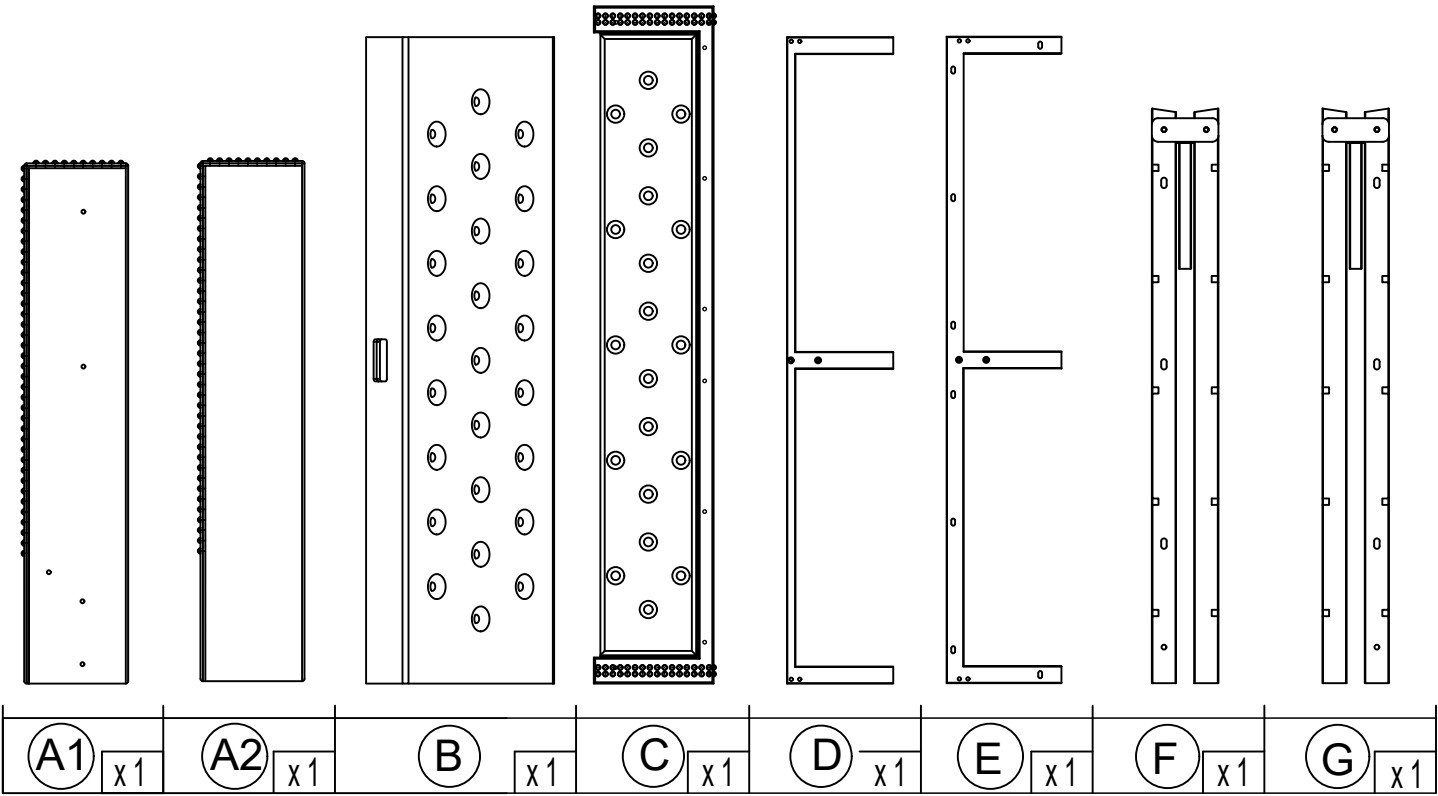


Parts List:

					
(M) x1	(N1) x4	(N2) x2	(N3) x2	(N4) x8	(Q1) x22


					
M6x12mm	M8x15mm	M8x30mm	M6x55mm	M6x30mm	M6x40mm
(T) x10	(Q) x4	(Q2) x8	(Q3) x4	(Q4) x14	(Q5) x6

		
M4x10mm	KEY 4	M4x6mm
(V1) x3	(W) x1	(N5) x8




STEP 1

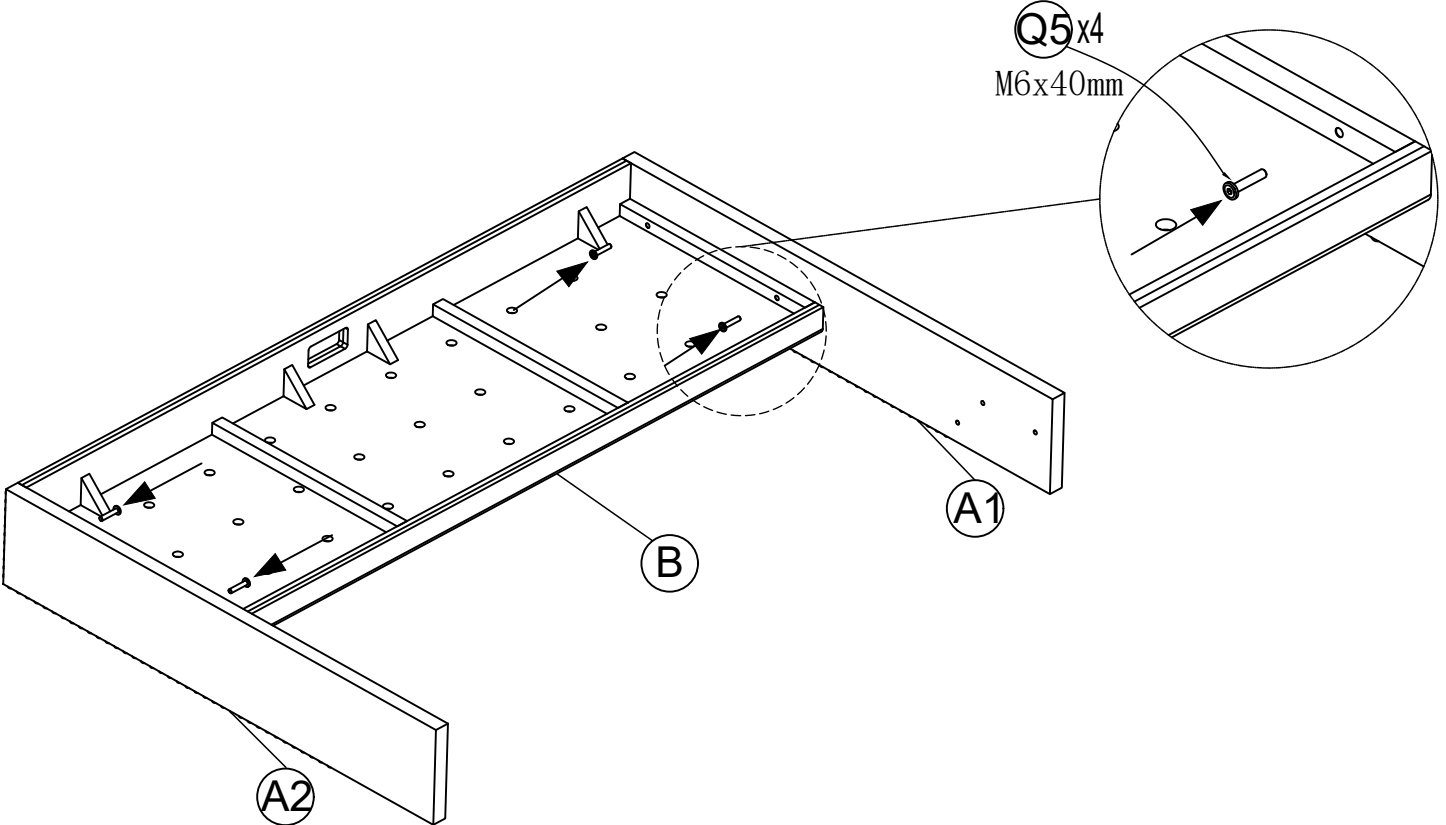


STEP 2

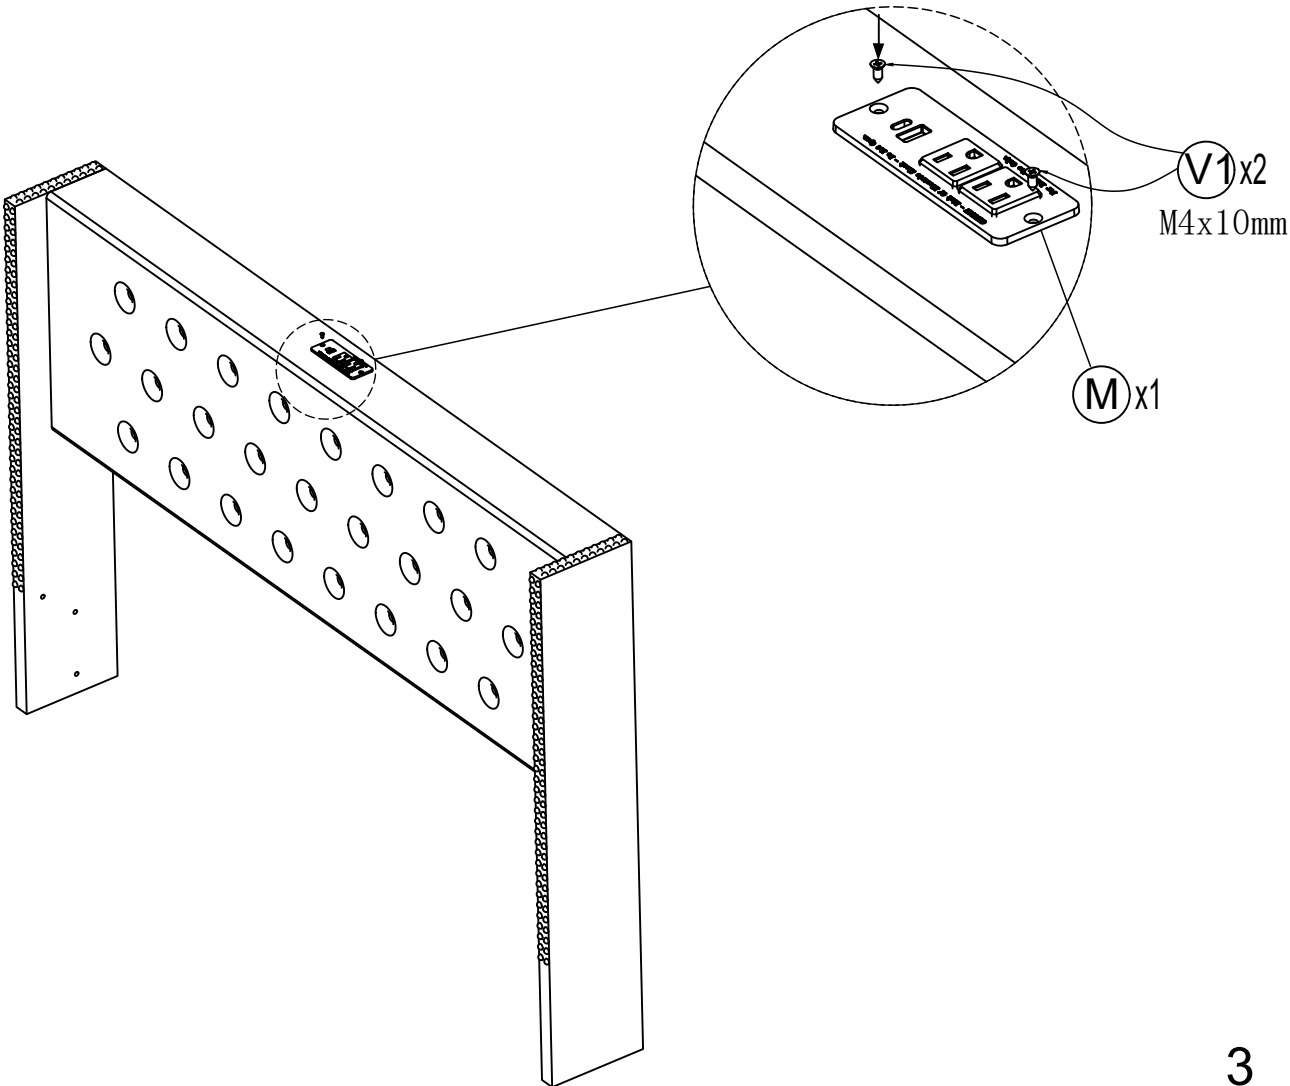


STEP 3

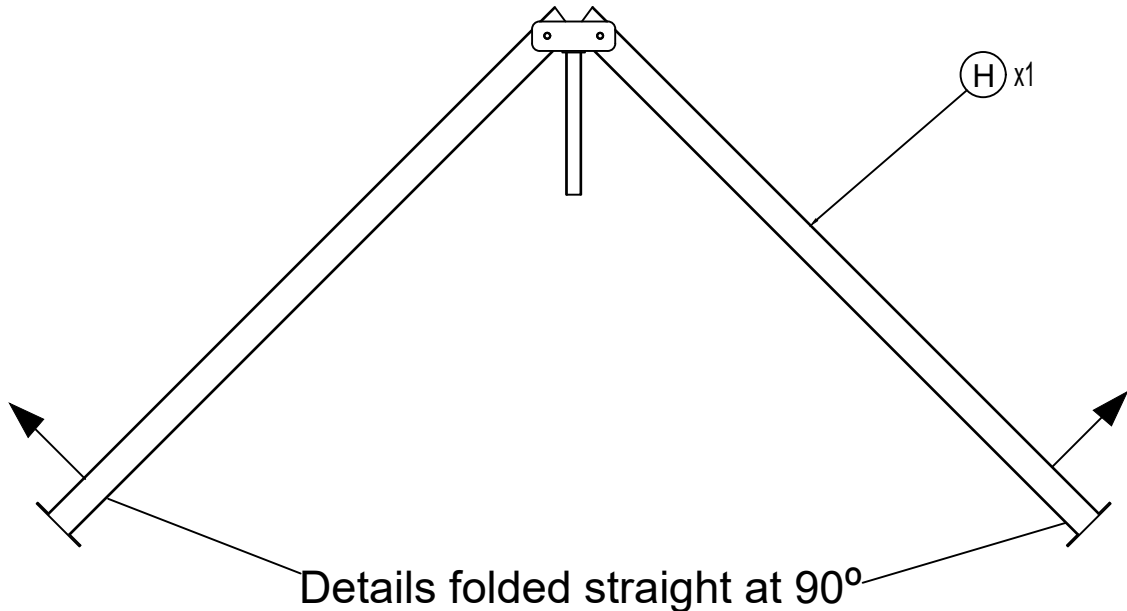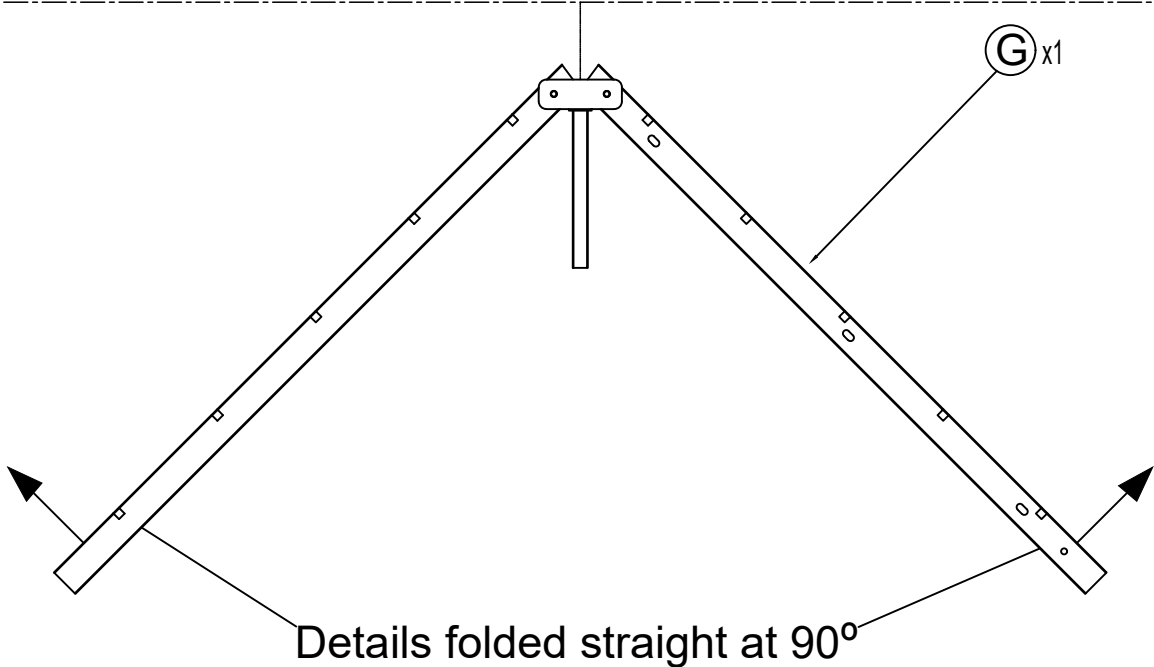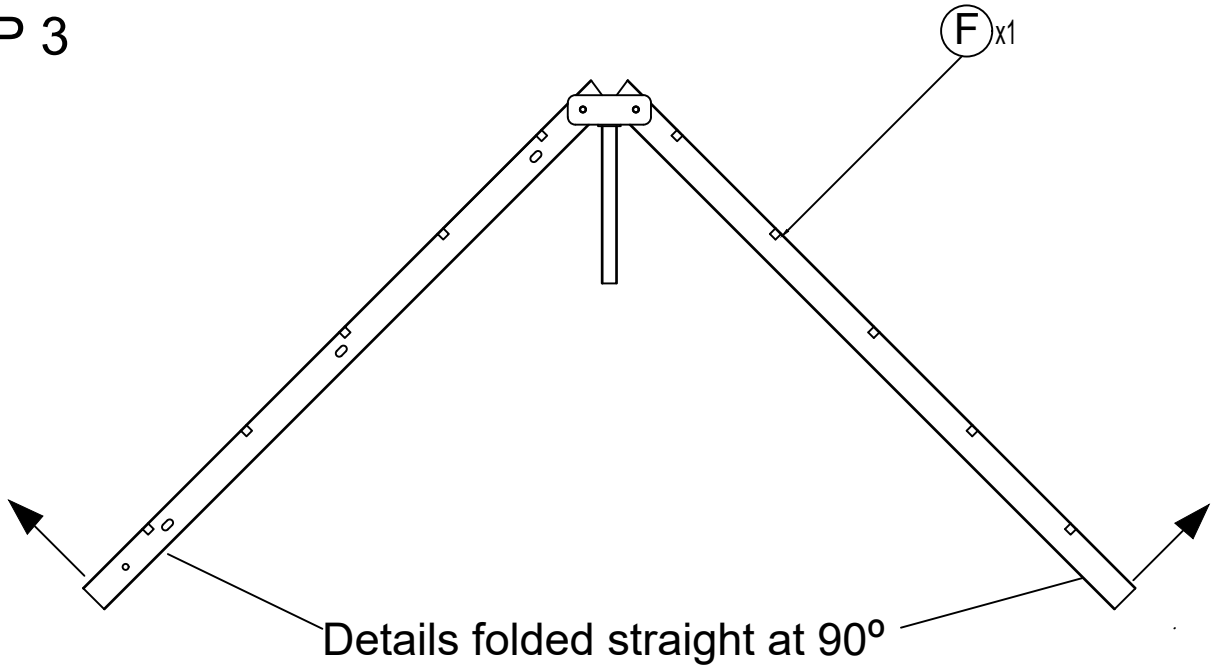


STEP 4

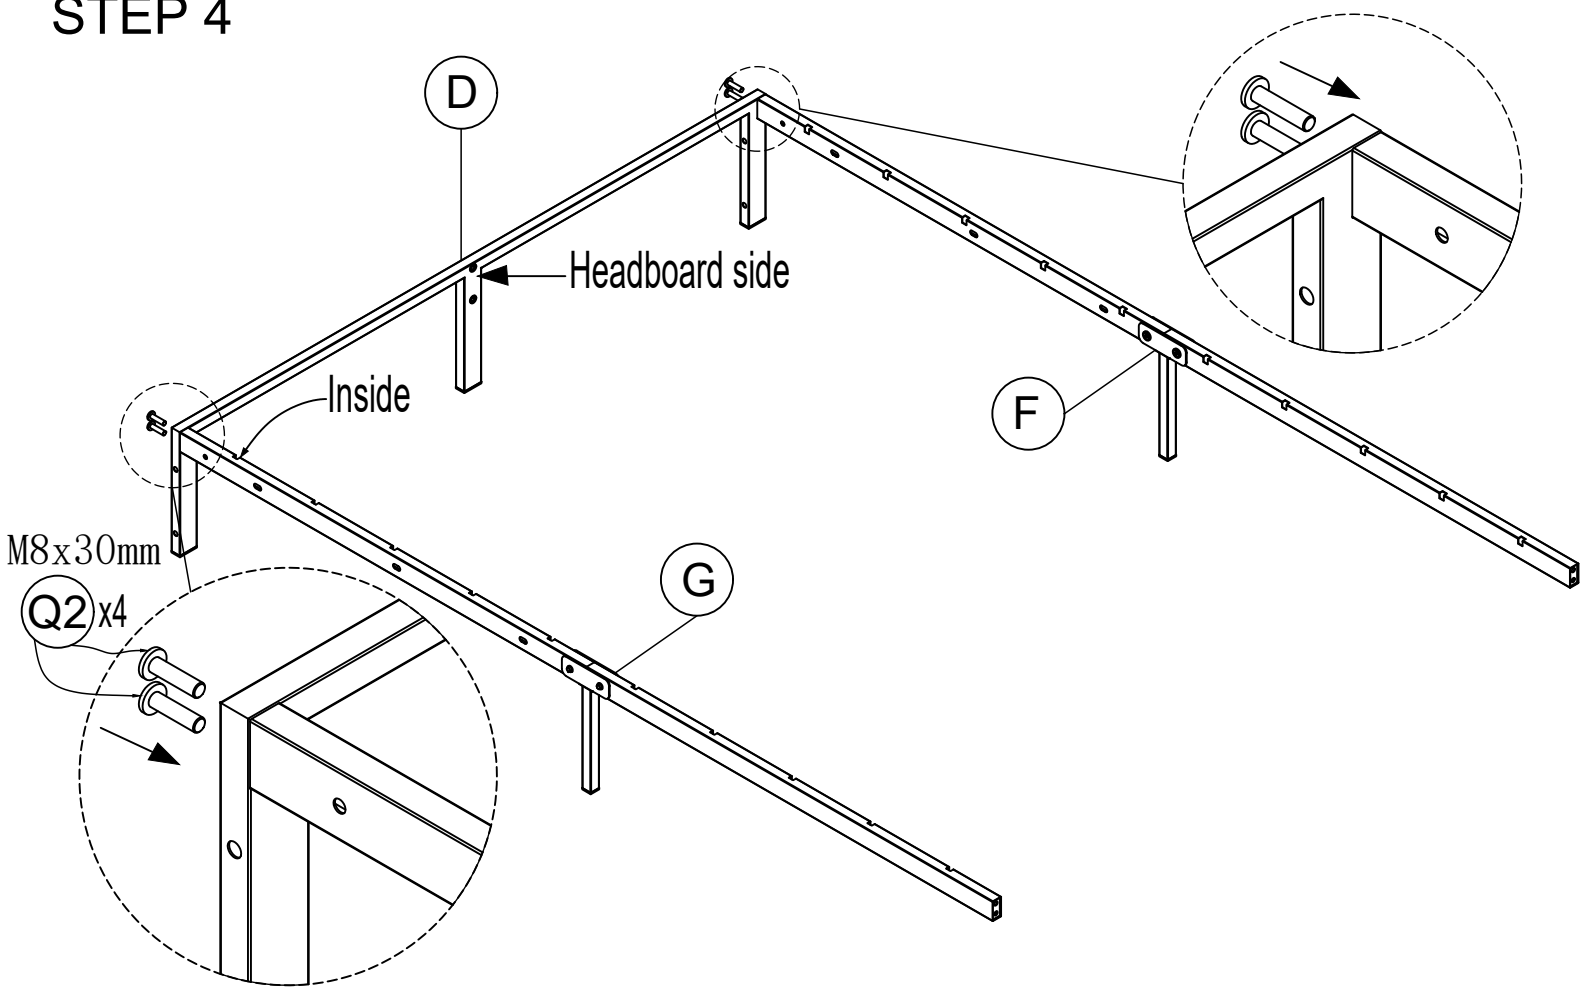


STEP 5

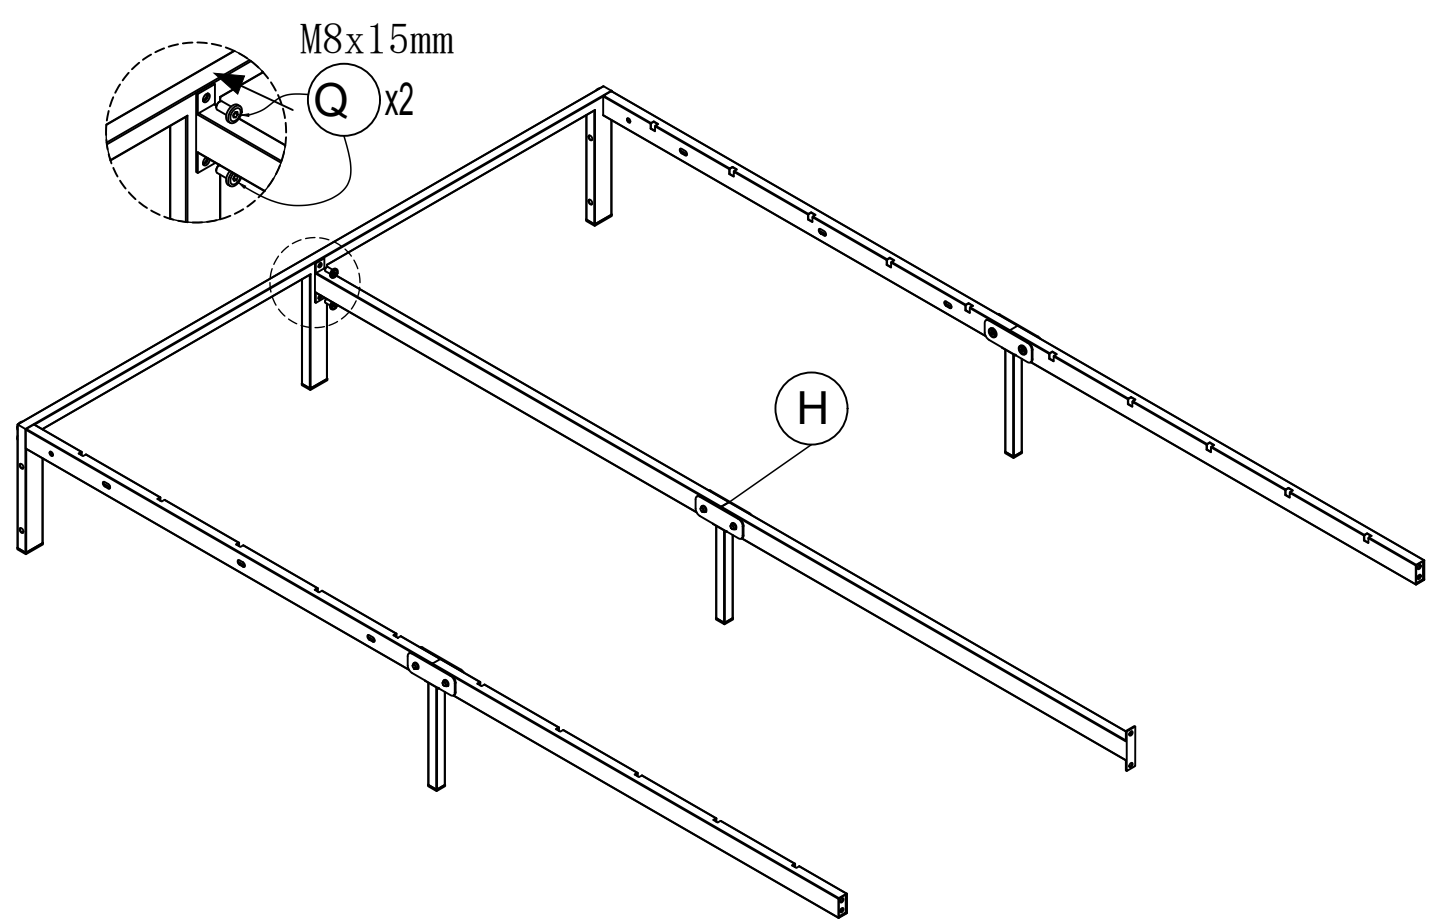


STEP 6

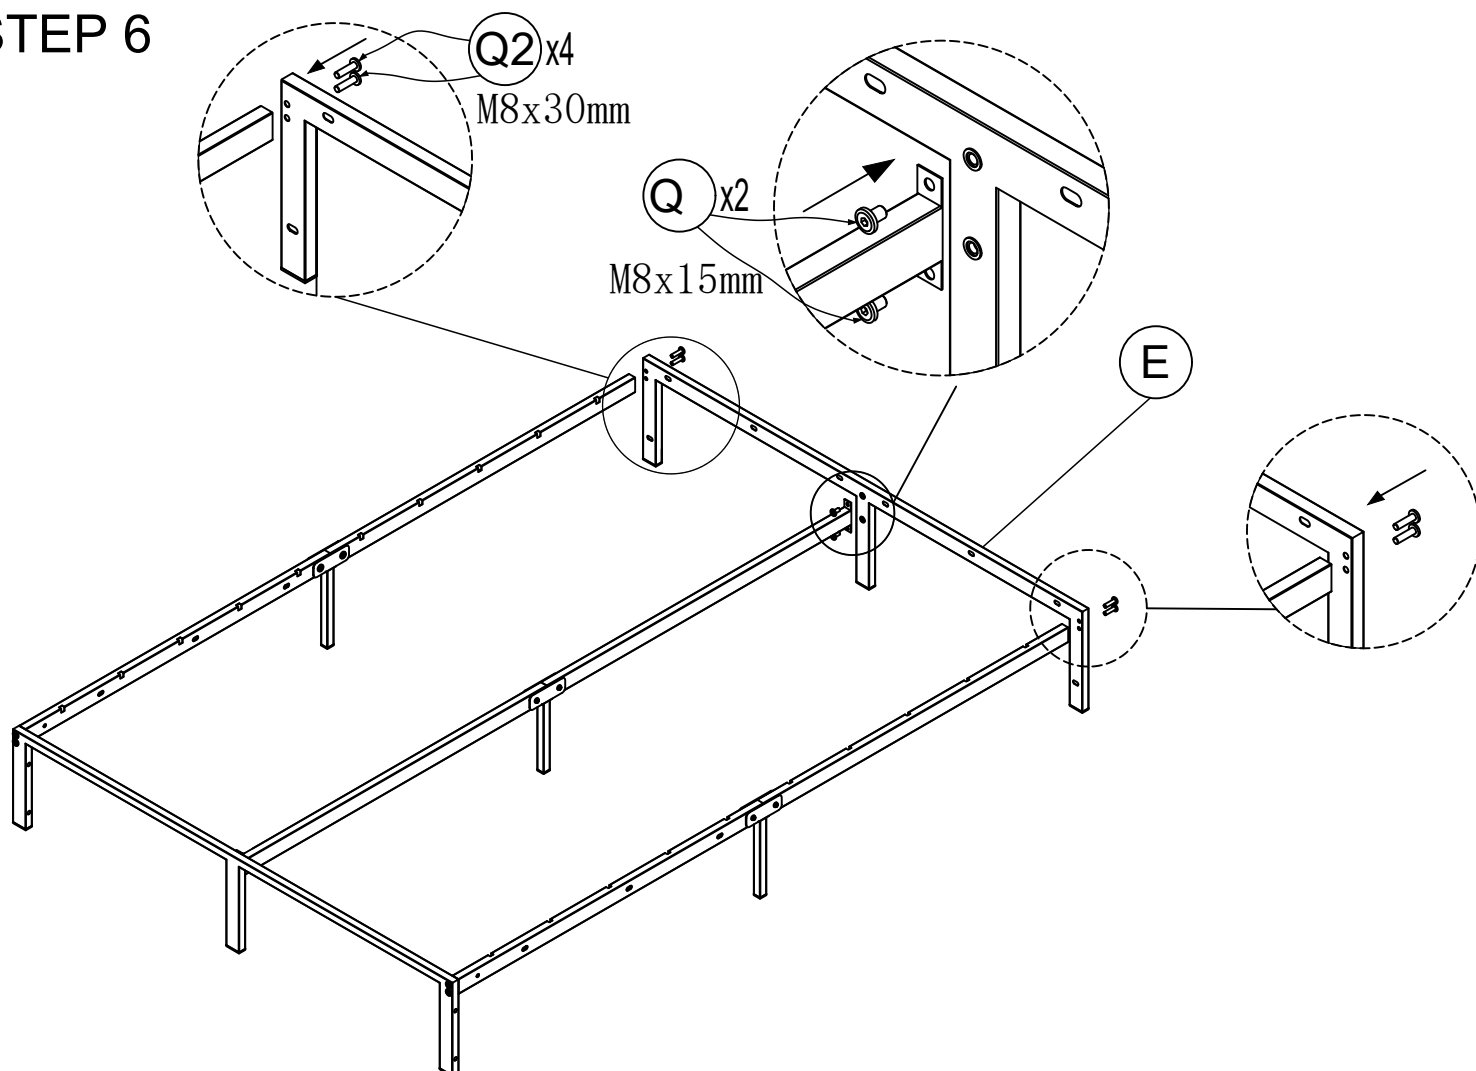


STEP 7

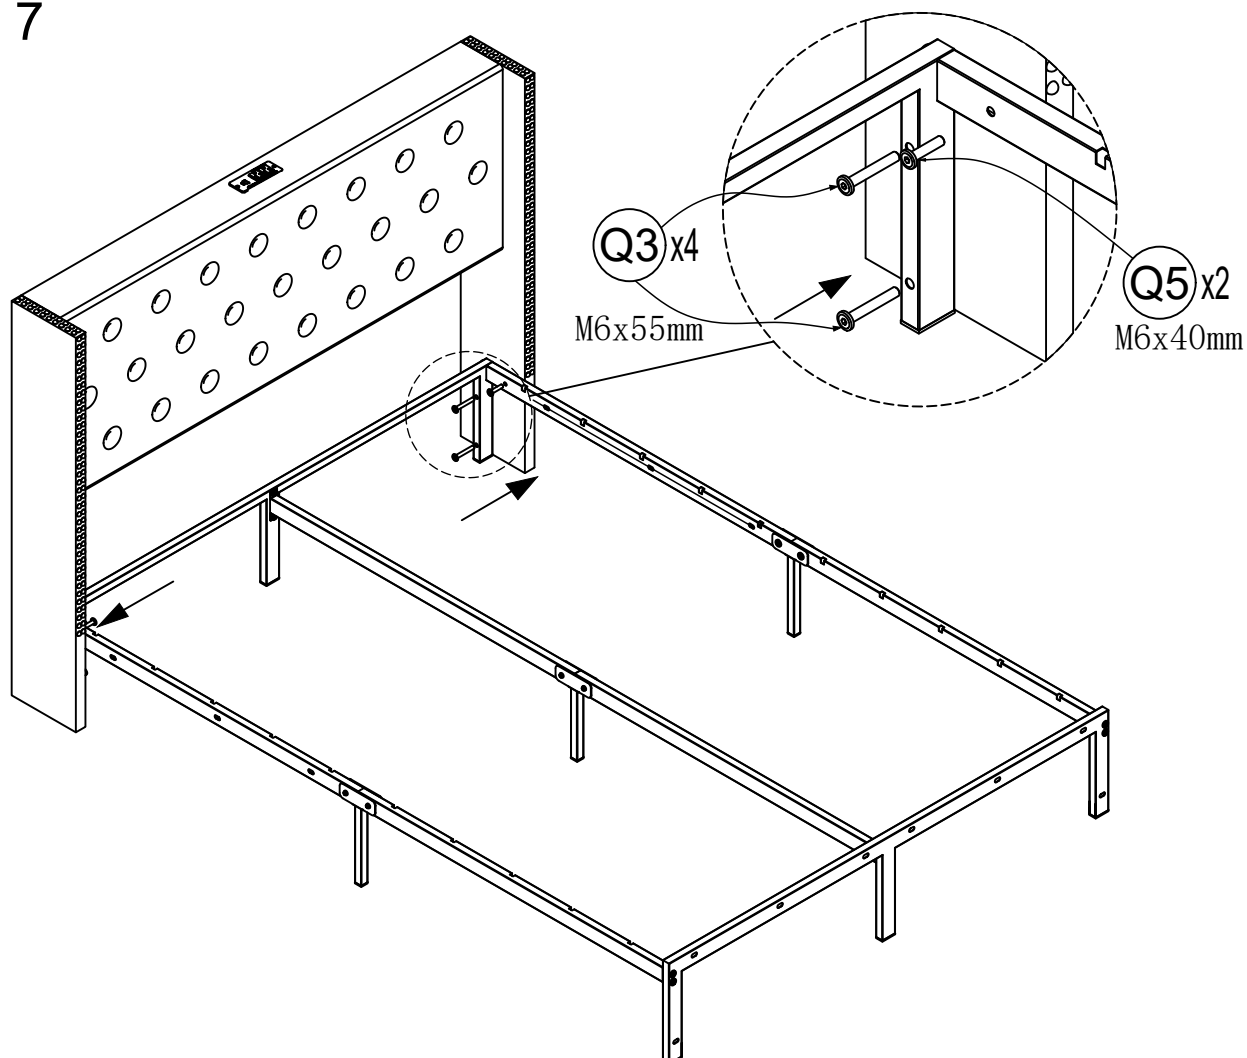

STEP 8

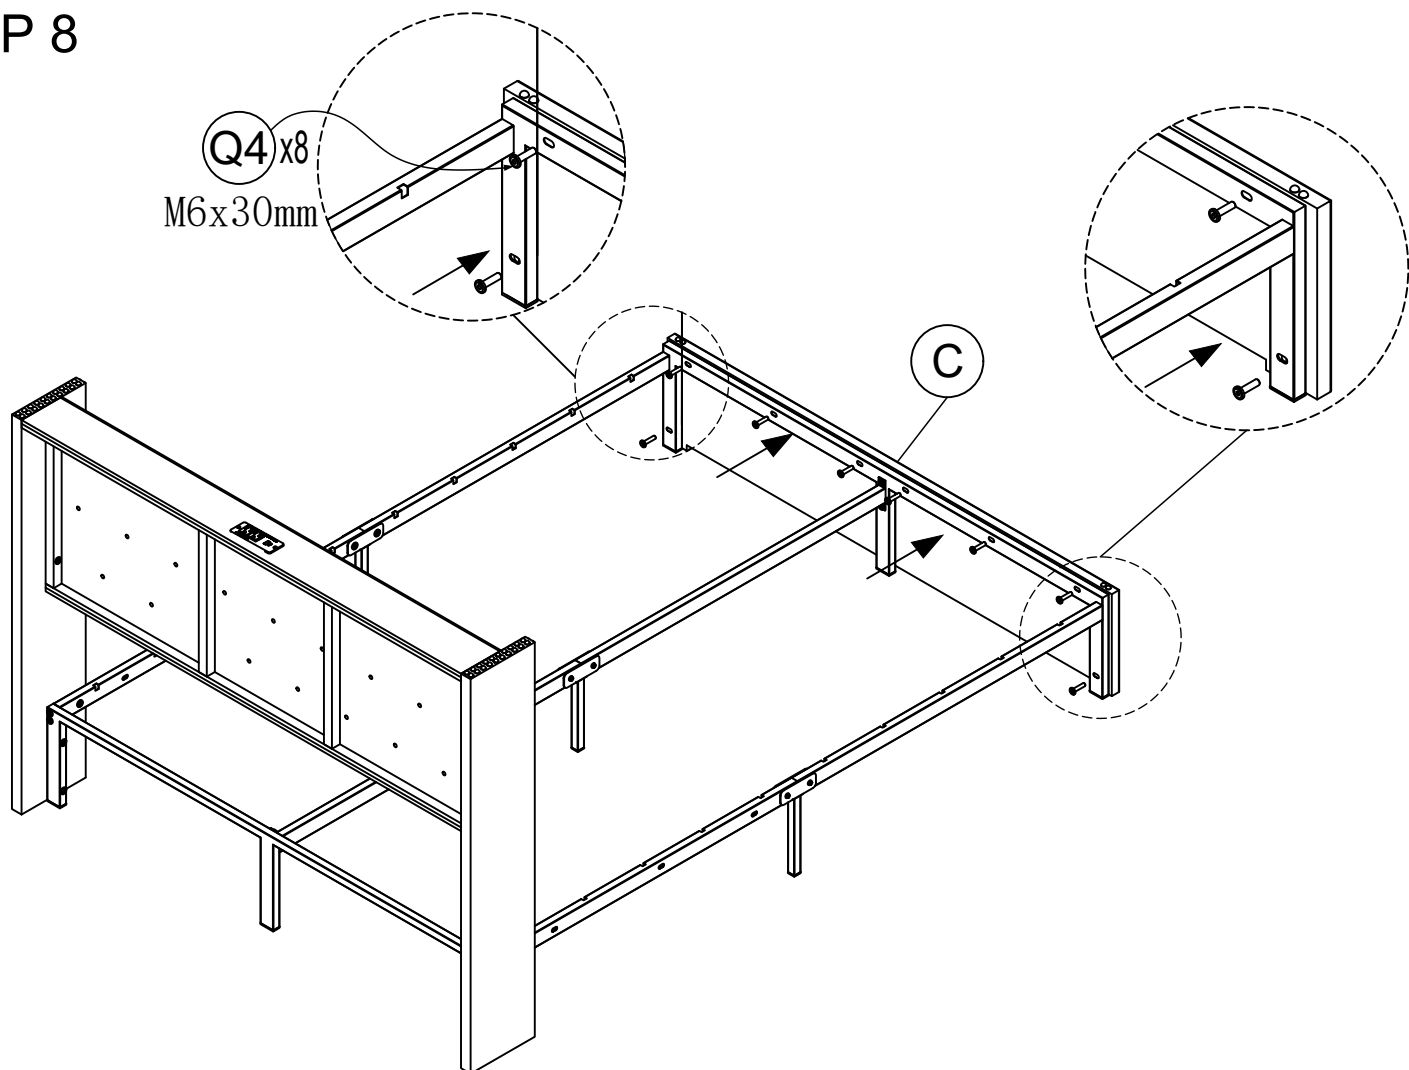


STEP 9


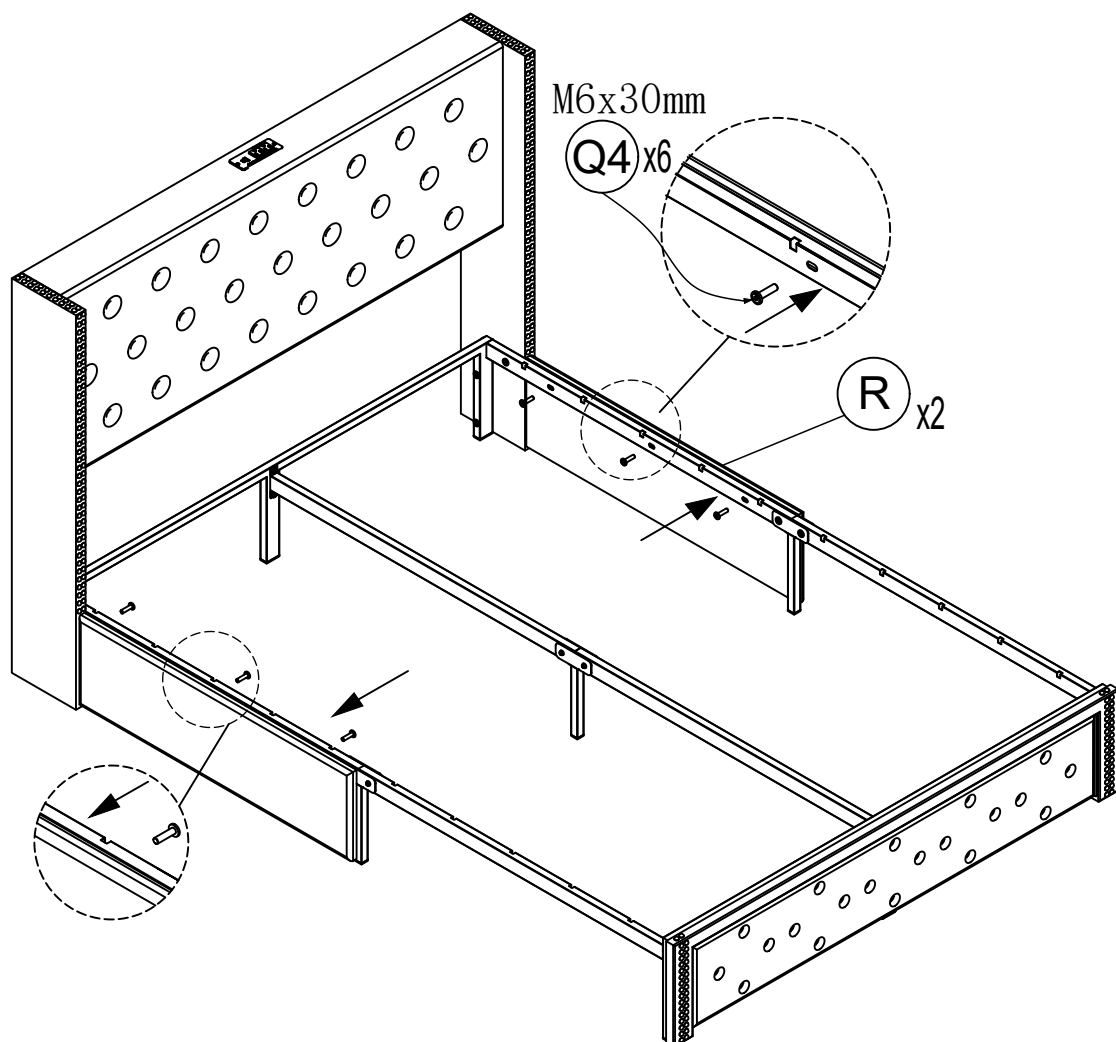


STEP 10


Tear off the double-sided adhesive tape before place the mattress.

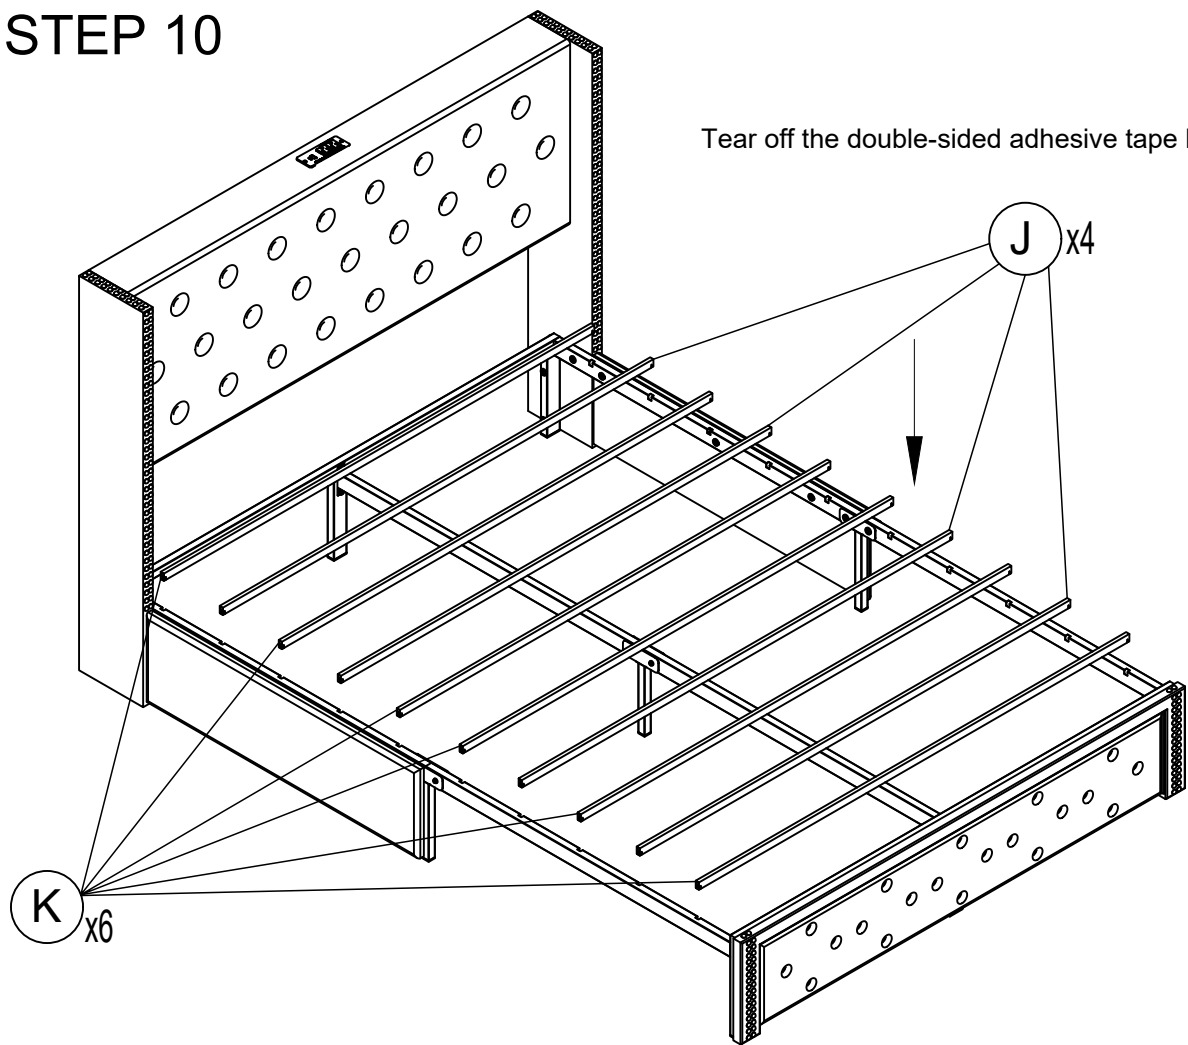

Put all the screw in but not tighten, don't let the screws get through all the wheel's holder

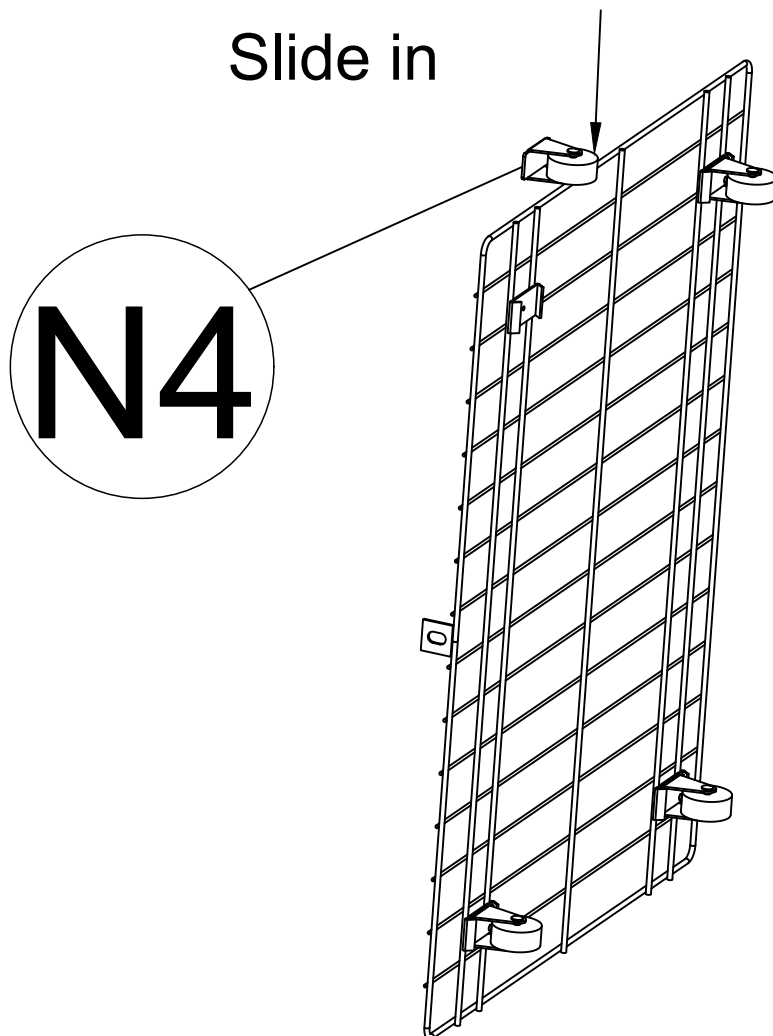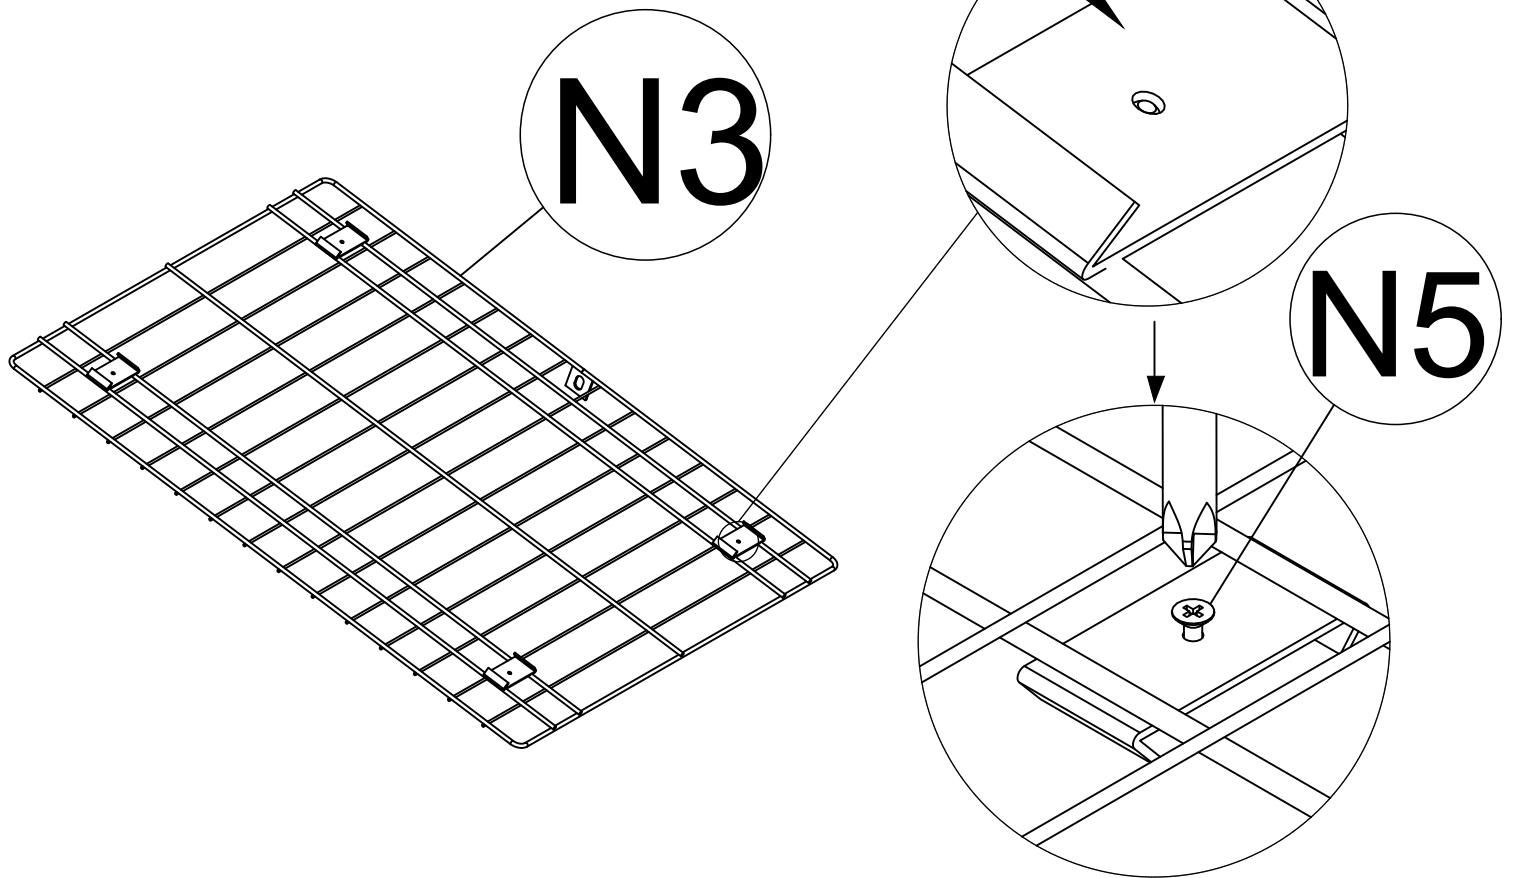



Re-tighten the screws

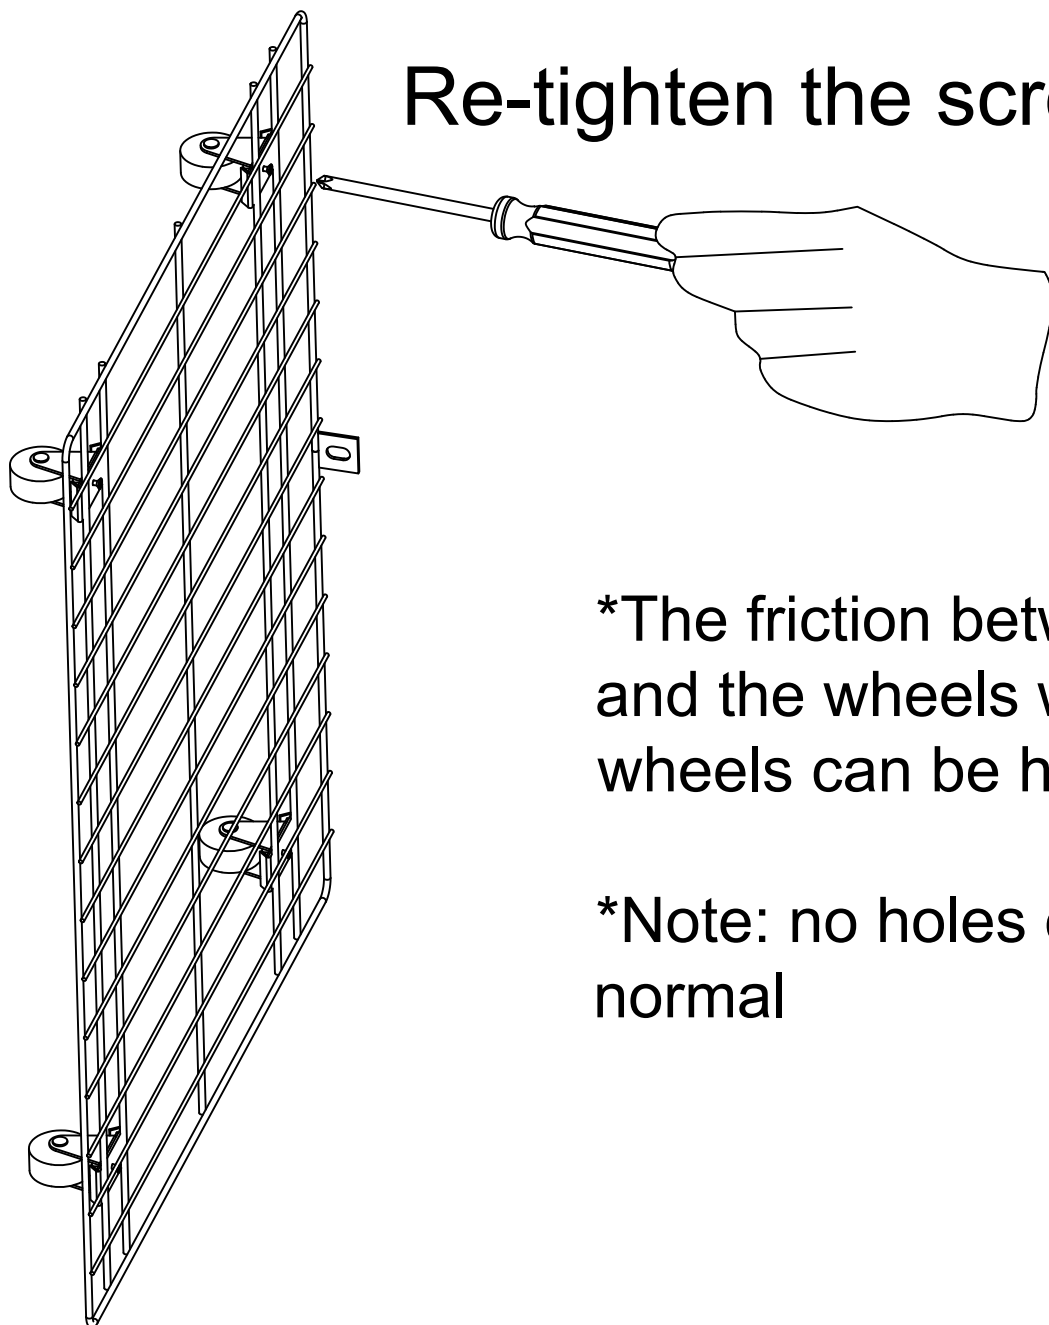



*The friction between the screw and the wheels will make the wheels can be holded

*Note: no holes on the wheels is normal


Detailed assembly instructions Q1

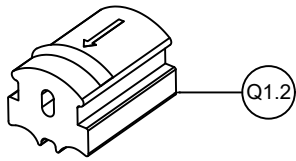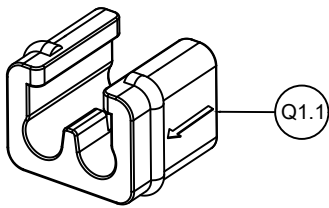


these two lines
on Q1.1 and
Q1.2 need to
be matched

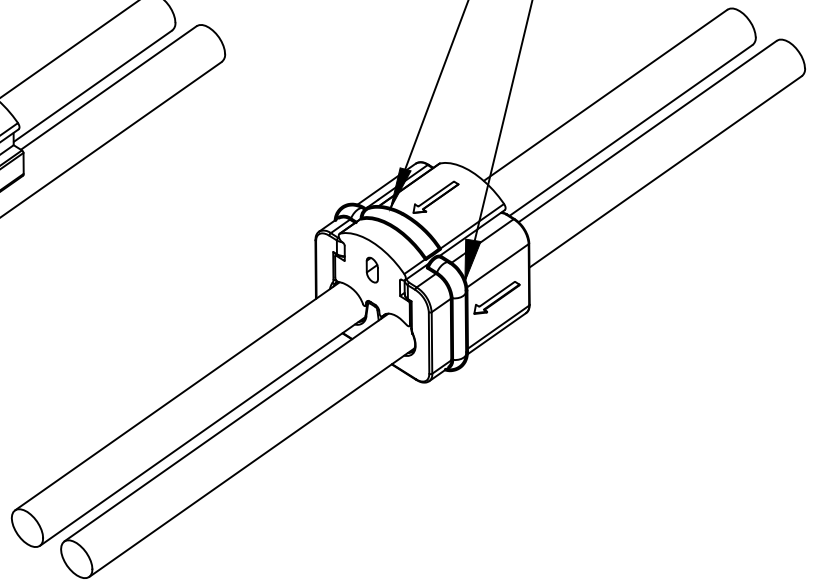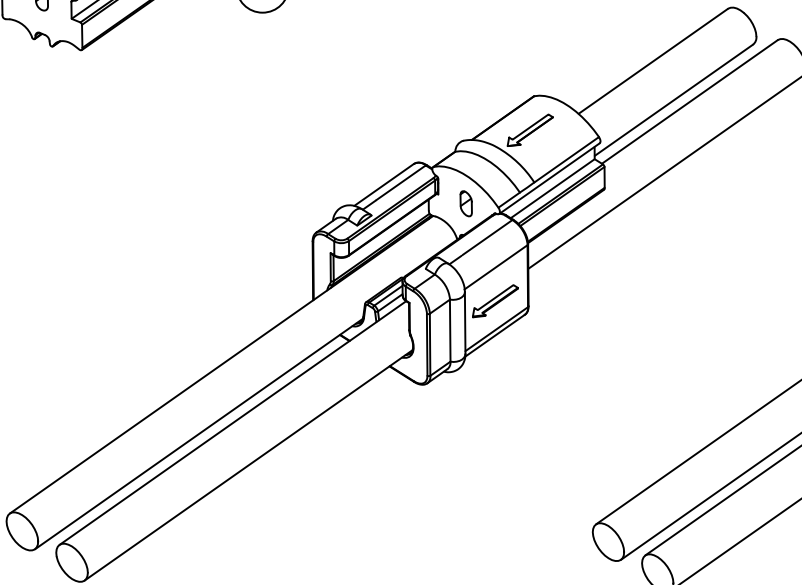


STEP 11

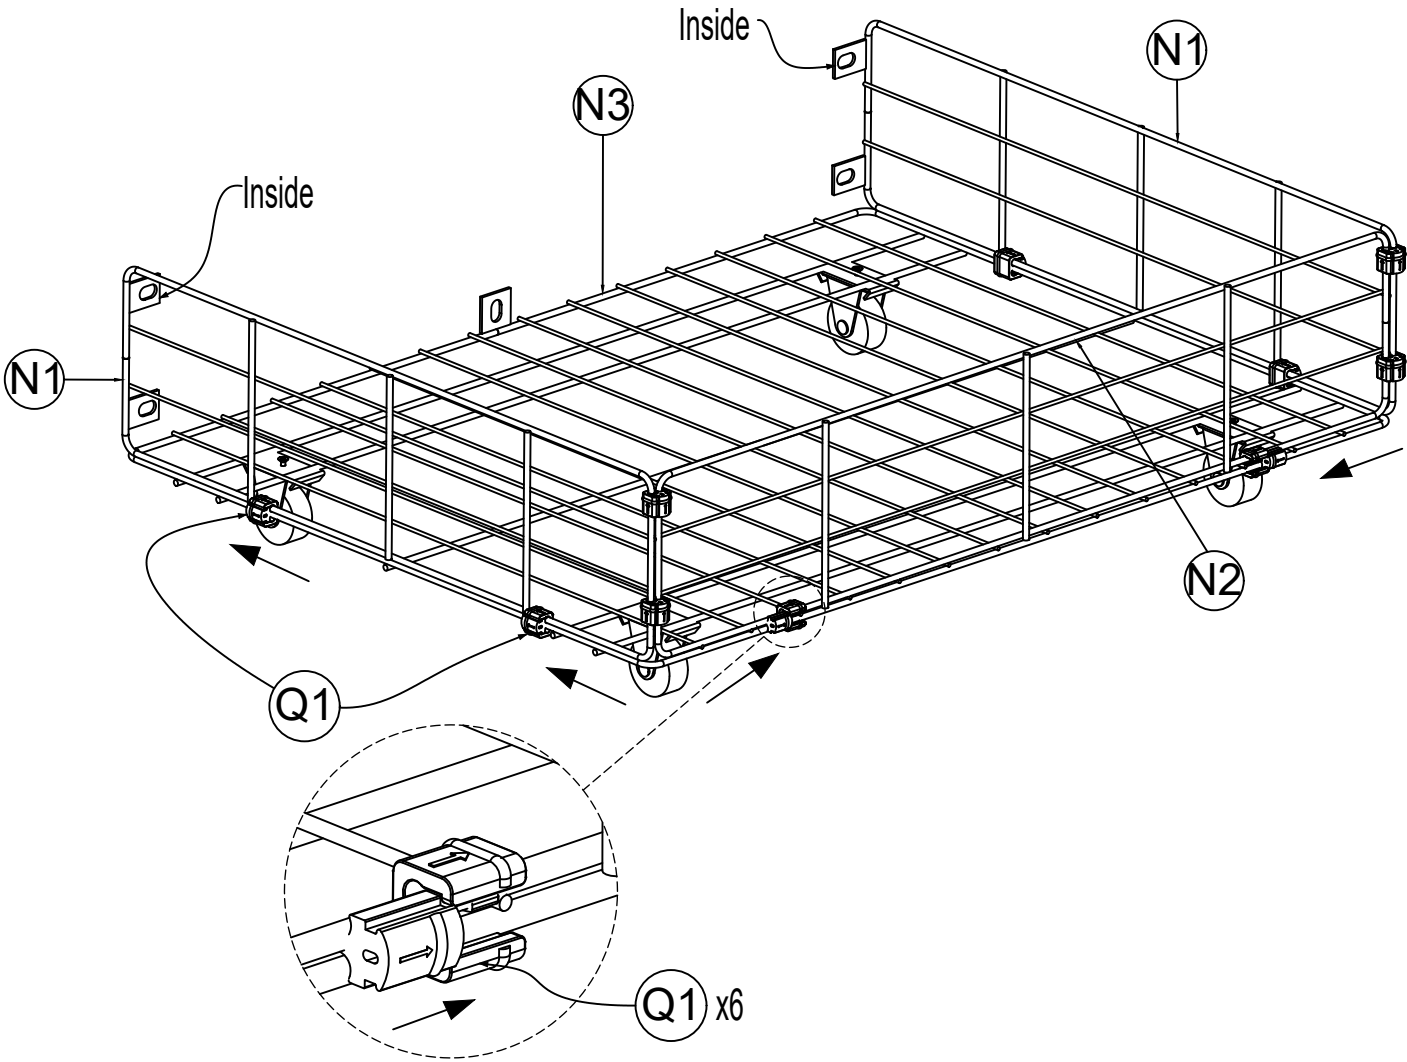

STEP 12

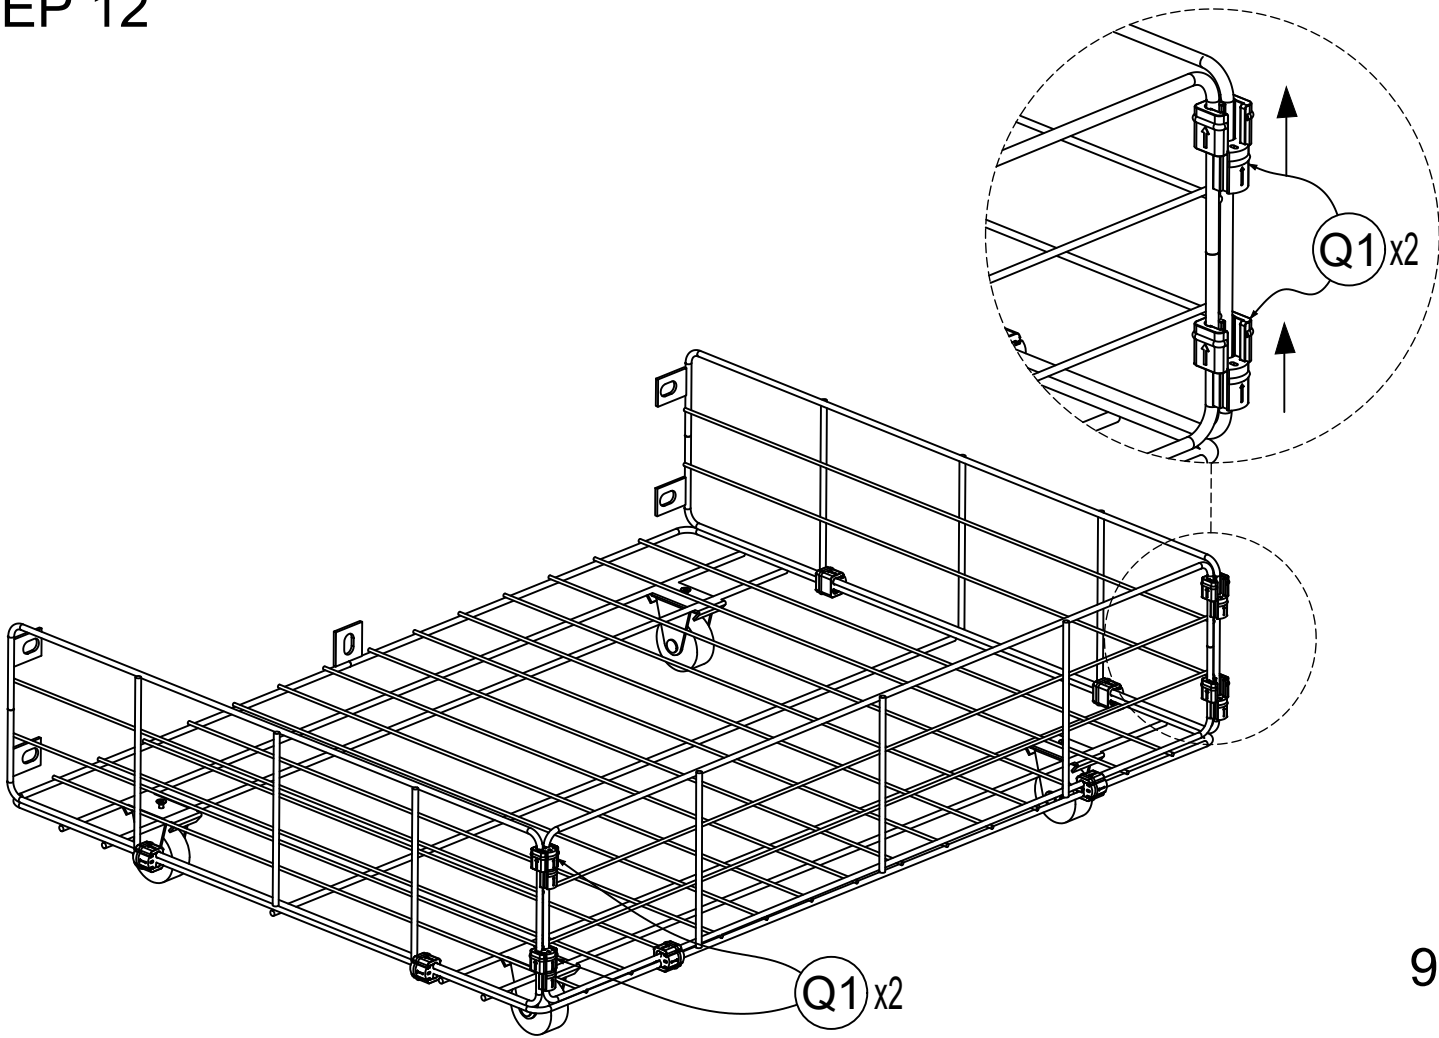

STEP 13

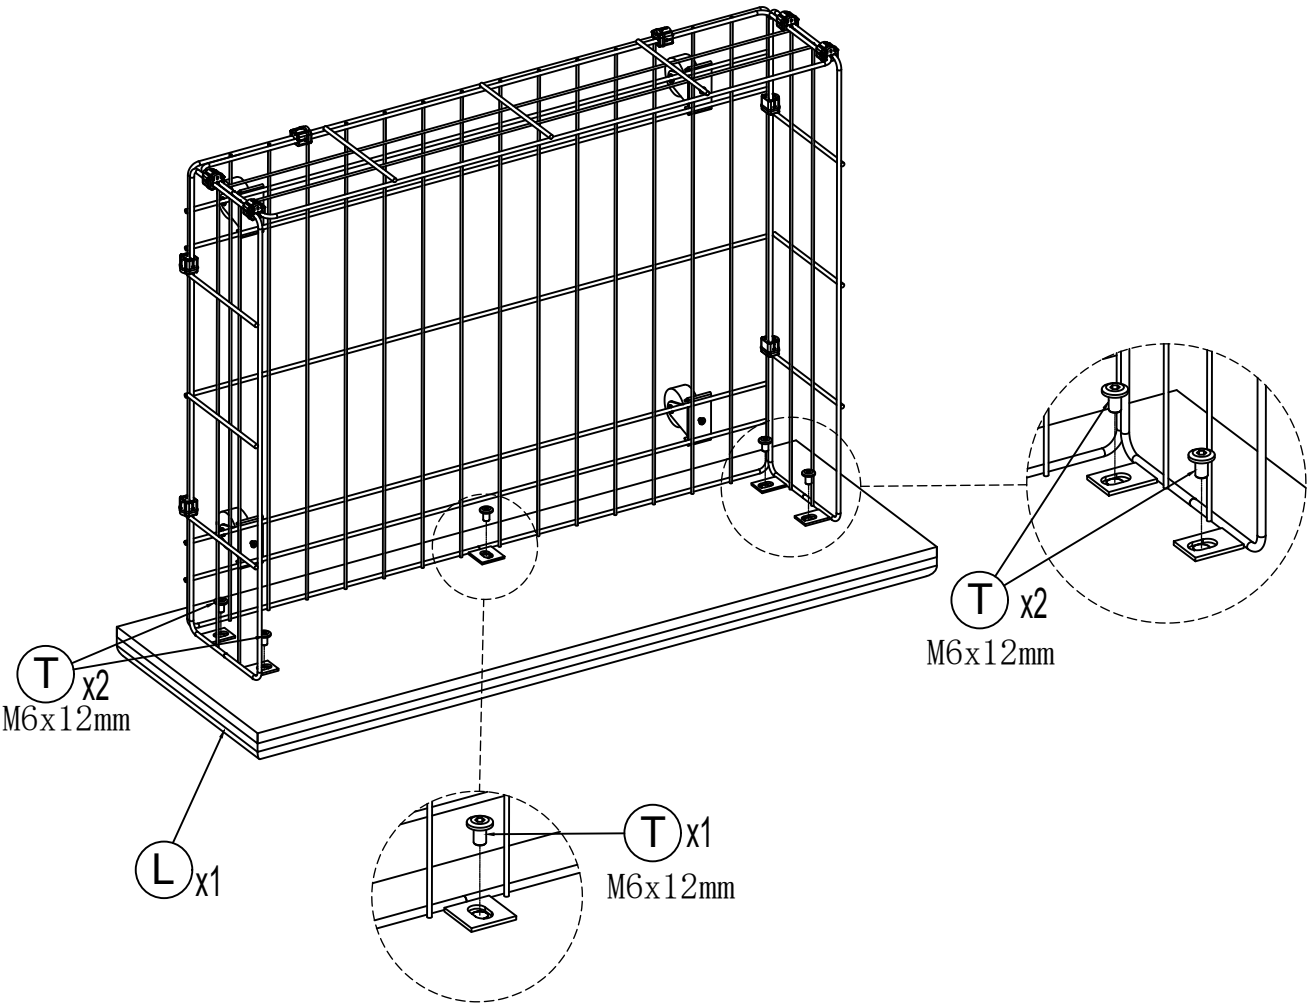

STEP 14

2pcs

