

SDQ Lighting

ASSEMBLY AND INSTALLATION INSTRUCTIONS


Item No: PD36418BG & PD36418PNP & D36412BG & PD36412PN

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.


NOTES:

1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.
3. Always switch off the electricity supply and allow to cool for 10 minutes before changing the light bulbs.


18-LIGHT PENDANT

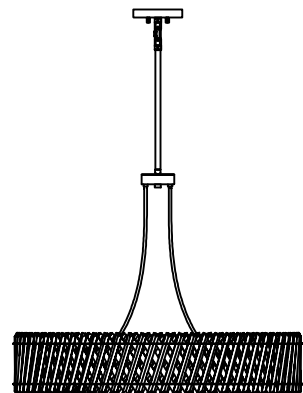

12-LIGHT PENDANT

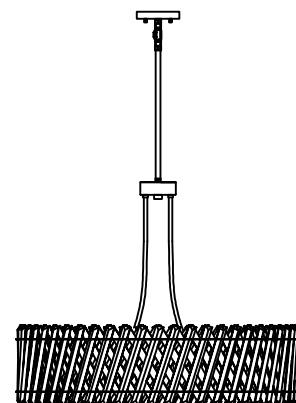

TOOLS REQUIRED

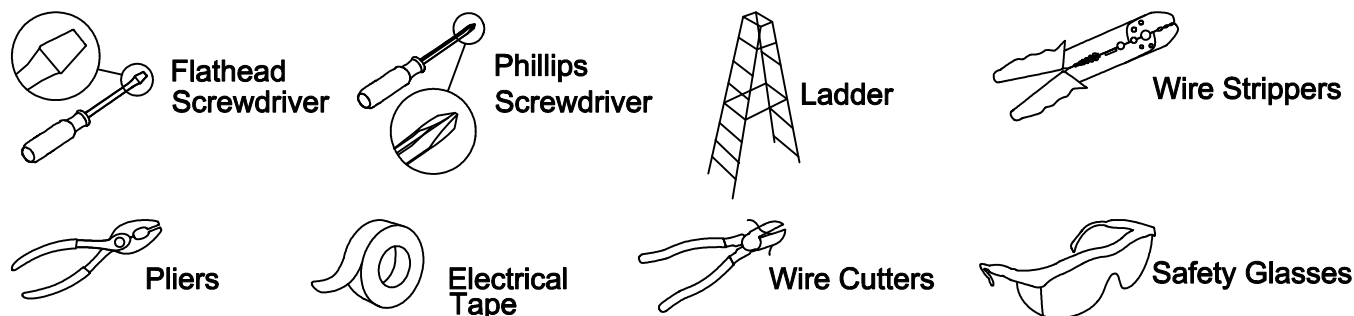

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. When the lamp is not installed finish, please don't throw away the package, so as not to leave the parts in the package.



PART LIST AND HARDWARE LIST

PIECE	DESCRIPTION
A	Suspender rod 12"
C	Suspender rod 6"
D	Trimming piece
D1	Wrench
E	Iron sheet
G	Arms
H	Hex nuts
I	Fixture body
J	Crystal

PIECE	DESCRIPTION
K	Mounting bracket
M	Screw
N	Canopy
O	Knurled nut
P	Lock link
Q	Loop
R	Steel cable buckle
S	Steel cable buckle
T	Hex nuts

INSTALLATION

1. Adjust the arms (G), make them equidistribution.
2. Loosen the trimming piece (D), open the iron sheet (E), pull the wire at F1, and then lock arms (G) to Fixture body (I) with nuts (H1) and hex nuts (H).
3. Attach the iron sheet (E) and lock the edge-cutting part (D) with a wrench (D1).
4. The Suspender rod (A)(C) pass through wire and locked onto the tooth tube (F), then the loop (Q) pass through the wire and then locked onto the Suspender rod (A).
5. Wrap the steel wire rope around the beam and lock it with the steel cable buckle (R) and (S).
6. Attach the mounting bracket (K) to the junction box with outlet box screw (M), then have canopy pass through the wire.
7. Attach the supply circuit ground wire (green or bare copper wire) to the the fixture ground wire, black to (smooth) and white to (ribbed).
8. Attach the canopy (N) to the mounting bracket (K), secure with Hex nuts (T), Then lock the Knurled nut (O).
9. Put one end of the Lock link (P) on the Loop (Q) and have the other end to the Loop (Q1).
10. Insert Crystal (J) into the Fixture body (I) outer hole from the top right, leaving a staggered hole in the upper and lower layers. Insert Crystal (J) into the Fixture body (I) inner hole from the top left, leaving one hole staggered between the upper and lower layers.
11. Install the 60W MAX type B10 bulbs (not included) into each socket.

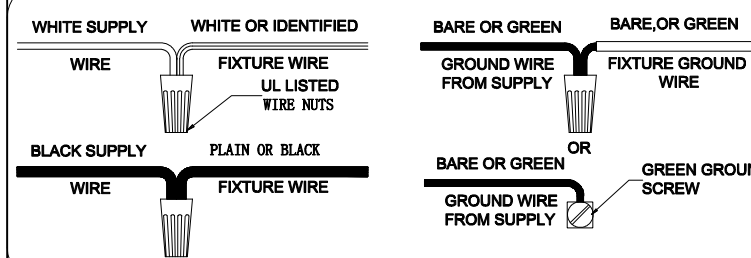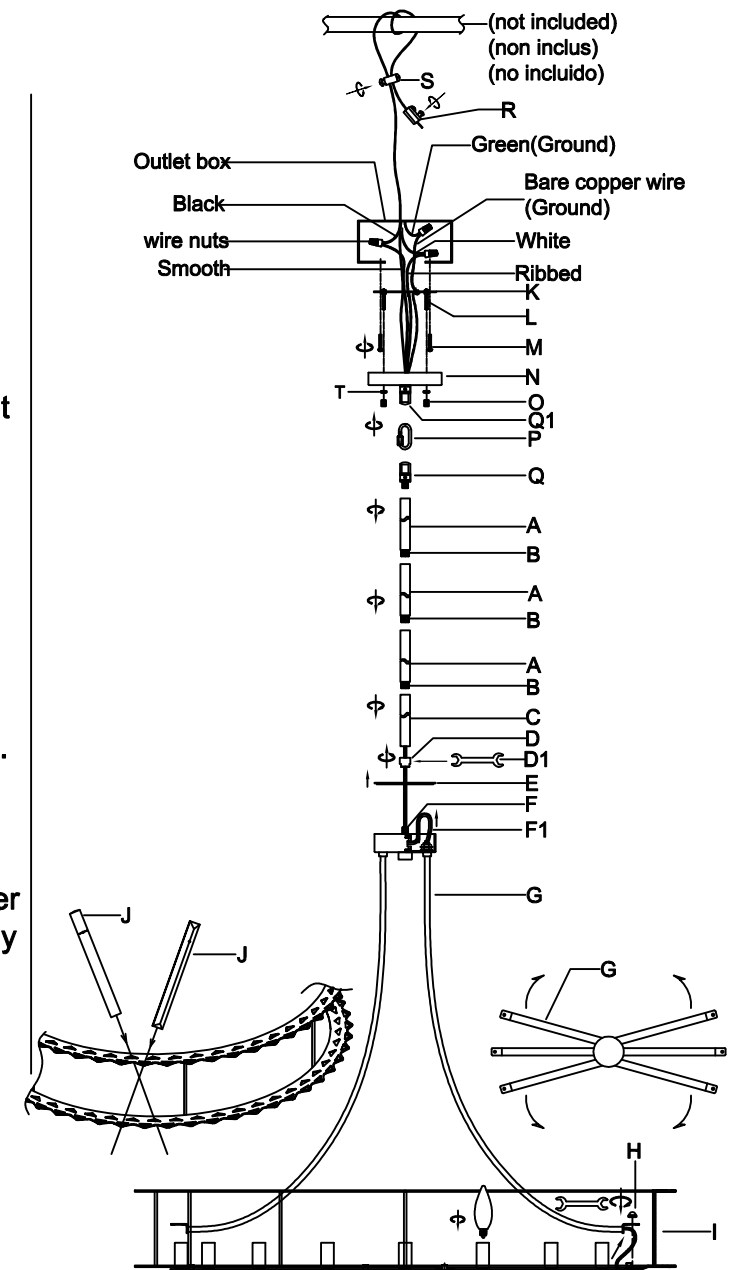

Thank you for purchasing a SDQ lighting product !

Need assistance with parts or assembly? Please call customer service at: 972-880-7868

Or visit us on-line at: WWW.SDQLIGHTING.COM or E-mail to: cs@sunwisehome.net