








WOOD SWIVEL STOOL

Counter Stool
Barstool

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. This product is designed for residential use only.


HARDWARE LIST

- A (6) M6 x 50mm Allen Bolts
- B (12) M6 x 45mm Allen Bolts
- C (8) M6 x 30mm Allen Bolts
- D (26) Spring Washers
- E (4) 13mm Small Flat Washers
- F (22) 20mm Large Flat Washers
- G (1) Allen Wrench

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	6		B	12	
C	8		D	26	
E	4		F	22	
G	1				

PARTS LIST

- H (1) Stool Back
- I (1) Seat Base
- J (4) Legs
- K (1) Upper Support Ring
- L (1) Lower Support Ring
- M (1) Swivel Plate

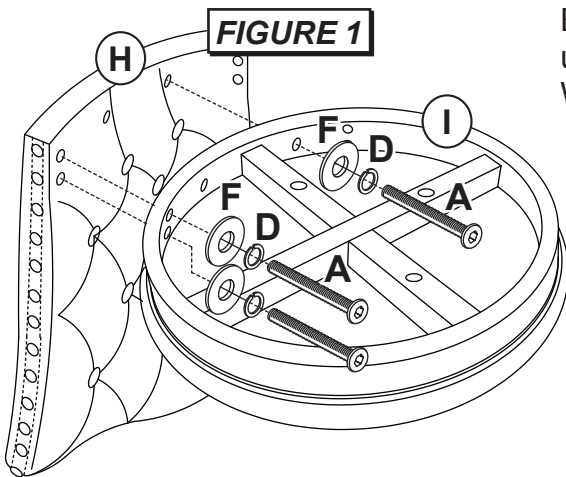

STEP 1 - Figure 1

Begin assembly by attaching Seat Base (I) to Stool Back (H) using 6 Allen Bolts (A), 6 Spring Washers (D) and 6 Large Flat Washers (F). Tighten all bolts with Allen Wrench (G) provided.

STEP 2 - Figure 2

Next attach Legs (J) to Upper Support Ring (K) using 2 Allen Bolts (B), 2 Spring Washers (D) and 2 Large Flat Washers (F) per leg.

STEP 3 - Figure 2

Next attach Legs (J) to Lower Support Ring (L) using 1 Allen Bolt (B), 1 Spring Washer (D) and 1 Small Flat Washer (E) per leg. Tighten all bolts from steps 2 and 3 with Allen Wrench (G) provided.

STEP 4 - Figure 2

Next attach Swivel Plate (M) to Upper Support Ring (K) using 4 Allen Bolts (C), 4 Spring Washers (D) and 4 Large Flat Washers (F). Tighten all bolts with Allen Wrench (G) provided.

STEP 5 - Figure 2

Finally attach Swivel Plate (M) to Seat Base (I) using 4 Allen Bolts (C), 4 Spring Washers (D) and 4 Large Flat Washers (F). Tighten all bolts with Allen Wrench (G) provided. The assembly is now complete.

