
ASSEMPLY INSTRUCTION

OUTDOOR WICKER CABINET

N707P414781D & N707P414781G

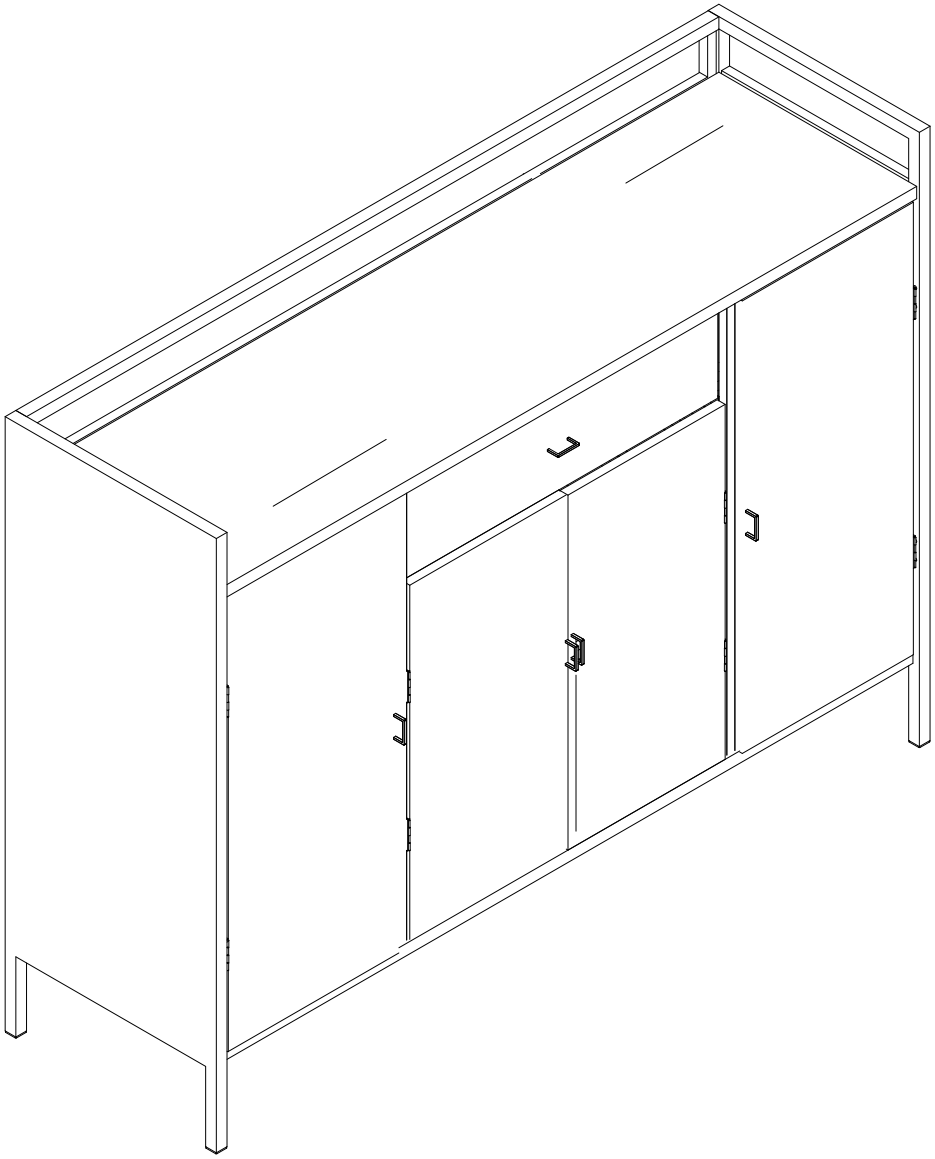

Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Notes: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

ASSEMPLY INSTRUCTION

Caution: You must read these Assembly Instructions before you proceed


Care & Maintenance



- Do not put hot items directly on furniture surface.




- Do not clean furniture with harsh cleansers or polish.

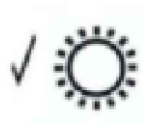

- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended




- Children should not climb or jump on the furniture.

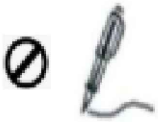

- Do not write on furniture without a padded barrier to protect the surface



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and/or place under patio or awnings.



- Not for commercial use. For residential use only




- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.


OUTDOOR WICKER CABINET

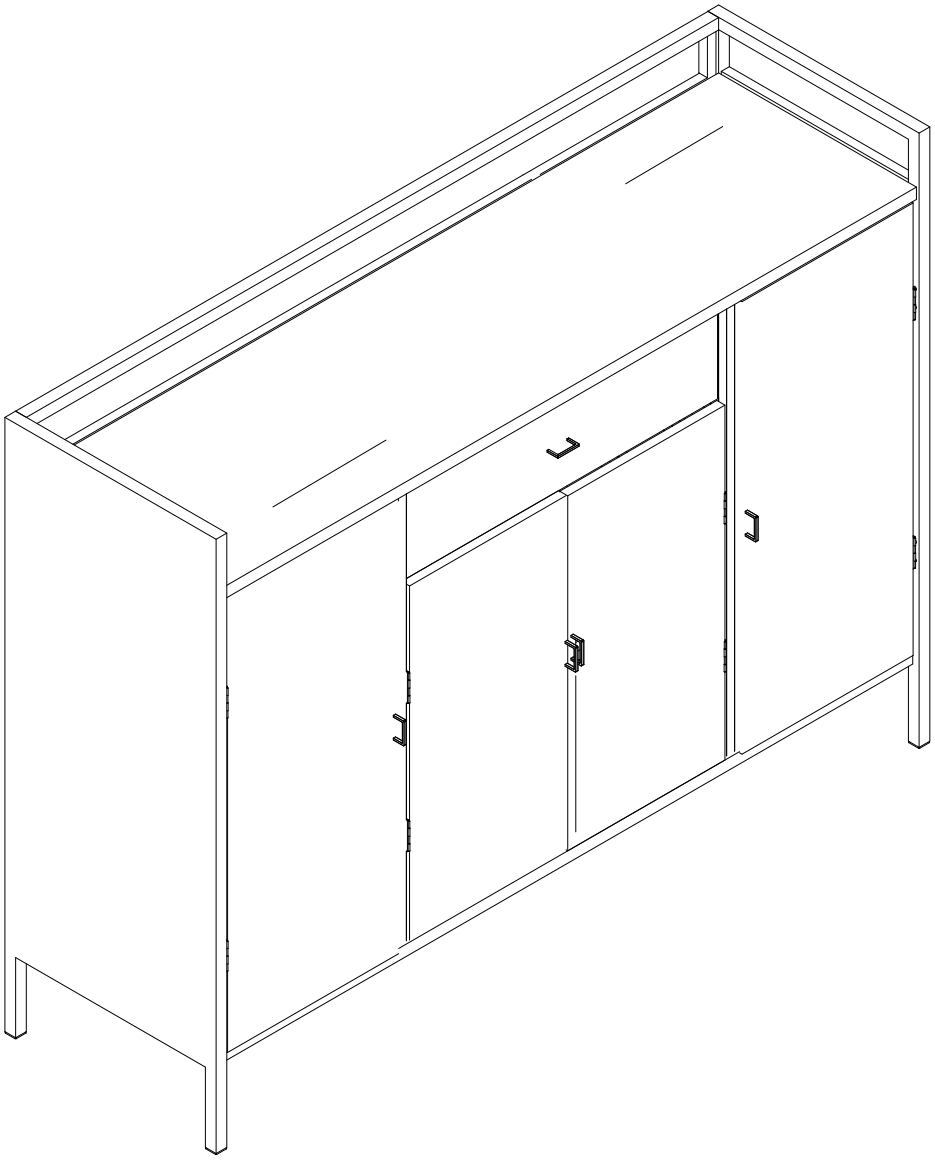


CAUTION : This outdoor wicker cabinet is NOT a TOY.

- Keep your child / children at bay in the process of assembly.
- For turning the outdoor wicker cabinet and to prevent damage to the outdoor wicker cabinet two adults may be needed to execute this action


EXPLODED VIEW

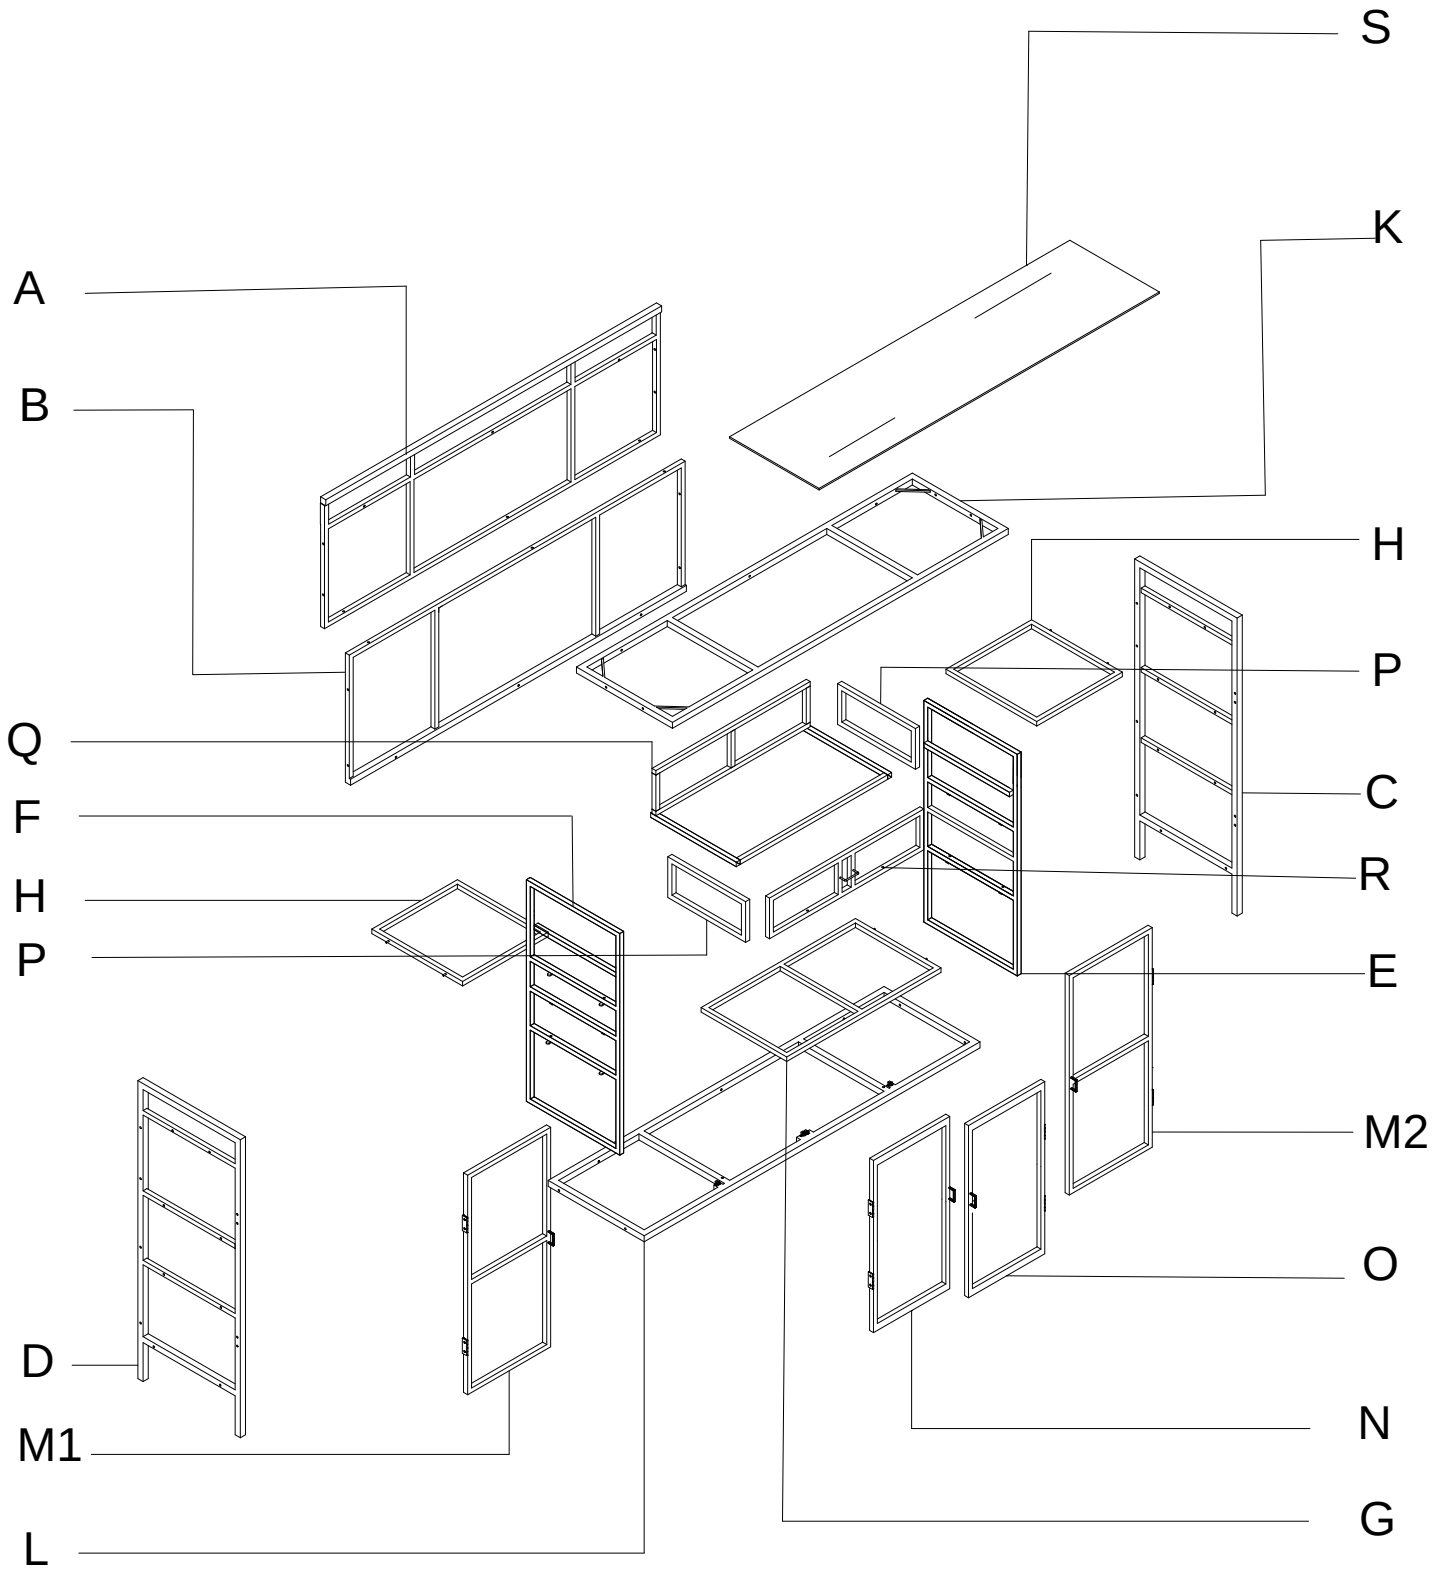


Part List

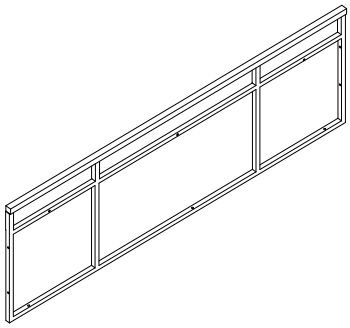


A x 1

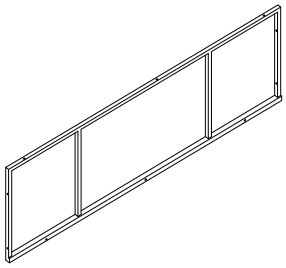


B x 1

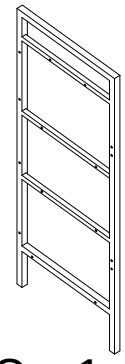


C x 1




D x 1



E x 1




F x 1




G x 1




H x 2

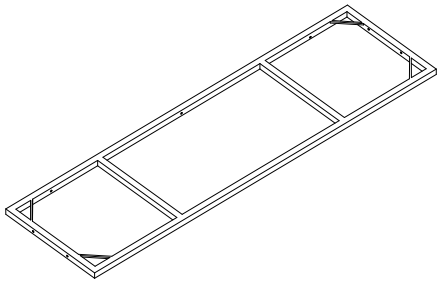


K x 1



L x 1






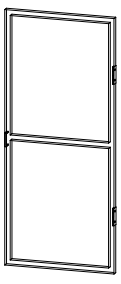


M1 x 1








M2 x 1


Part List

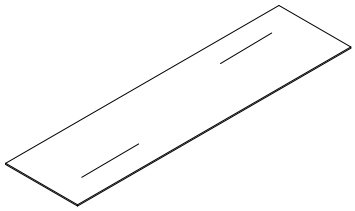
 N x 1	 O x 1	 P x 2
 Q x 1	 R x 1	 S x 1

Hardware

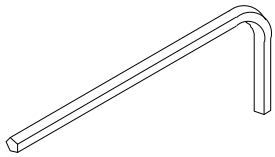1  Bolt M6x30mm (37pcs) +2 pcs (Extra)	2  Bolt M6x15mm (26pcs) +2 pcs (Extra)	3  Bolt M6x35mm (8pcs) +1 pc (Extra)
4  Washer 53pcs +5 pcs (Extra)	5  Allen Wrench (1pc) +1 pc (Extra)	6  Pat 10 pcs


Step 1 : Connect (A) with (B) by bolt (1) and (4).

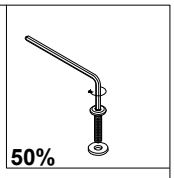


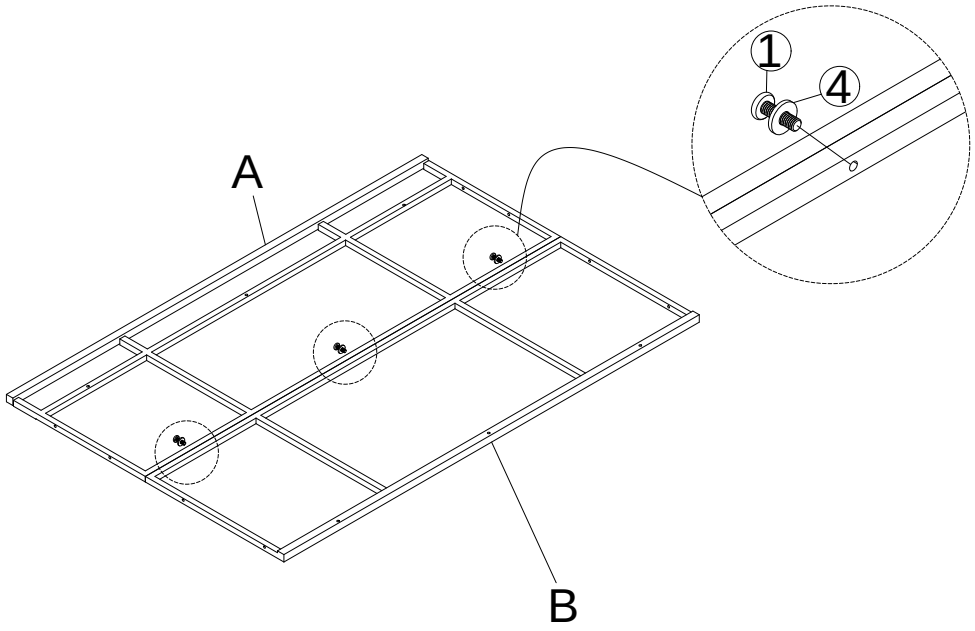

A x 1	B x 1	①x 3	④x 3


Step 2 : Connect (D) with (A) and (B) by bolt (1) and (4).

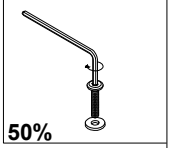


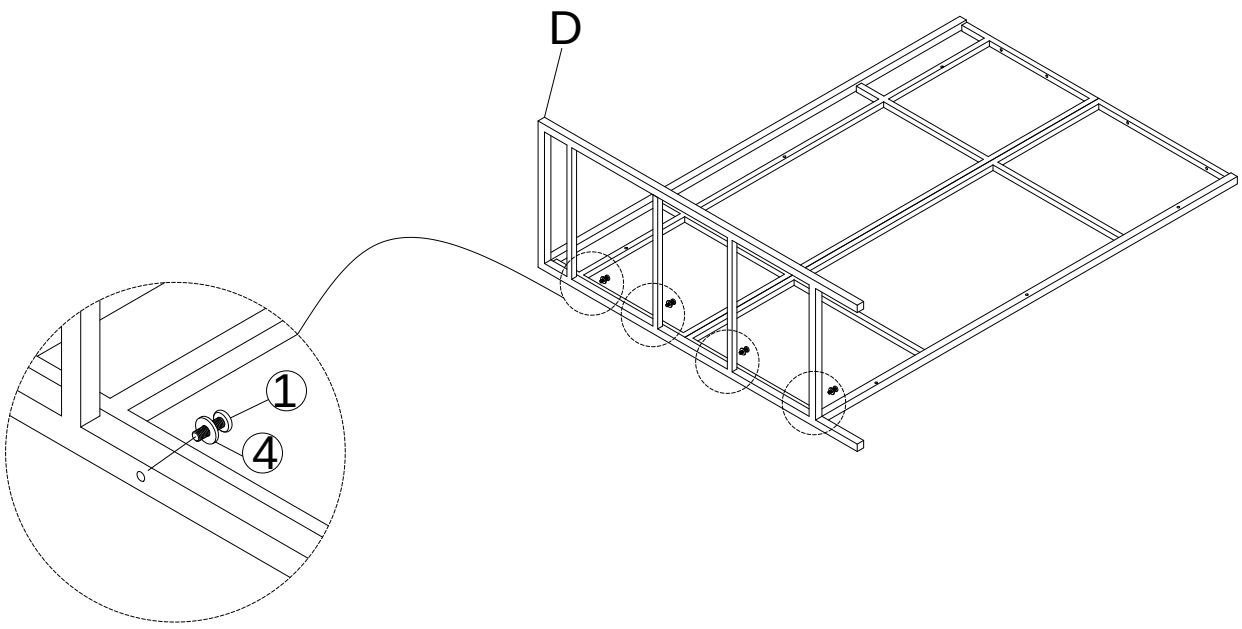

D x 1	①x 4	④x 4


Step 3 : Connect (F) with (6) by bolt (2) and (4)

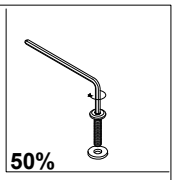


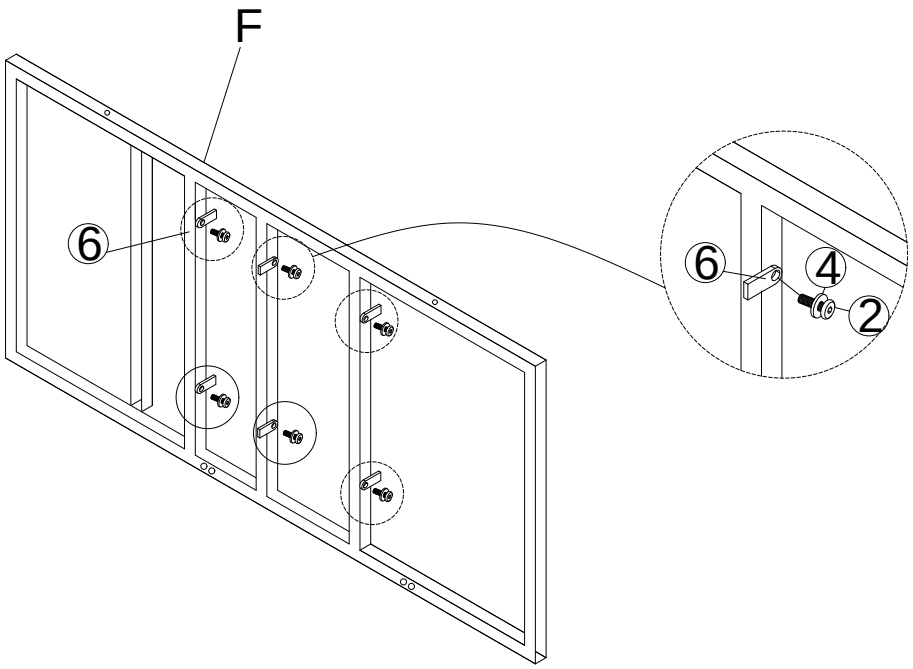

F x 1	②x 6	④x 6	⑥x 6


Step 4 : Connect (F) with (A) , (B) by bolt (3) and (4).

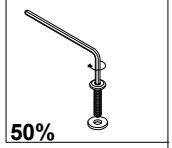


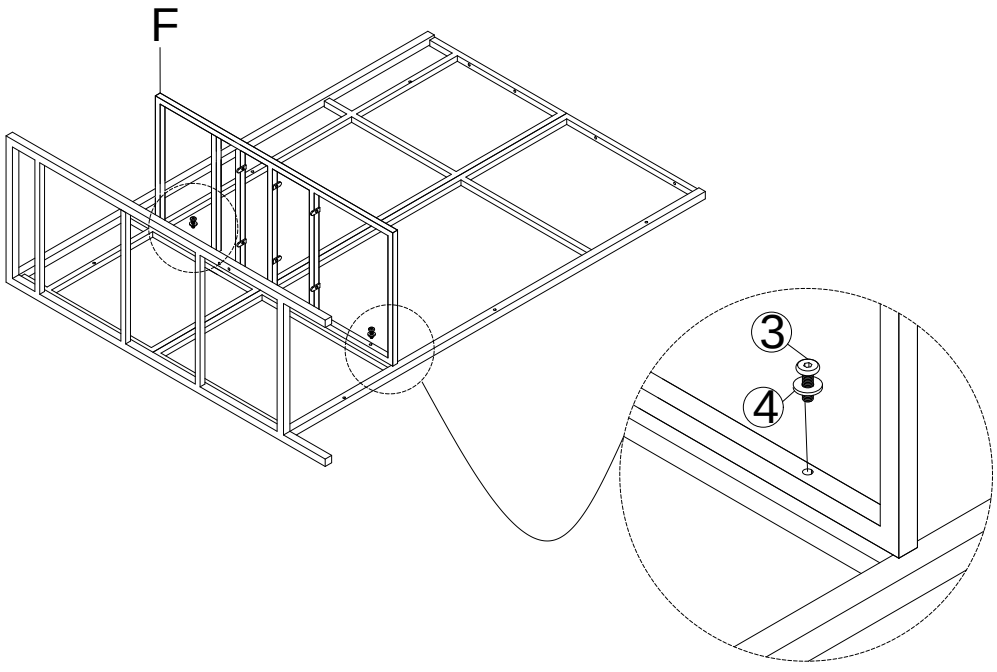

③x 2	④x 2


Step 5 : Connect (C) with (A) ,(B) by bolt (1) and (4).

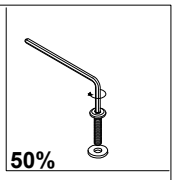


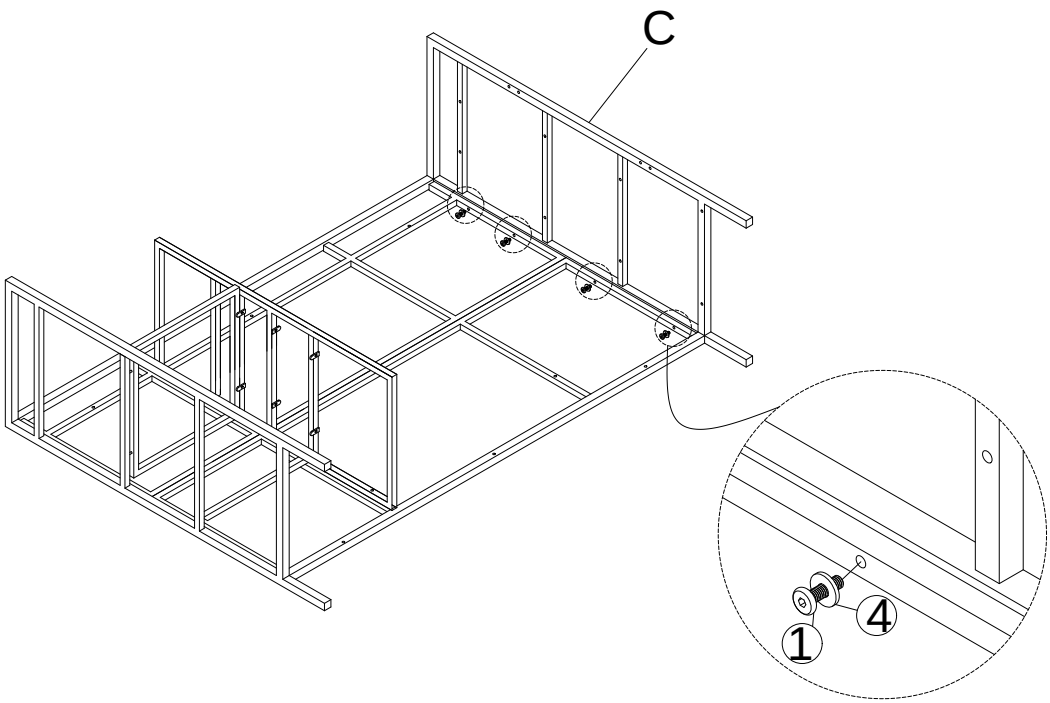

C x 1	①x 4	④x 4


Step 6 : Connect (E) with (6) by bolt (2) and (4).

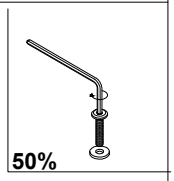


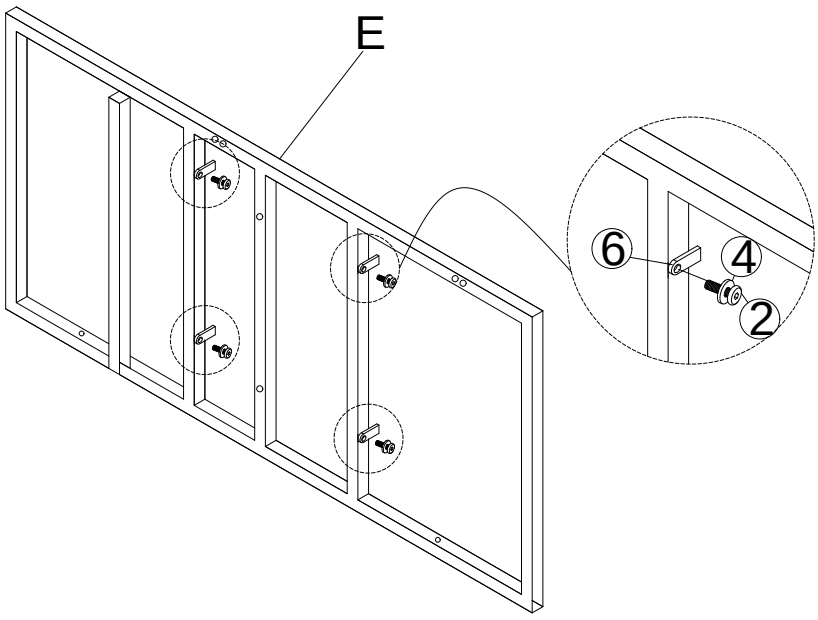

E x 1	②x 4	④x 4	⑥x 4


Step 7 : Connect (E) with (A) ,(B) by bolt (3) and (4).

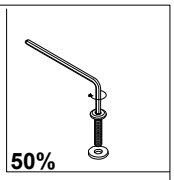


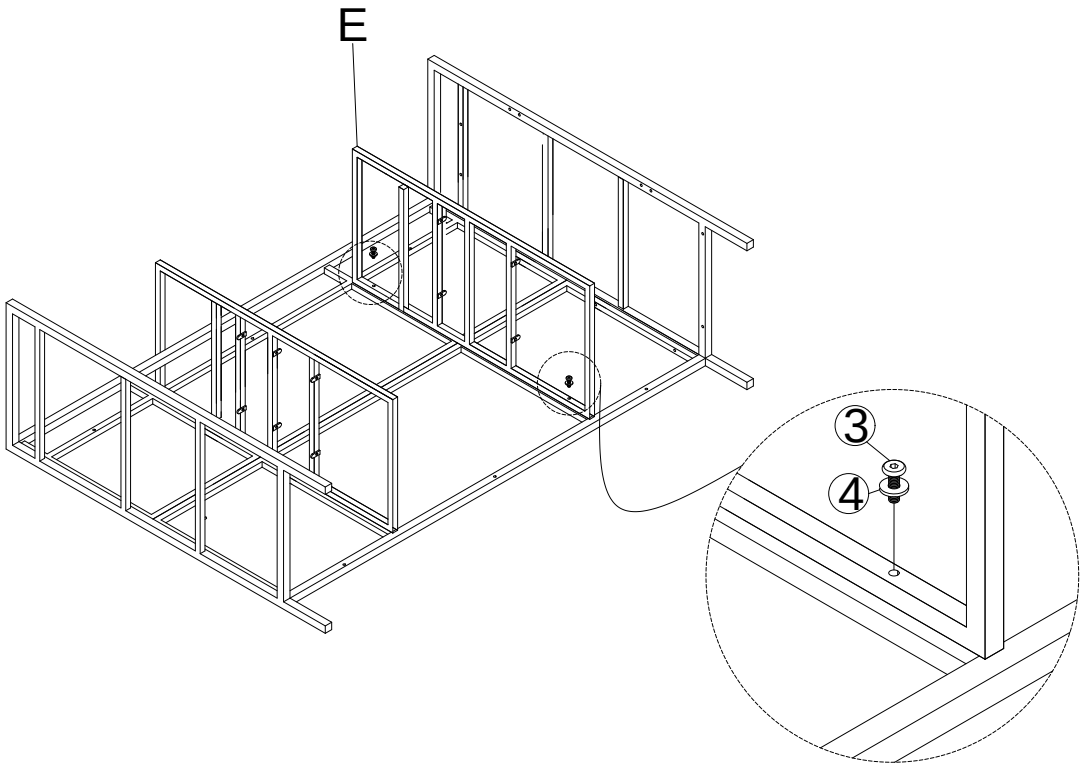

③x 2	④x 2


Step 8 : Connect (K) with (B),(C),(D),(E) and (F) by bolt (1) and (4).

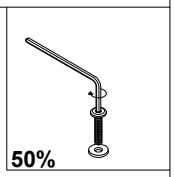


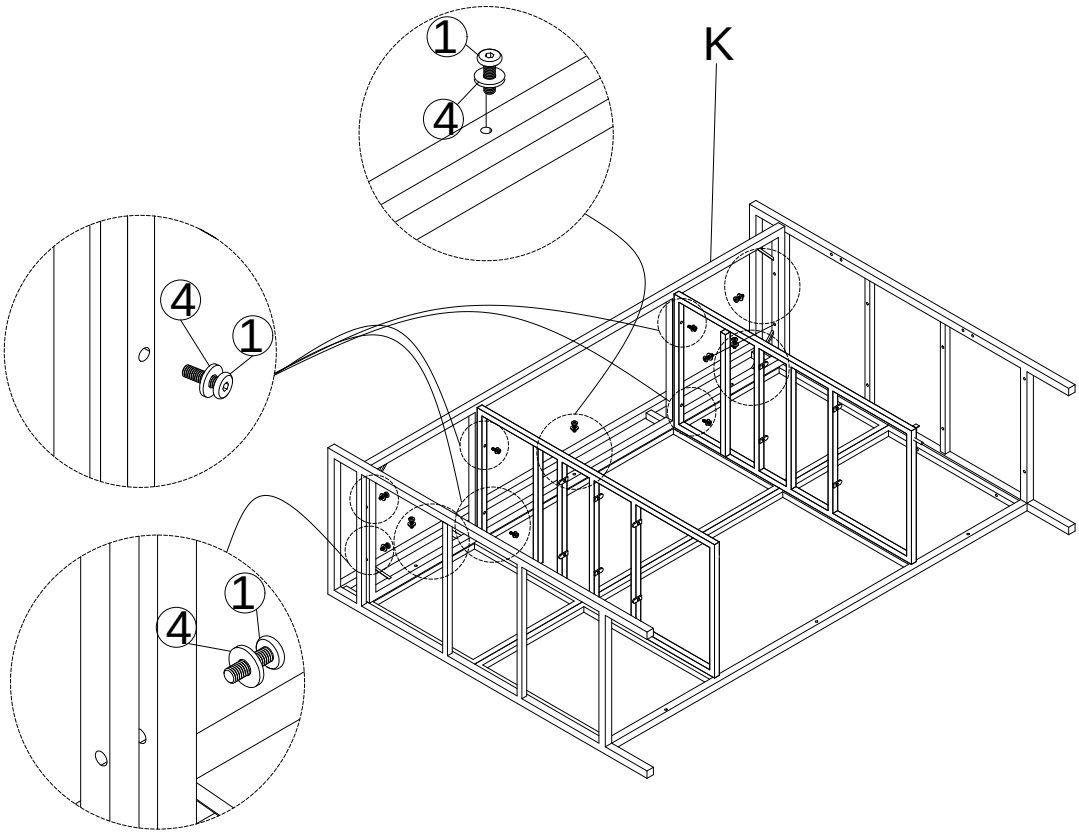

K x 1	①x 11	④x 11


Step 9 : Connect (L) with (B),(C),(D),(E) and (F) by bolt (1), (3) and (4).

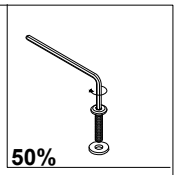

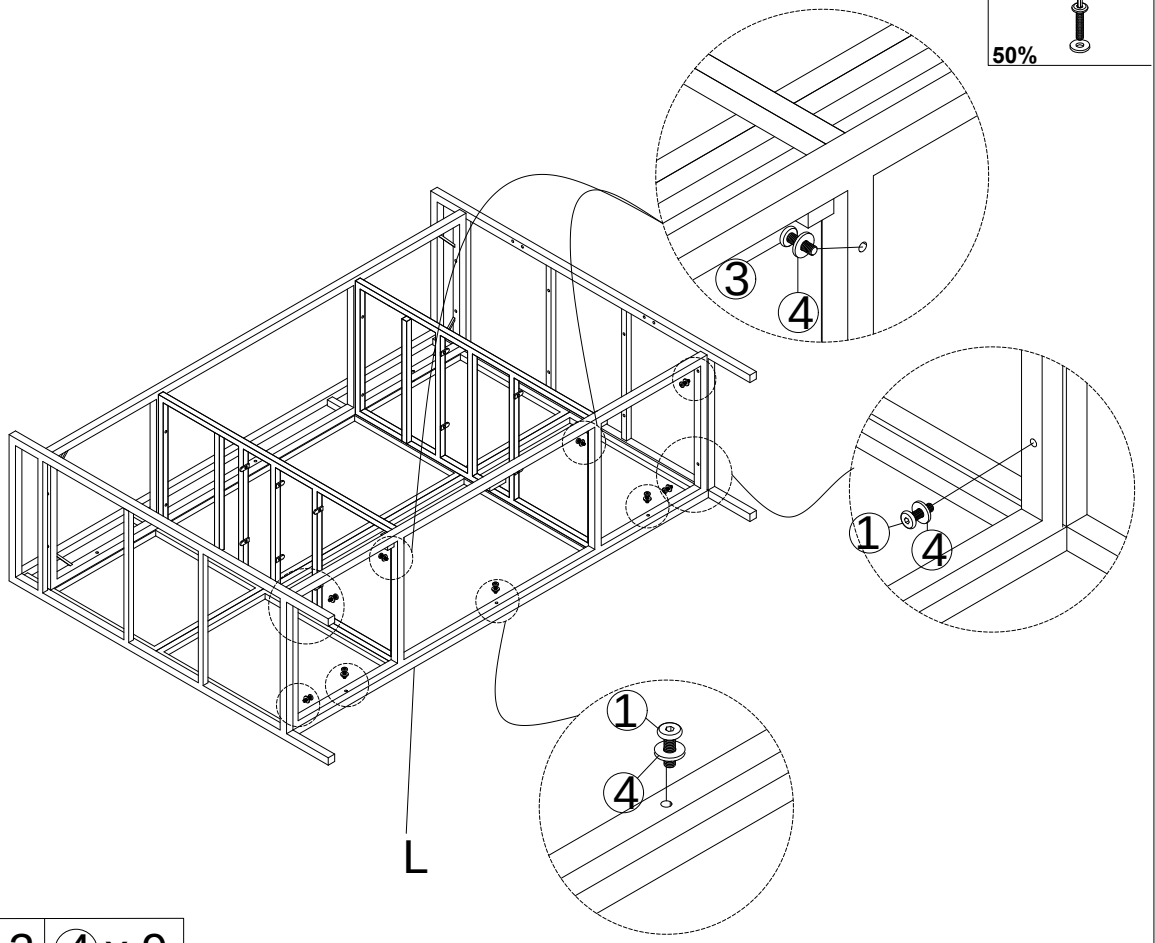


L x 1	①x 7	③x 2	④x 9

Step 10 : Connect (H) with (D).

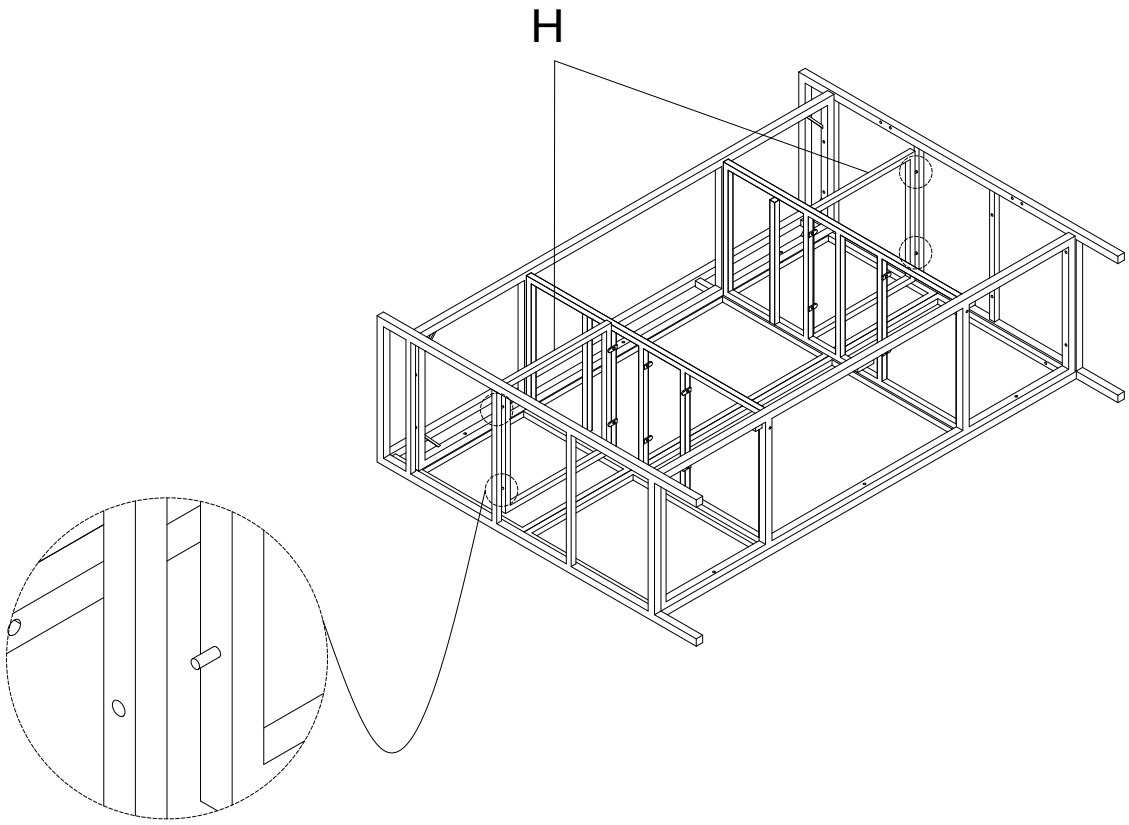


H x 2


Step 11 : Connect (G) with (E).

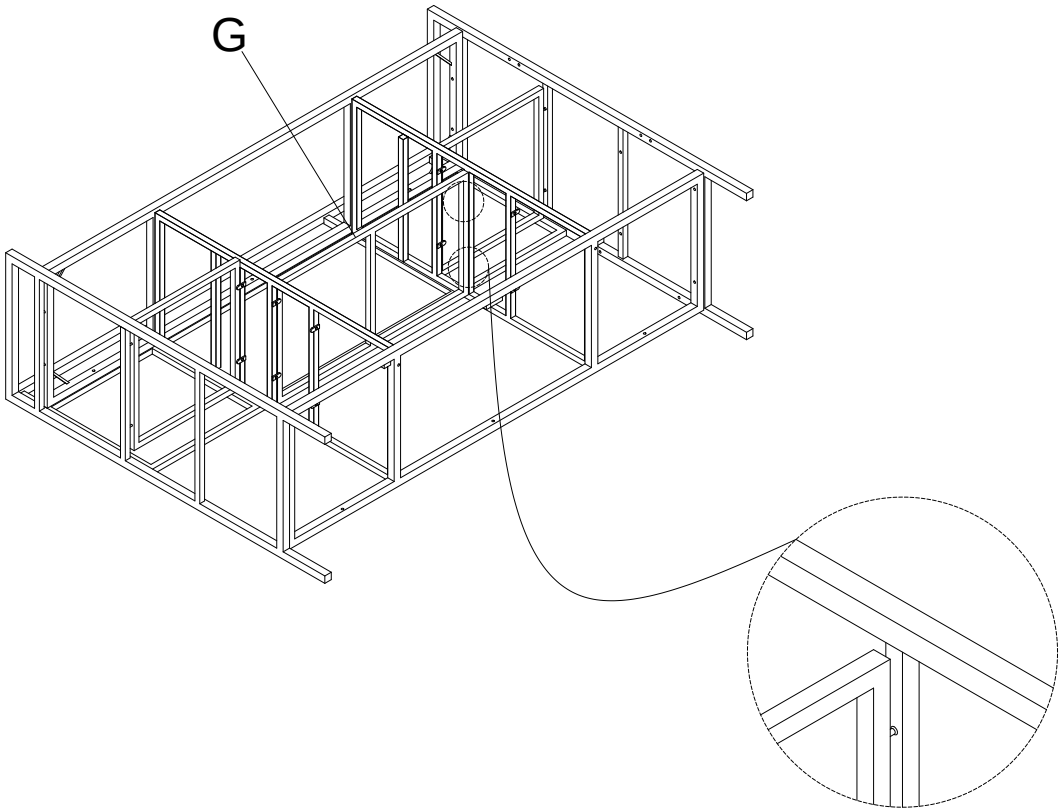

G x 1


Step 12 : Connect (M1) and (M2) with (C) and (D) by bolt (2).

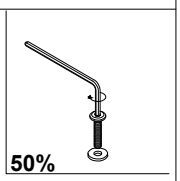


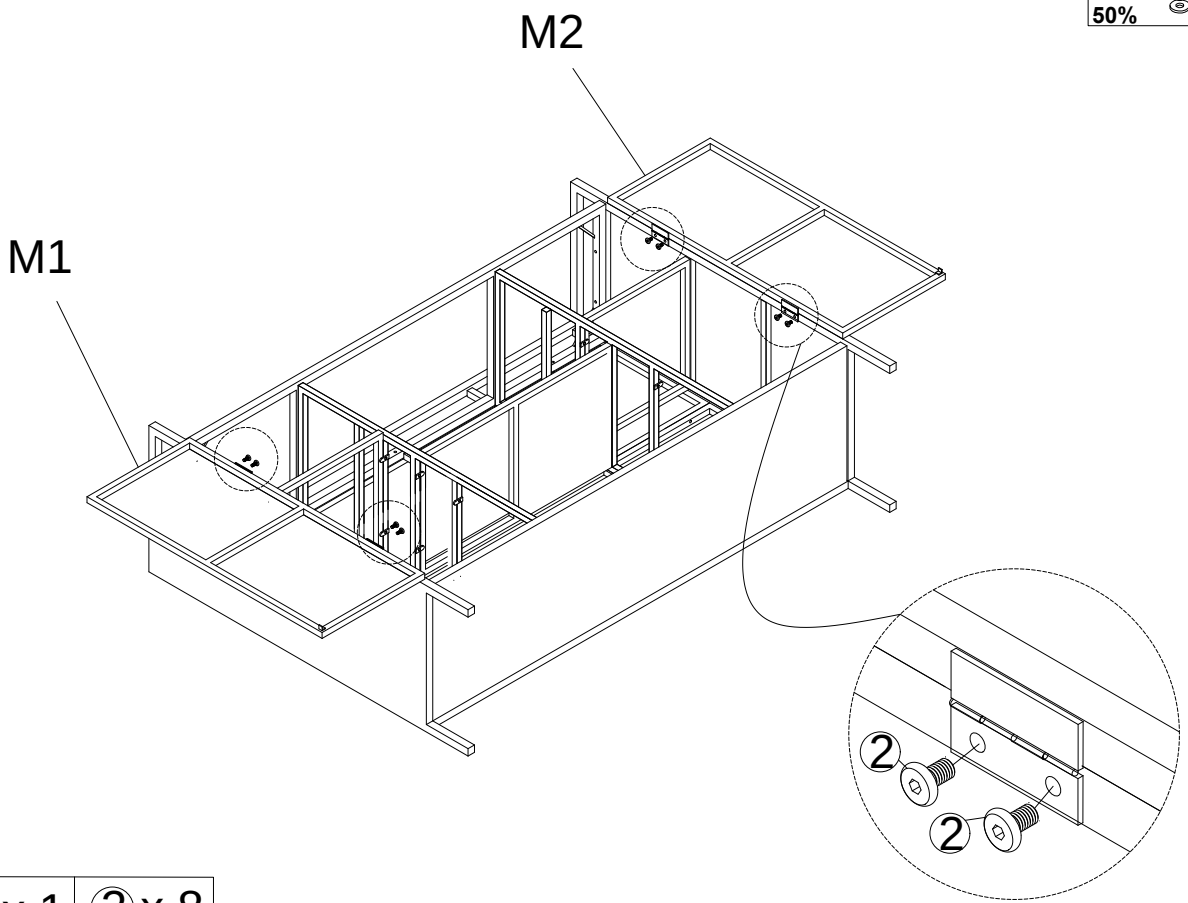

M1 x 1	M2 x 1	② x 8


Step 13 : Connect (N) with (F) and (O) with (E) by bolt (2).

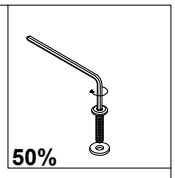


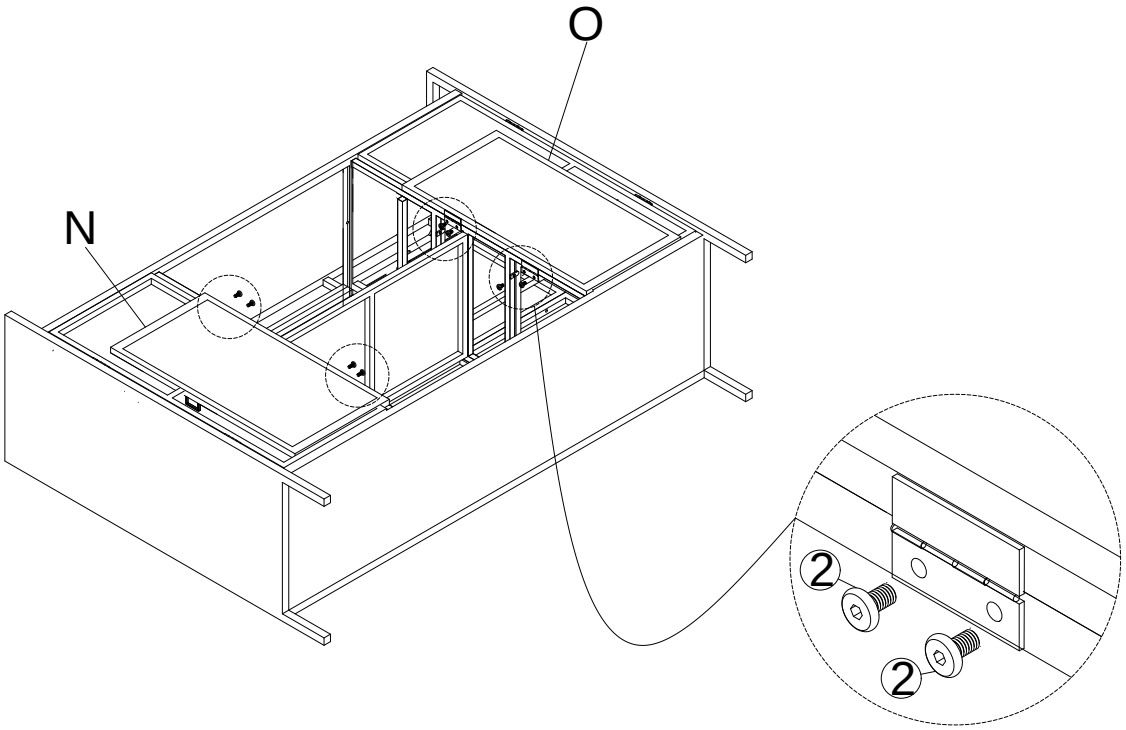

N x 1	O x 1	②x 8


Step 14 : Connect (P) with (Q) by botl (1) and (4).

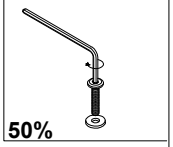


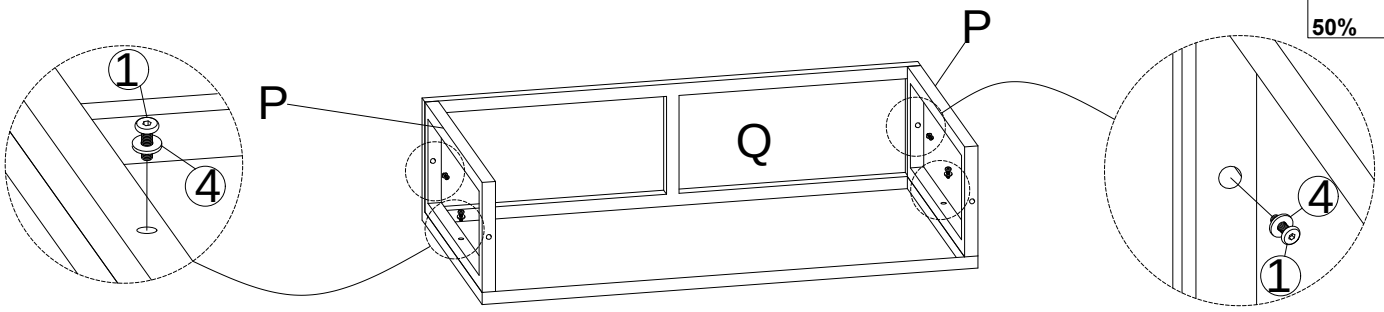

P x 2	Q x 1	①x 4	④x 4


Step 15 : Connect (R) with (P) and (Q) by bolt (1) and (4).

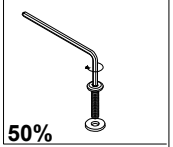

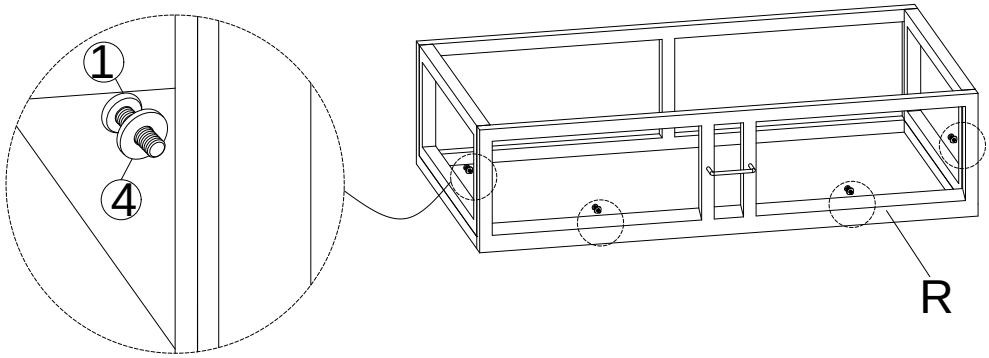


R x 1	①x 4	④x 4

Step 16 : Insert drawer to the cabinet .

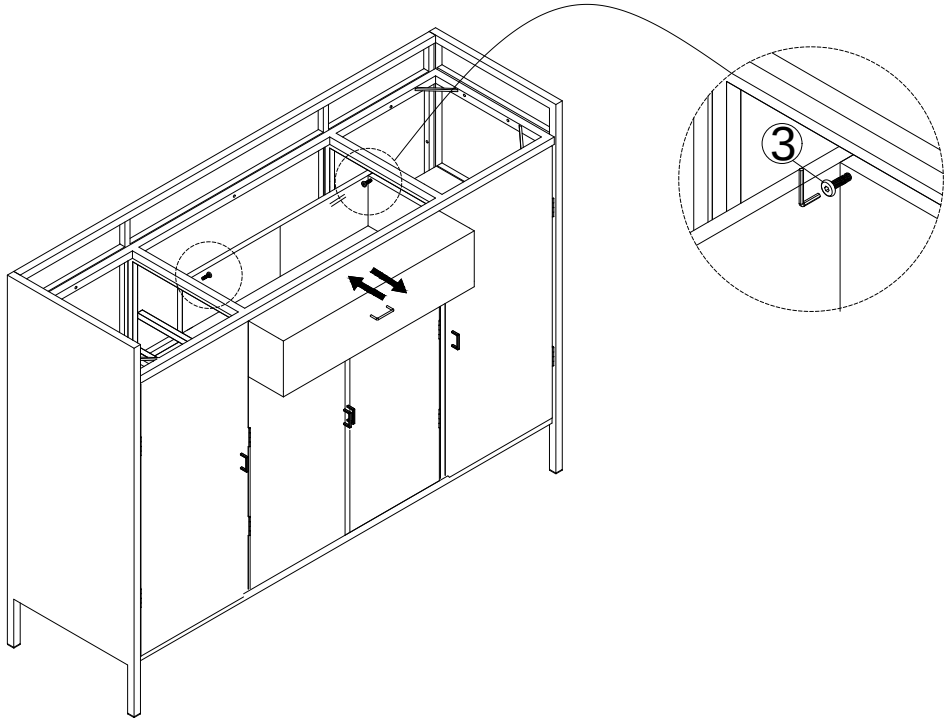

③x 2

Step 17 : Put the glass (S) on the outdoor wicker cabinet .
Note : This outdoor wicker cabinet can be used better on a flat , level surface , In rugged surface , you can make more reasonable by adjustable foot.

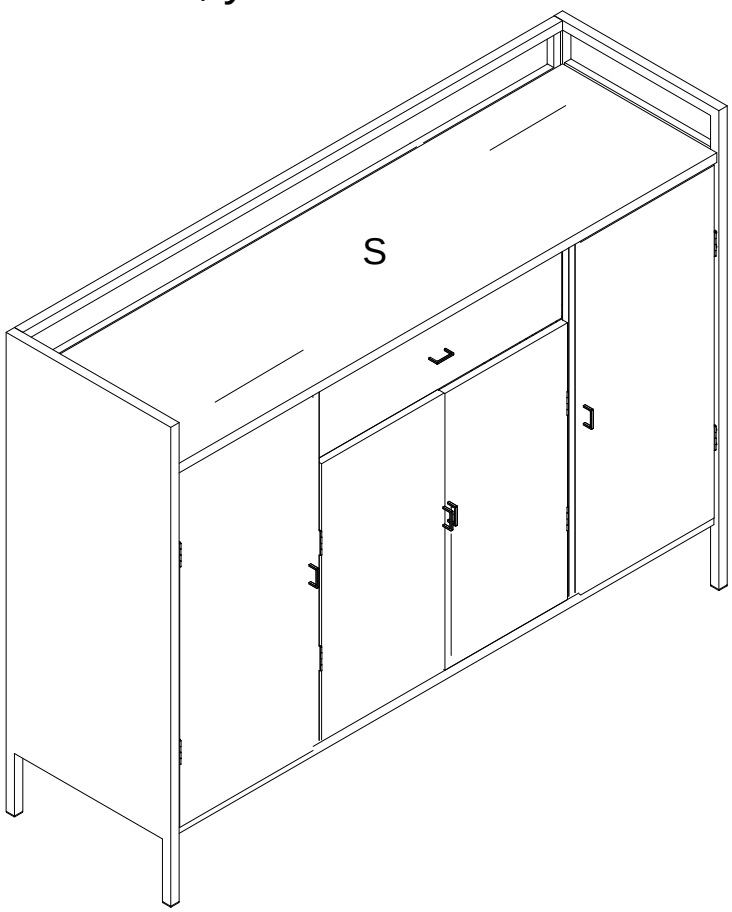

S x 1