



ASSEMBLY INSTRUCTION

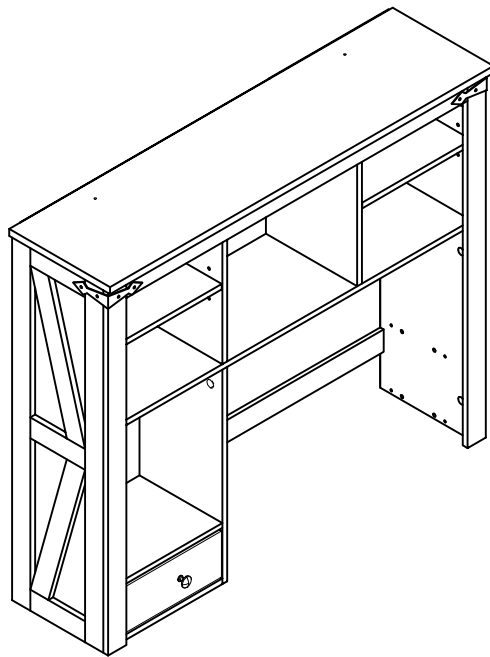












TYPE A

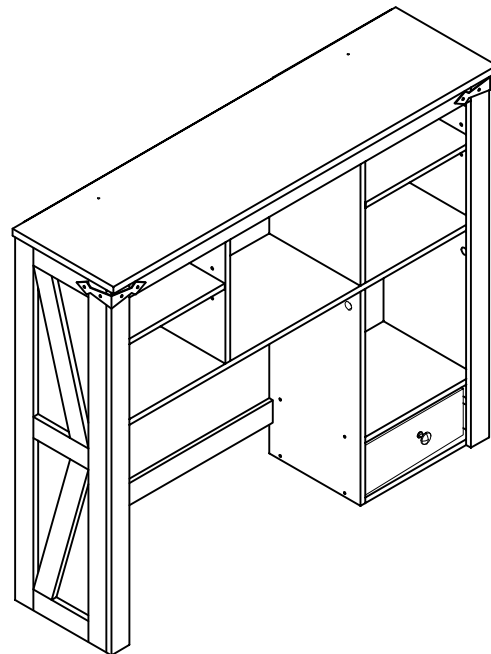


TYPE B


Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition. If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

PARTS:

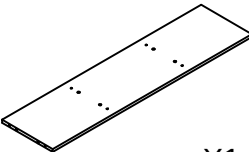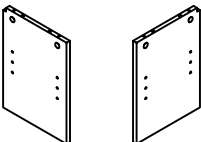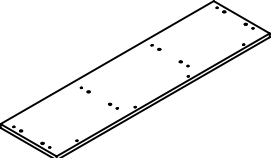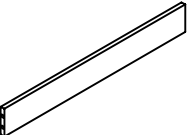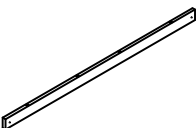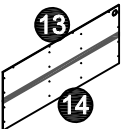
1  X1	2  X1	3  X1	4  X1
5  X1	6  L X1 R X1	7  X1	8  X1
9  X1	10  X1	11  X1	12  X2
13 14  X1		15  X1	16  X1
17  X1	18  X1		

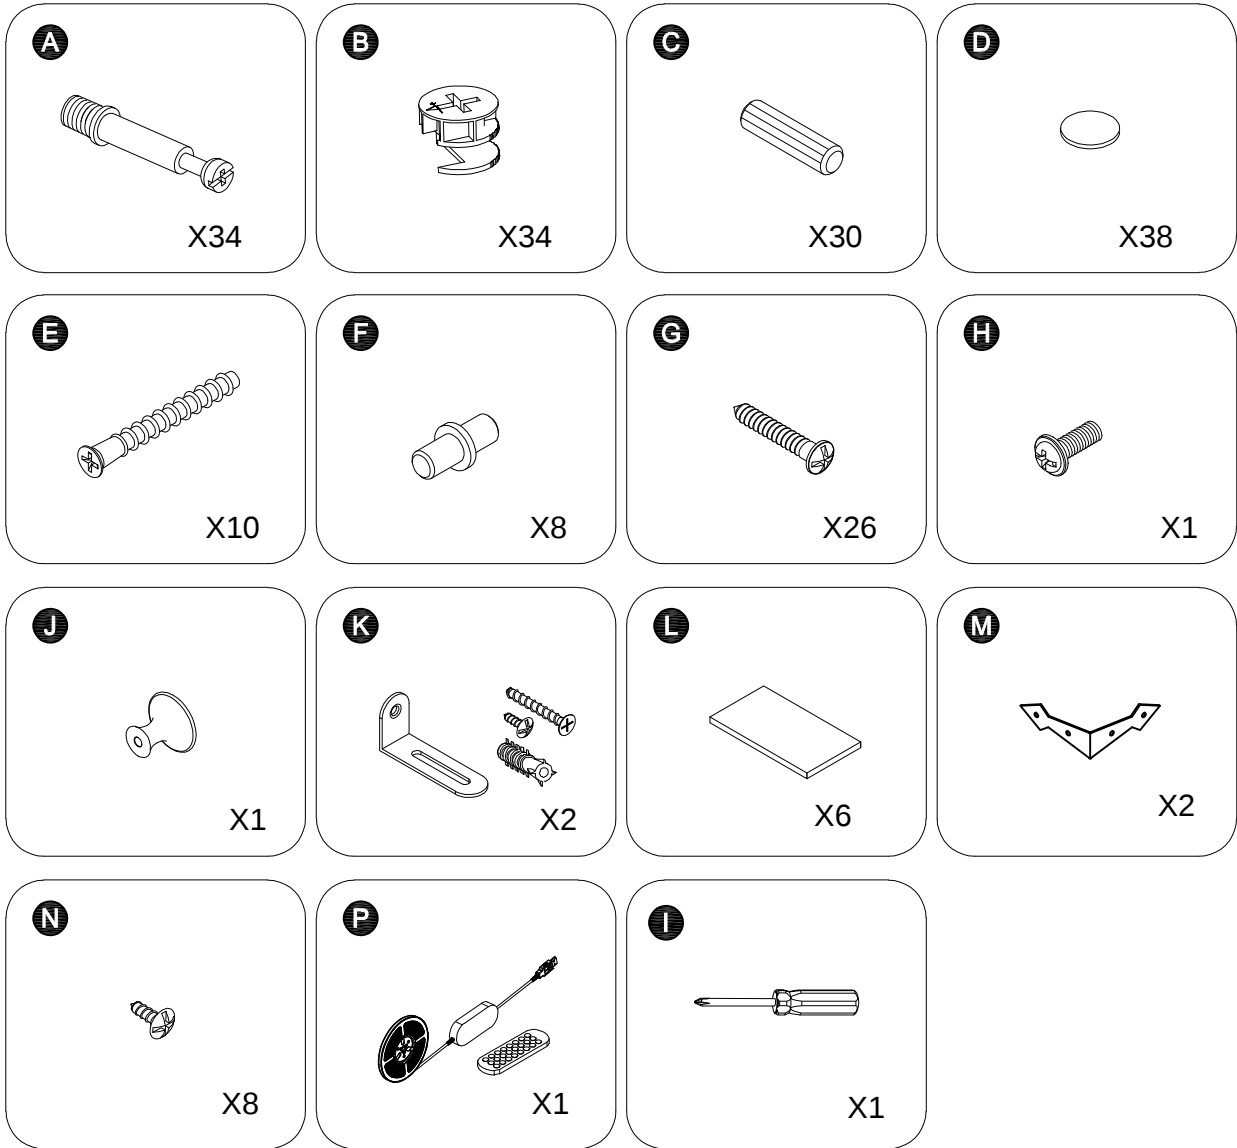

EXPLODED DRAWING:

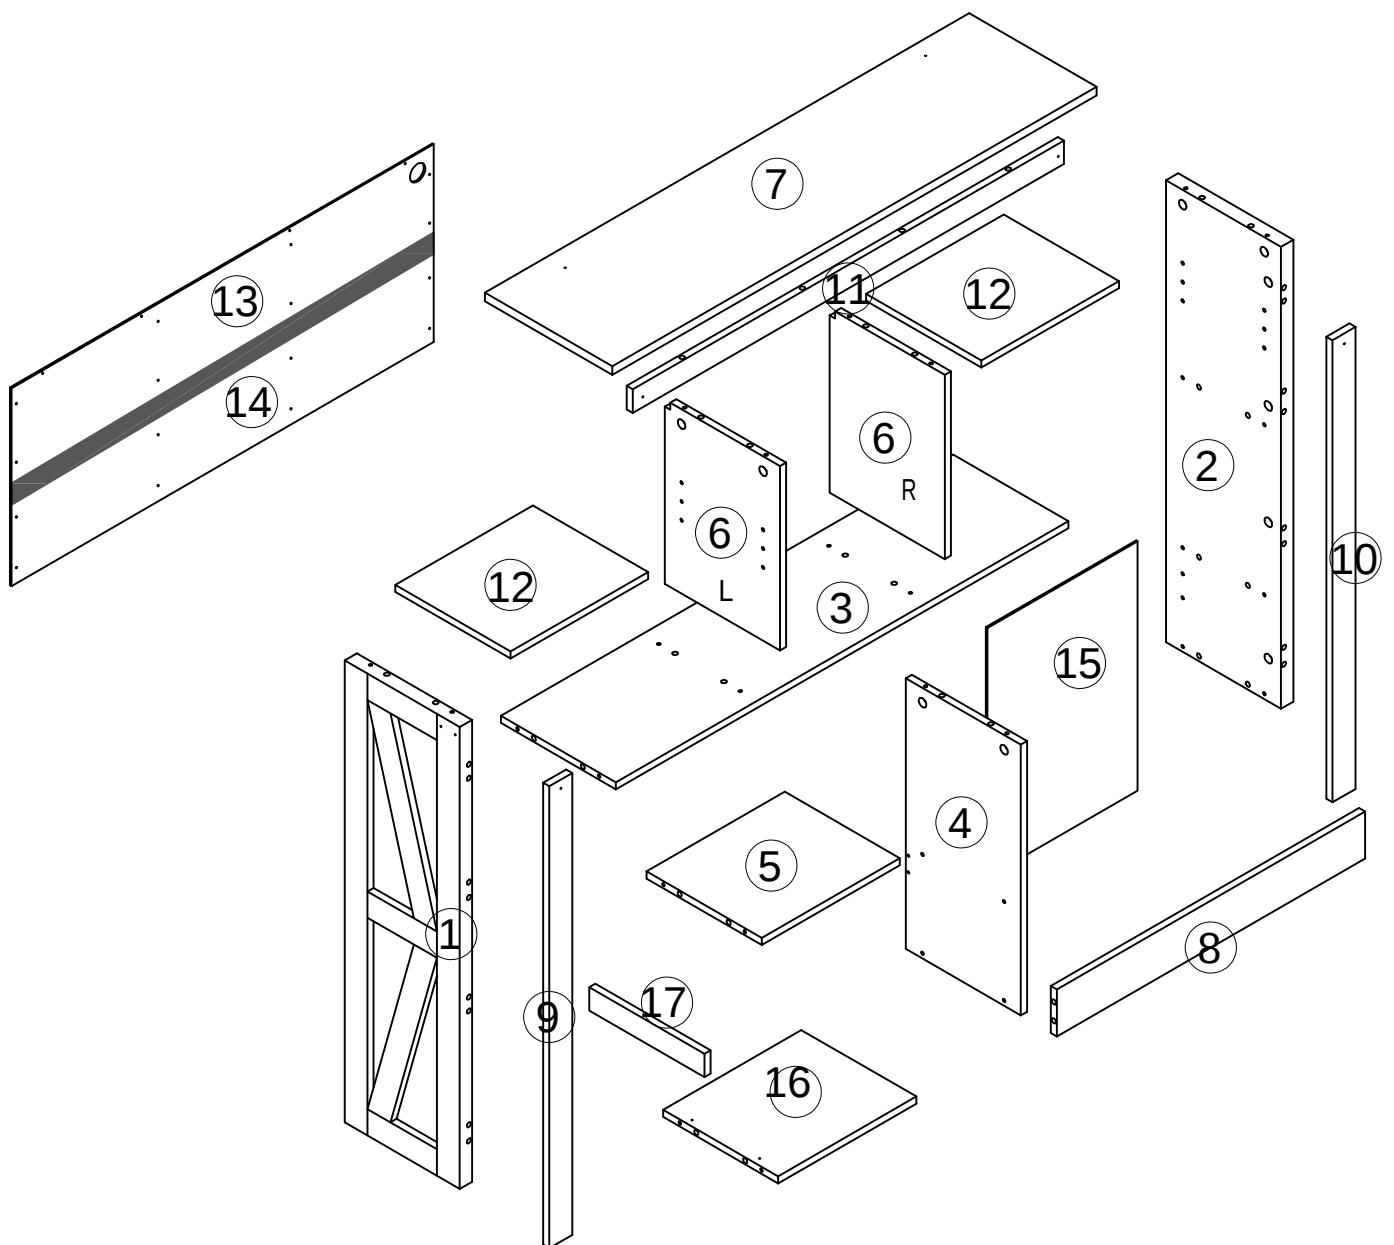

HOW TO INSTALL

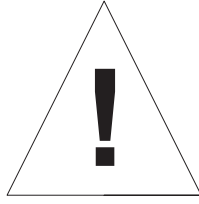


WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Install Anti-tip device.
- Place heavier items in the lower drawer.
- Never let children climb or hang on drawers or shelves.
- Do NOT set heavy objects on top of this product

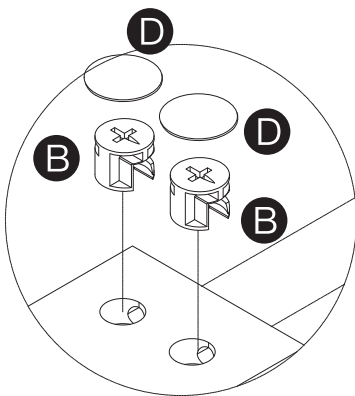

WARE NOTICE:


After tightening part **(B)** . You can cover part **(B)** with part **(D)** to keep it looking nicer, but if you don't need to, you can leave it out.

HOW TO INSTALL


NOTICE:

1. Use electric drill for easier installation experience.
2. Please drive the screws in pre-drilled holes.
3. Please strictly follow the instruction and diagram in every step.
4. Make sure every part is on the right position, otherwise it may cause unnecessary problem.
5. Select the proper component via the label on every part while assembling

REMAEK:


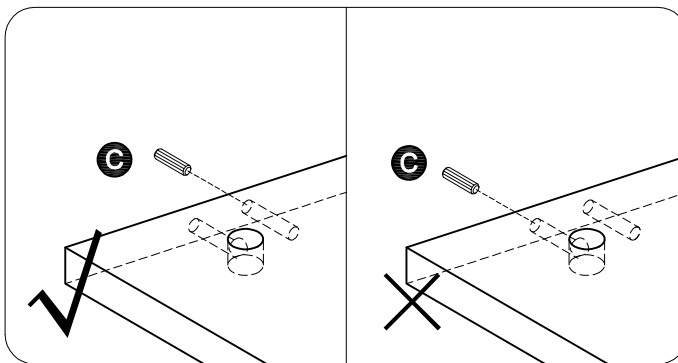


Avoid inserting part C into wrong holes.

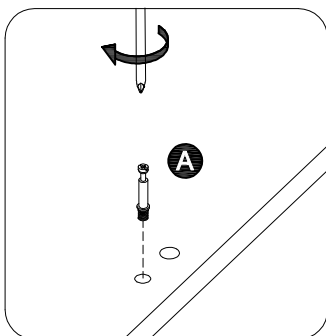






Part A must be installed into the holes with rubber nuts which are smaller than others.

When locking part B, please make sure part A is fully inserted.




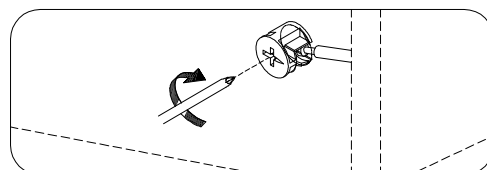
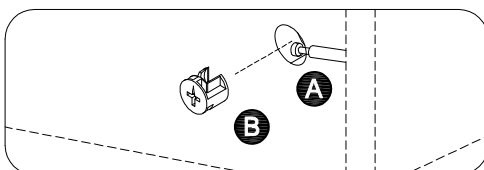


TYPE A INSTALLATION



STEP 1

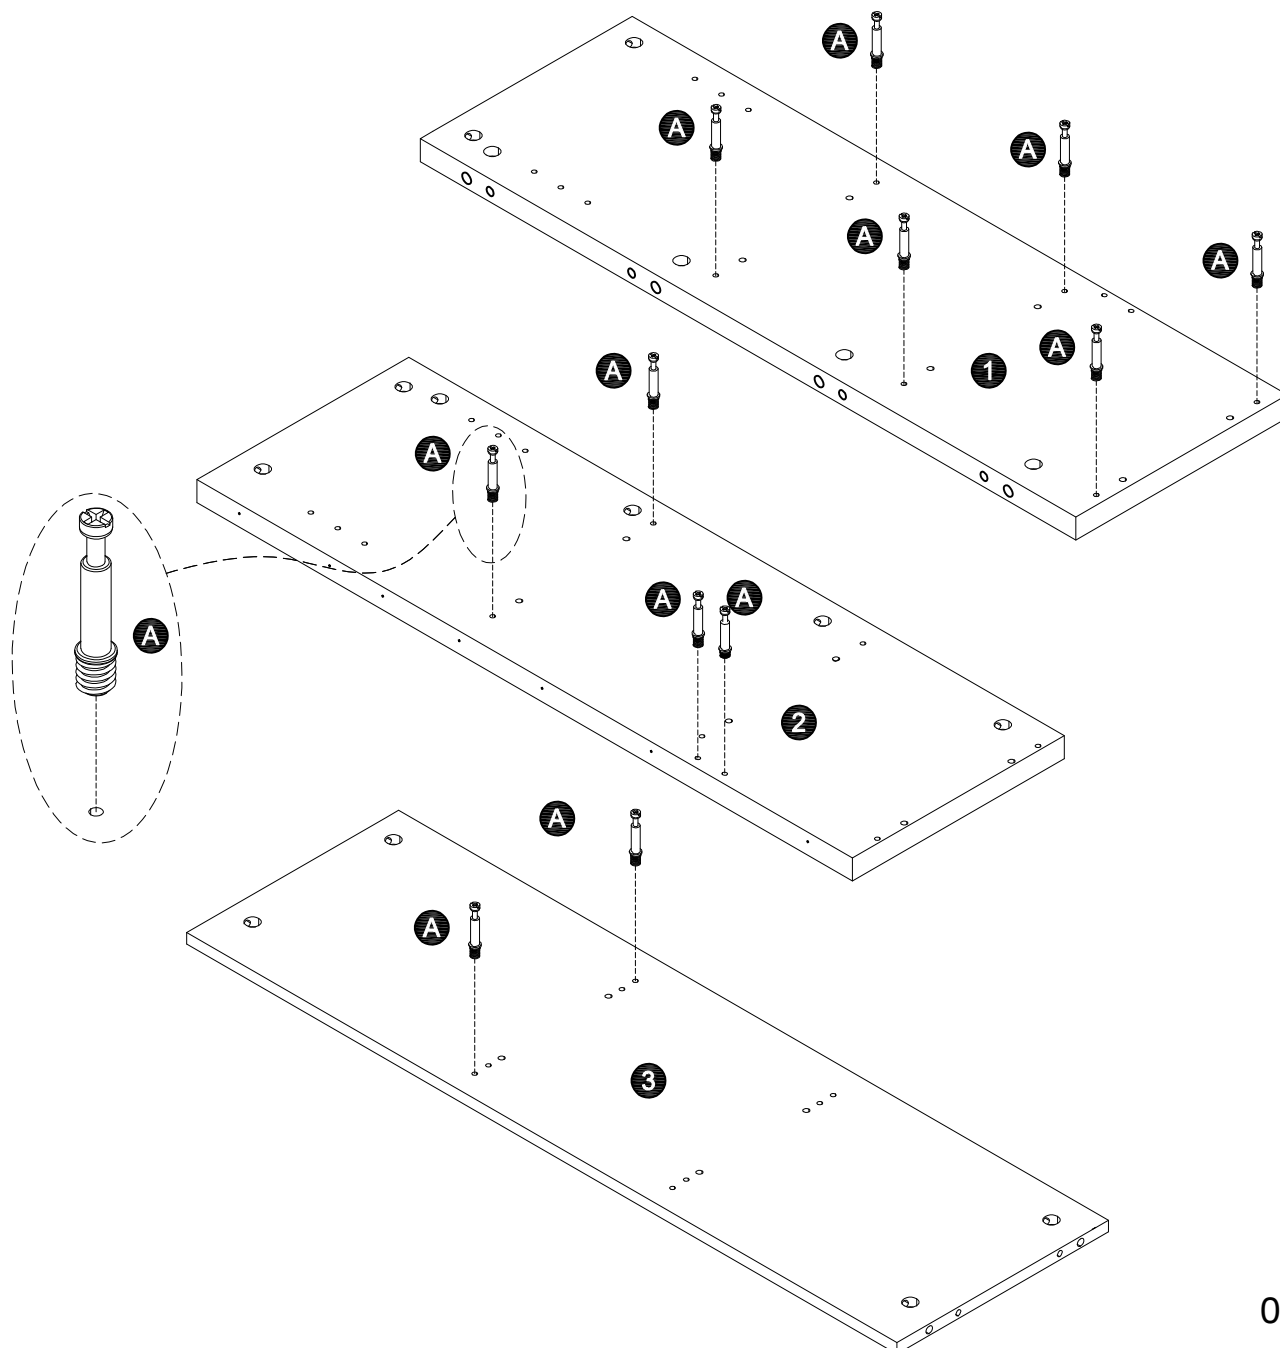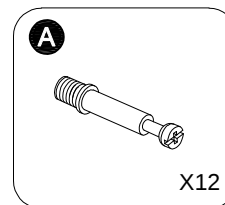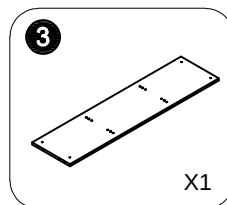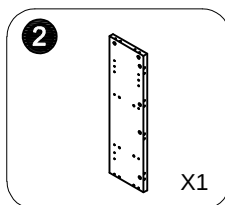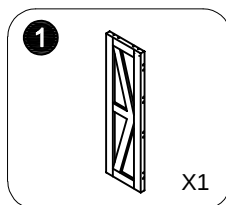




STEP 2

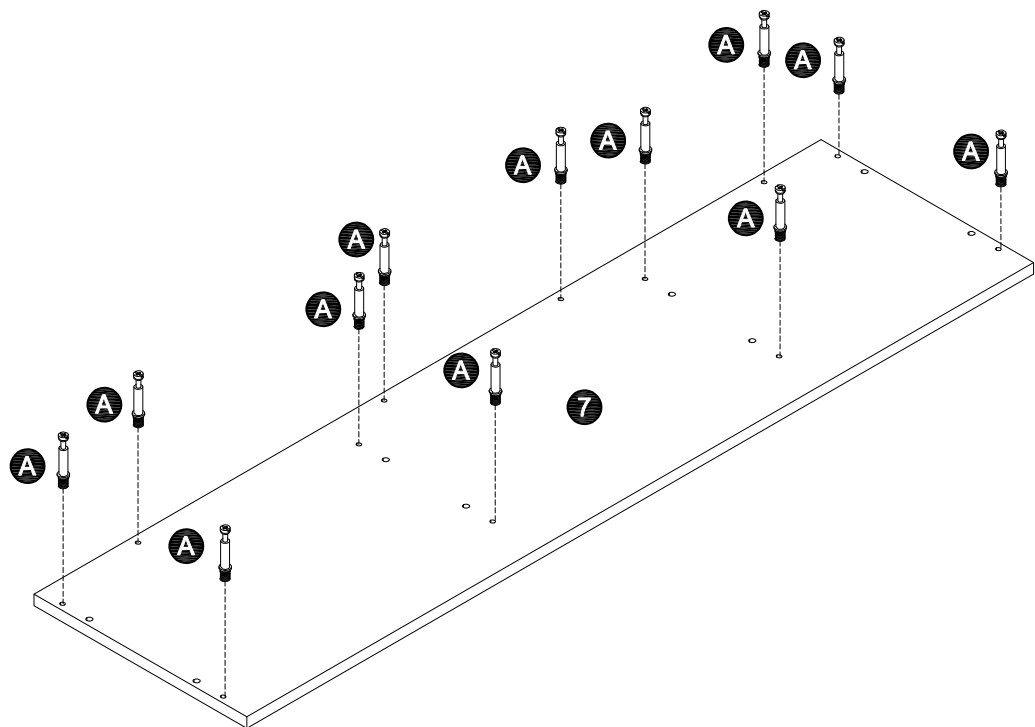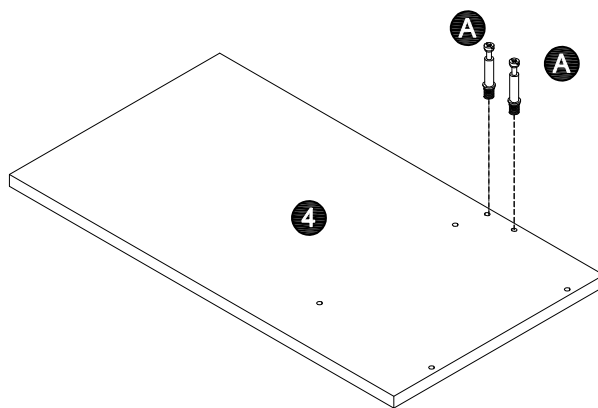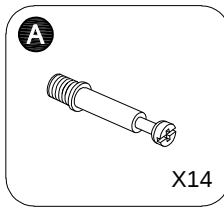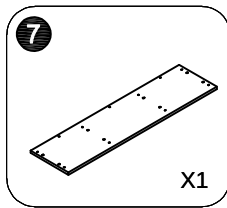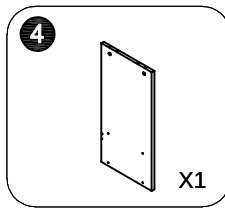




STEP 3

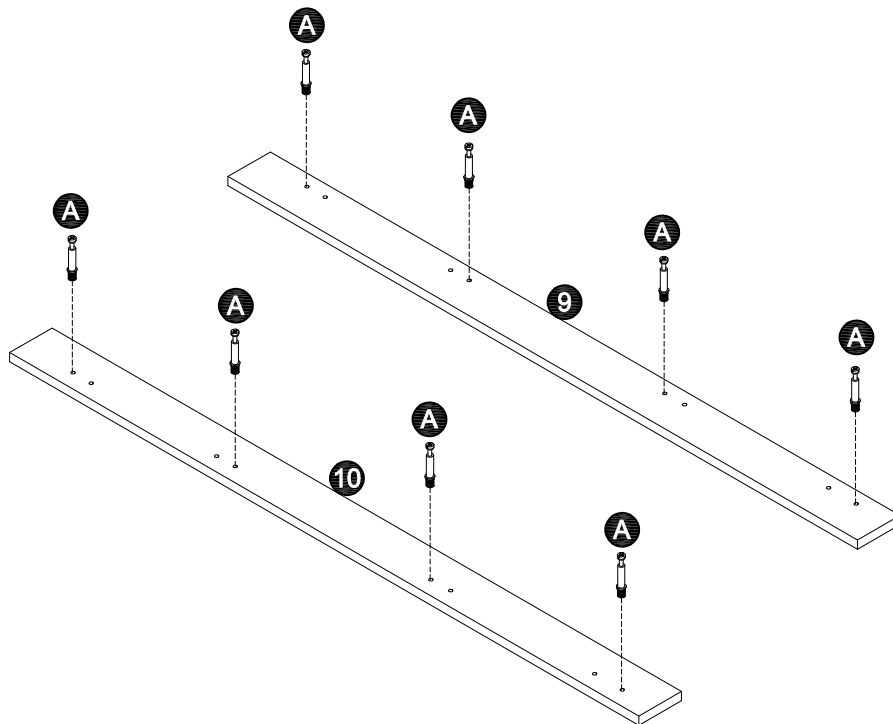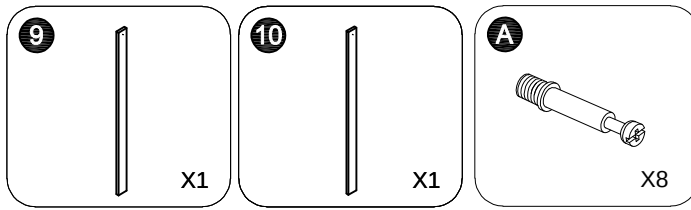

STEP 4

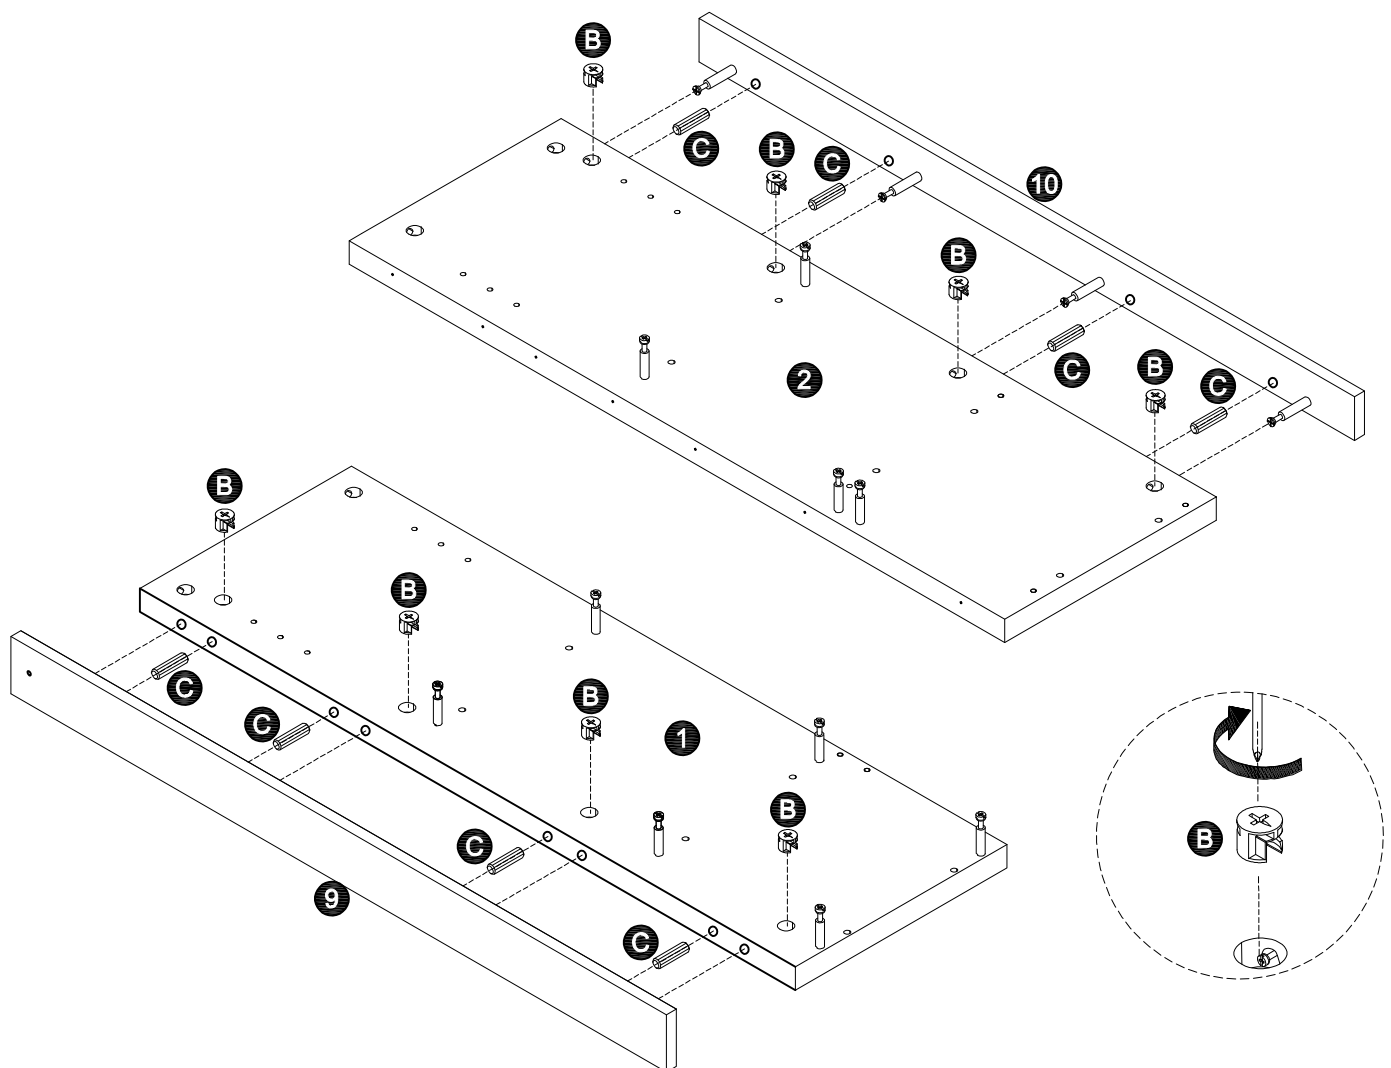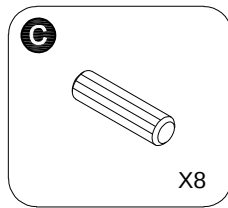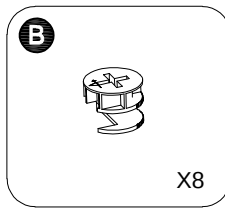


STEP 5

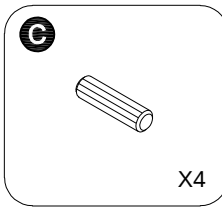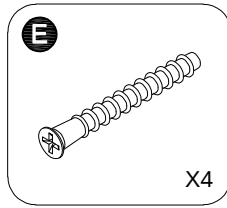
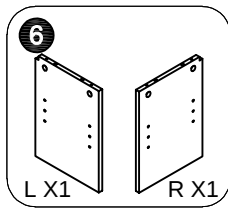


NOTICE:



Make sure the recess of part 6 is underneath.

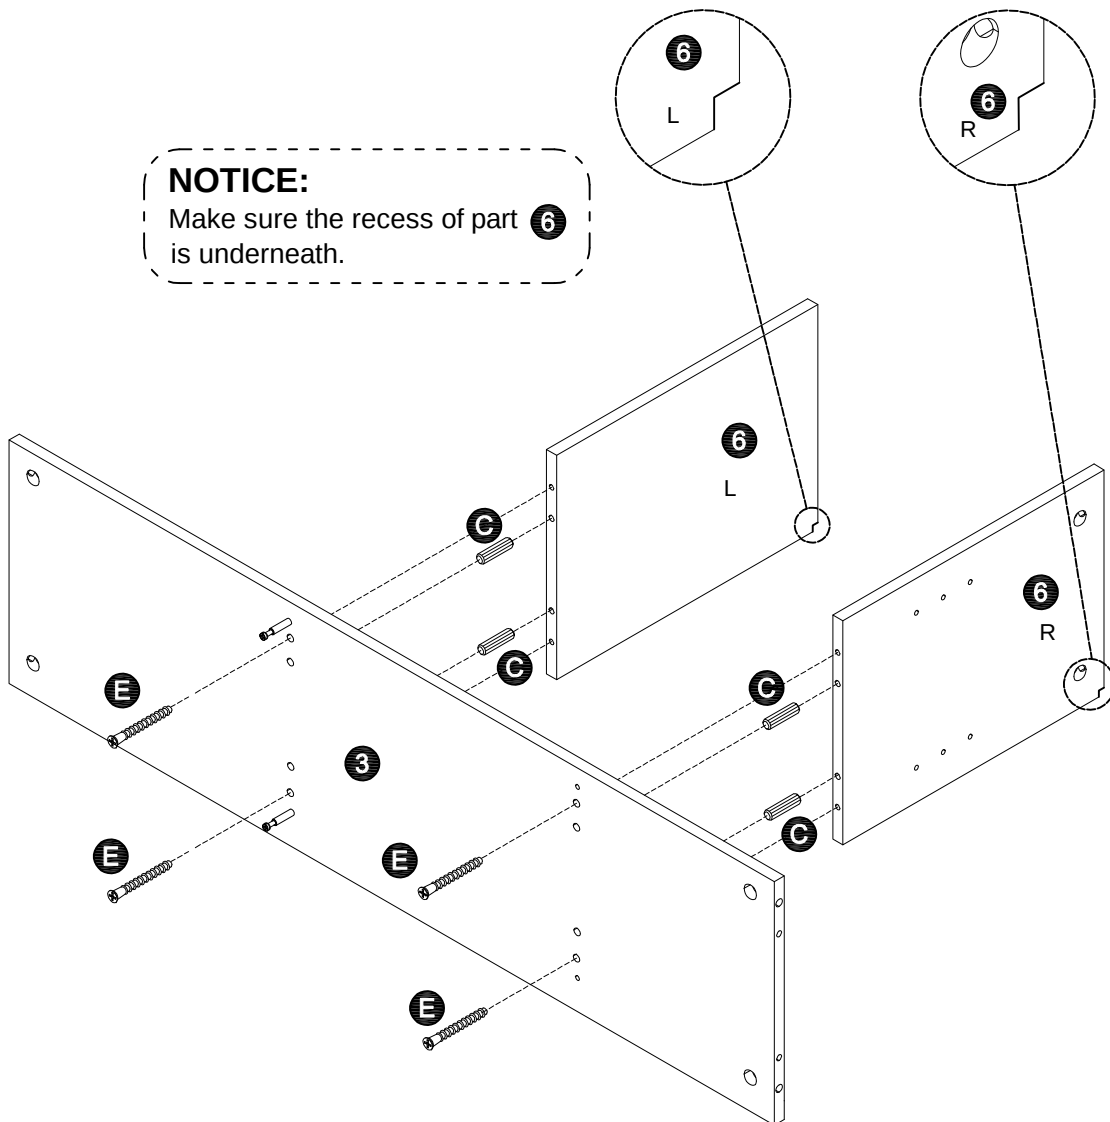



STEP 6

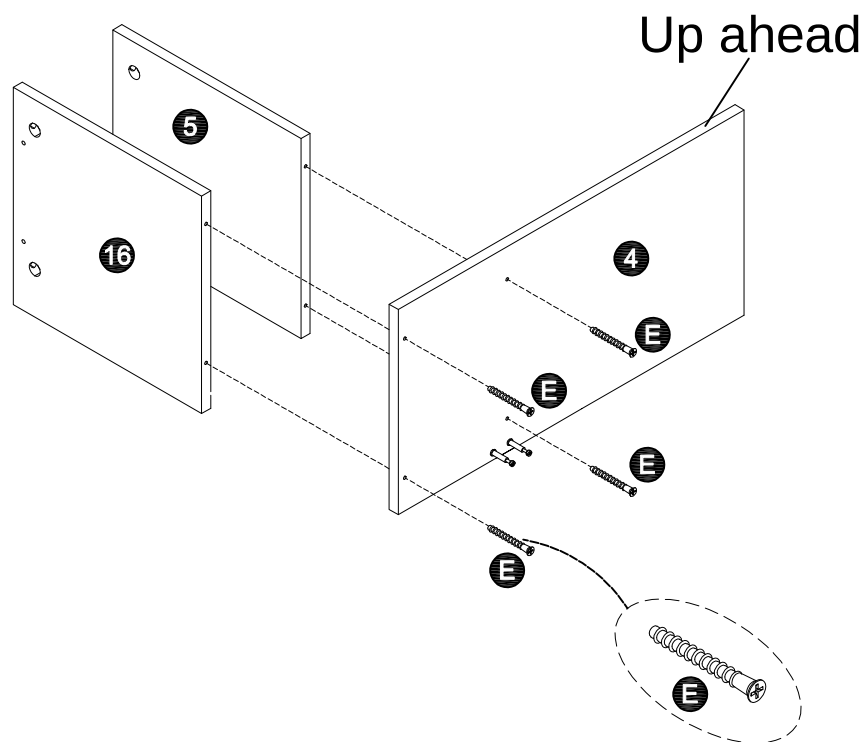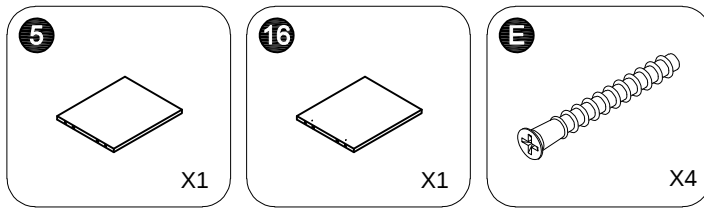



STEP 7

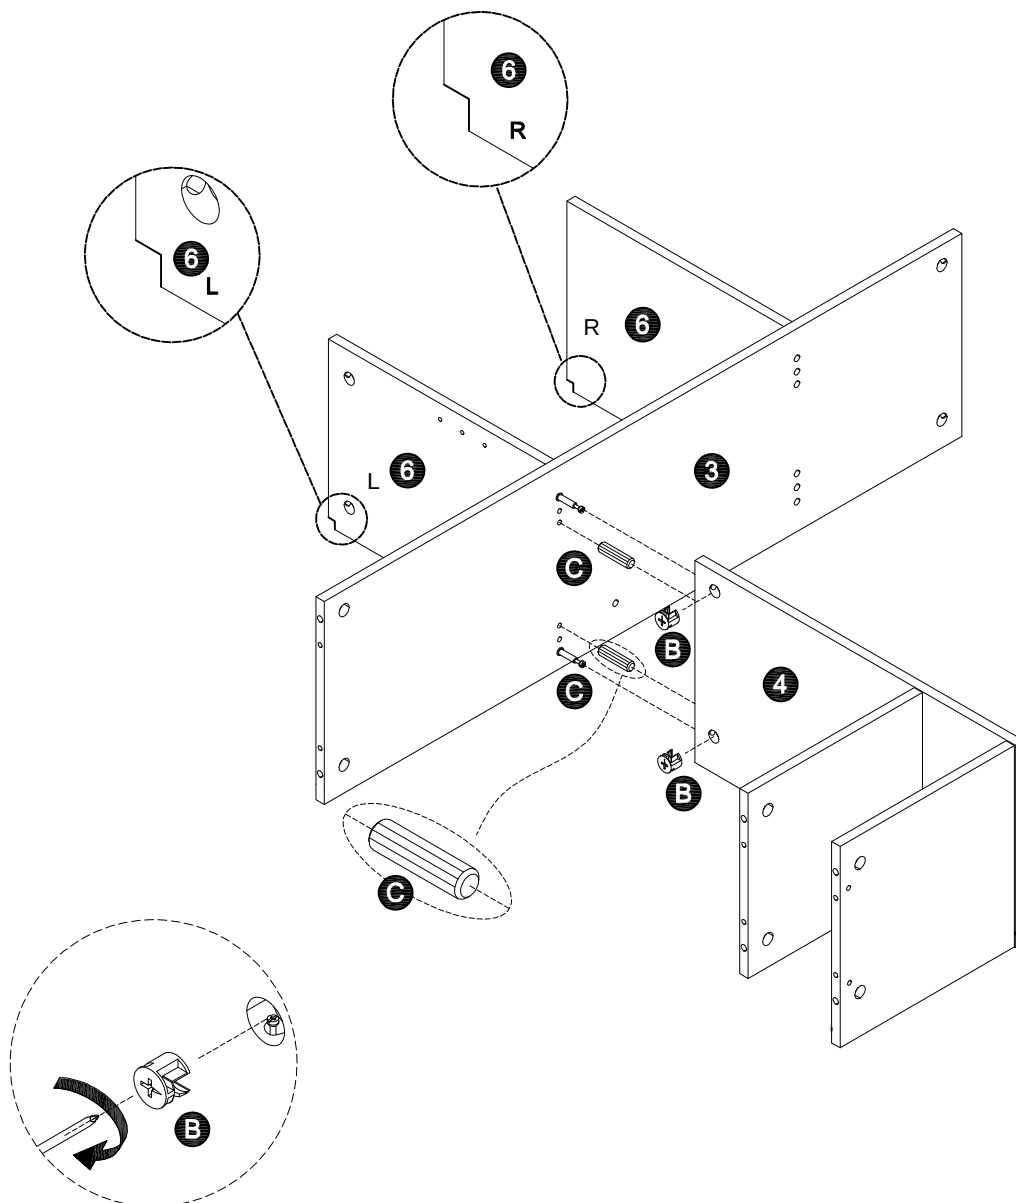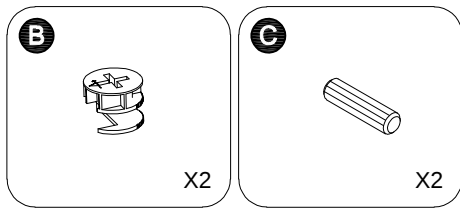




STEP 8

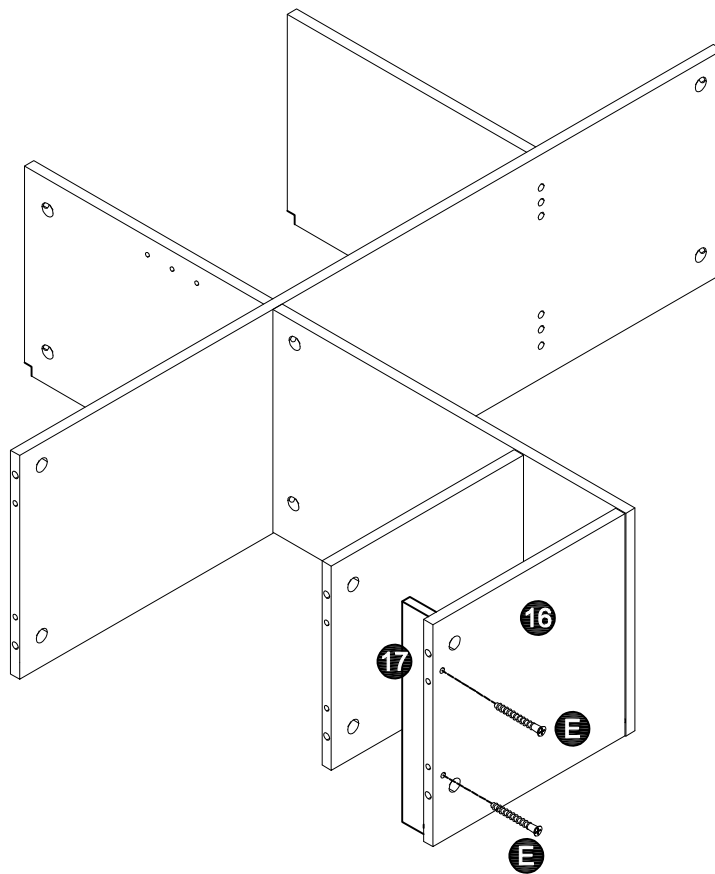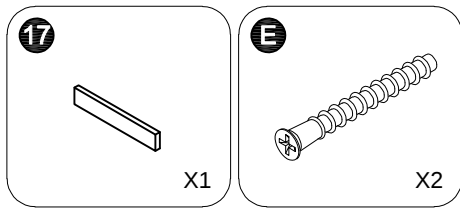




STEP 9

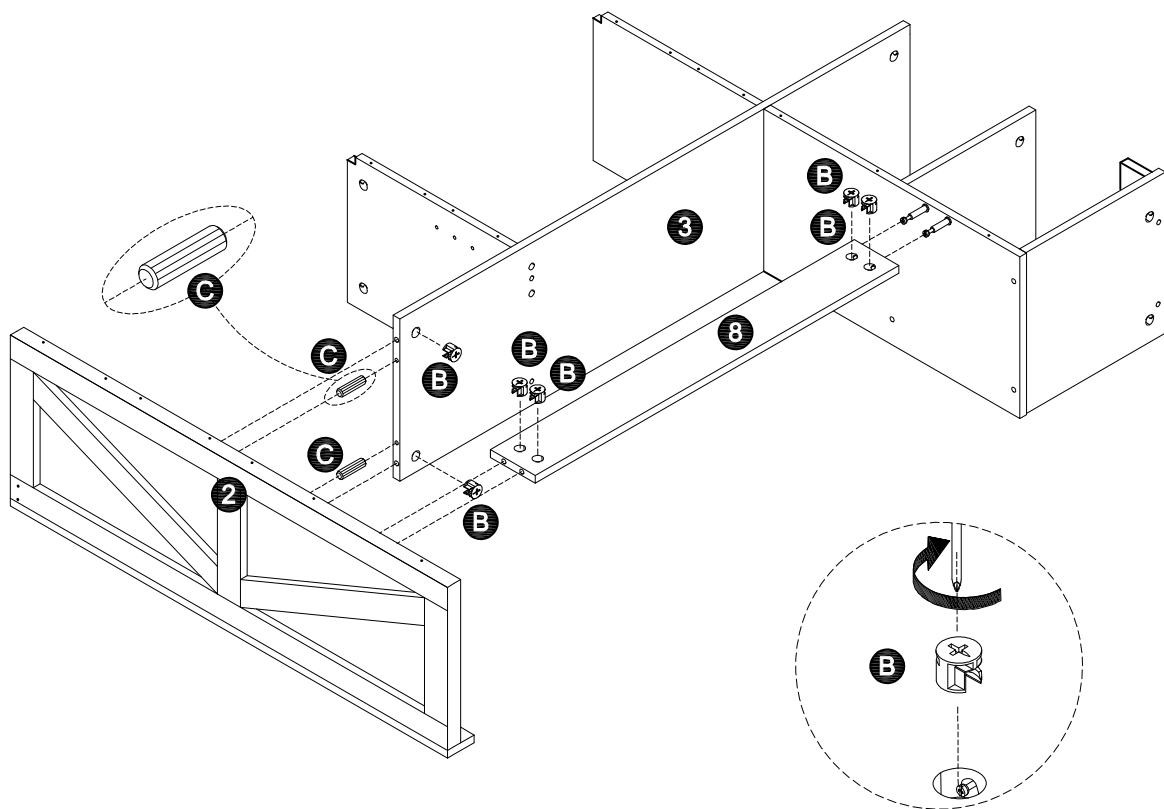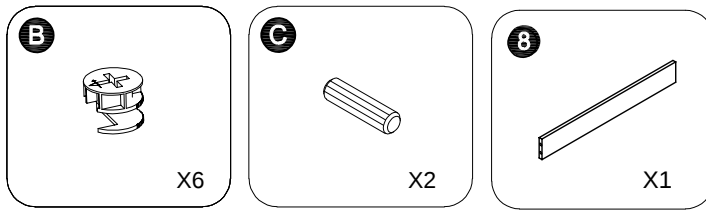




STEP 10

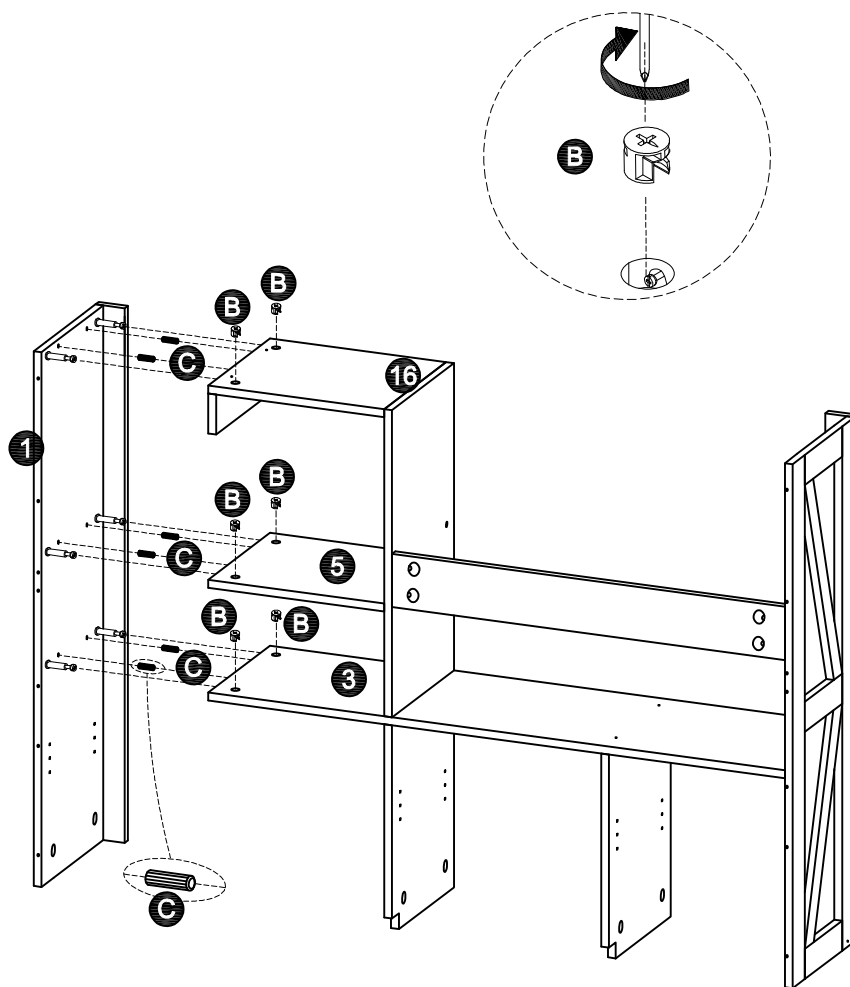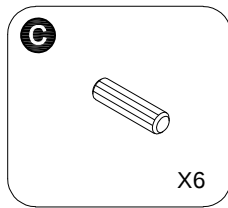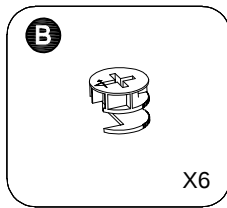




STEP 11

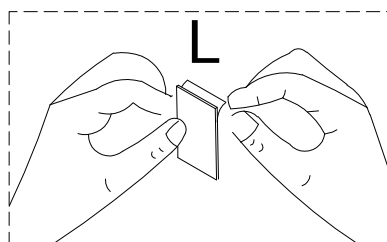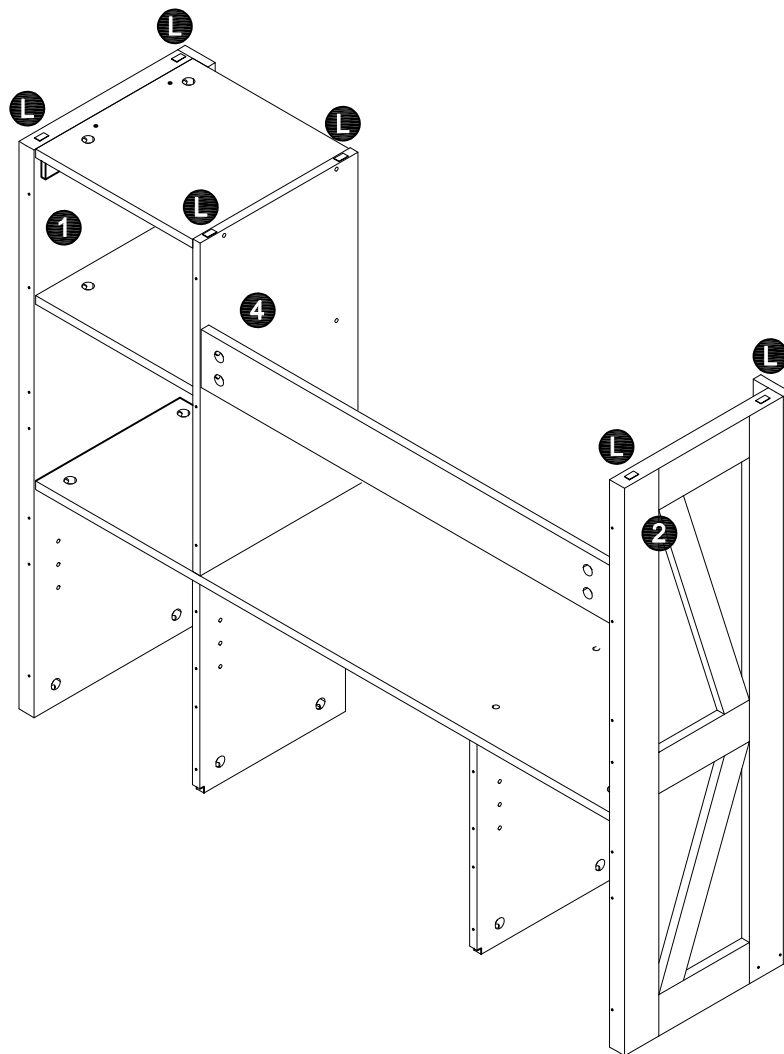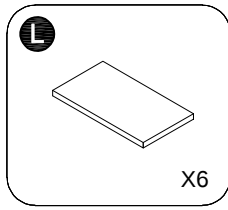


STEP 12

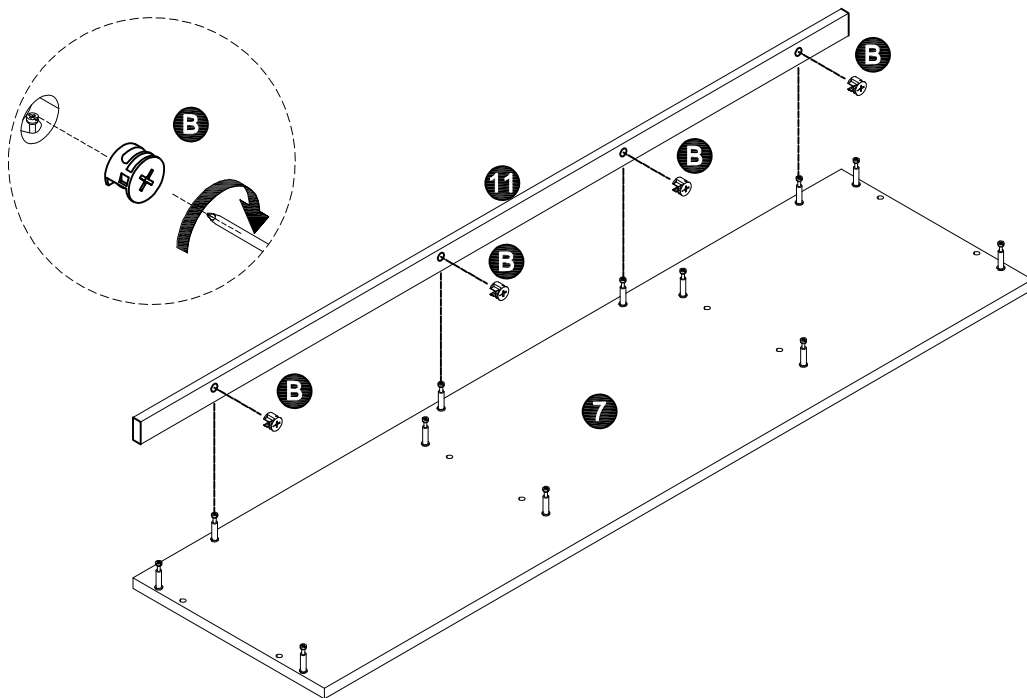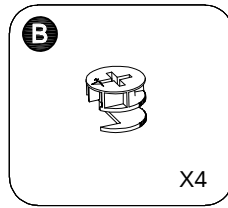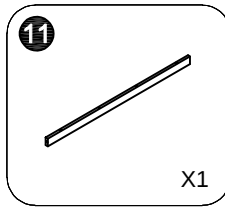



STEP 13

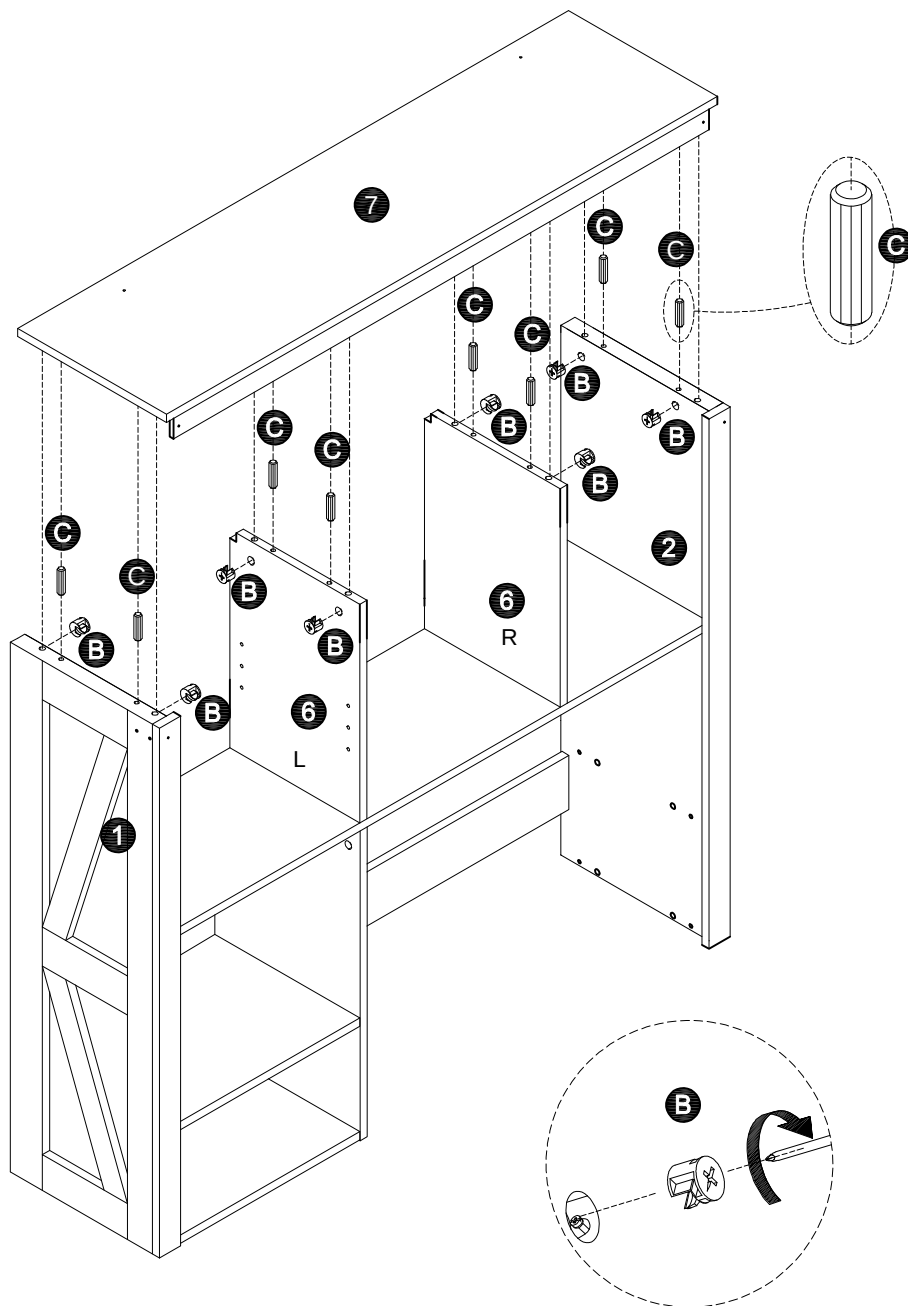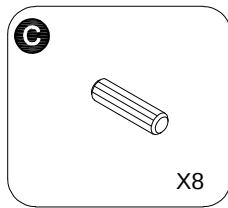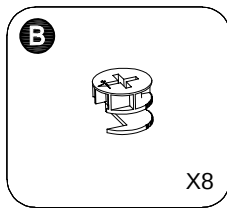


STEP 14

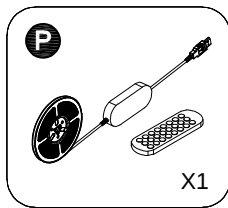





Please remove the film on the back of the lamp before installing the lamp strip to ensure that the lamp strip can be adhered to the board

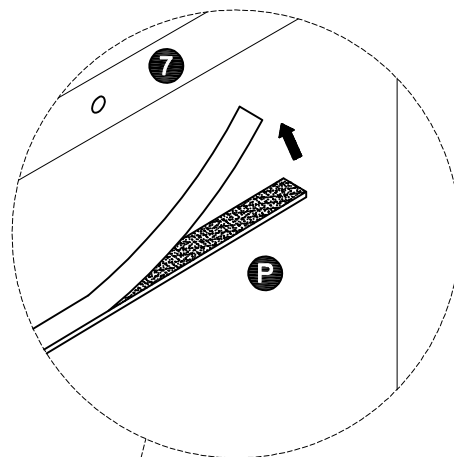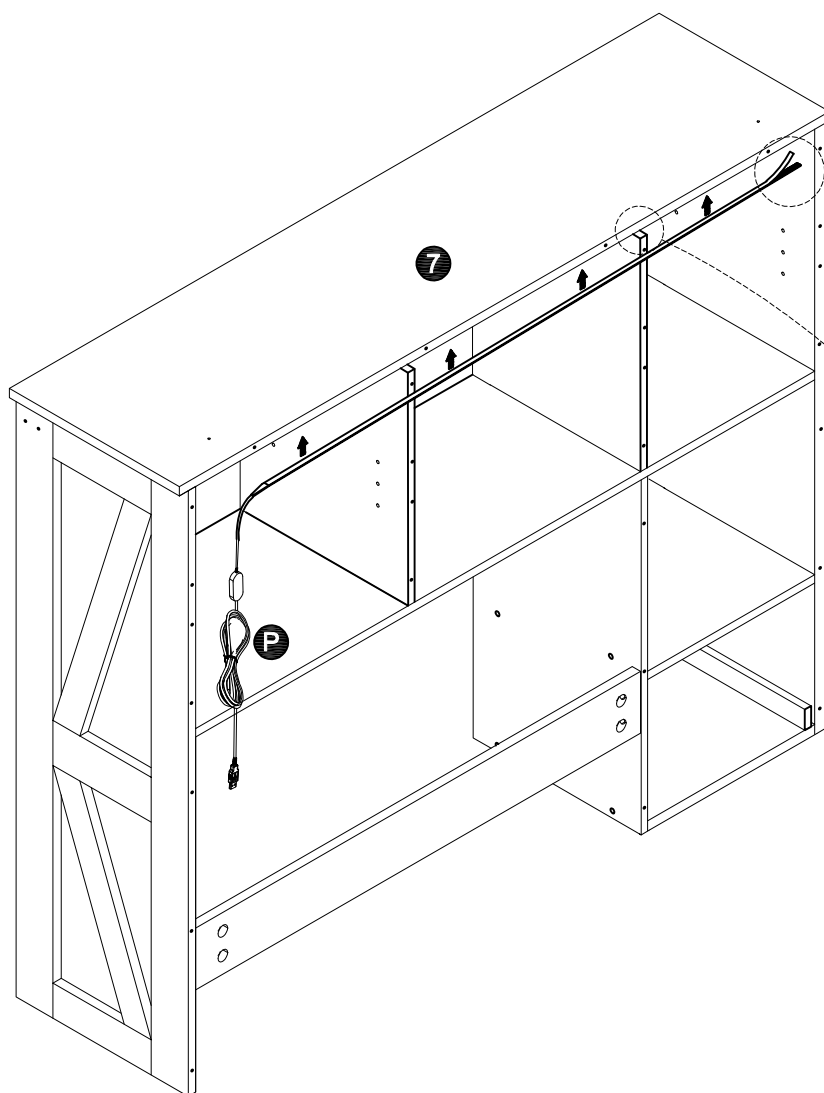



The light belt is stuck in the groove

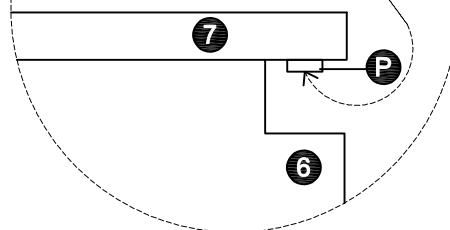





STEP 15

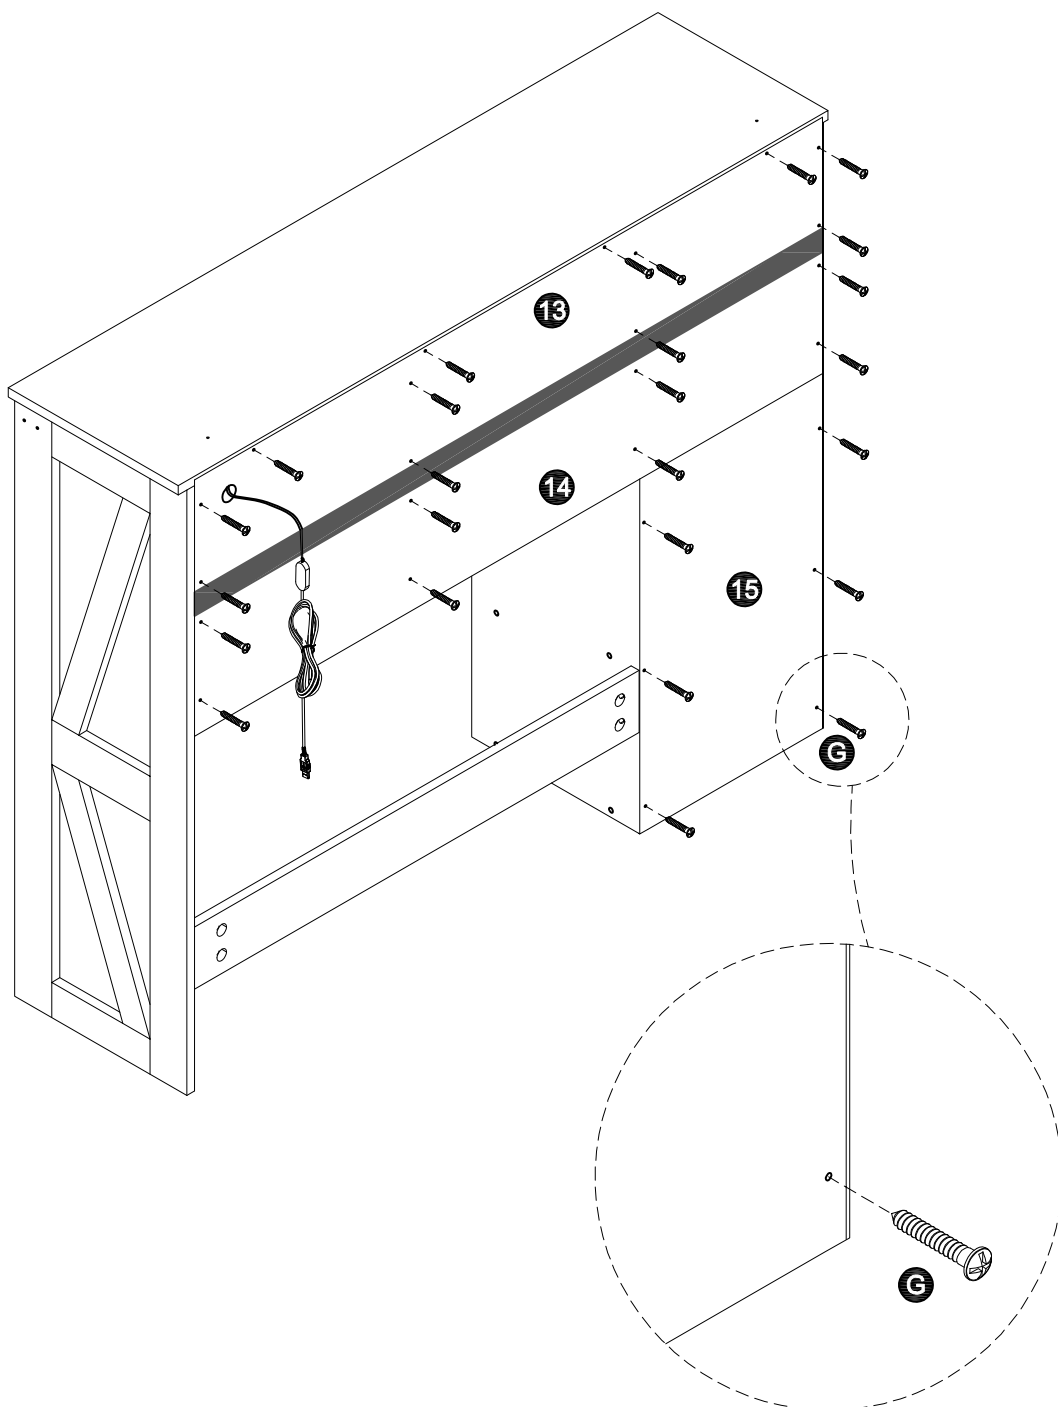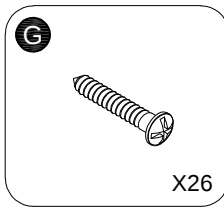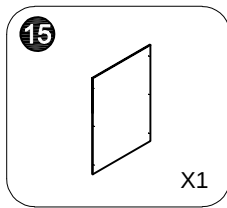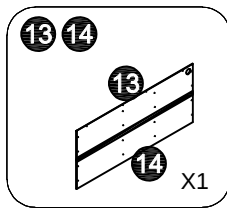







STEP 16

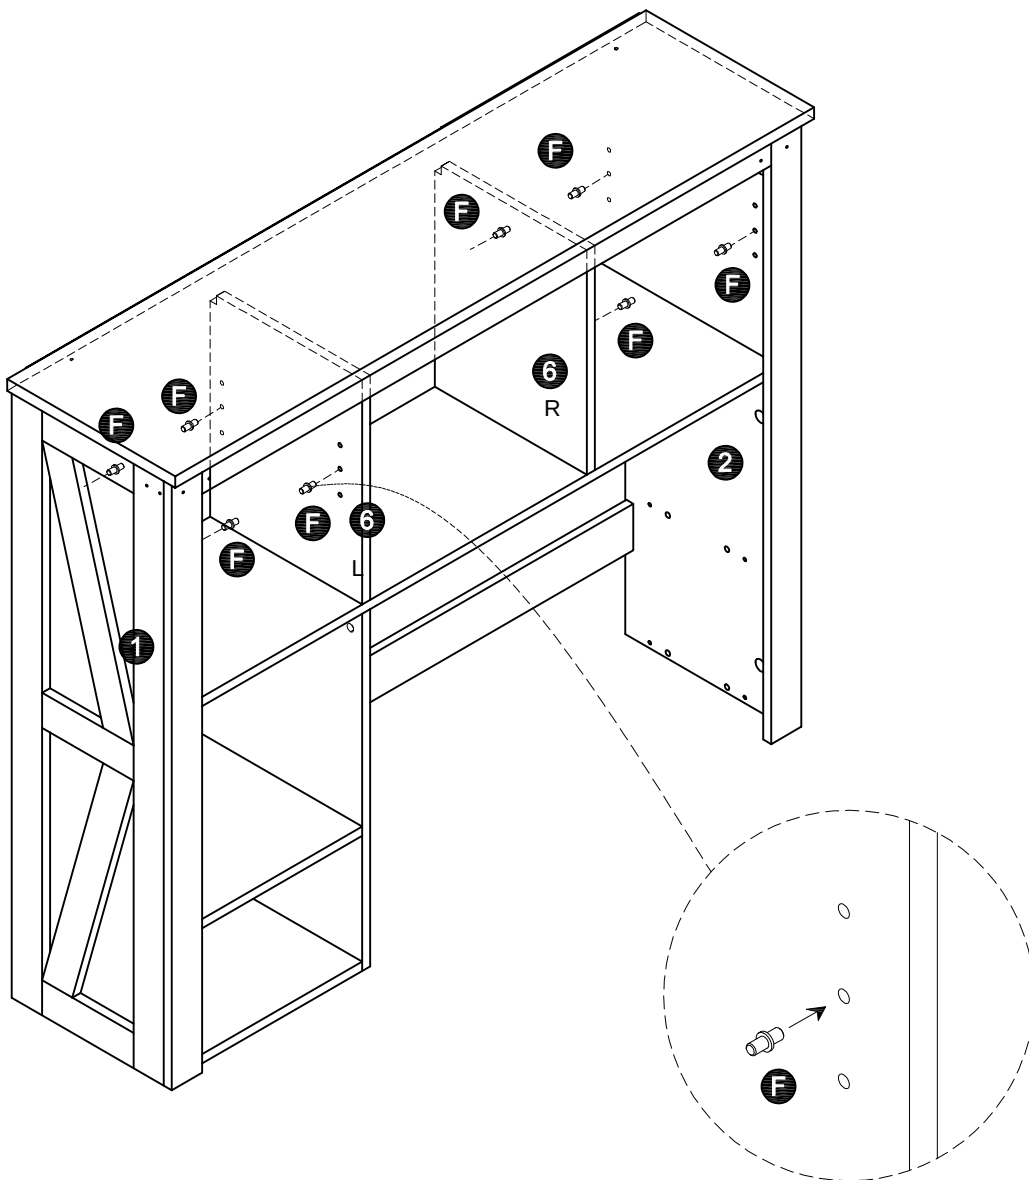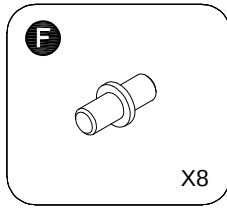


STEP 17

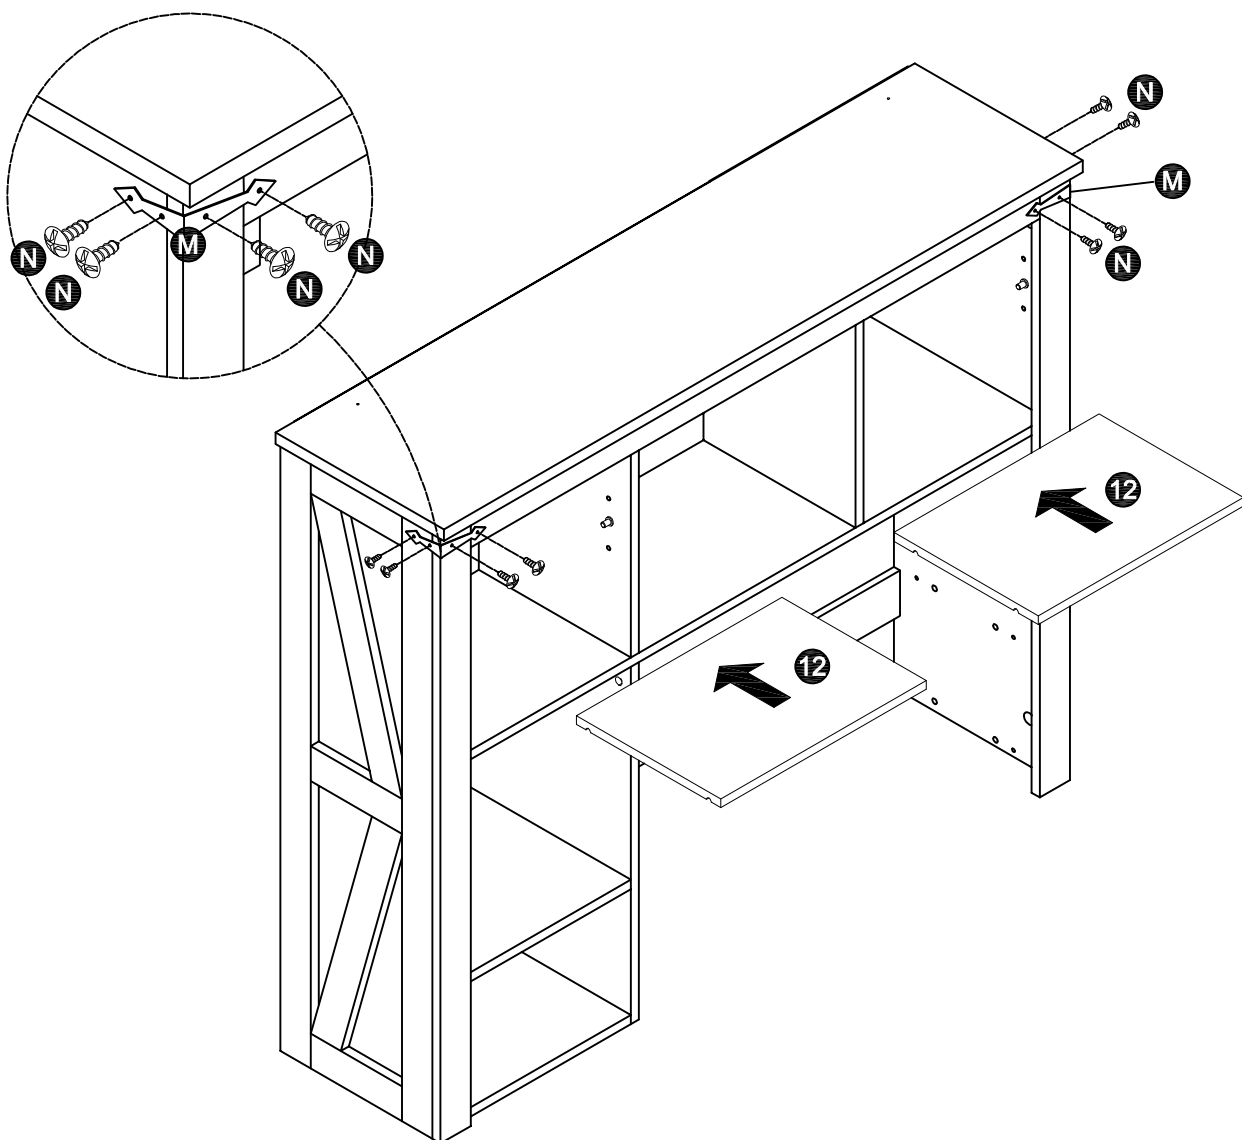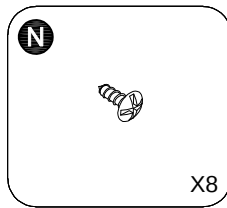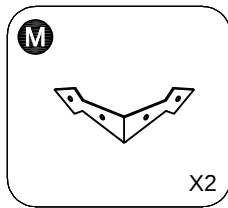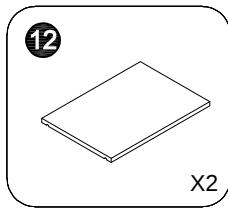



STEP 18

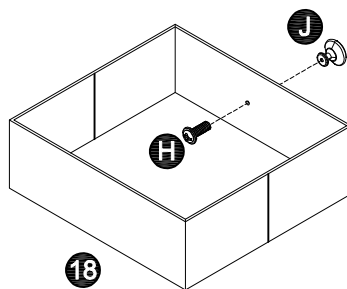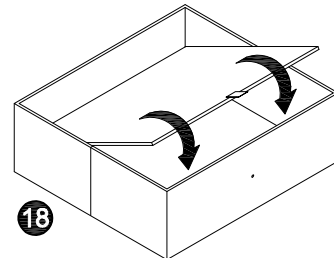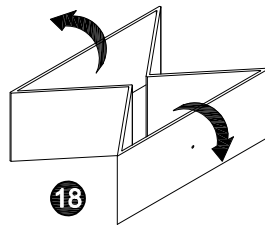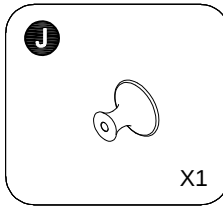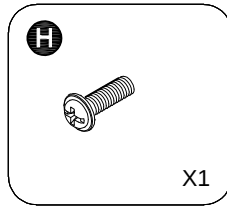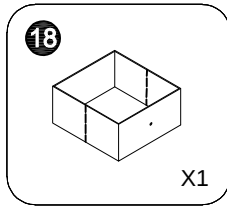



STEP 19

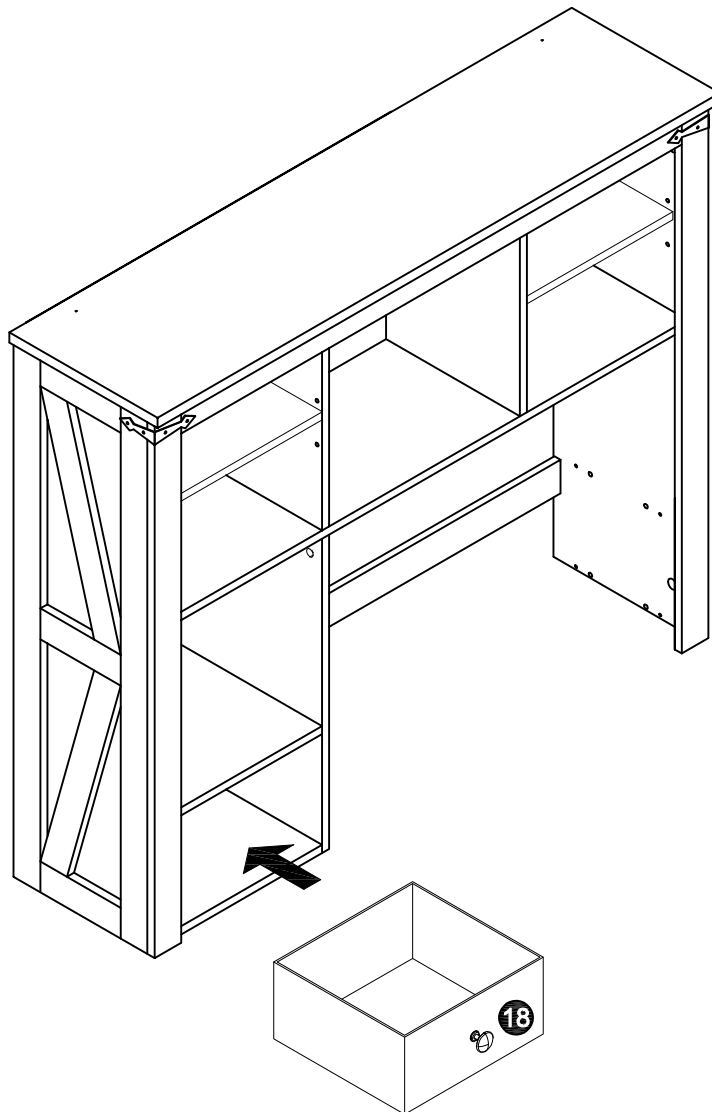




STEP 20

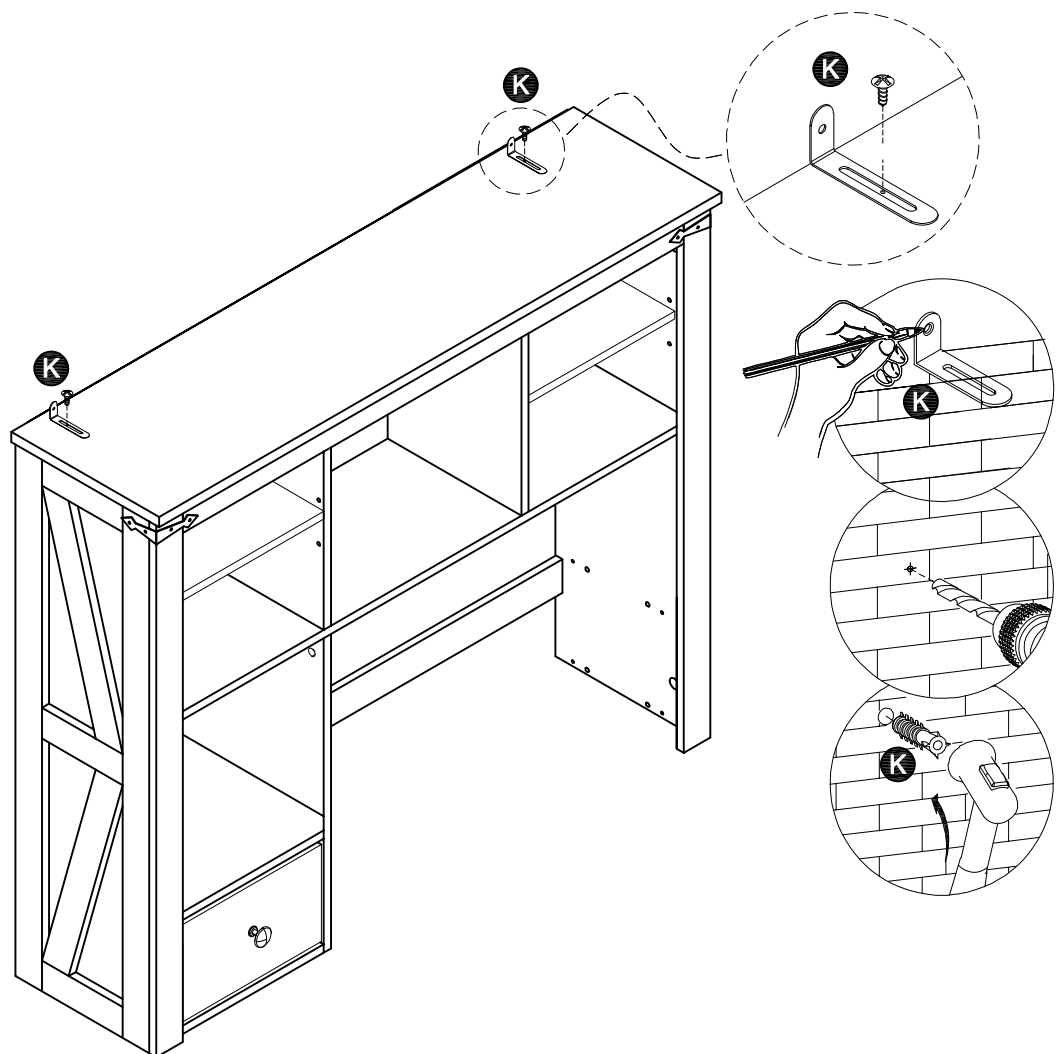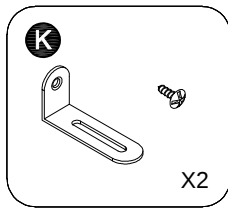

STEP 21

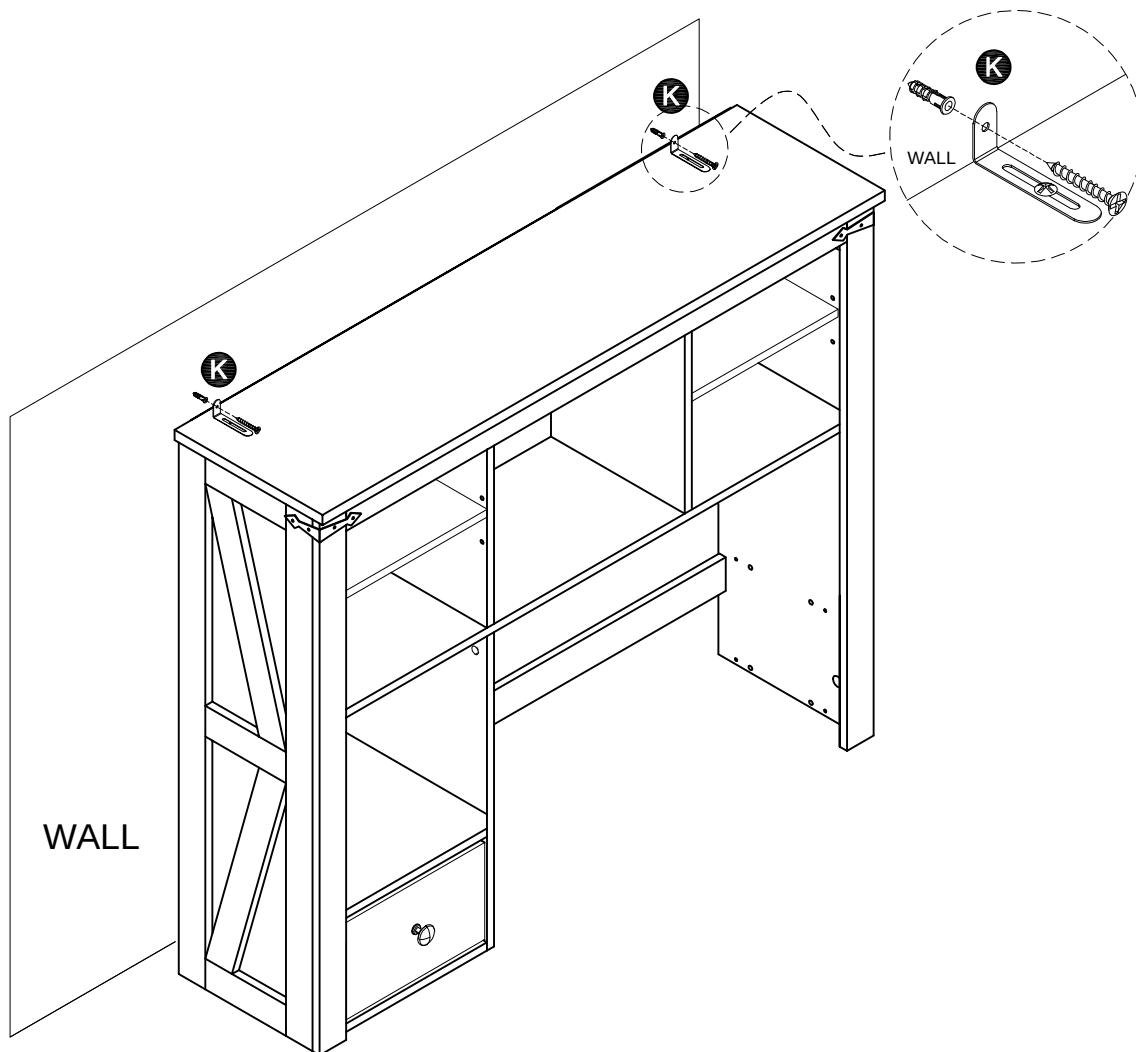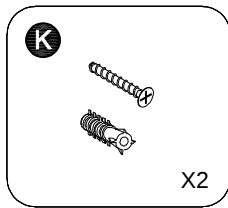






STEP 22

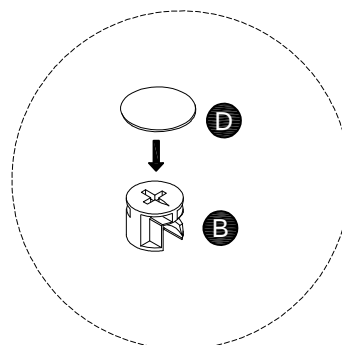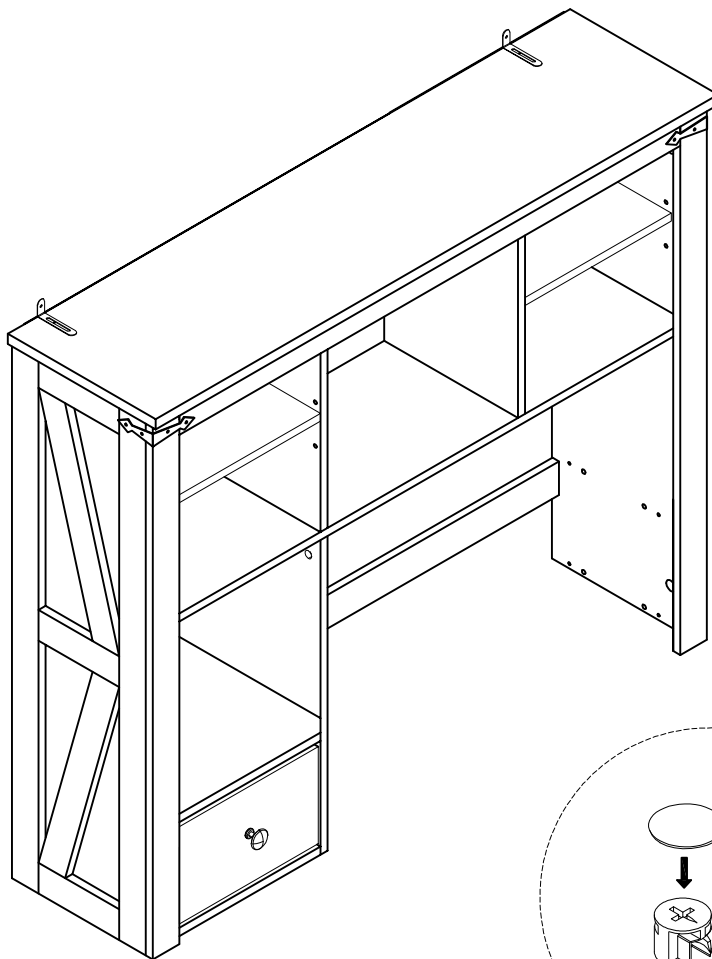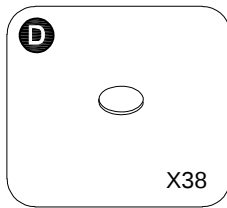




REMARK:
use part **D** to **B** cover part.

TYPE B INSTALLATION



STEP 1

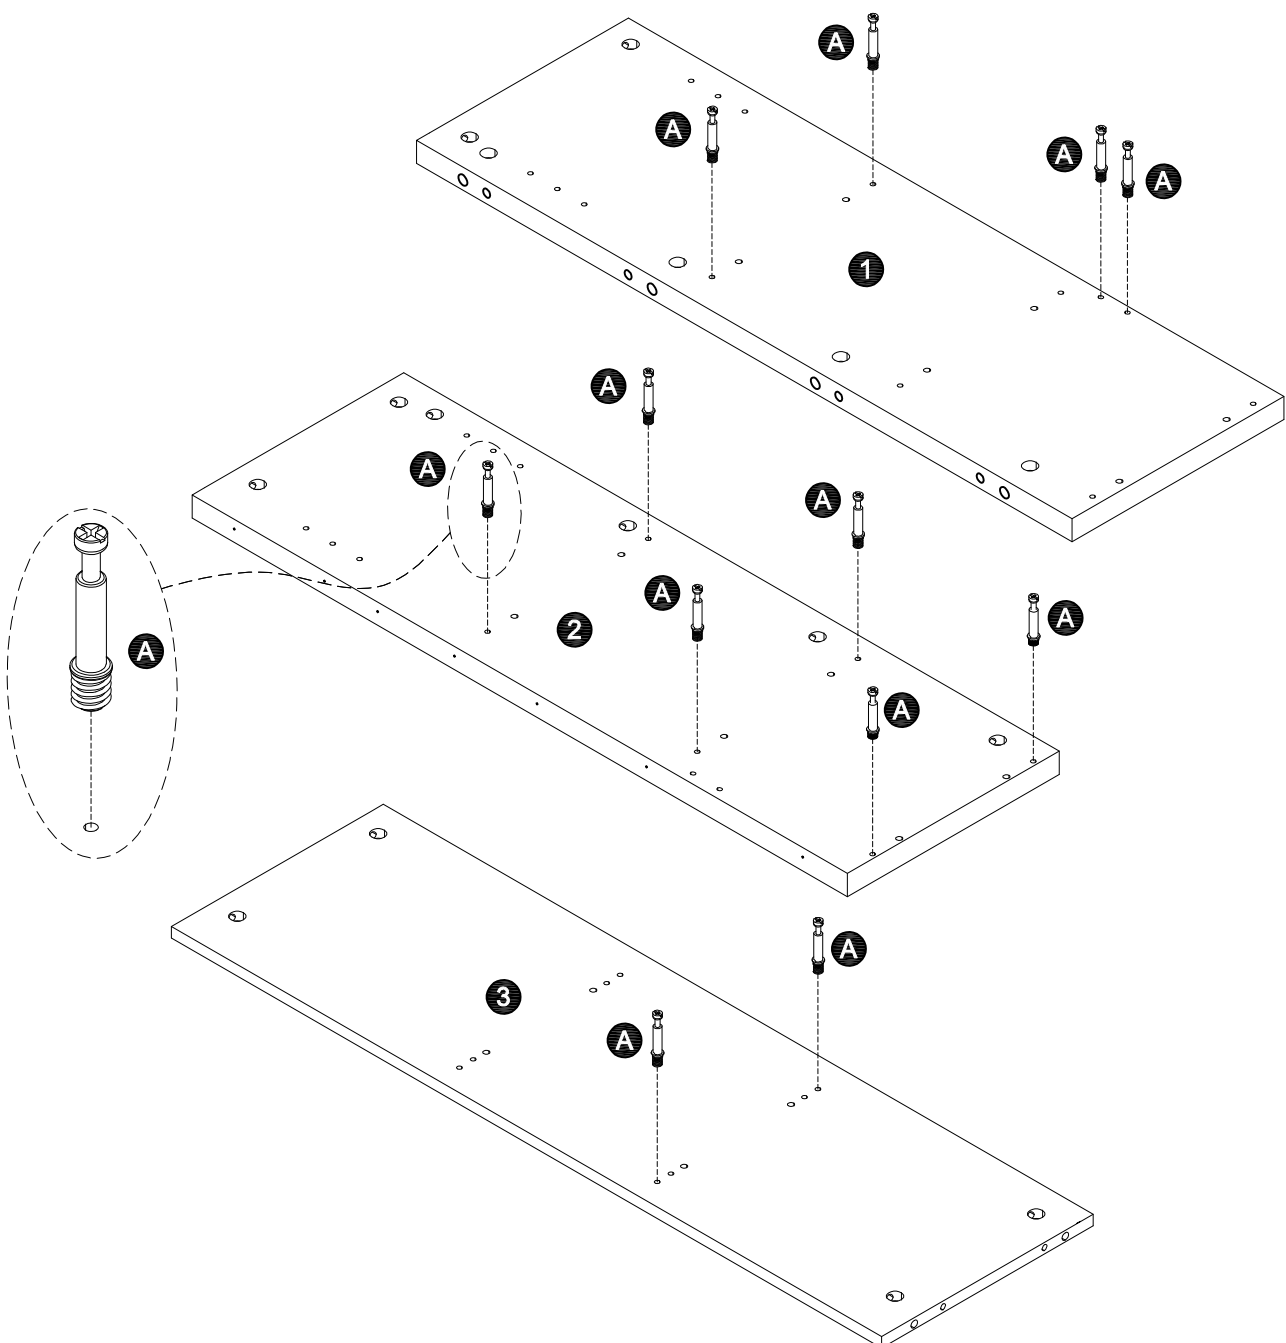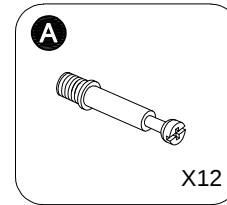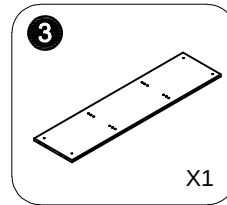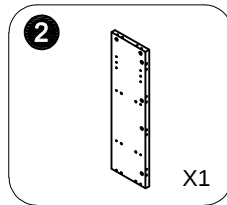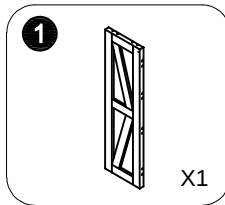



STEP 2

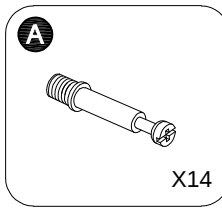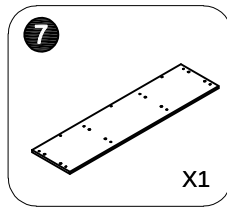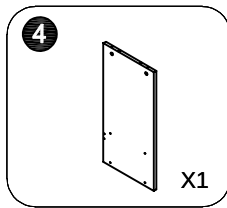




Up ahead

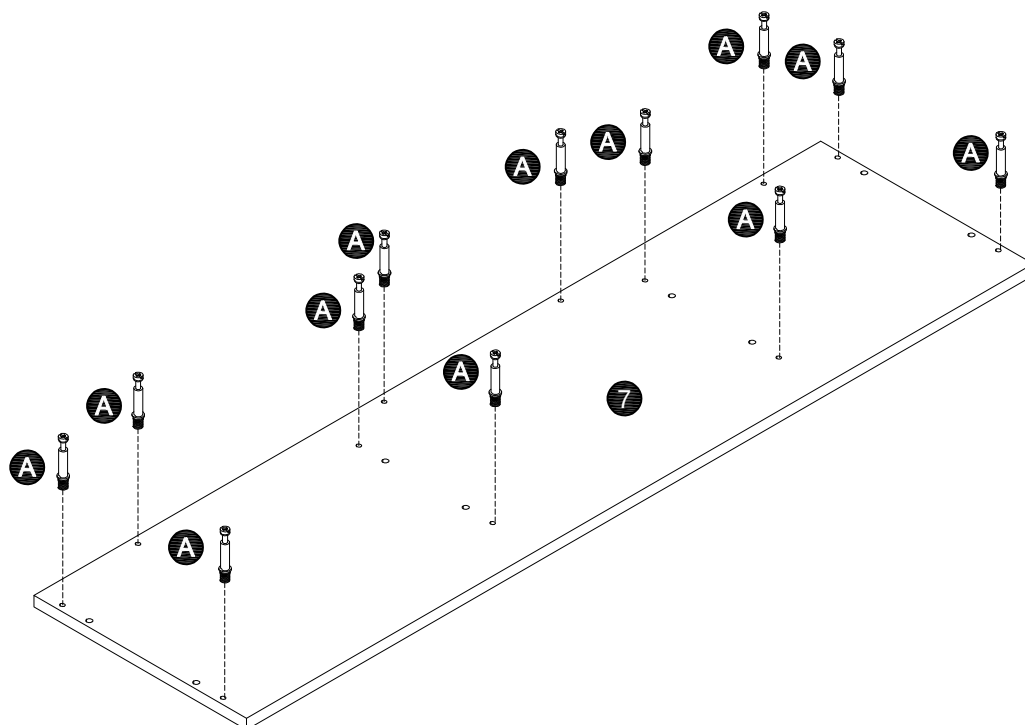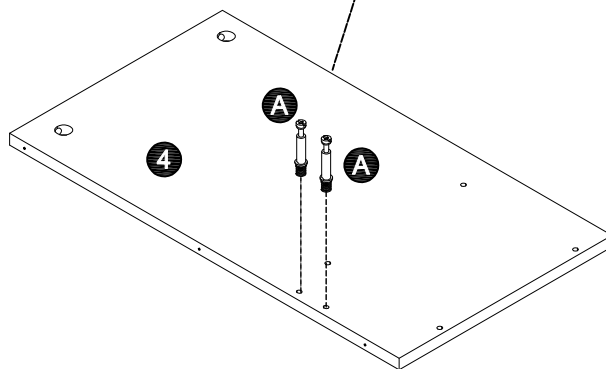




STEP 3

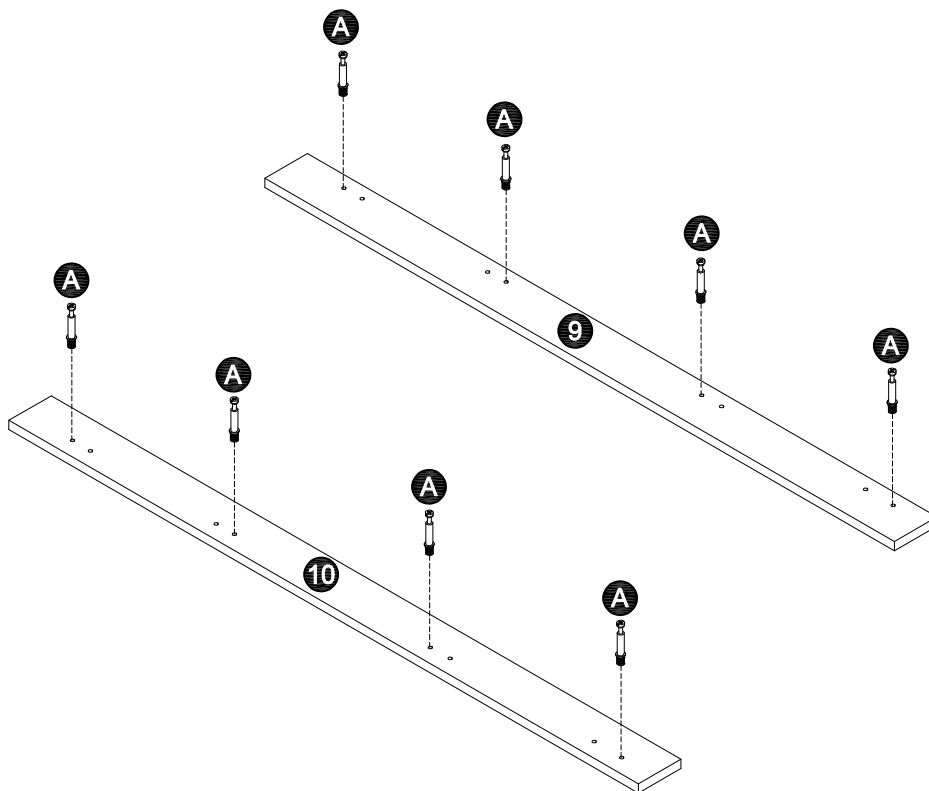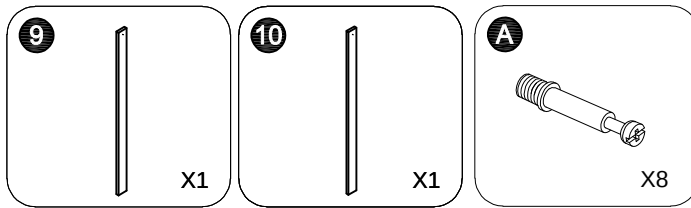

STEP 4

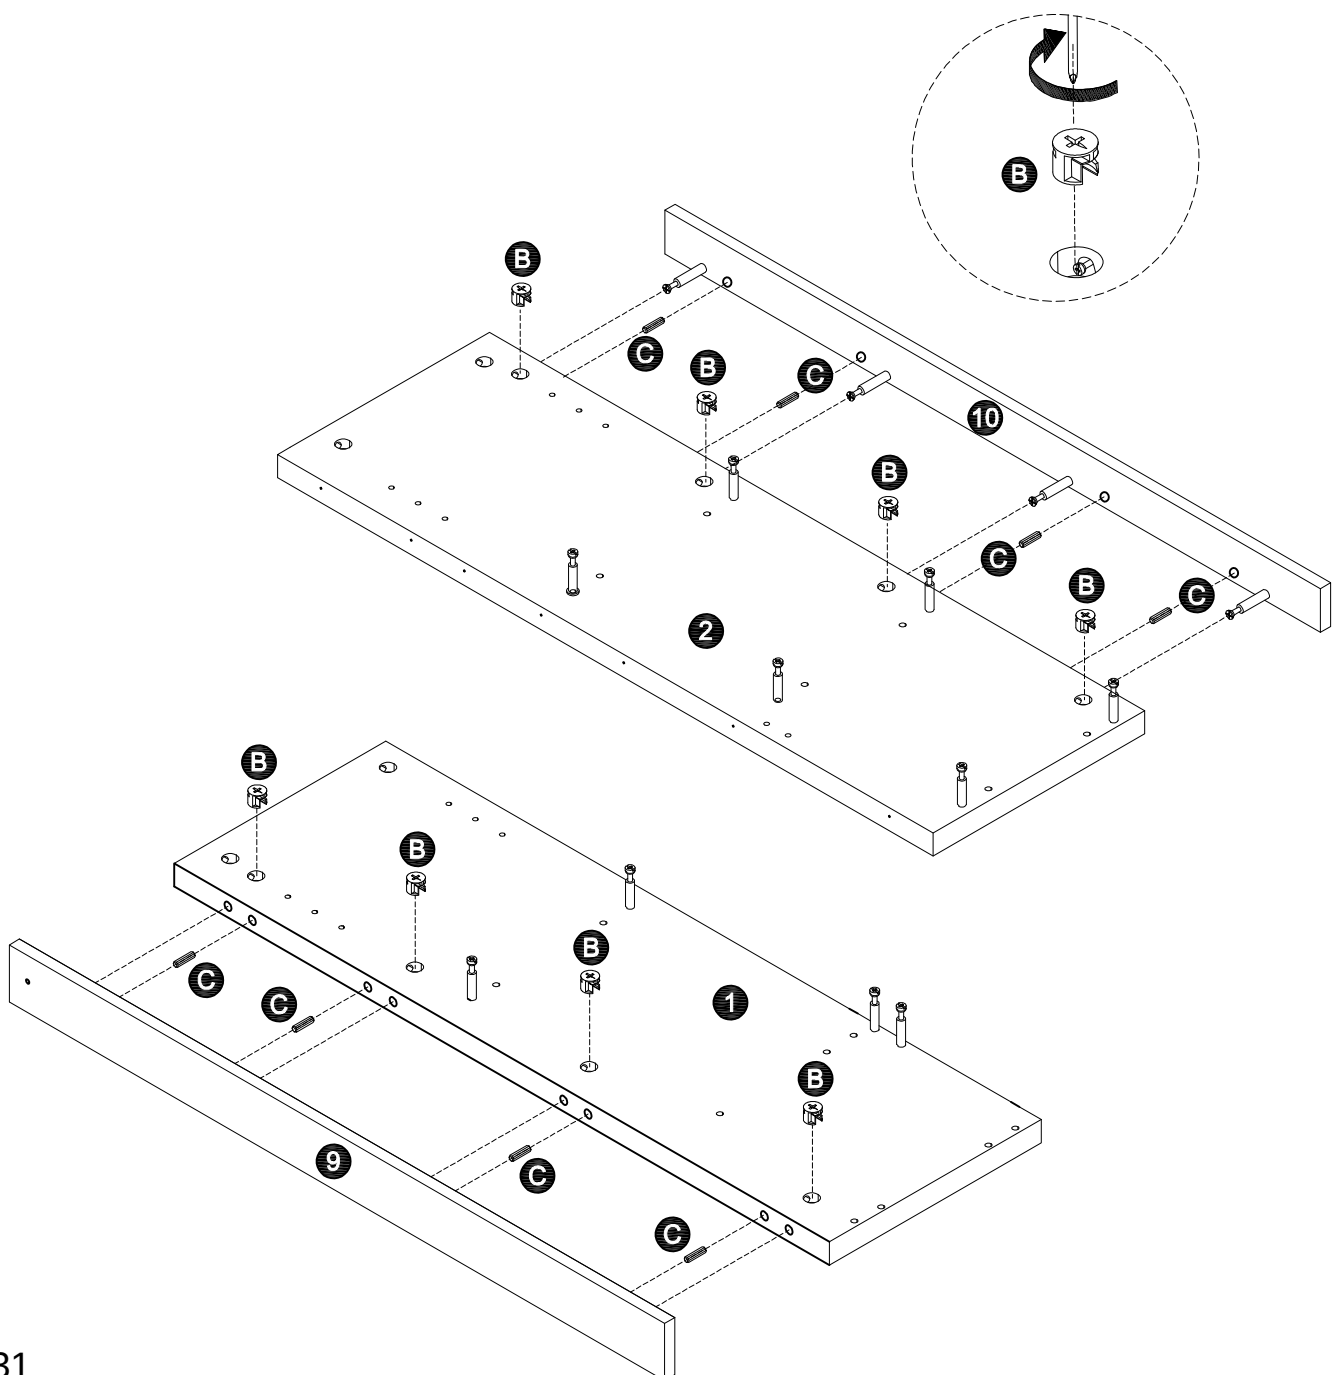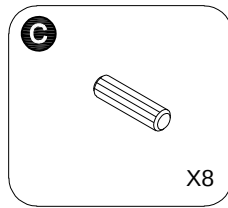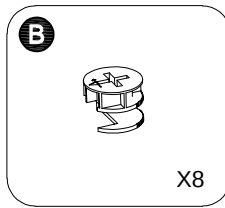


STEP 5


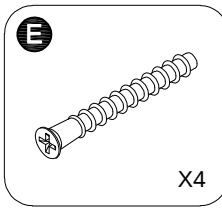
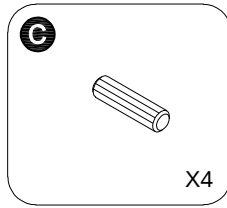
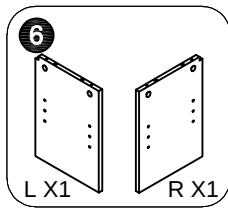


NOTICE:


Make sure the recess of part 6 is underneath.

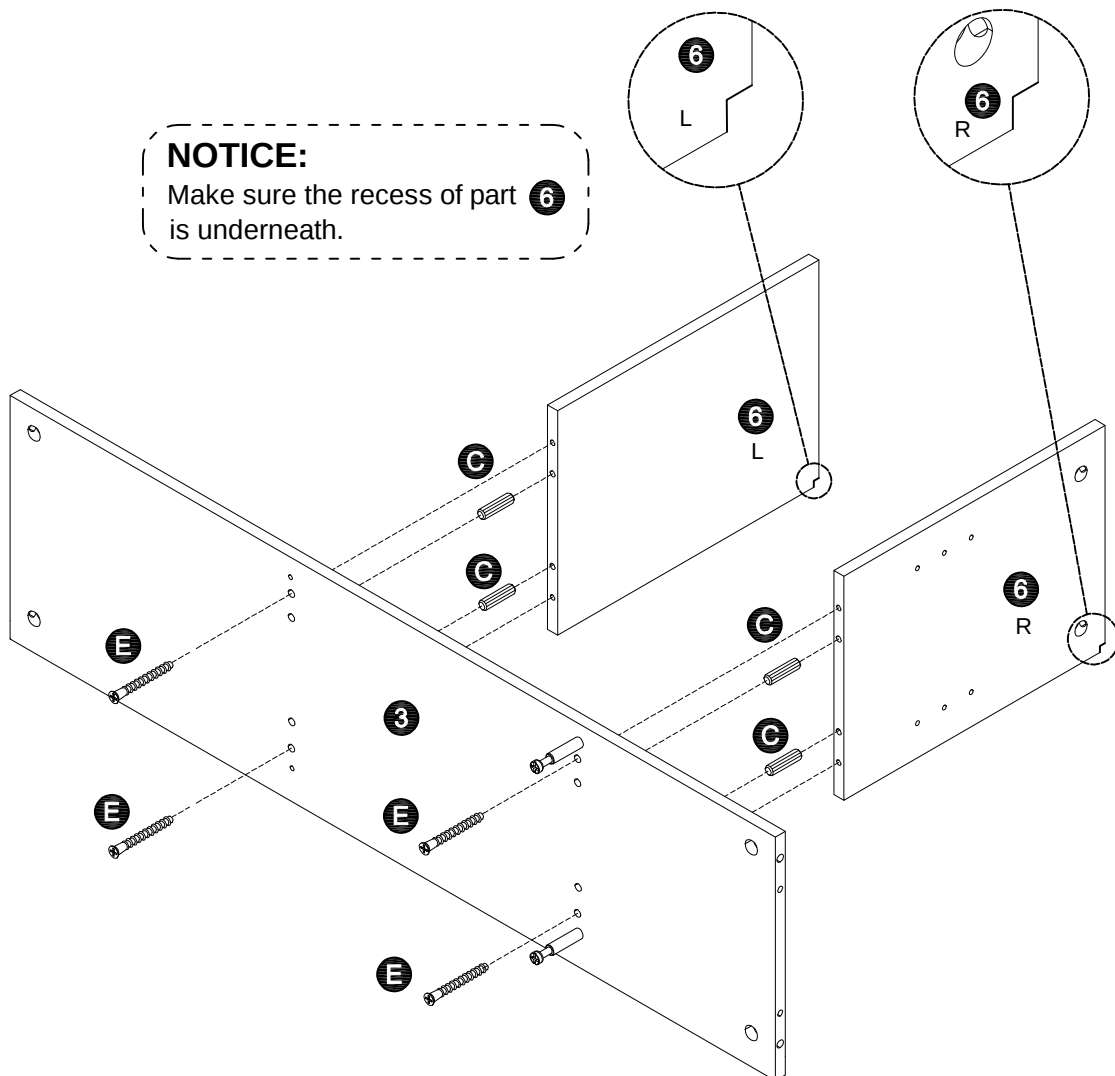




STEP 6

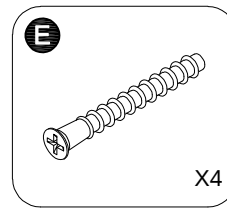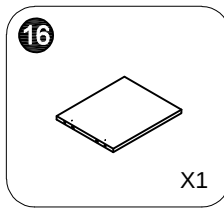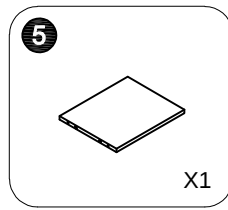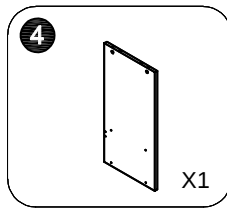




Up ahead

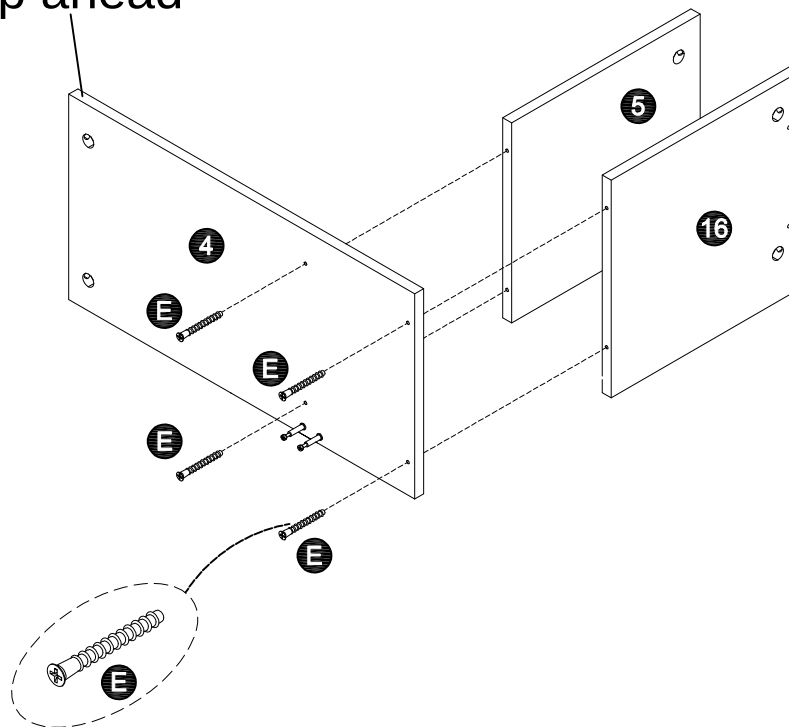





STEP 7

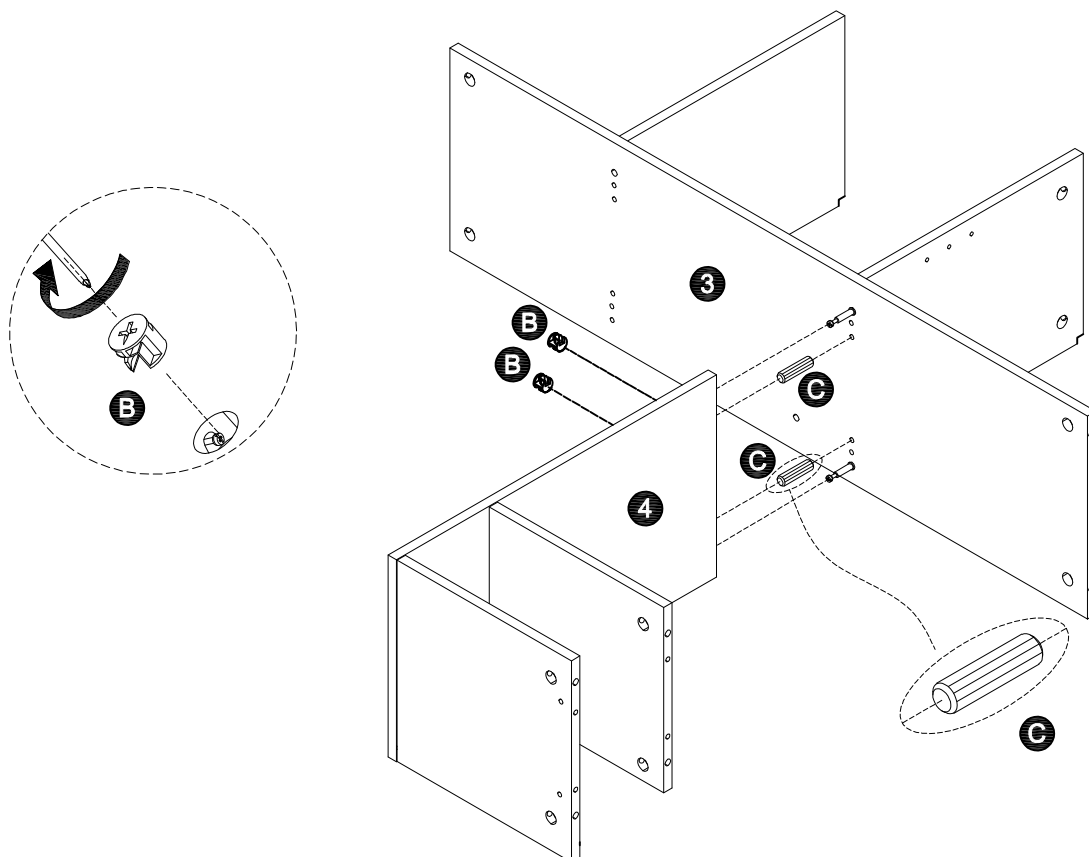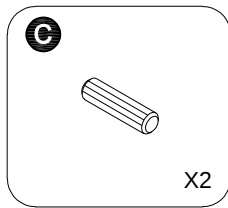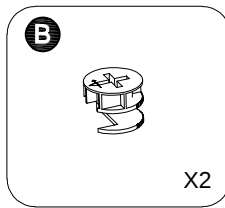




STEP 8

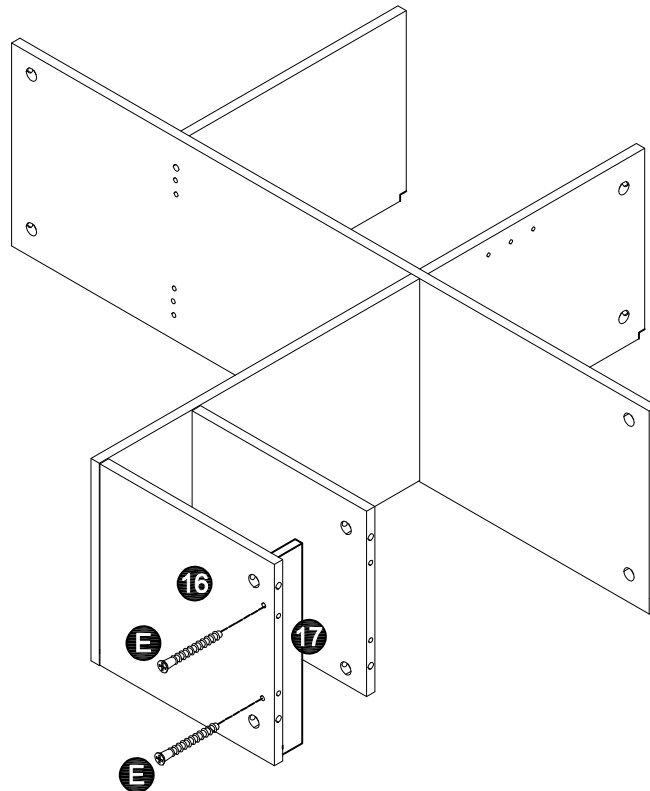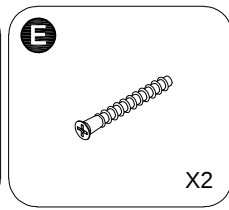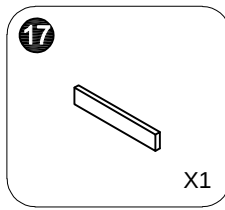




STEP 9

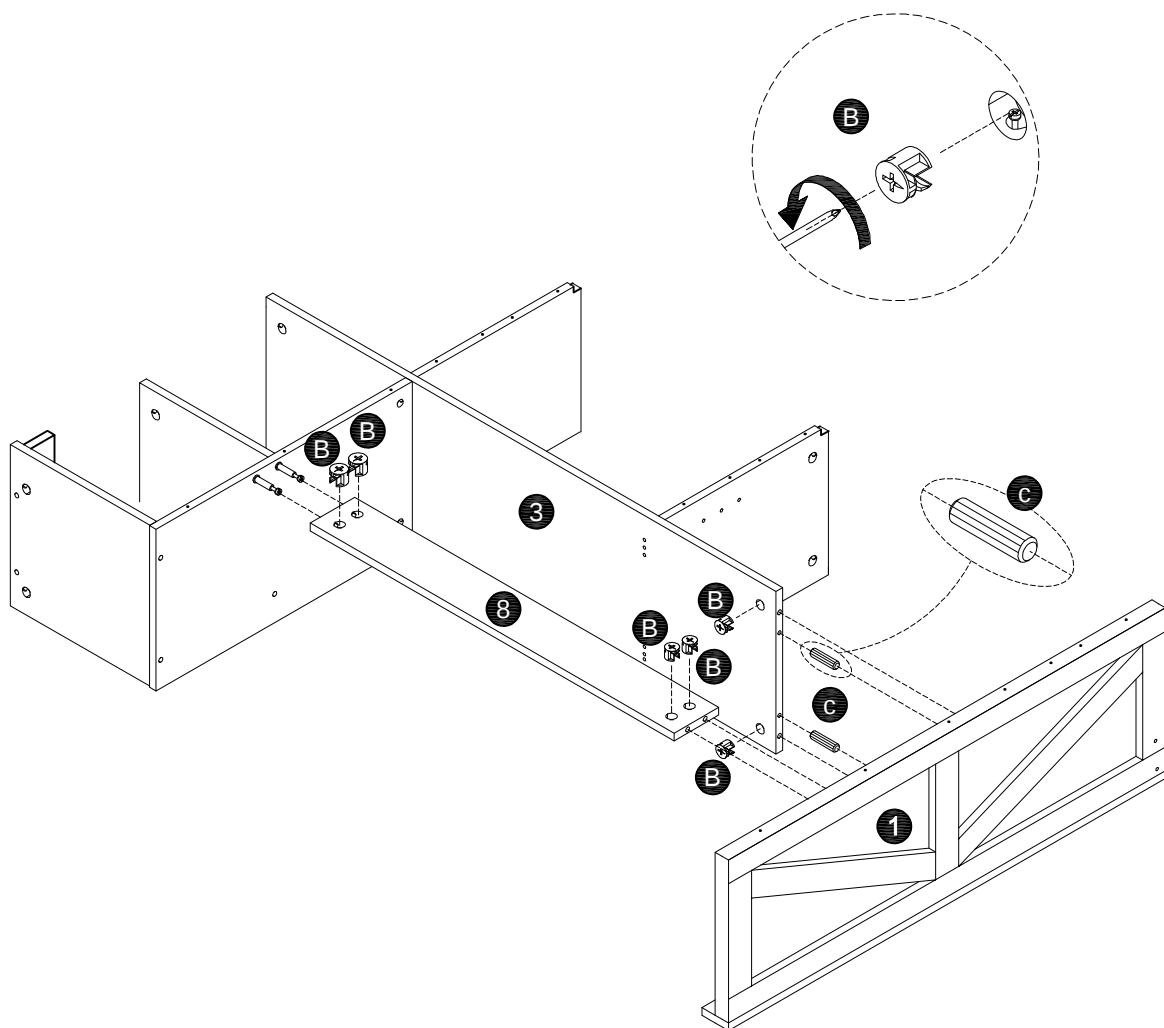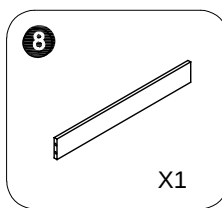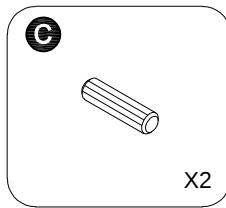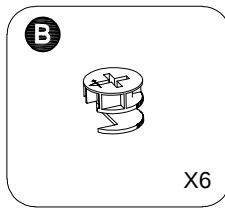




STEP 10

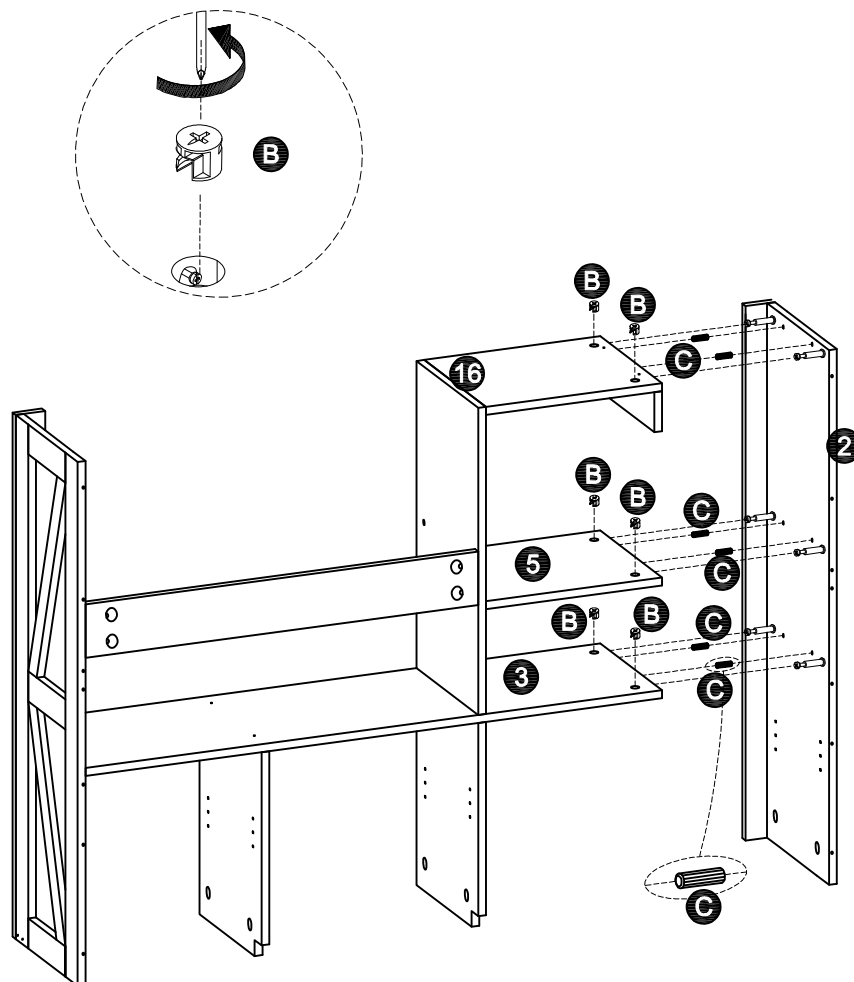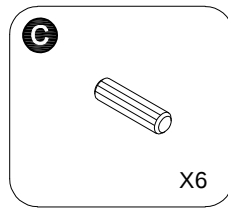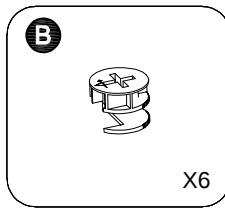




STEP 11

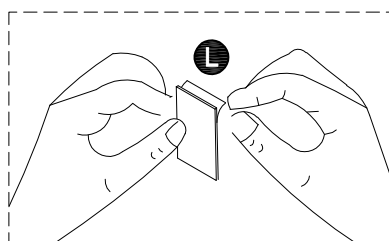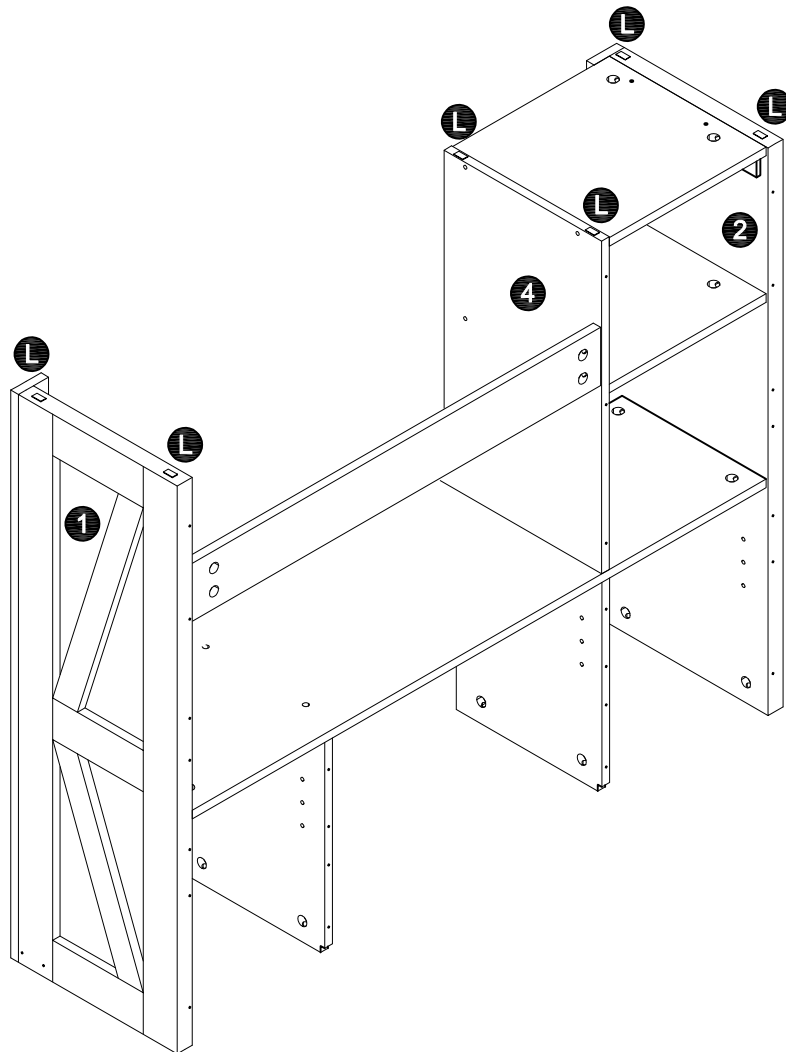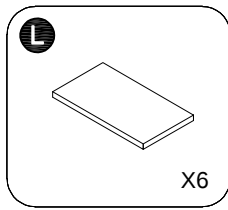



STEP 12

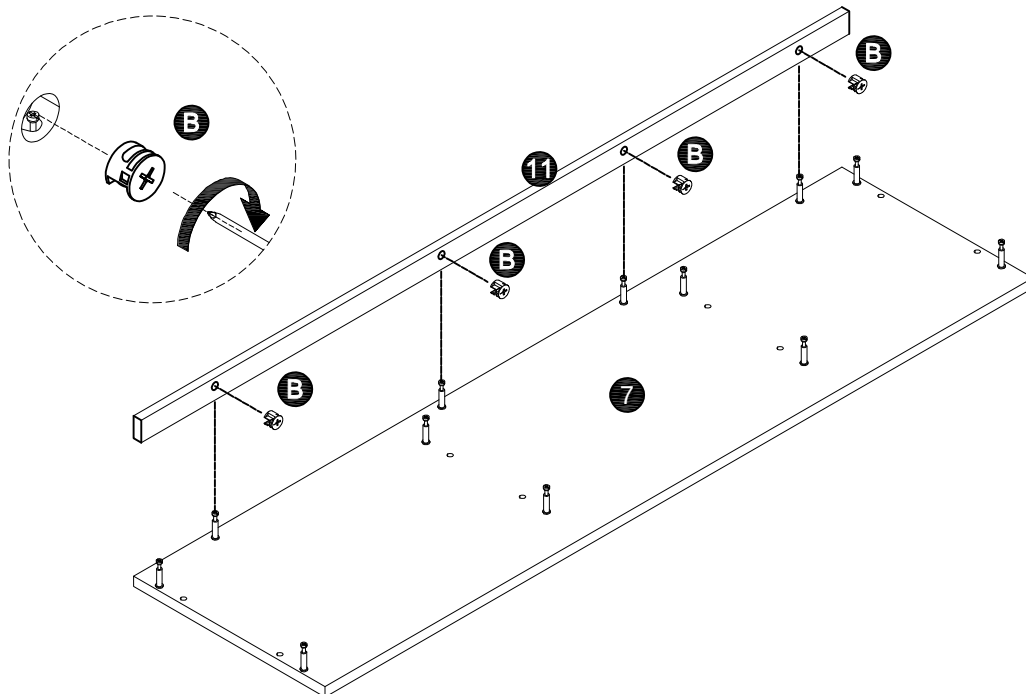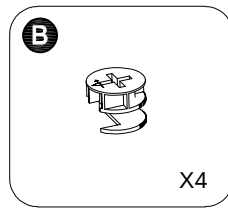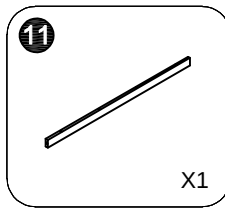



STEP 13

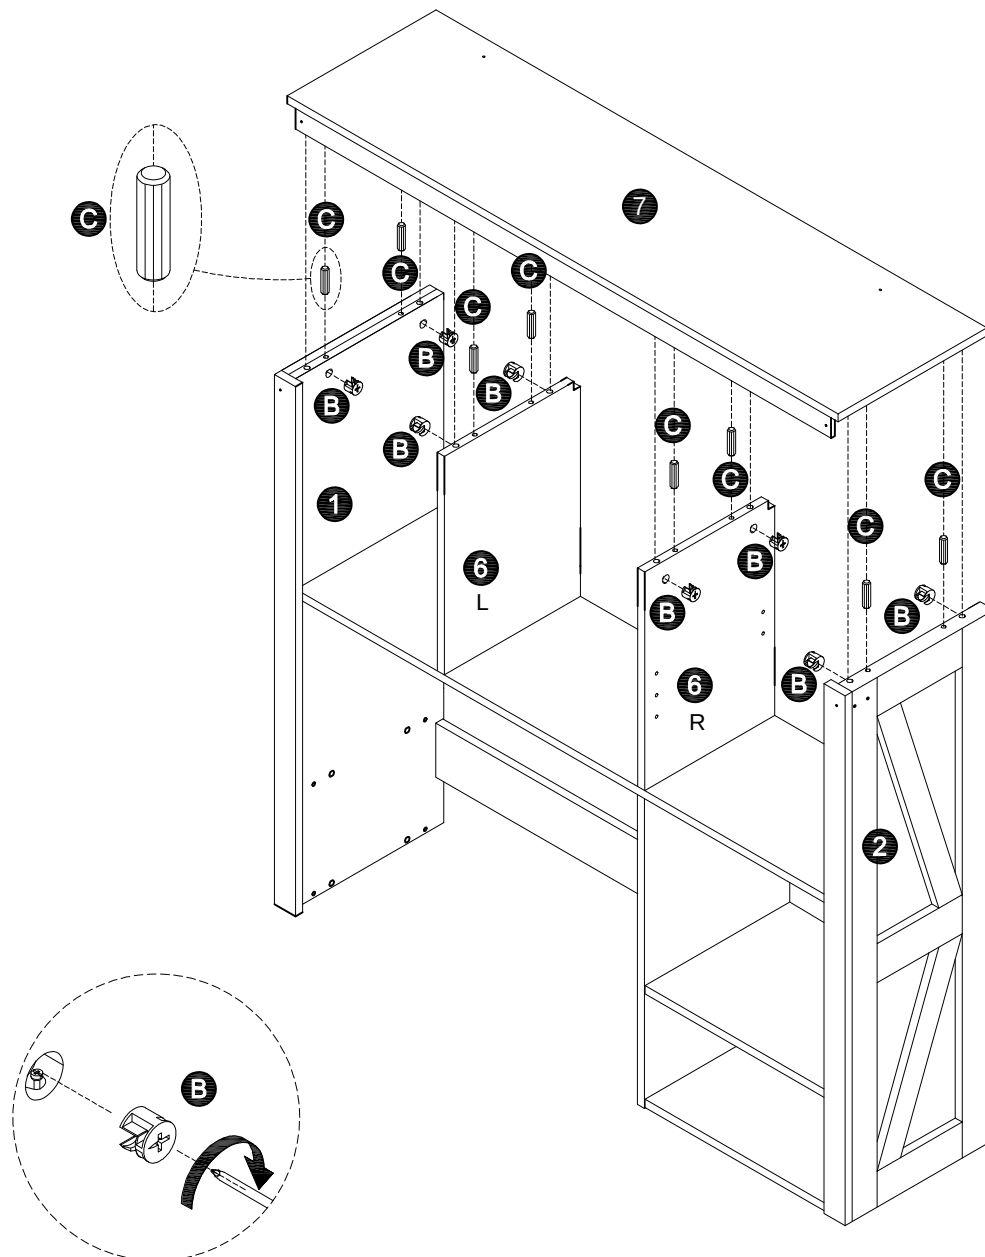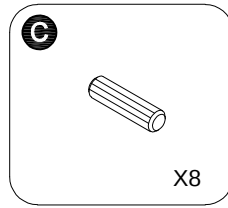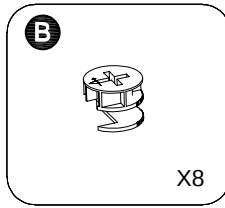





STEP 14

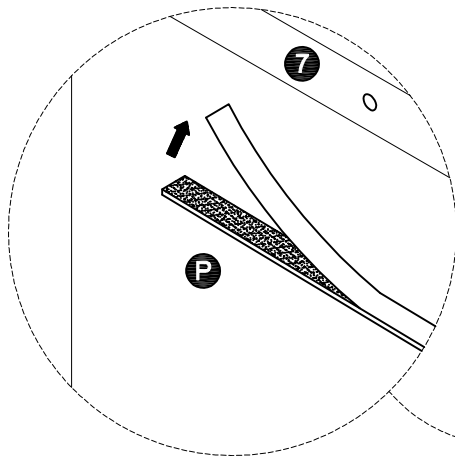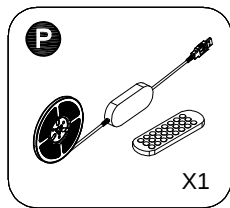



Please remove the film on the back of the lamp before installing the lamp strip to ensure that the lamp strip can be adhered to the board

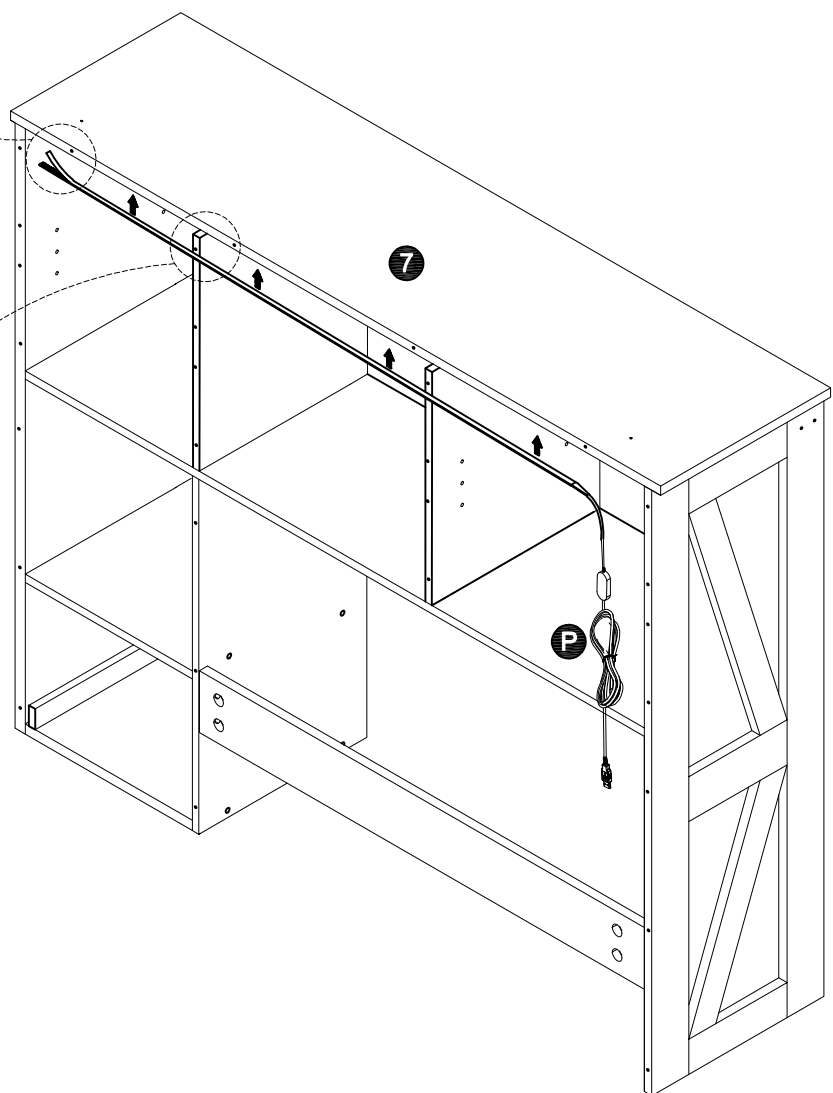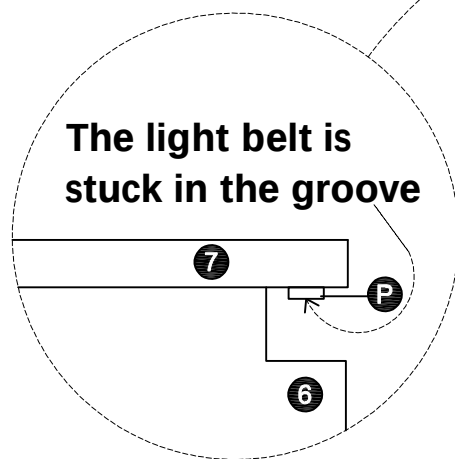





STEP 15

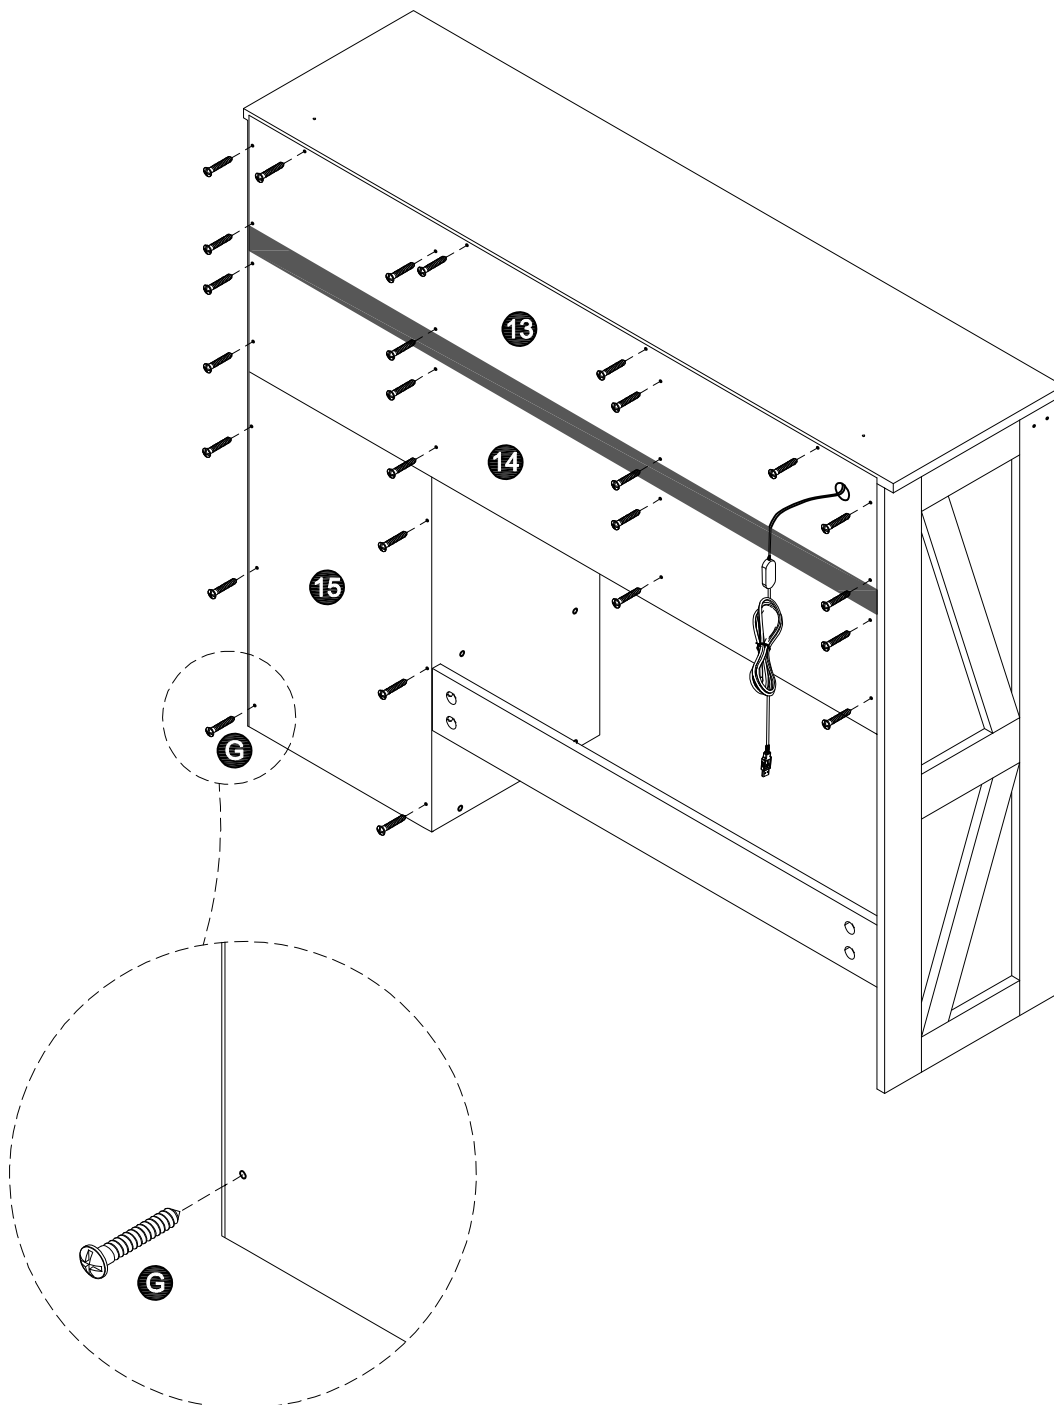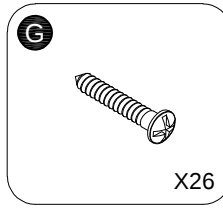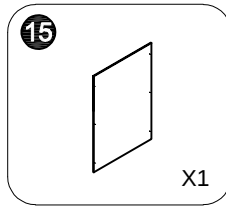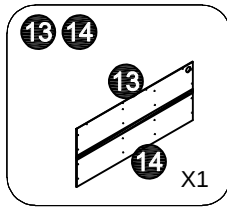







STEP 16

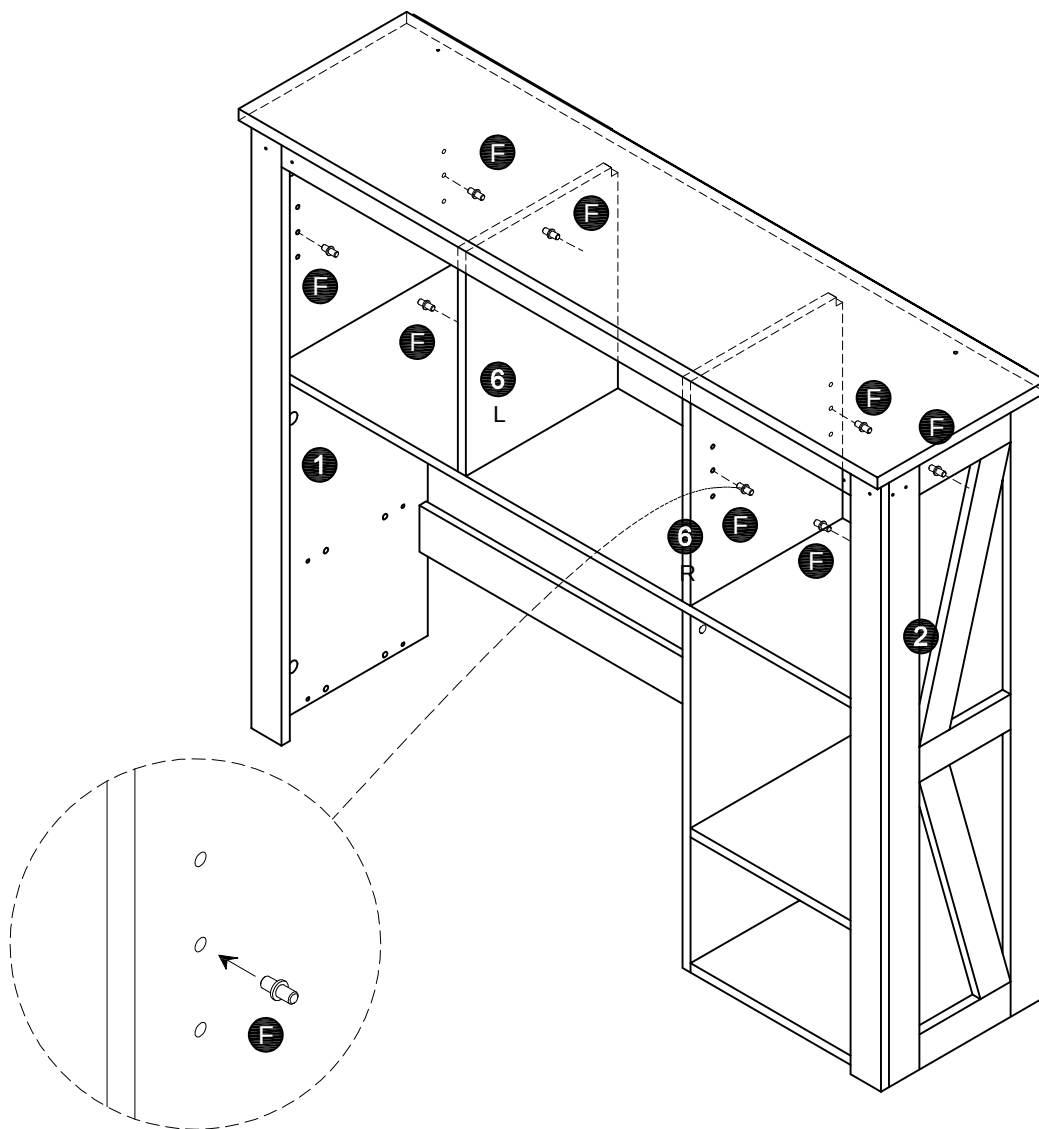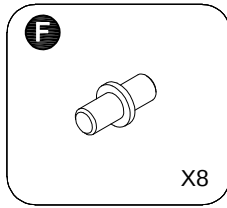


STEP 17

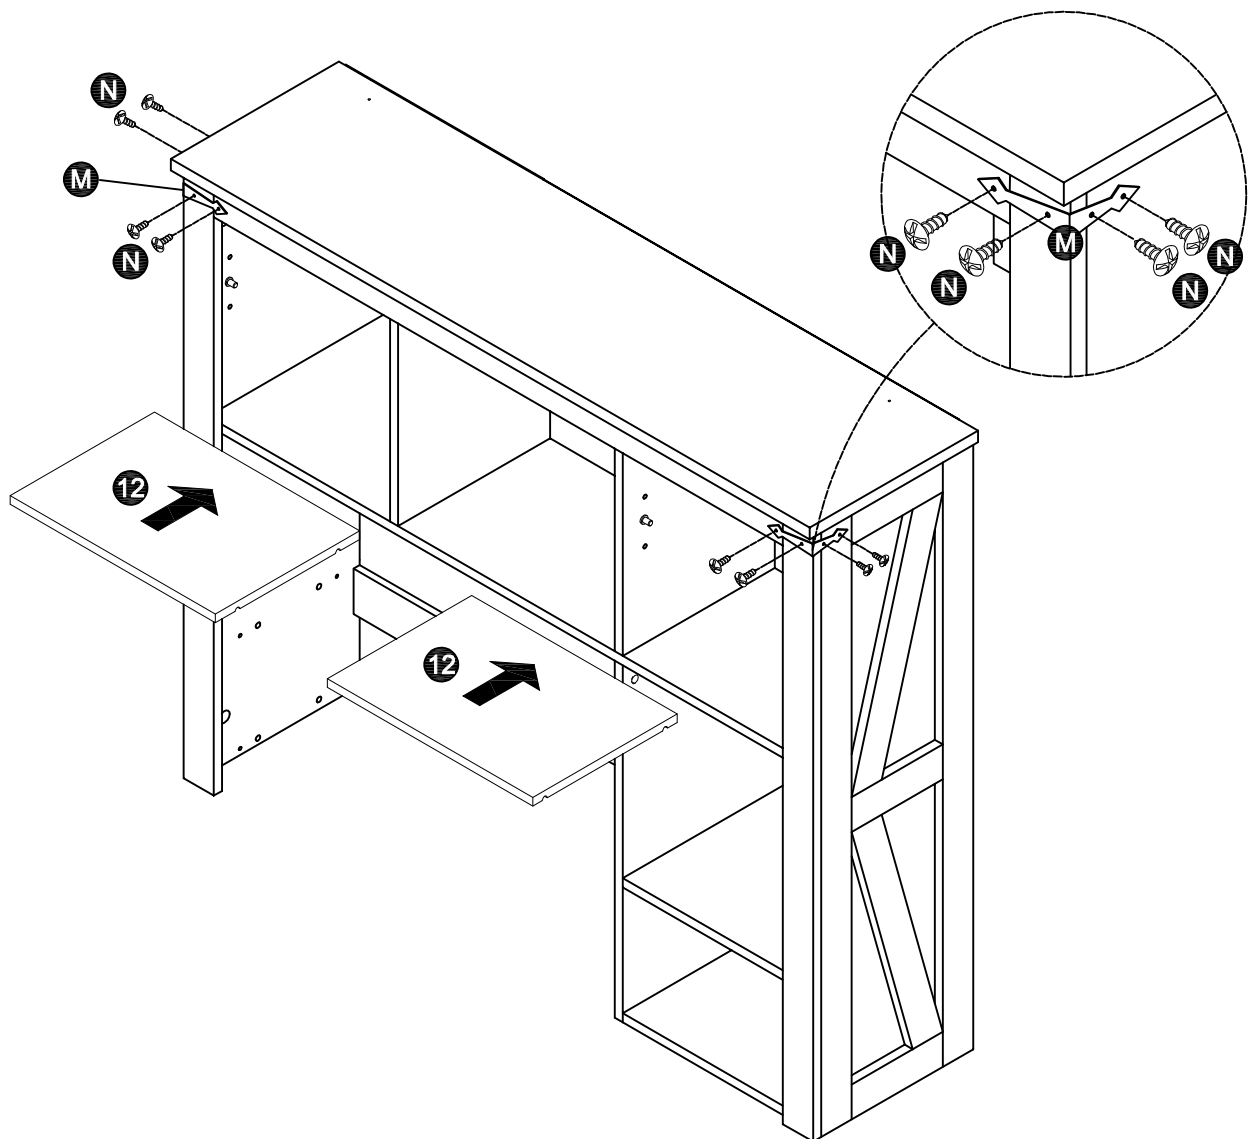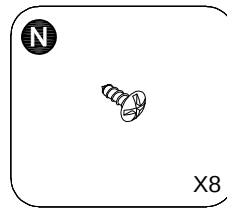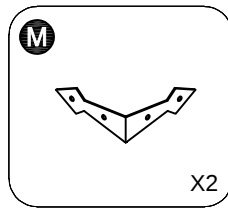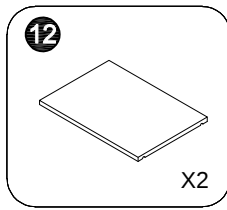



STEP 18

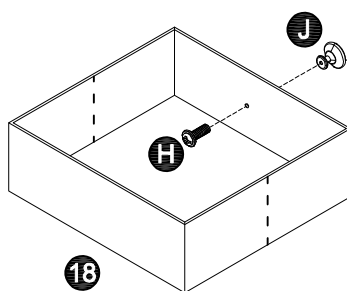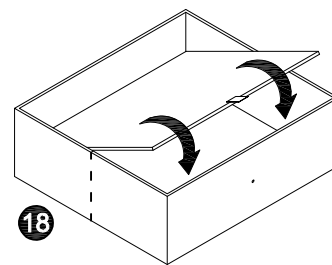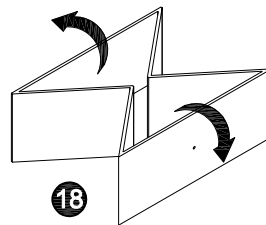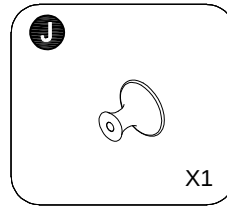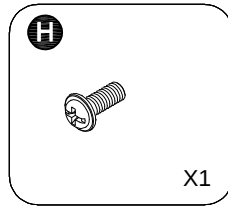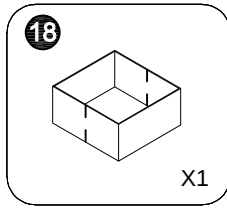



STEP 19

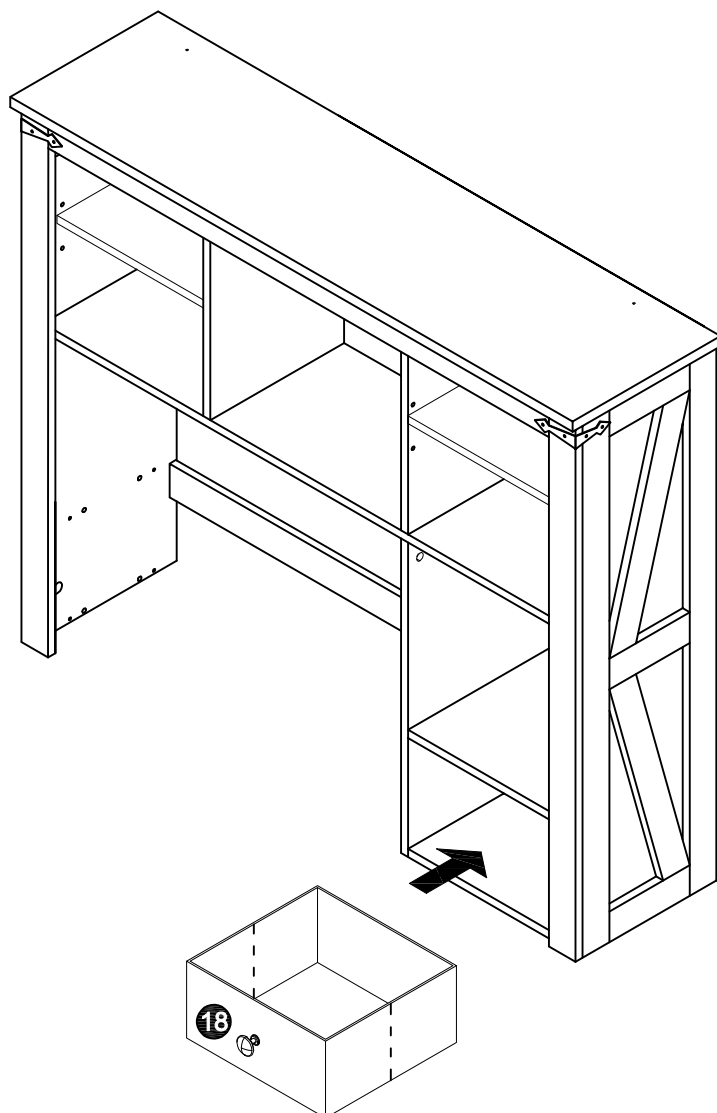




STEP 20

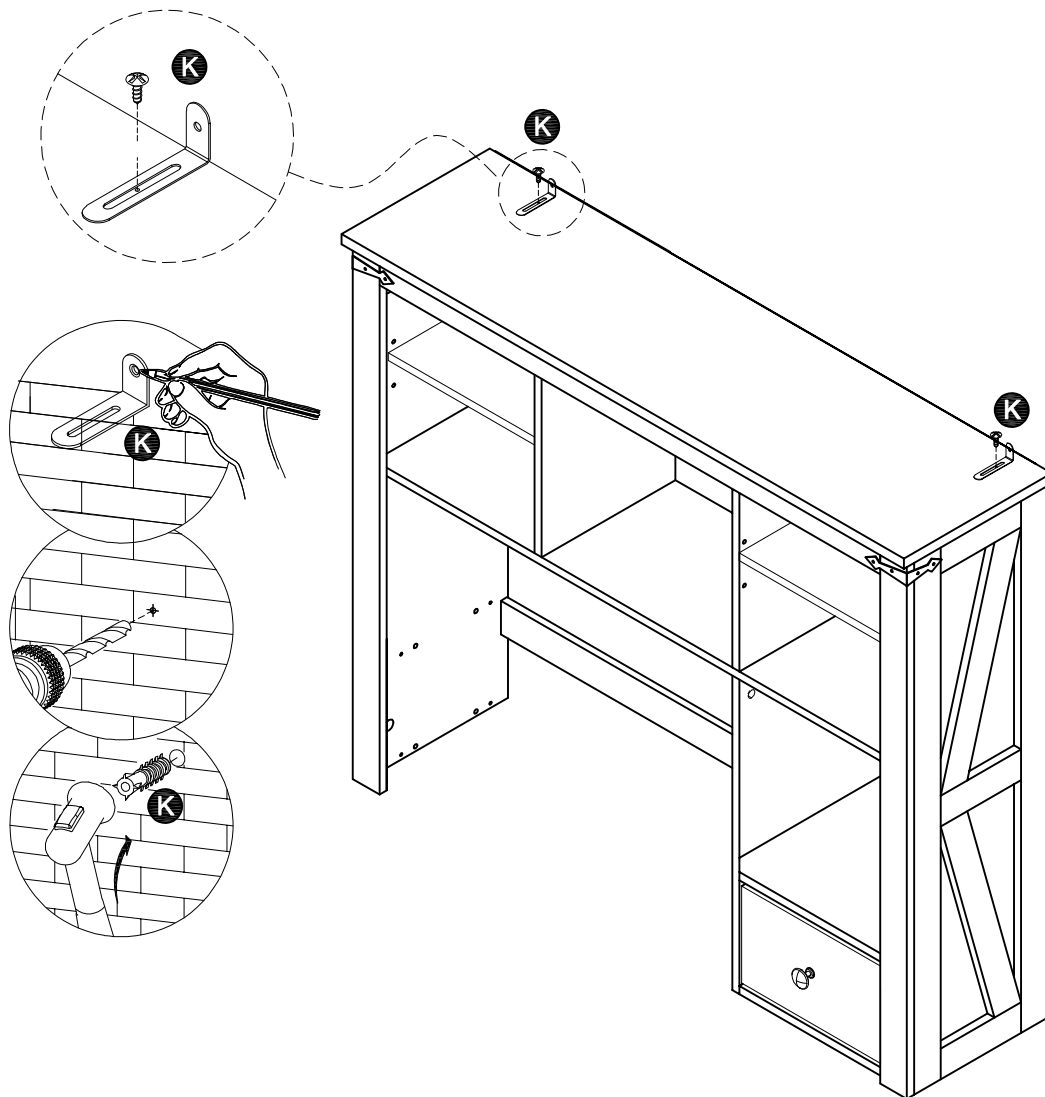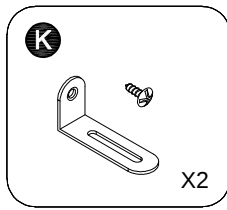

STEP 21

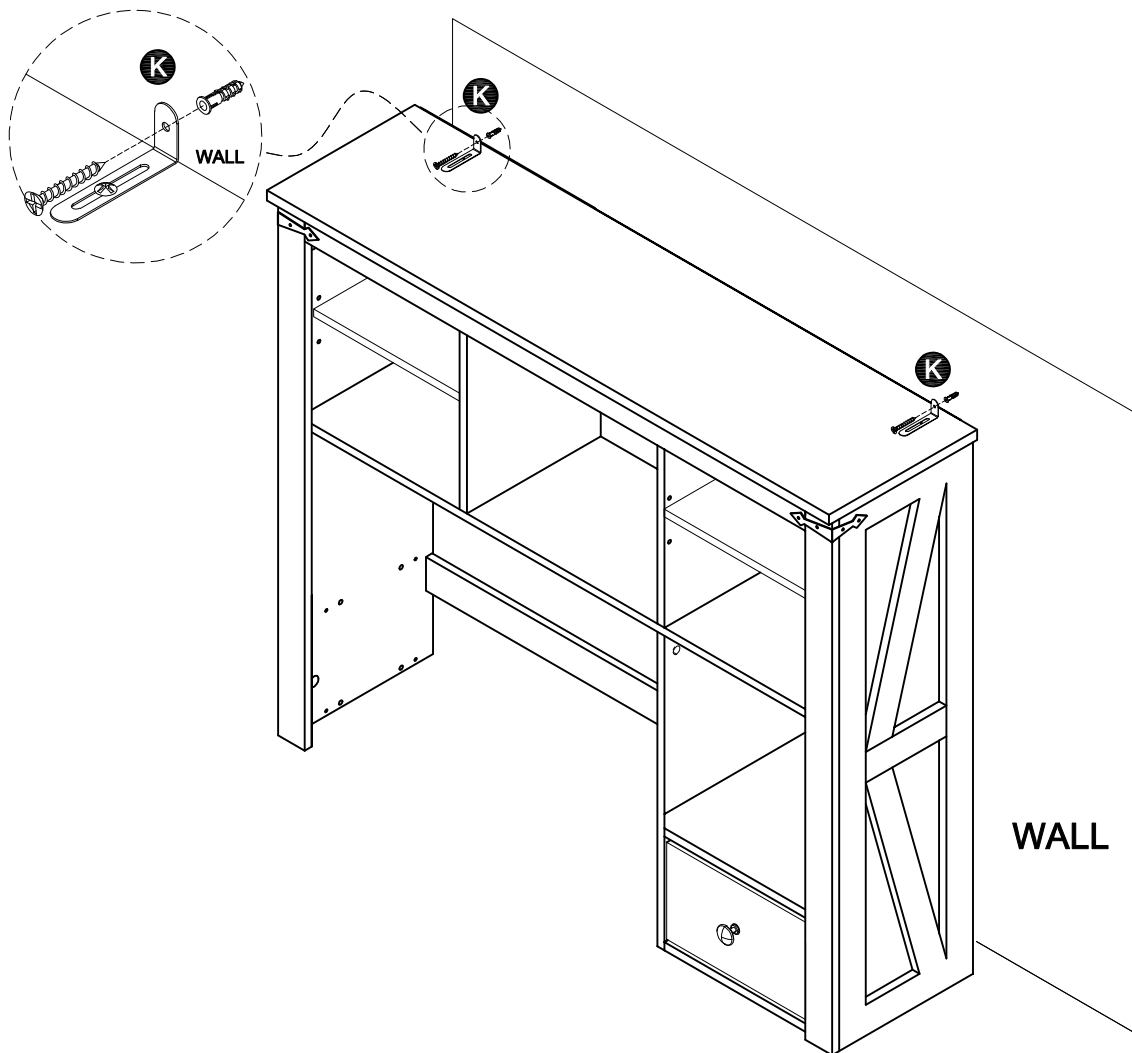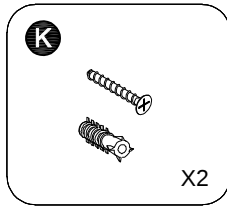

STEP 22

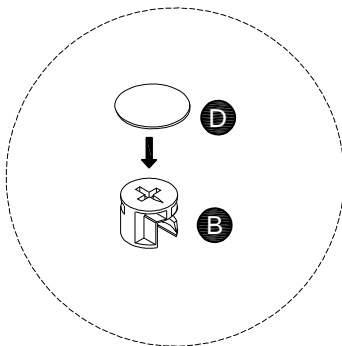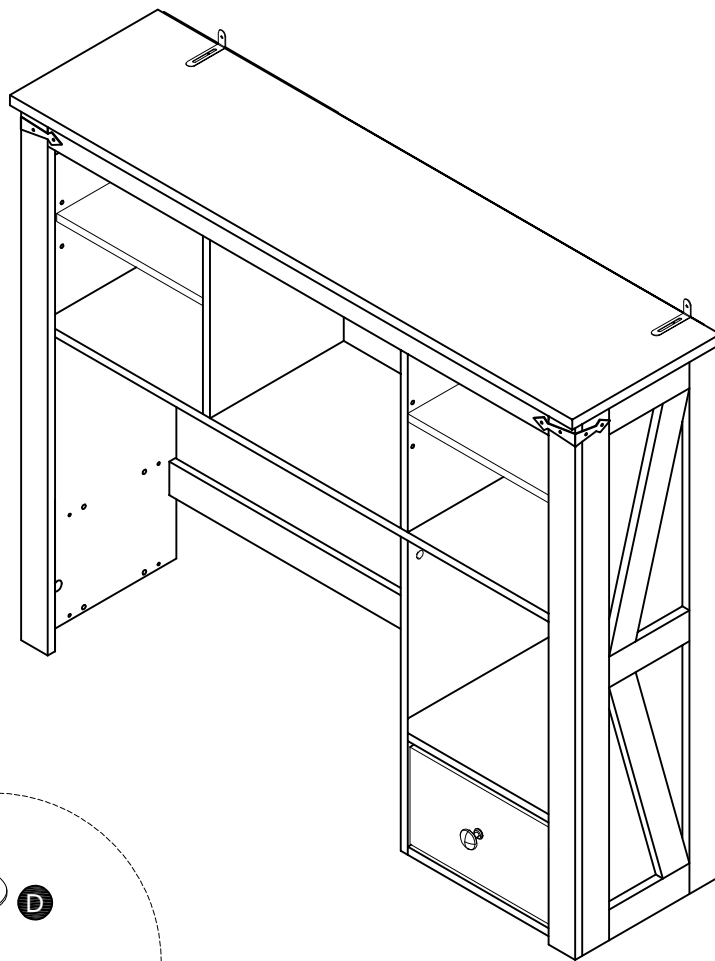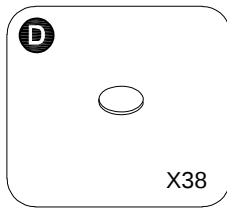

REMARK:

use part **D** to **B** cover part.

After-sales Service

Dear customer,

We're excited that you've chosen our product to be a part of your home. We care deeply about your experience and want to make sure you have all the help you need.

If you have any questions while assembling your new product, don't hesitate to contact our dedicated customer support team through the original purchase platform.

Creating your ideal space is important, and we're committed to helping you every step of the way.

Thank you for choosing us, where comfort and style meet practicality.

Sincerely,
Customer Service Manager