


Installation Instruction

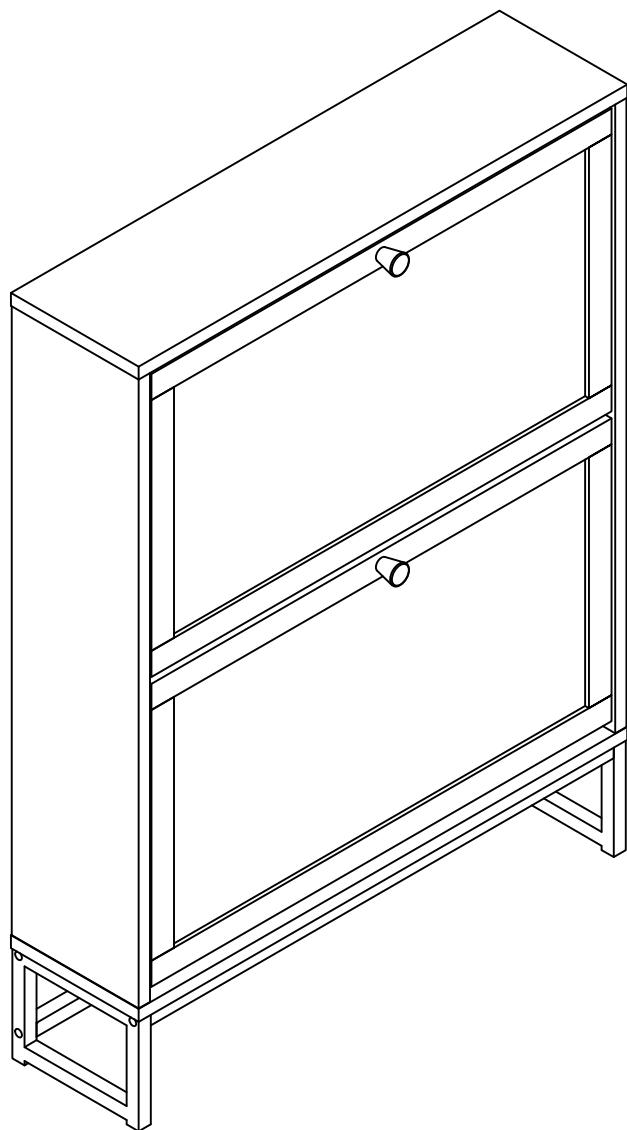

Assembling


Estimated time for assembly



45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver

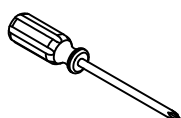

Weight Limitation



100 | **35**
lbs table top lbs per

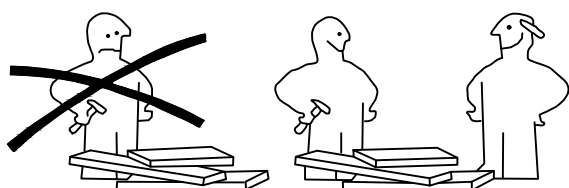


What' included


Code Description	Qty
A Cam Bolt M6X35MM	8
B Cam Lock 15X10MM	8
C Wooden Dowel M7.8X30MM	4
D Screw M4X40MM	6
E The screw M3.5X16MM	30
F Inner Shaft	4
G Stopper	4
H External Shaft	4
I The screw M6X35MM	6
J Left Plastic Holder	2
K Right Plastic Holder	2
L Cam Bolt M4X18MM	2
M Metal shake handhandle	2
N Screw M4X10MM	4
O The screw M6X25MM	8
P Anchor	2
Q Wrench M4X55MM	1
R Metal connector	2
S Self-adhesive hole sticker	8

The Hardwares


Ⓐ

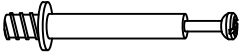


Ⓑ

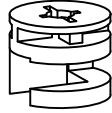

Ⓒ

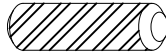


Ⓓ

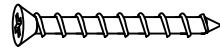

Ⓔ



Ⓕ

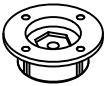

Ⓖ




Ⓗ




Ⓘ



Ⓙ

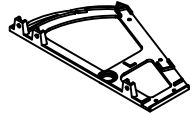


Ⓚ

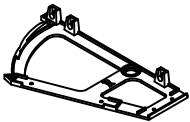

Ⓛ



Ⓜ

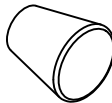

Ⓝ




Ⓞ




Ⓟ



Ⓠ

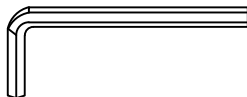

Ⓡ

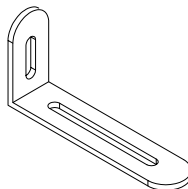

Ⓢ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back stiffener	1
6	Door	2
7	Inner lamella	2
8	Large inner plate	2
9	Lower metal connecting rod	1
10	Left and right metal legs	2
11	Upper metal connecting rod	2

The Accessoriess

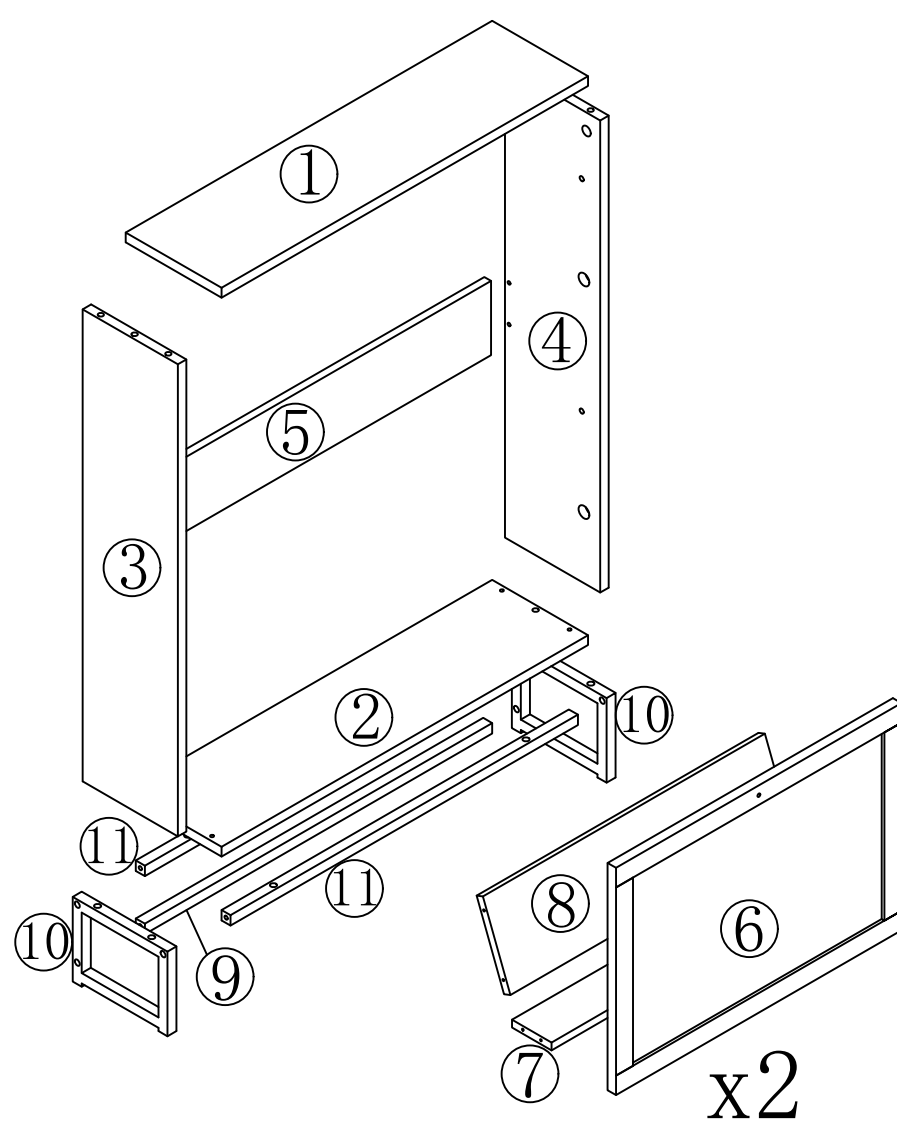



Step 1

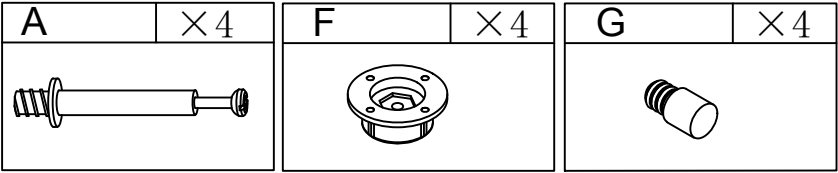A	×4	F	×4	G	×4
					

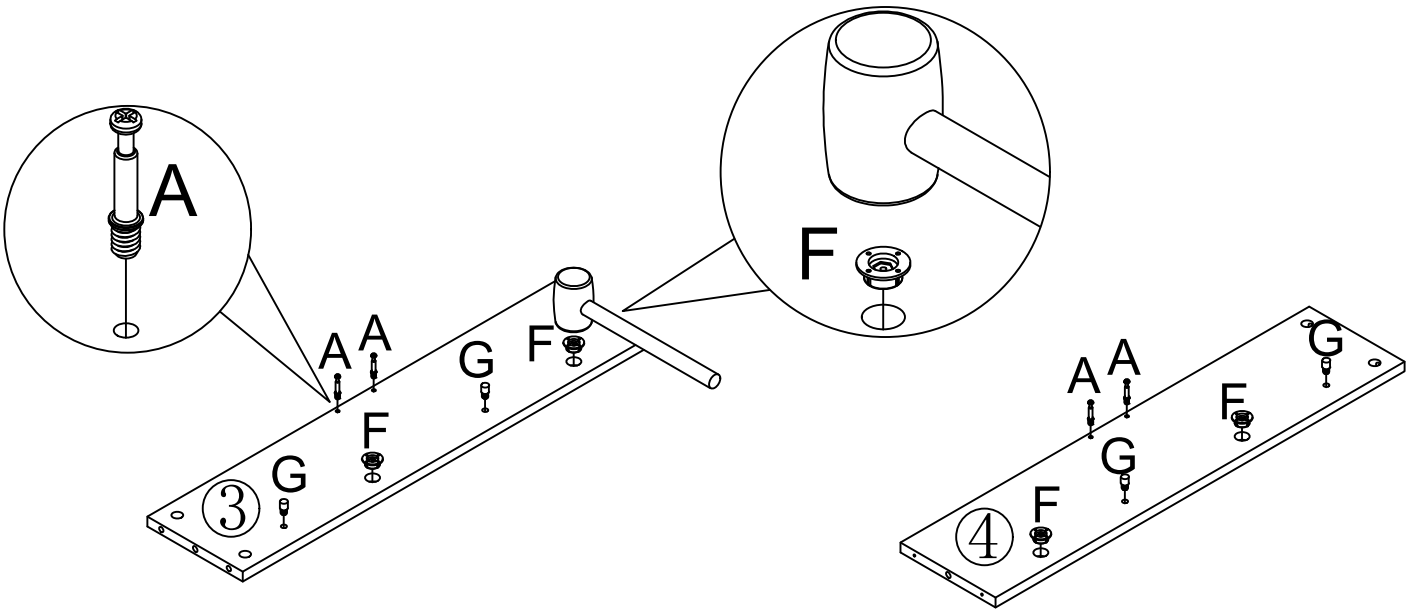


Step 2

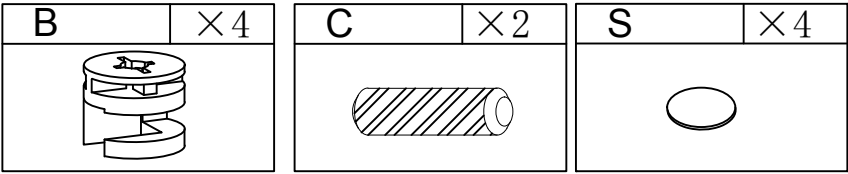B	×4	C	×2	S	×4
					

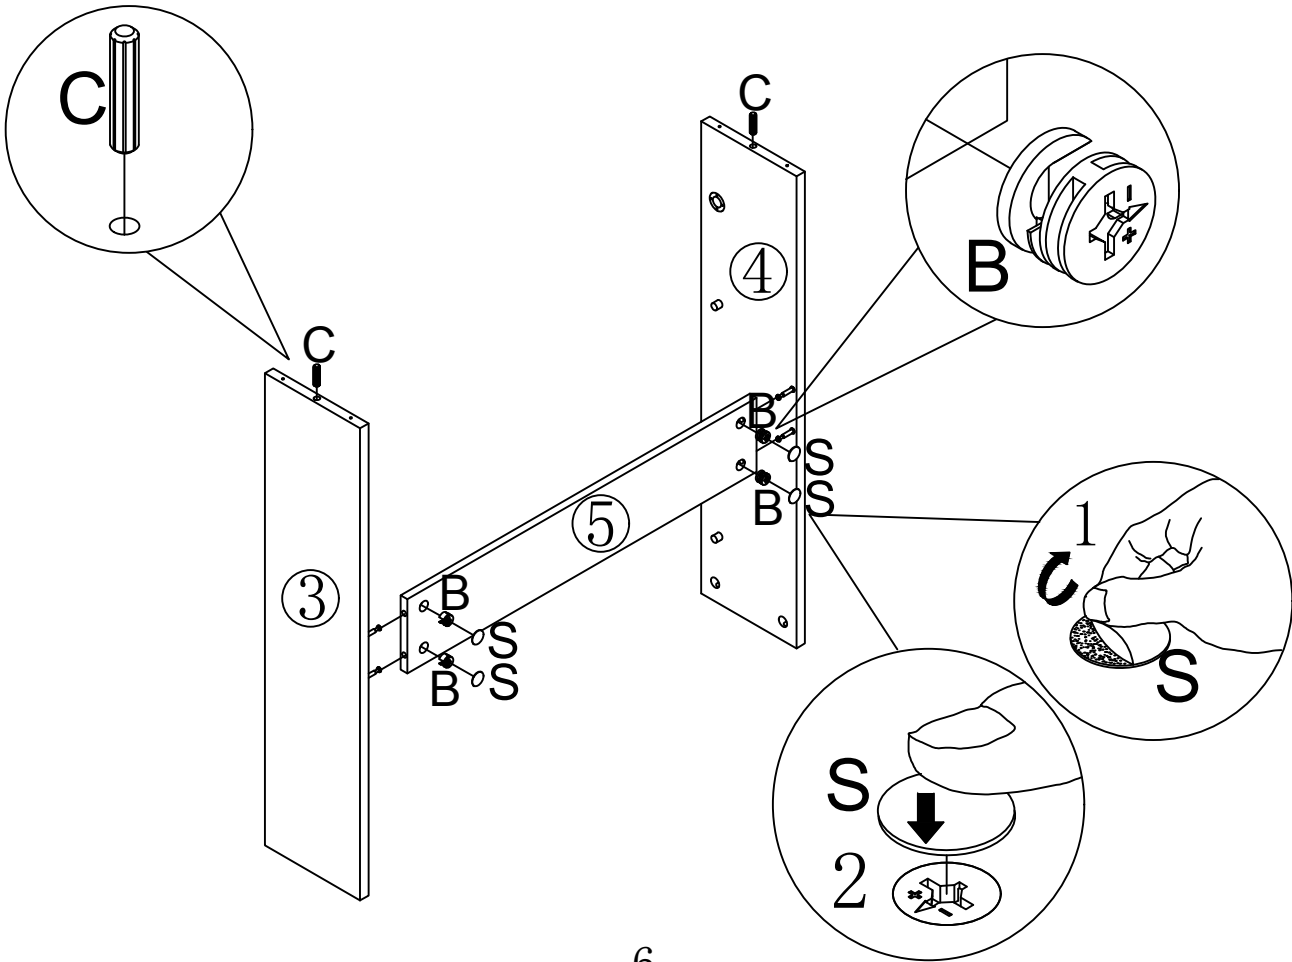


Step 3

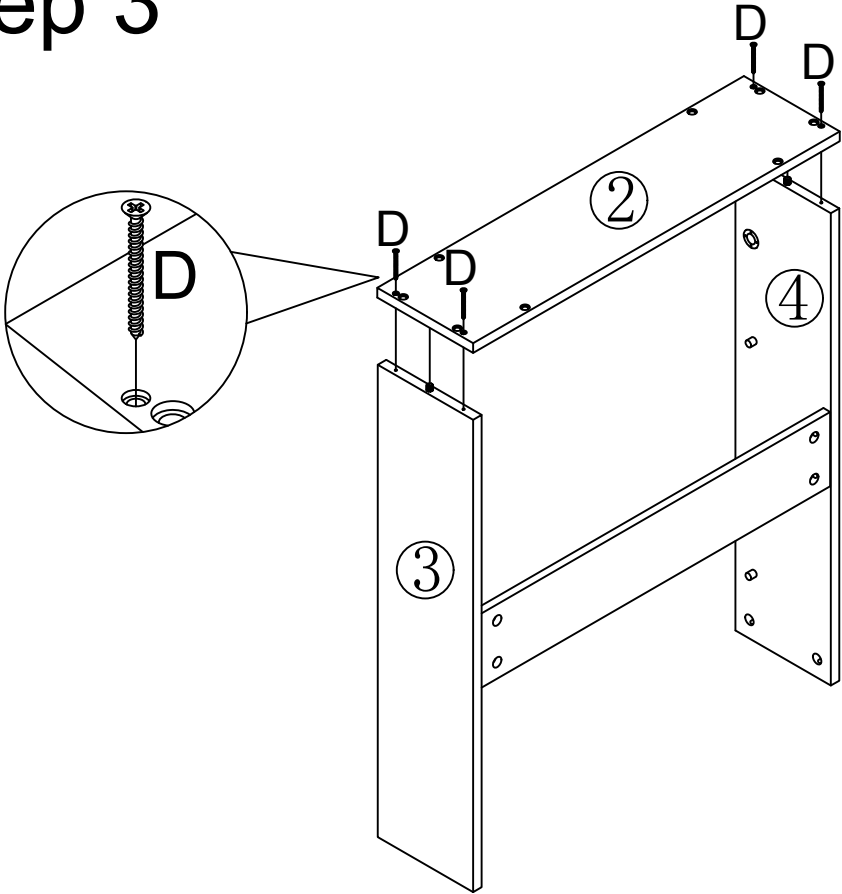

D	×4


Step 4

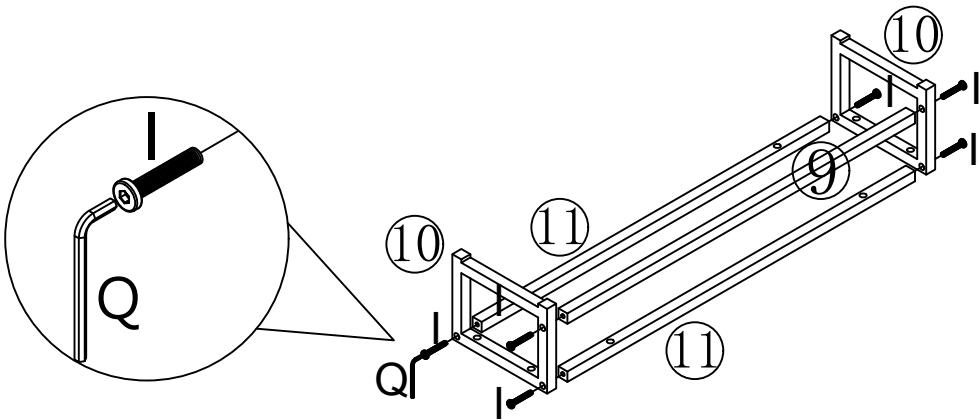


I	×6

Q	×1


Step 5

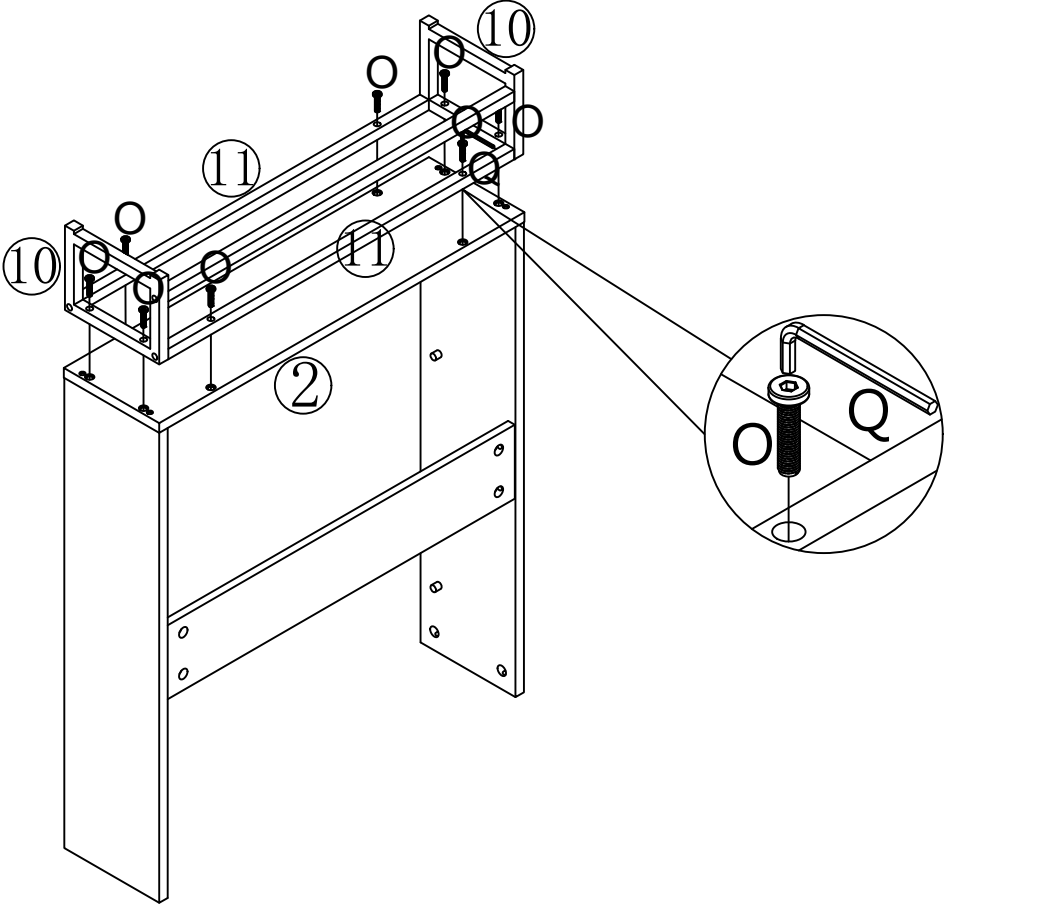


Step 6

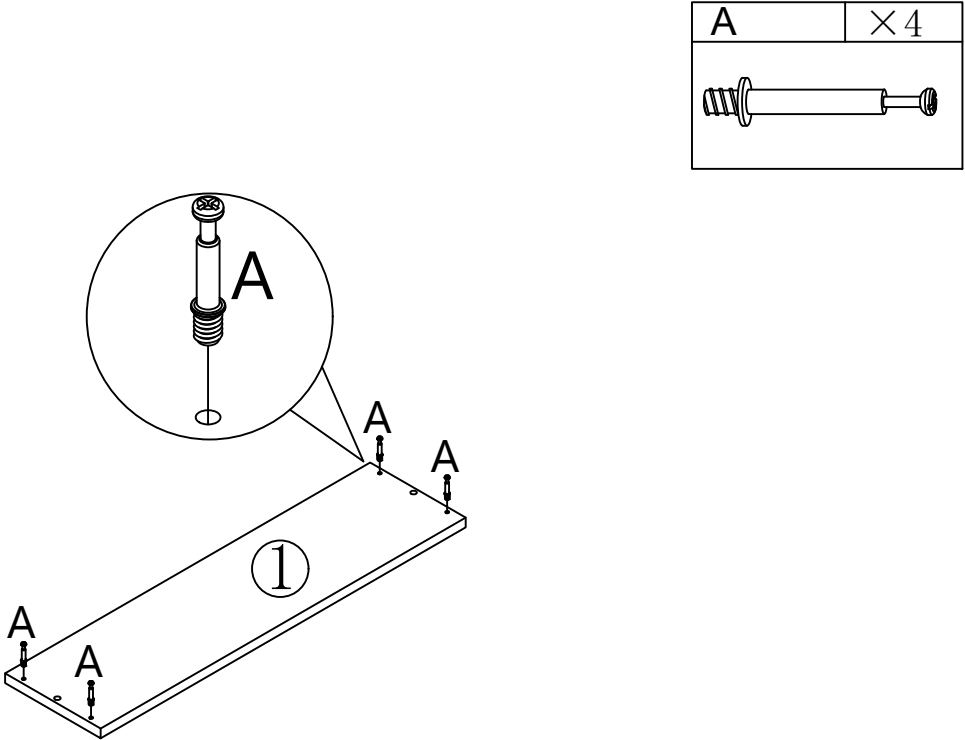


Step 7

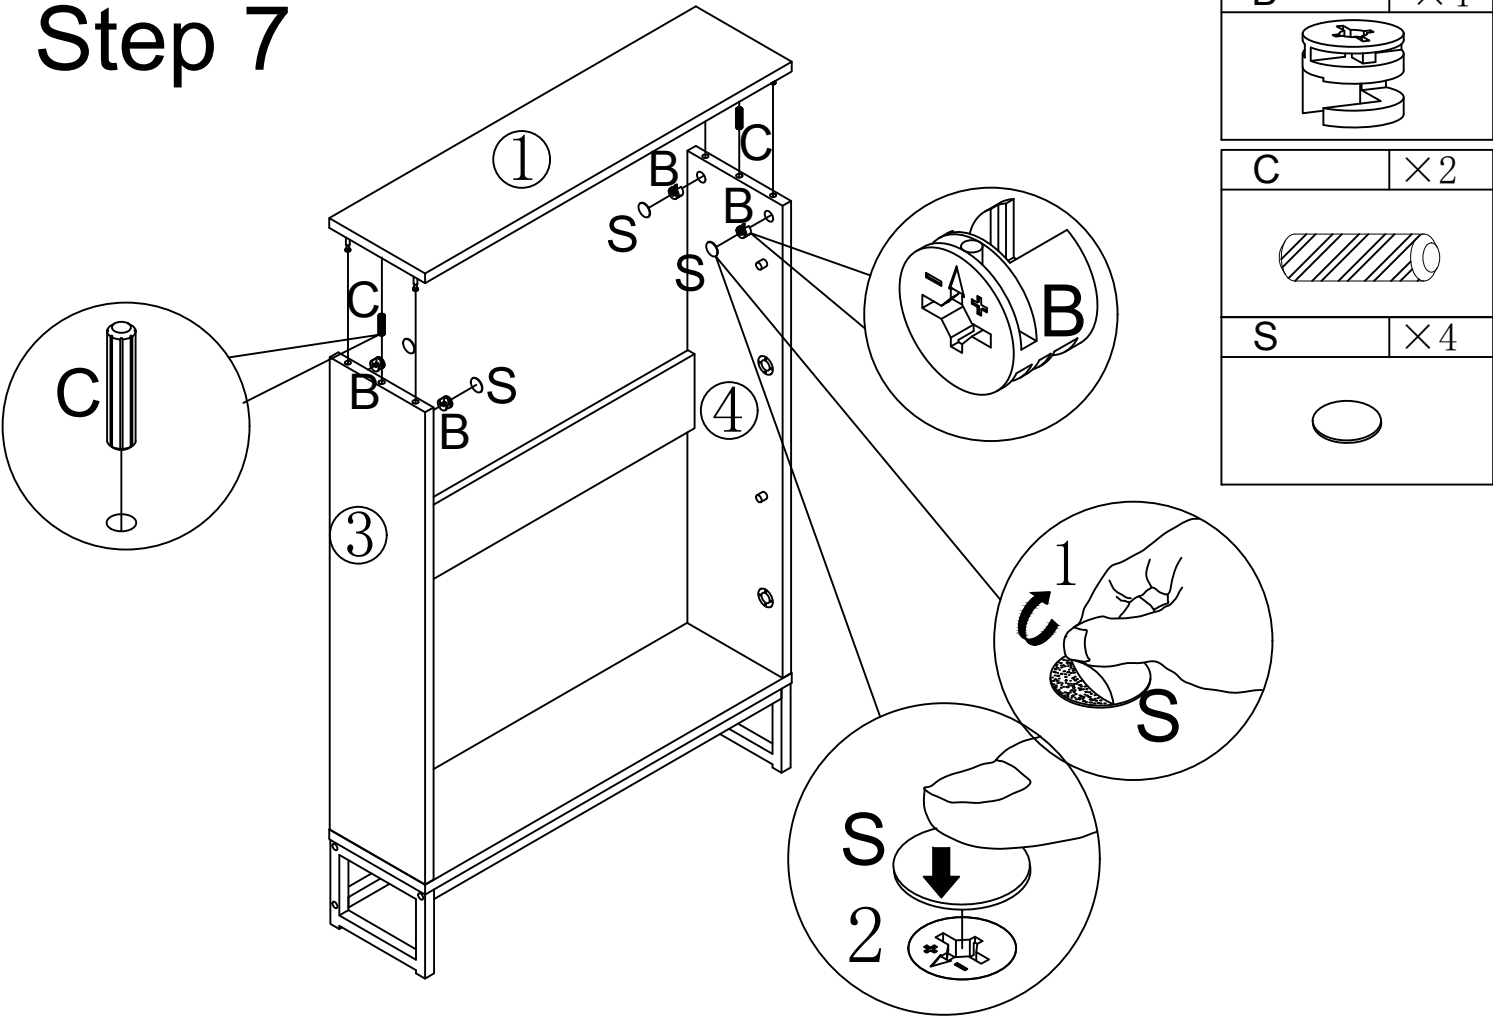


Step 8

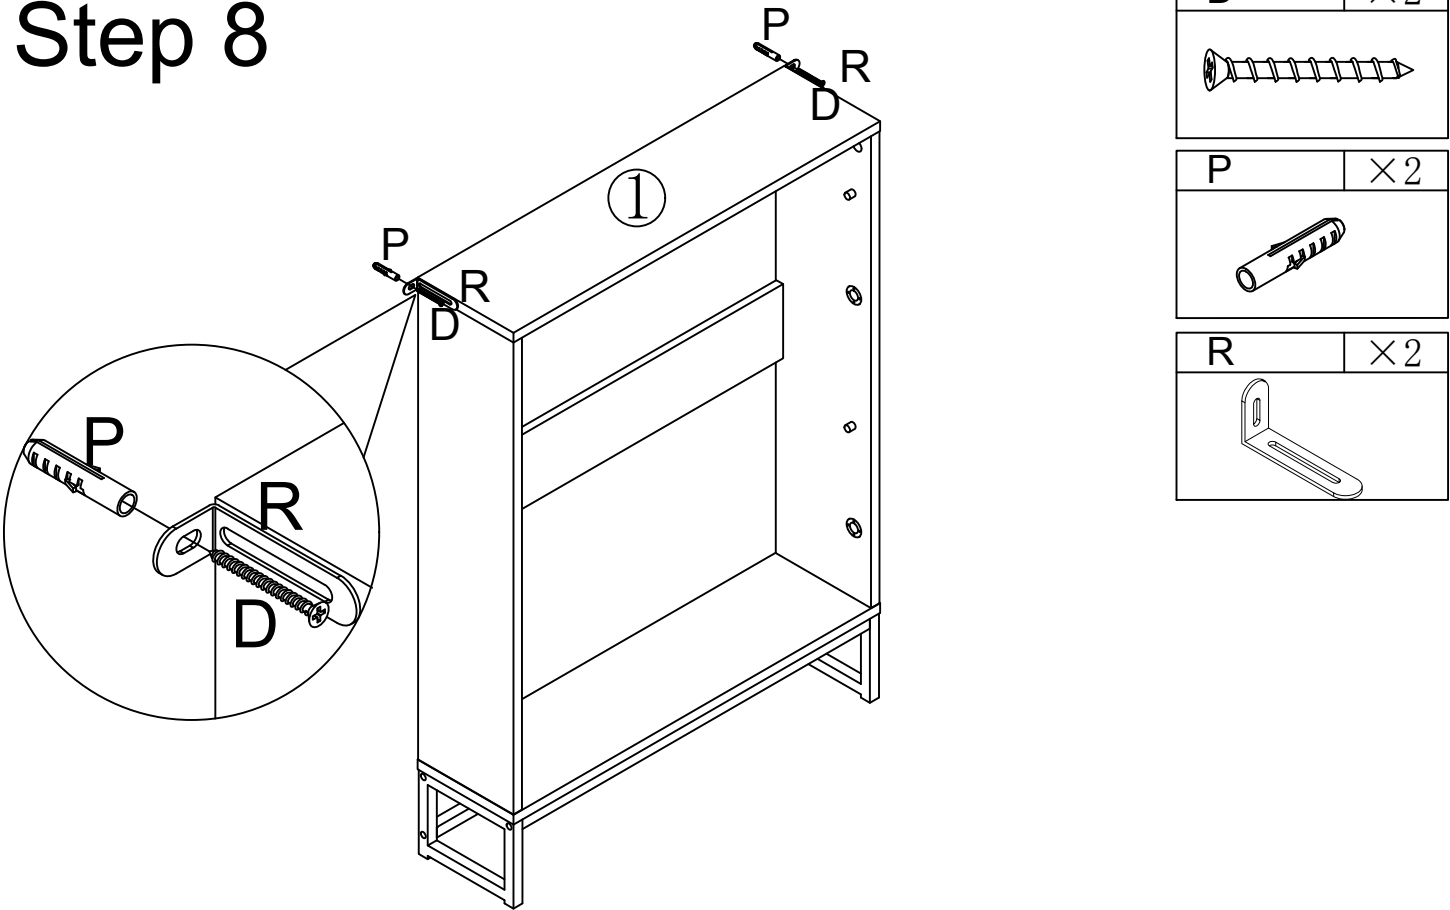
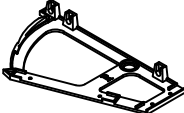



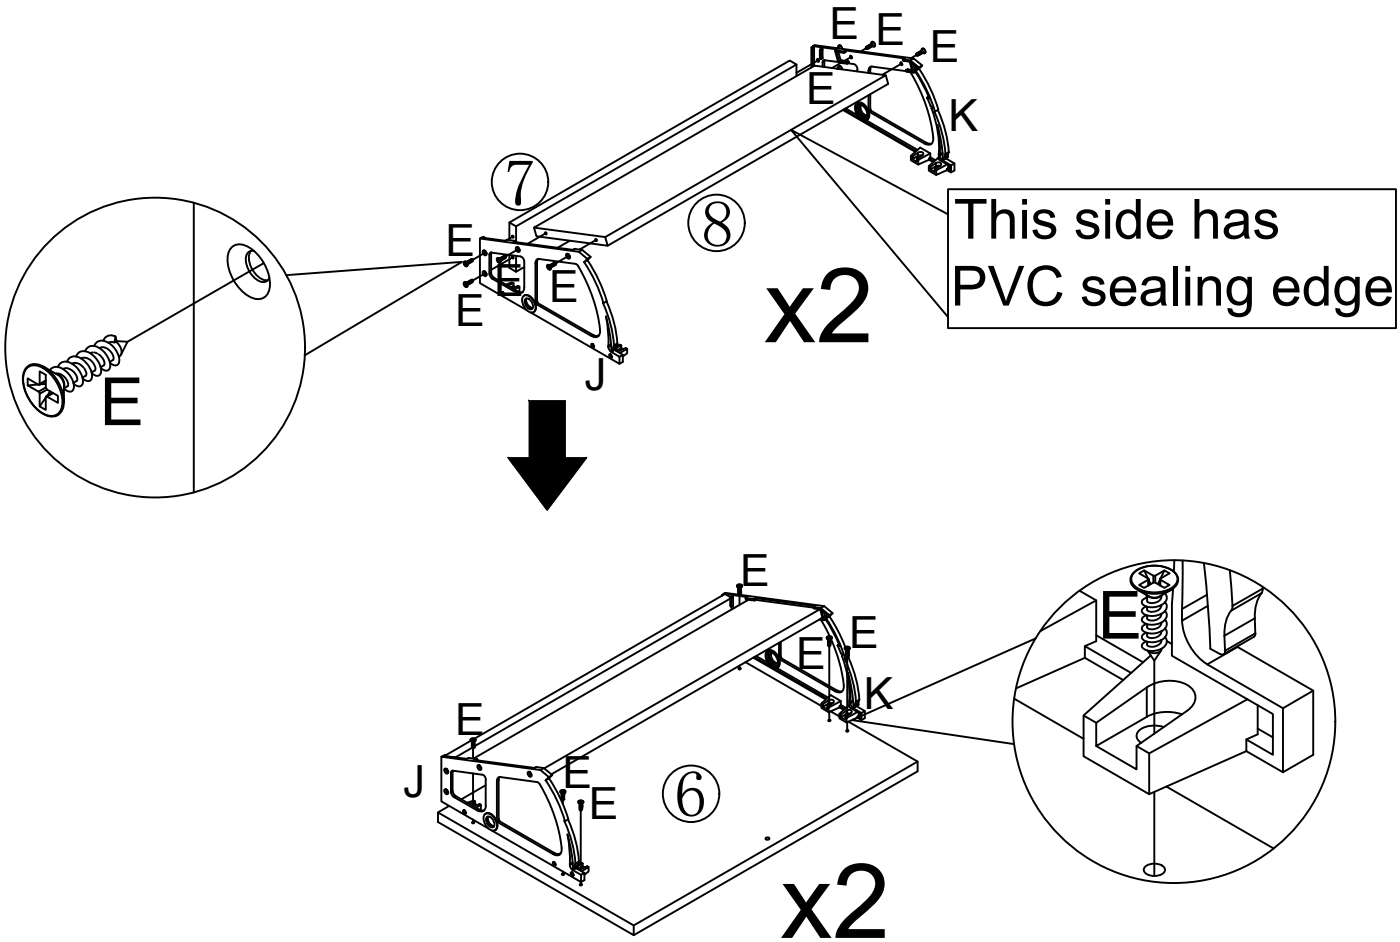
Step 9

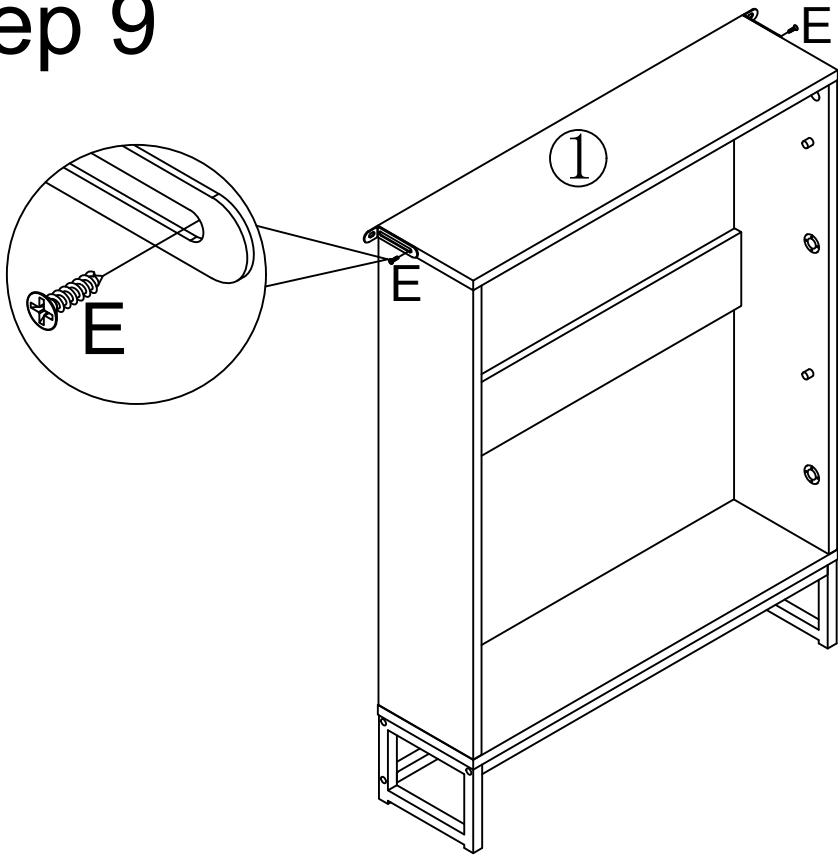


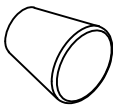
E	×2
	


Step 10

J	×2	K	×2	E	×28
					






Step 11

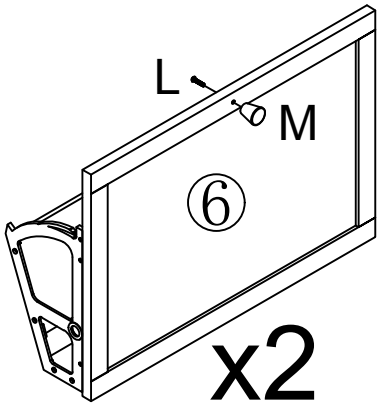L	×2	M	×2
			



Step 12

H	×4	N	×4
			

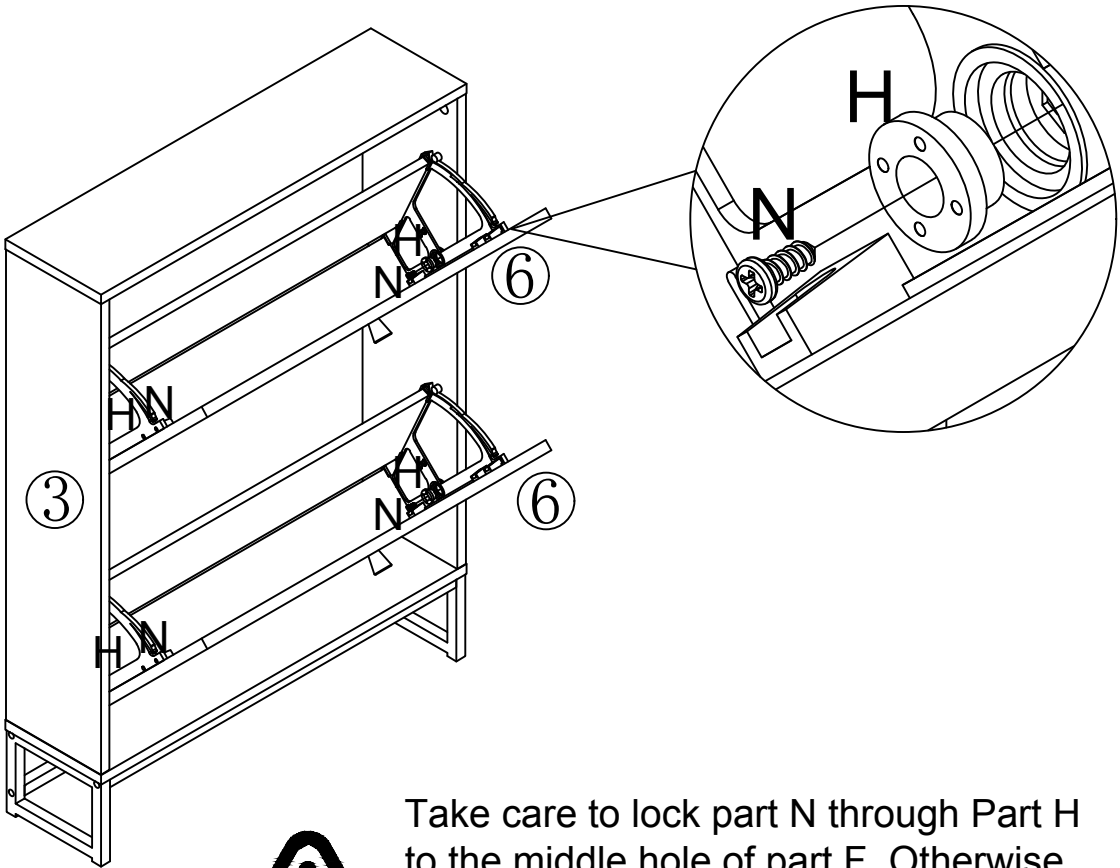

Take care to lock part N through Part H to the middle hole of part F. Otherwise, the part F of the accessory will be damaged resulting in failure to lock.