


ASSEMBLY INSTRUCTION

SKU CODE : BW00470
FULL SIZE PLATFORM BED

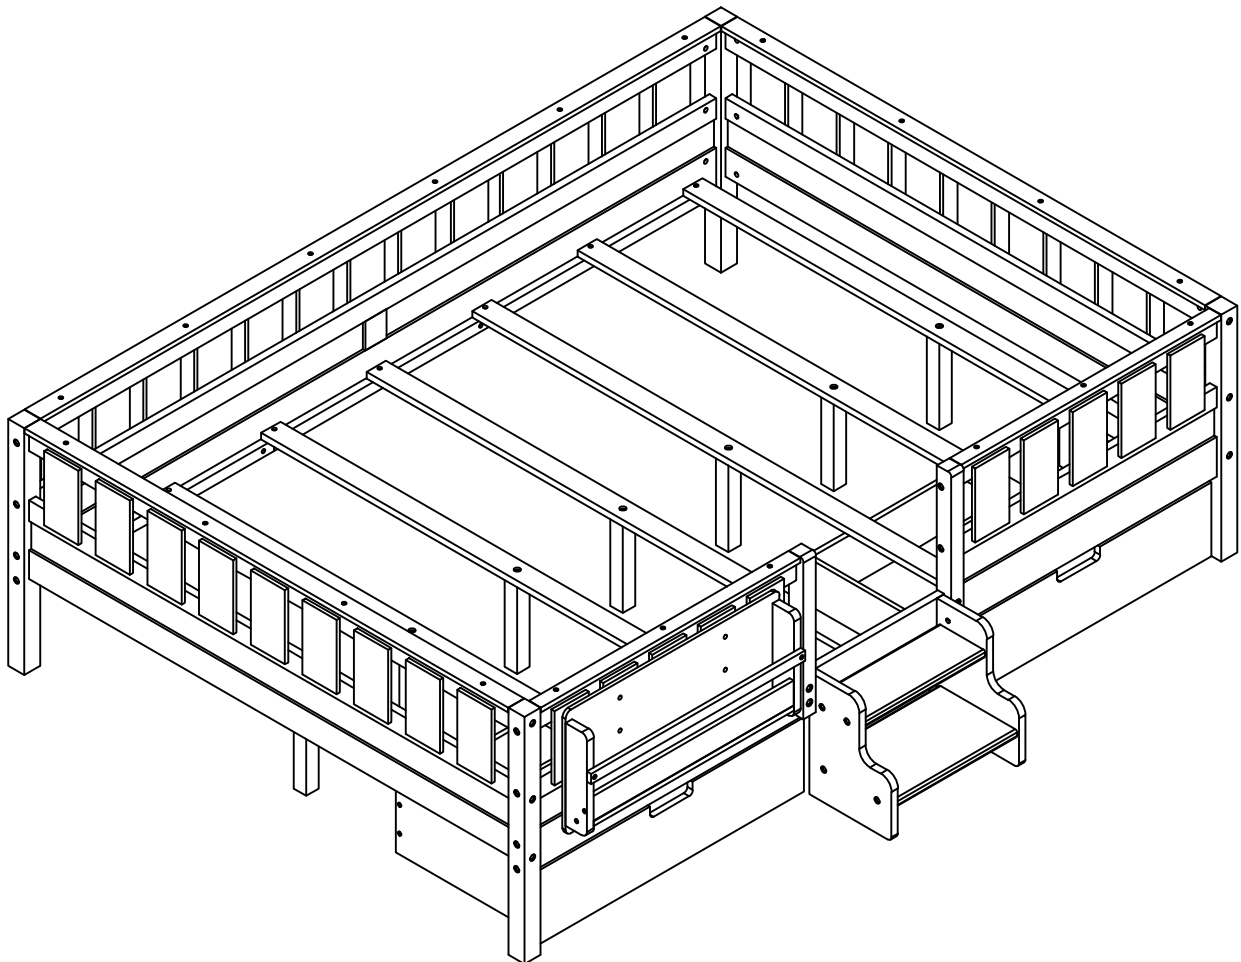

Bed Type
Full Standard


Length
75"

Width
54 "















Thickness
6" max

This set is included 2 boxes, if don't receive full 2 boxes please contact our customer service team.








ASSEMBLY INSTRUCTION

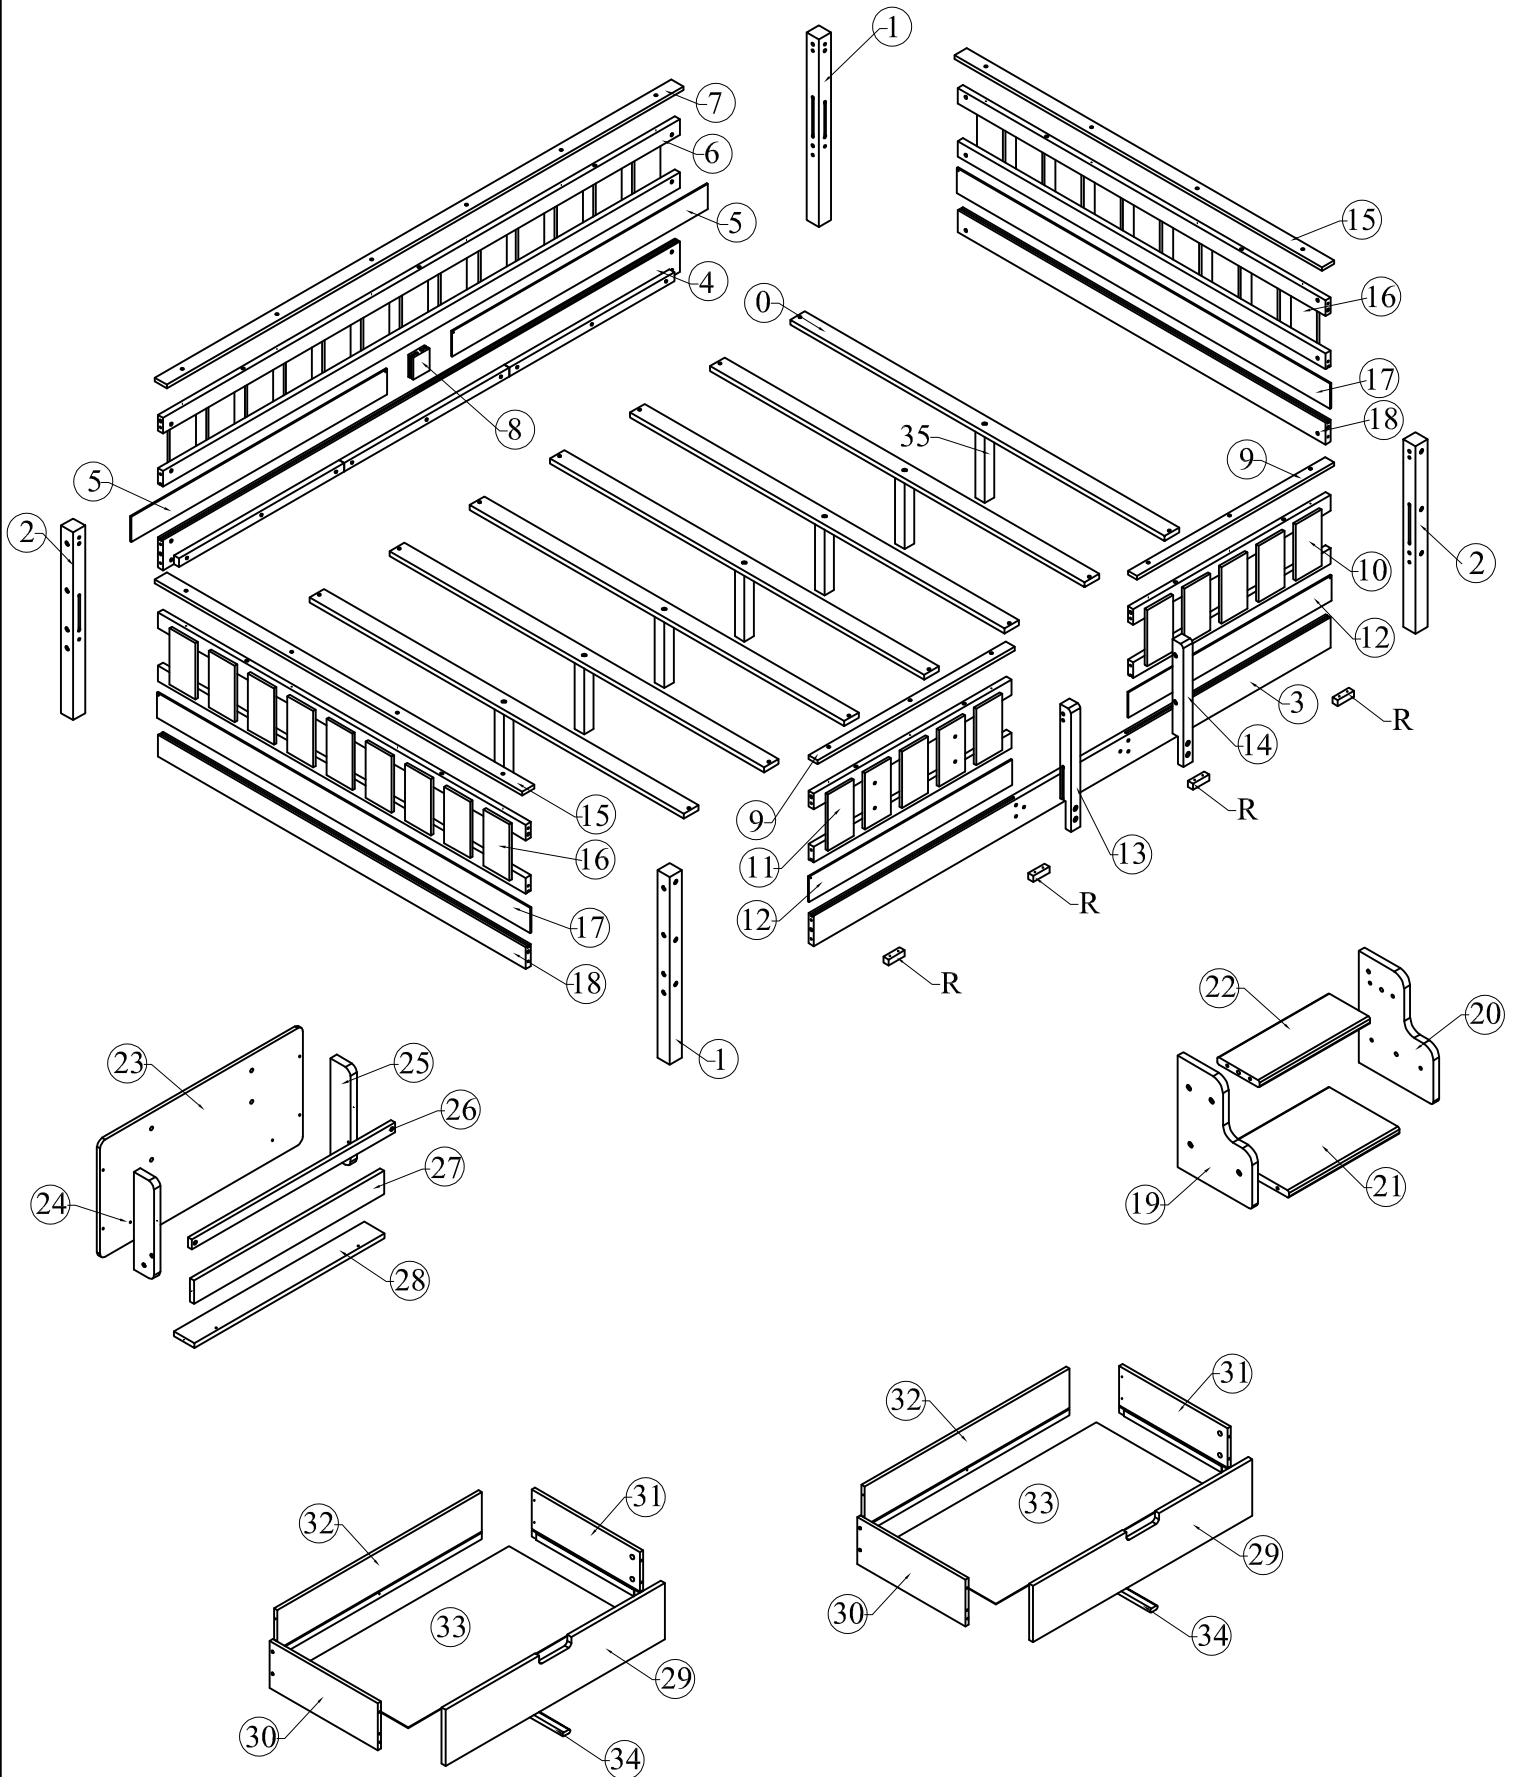



Part List (Box 1 - BW00470-1)

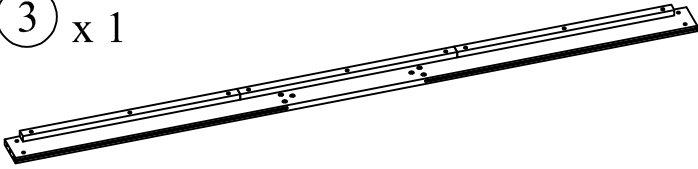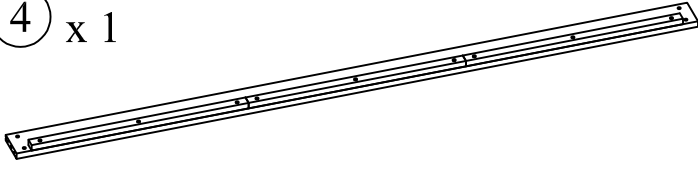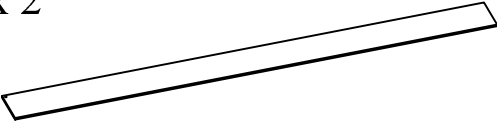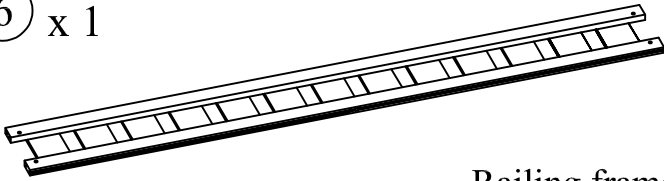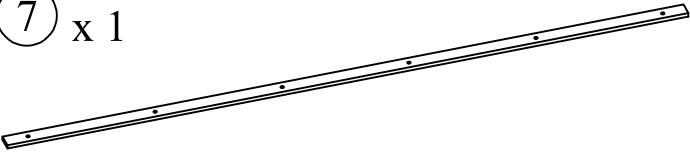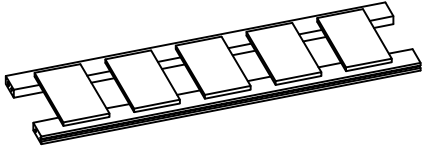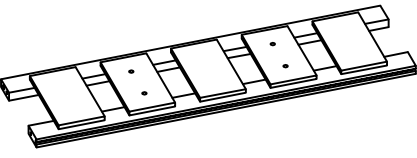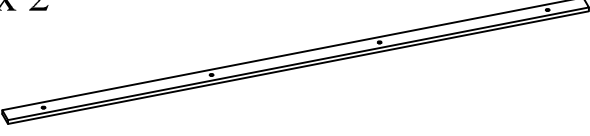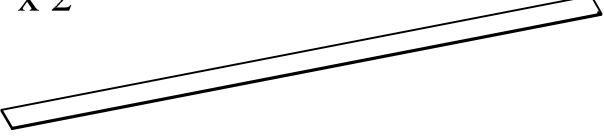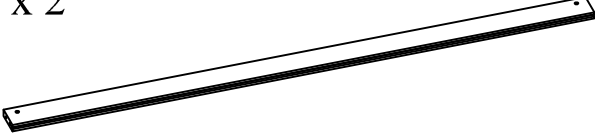① x 2  Leg	② x 2  Leg
③ x 1  Side rail	④ x 1  Side rail
⑤ x 2  Panel	⑥ x 1  Railing frame
⑦ x 1  Top cap	⑩ x 1  Railing frame
⑪ x 1  Railing frame	⑫ x 2  Panel
⑬ x 1  Vertical support	⑭ x 1  Vertical support
⑮ x 2  Top cap	⑰ x 2  Panel
⑱ x 2  Crossbar	⑳ x 1  Bottom Panel


Part List & Hardware List (Box 2 - BW00470-2)

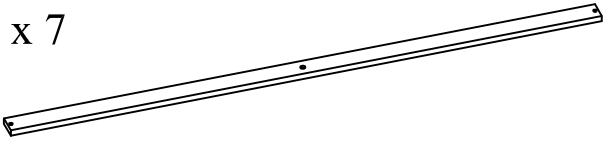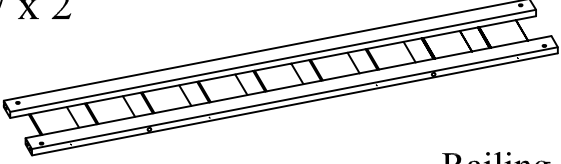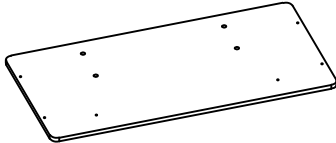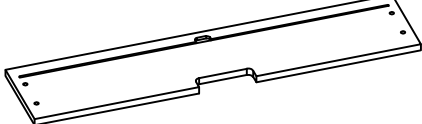① x 7  Slats	⑧ x 1  Vertical guard rail
⑨ x 2  Top cap	⑯ x 2  Railing frame
⑲ x 1  Side Panel	⑳ x 1  Side Panel
㉒ x 1  Top Panel	㉓ x 1  Back Panel
㉔ x 1  Side Panel	㉕ x 1  Side Panel
㉖ x 1  Crossbar	㉗ x 1  Front Panel
㉘ x 1  Bottom Panel	㉙ x 2  Drawer Front
㉚ x 2  Drawer Sides	㉛ x 2  Drawer Sides

Part List & Hardware List (Box 2 - BW00470-2)

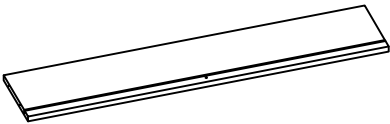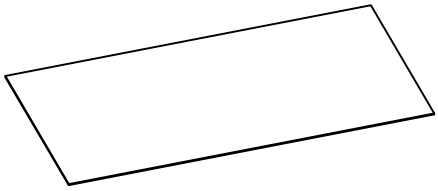(32) x 2  Drawer Back	(33) x 2  Drawer Bottom
(34) x 2  Bottom Support Rail	(35) x 7  Support Leg



Hardware List (Box 2 - BW00470-2)

No.	OUTLOOK	DESC	QTY
(A)		Dowel Ø10*40mm	37
(B)		Bolts 1/4"*15mm	04
(C)		Bolts 1/4"*25mm	04
(D)		Bolts 1/4"*35mm	07
(E)		Bolts 1/4"*60mm	10
(F)		Bolts 1/4"*80mm	04
(G)		Bolts 1/4"*90mm	28
(H)		Cross dowel 1/4"*13mm	42
(I)		Hex bolts 1/4"*15mm	08
(J)		Round Head Screw #8*25mm	06
(K)		Screws #6*12mm	36
(L)		Screws #8*30mm	42
(M)		Screws #8*35mm	18
(N)		Connecting Bolt	08
(O)		Base L	02
(P)		Wheels	08
(Q)		Allen key 60*22*4mm	02
(R)		Wood stop	04

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




STEP 1

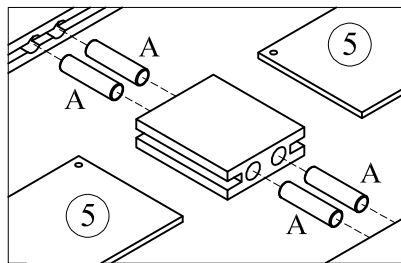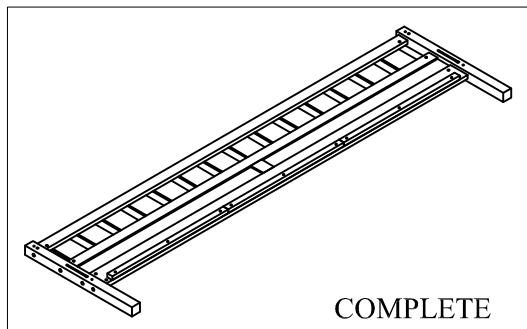


(A)		08
(G)		08
(H)		08

STEP 1.1

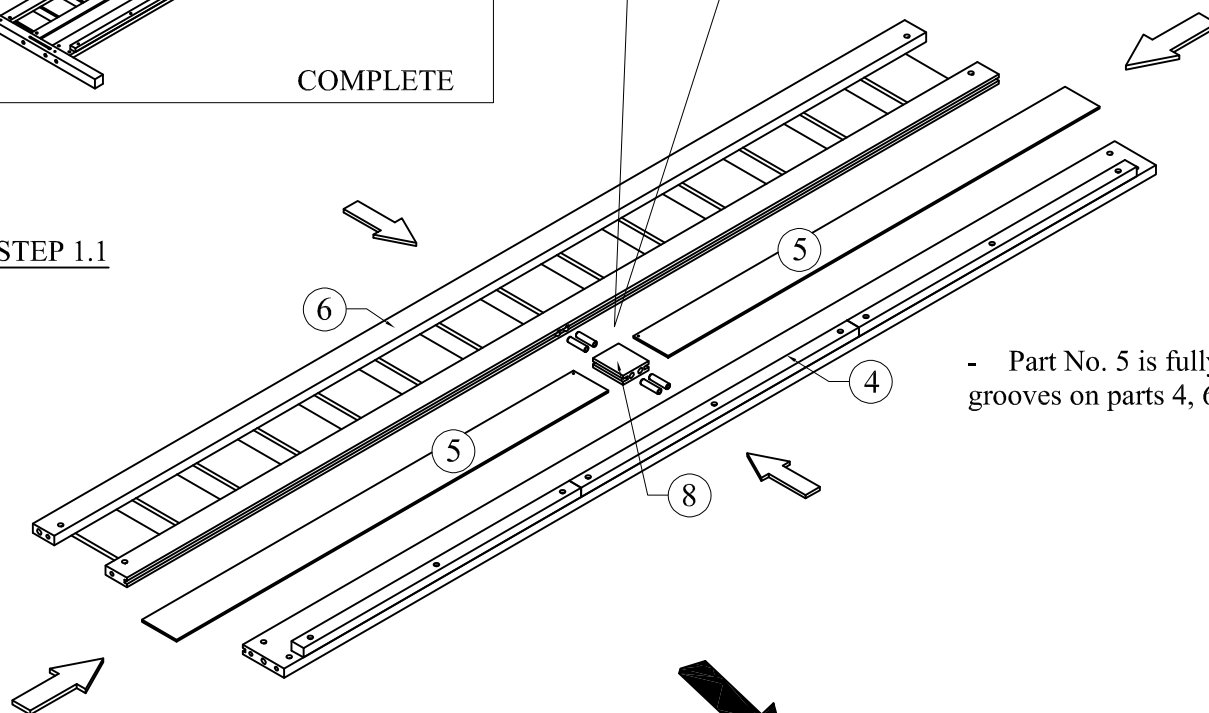

STEP 1.1



STEP 1.2

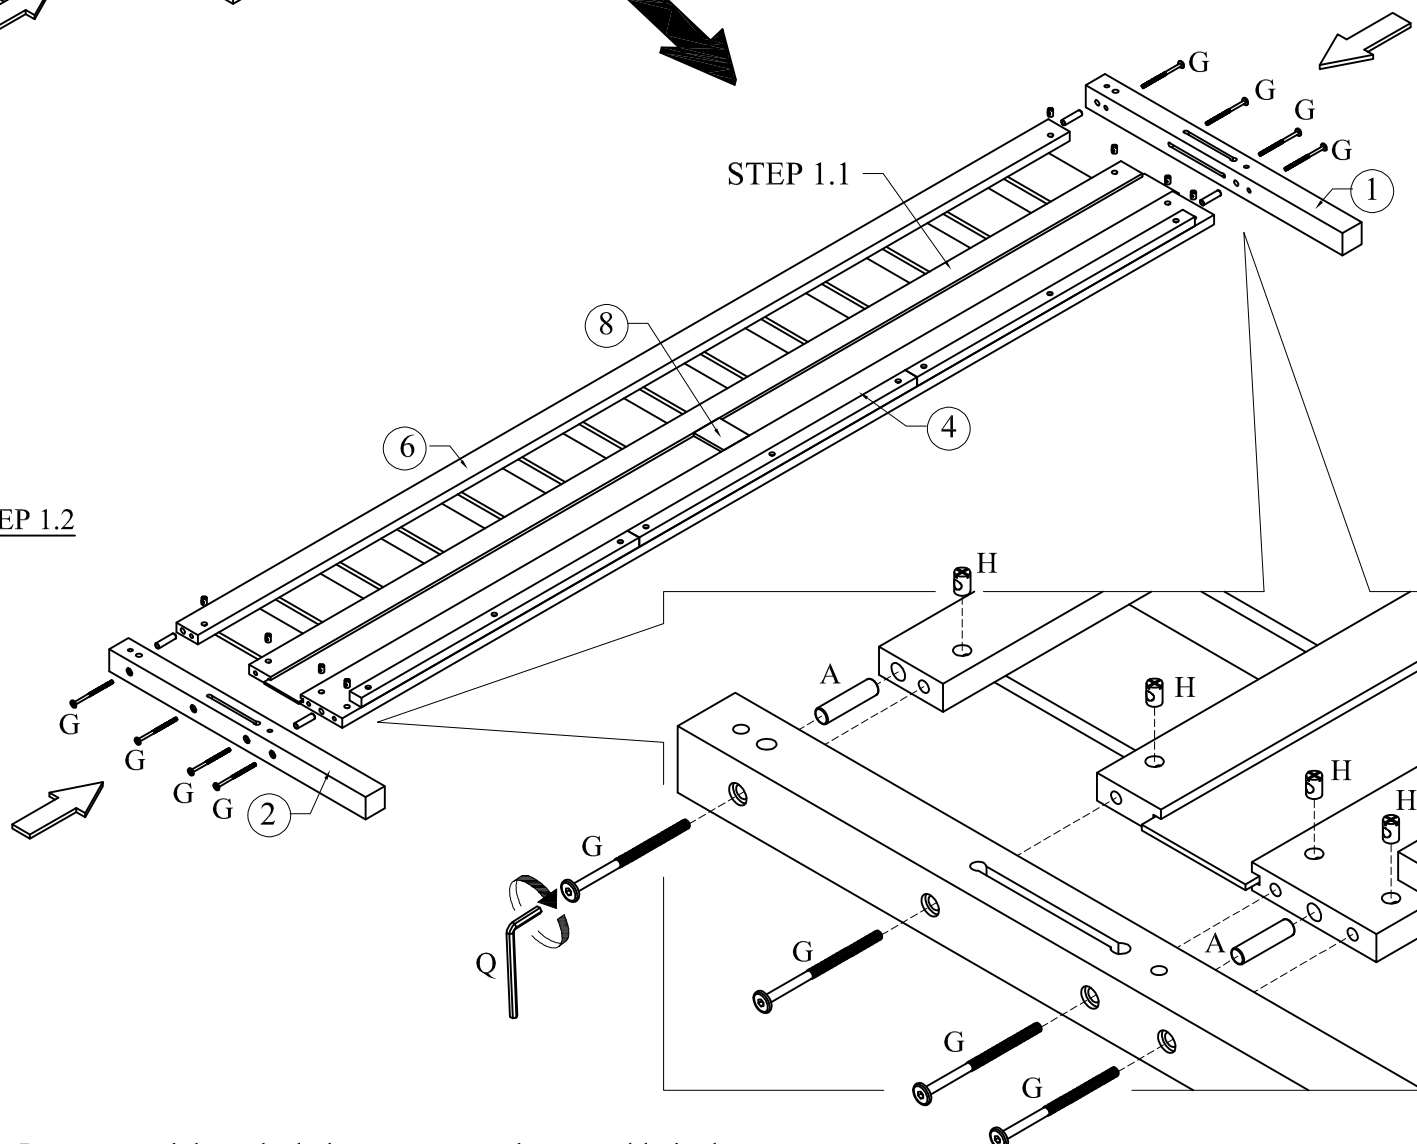

Note: Do not overtighten the bolts to ensure easier assembly in the next step.

STEP 2



(A)		02
(G)		04
(H)		04

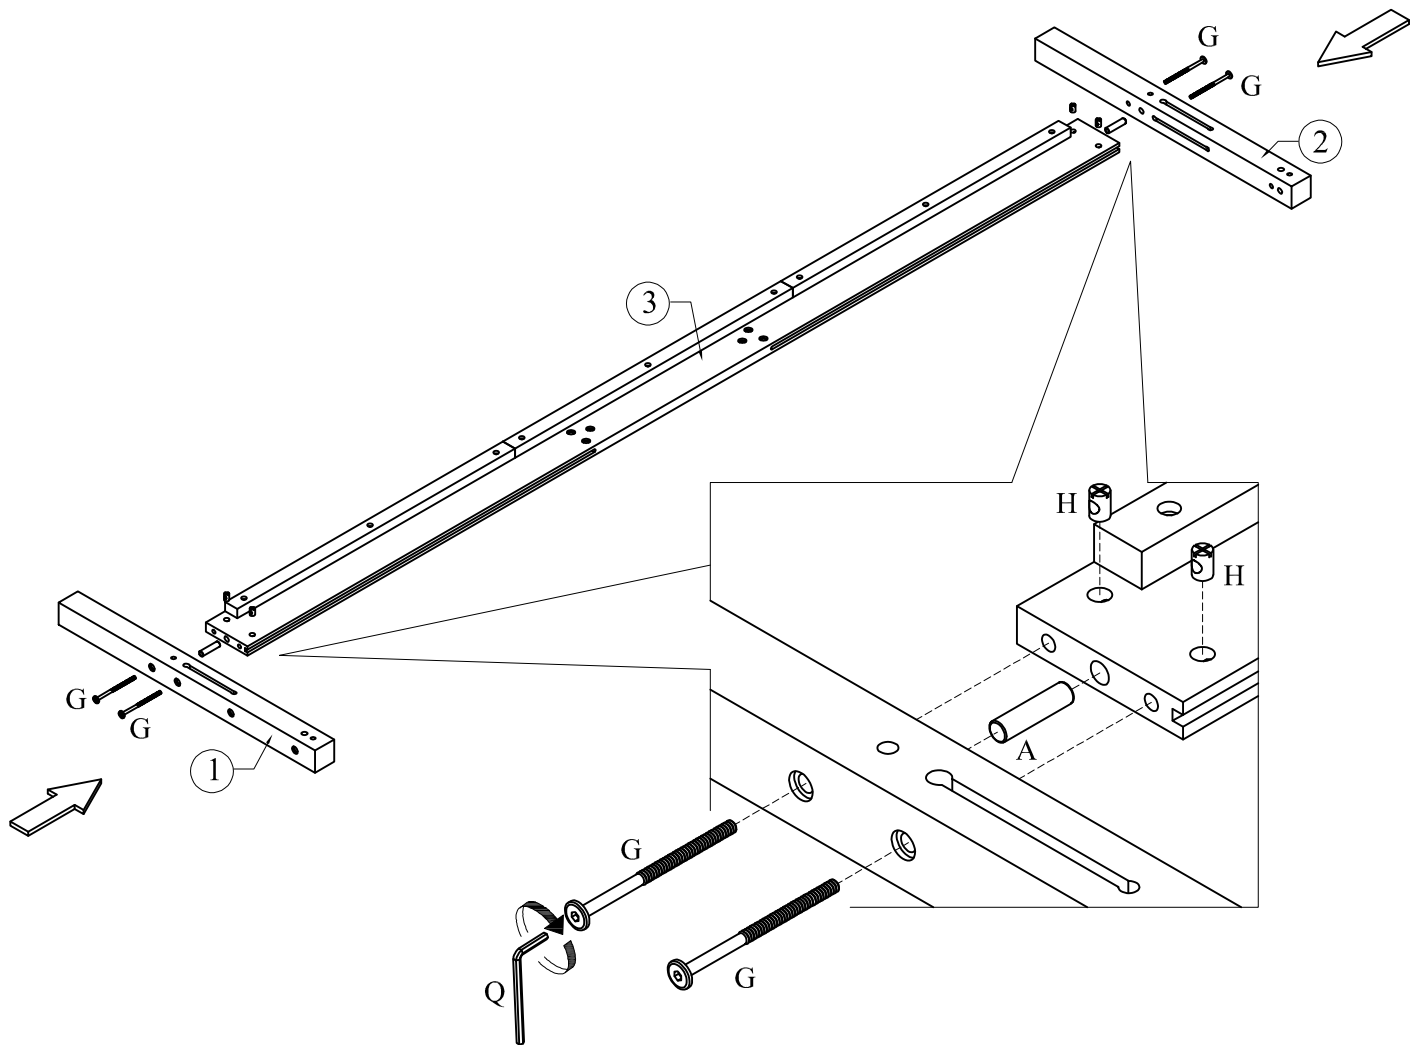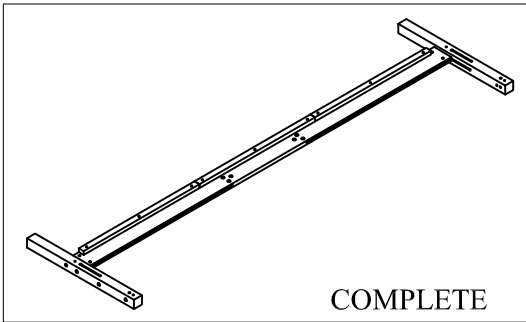

Note: Do not overtighten the bolts to ensure easier assembly in the next step.





STEP 3

(A)		08
(G)		12
(H)		12

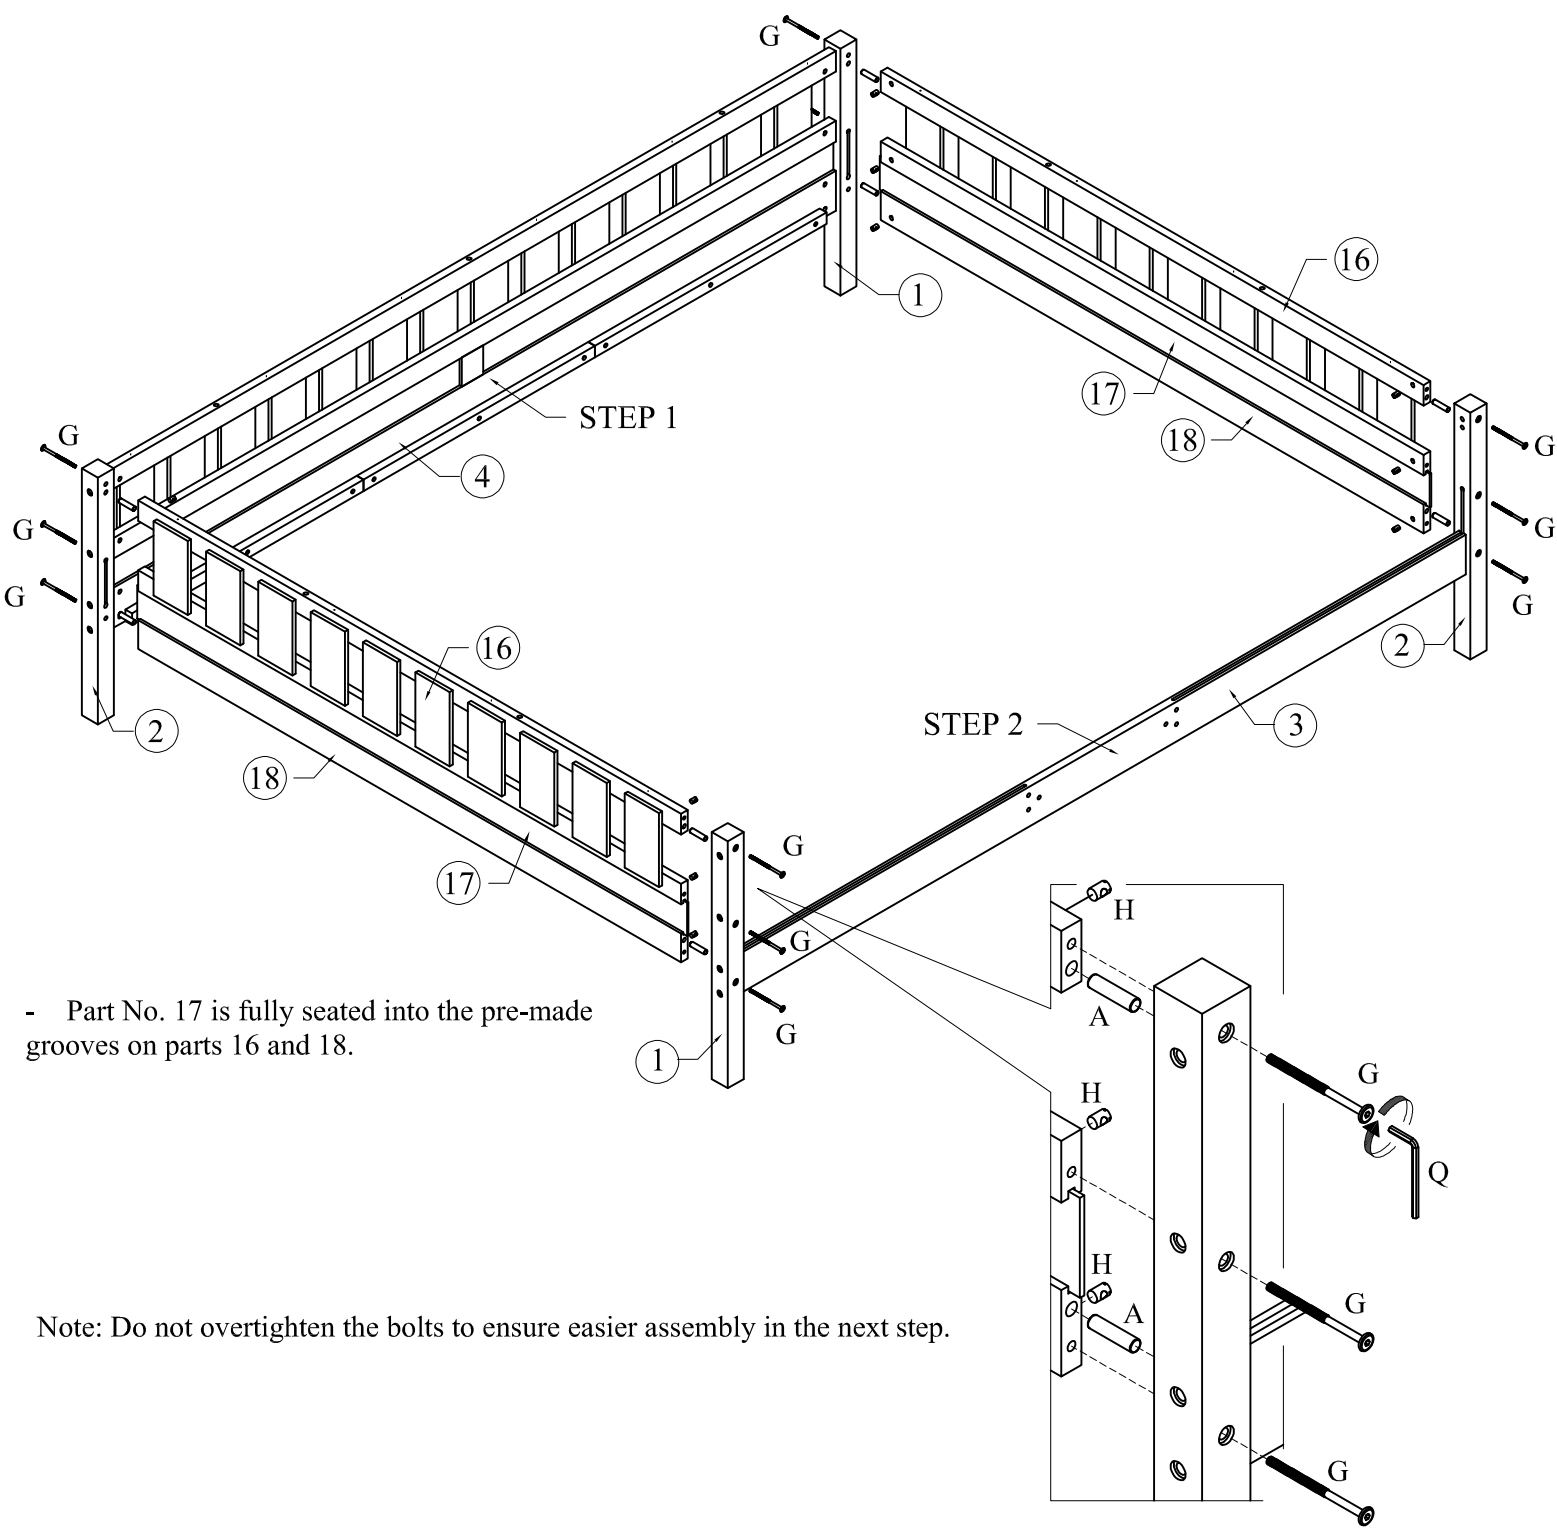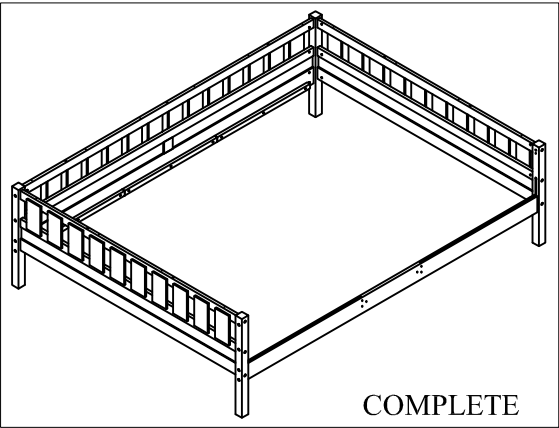


STEP 4

(A)		07
(L)		14

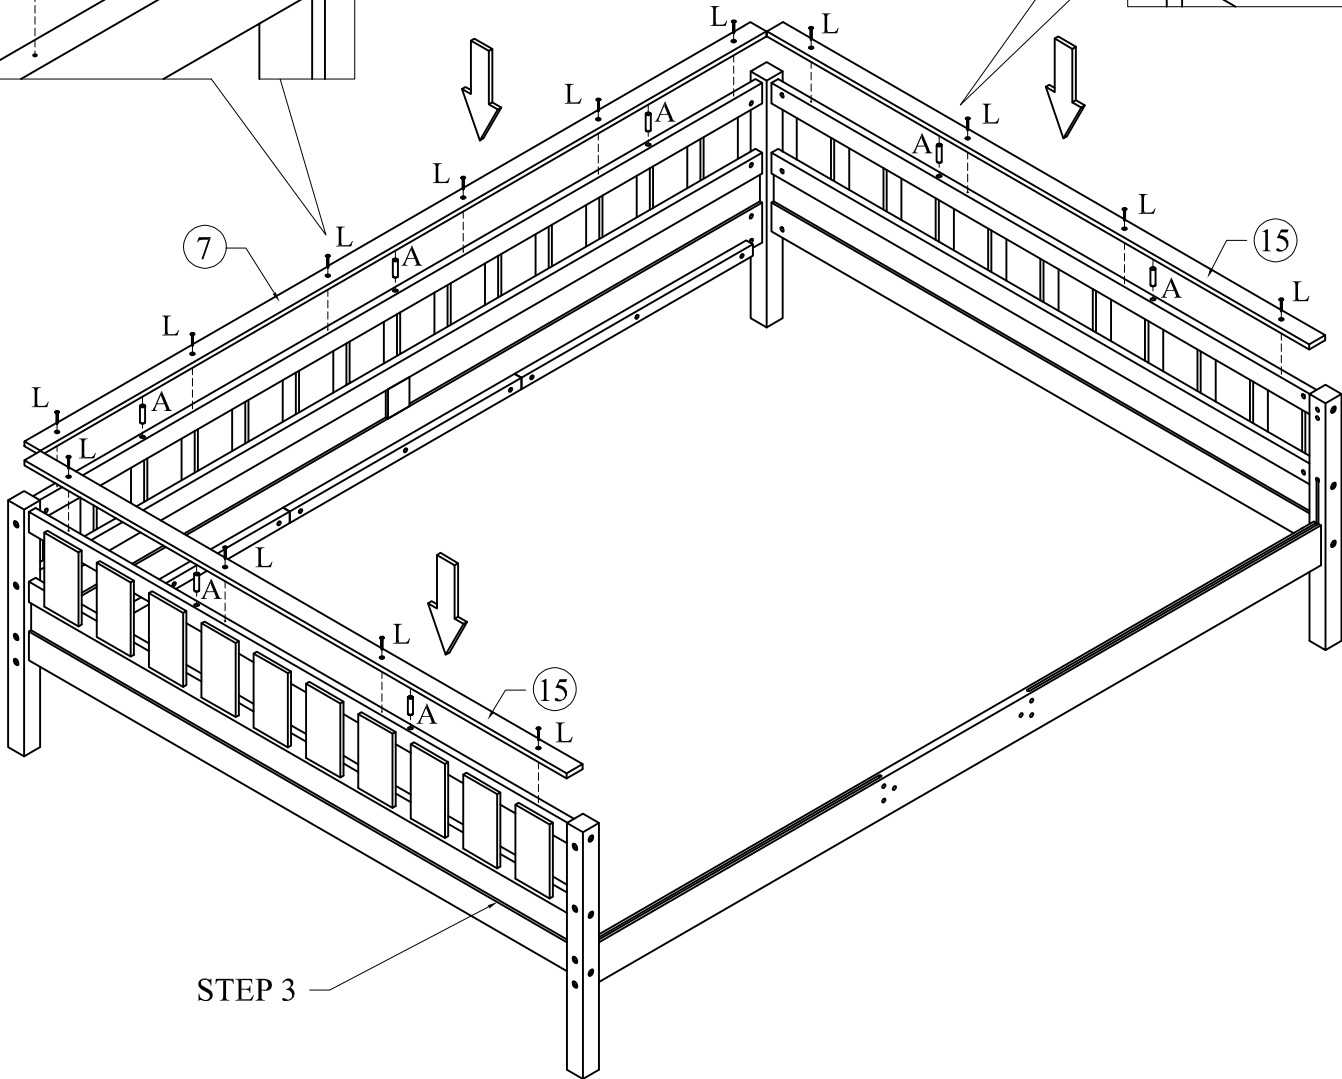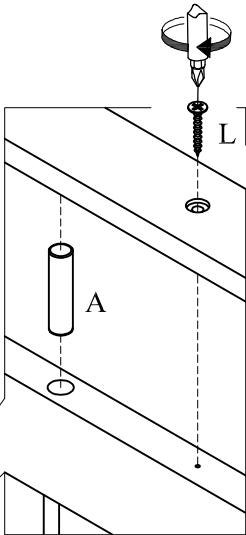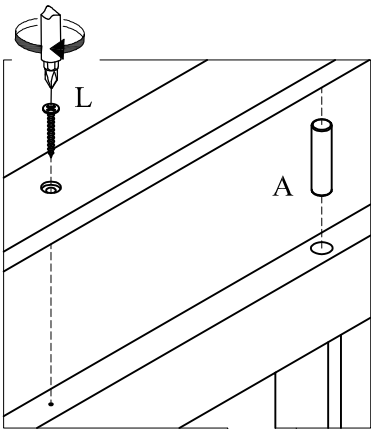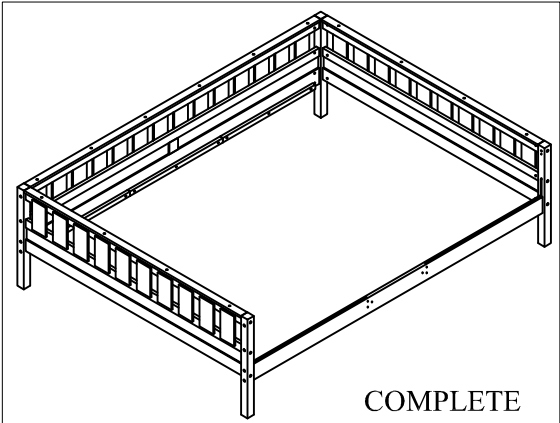


STEP 5

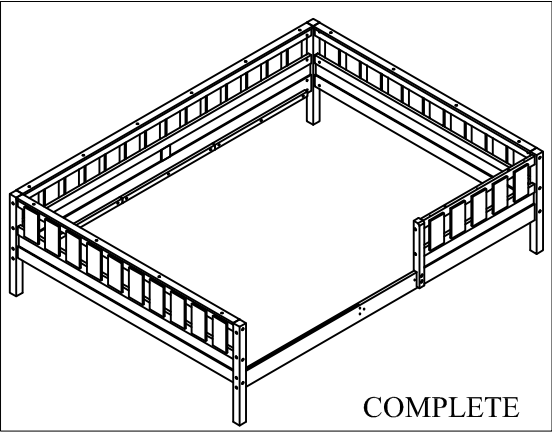


(A)		02
(F)		02
(G)		02
(H)		04

- Part No. 12 is fully seated into the pre-made grooves on parts 2, 3,10 and 14.

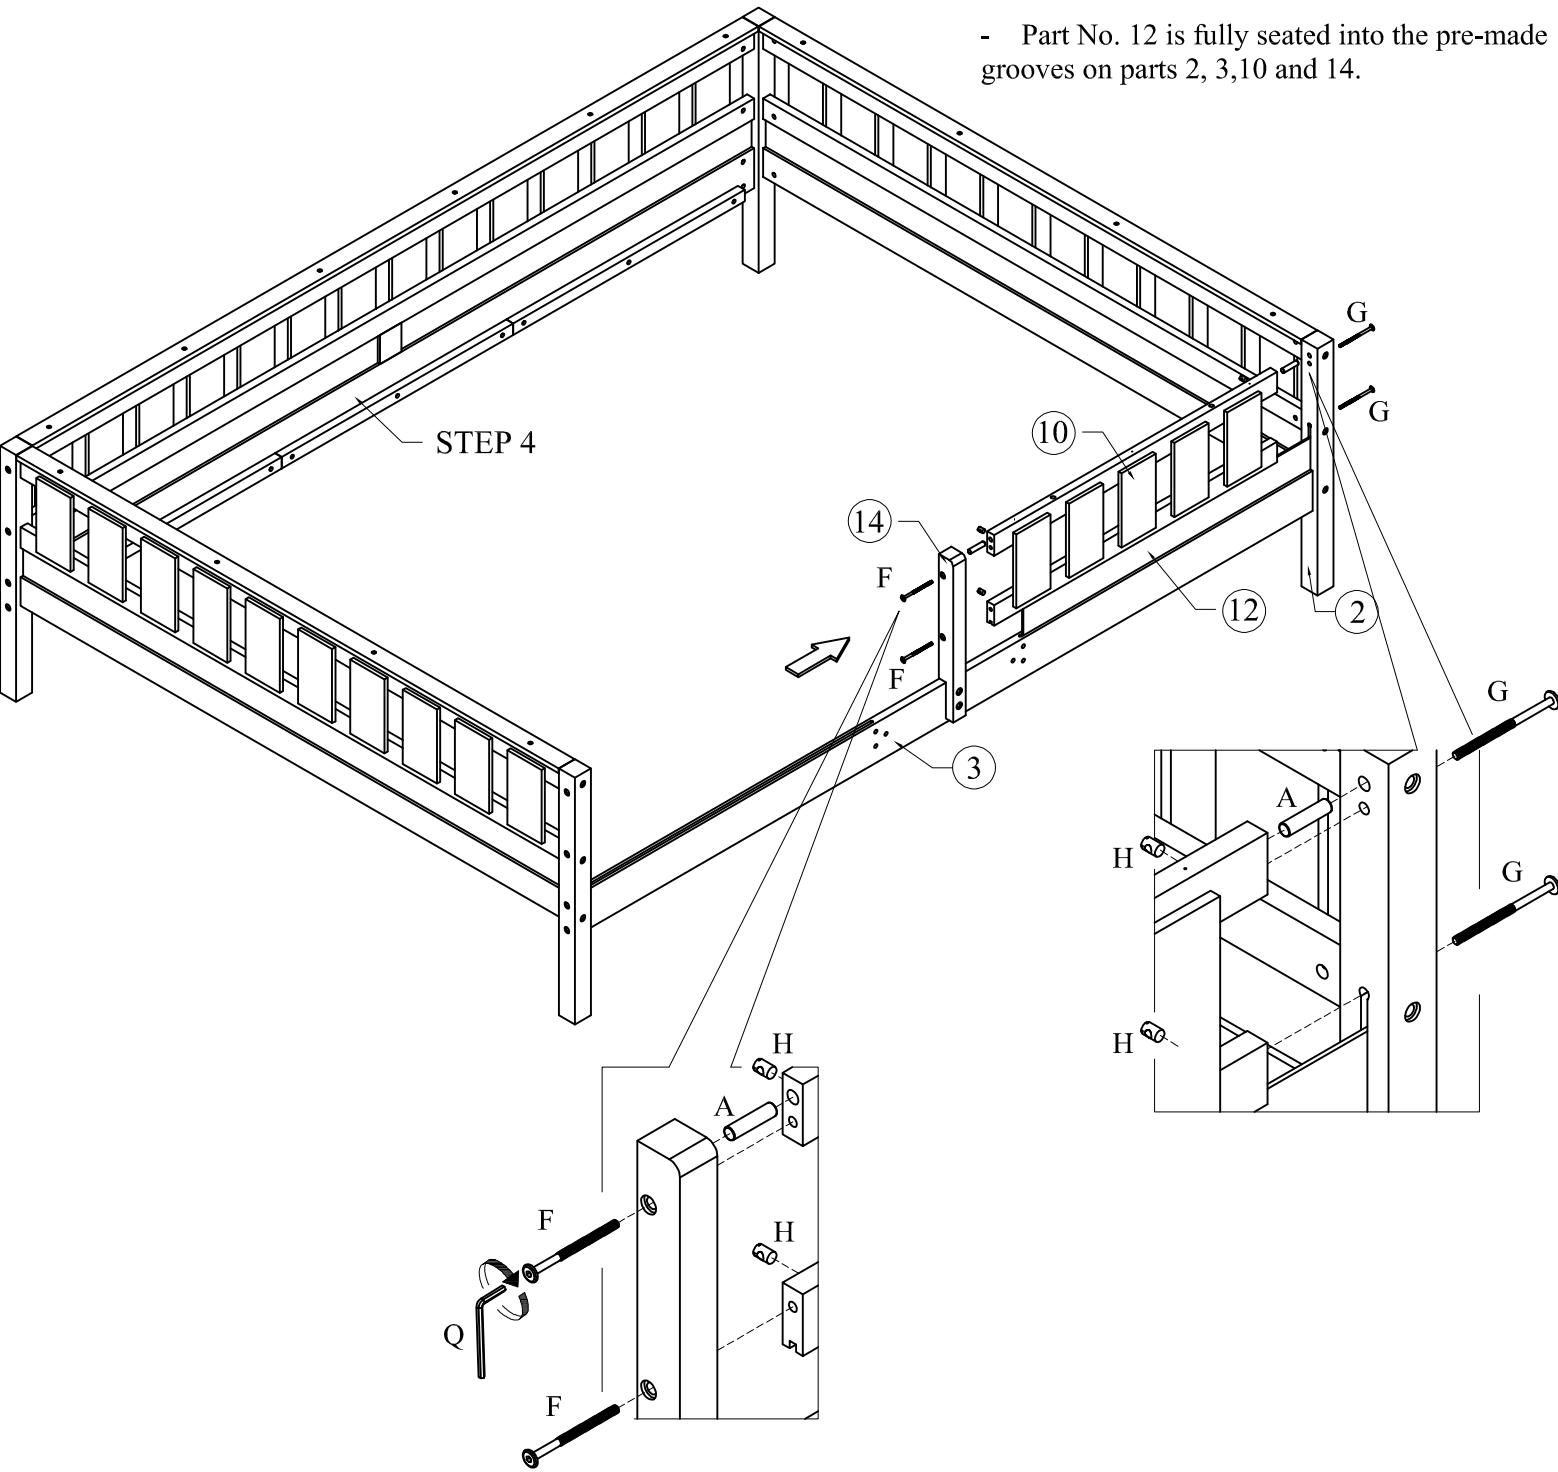


STEP 6

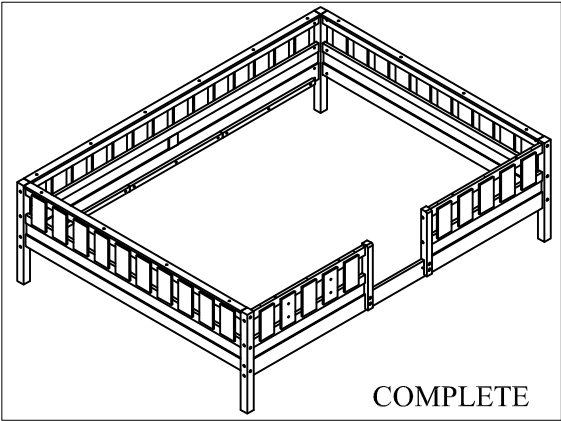



(A)		02
(F)		02
(G)		02
(H)		04

- Part No. 12 is fully seated into the pre-made grooves on parts 1, 3,11 and 13.

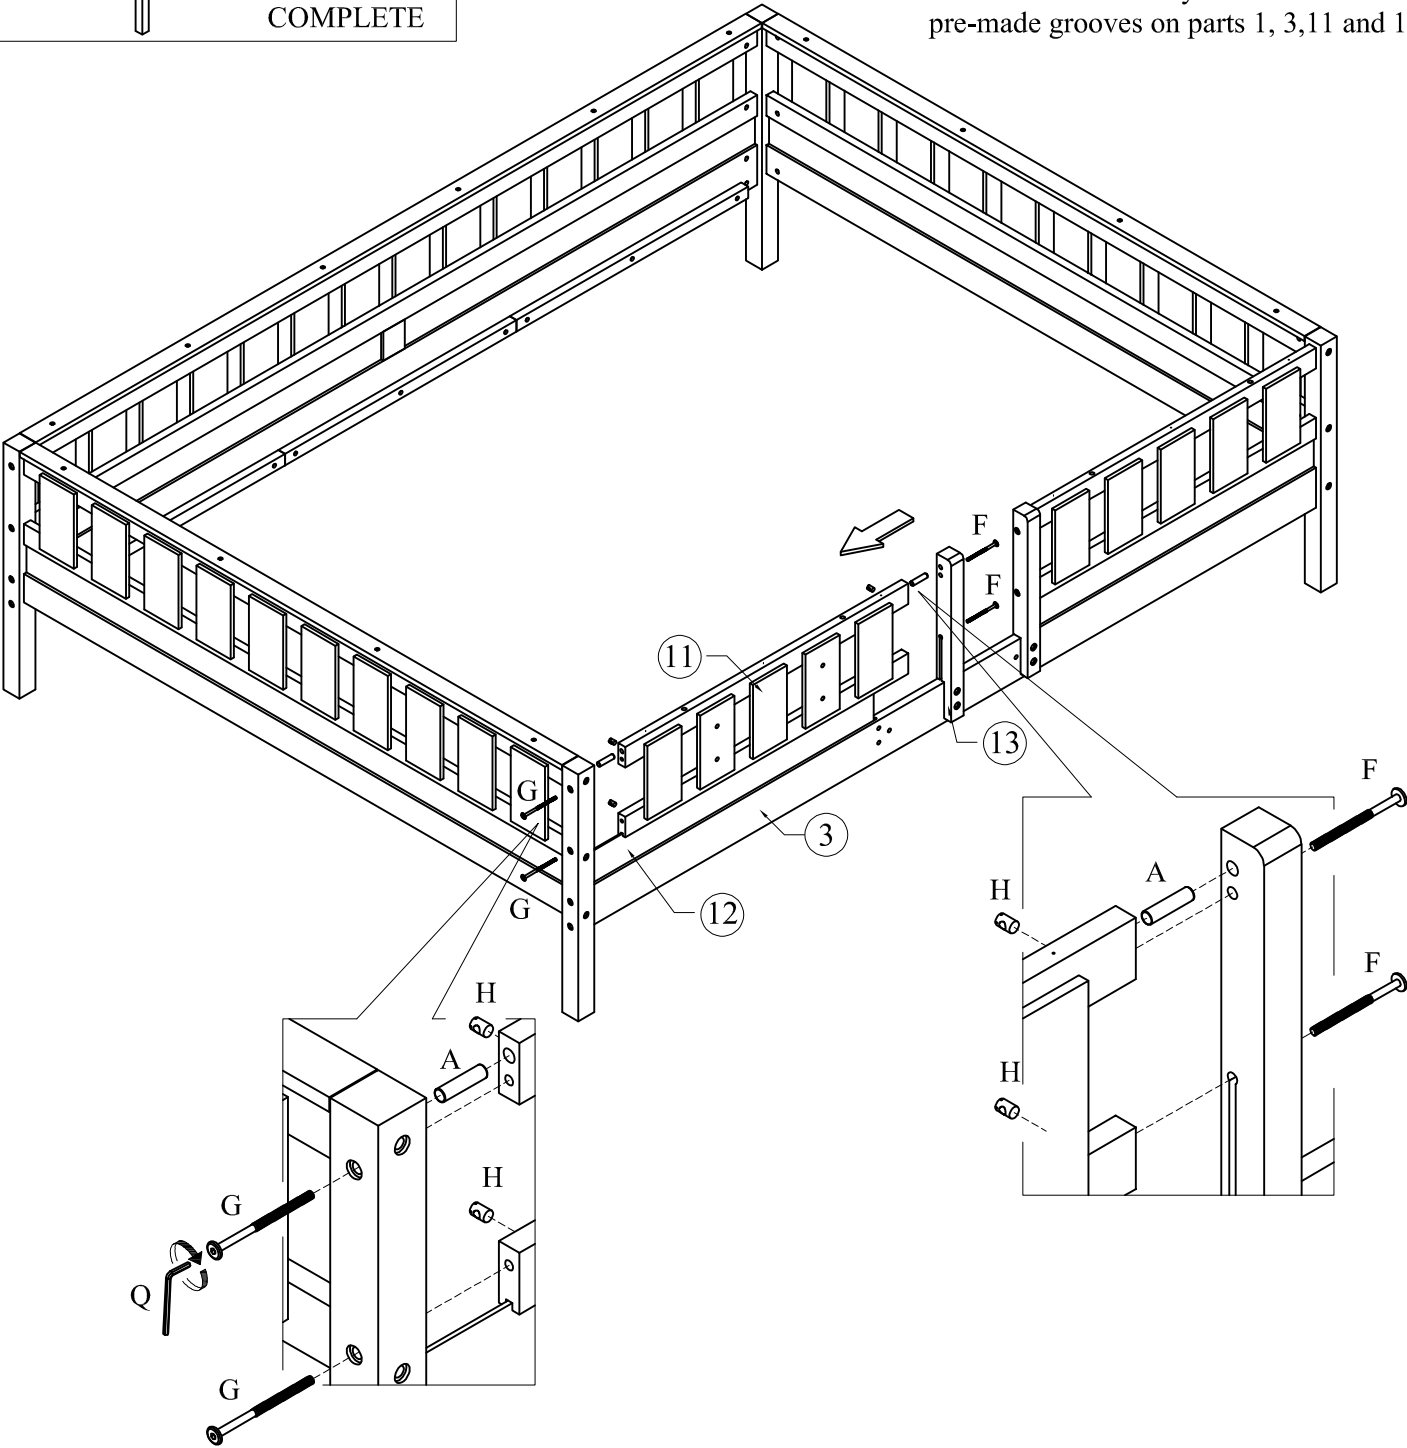



STEP 7

C		04
I		04

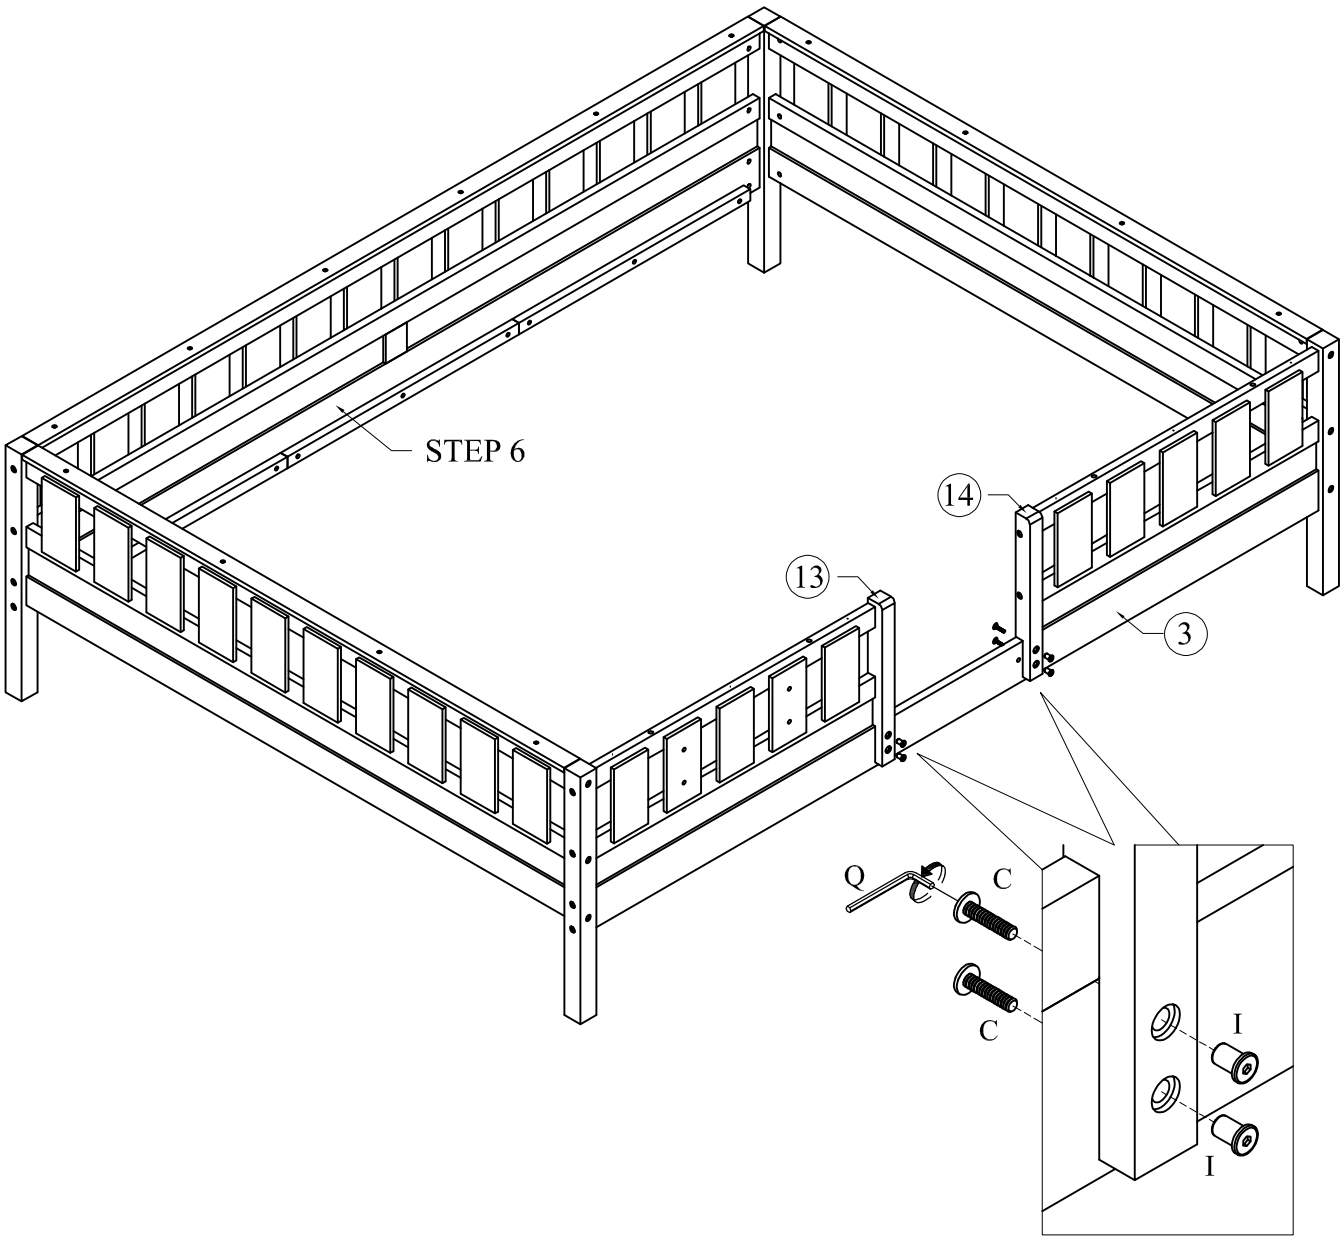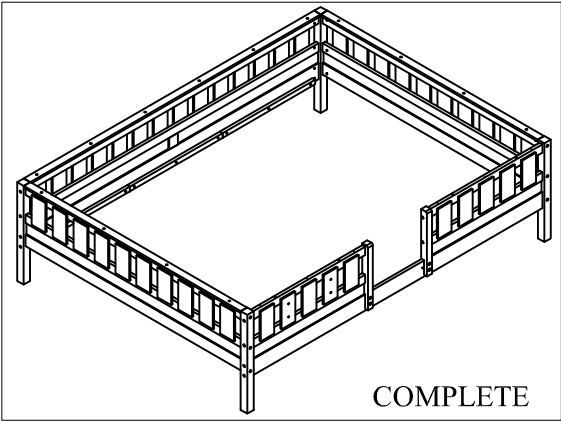


STEP 8


(A)		04
(L)		06

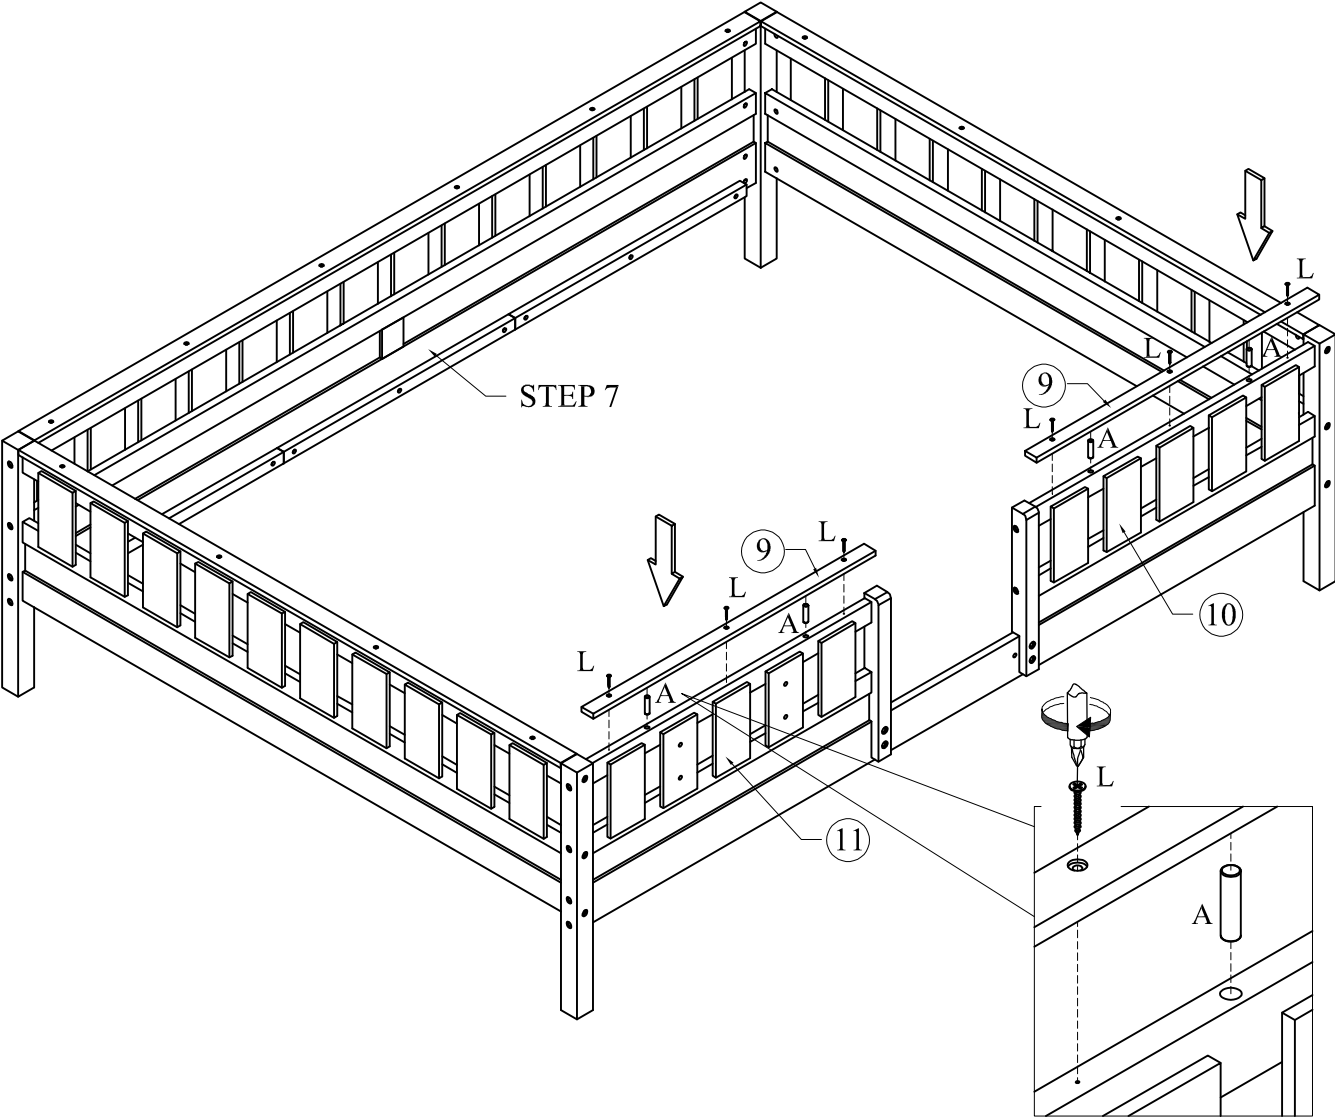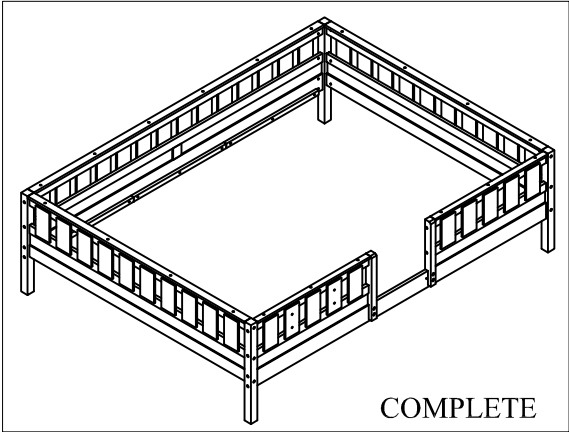

STEP 9


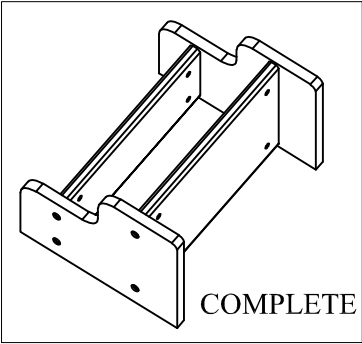


(A)		04
(E)		08
(H)		08

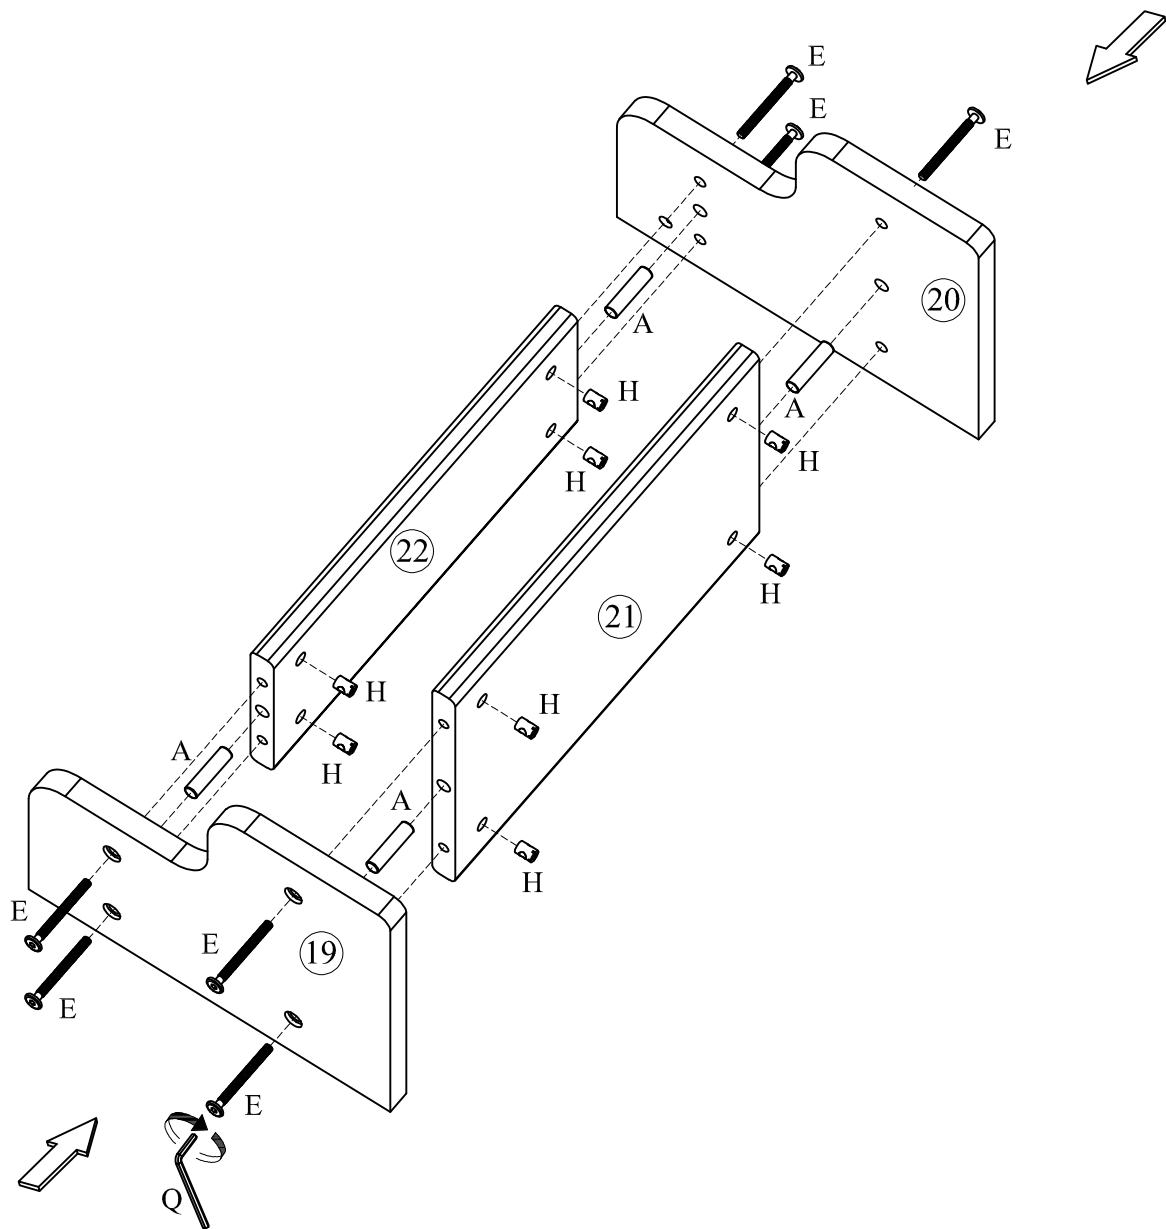


STEP 10

(E)		02
(H)		02

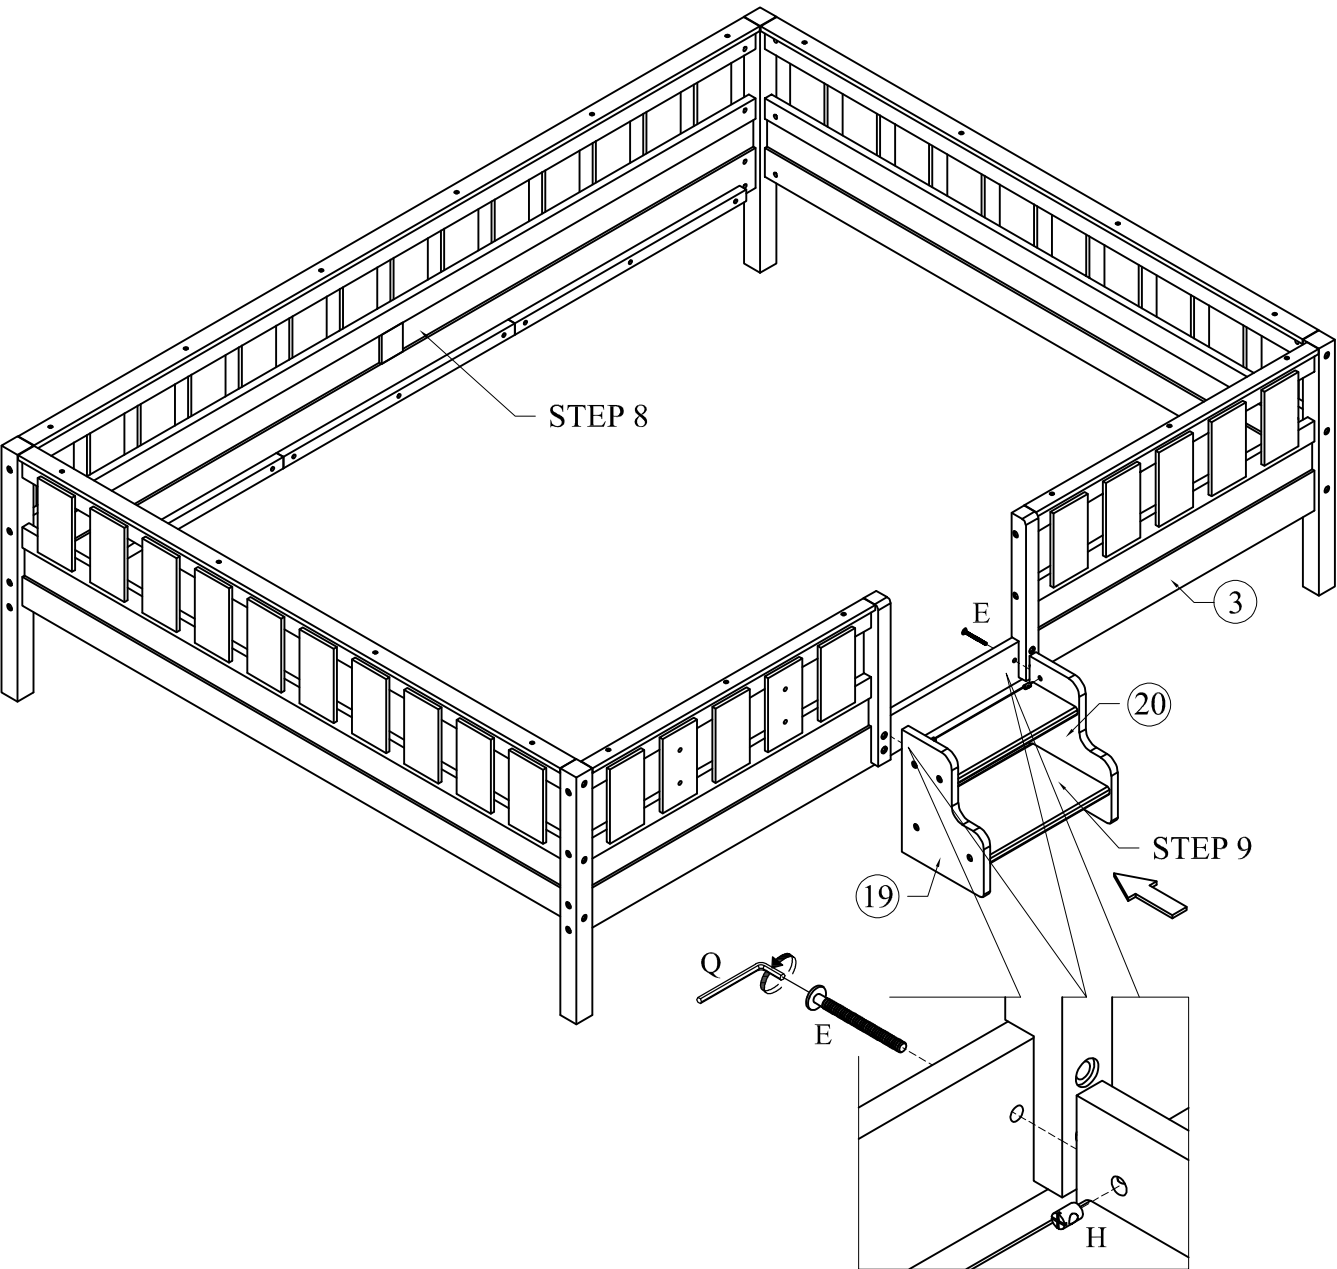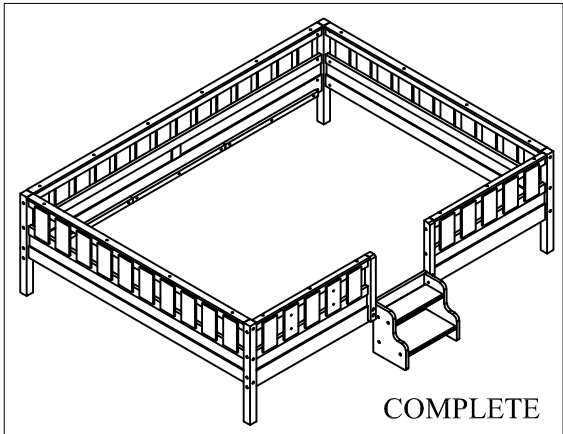


STEP 11

(L)		06
-----	---	----

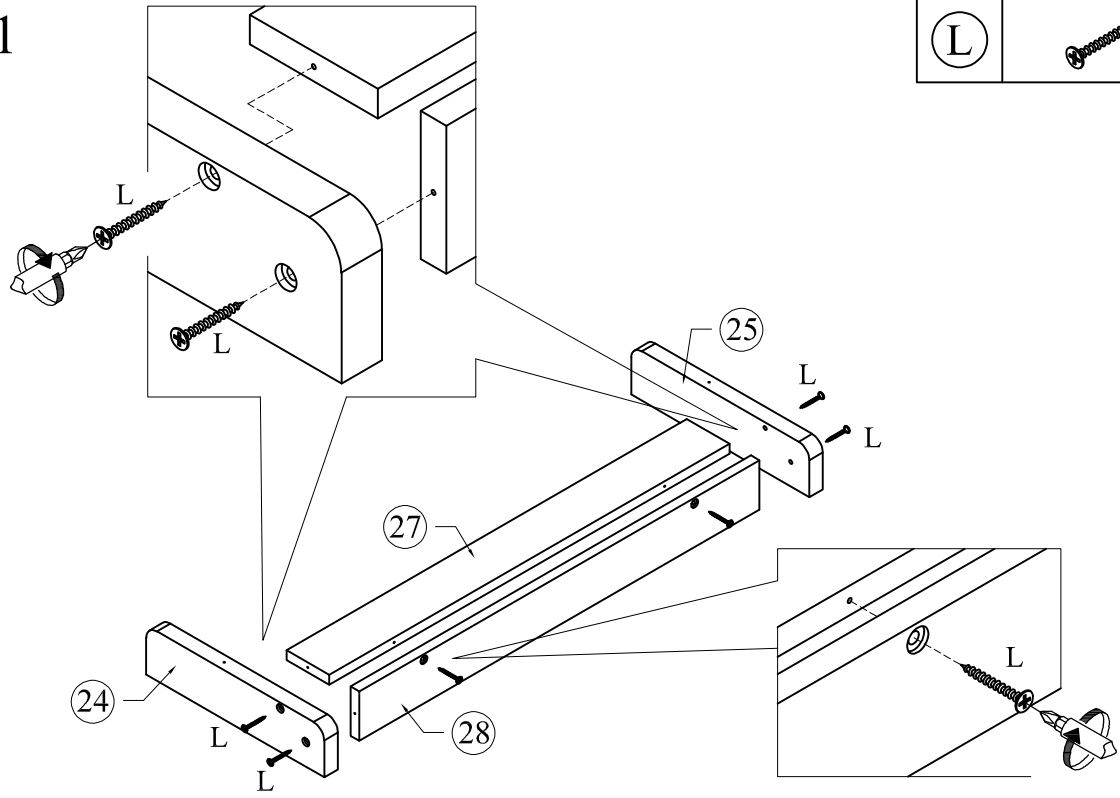

STEP 12


(L)		02
-----	---	----

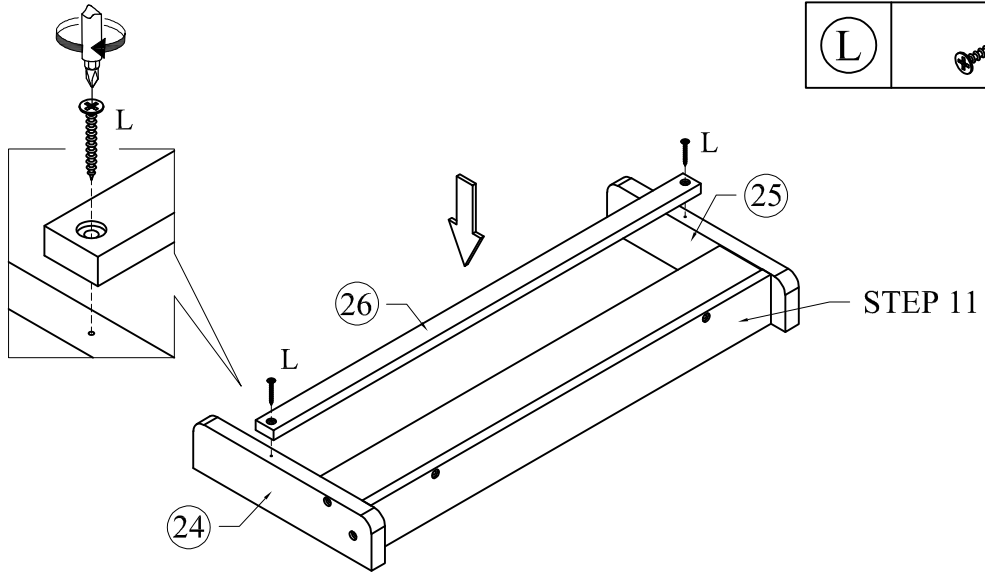

STEP 13



Rotate the assembly from Step 12 as described and continue.

(J)		06
-----	---	----

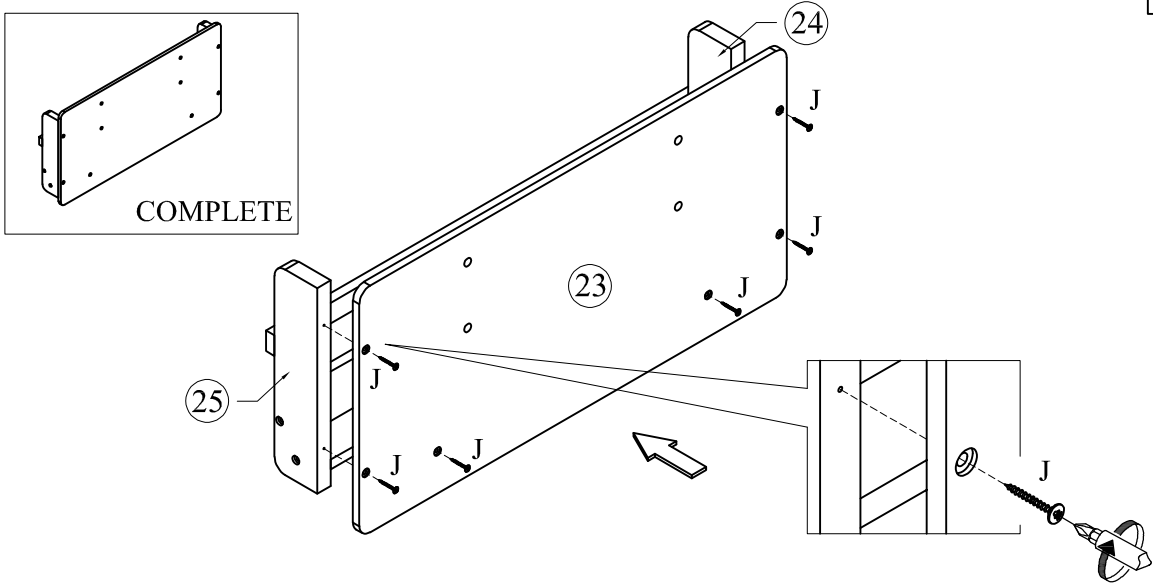




STEP 14

(B)		04
(I)		04

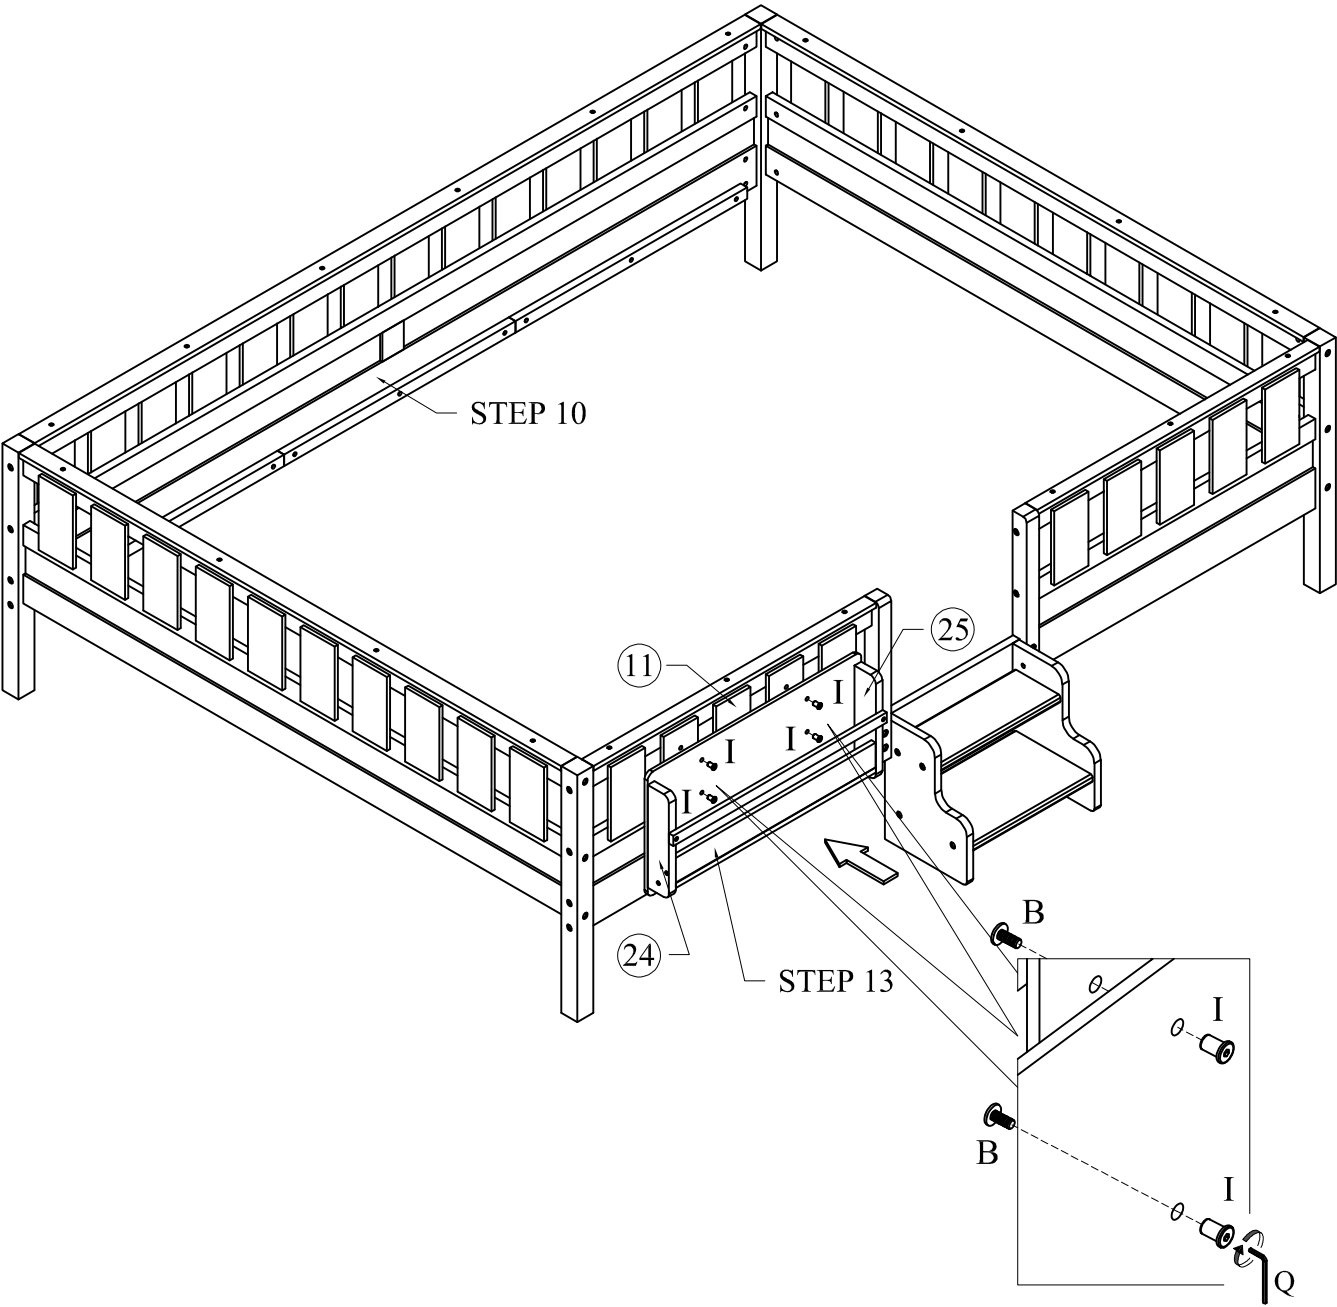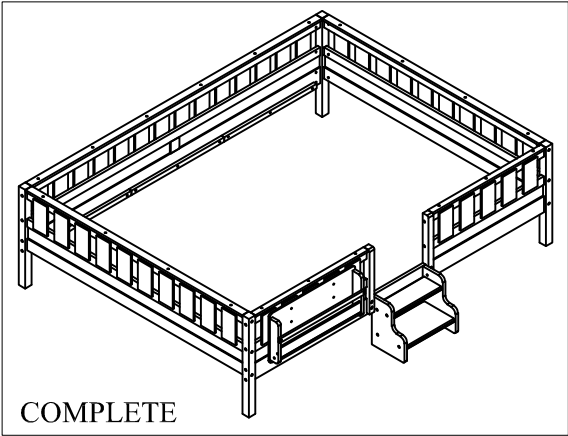


STEP 15

(D)		07
(L)		14

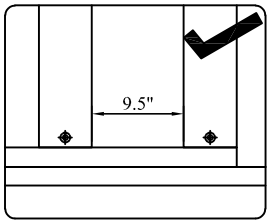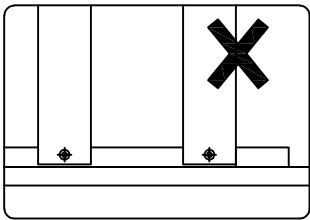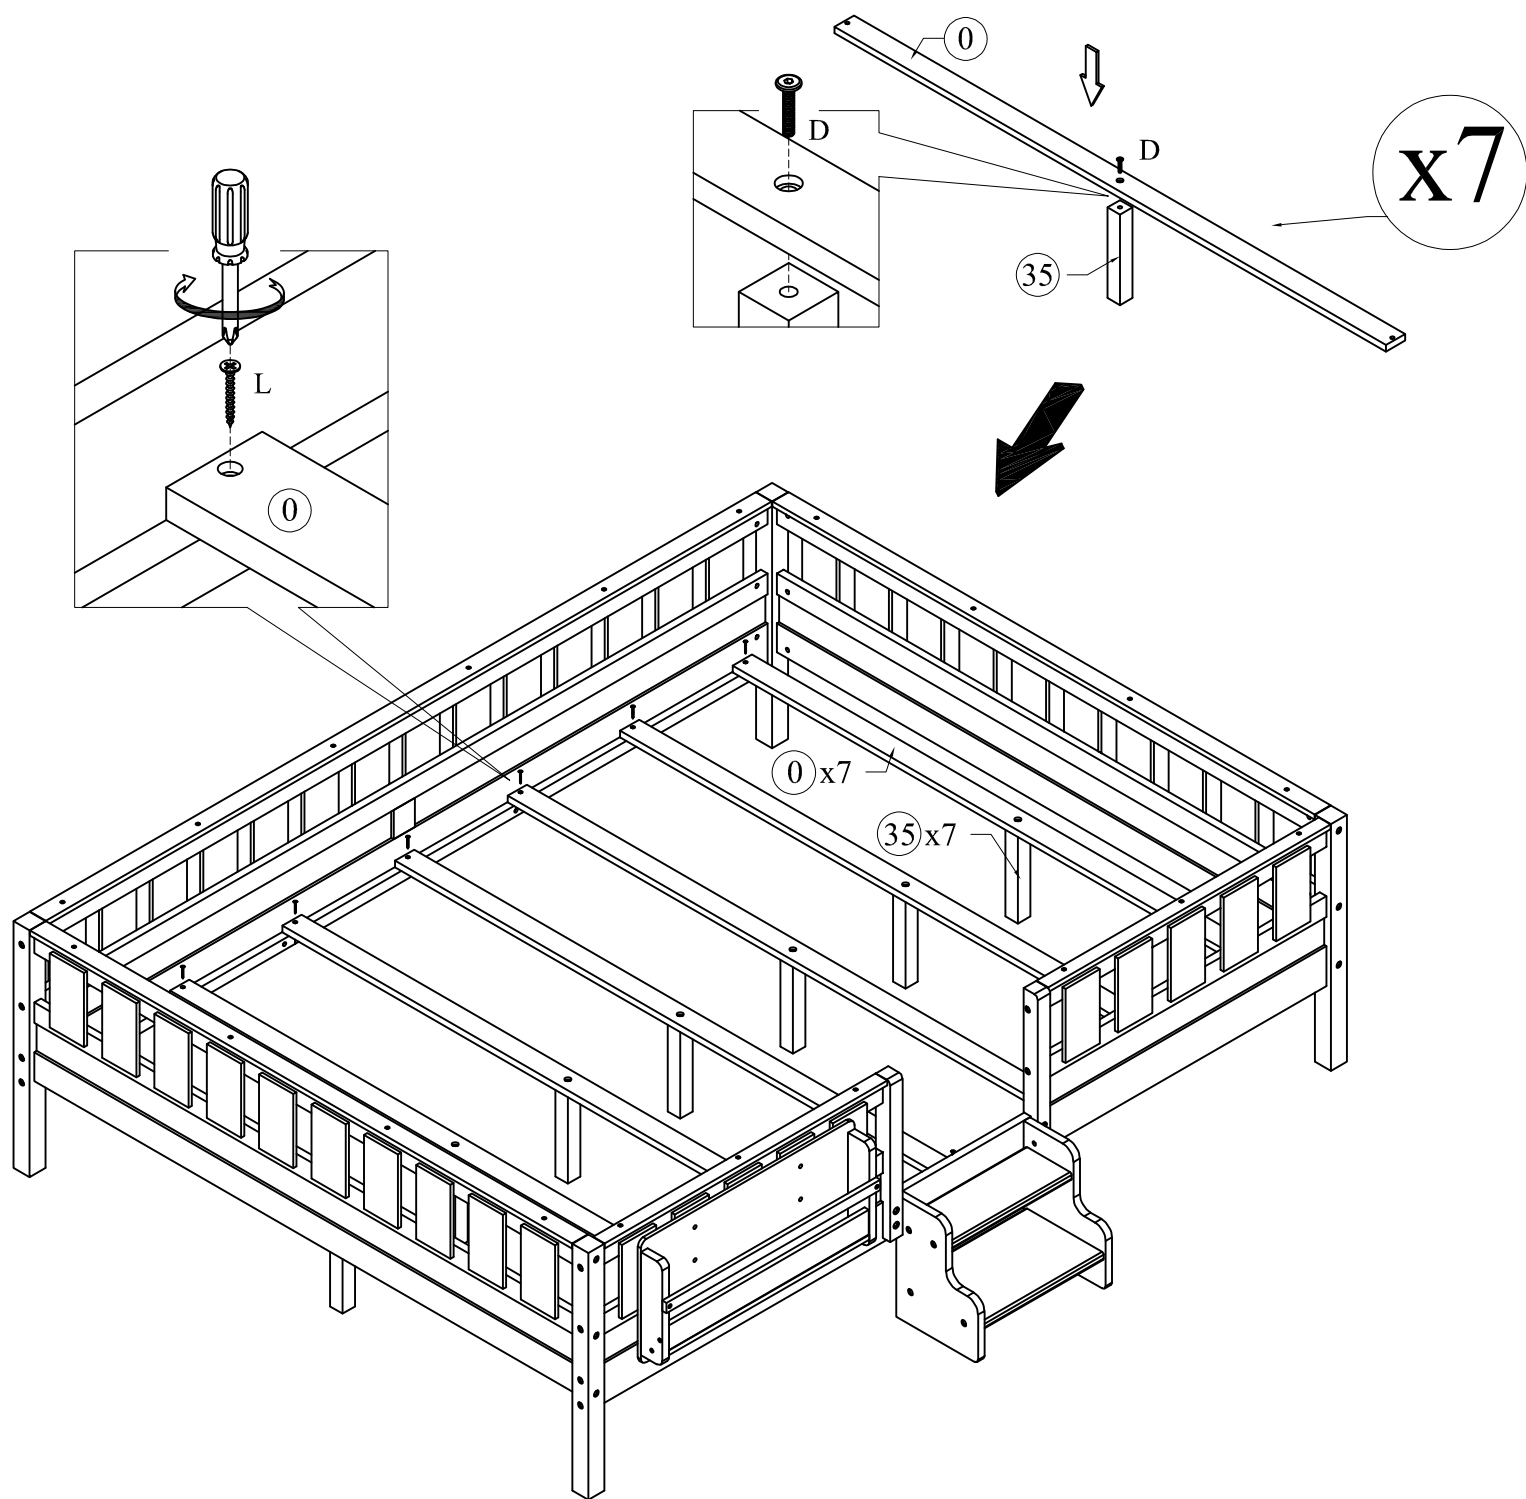


STEP 16

(N)		04
-----	---	----

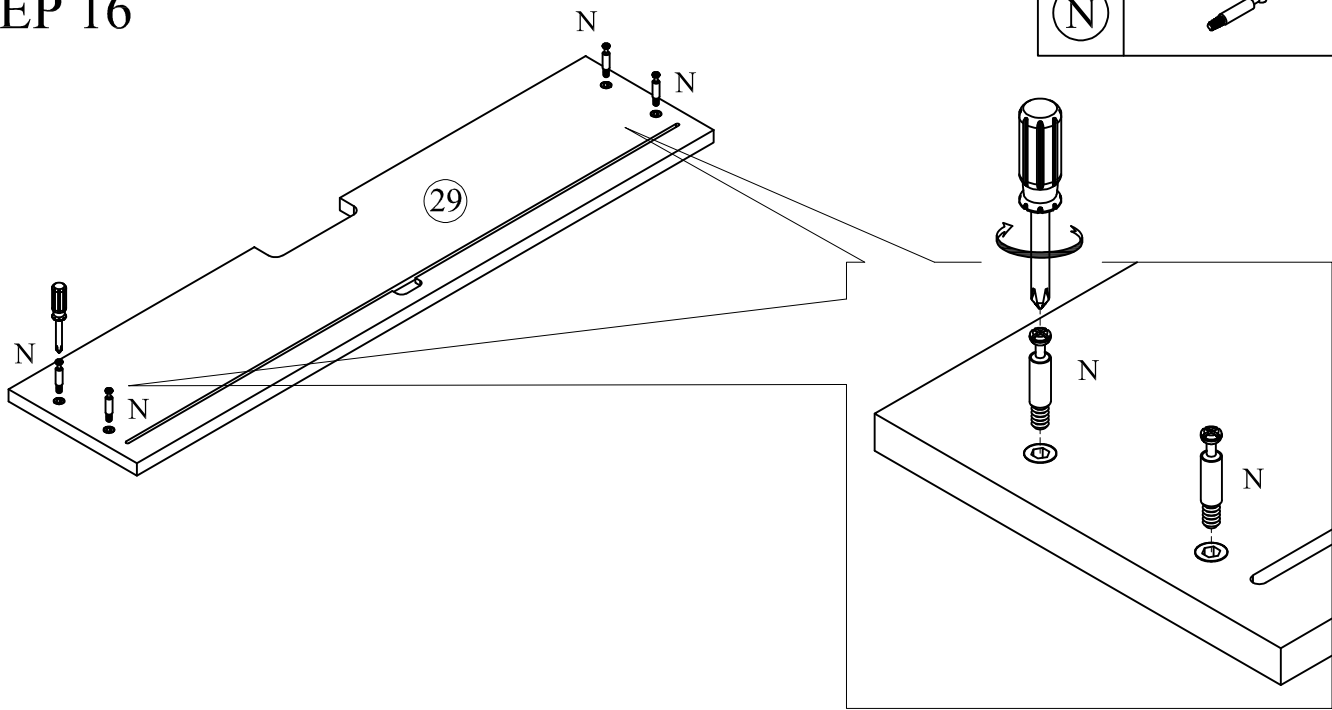


STEP 17


(N)		04
-----	---	----

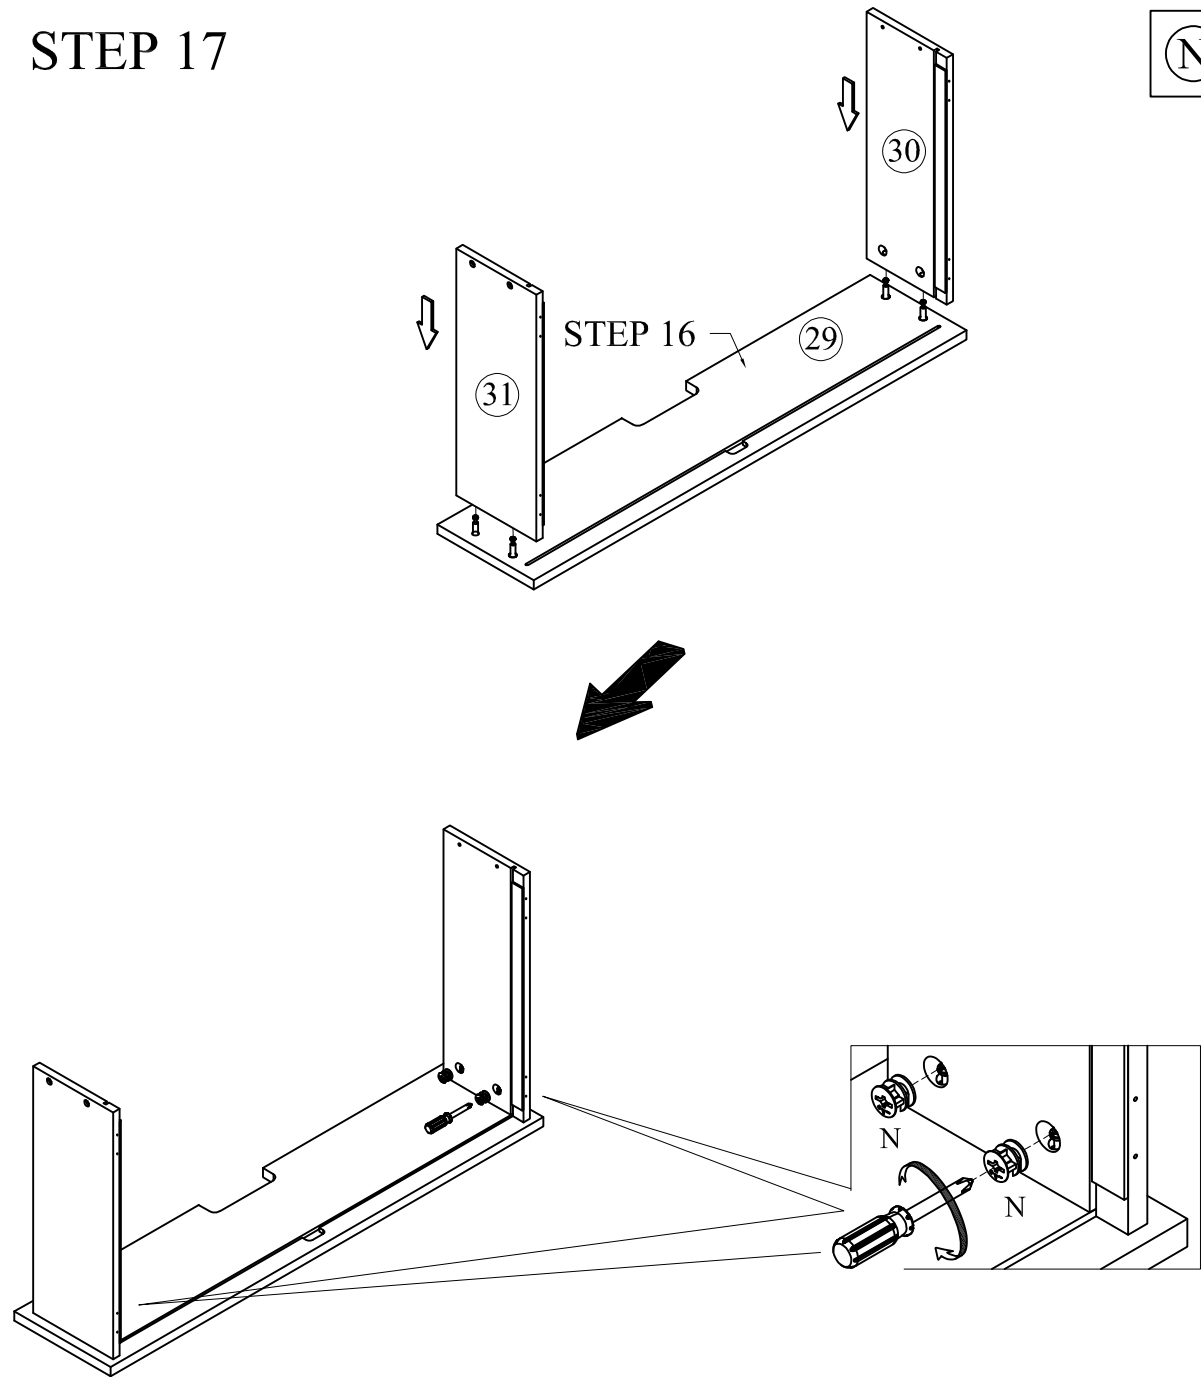





STEP 18

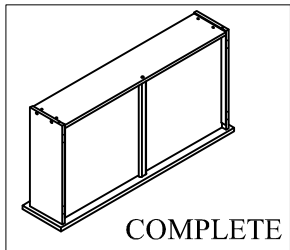

COMPLETE




05

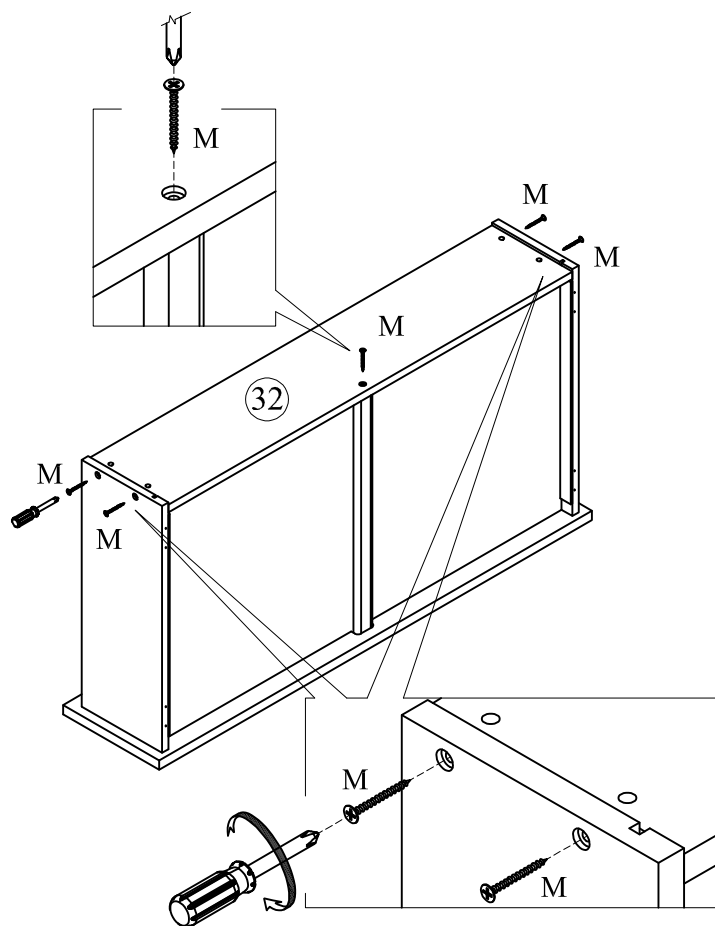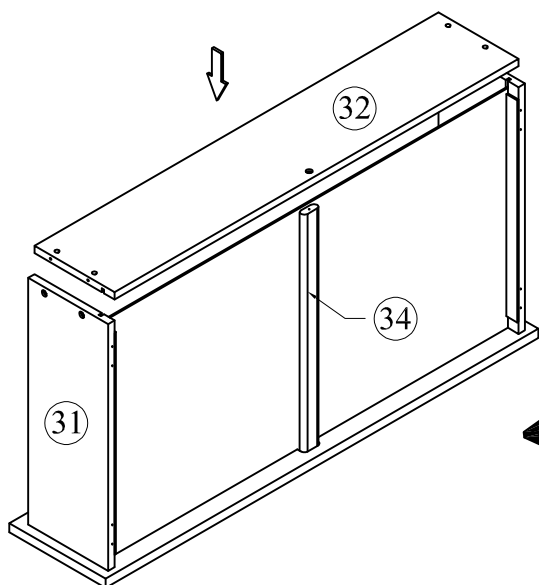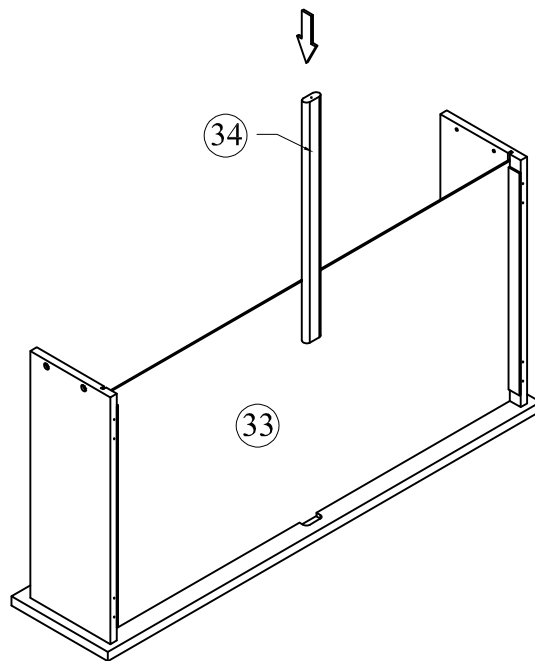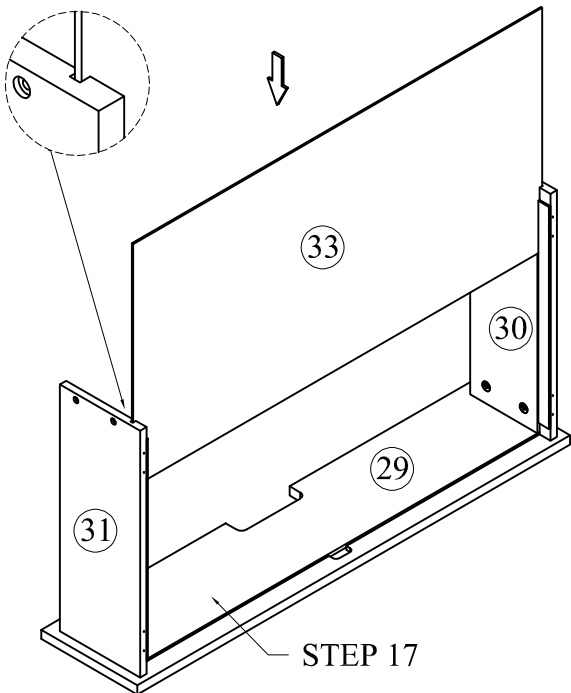


STEP 19

(K)		02
(O)		01

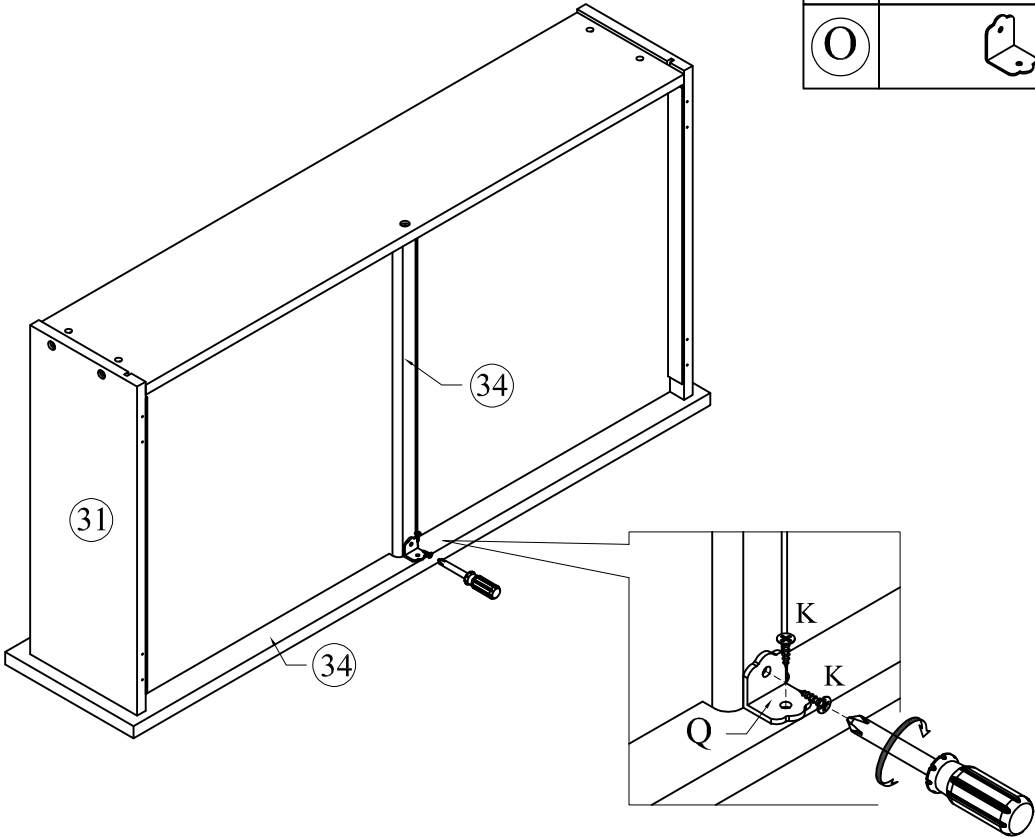

STEP 20


(K)		16
(P)		04

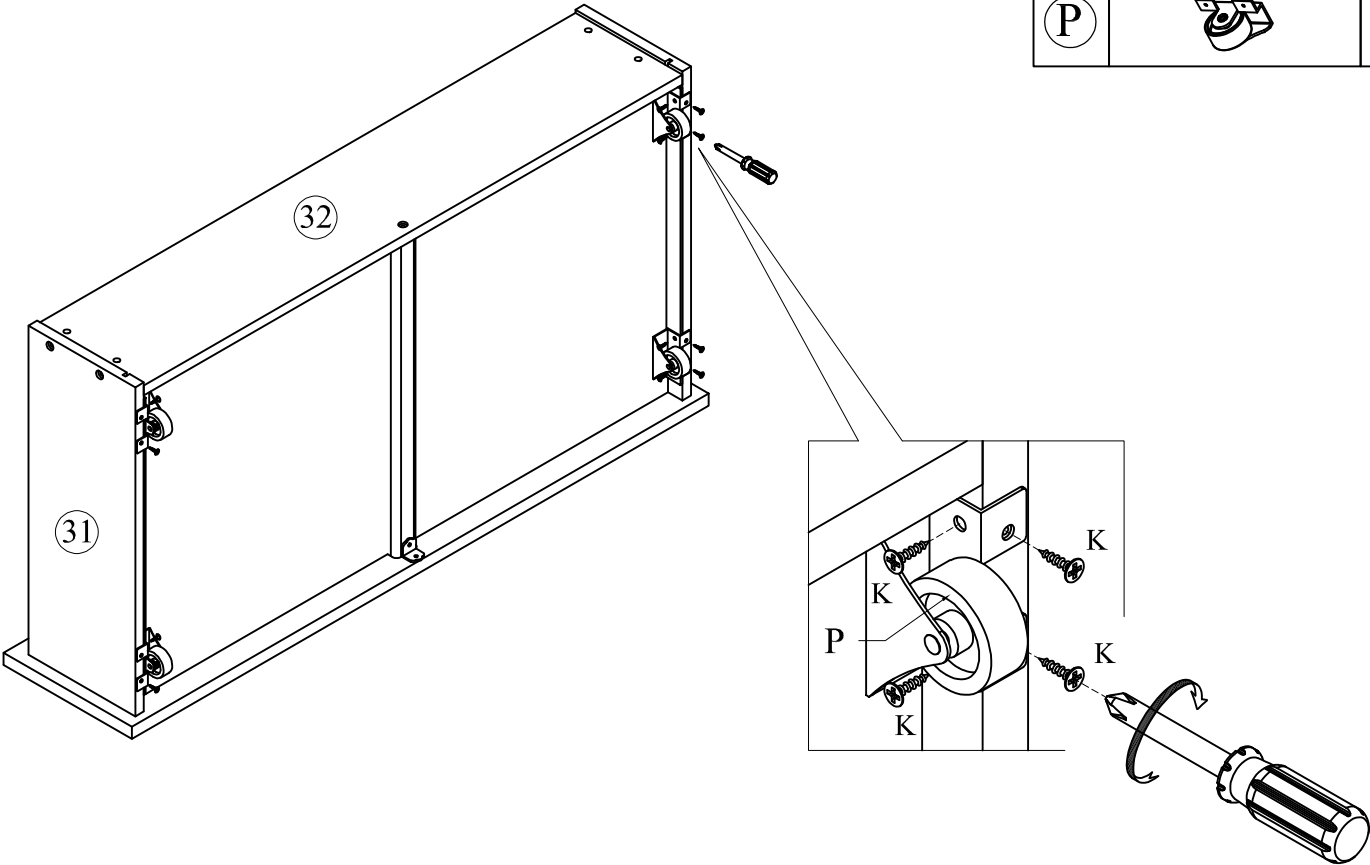


STEP 21

(K)		18
(M)		05
(N)		04
(O)		01
(P)		04

* ...Repeat the assembly steps from Step 16 to Step 20 to complete the second Drawer.

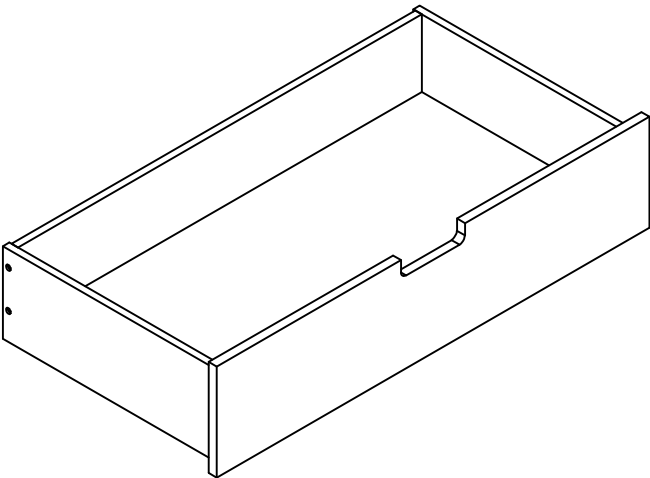


DRAWER 1

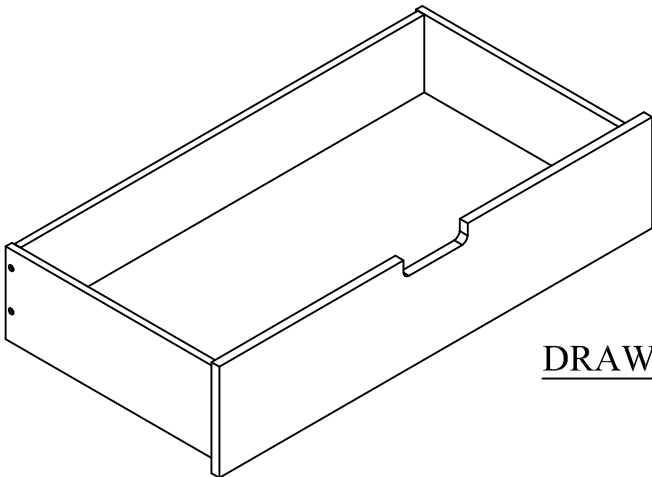


DRAWER 2

STEP 22


M		08
R		04

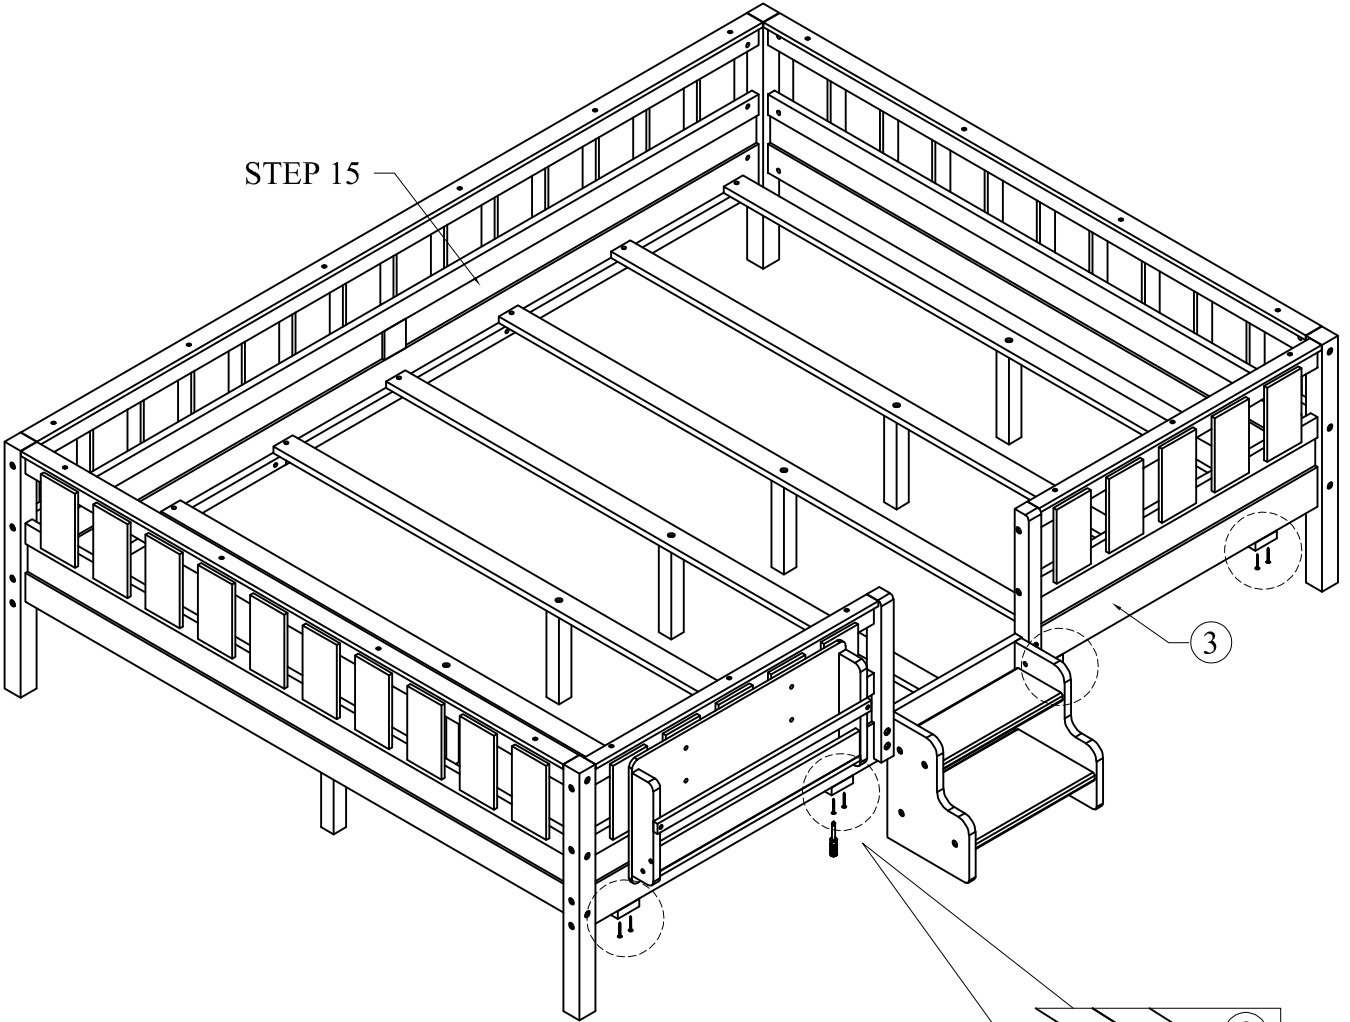

The wooden stops are securely attached underneath the slat support (part 3)..

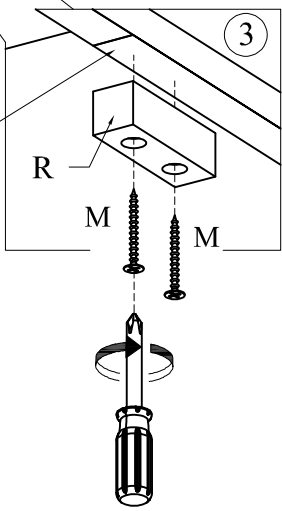

STEP 23

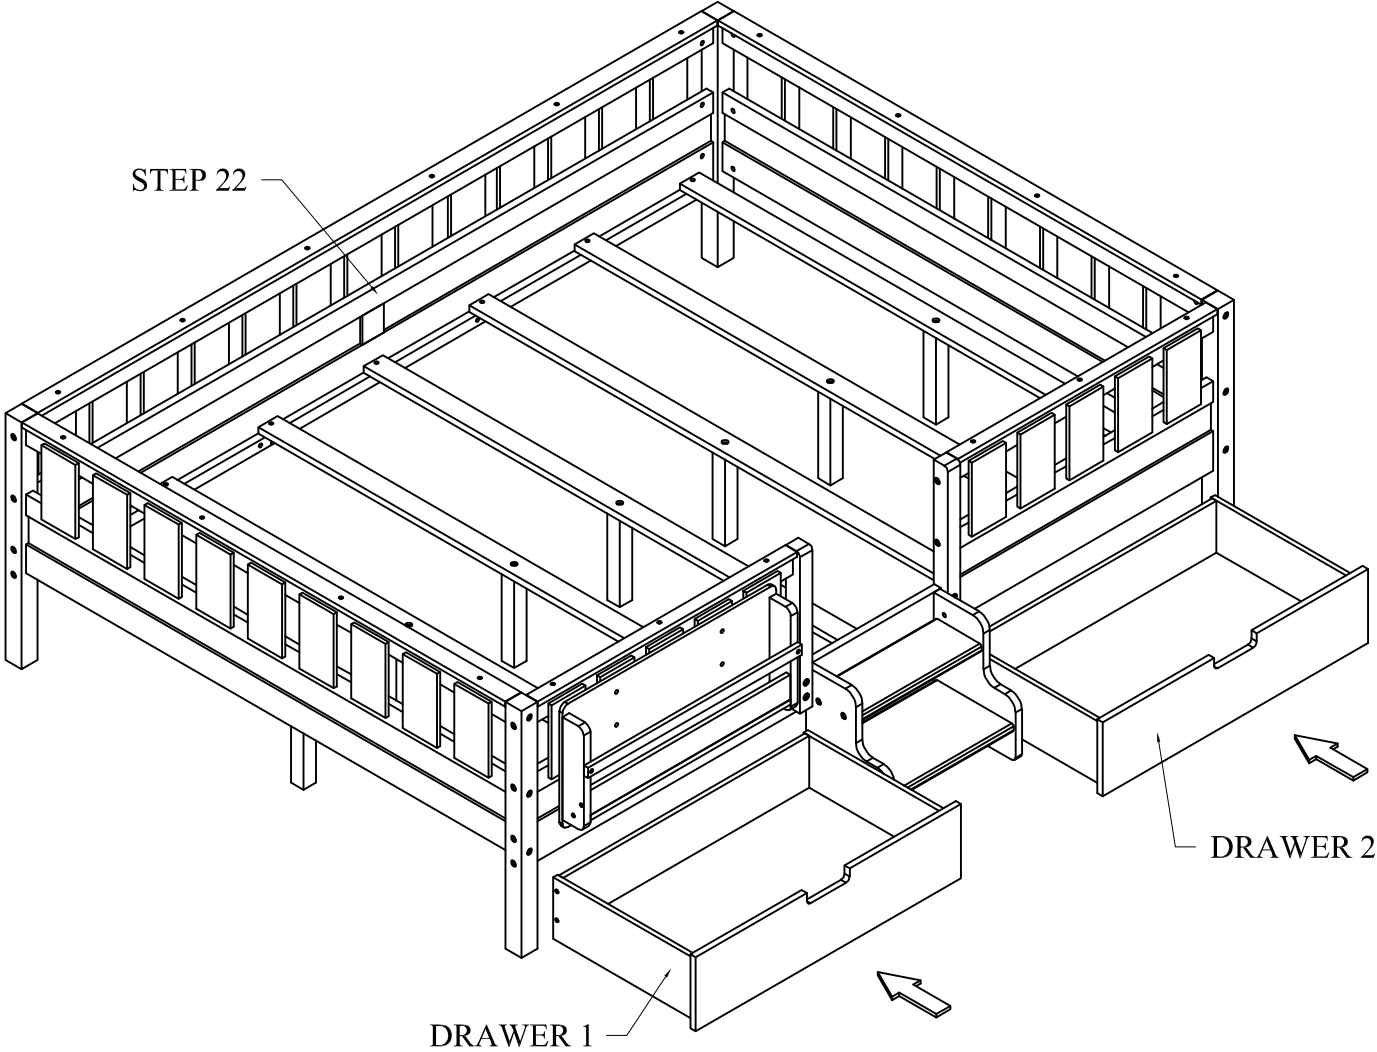

Check and fully tighten all bolts in the assembly steps to ensure a solid structure.

COMPLETED

