


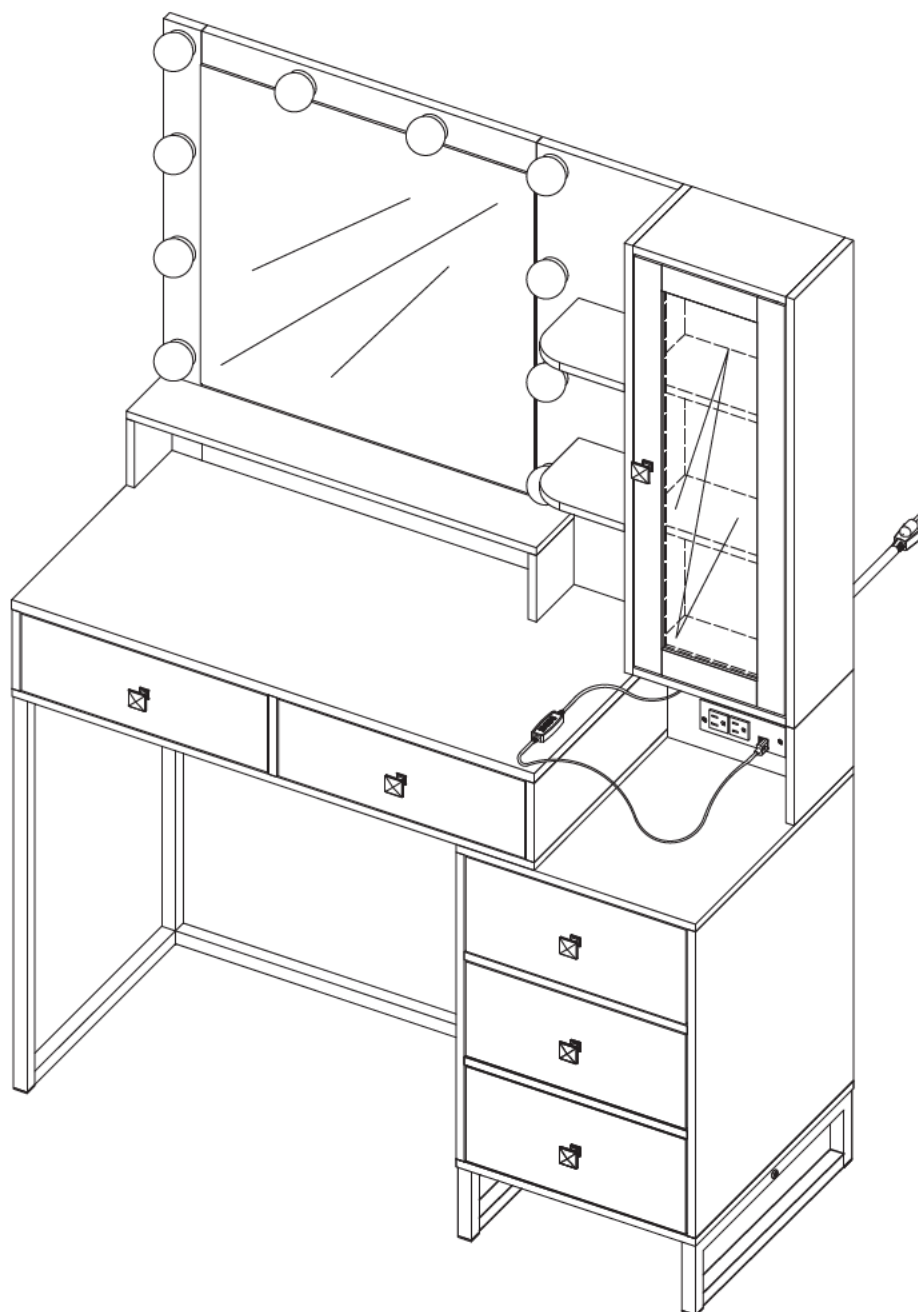
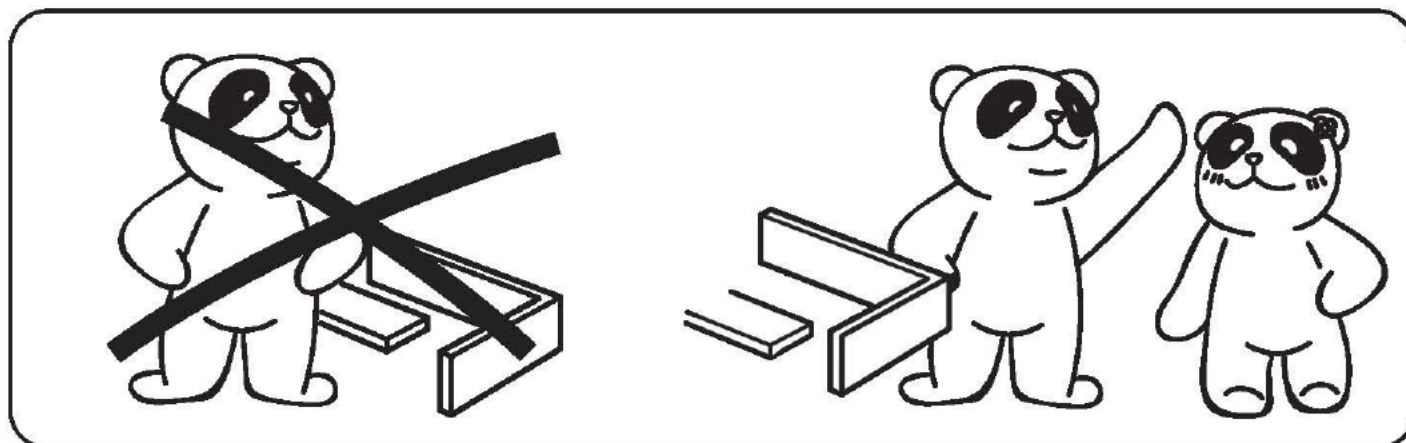


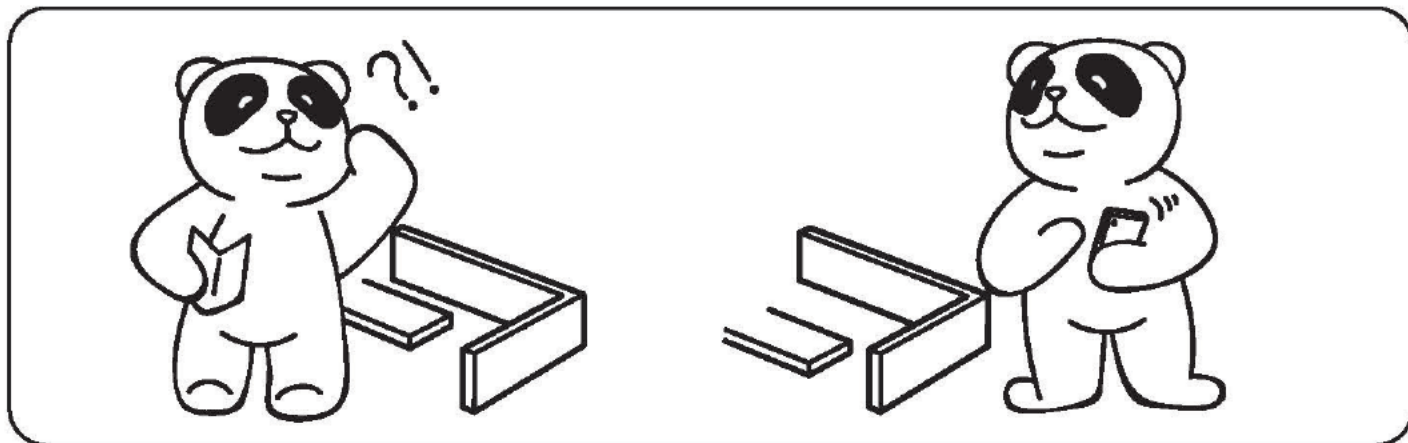

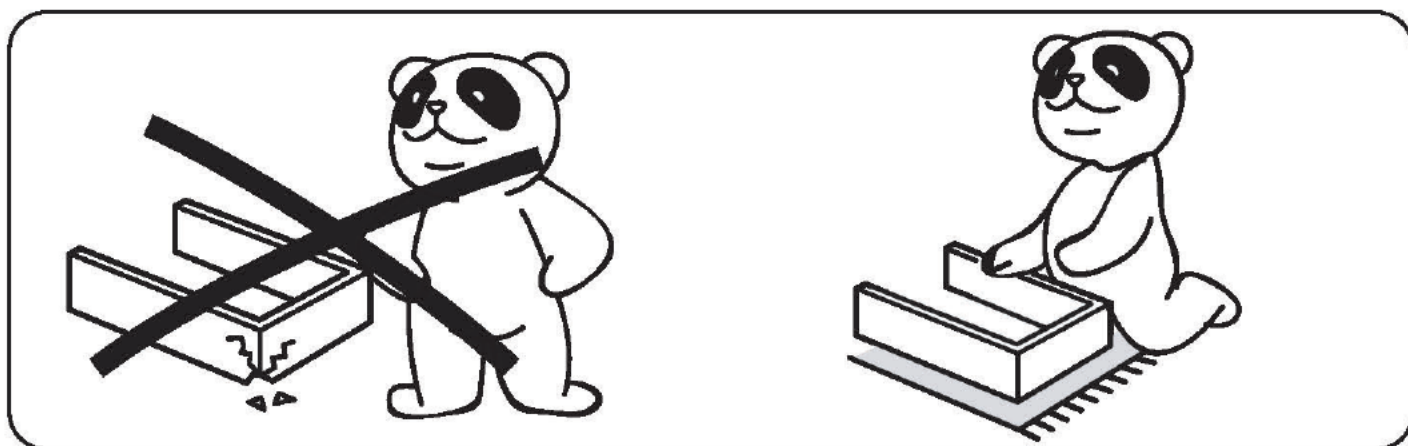


Installation parts

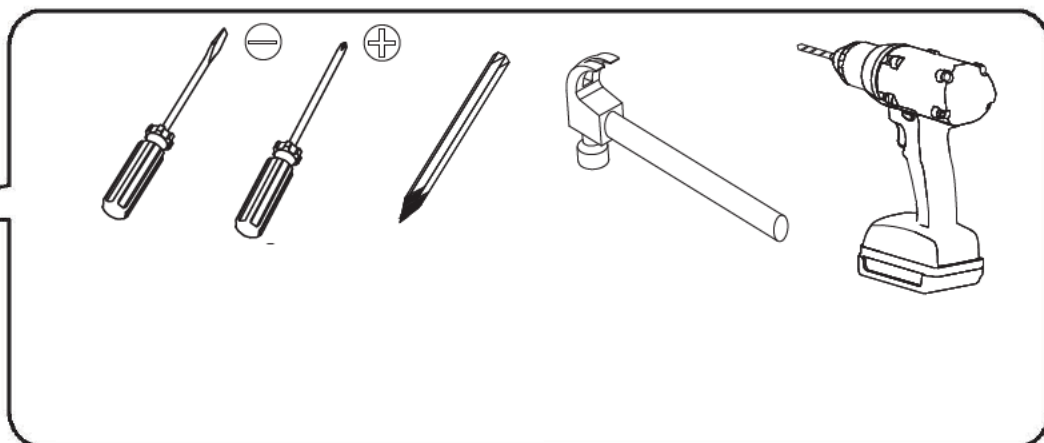

A

x47(+2)
Ø6x35mm



B

x54(+2)
Ø15x10mm



C

x72(+3)
Ø6x30mm




D

x62(+3)
Ø3.5x10mm



E2

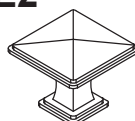

E

x6




F

x48(+3)
Ø4x35mm




G

x2

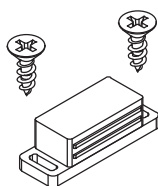


H

x1



I

x1



J

x1

M4mm



K

x2

Ø6x30mm



L

x4

Ø20mm



M

x2



N

x4


Ø4x12mm



O


x7

Ø6x55mm

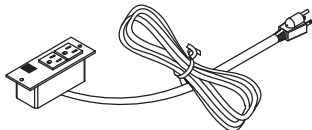

P

x1



Q

x5


Ø6x50mm



R

x12


Ø9x9.5mm



S

x4


Ø6x40mm



T

x6

Ø6x30mm



U


x18(+2)



V

x2

Ø6x15mm



W

x2


Ø8x20mm



X


x2

Ø3.5x12mm

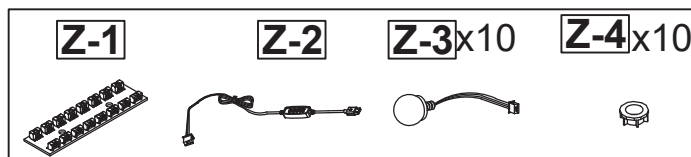

Z


x1



CL

x5

L300mm



DL

x5


L300mm



CR

x5

L300mm




DR

x5

L300mm

Install the footstool

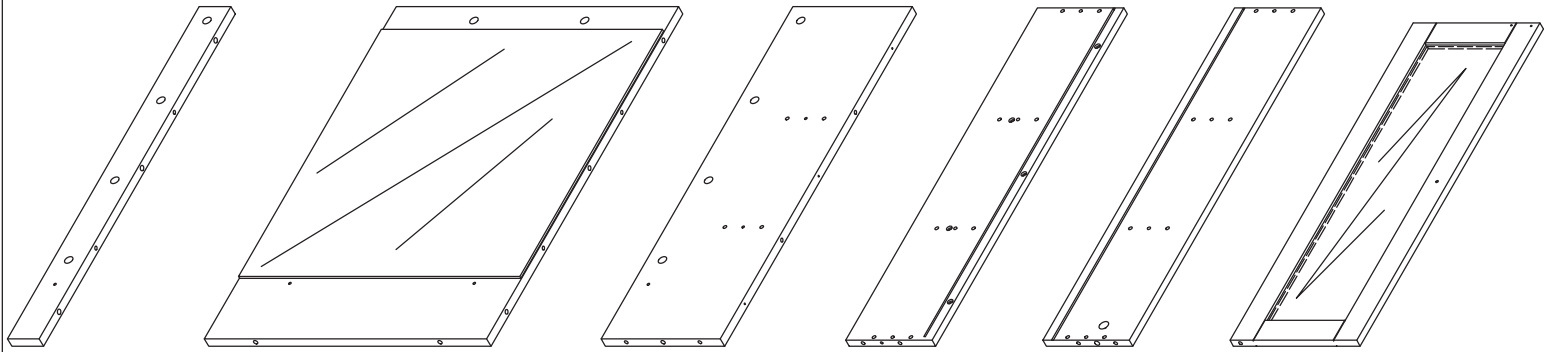

1
x1


2
x1

3
x1


4
x1

5
x1


6
x1

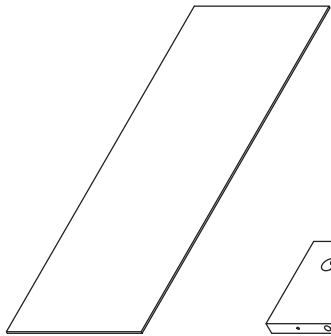


7
x1




8
x1




9
x1

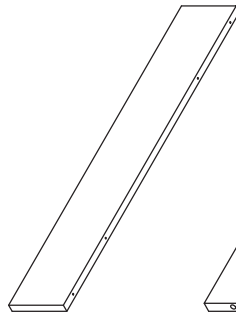


10
x1




11
x2

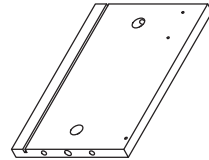


12
x1

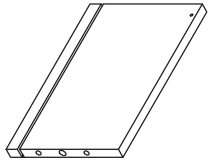


13
x1

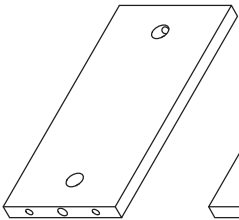


14
x2

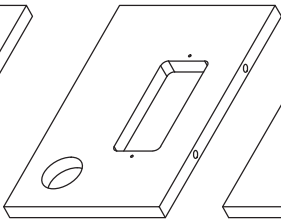


15
x1

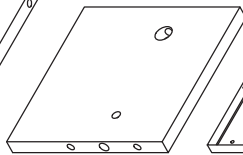


16
x1

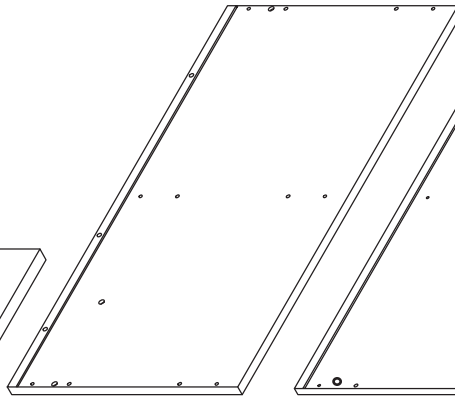


17
x1

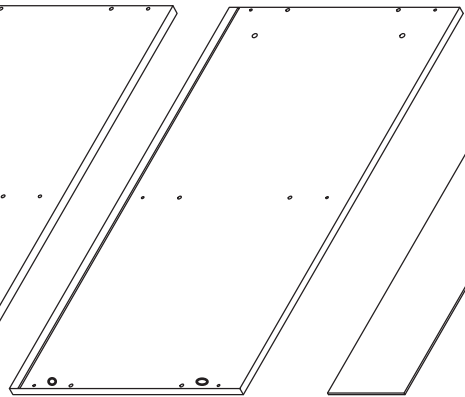


18
x1

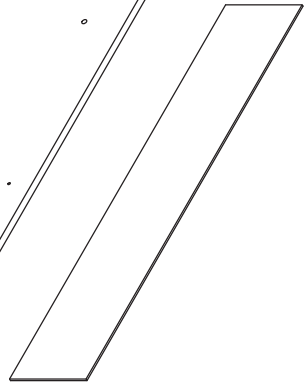


19
x1

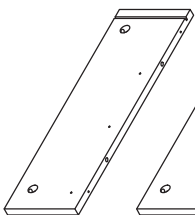


20
x1

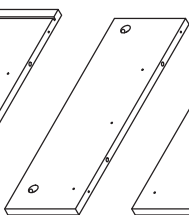


21
x1

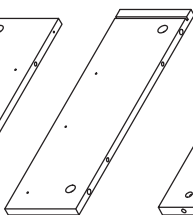


22
x1

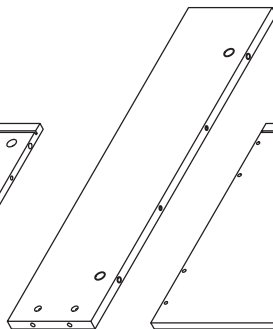


23
x1

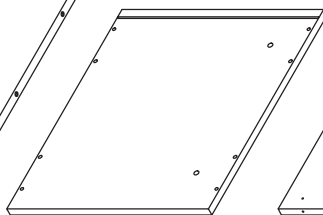


24
x1

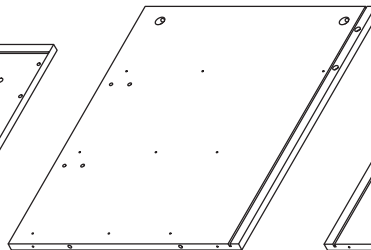


25
x1

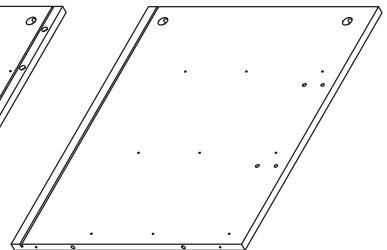


26
x1

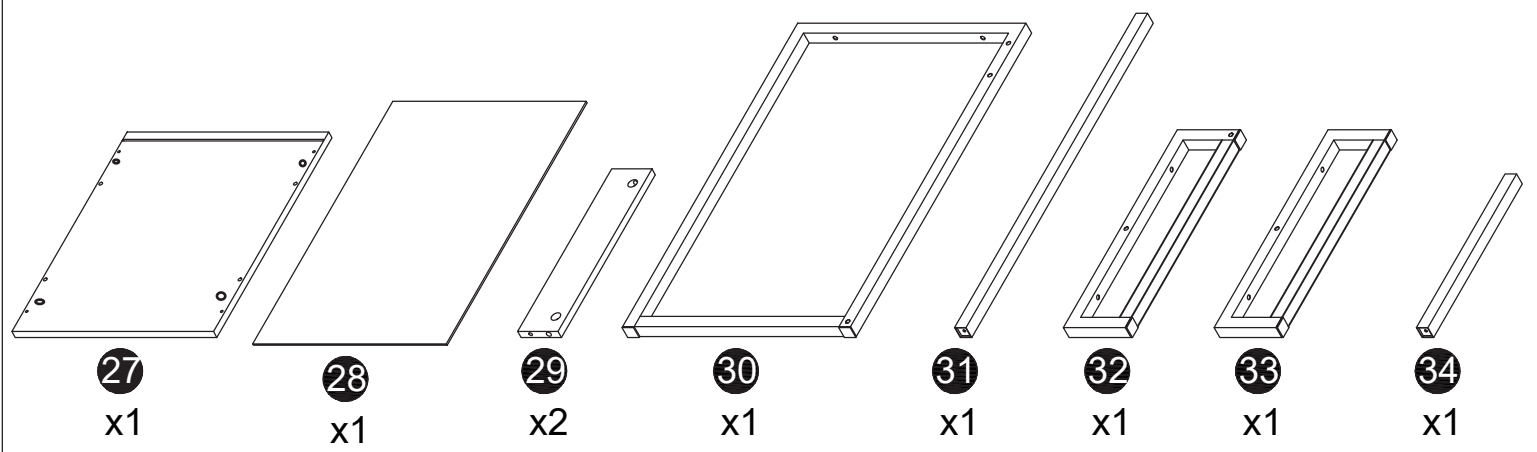


Top Drawer

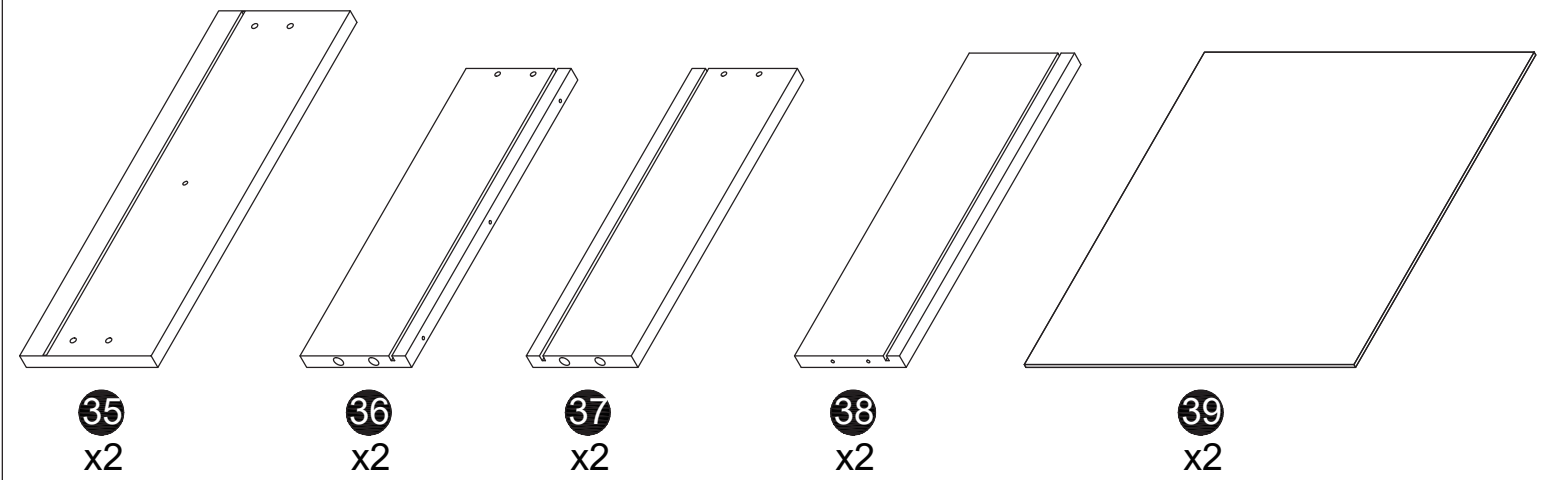


Lower Drawer

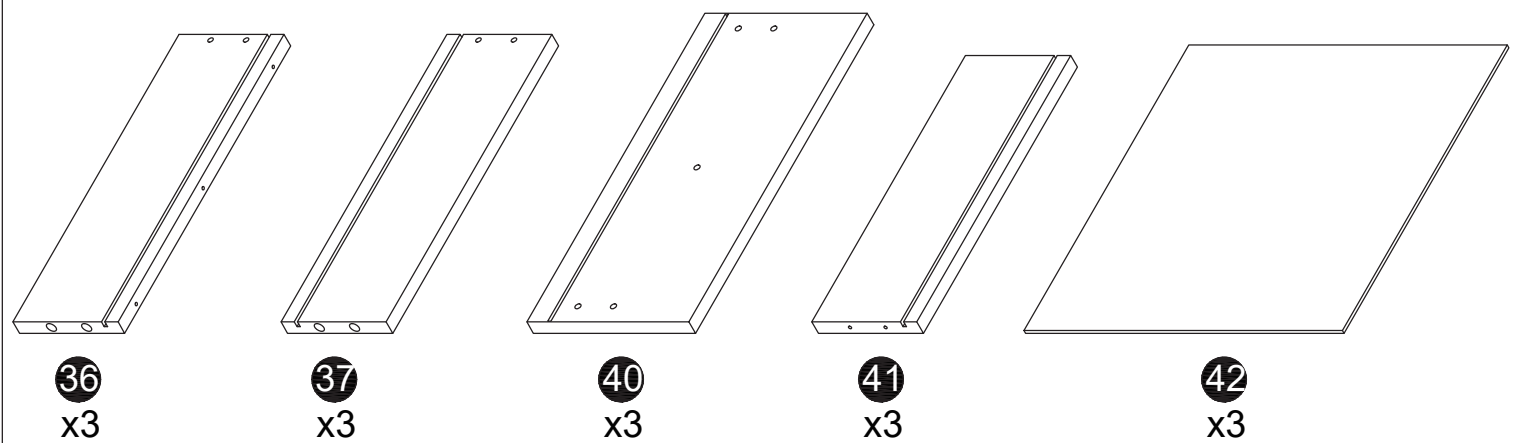


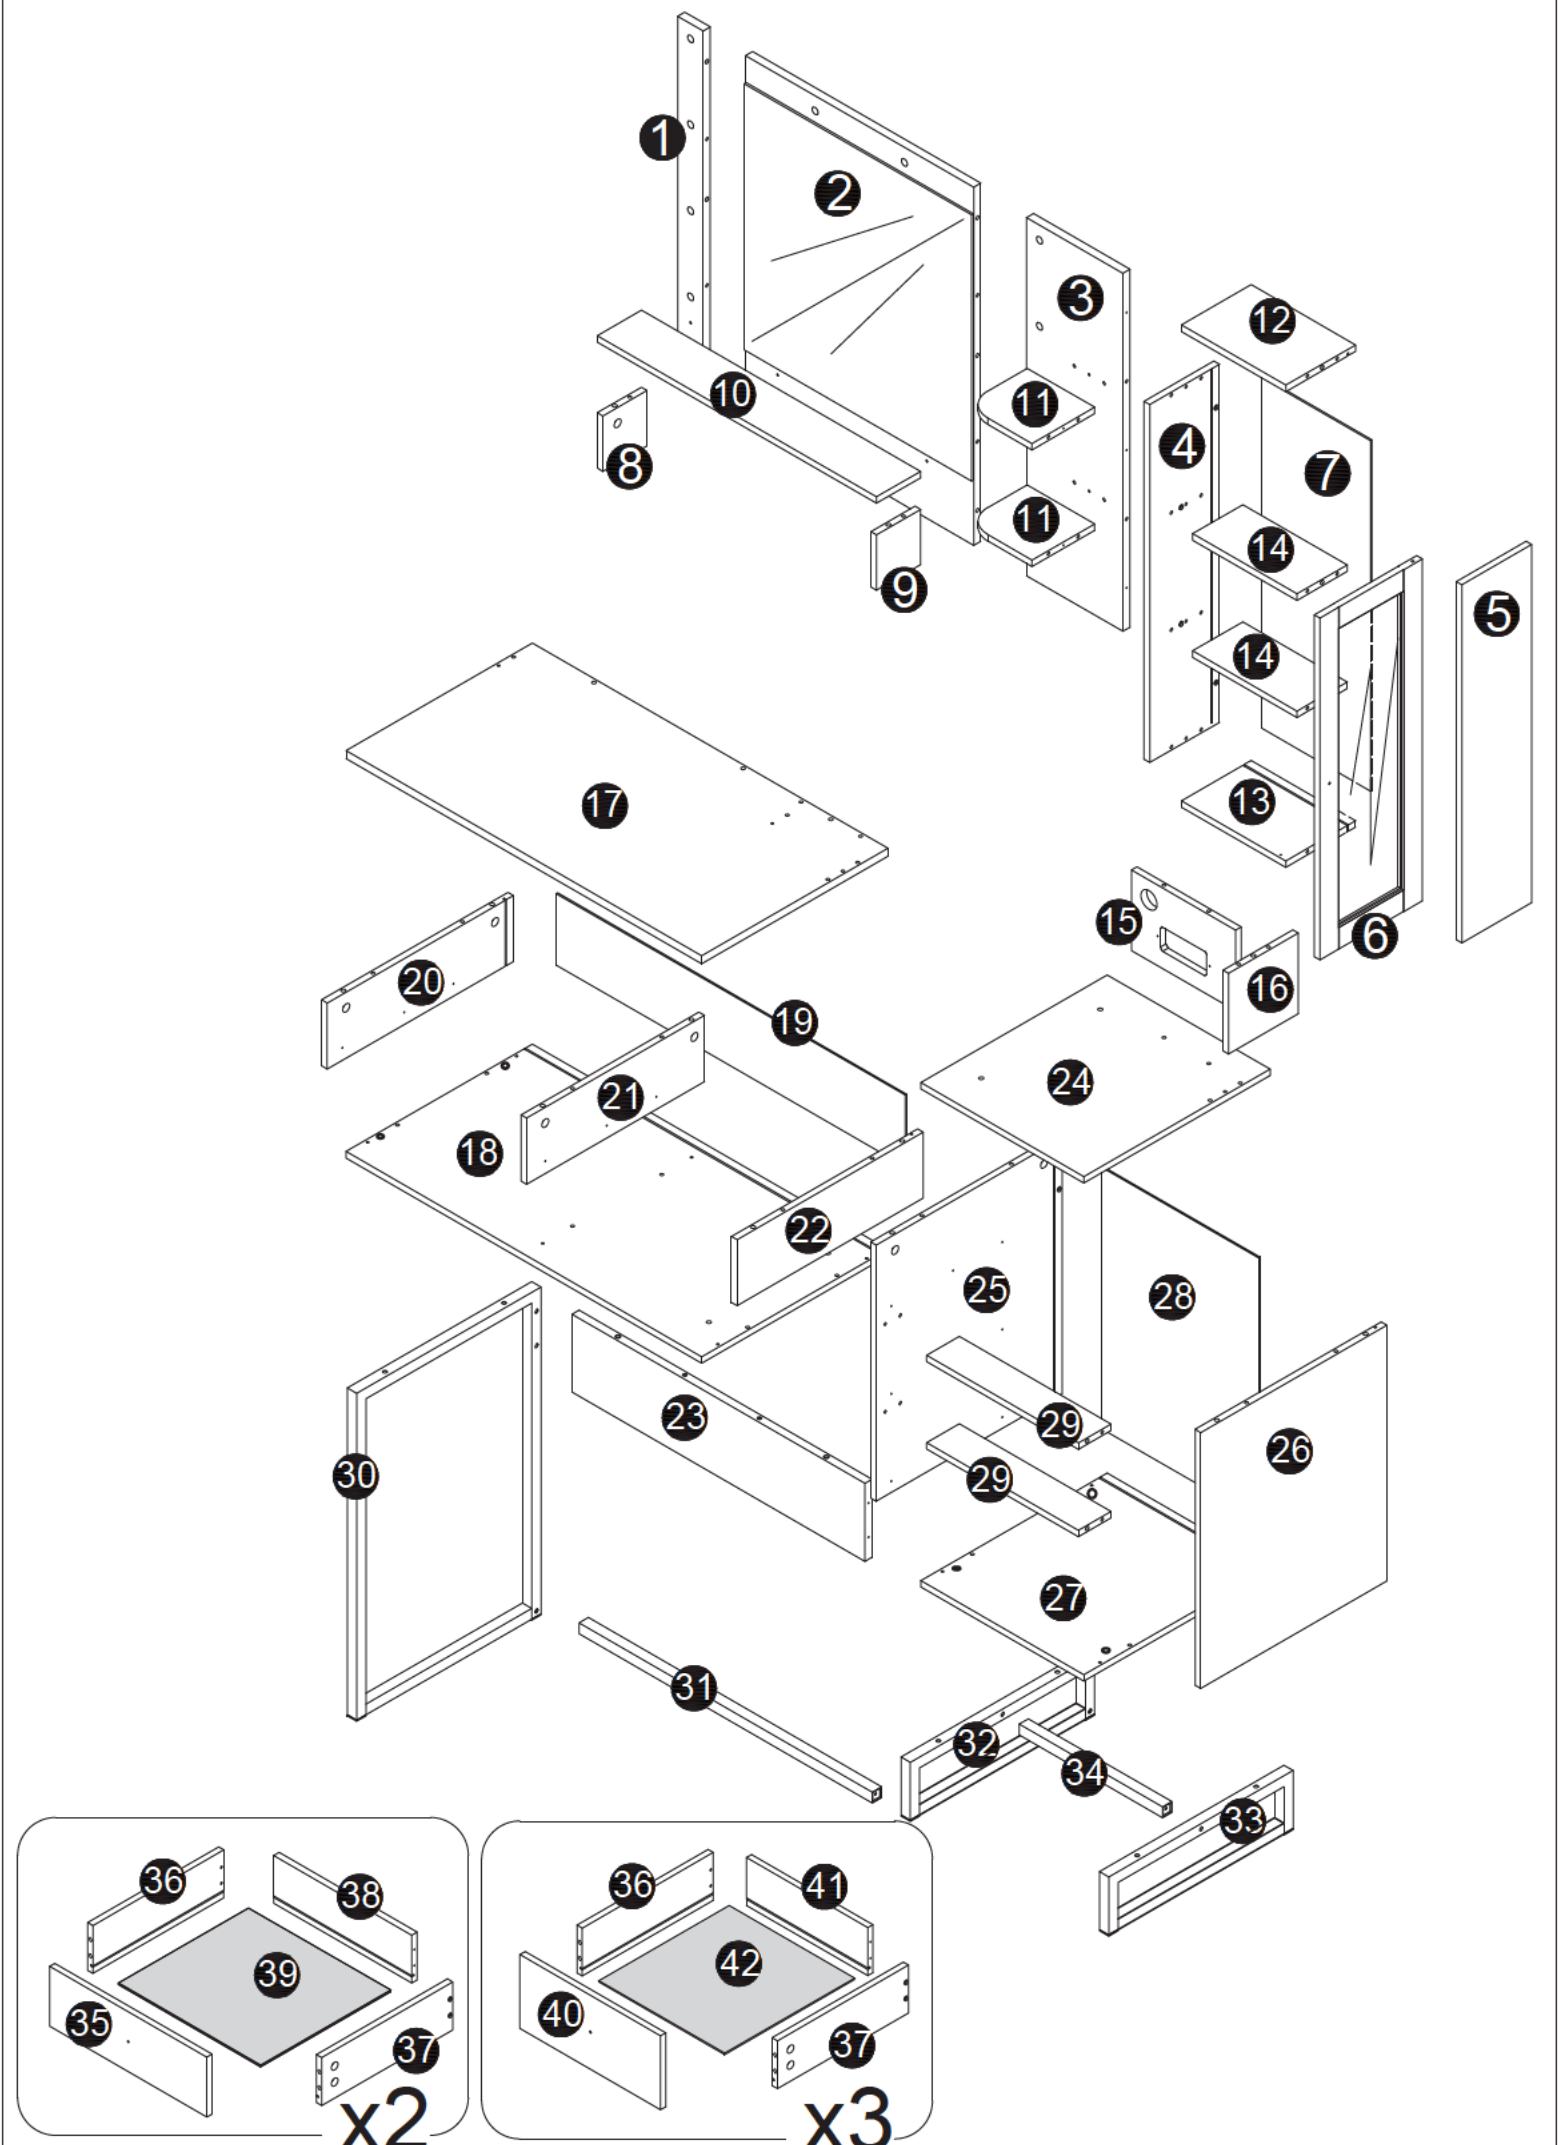


1

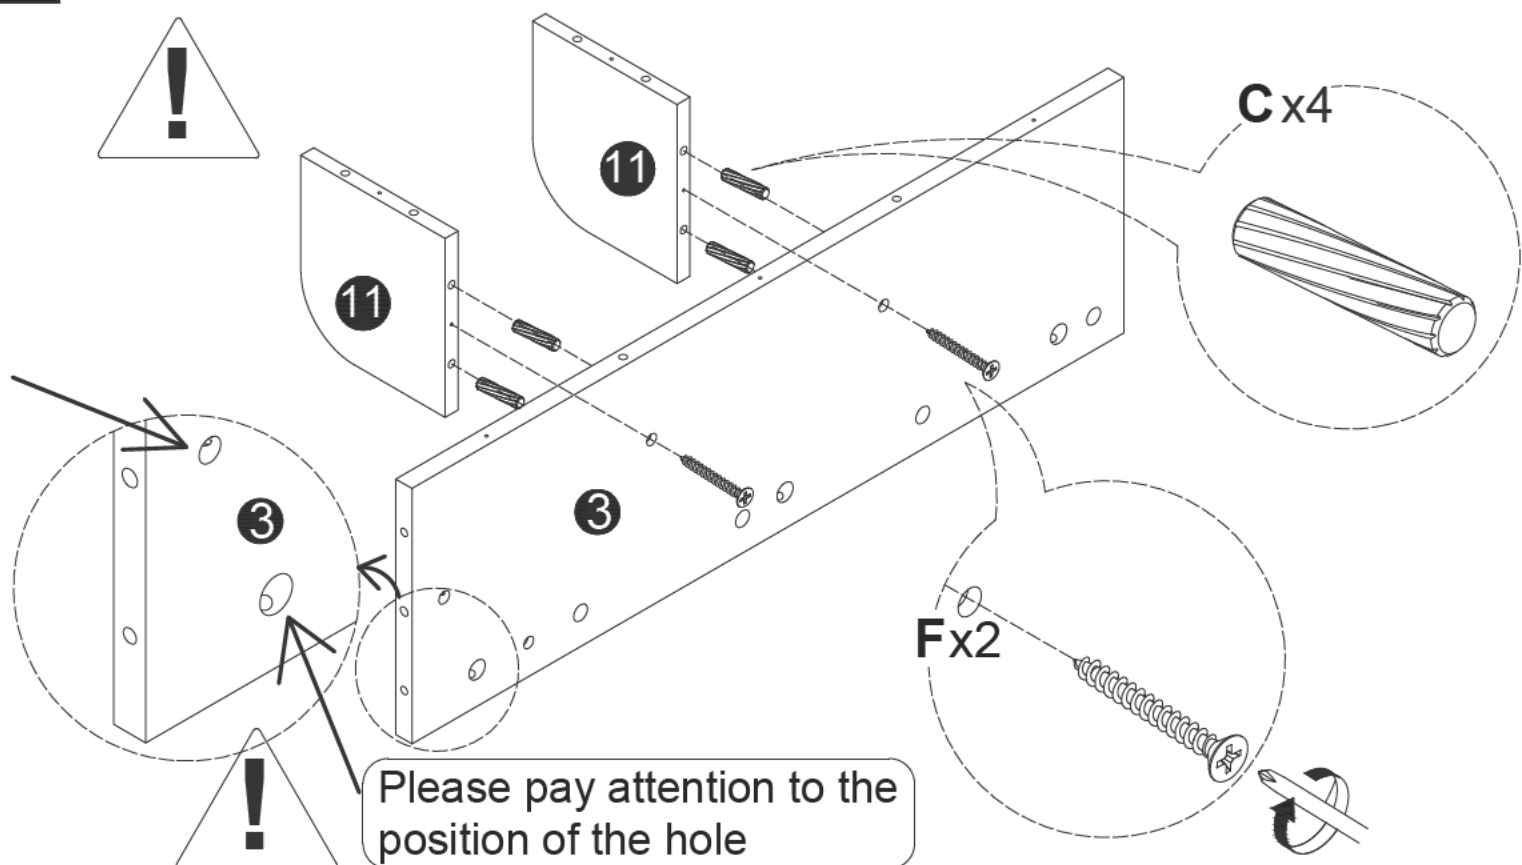


2 NOTE: The board to be installed in the current step is darkened in color.

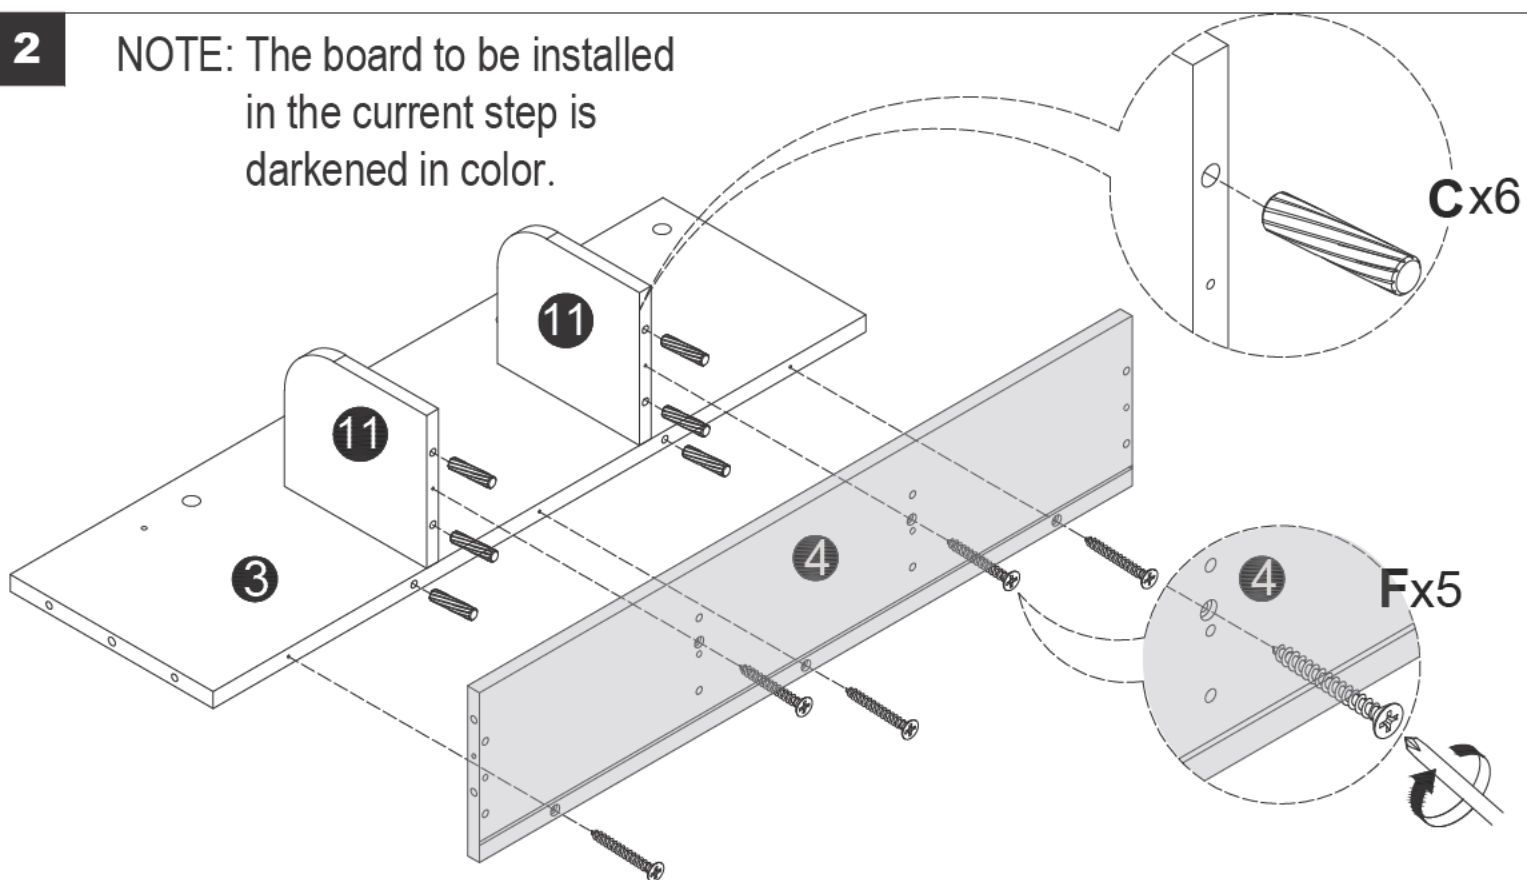


3

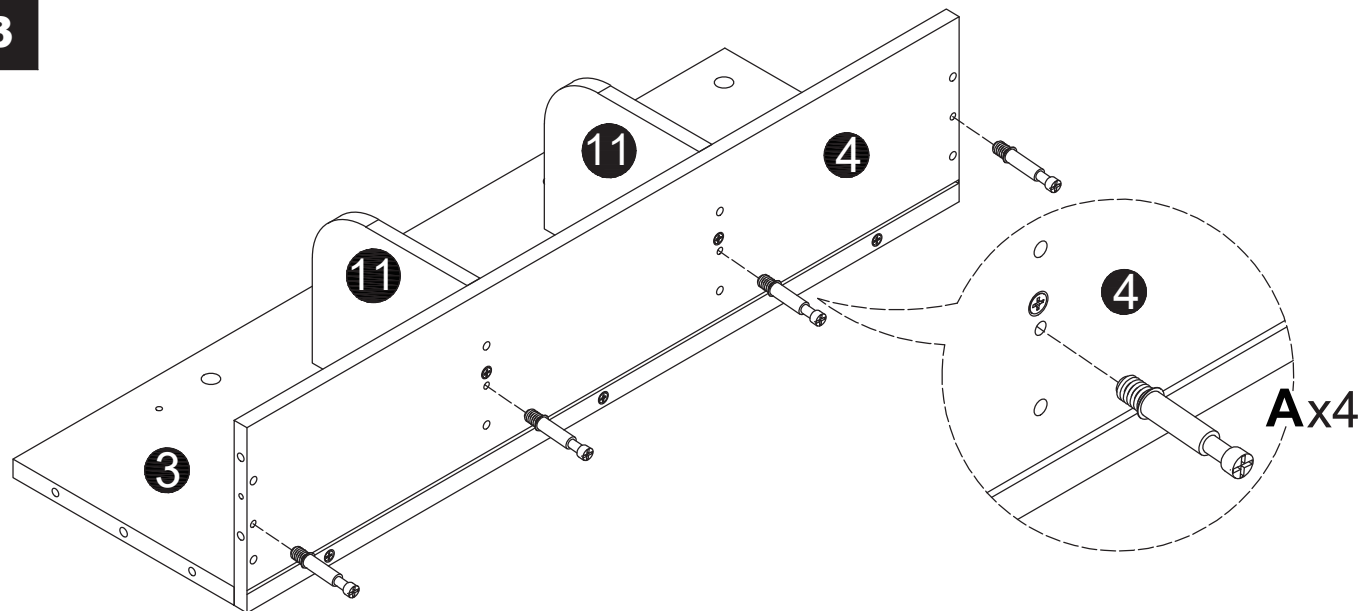


4

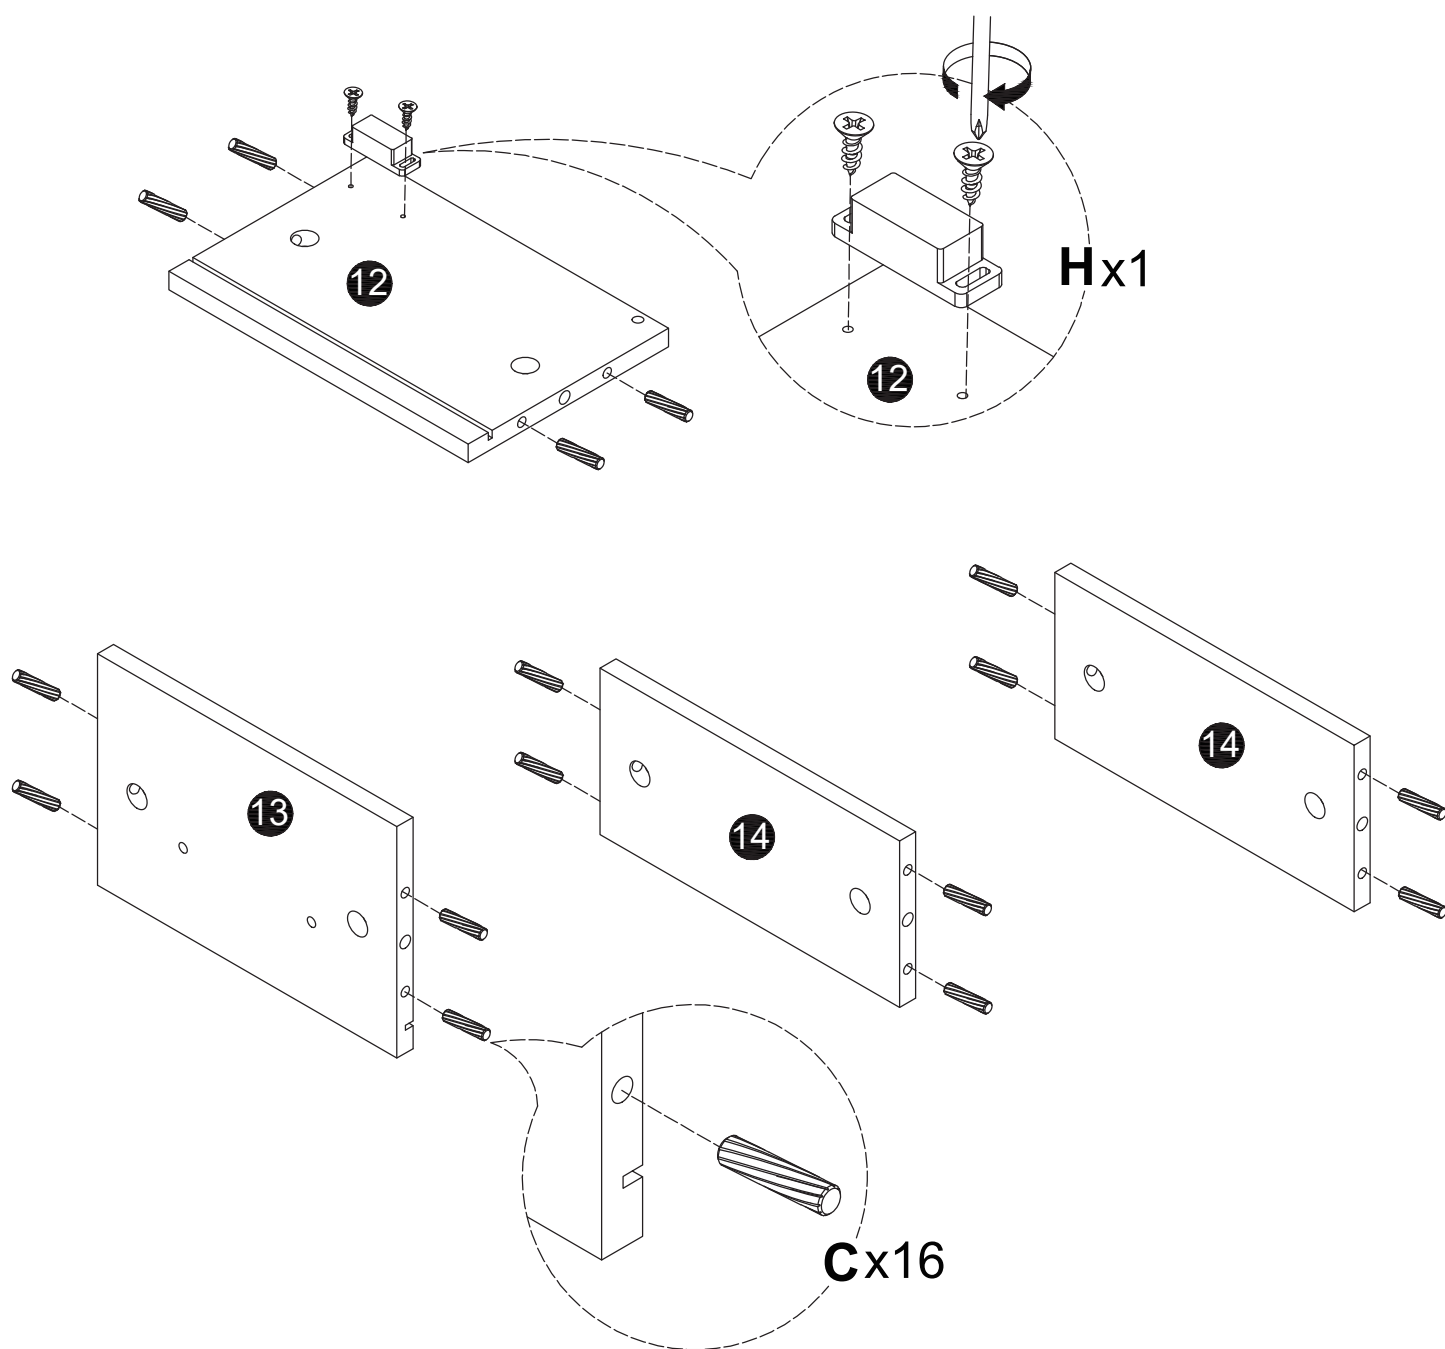


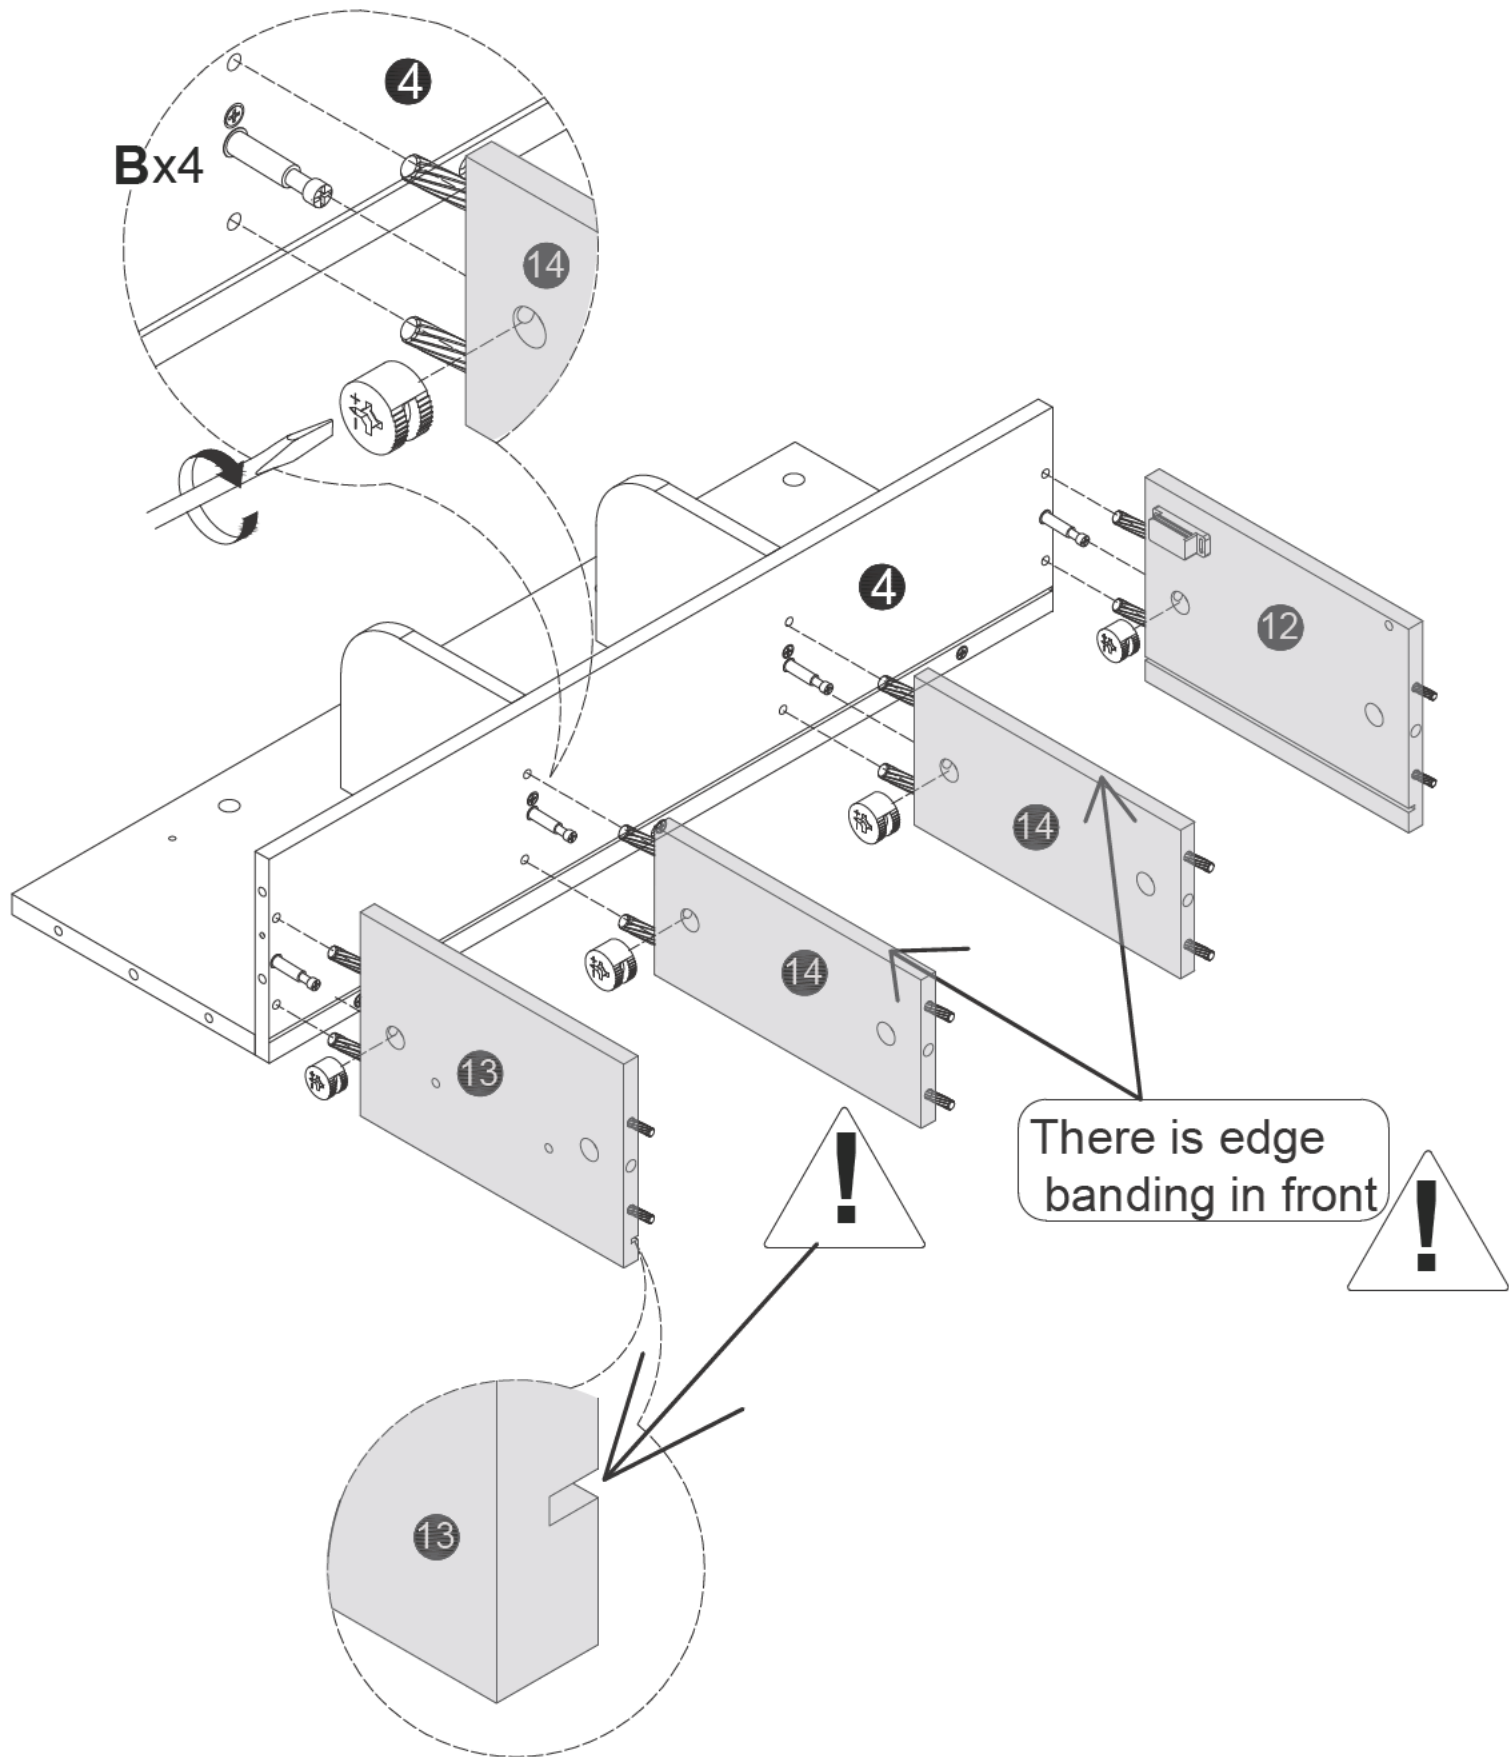


6

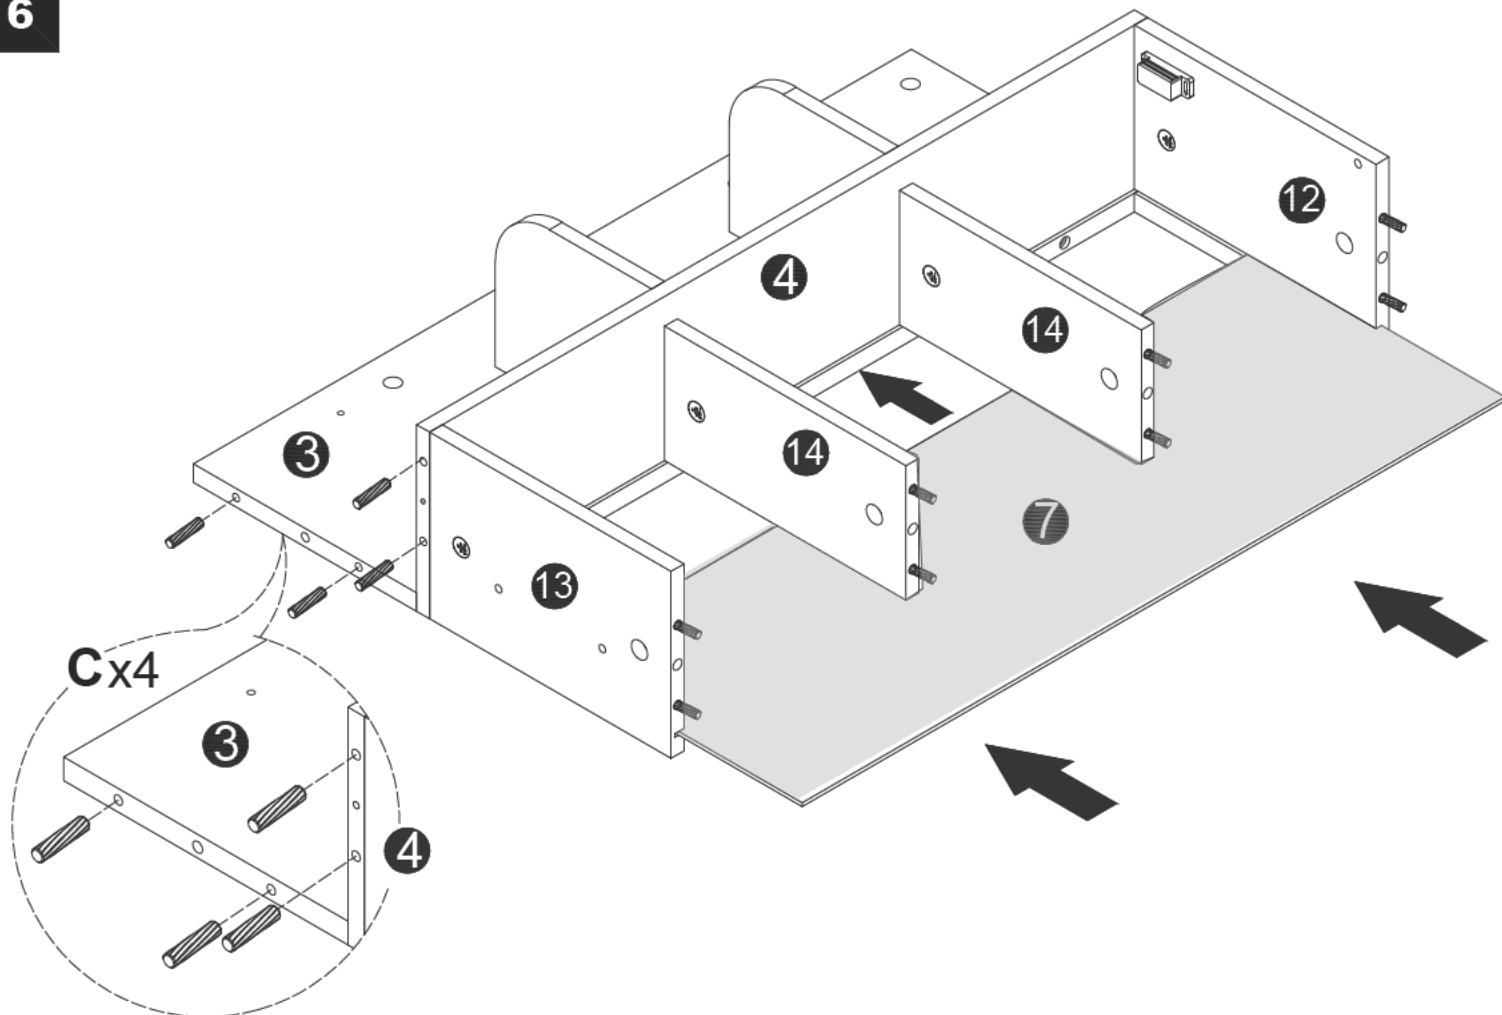


7


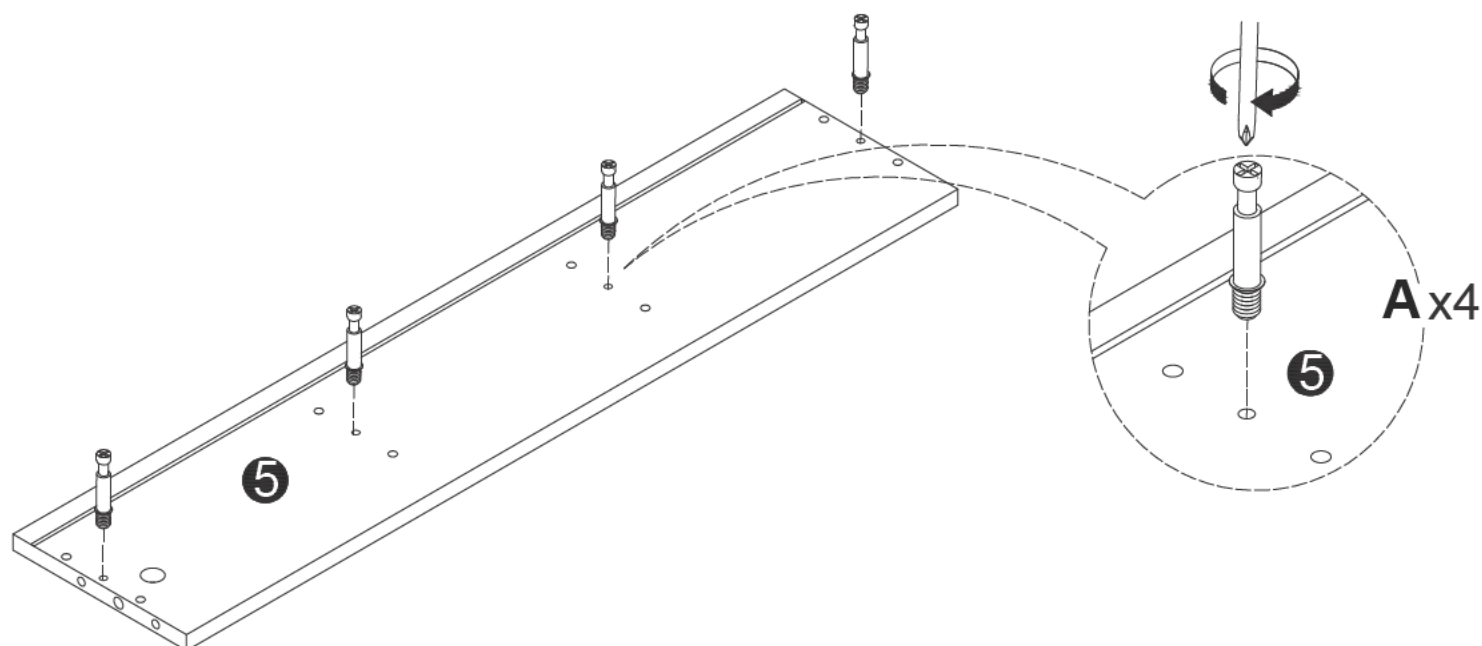


8

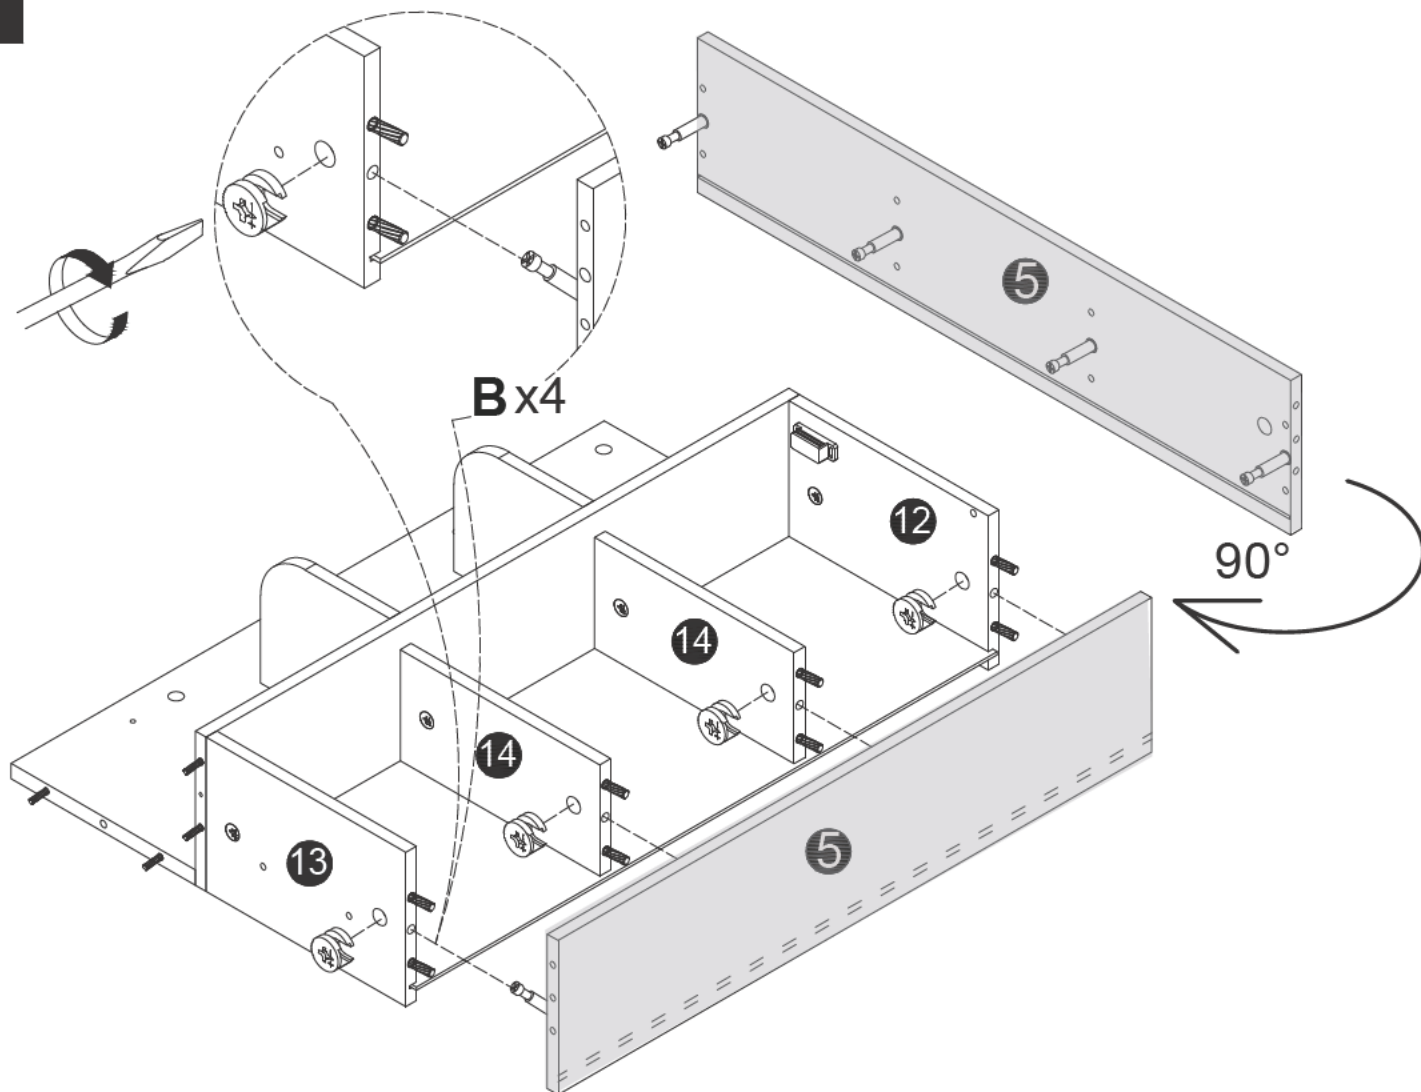


9

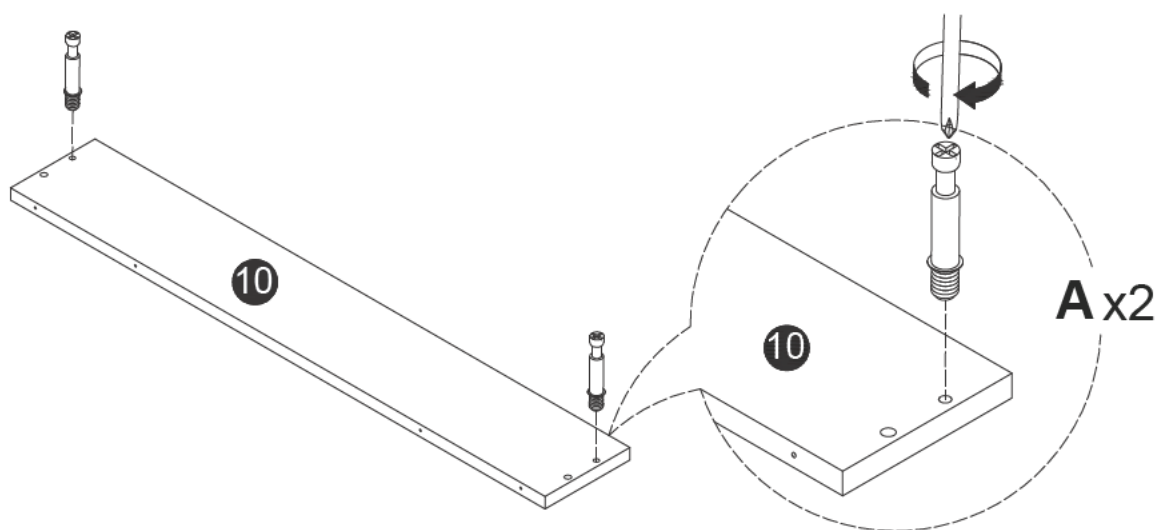


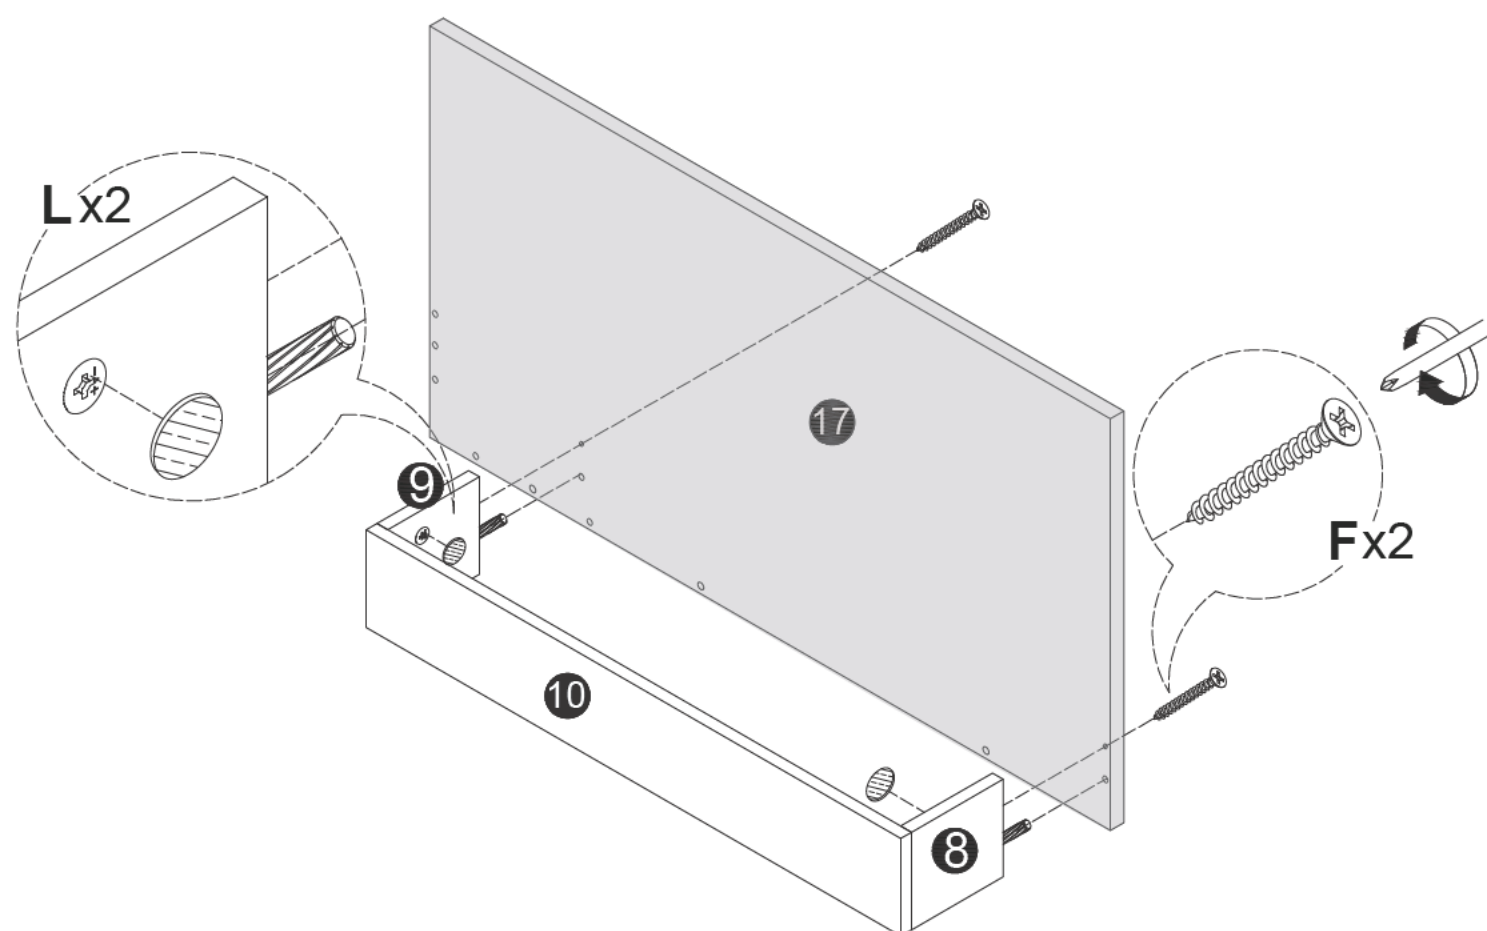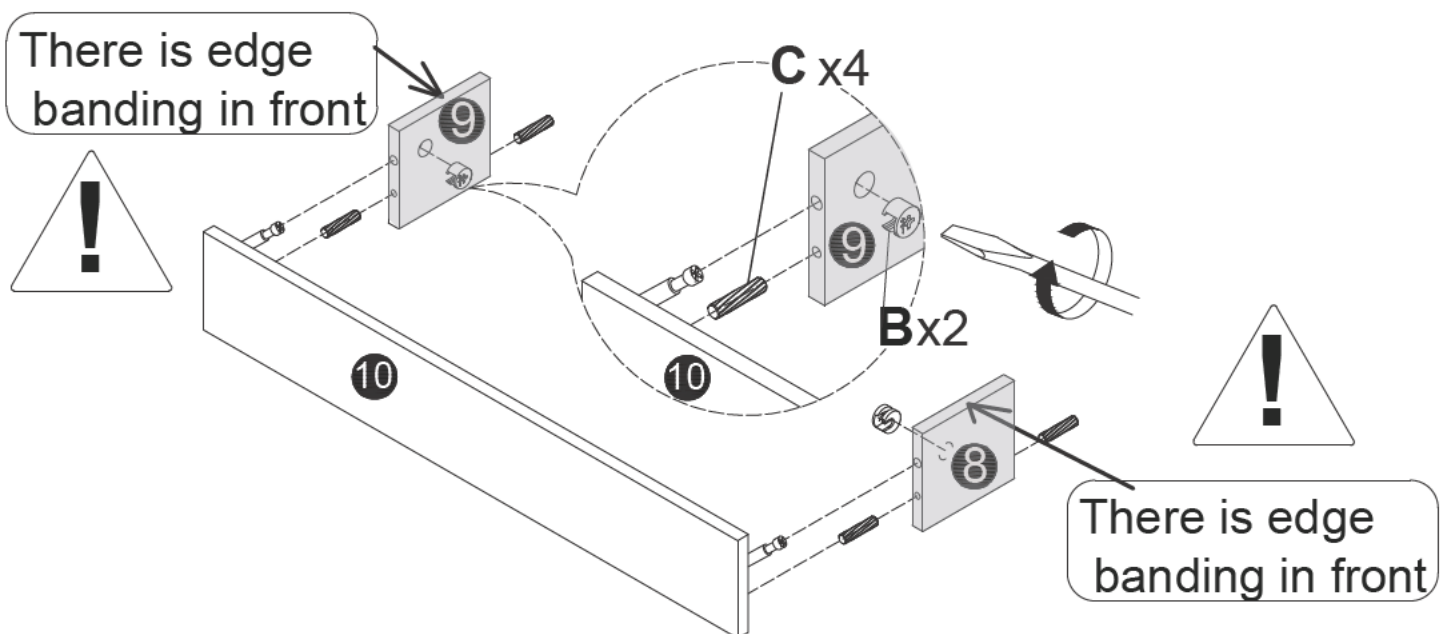



12

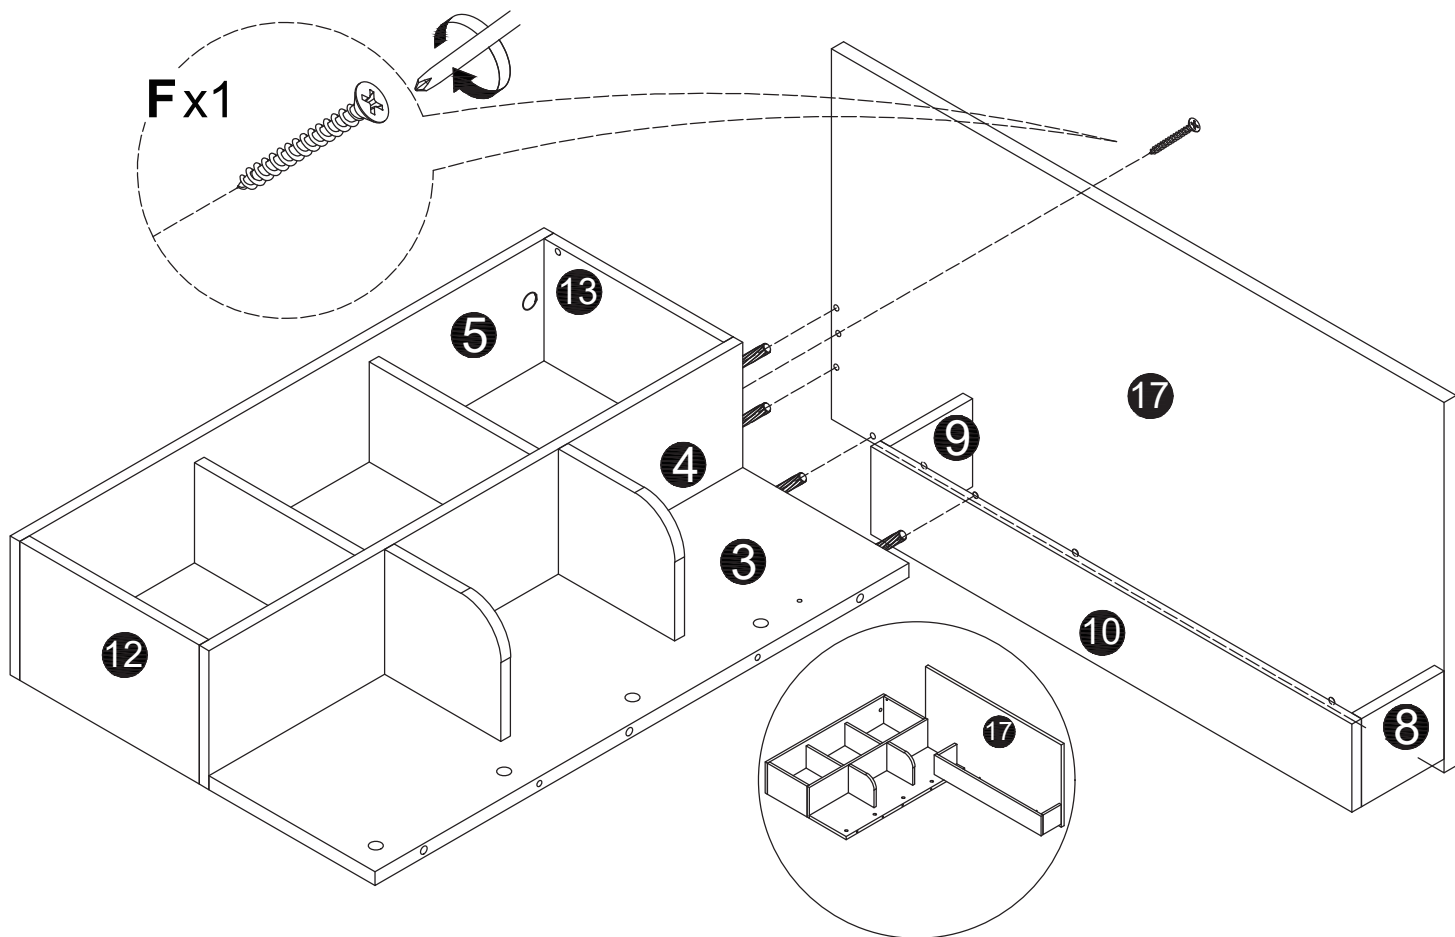





13

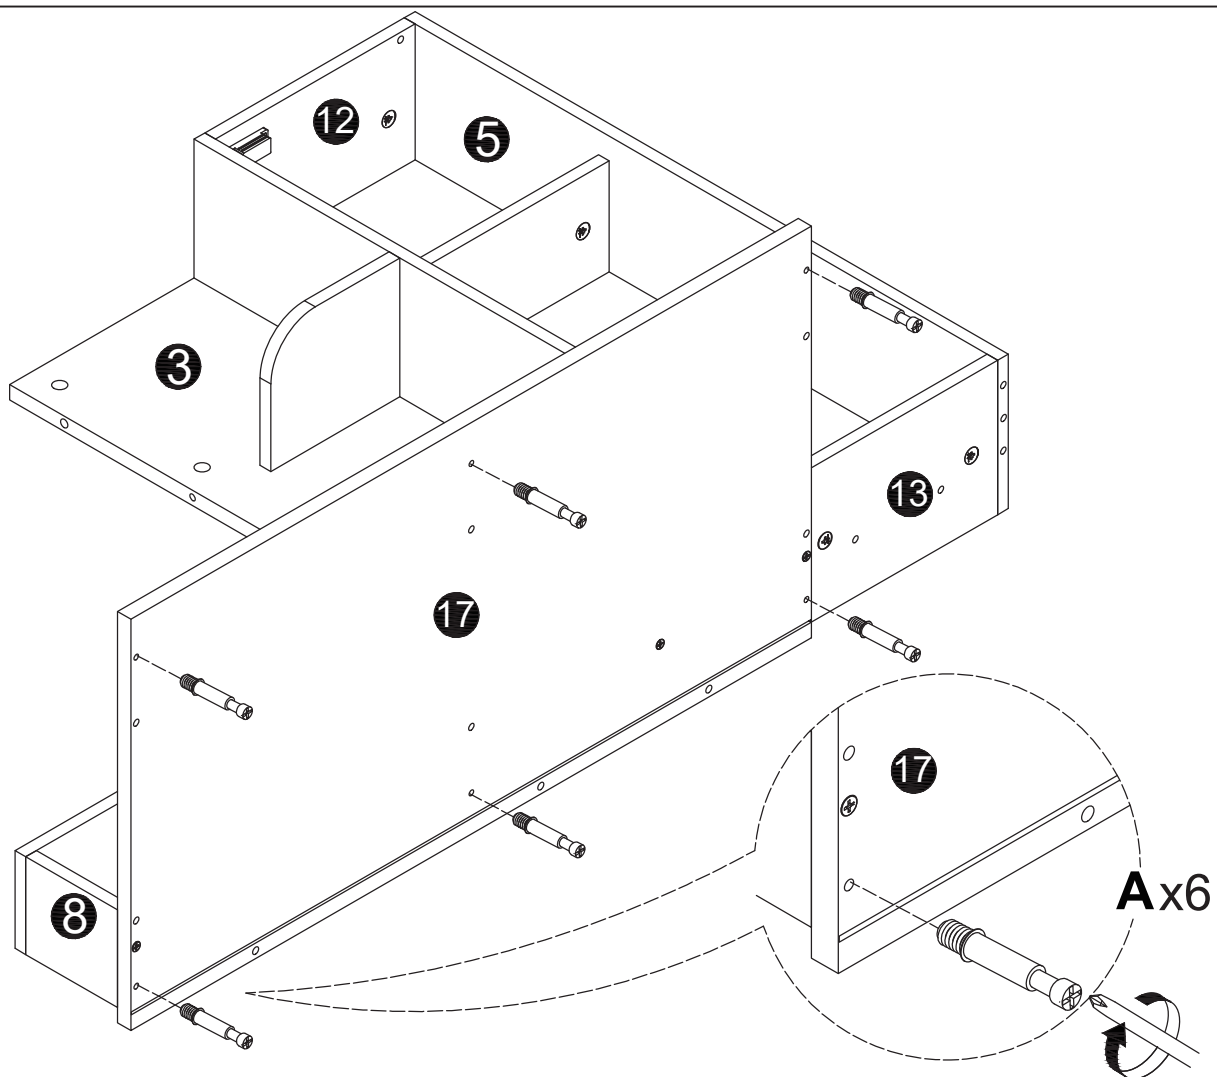



14

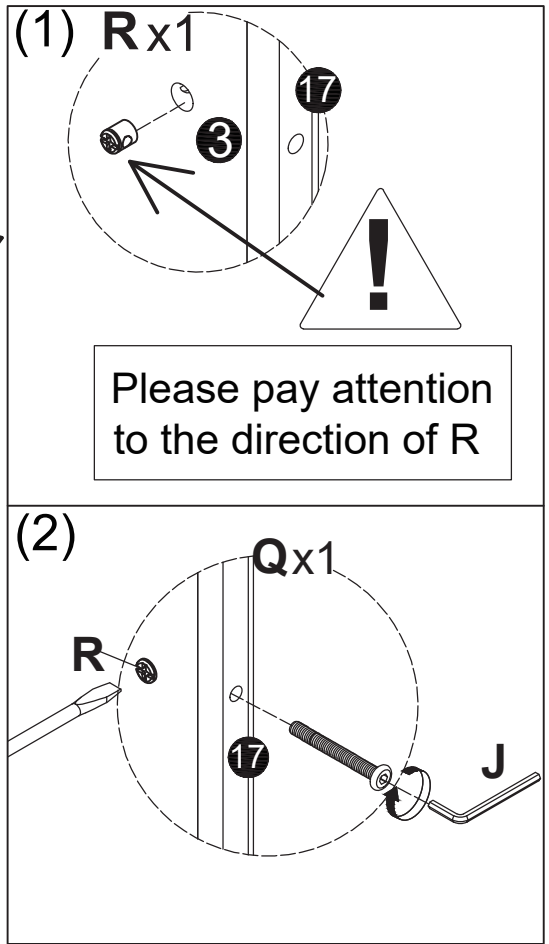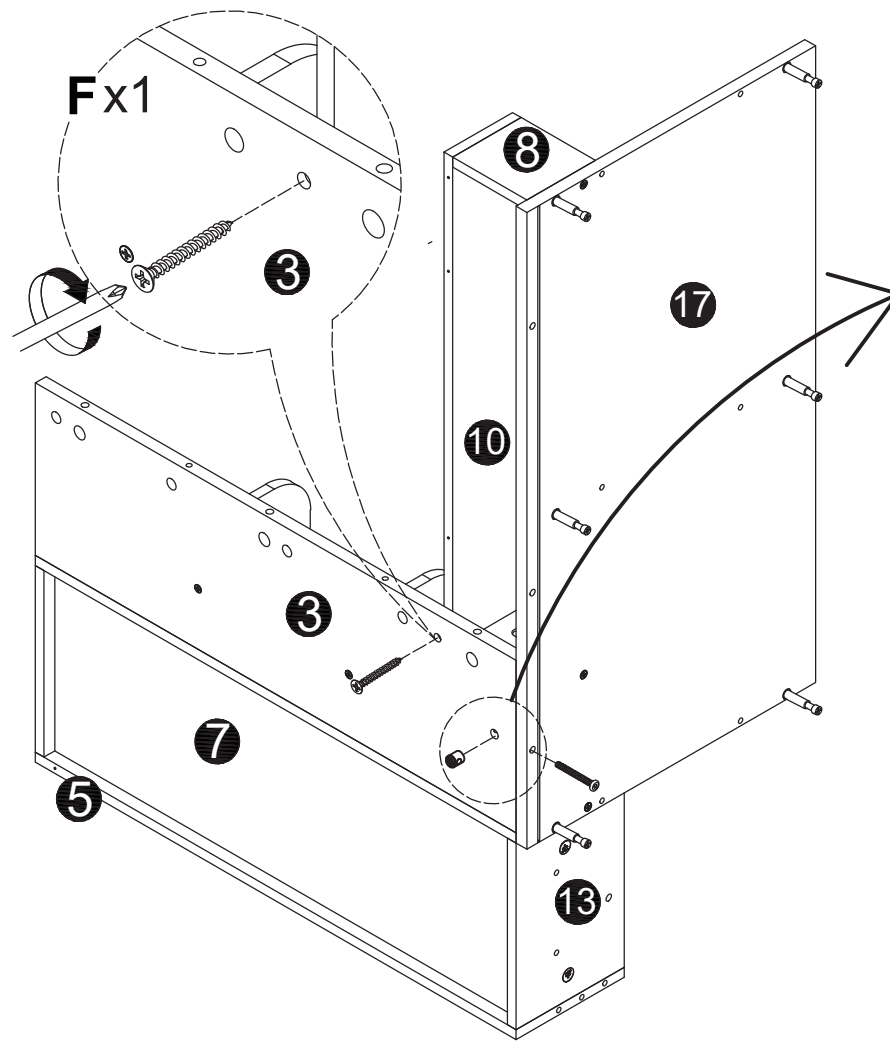

15

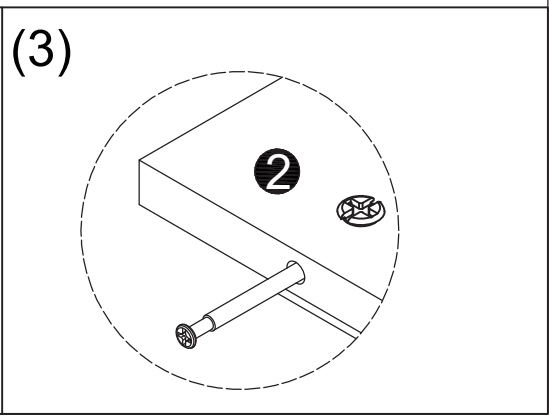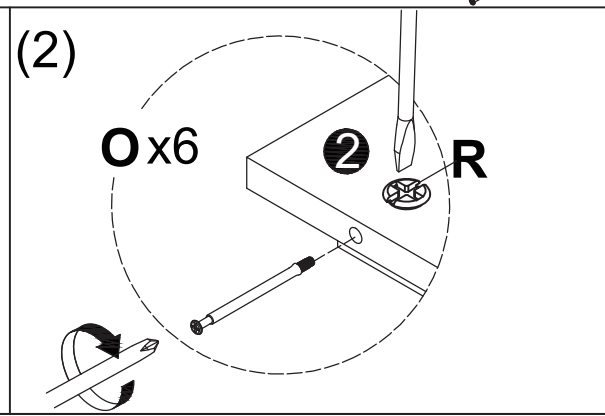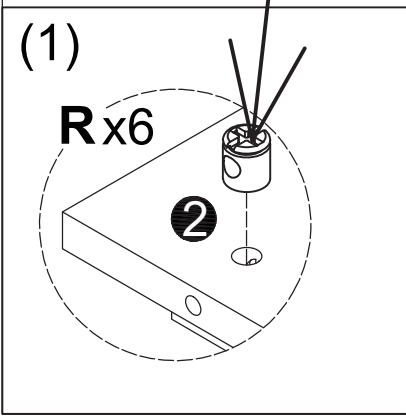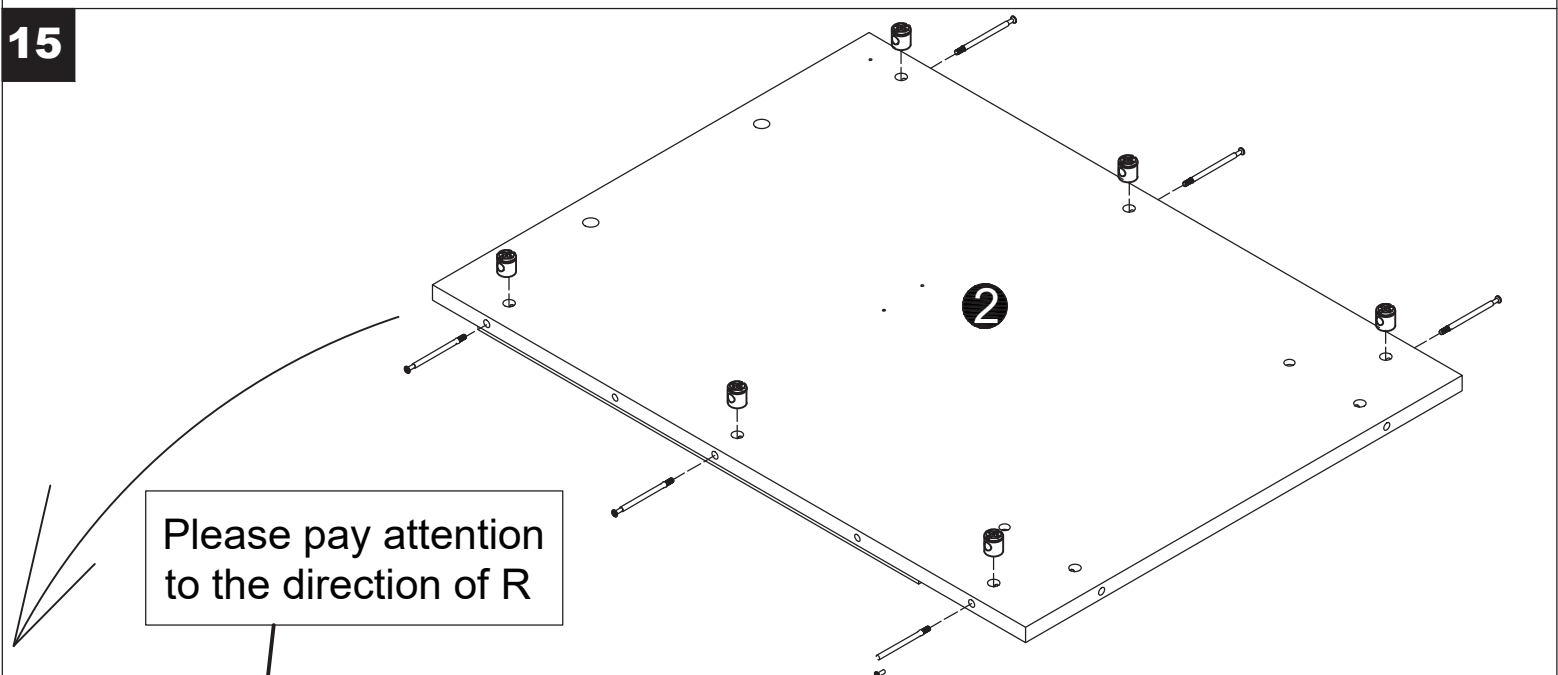


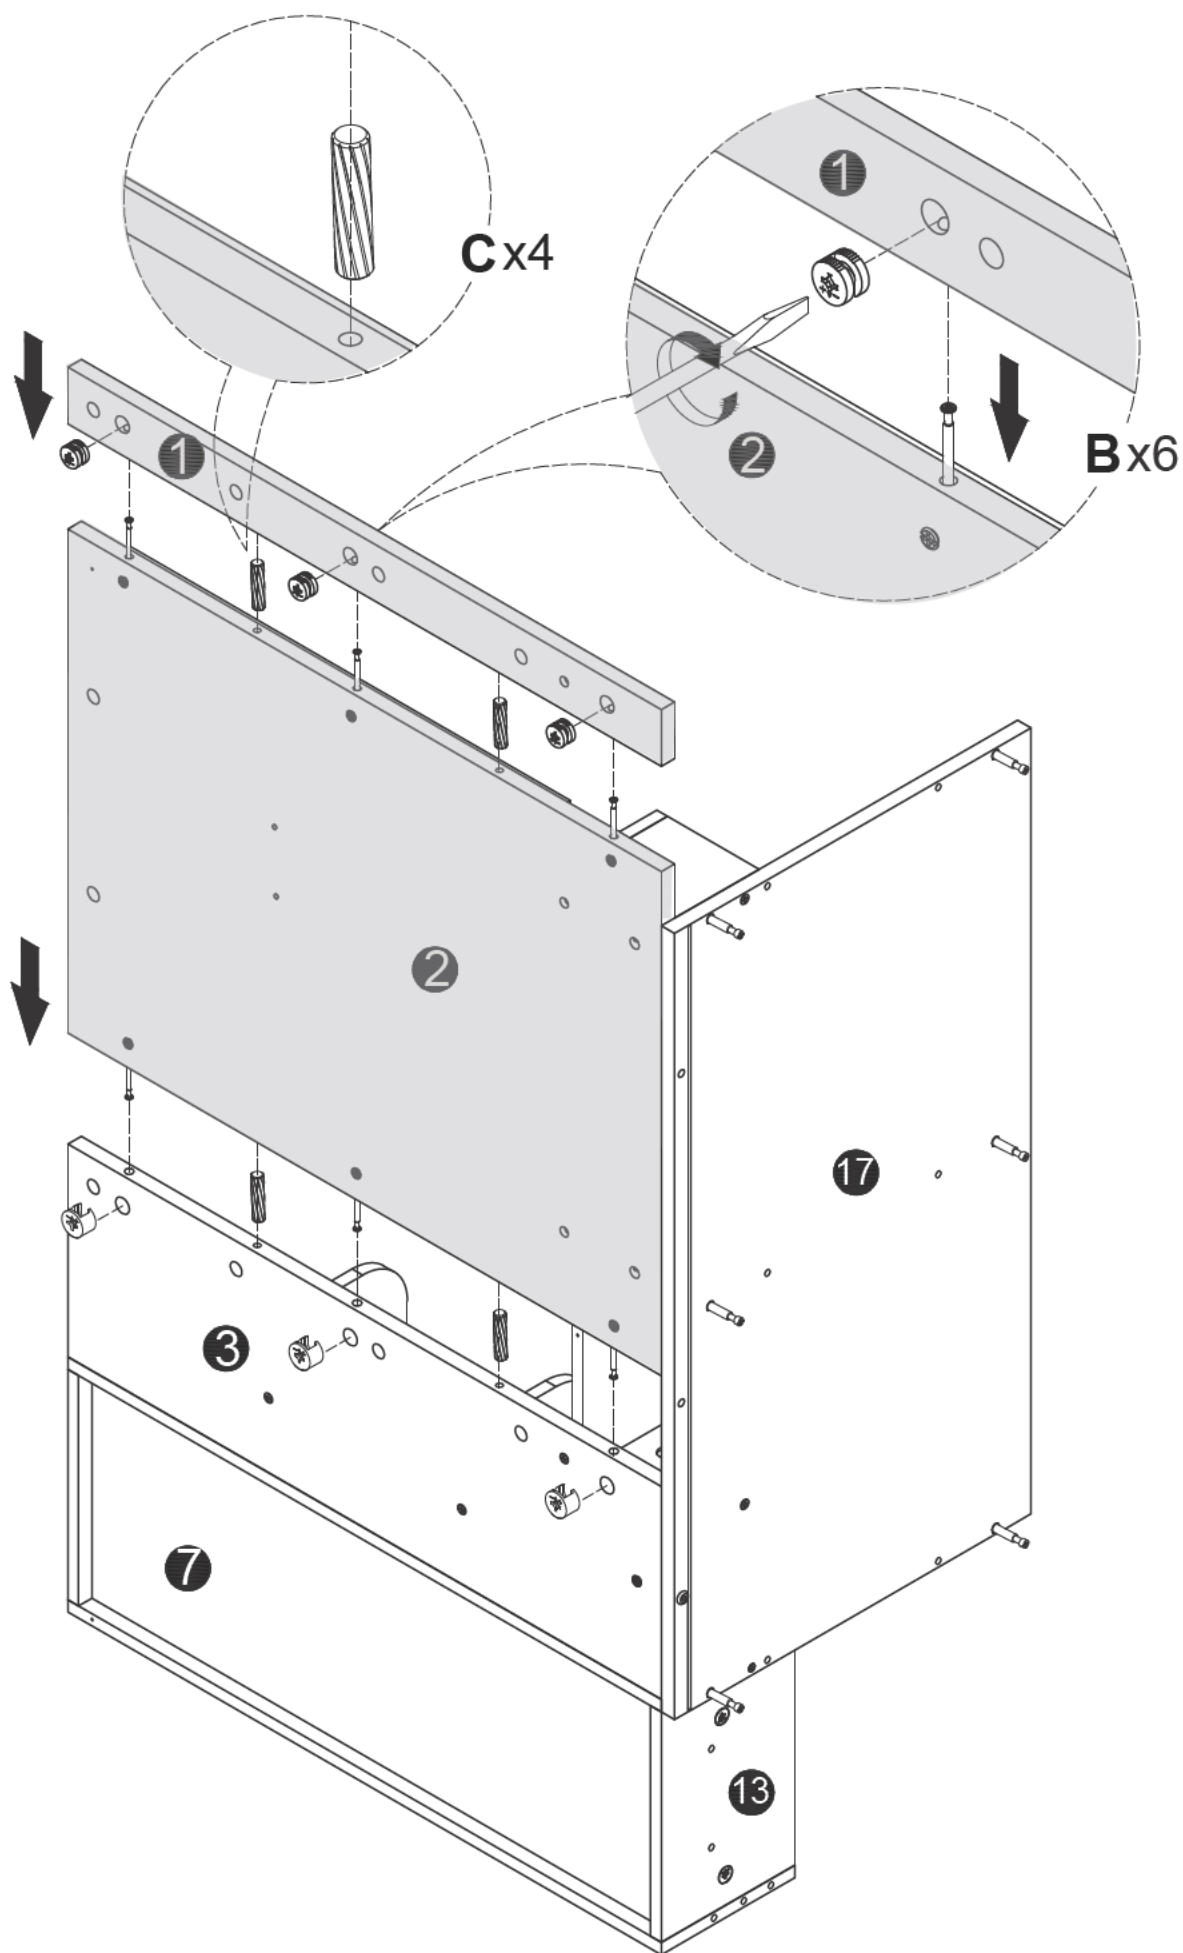


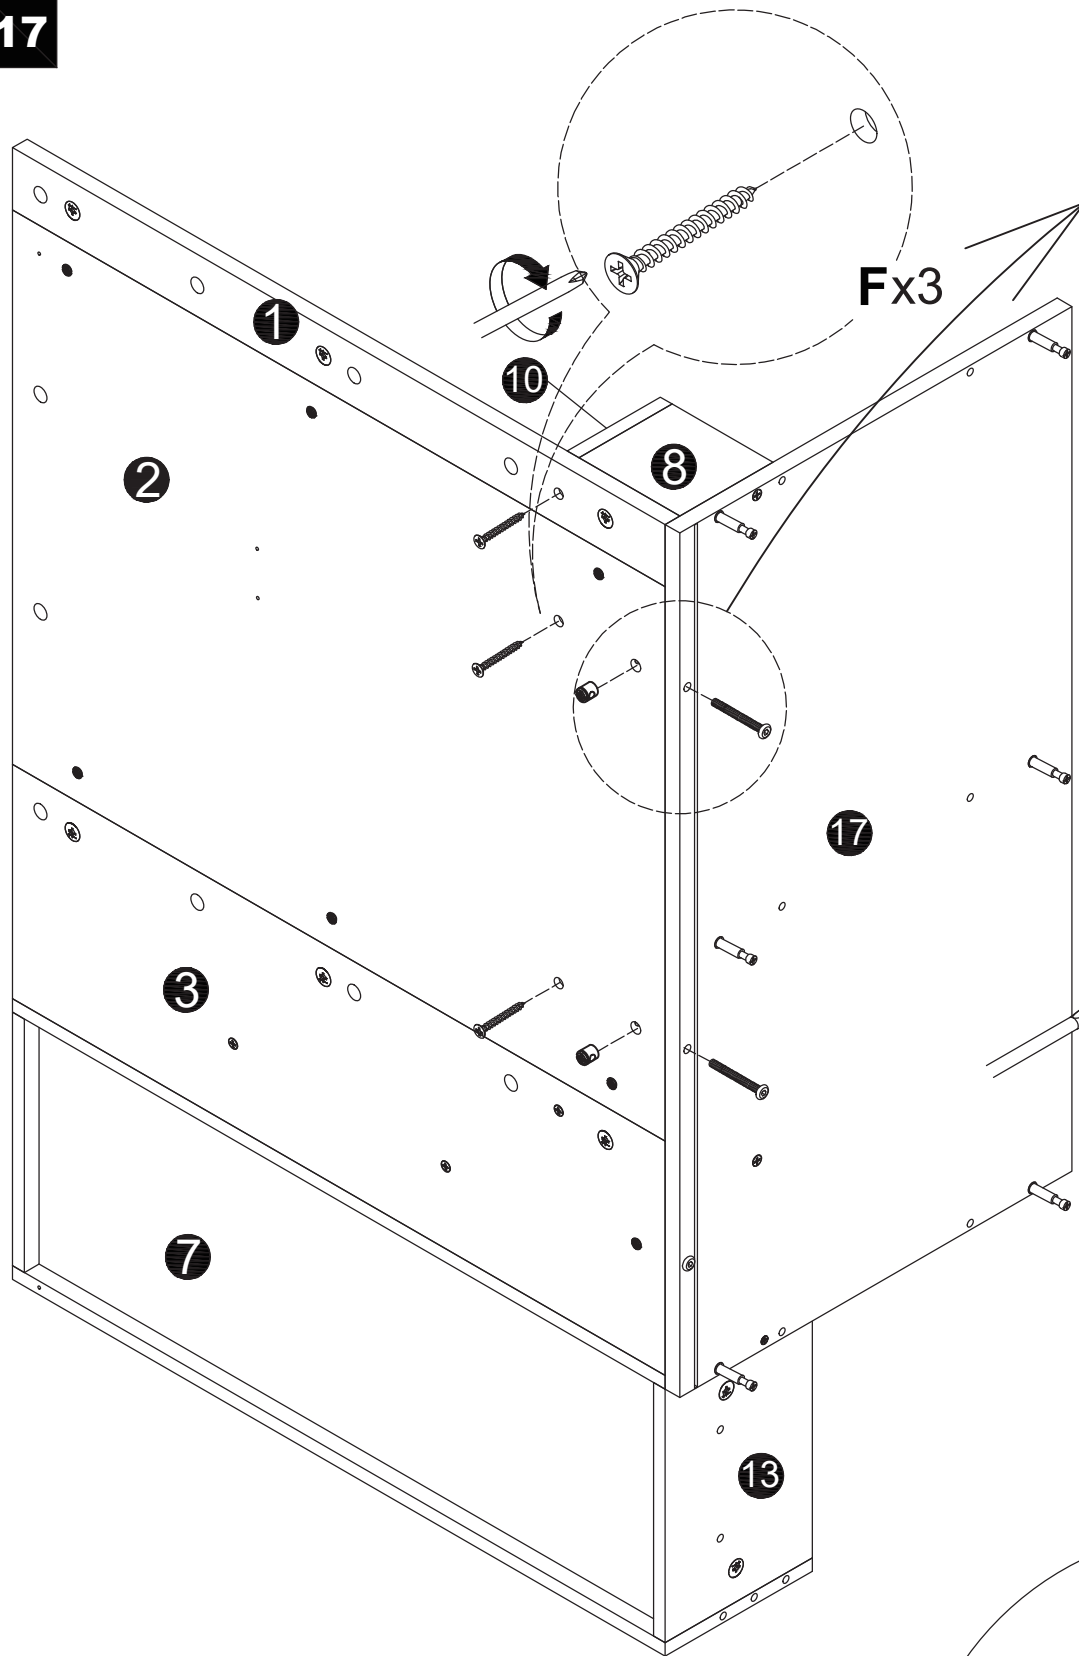


(1)


Please pay attention to the direction of R

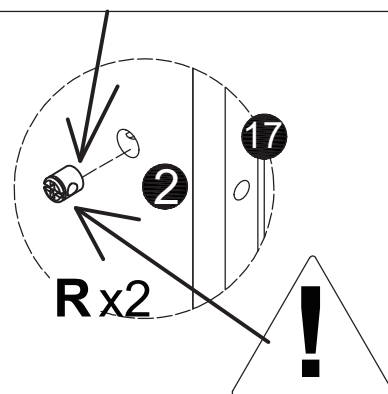


(2)

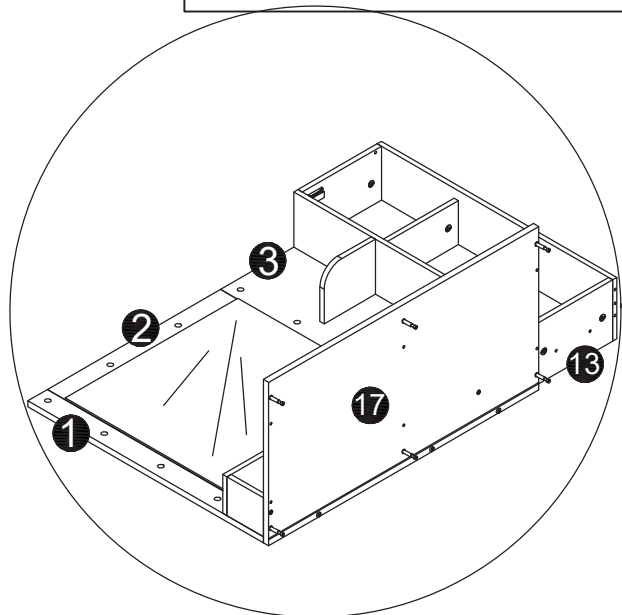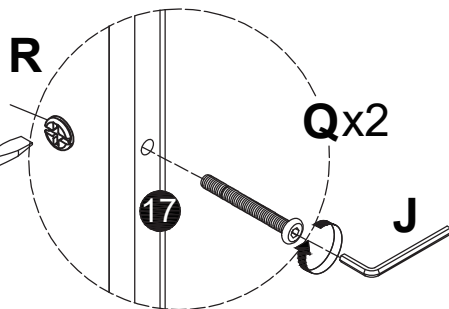


18

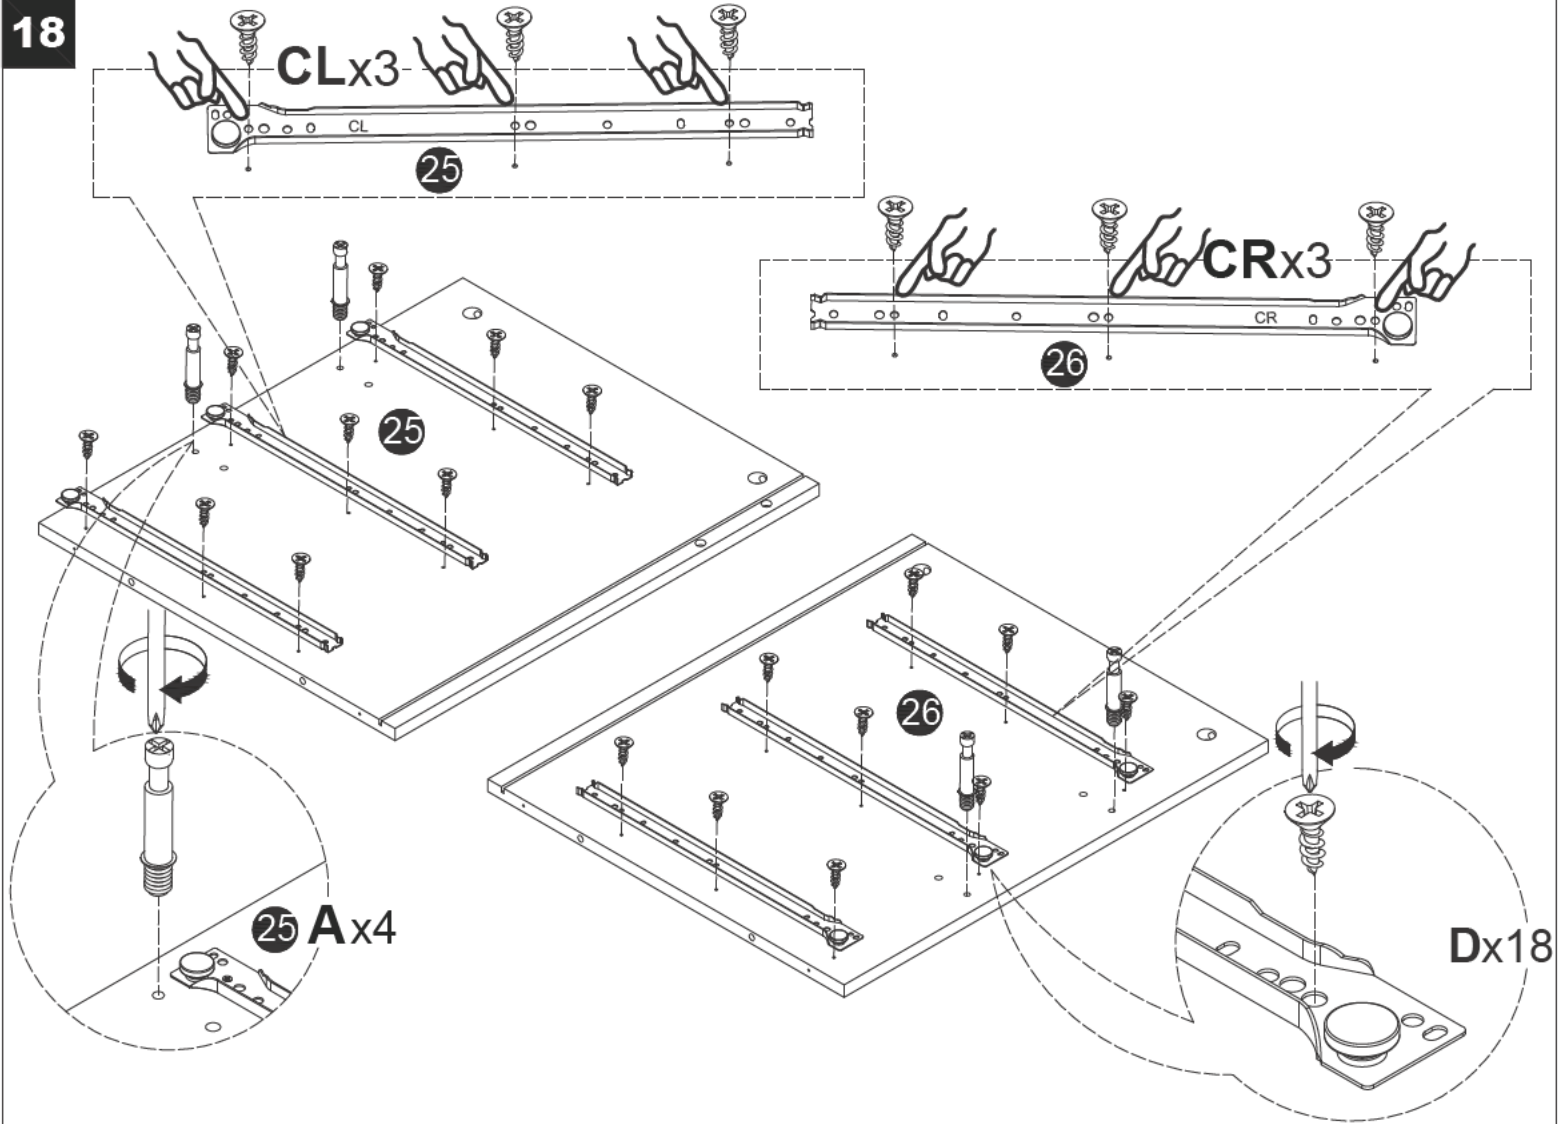


19

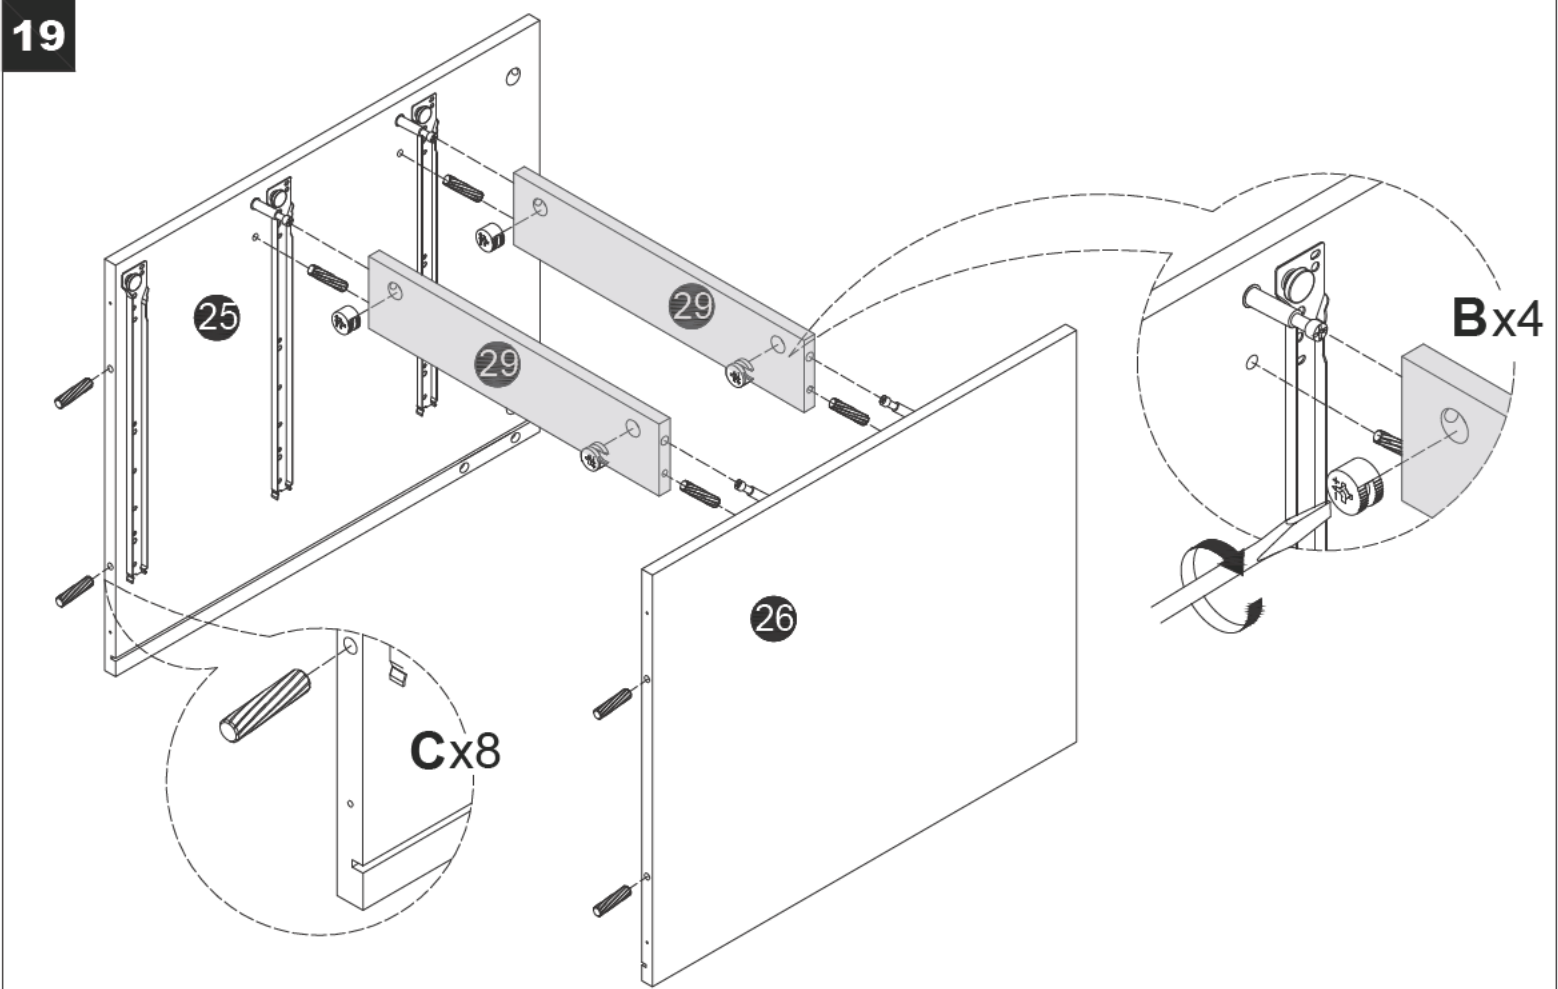


20

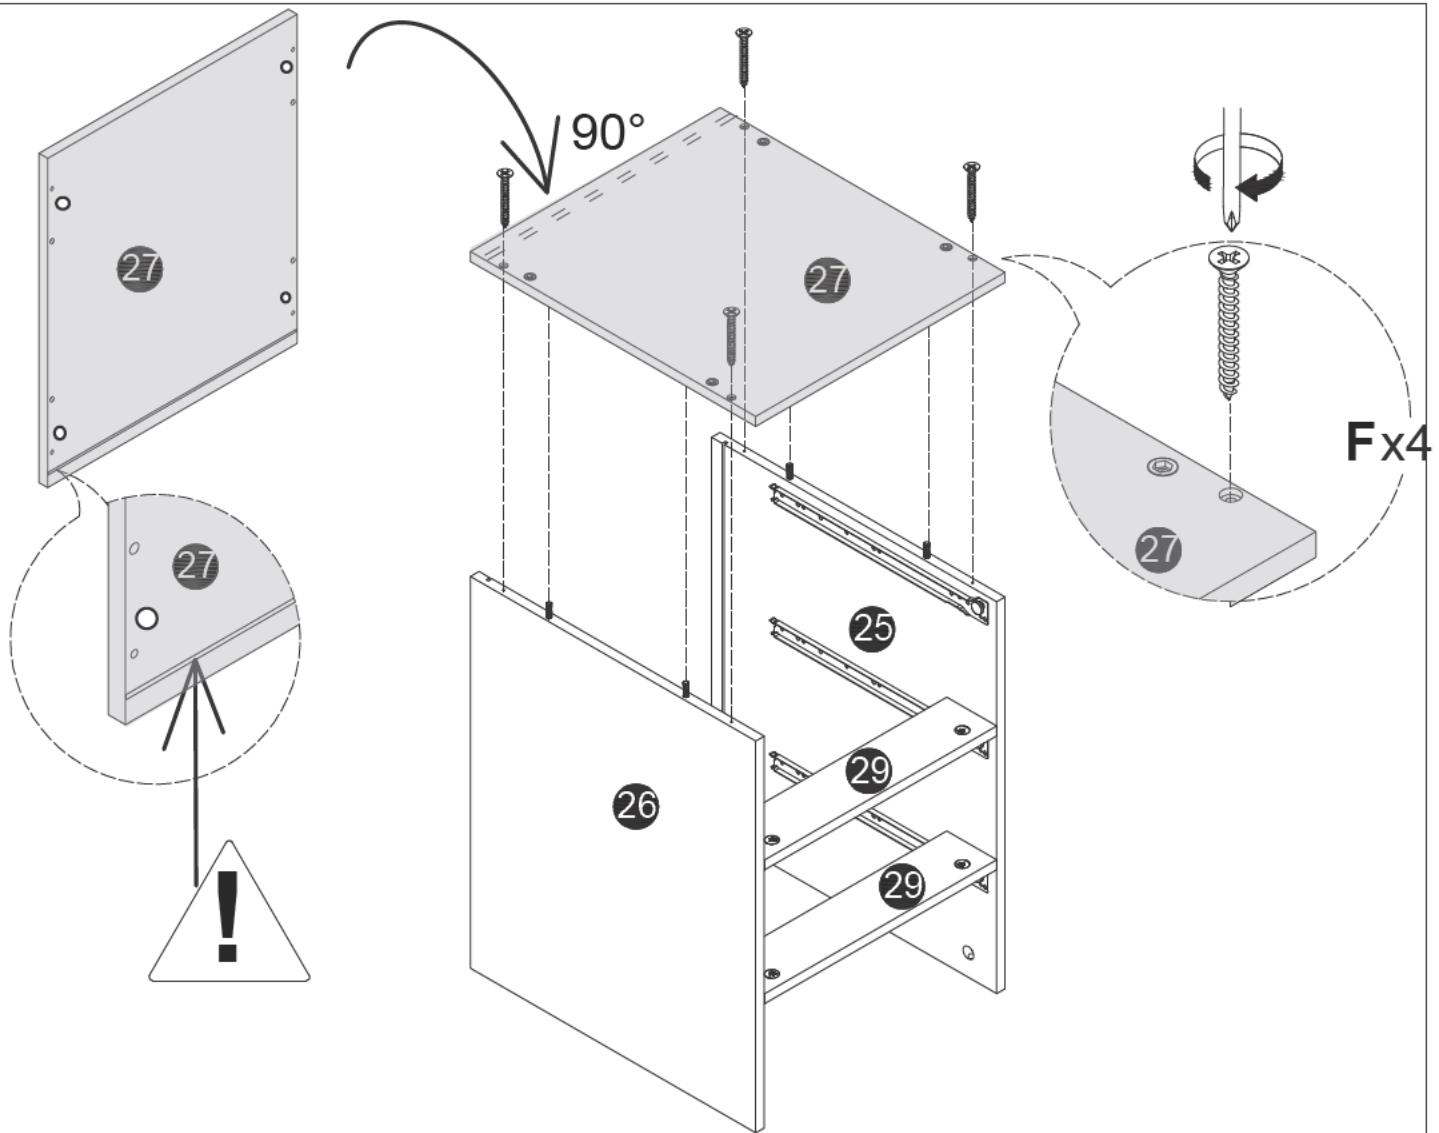


21

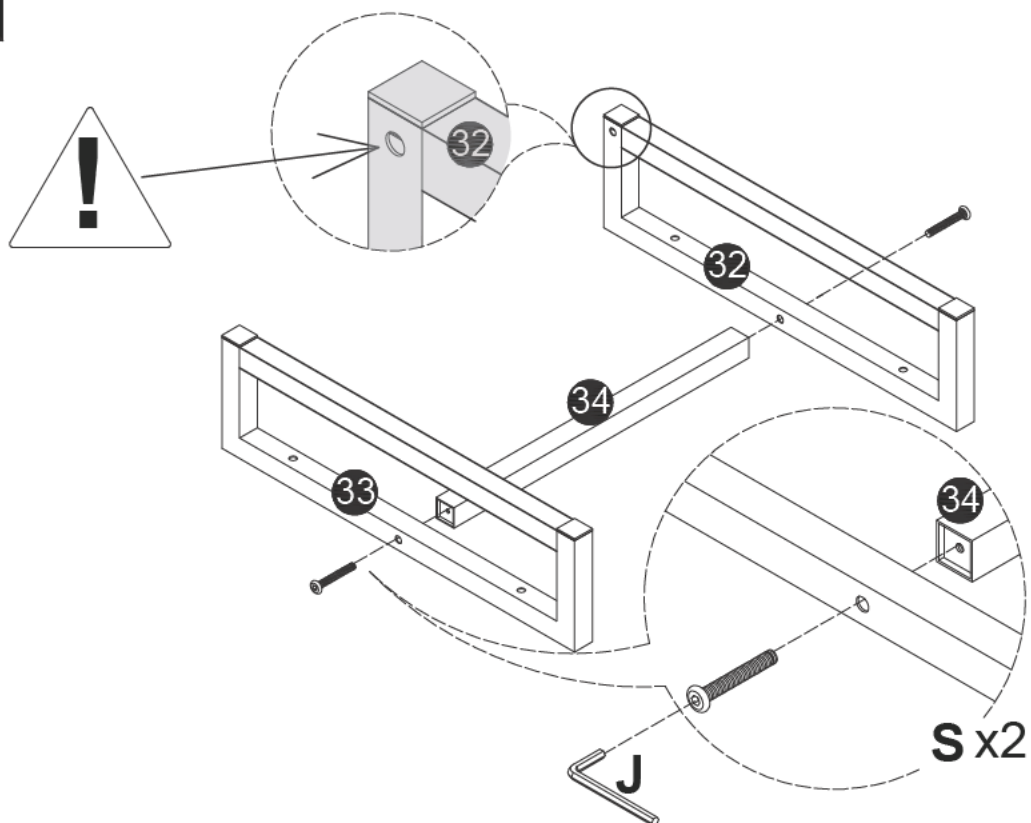




22

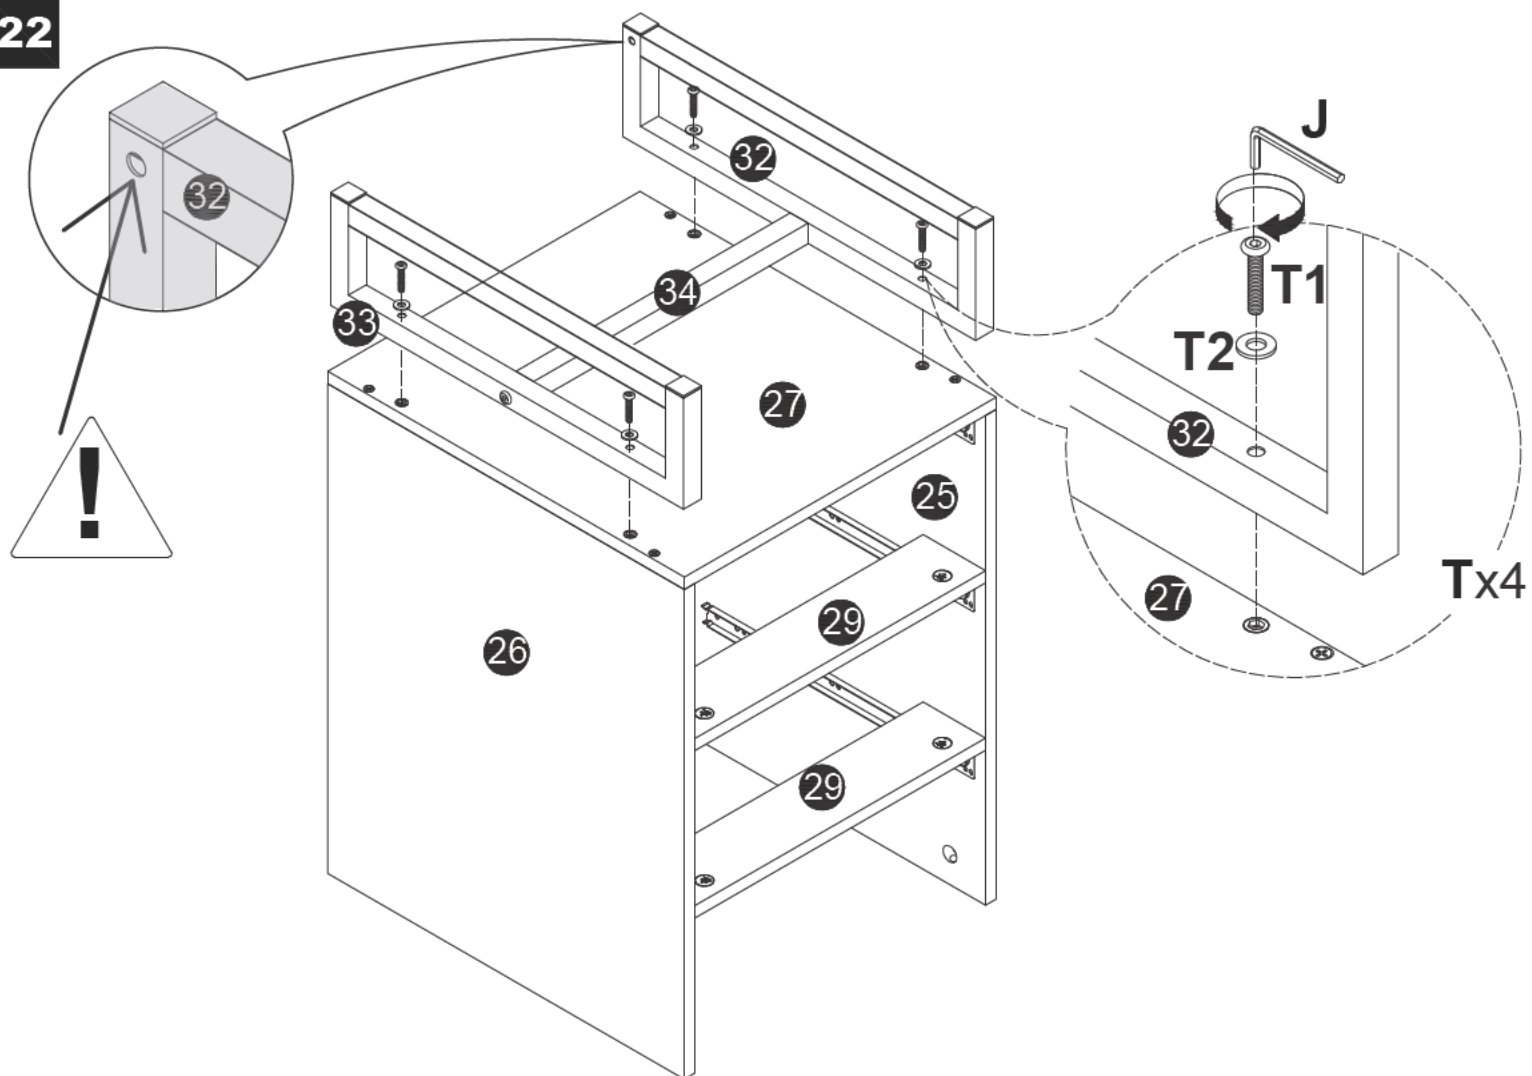




23

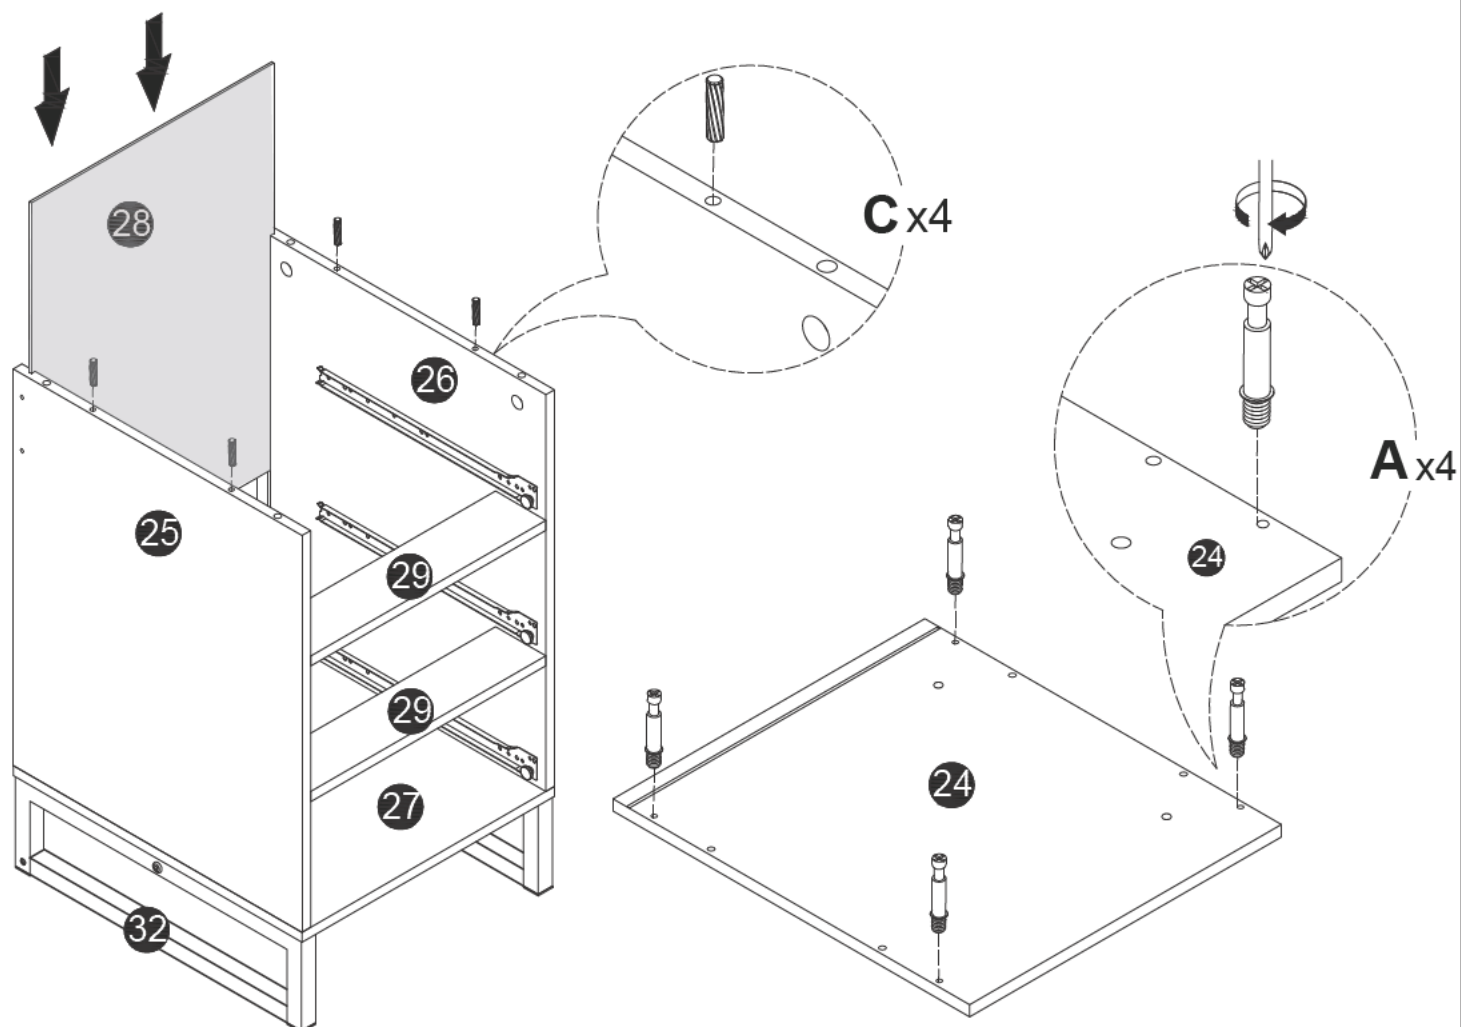


24

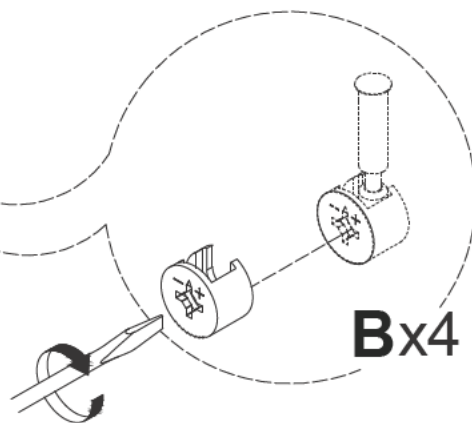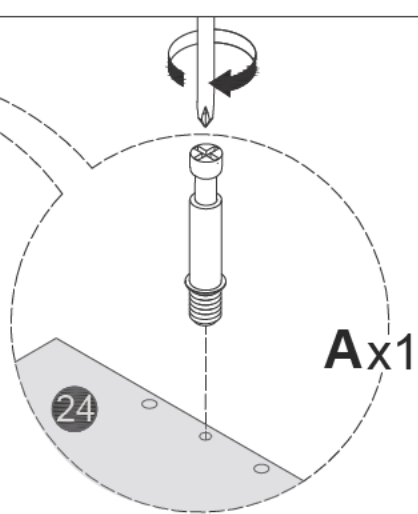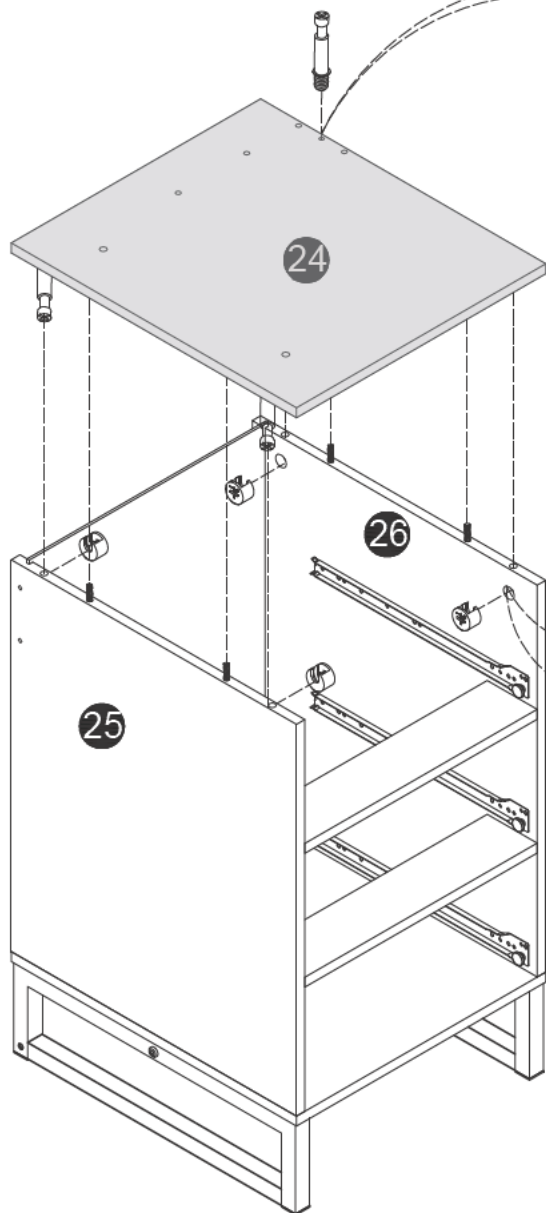


25

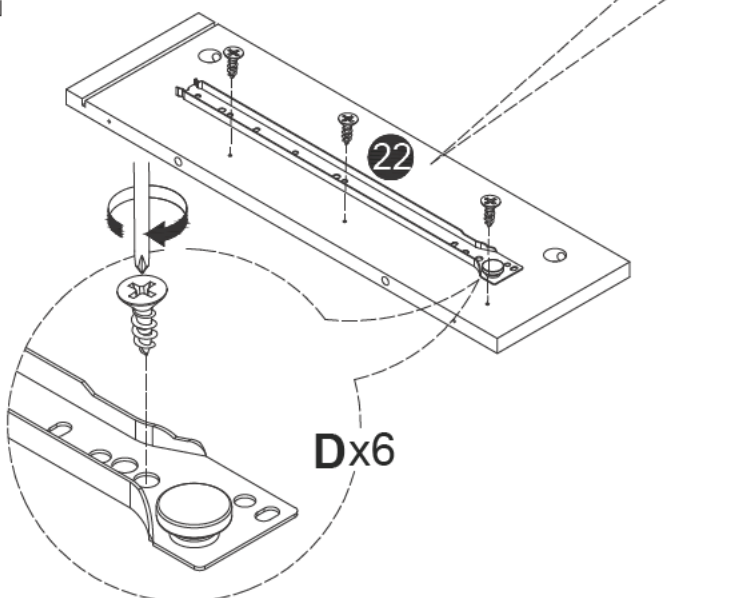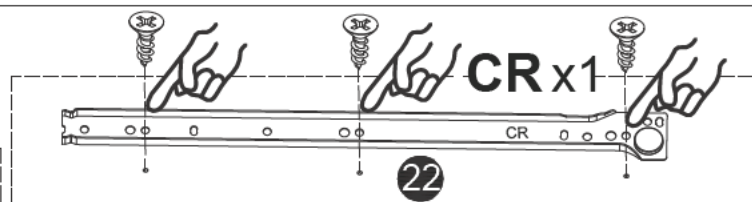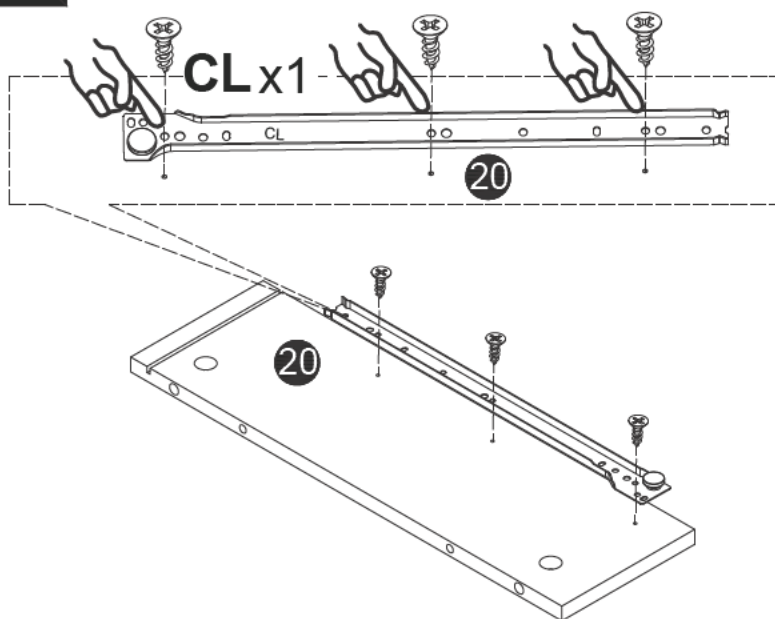


26

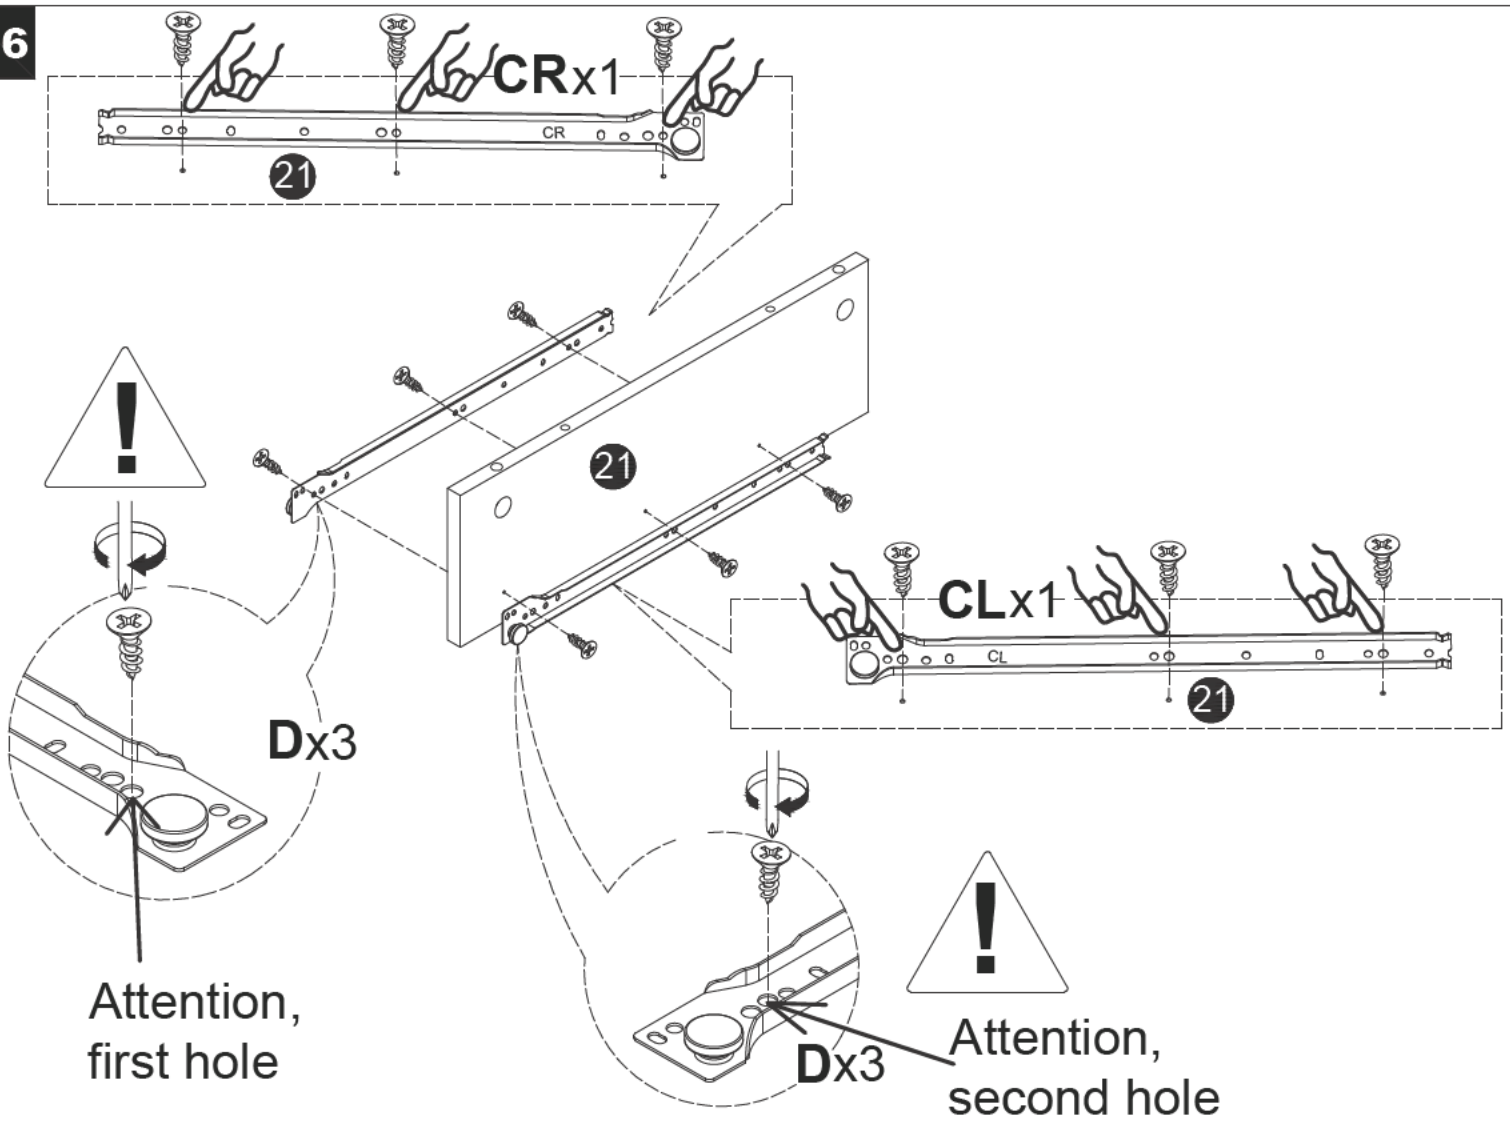


27

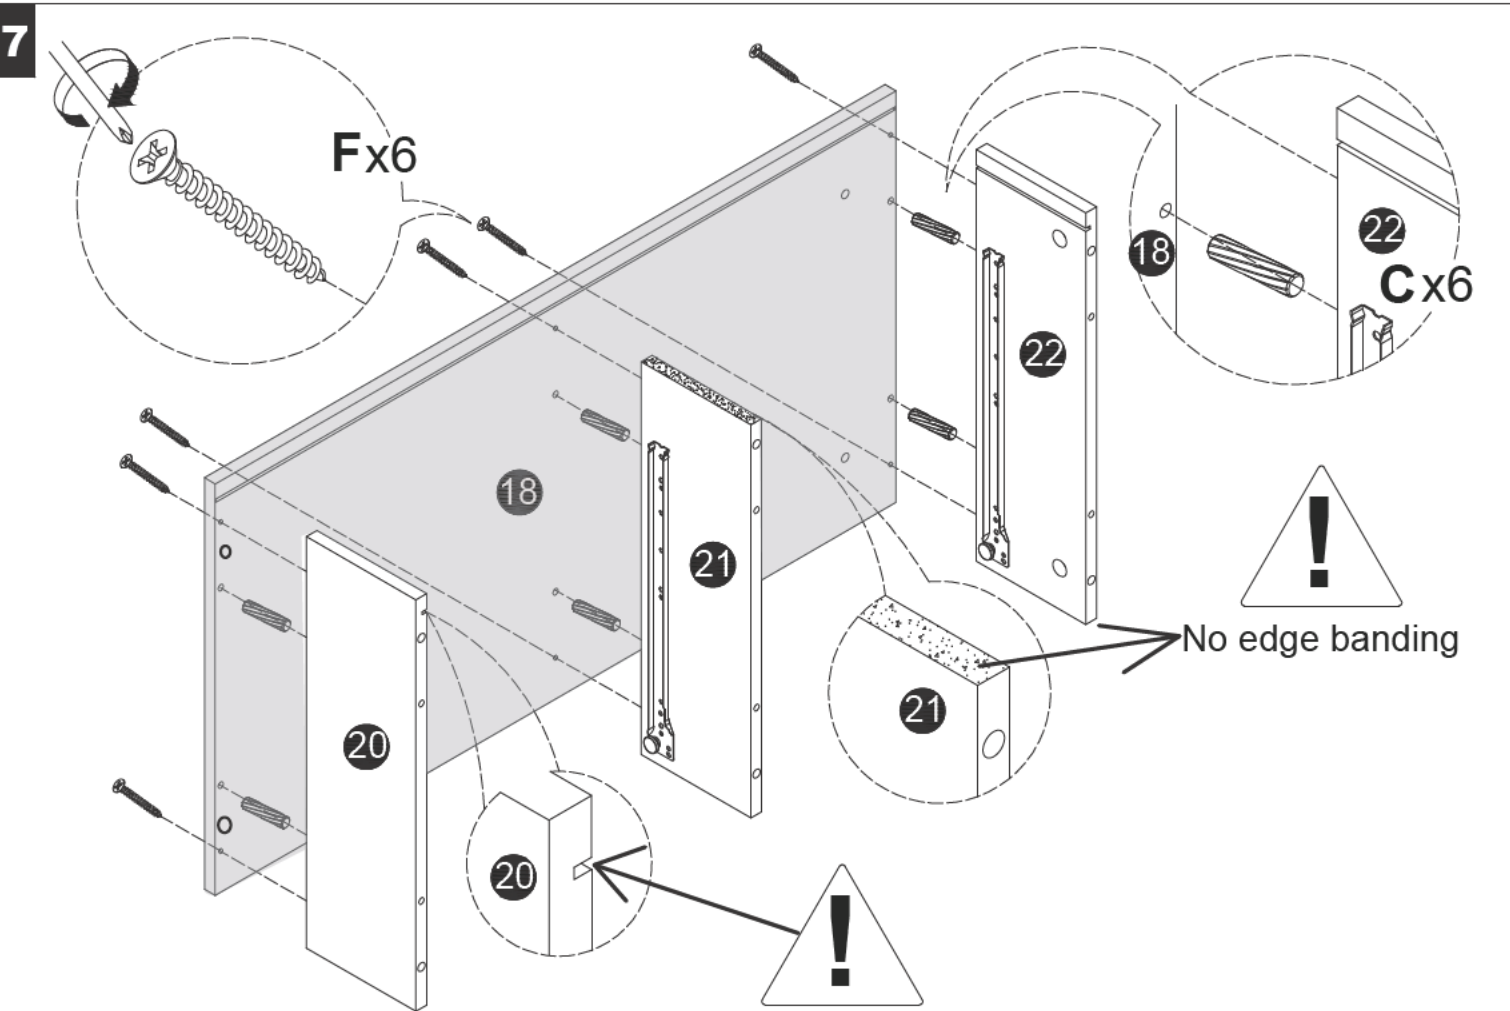

28

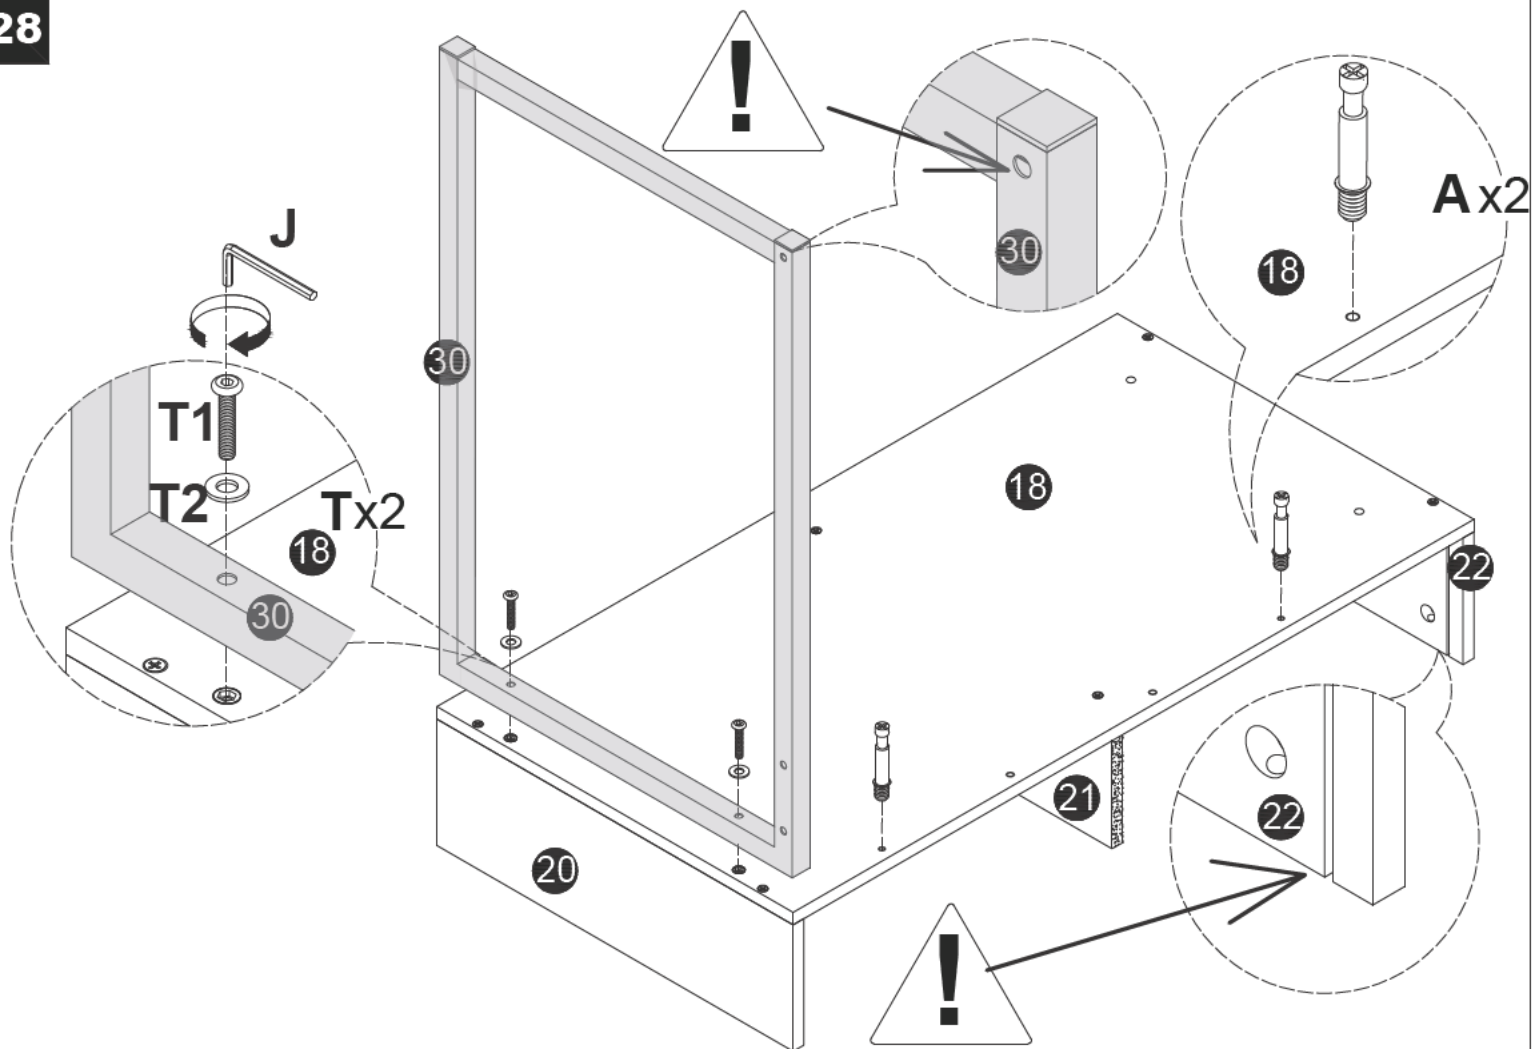


29



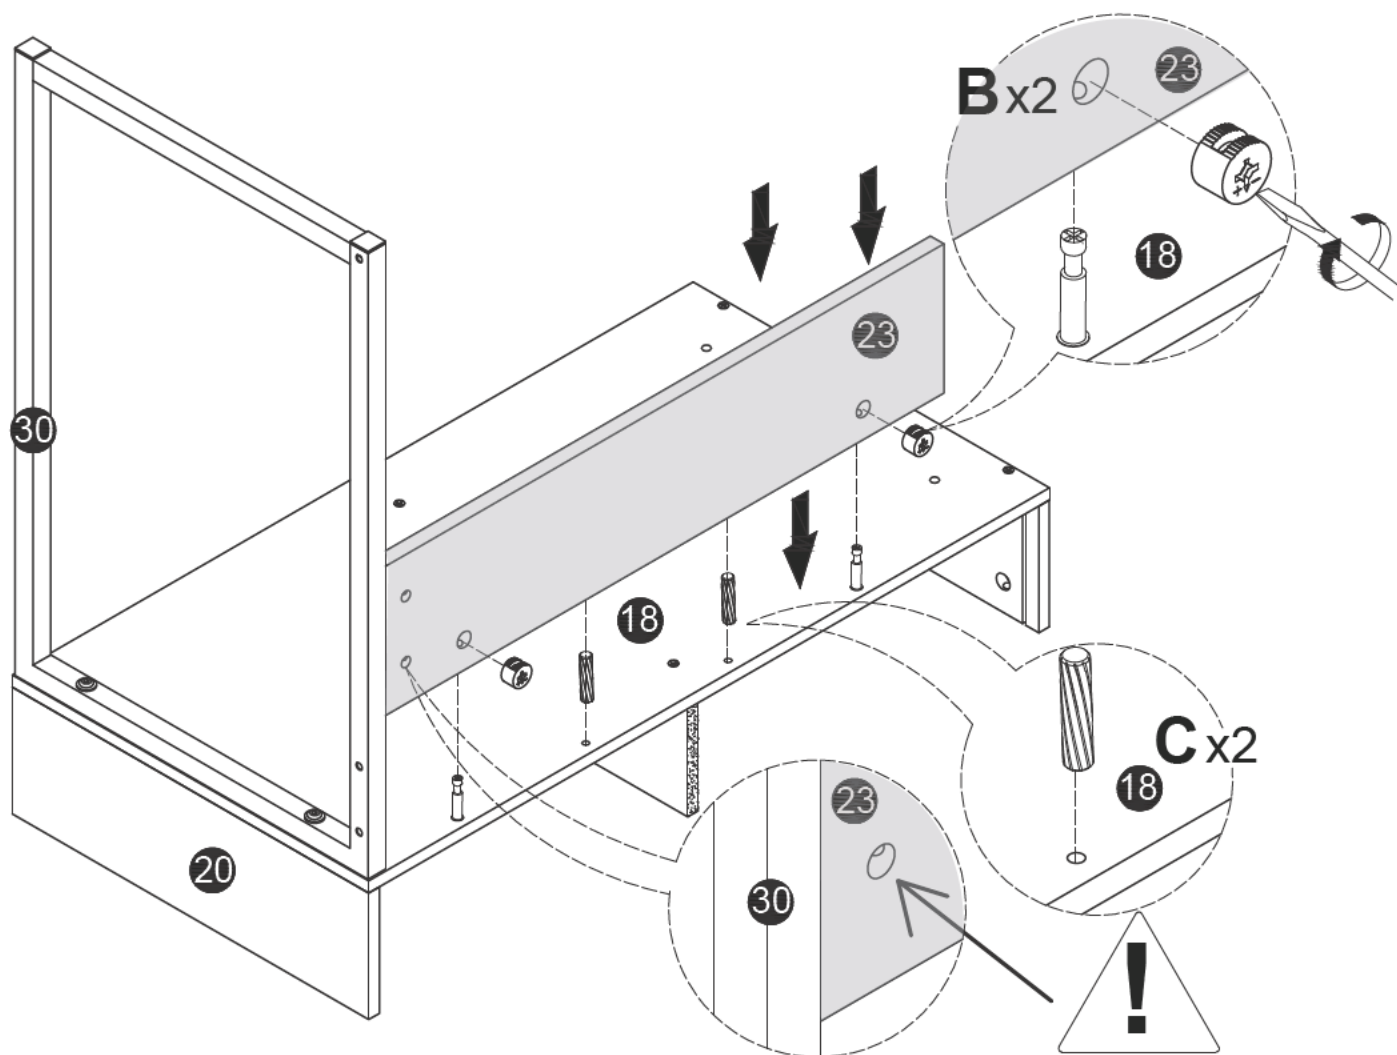



(1)


Please pay attention
to the direction of R

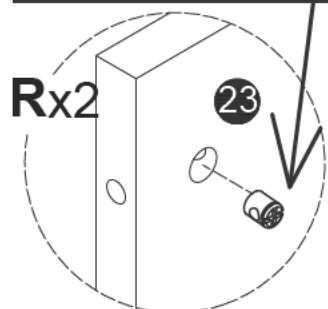







(2)

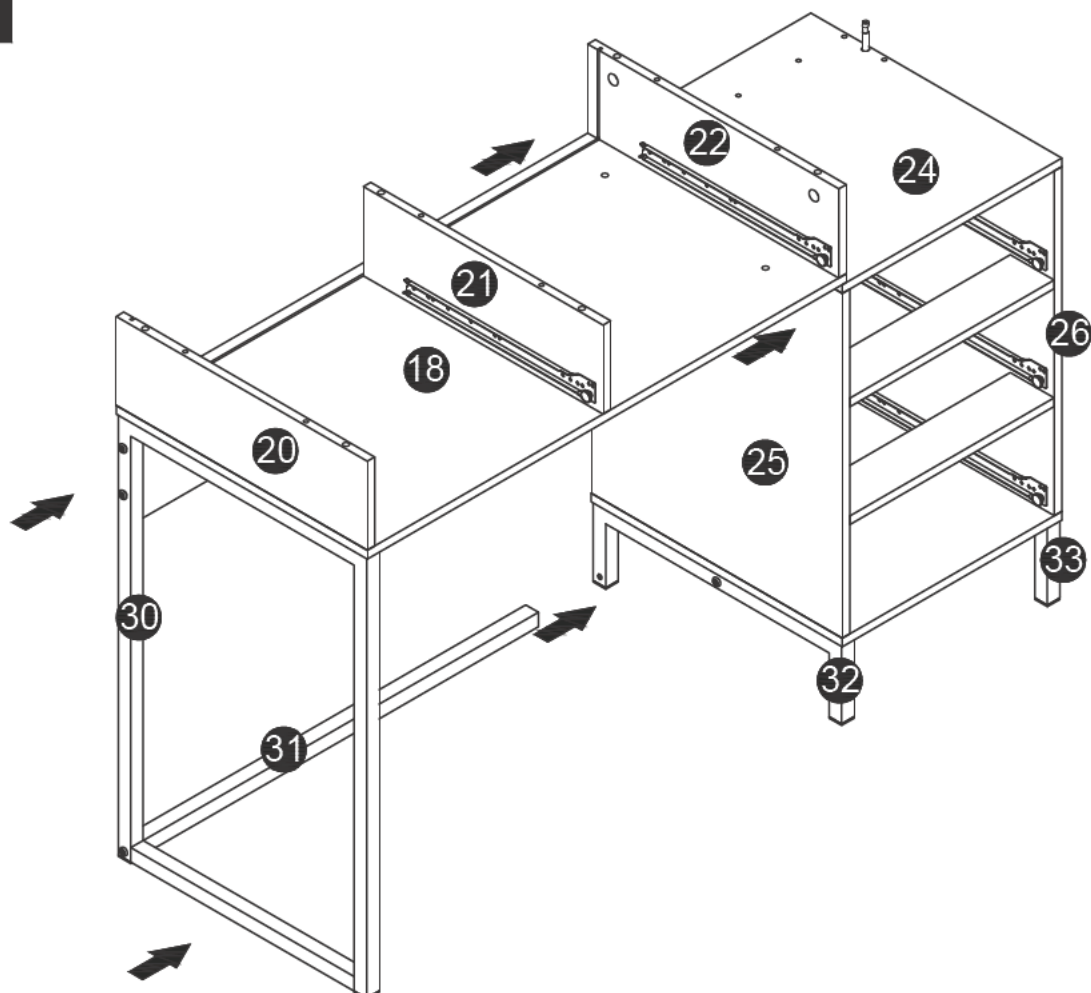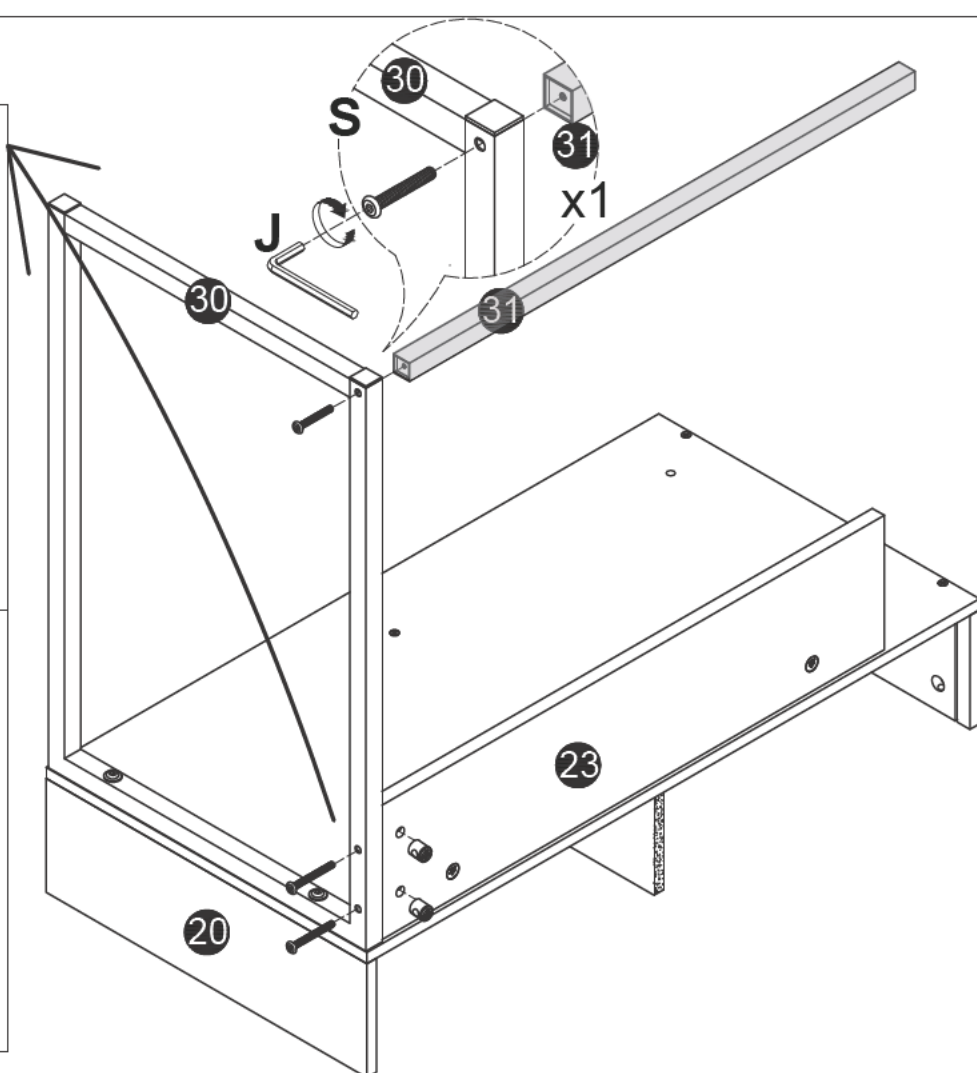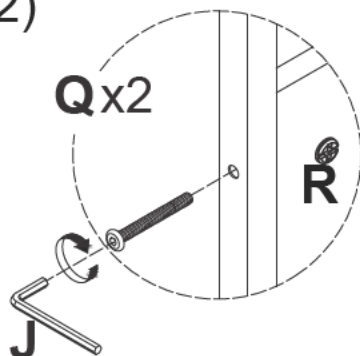

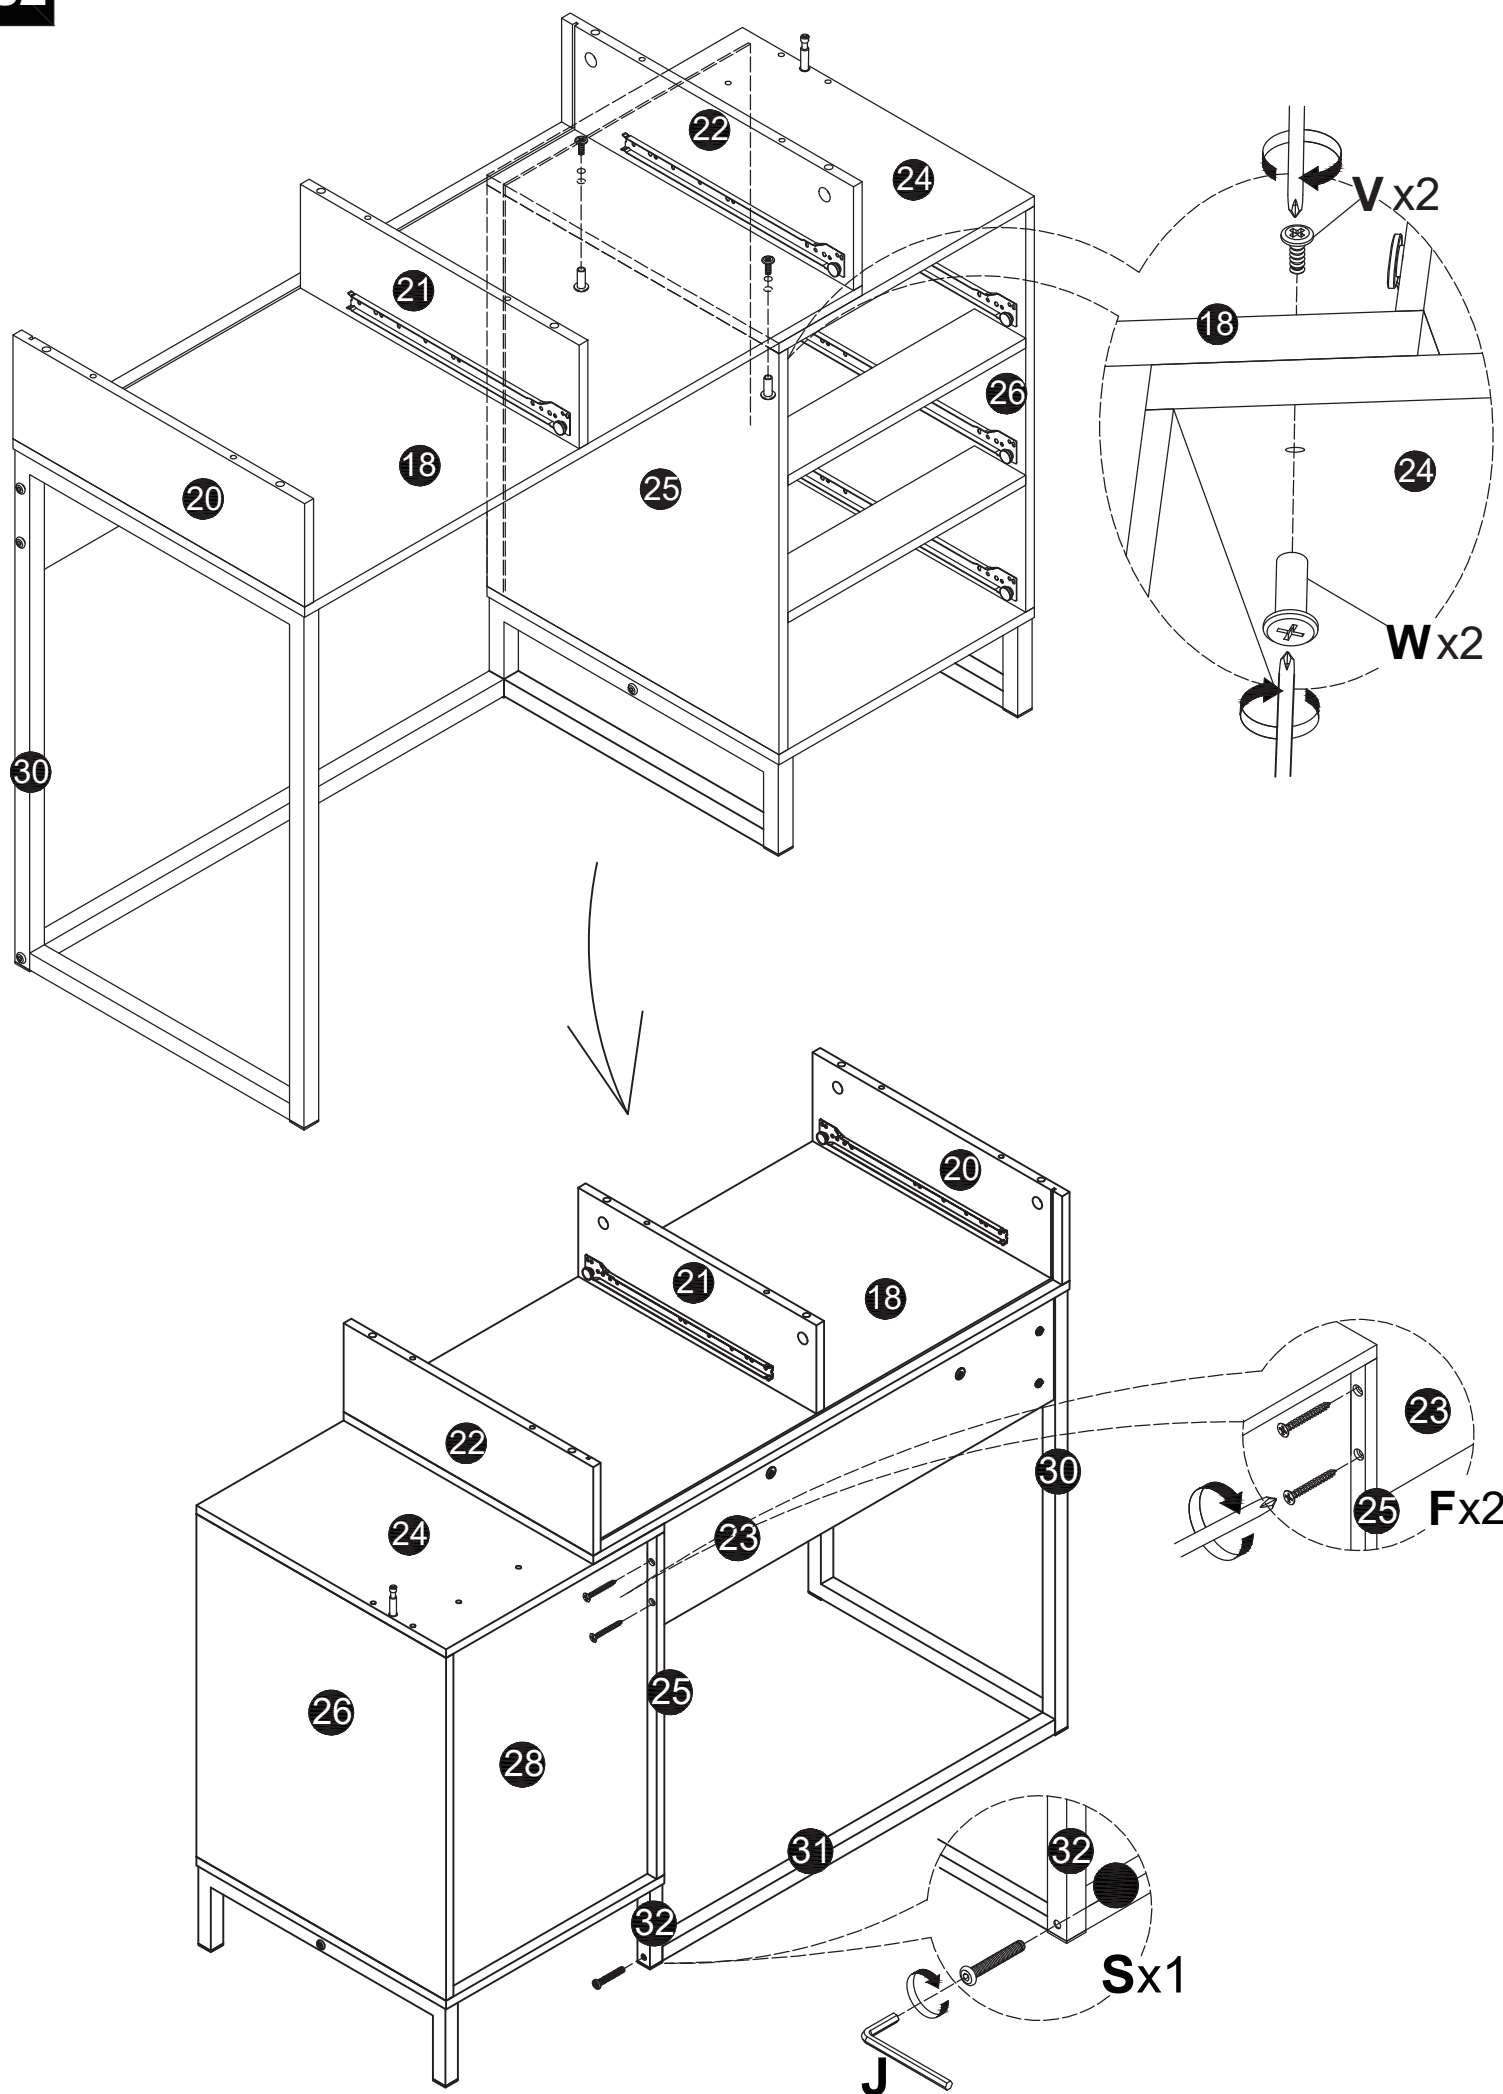


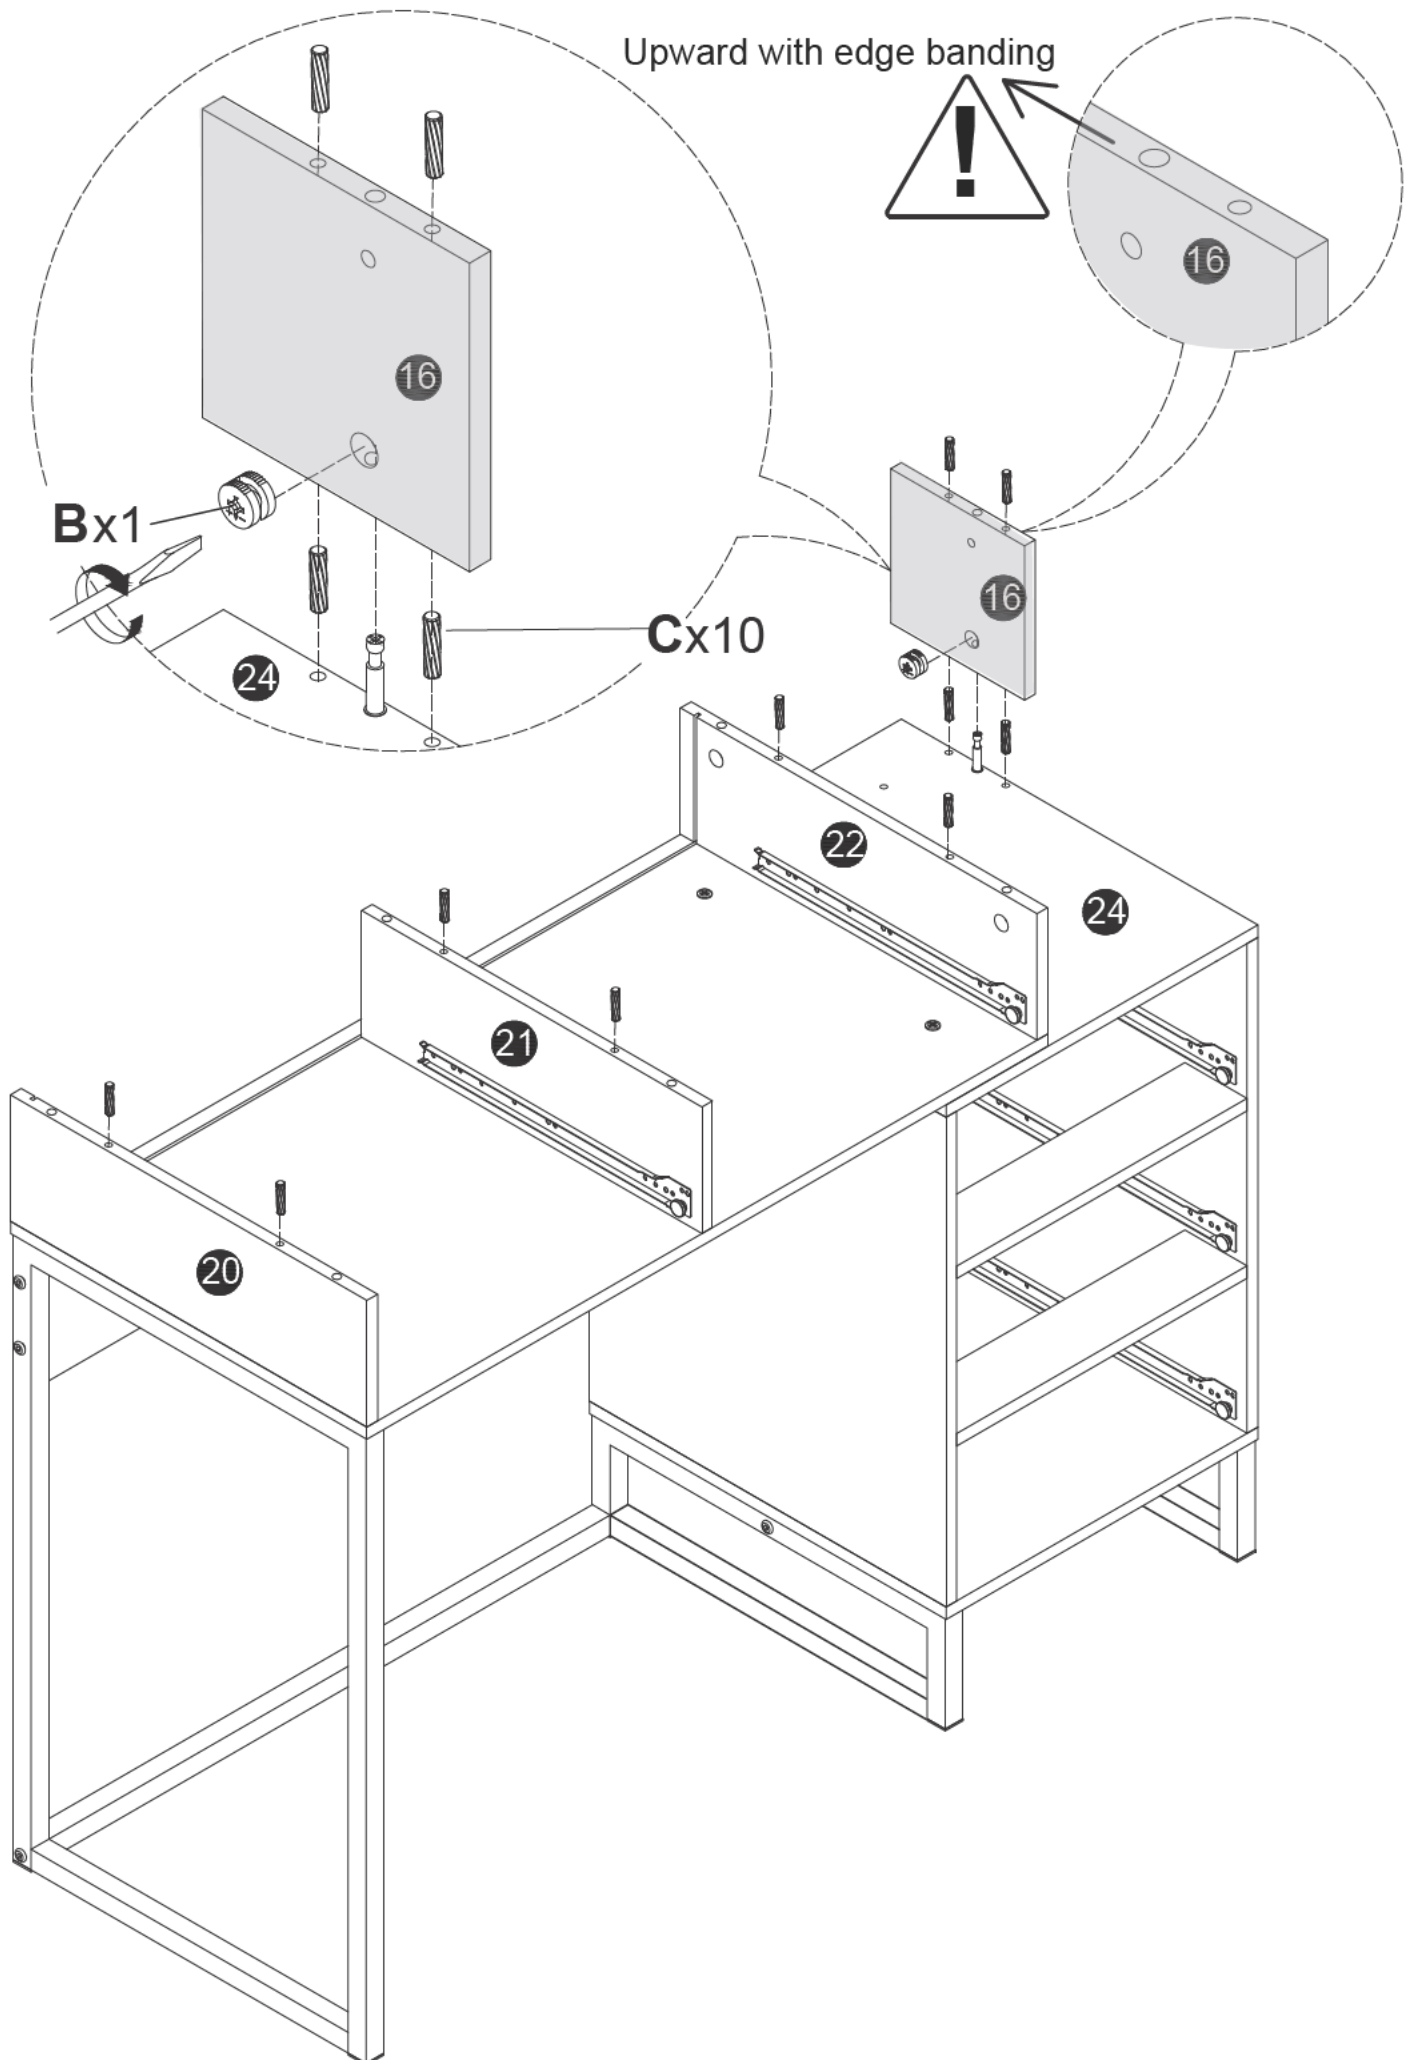

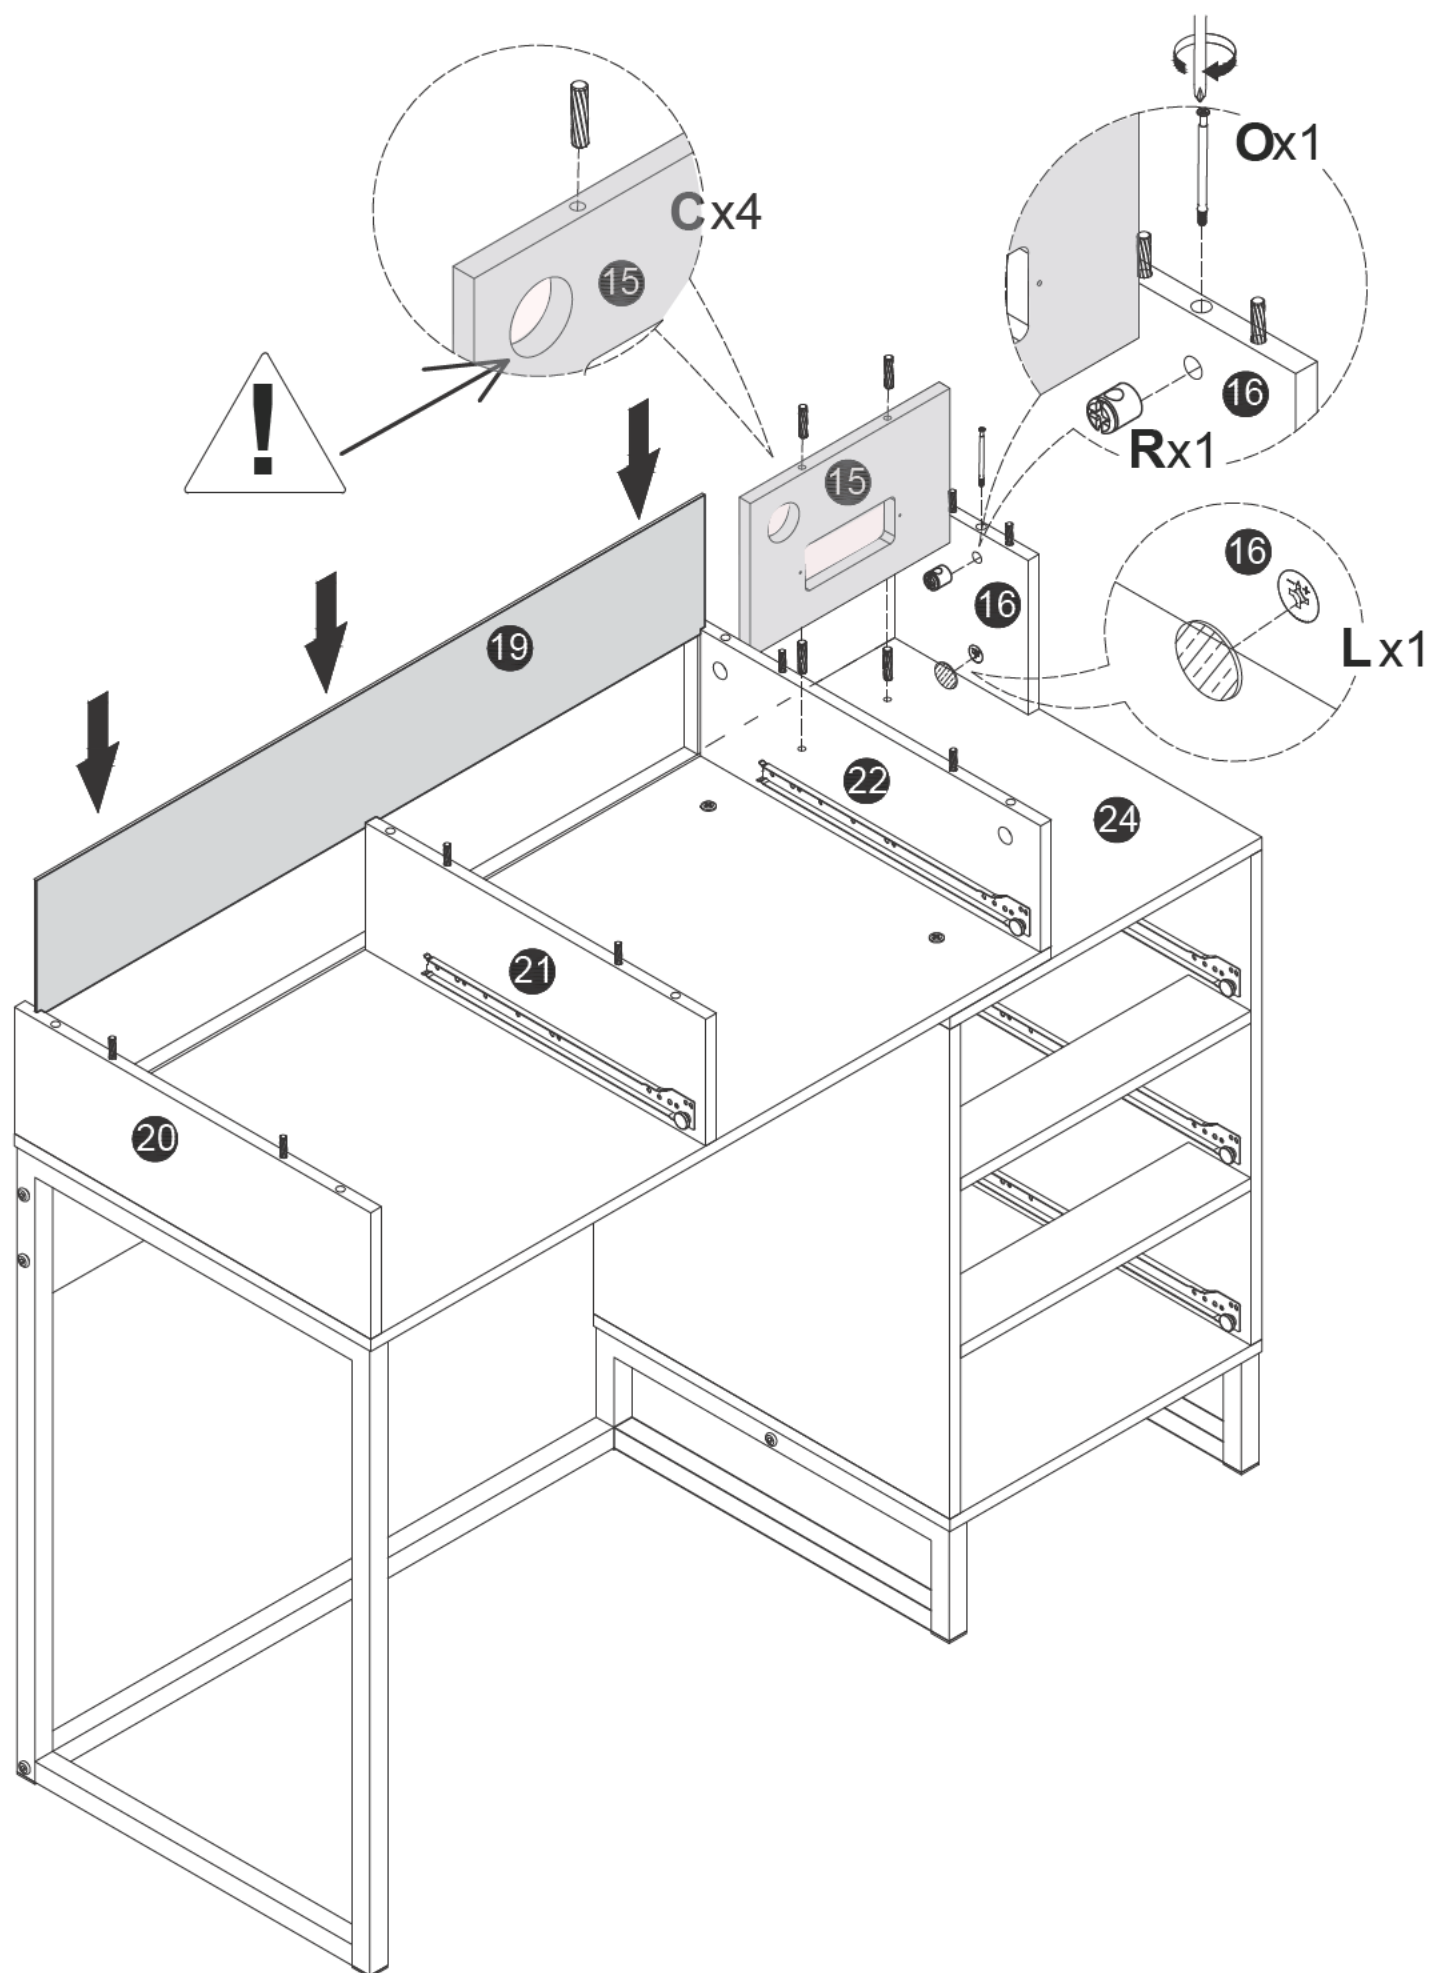


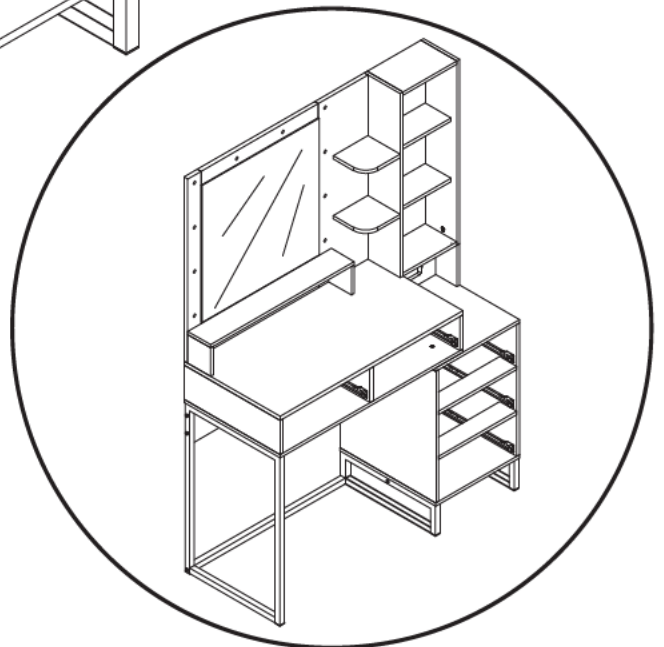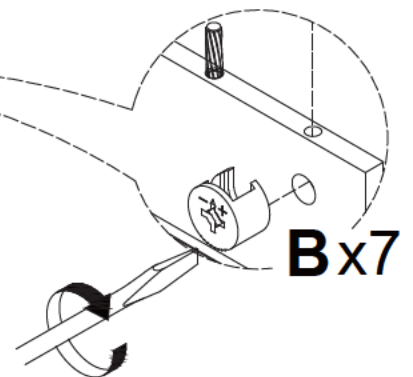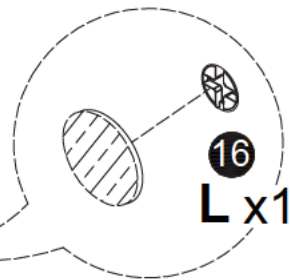
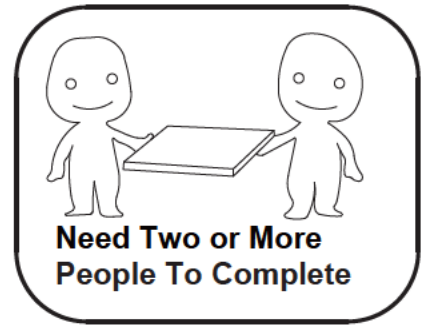
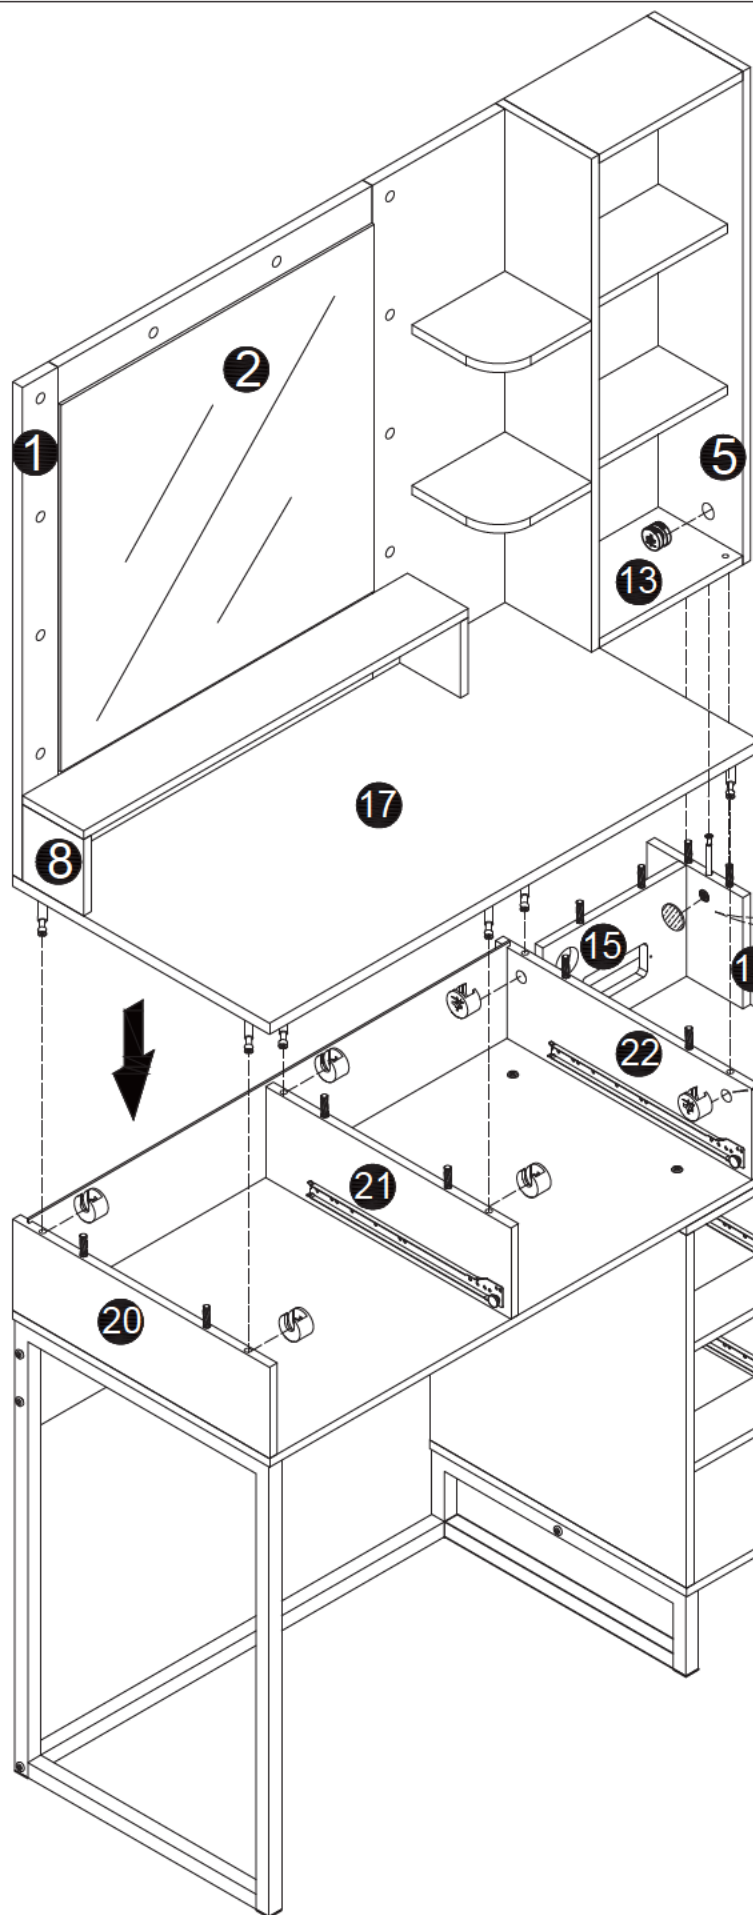


36

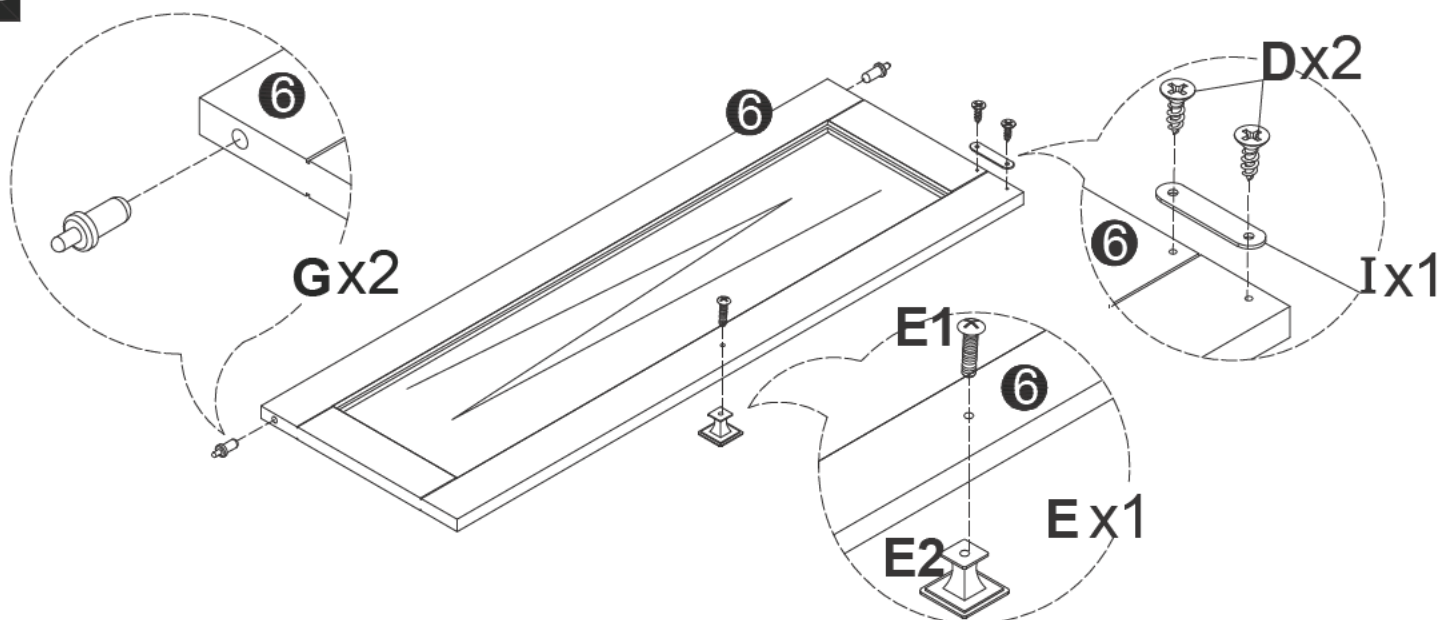





37

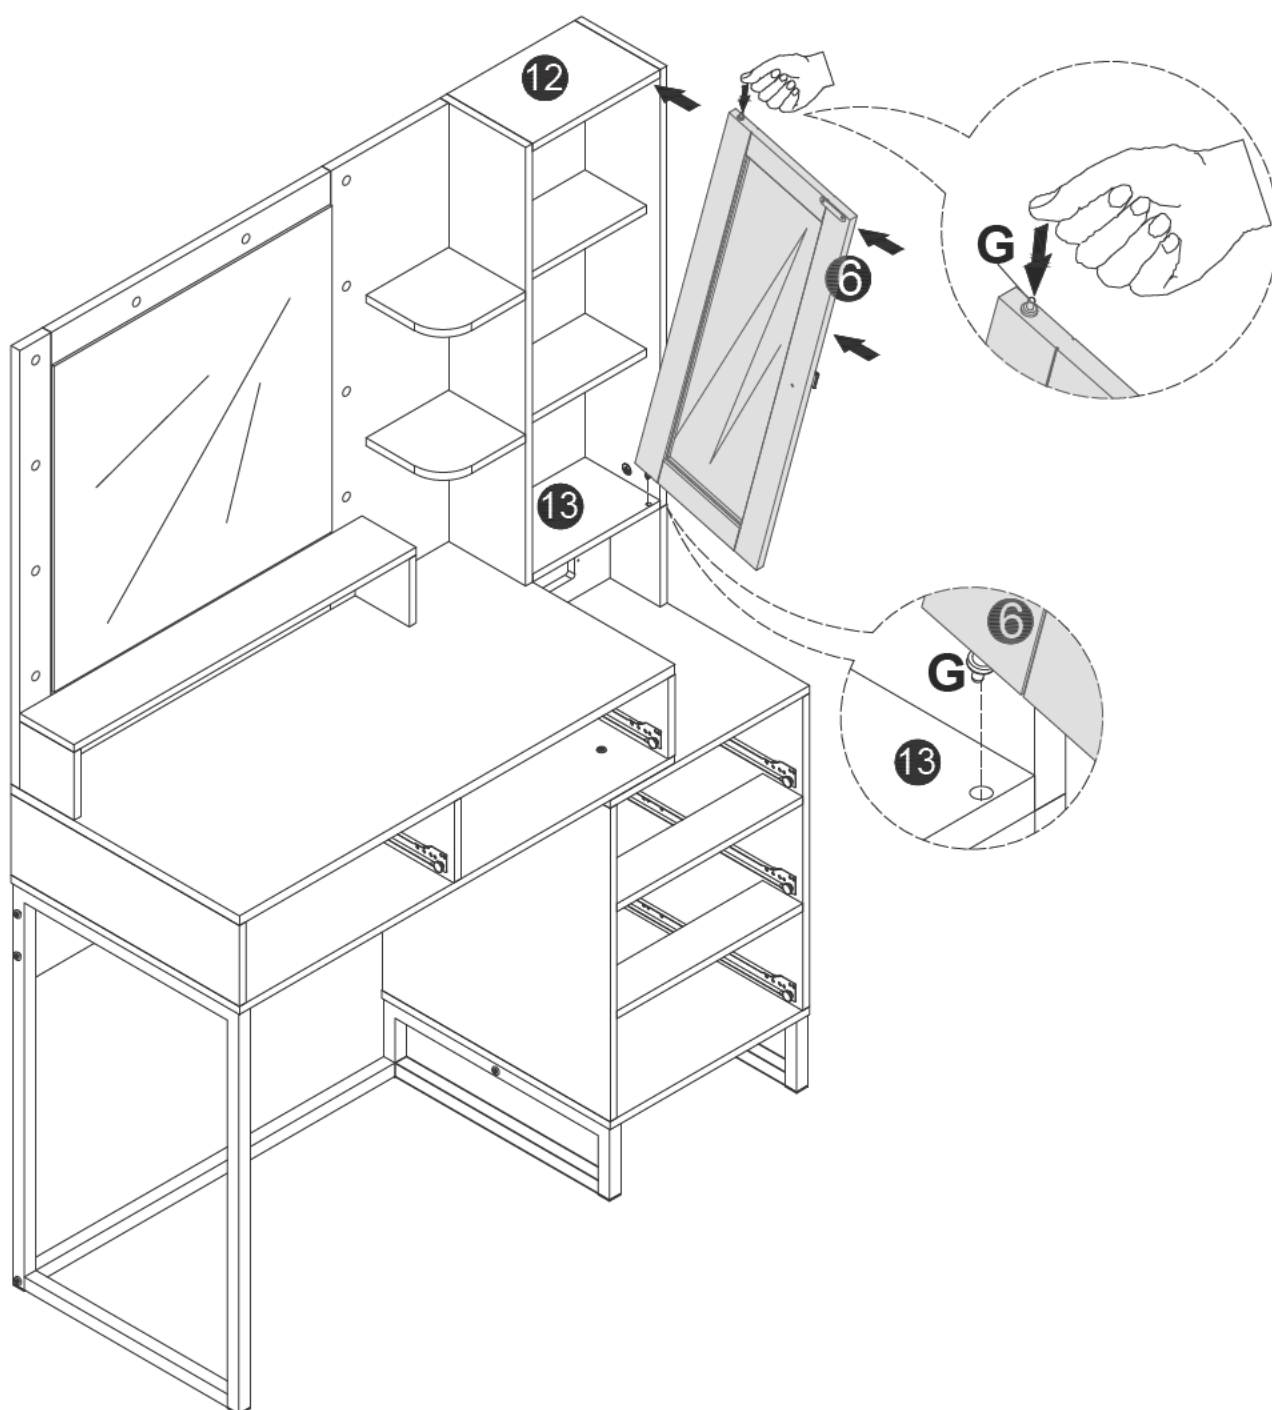


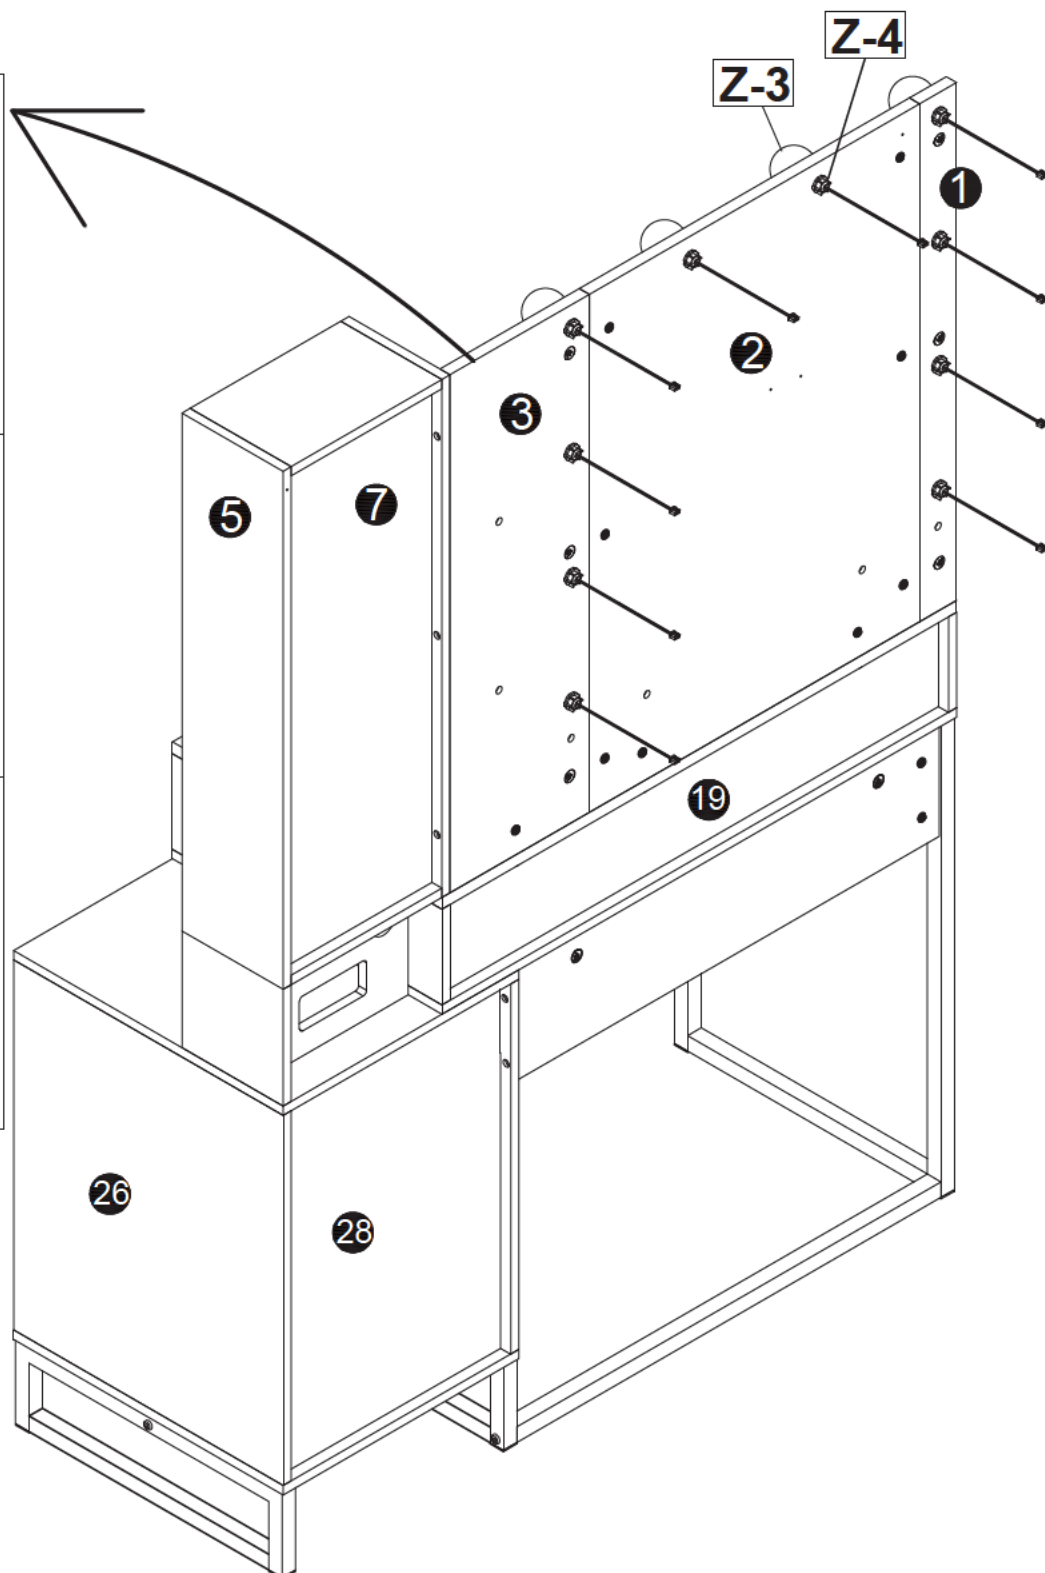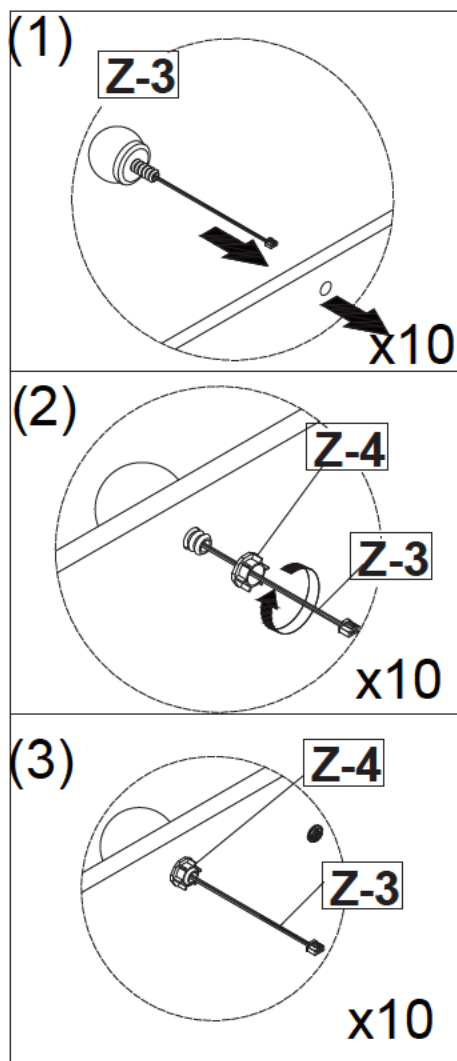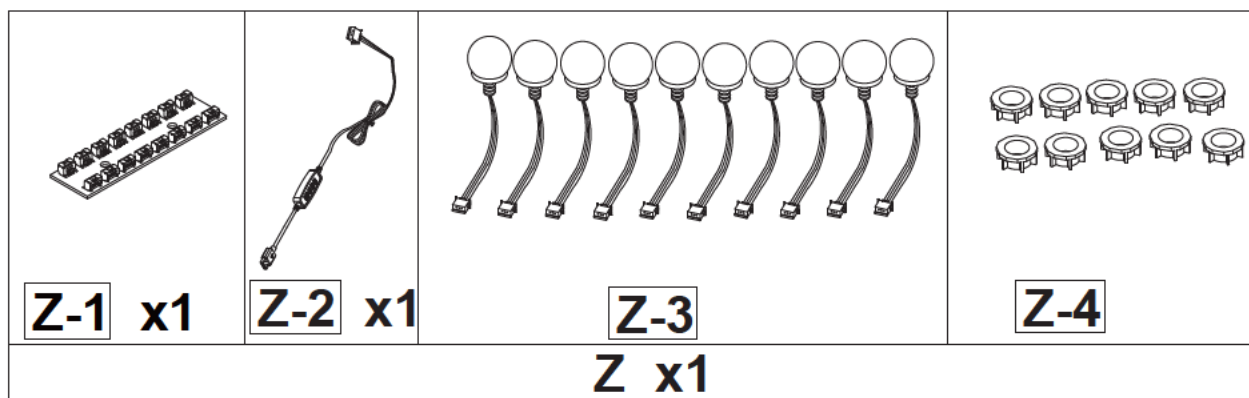











Please note that each terminal of **Z-1** can be used.

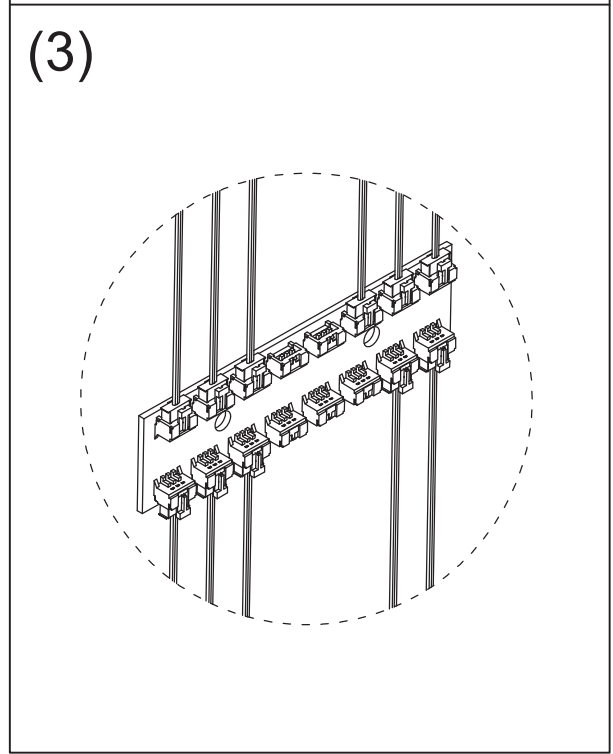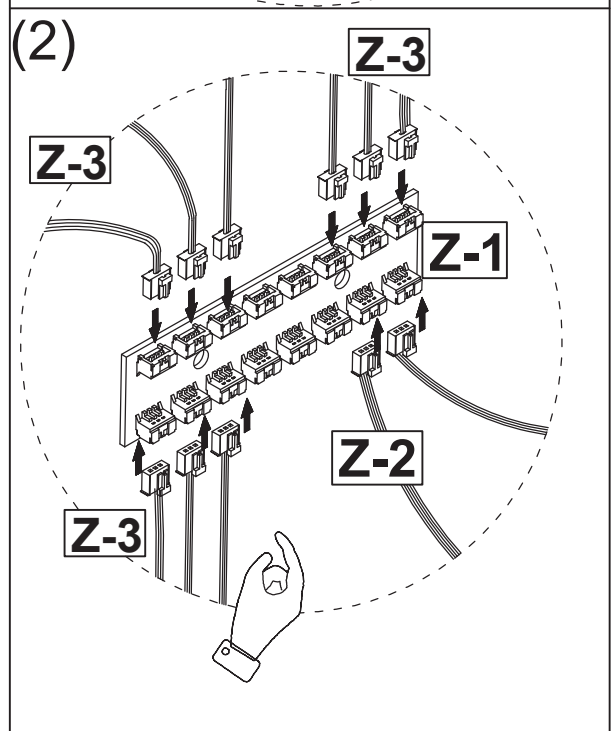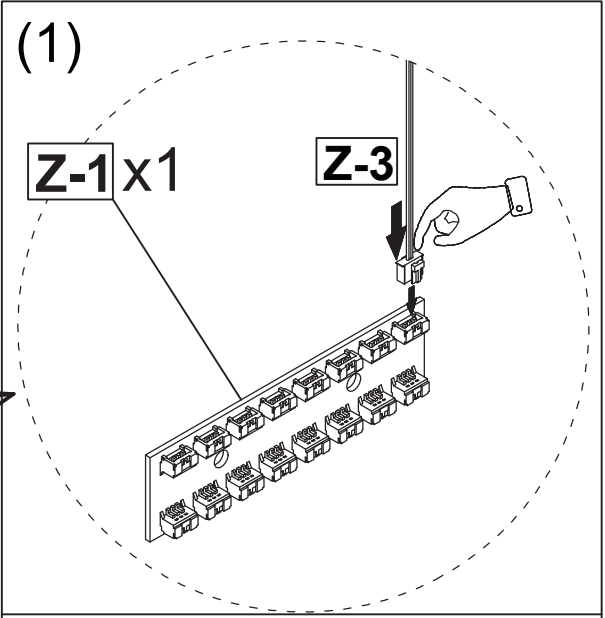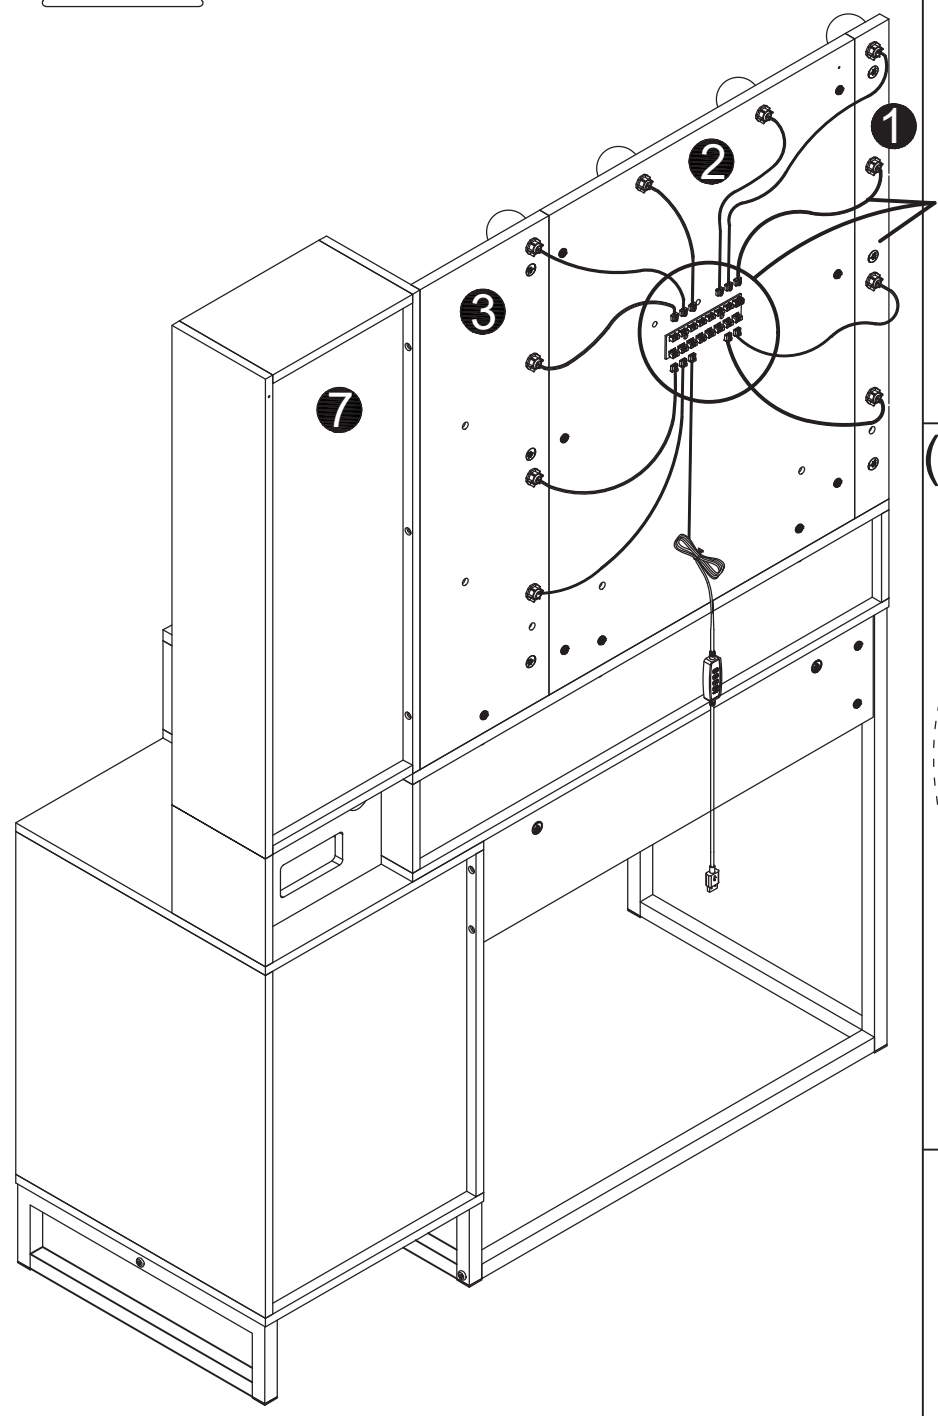

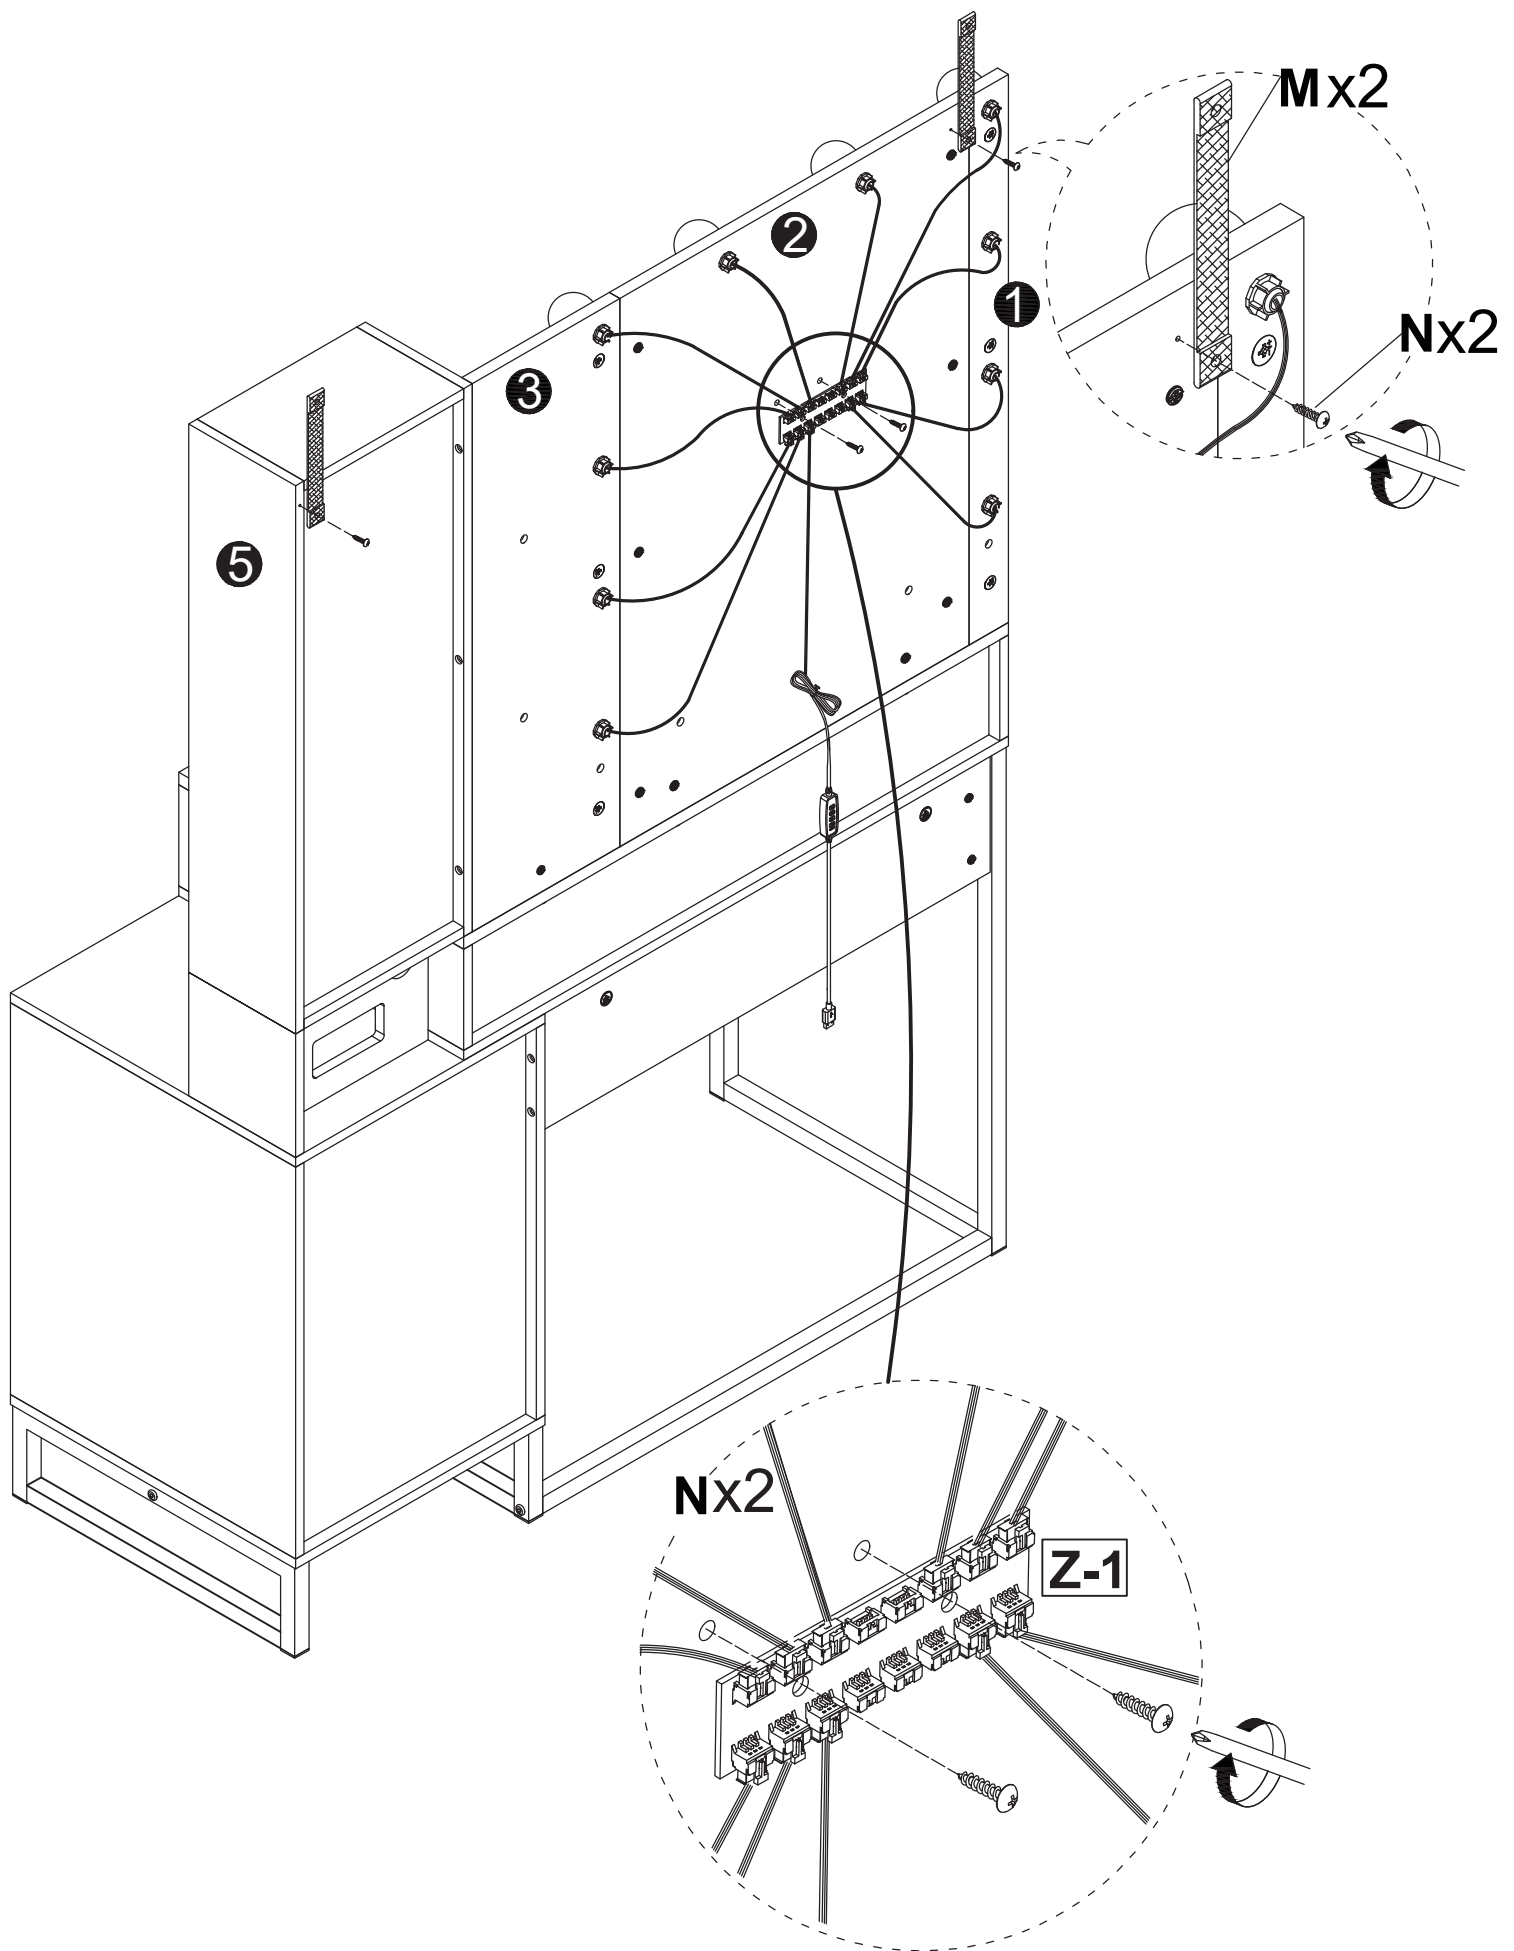


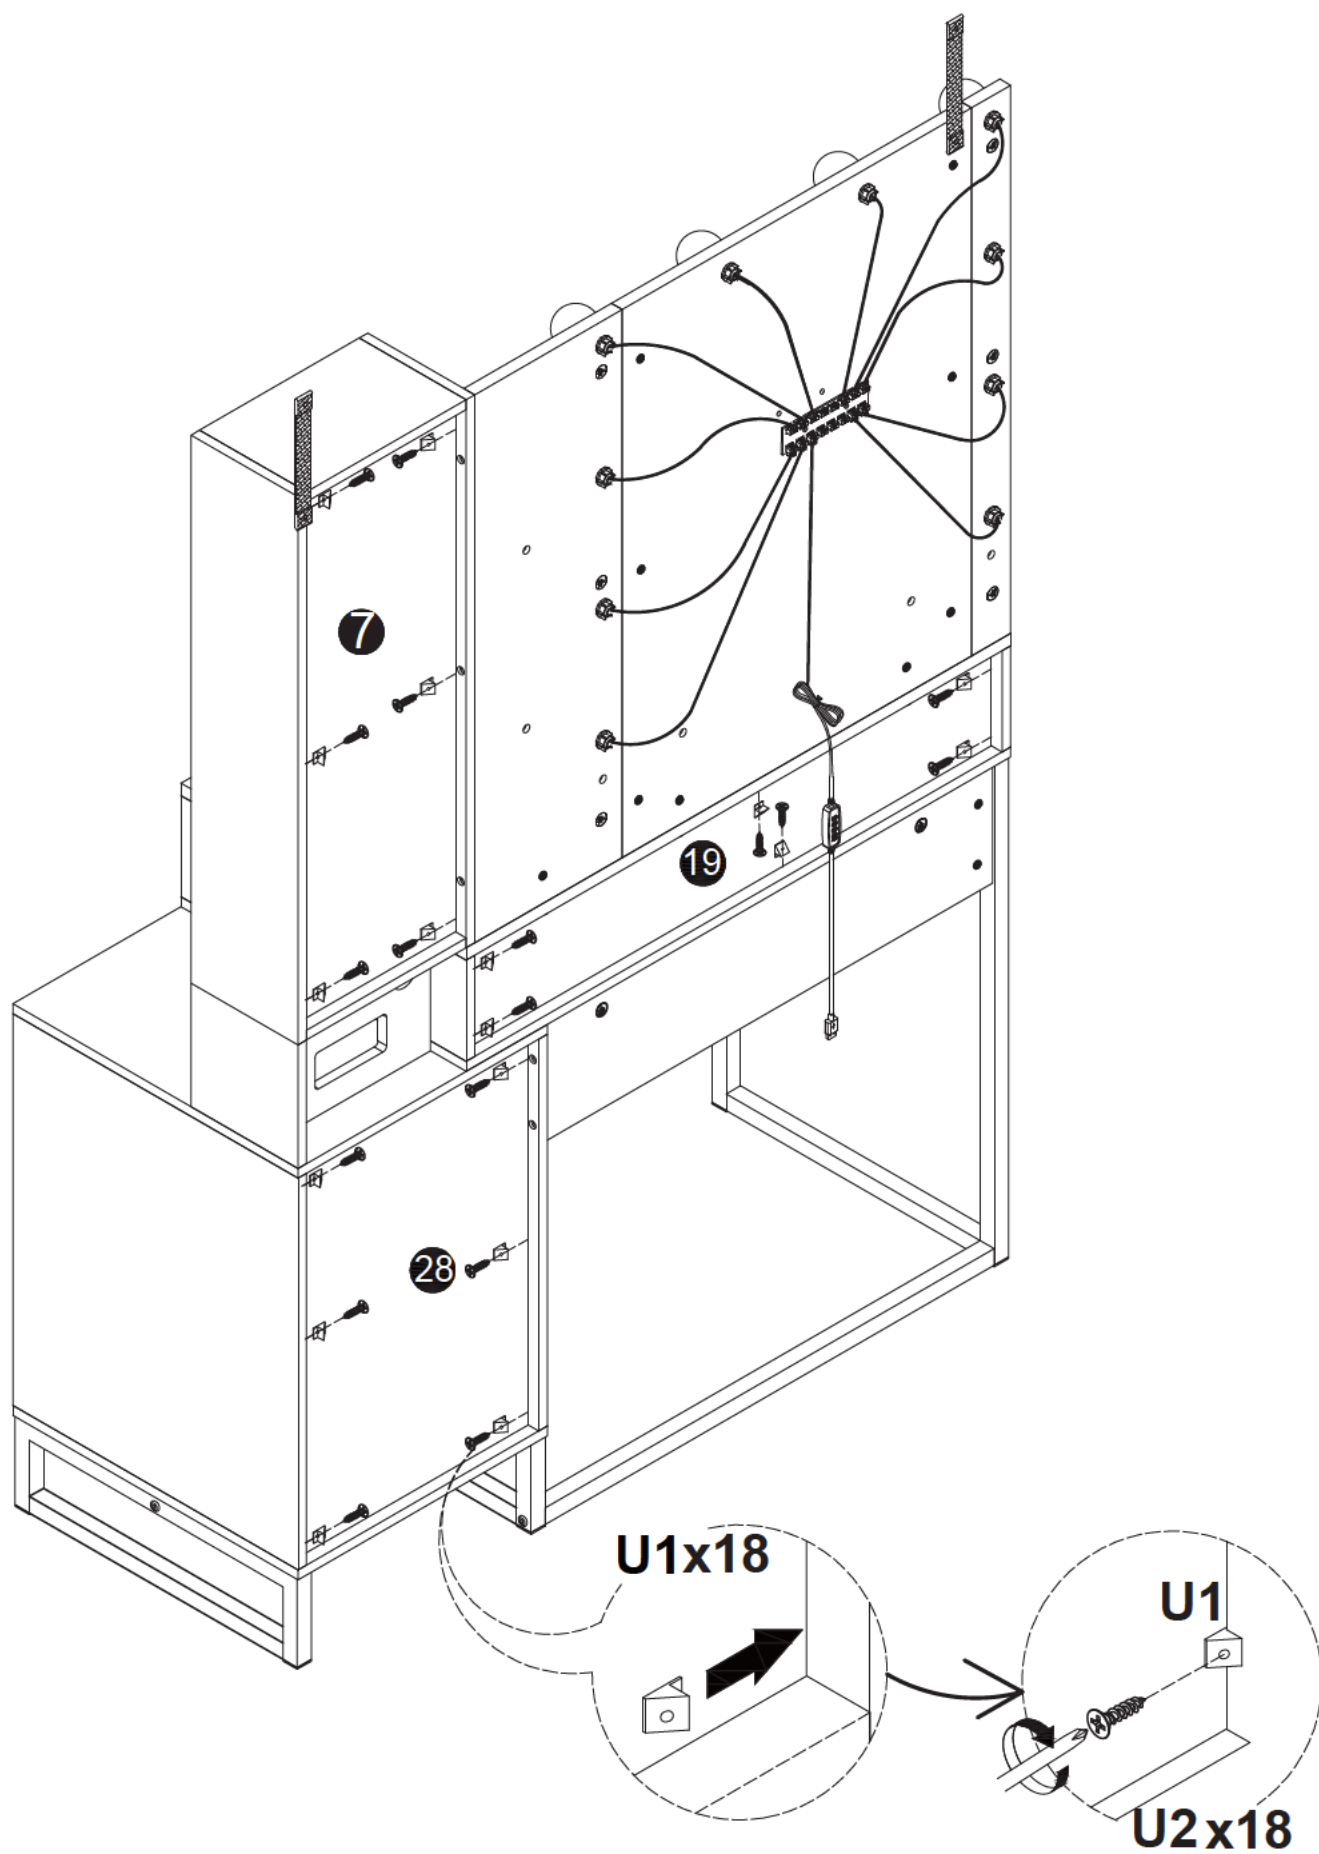

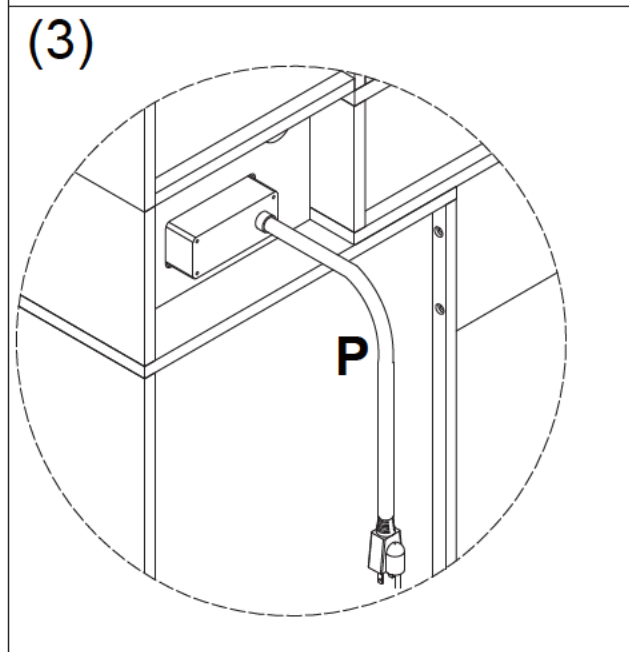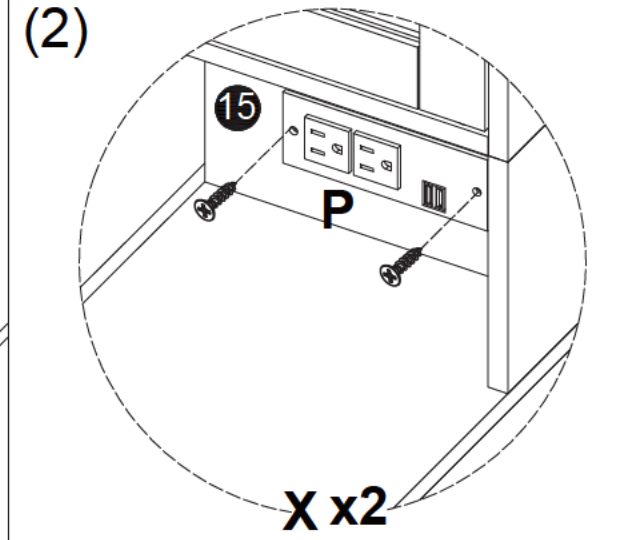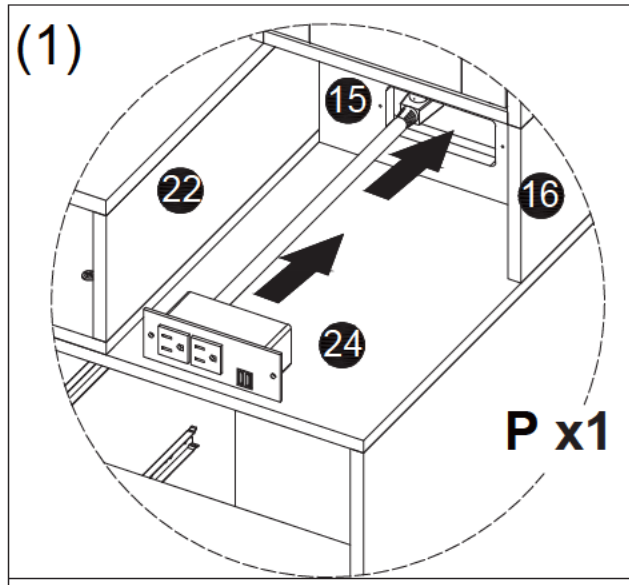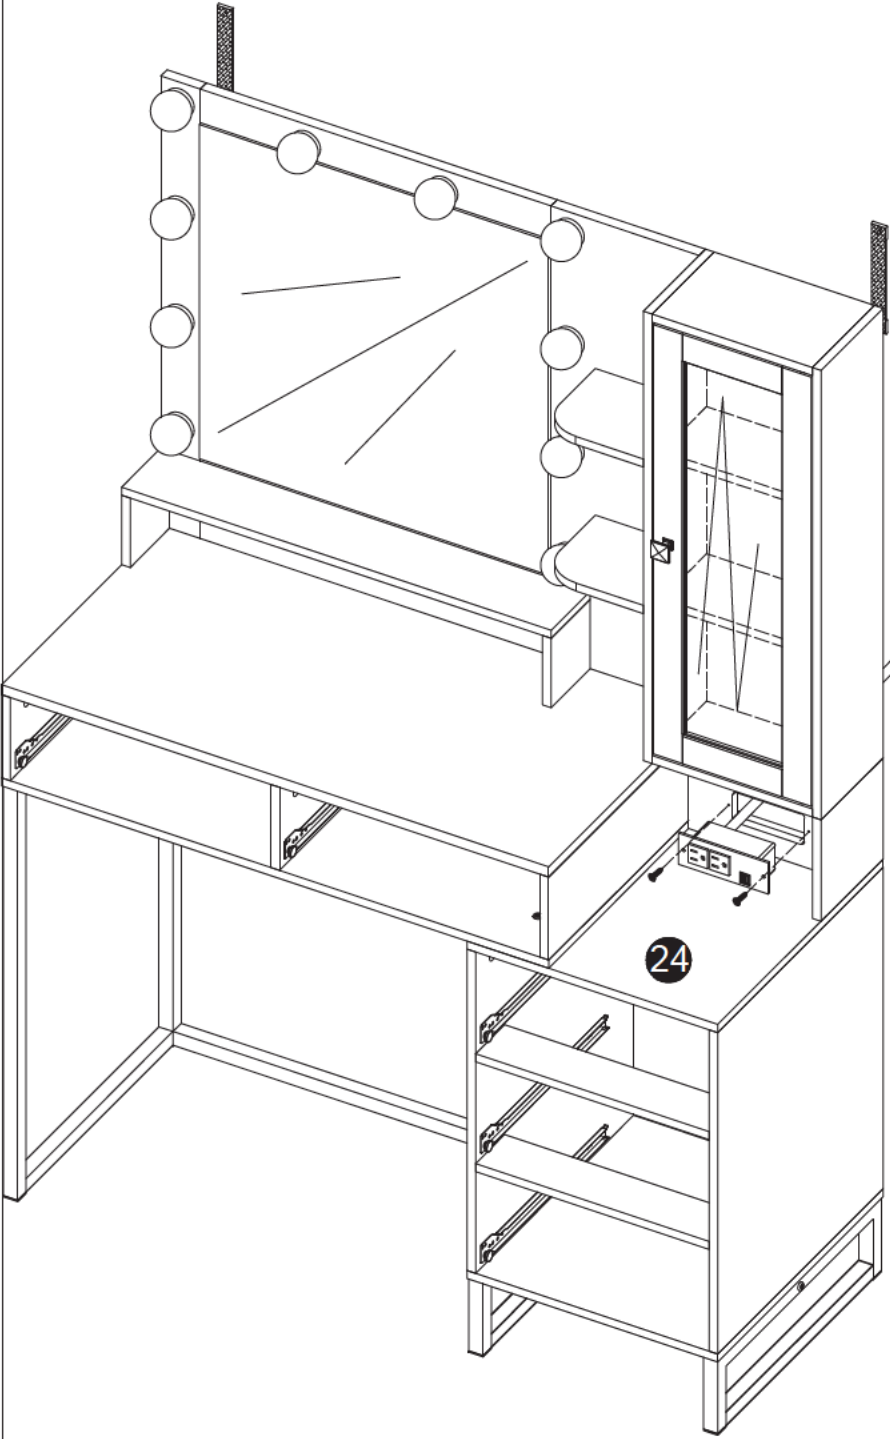


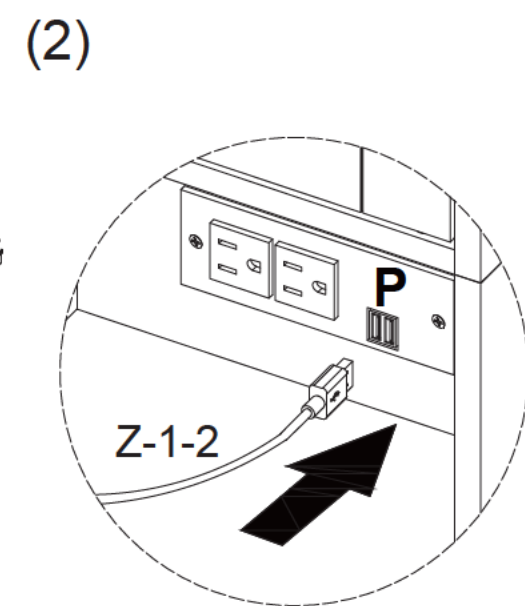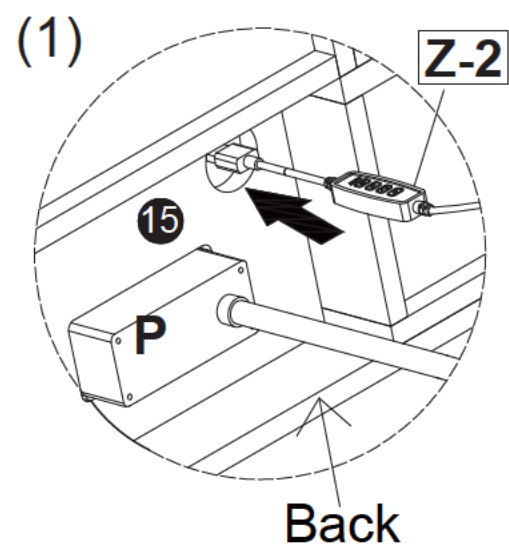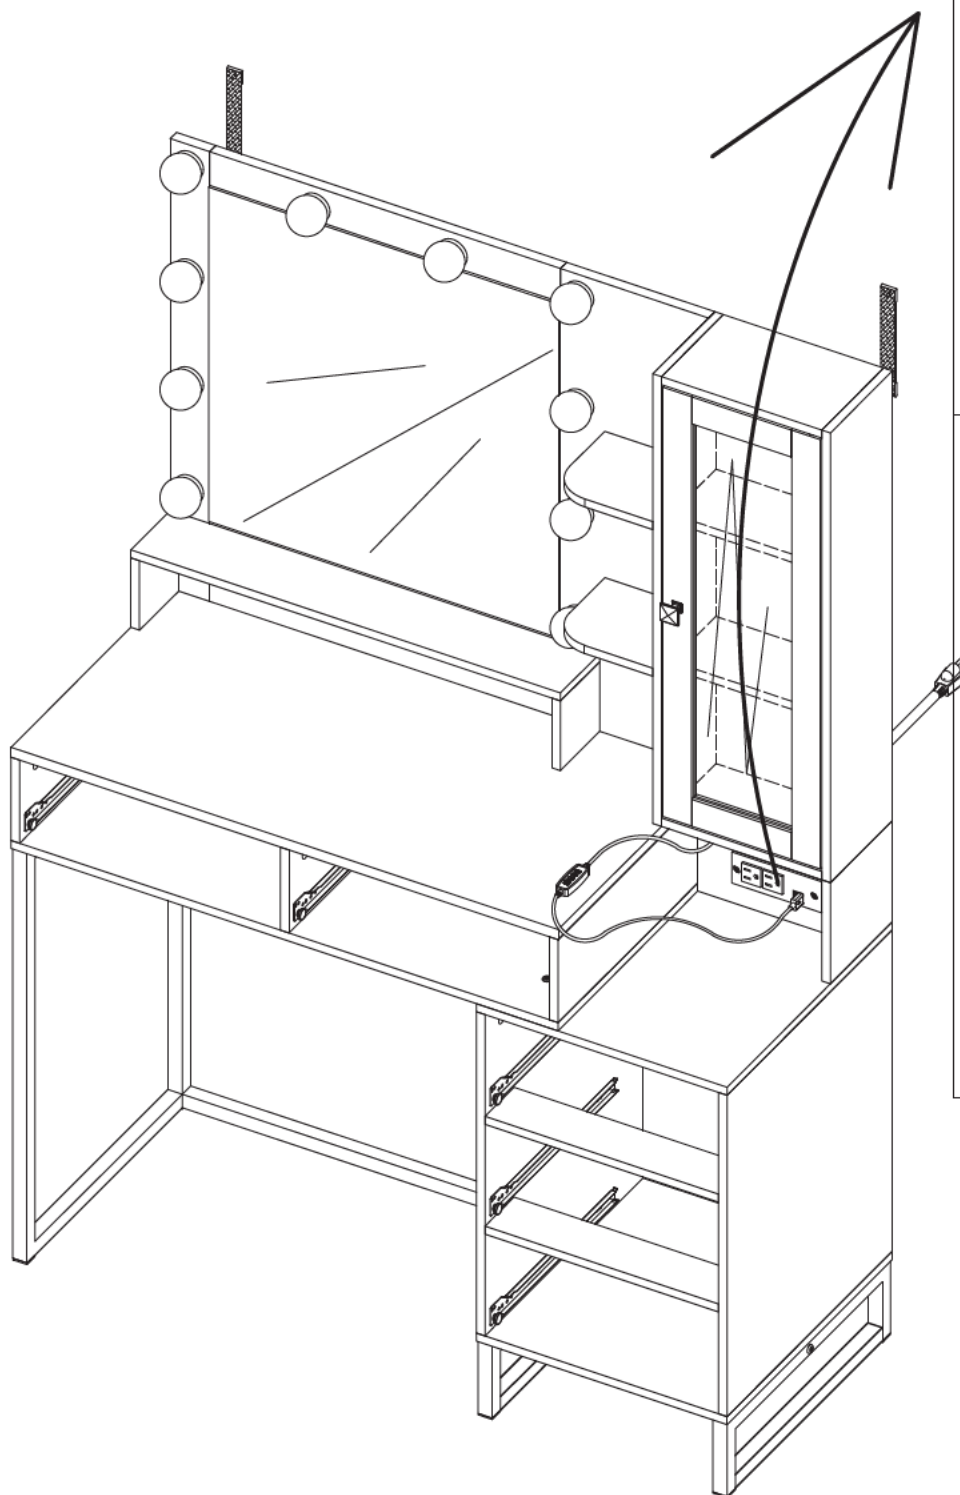

44 x2

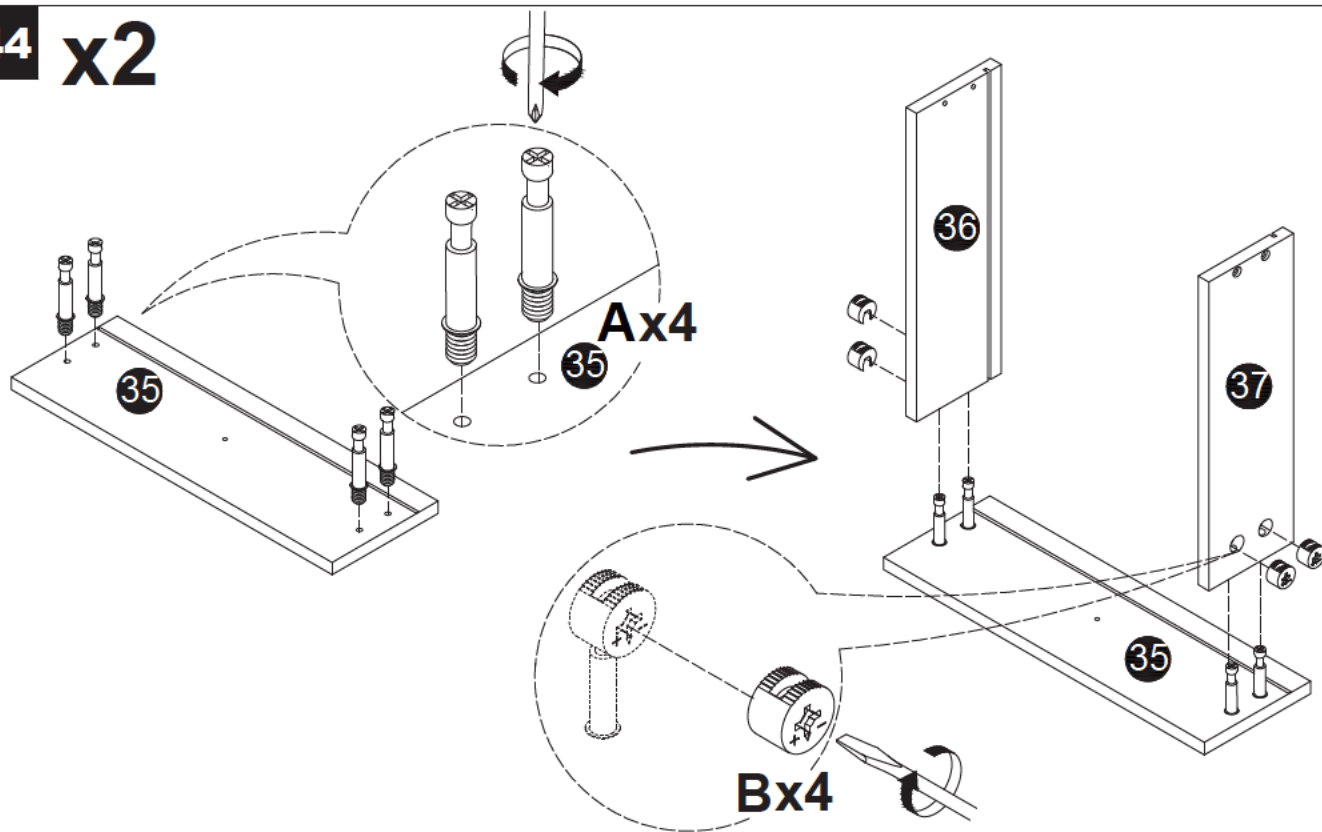



45 x2

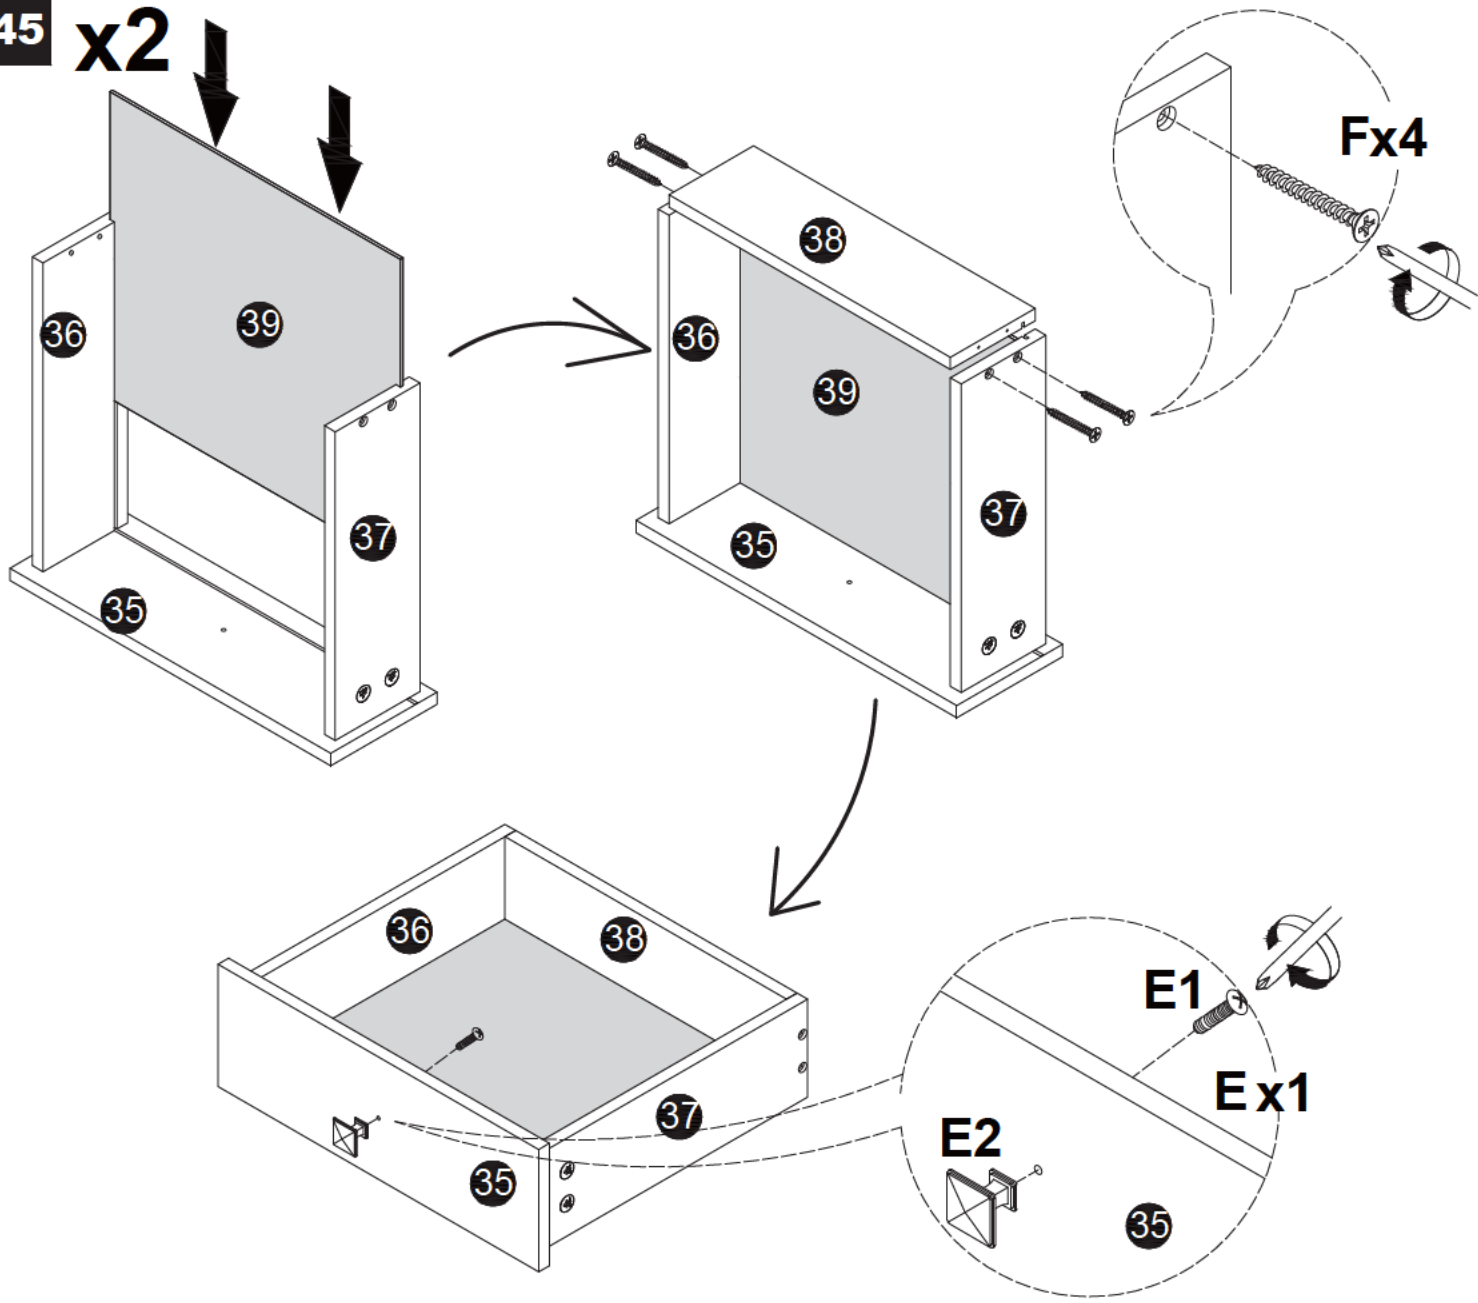

46


x2

DRx1

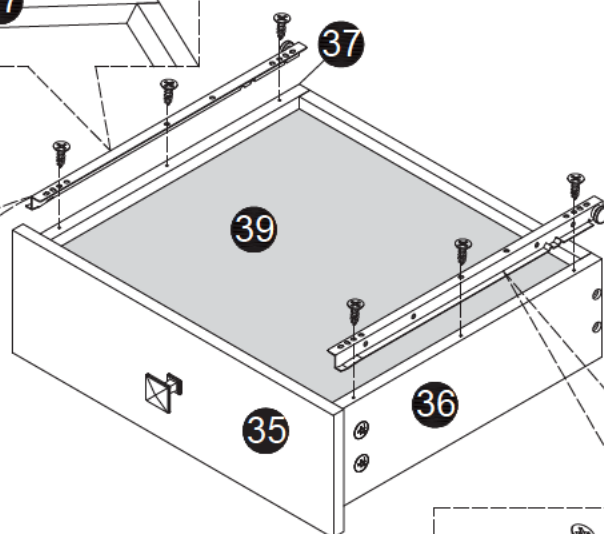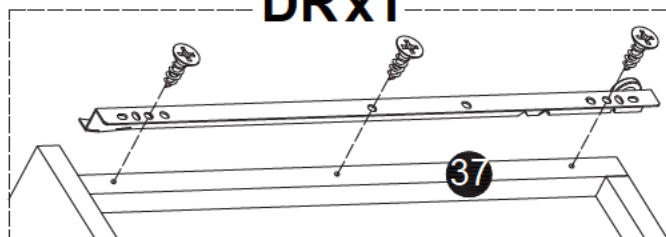



Dx6

DLx1


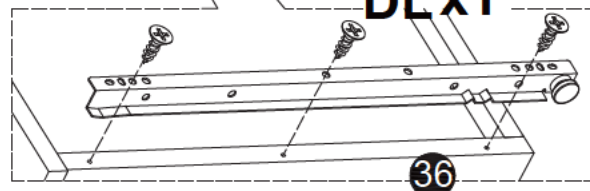


47

x3

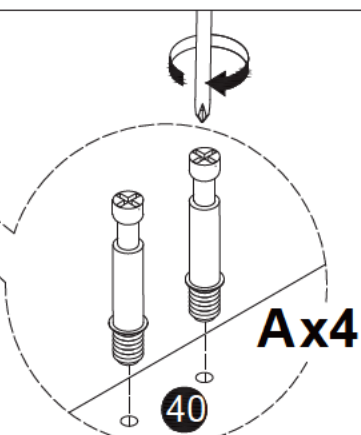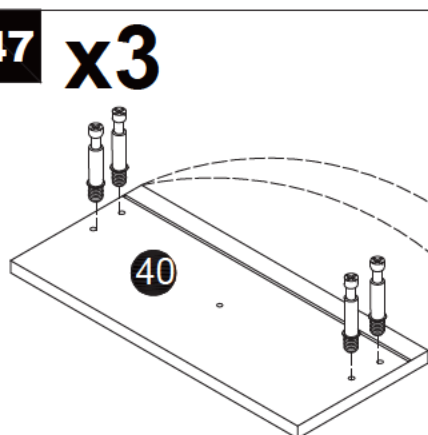


Ax4

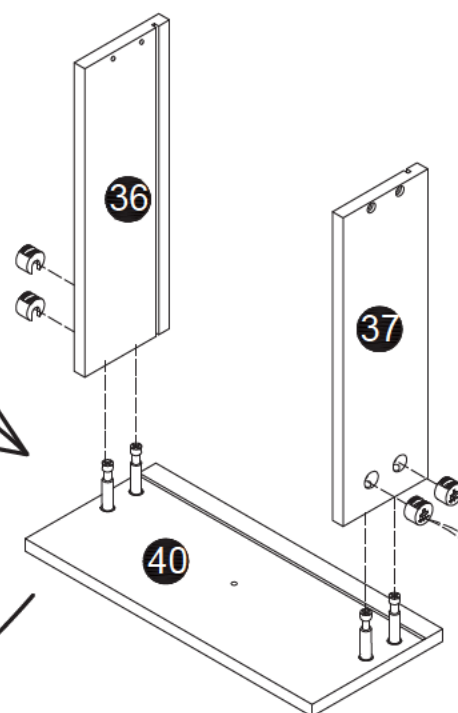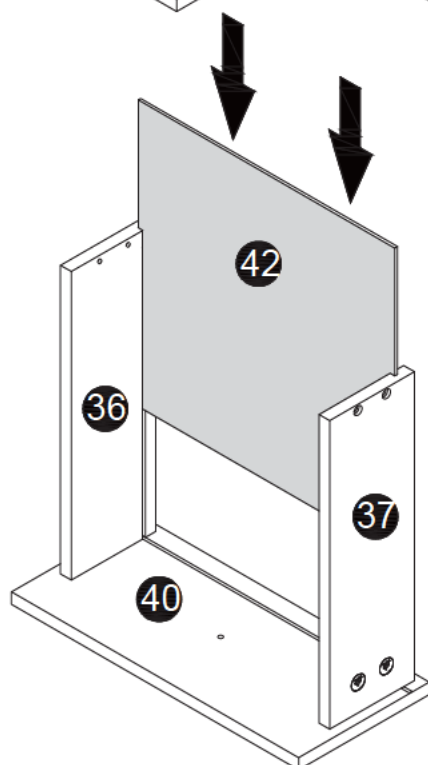


Bx4


48 x3

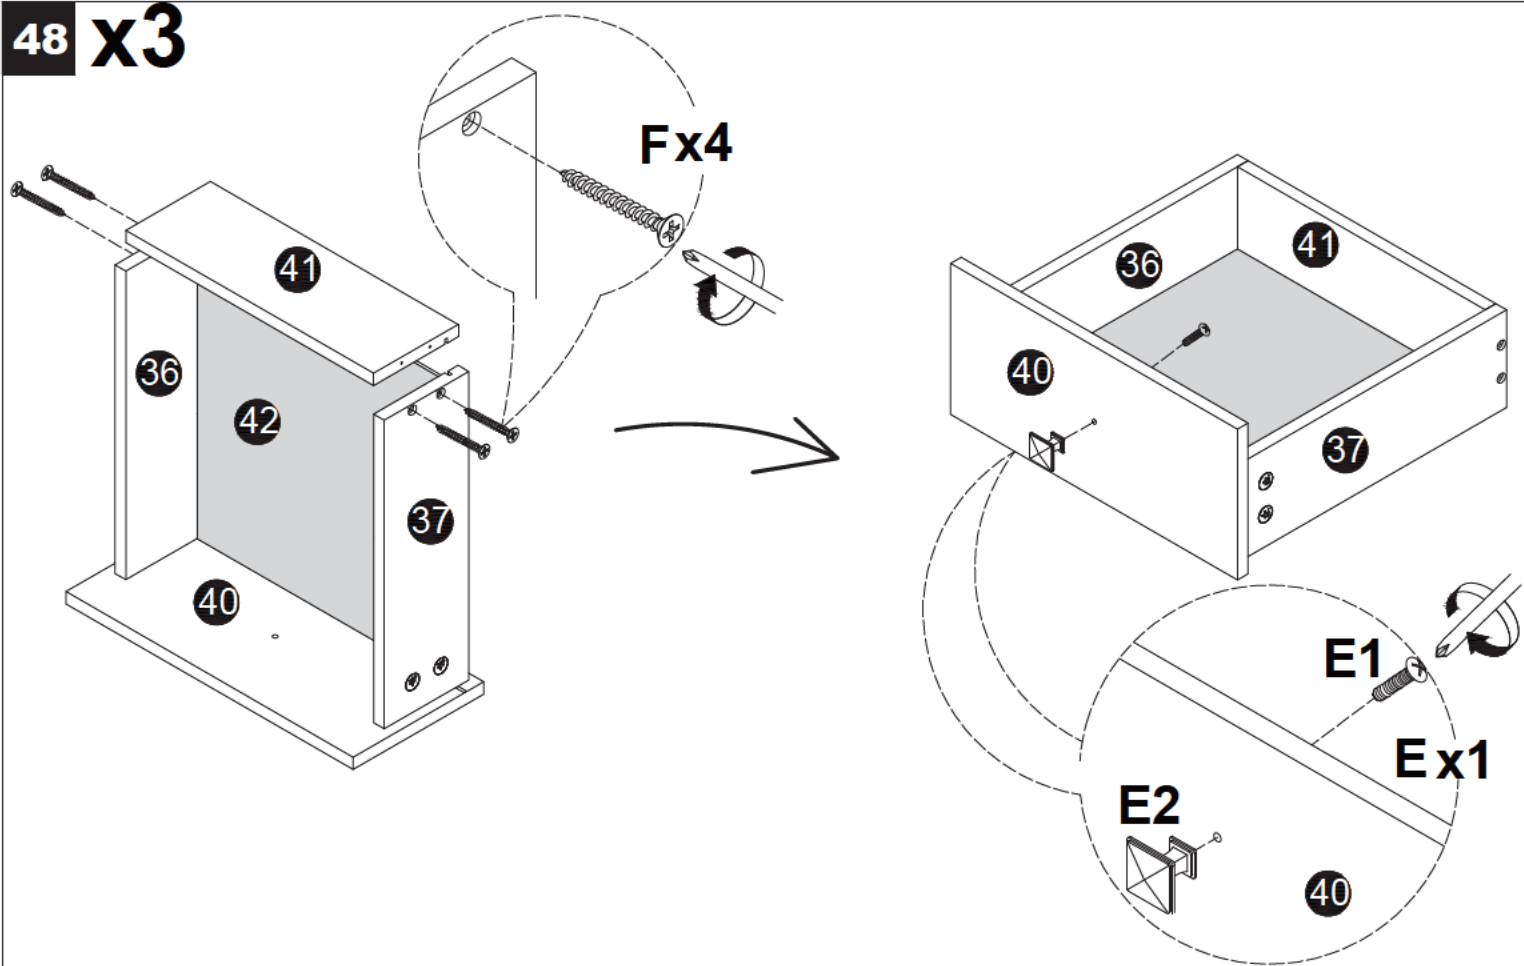



49 x3

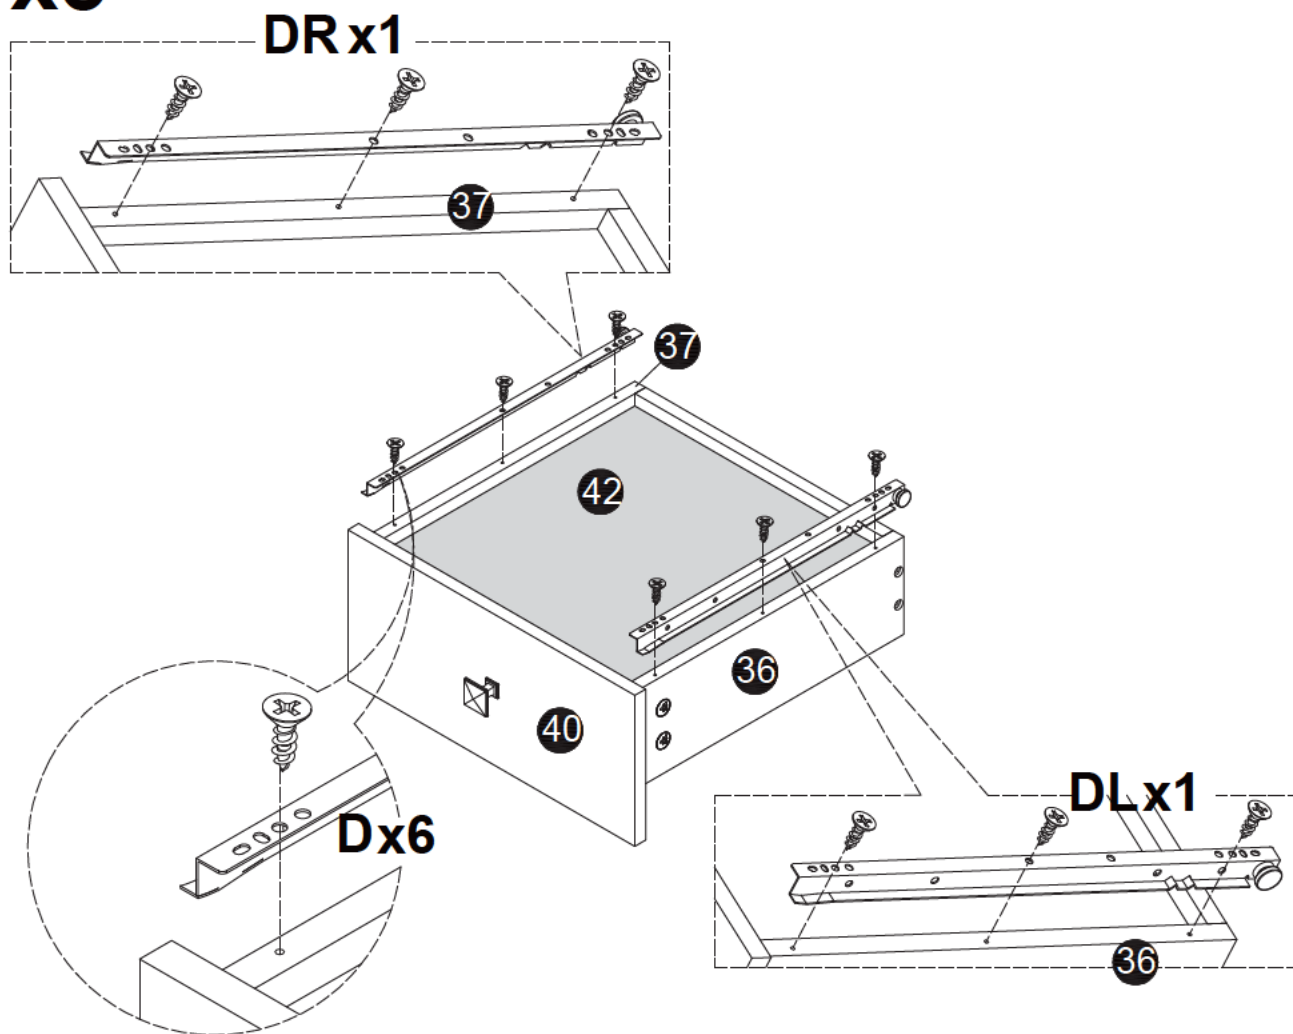

(1)

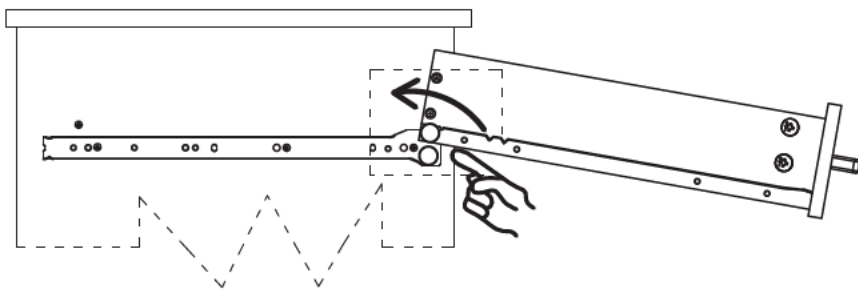

(2)

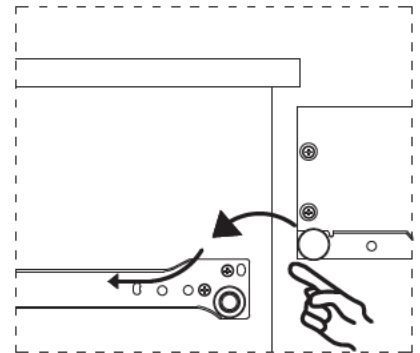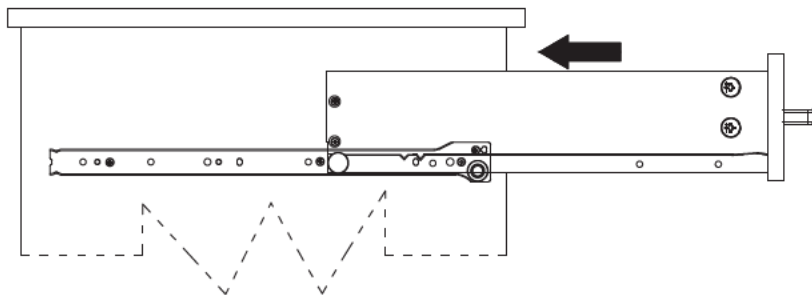

x5

