
DA0097

Thank you for your purchase. Since this item consists of numerous parts, please carefully review the installation instructions before proceeding. There are two ways to install the product, and we'll indicate both methods at key steps. You can select the installation approach that best suits your needs.

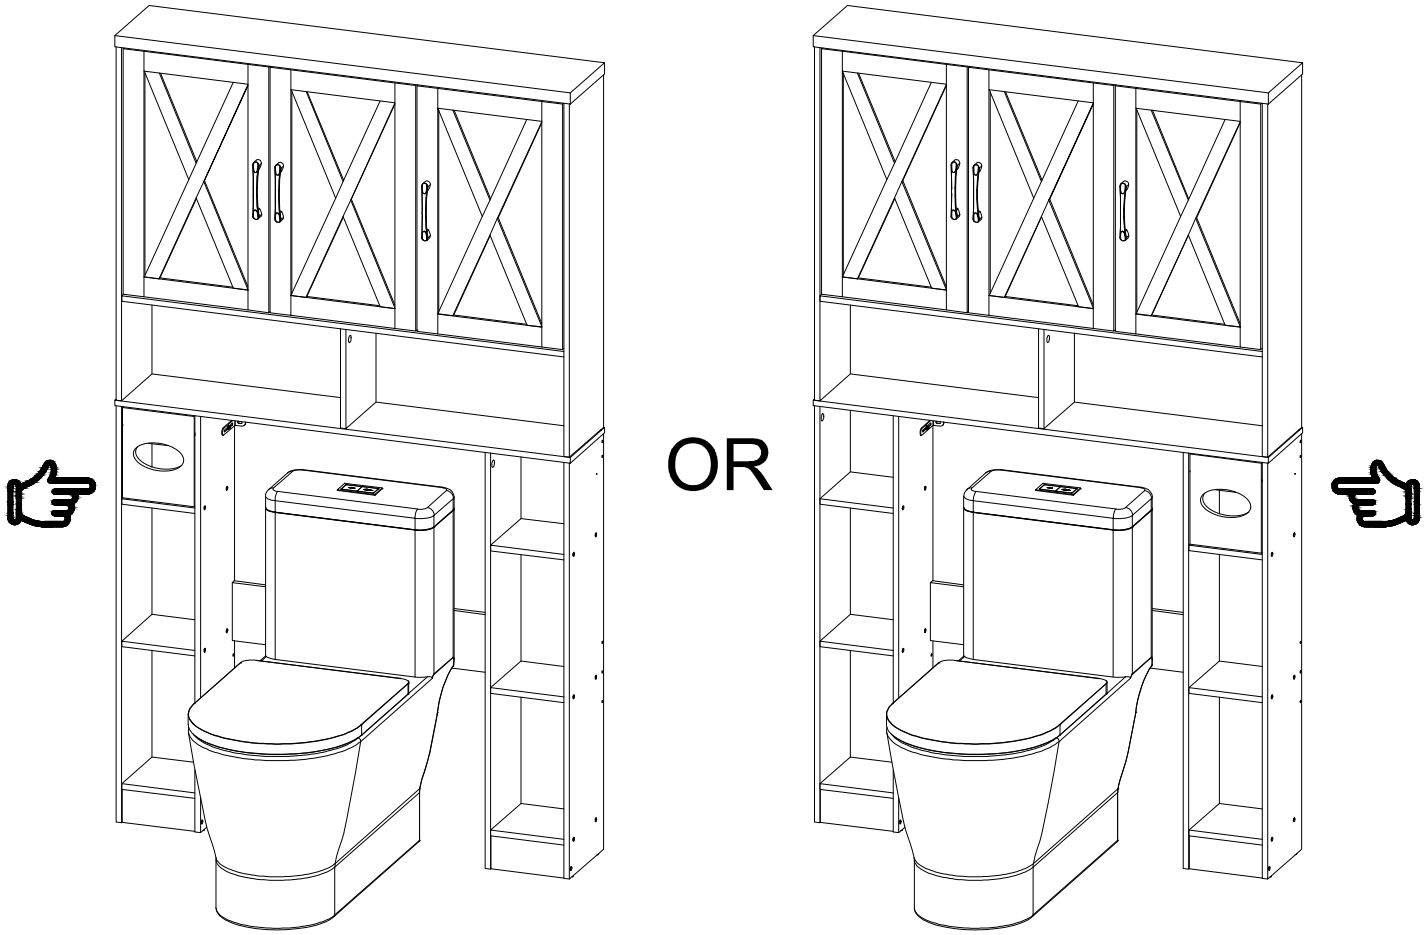


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

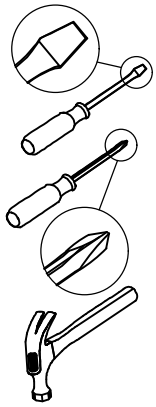

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

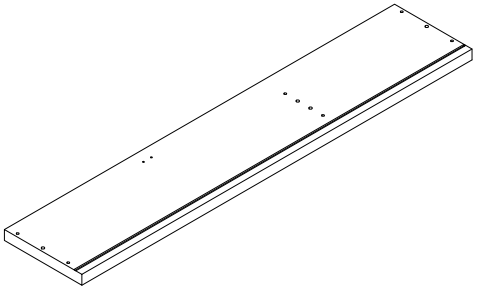


1
TOP
Qty:1

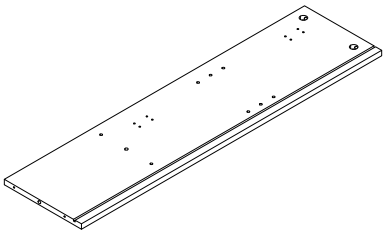


2
UPPER LEFT SIDE PANEL
Qty:1

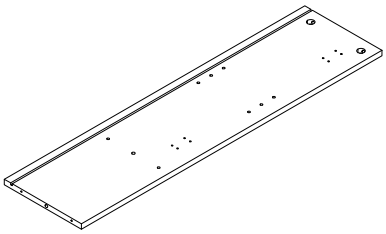


3
UPPER RIGHT SIDE PANEL
Qty:1

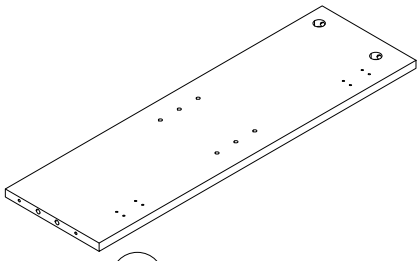


4
UPPER PARTITION
Qty:1

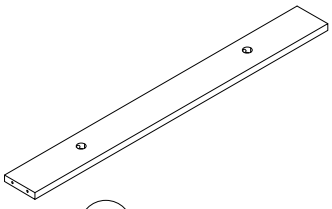


5
RAIL
Qty:1

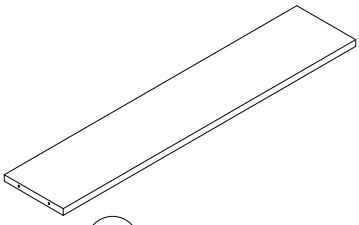


6
REAR TRANSVERSE PANEL
Qty:1

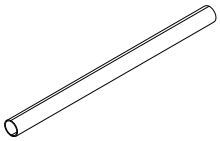


7
CIRCULAR TUBE
Qty:1

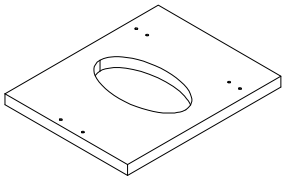


8
FLAP
Qty:1

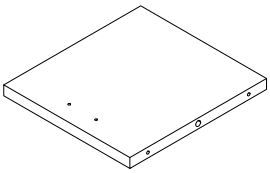


9
FIXED SHELF
Qty:1

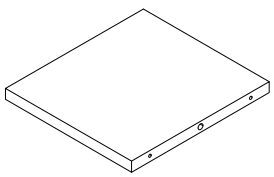

10
FIXED SHELF
Qty:3

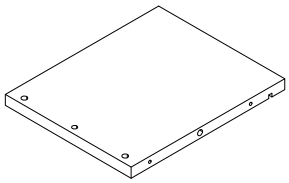


11
BOTTOM
Qty:2

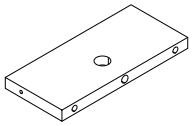


12
RAIL
Qty:2

Board Identification


Not actual size

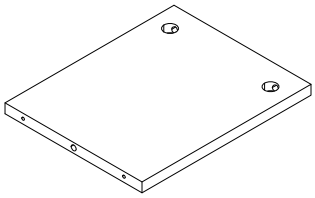


13
UPPER PARTITION
Qty:1

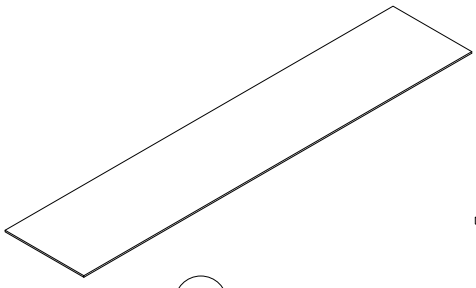


14
LOWER BACK PANEL
Qty:2

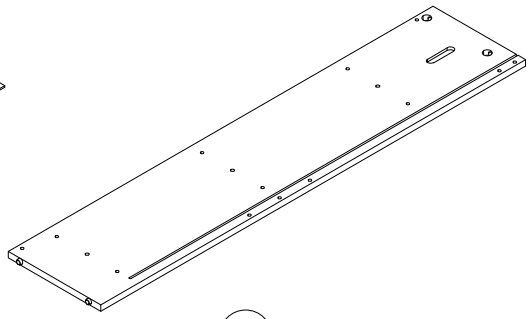


15
LOWER LEFT SIDE PANEL
Qty:1

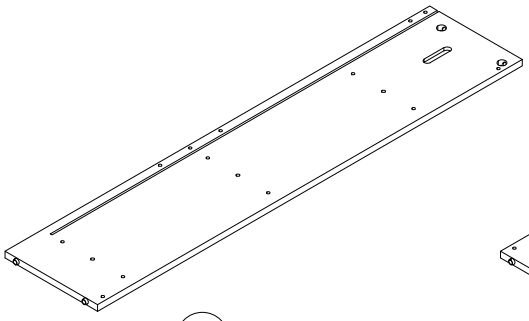


16
LOWER LEFT PARTITION
Qty:1

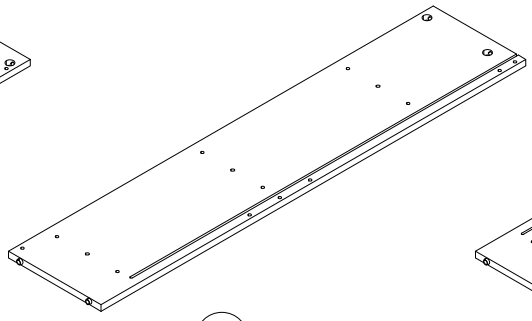


17
LOWER RIGHT PARTITION
Qty:1

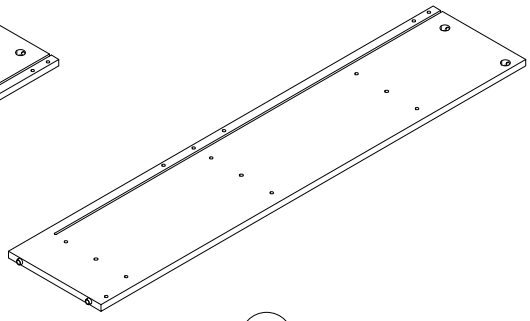


18
LOWER RIGHT SIDE PANEL
Qty:1

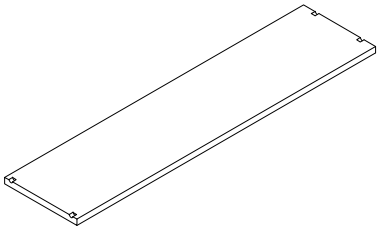


19
ADJUSTABLE SHELF
Qty:1

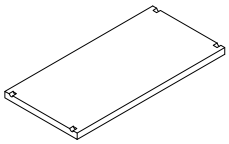


20
ADJUSTABLE SHELF
Qty:1

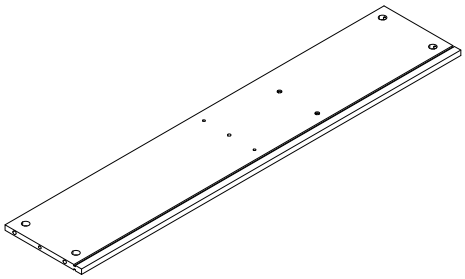


21
FIXED SHELF
Qty:1

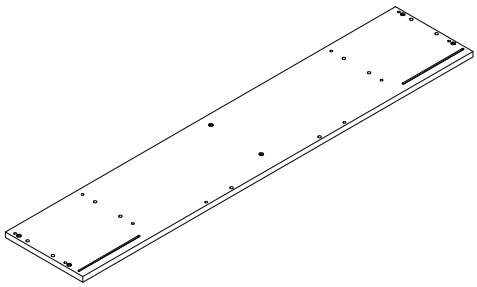

22
MIDDLE PANEL
Qty:1

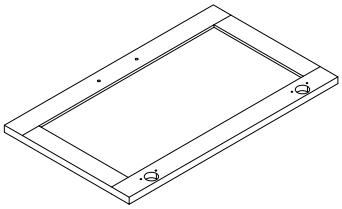


23
DOOR PANEL
Qty:3

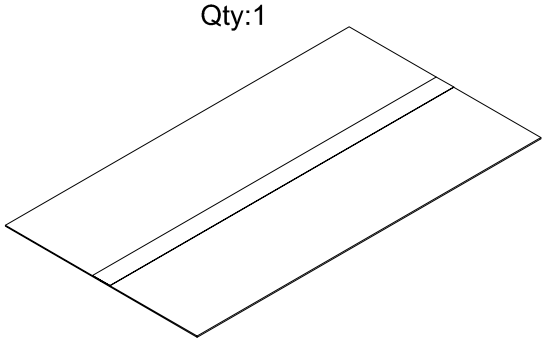

24
UPPER BACK PANEL
Qty:1

Board Identification

Not actual size

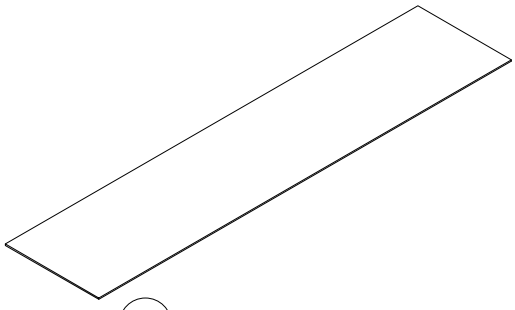


25

MIDDLE BACK PANEL
Qty:1


Part List

Not actual size




Ø15X9.5mm | A | X24

CAM LOCK
spare:2




Ø6.5X35mm | B | X24

CAM BOLT
spare:2




Ø6X30mm | C | X38

WOODEN DOWEL
spare:3



Ø4X35mm | D | X44

SCREW
spare:3




Ø3.5X12mm | E | X36

SCREW
spare:3




Ø3X10mm | F | X6

SCREW
spare:1




Ø3X12mm | G | X4

SCREW
spare:1




41X16X13mm | H | X1

MAGNETIC CATCHER




39.5X12X1mm | I | X1

MAGNETIC CATCHER




43X8X9.5mm | J | X2

HINGE



Ø25mm | K | X4

HINGE

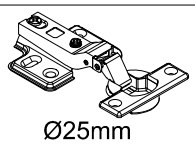


Ø25mm | L | X2


HINGE

Part List


Not actual size

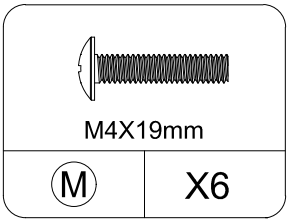


BOLT
spare:1

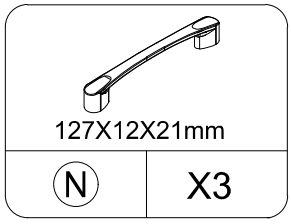


HANDLE

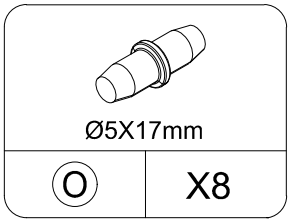


SHELF SUPPORT
spare:1

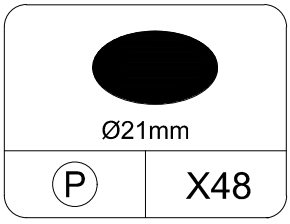

PERFECT STICKERS
spare:3

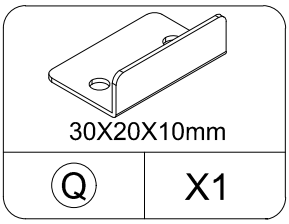


STOPPER

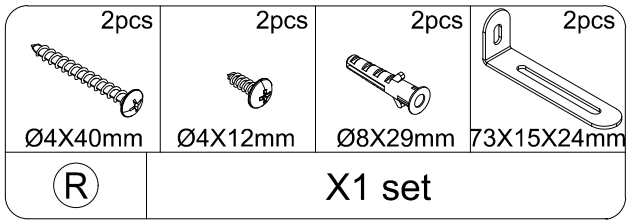

ANTI-TIPPING HARDWARE


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

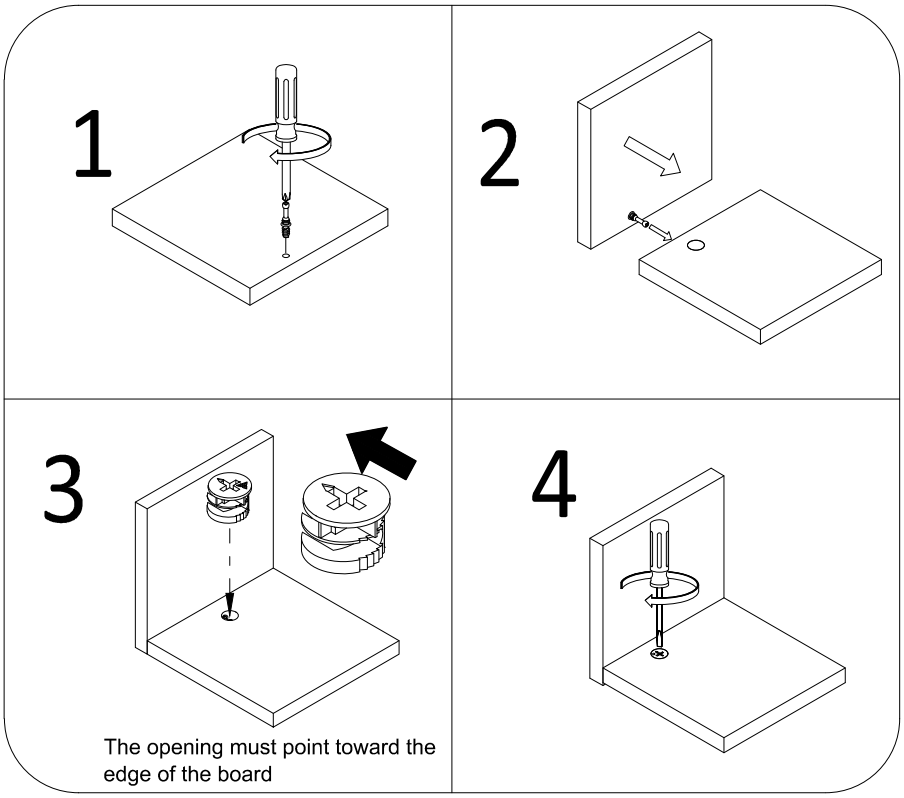



Board Identification


Not actual size

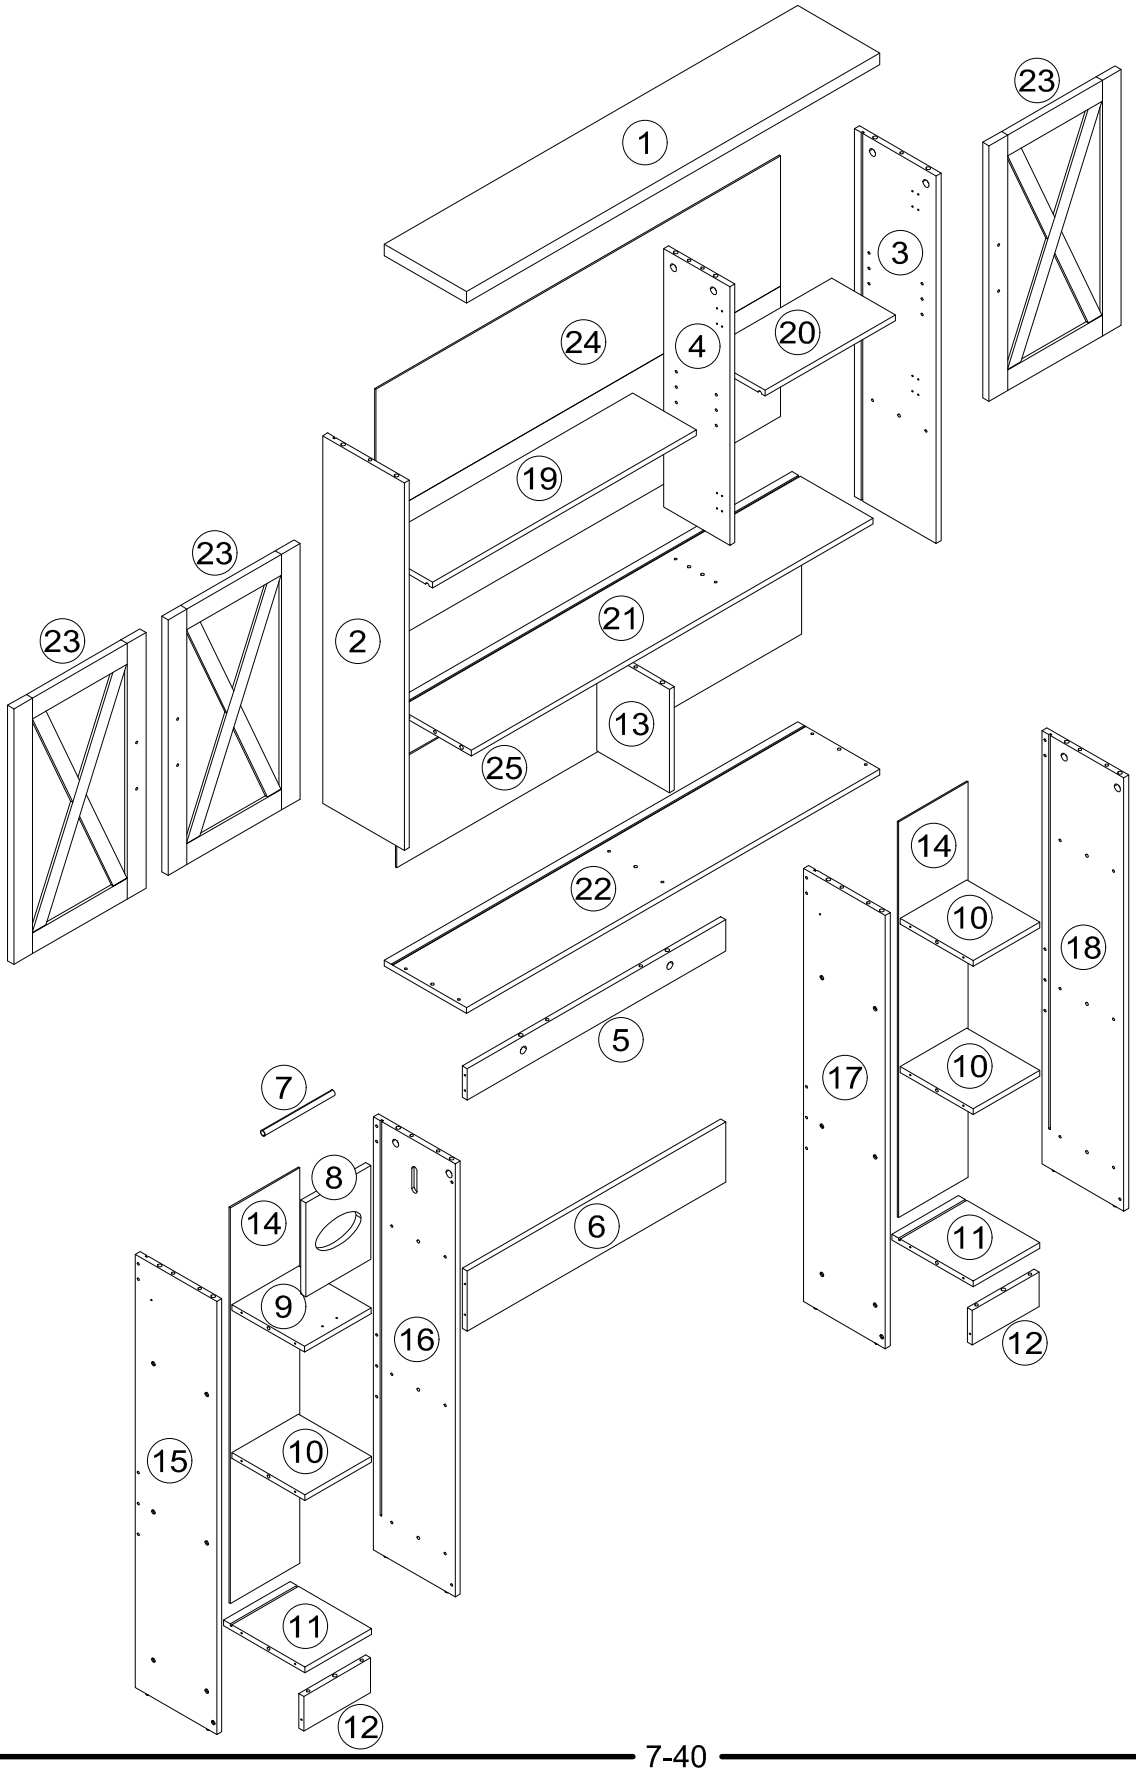


STEP1

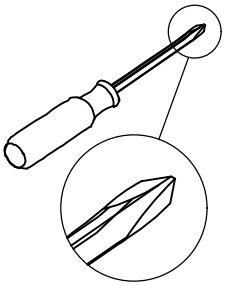


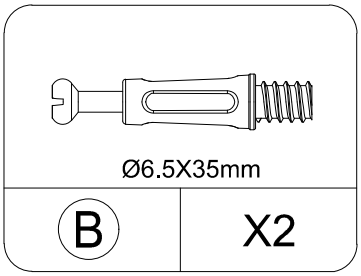


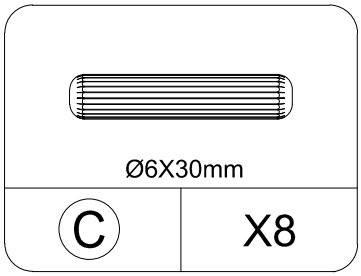


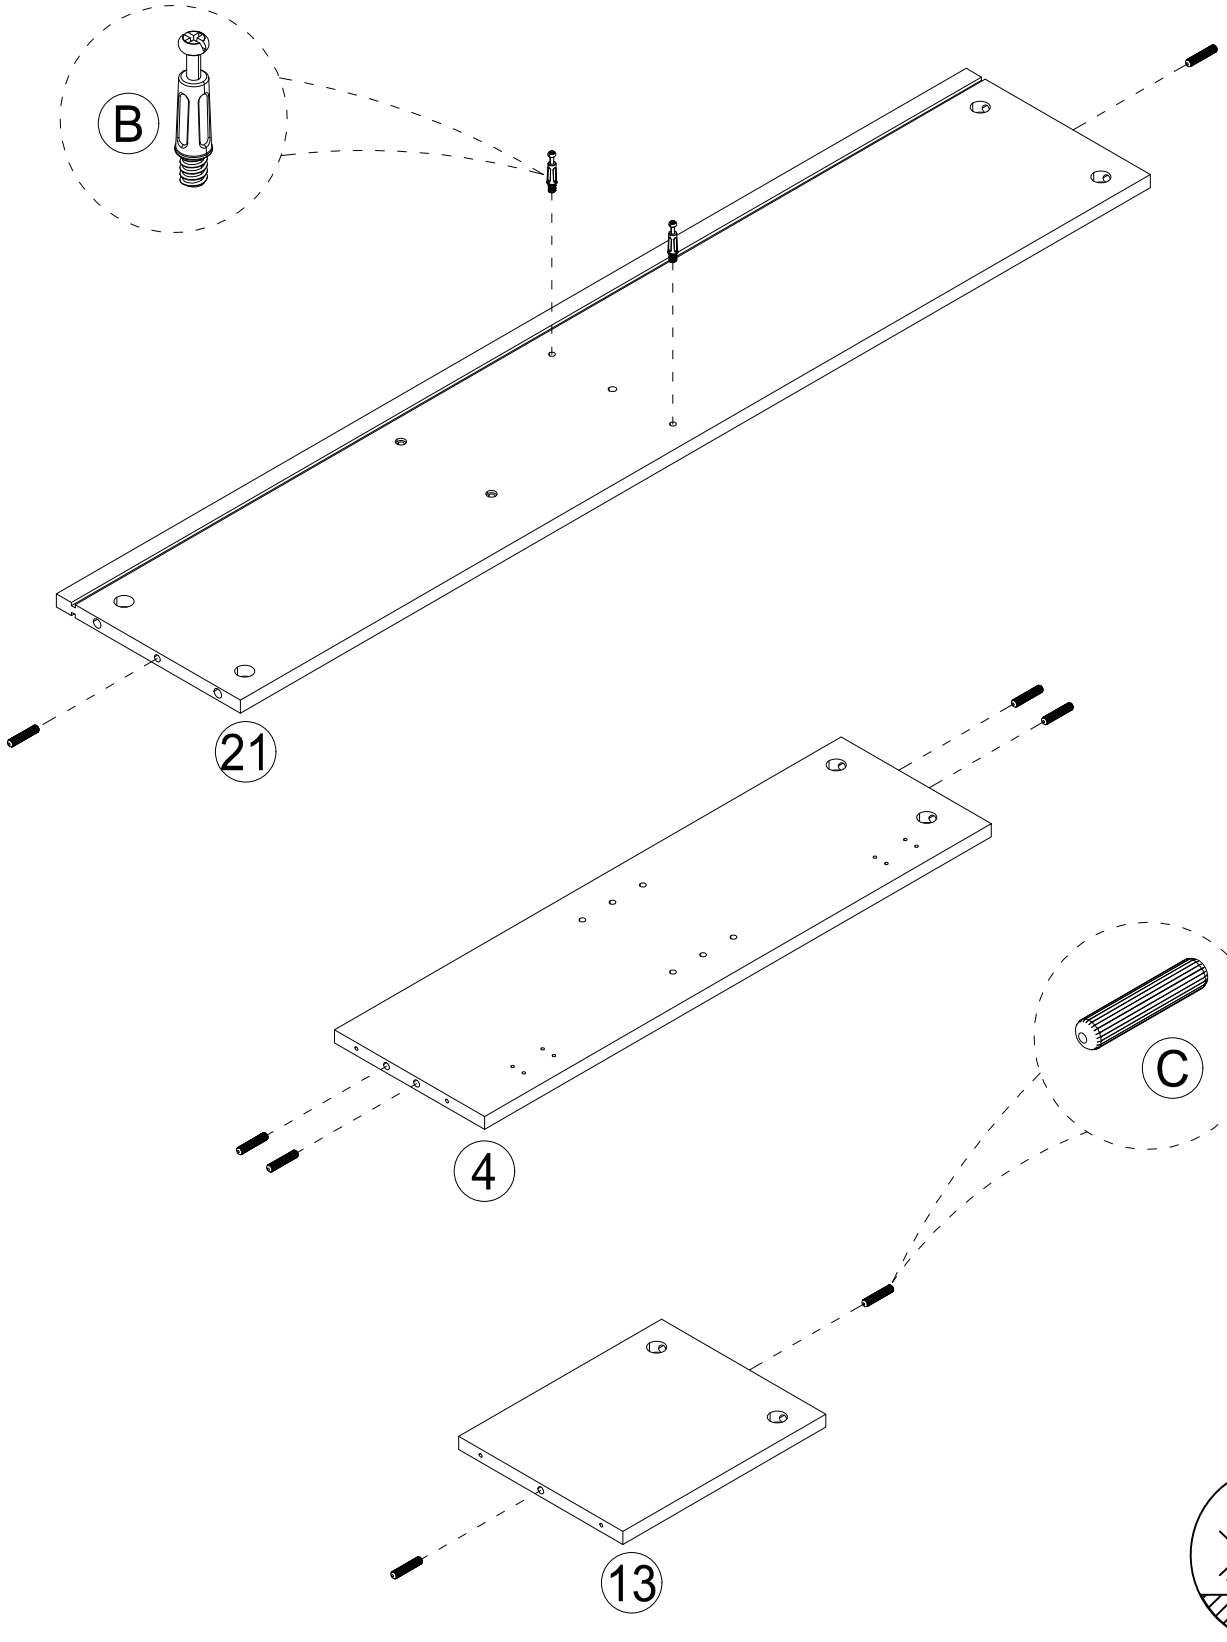



STEP2

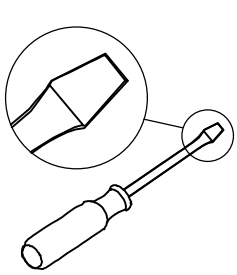


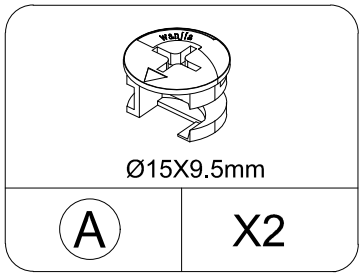

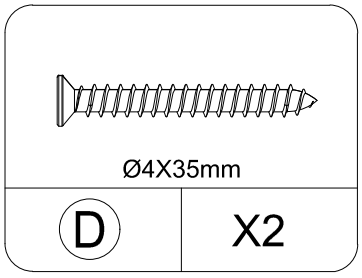


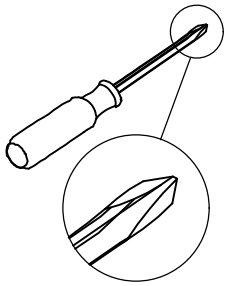

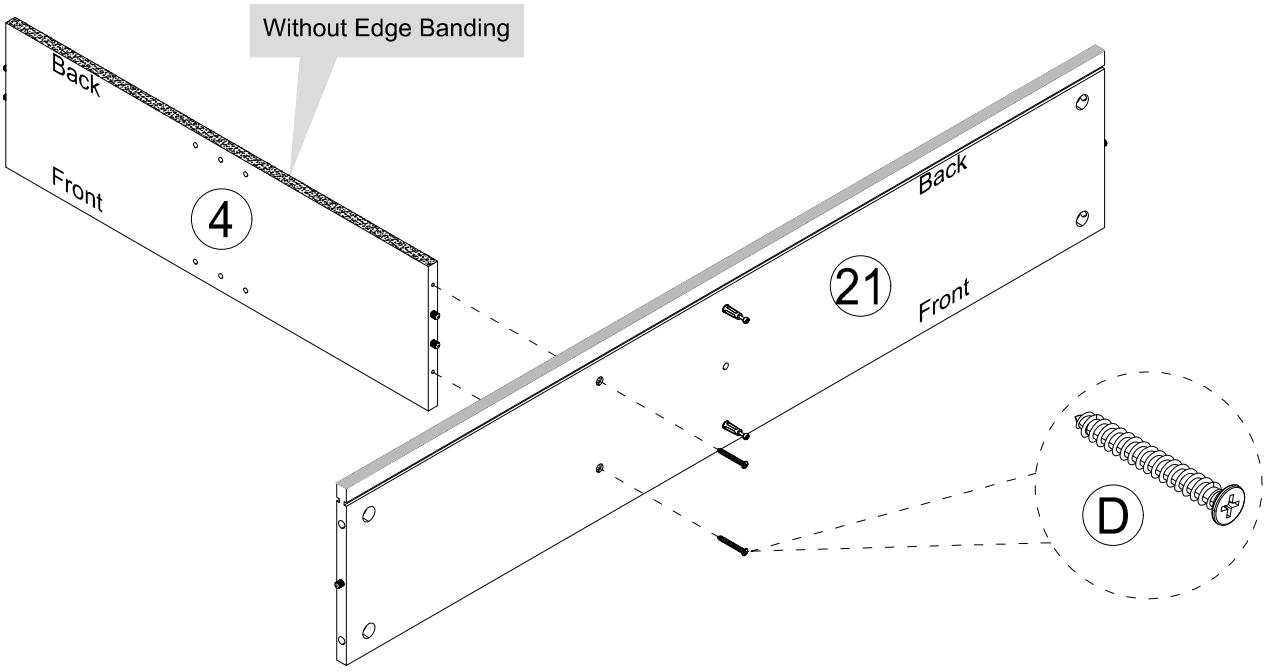

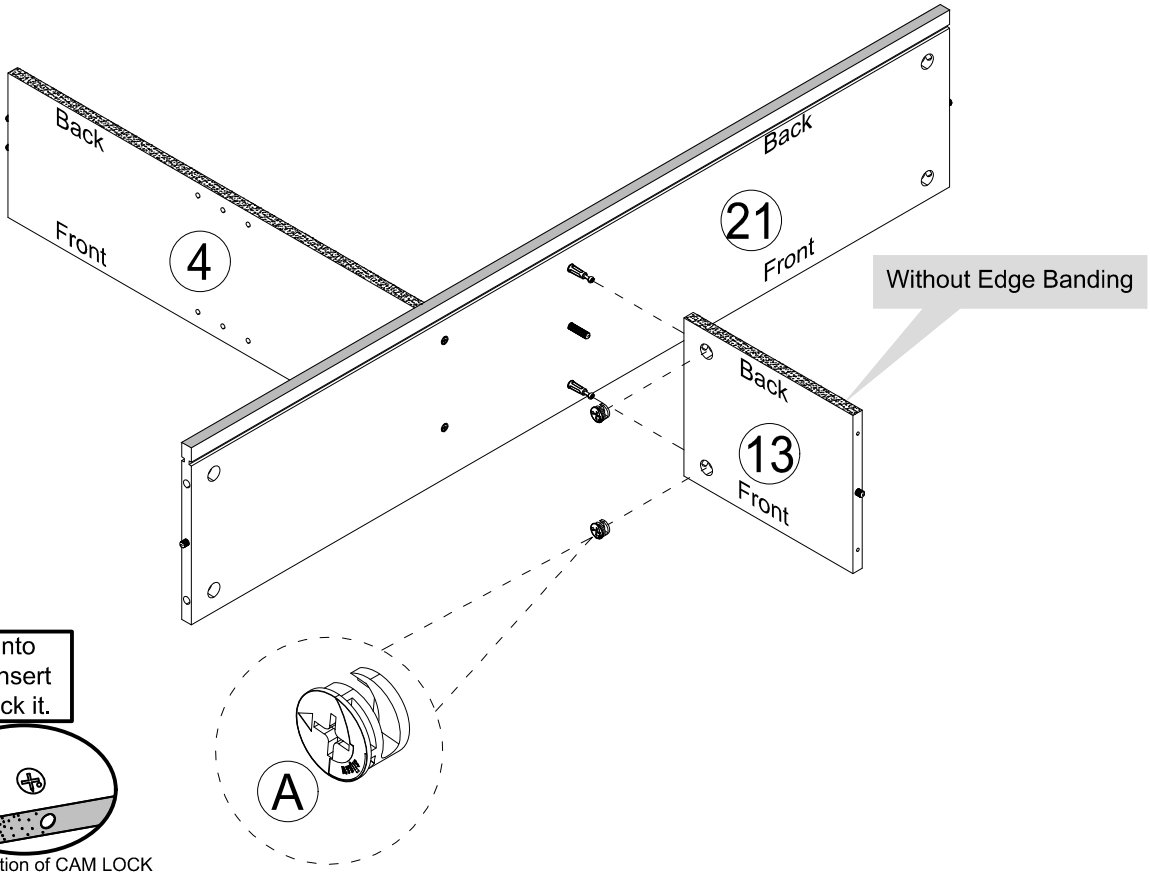



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

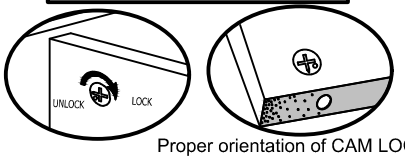



Proper orientation of CAM LOCK


STEP3

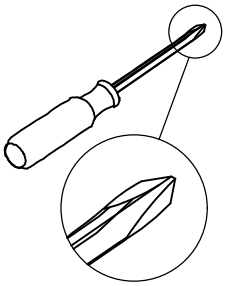

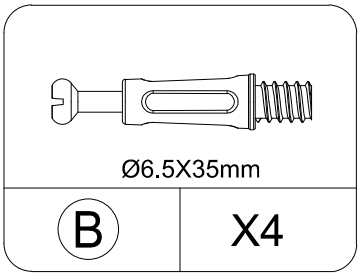


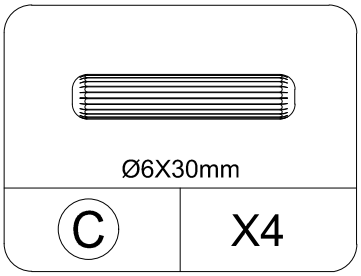


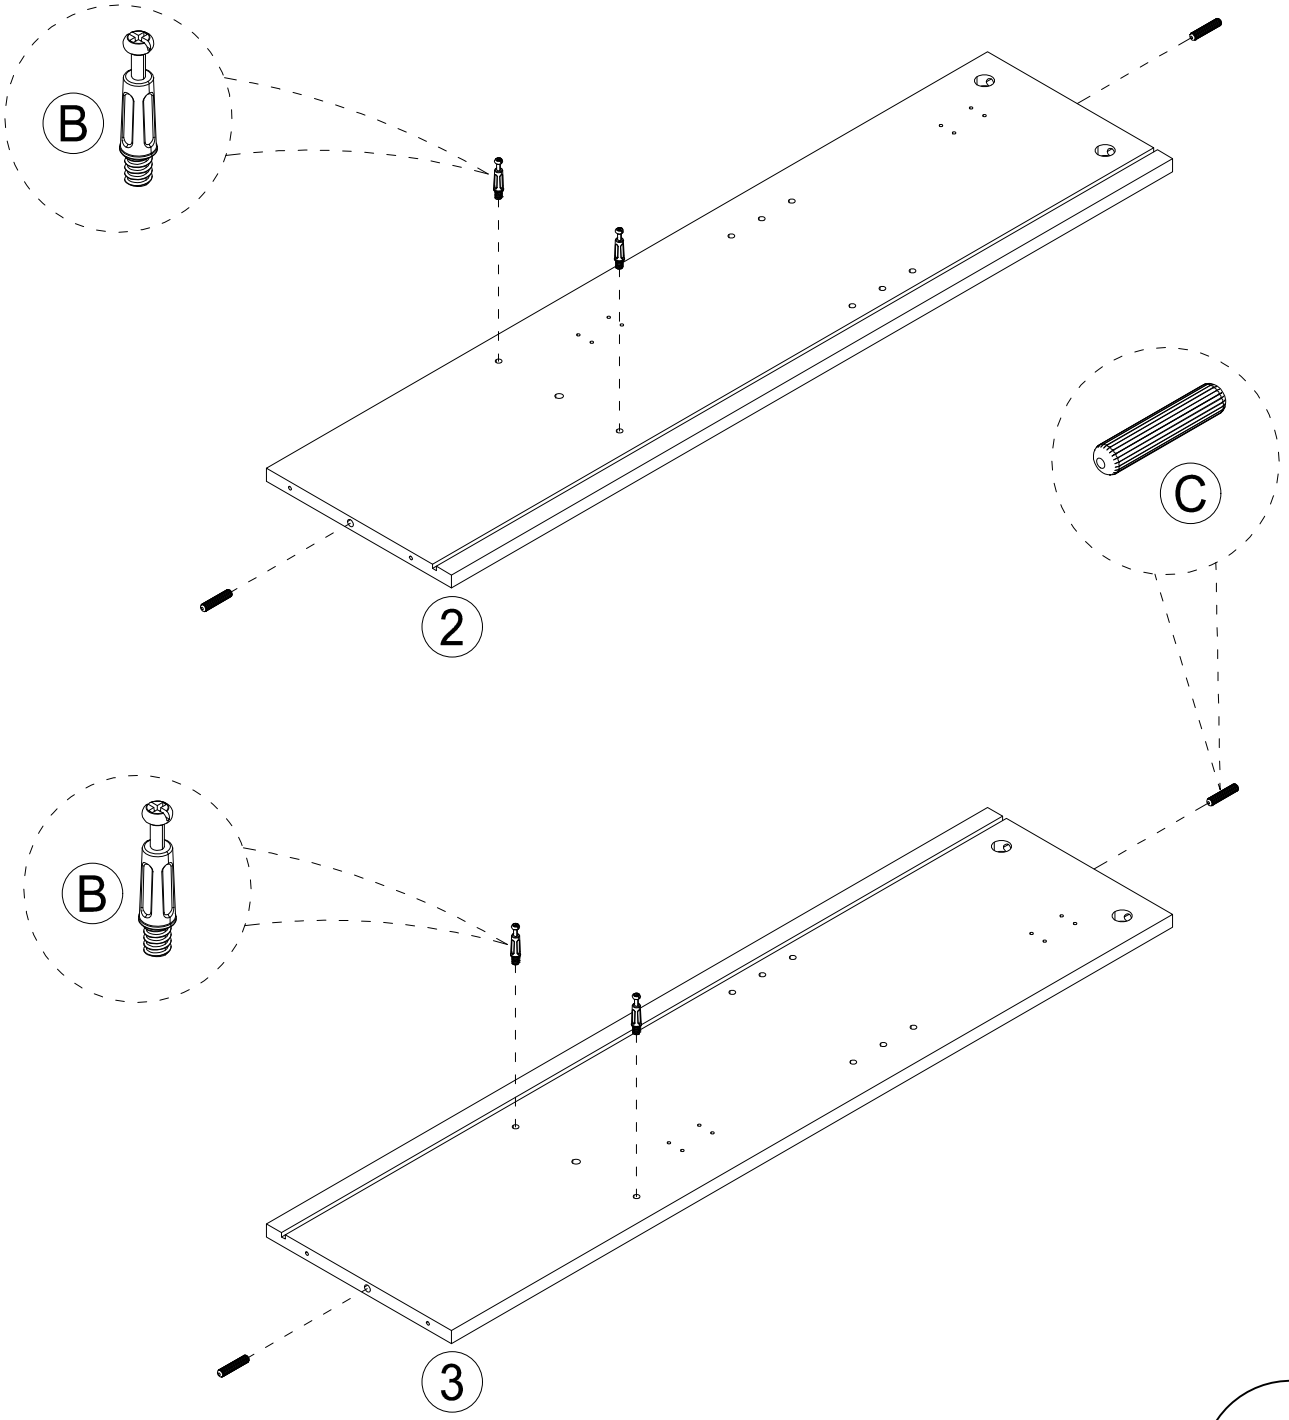


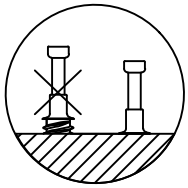


STEP4

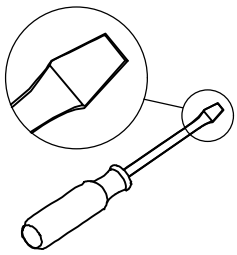

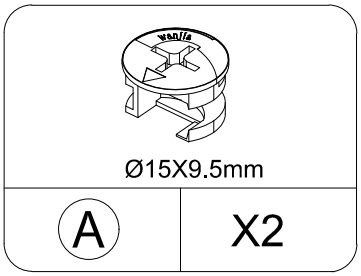

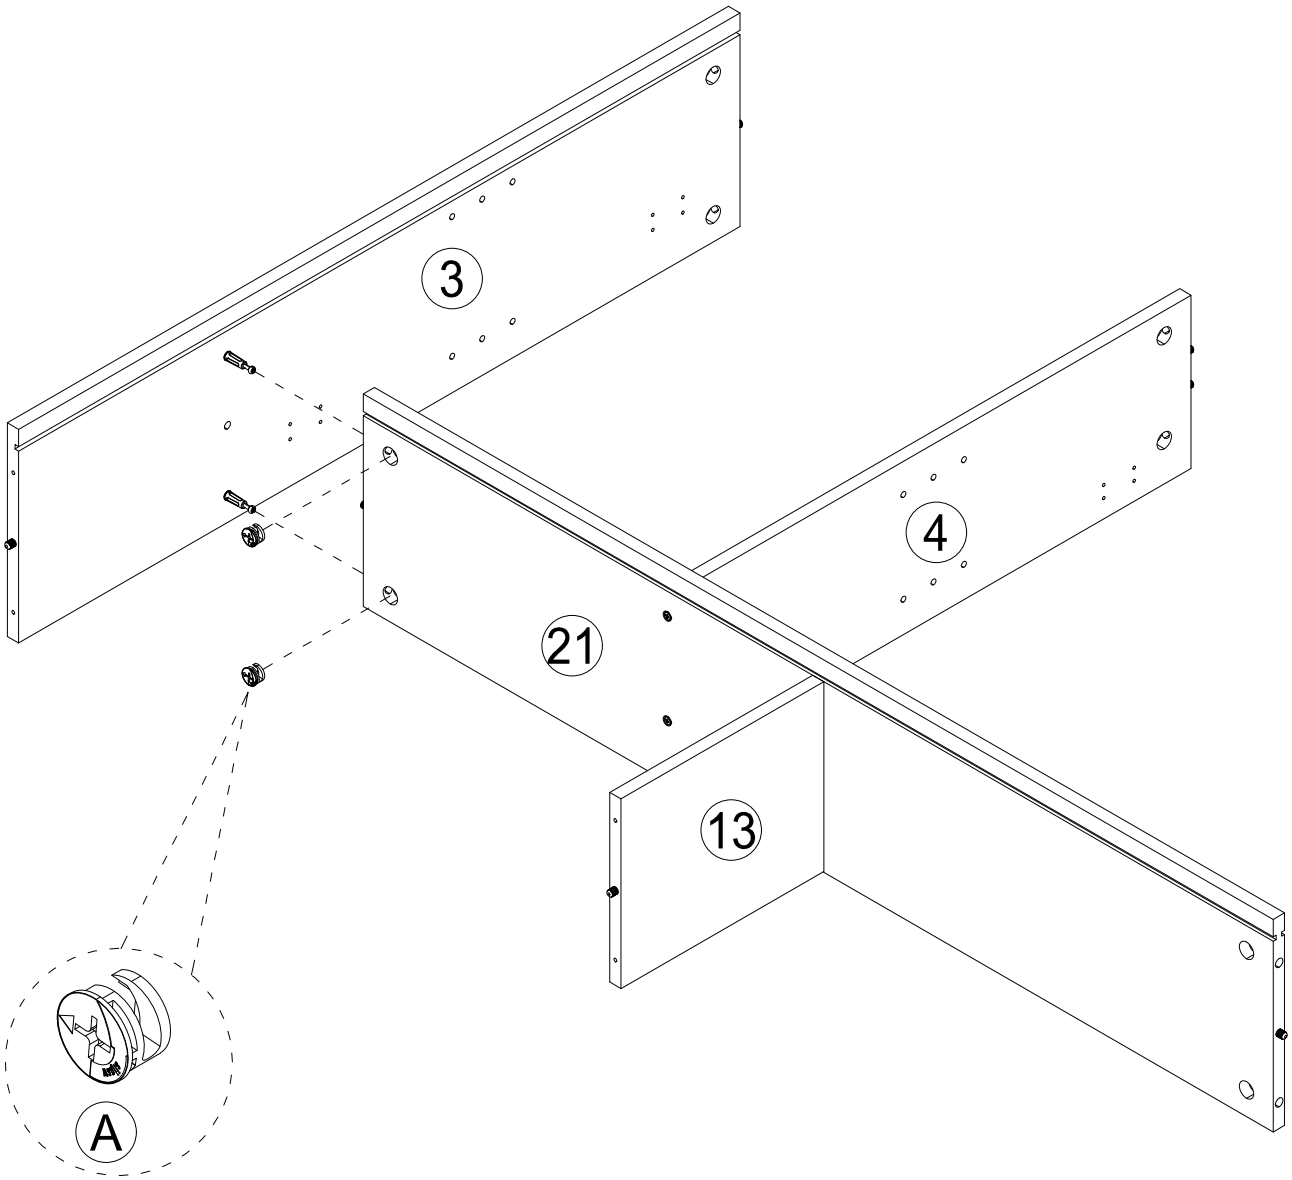



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

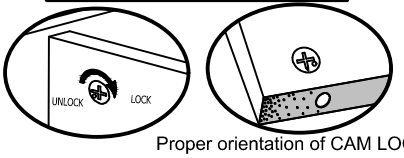


Proper orientation of CAM LOCK


STEP5

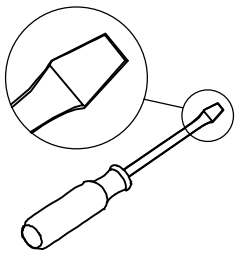

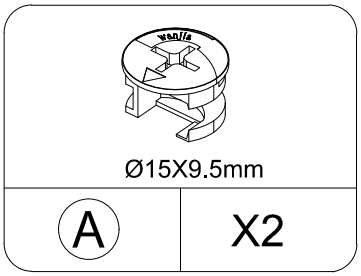

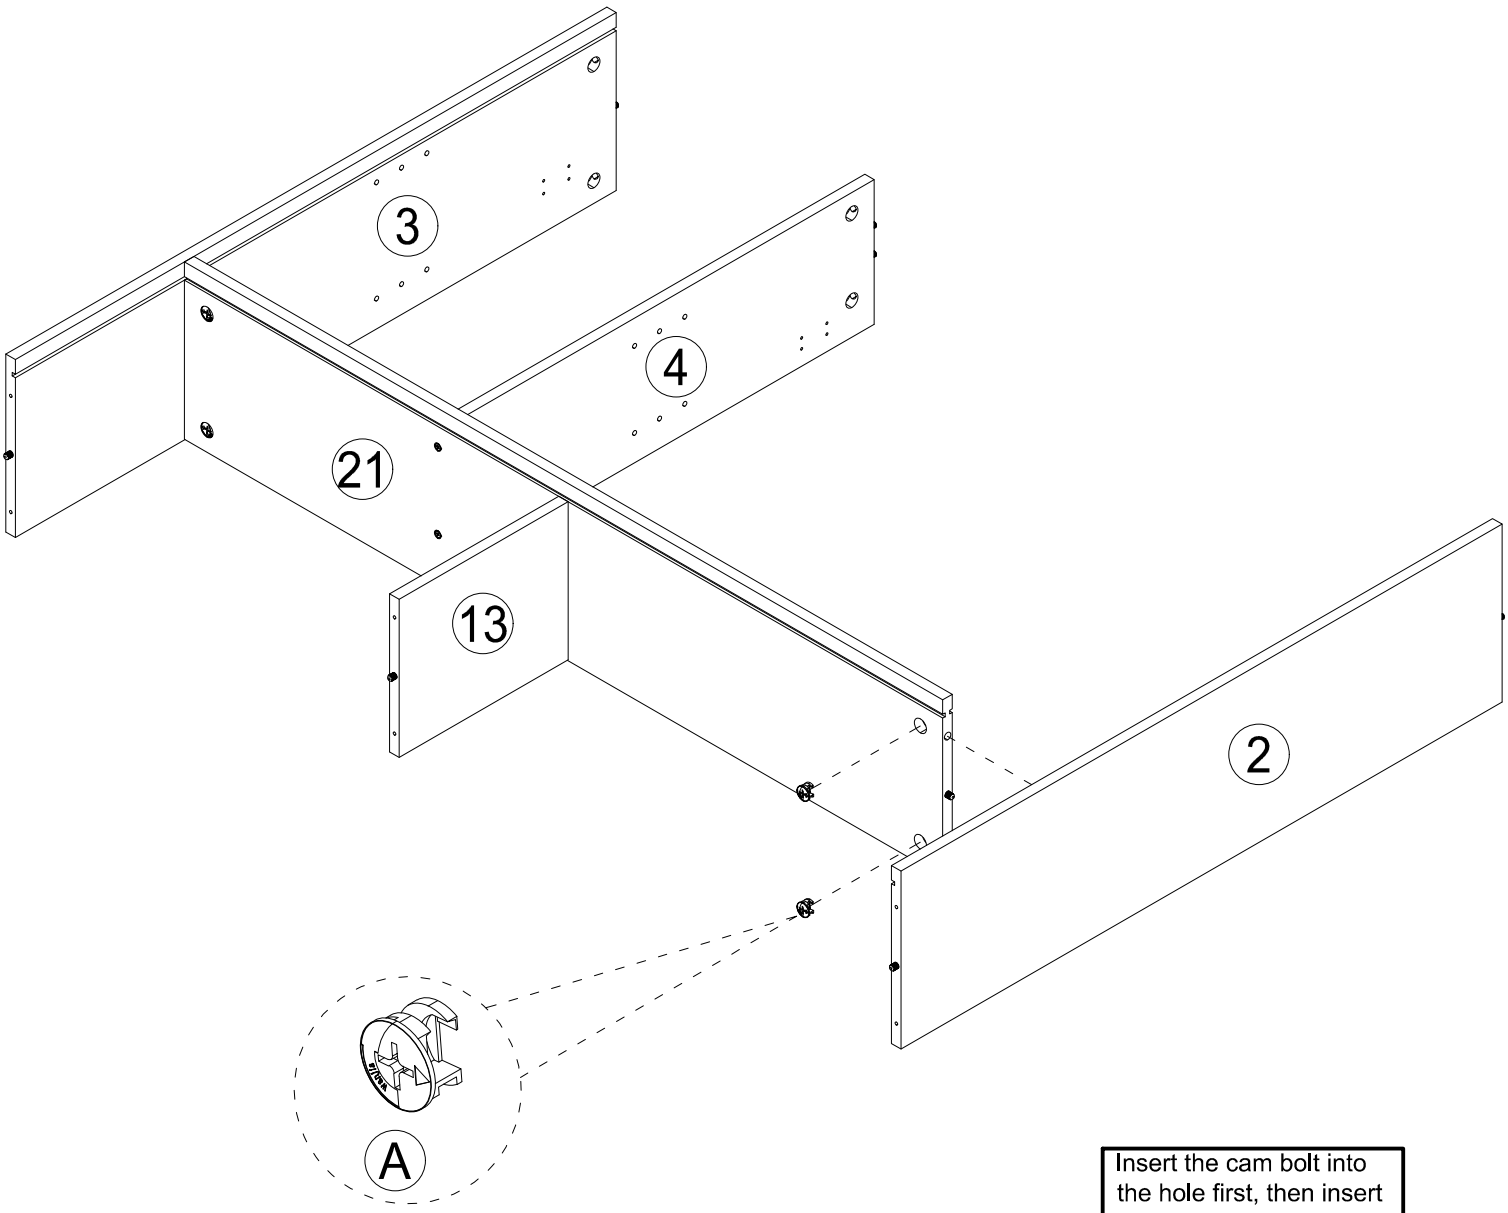


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

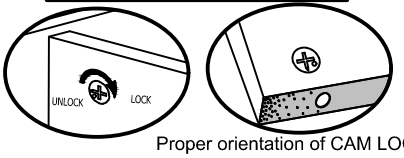



Proper orientation of CAM LOCK


STEP6

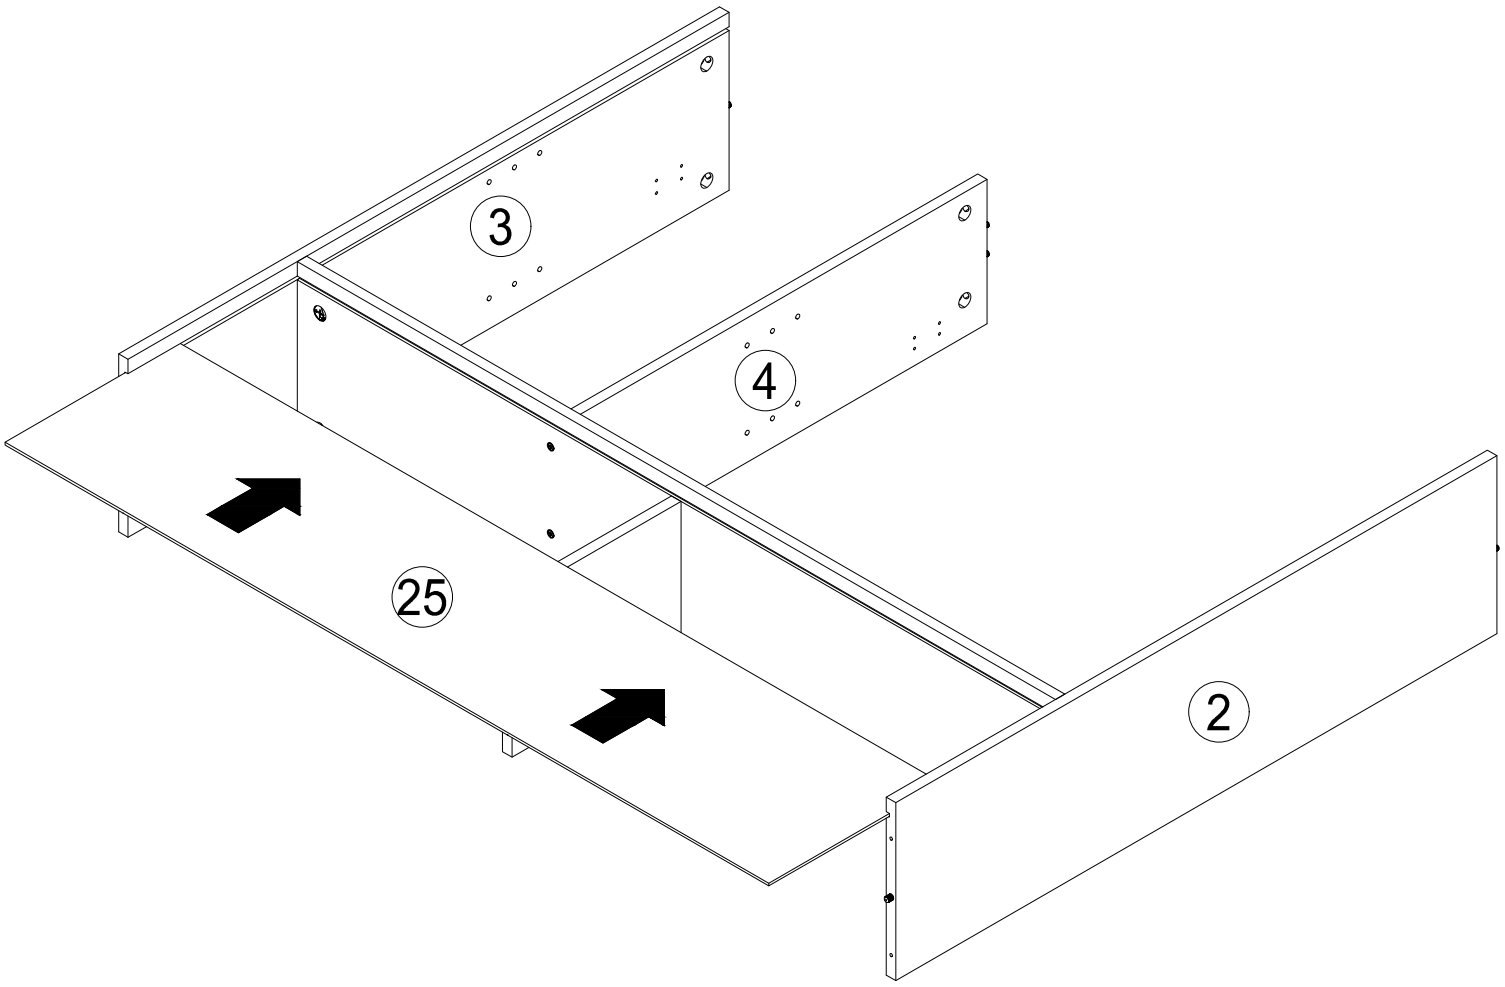


STEP7

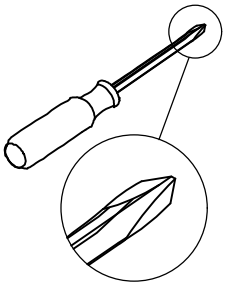

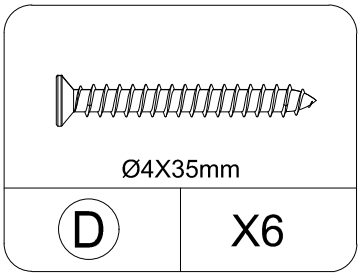


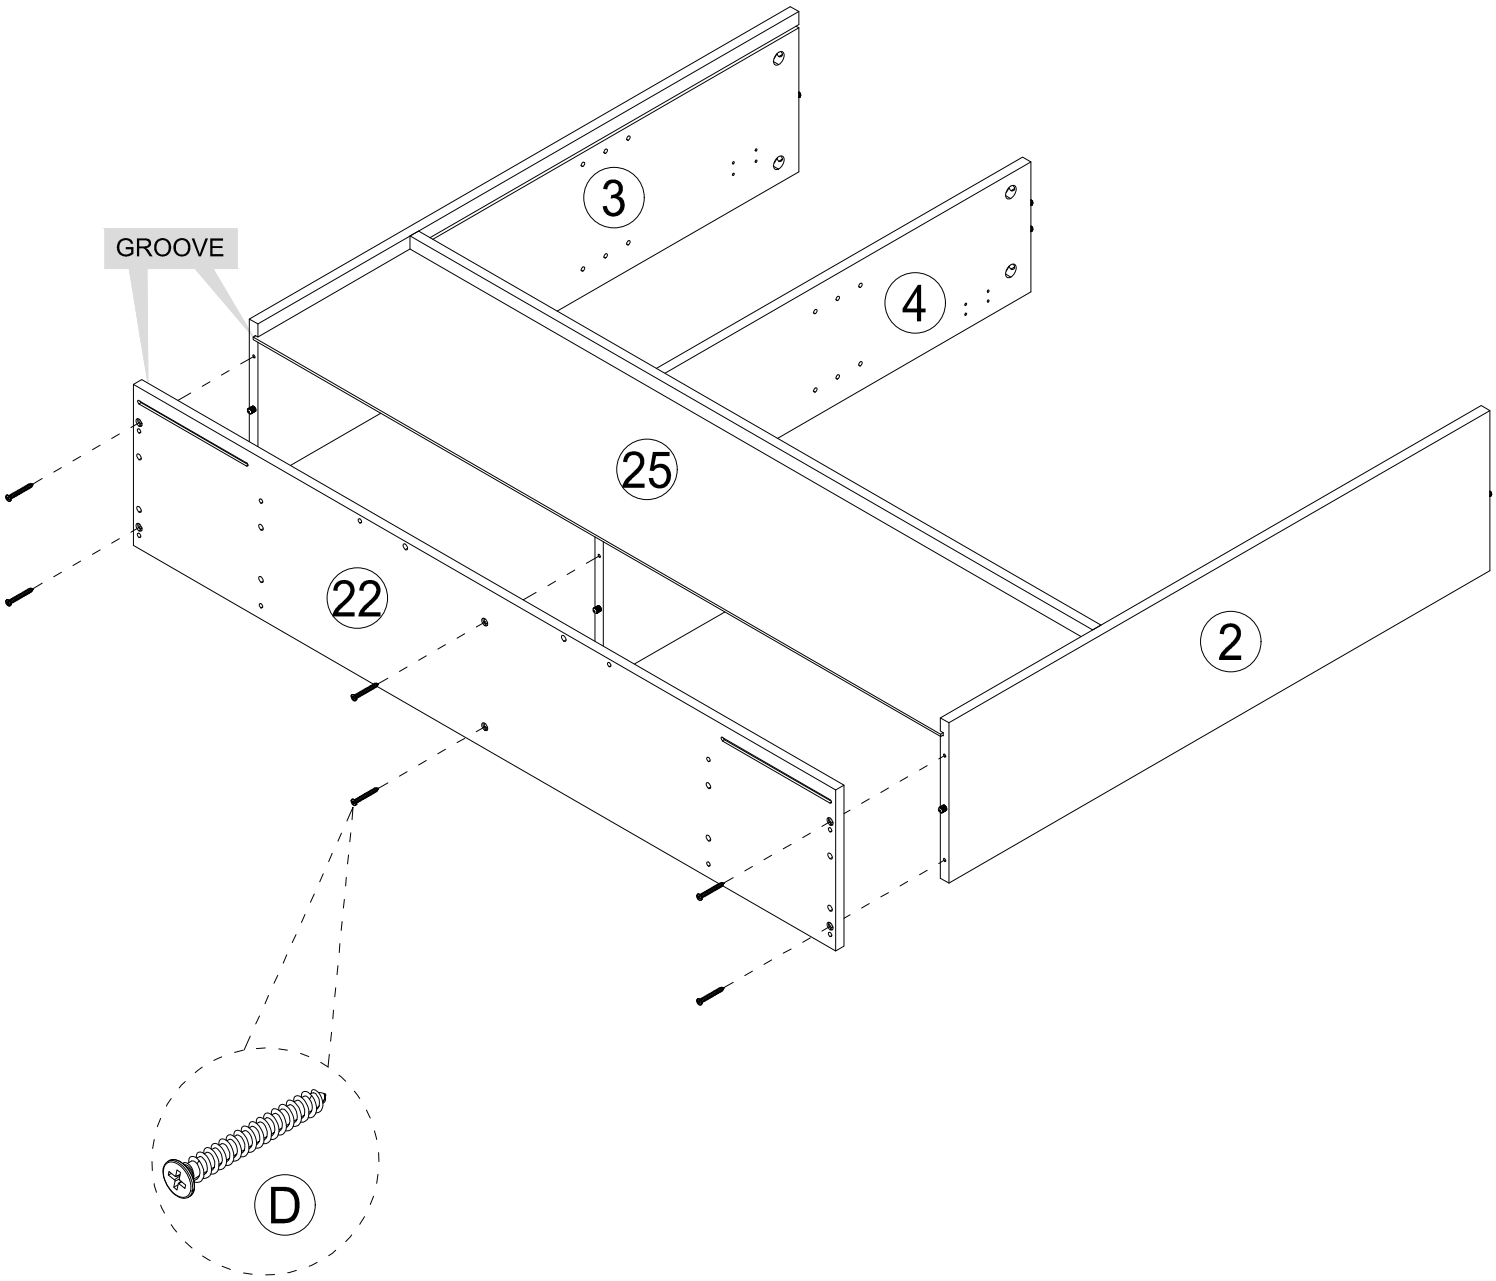


STEP8

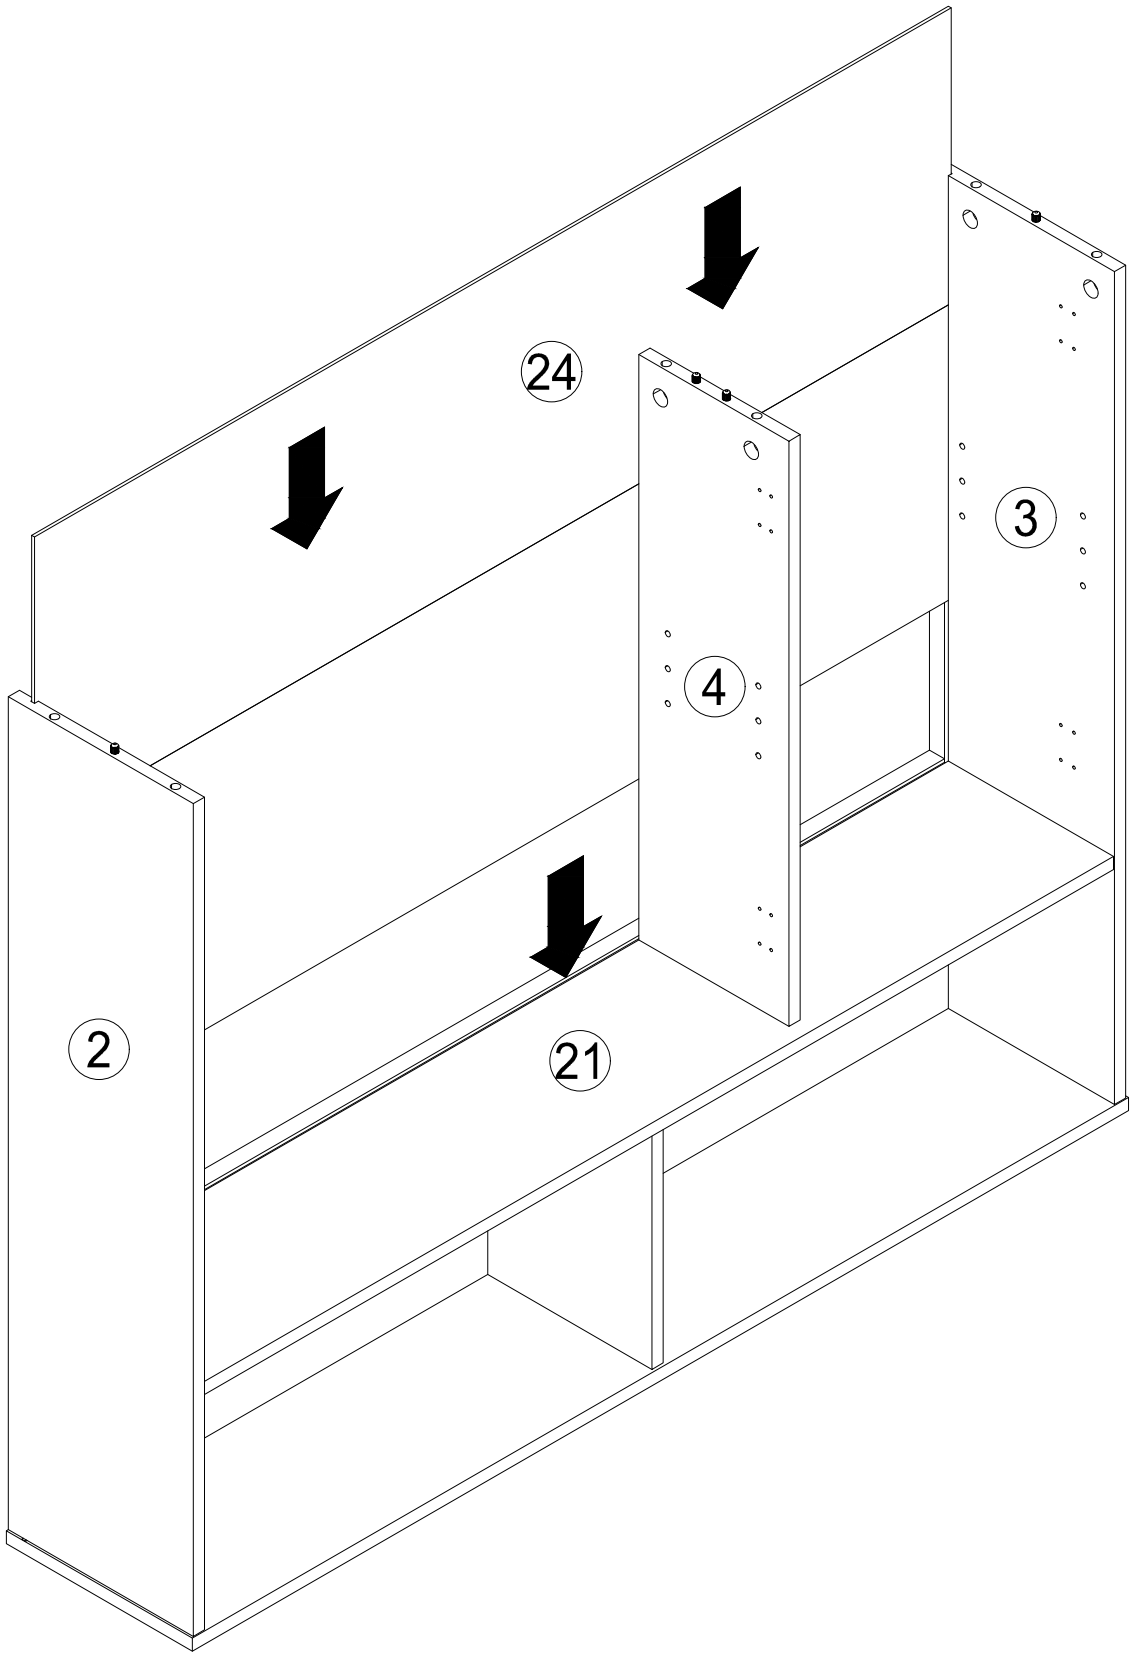


STEP9

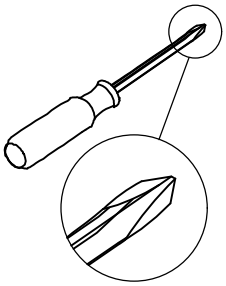




Ø6.5X35mm

B	X6




Ø3X12mm


G	X2




30X20X10mm


Q	X1

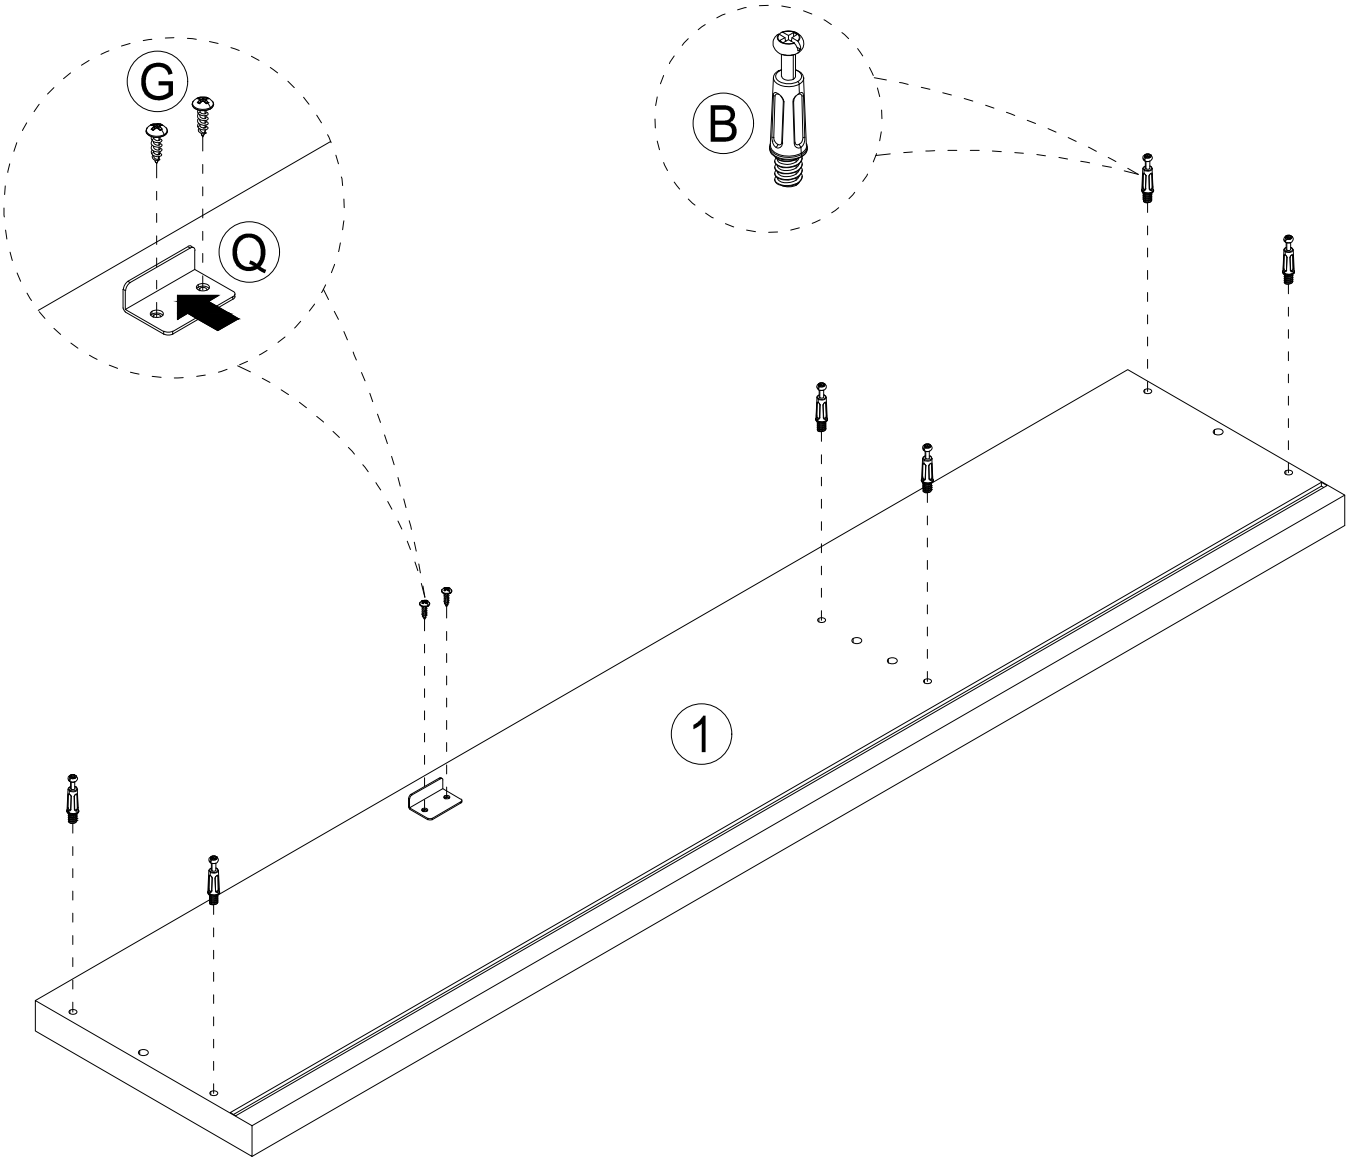


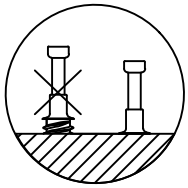

STEP10

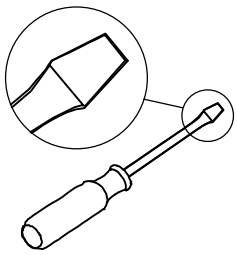

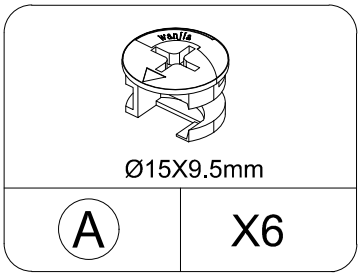


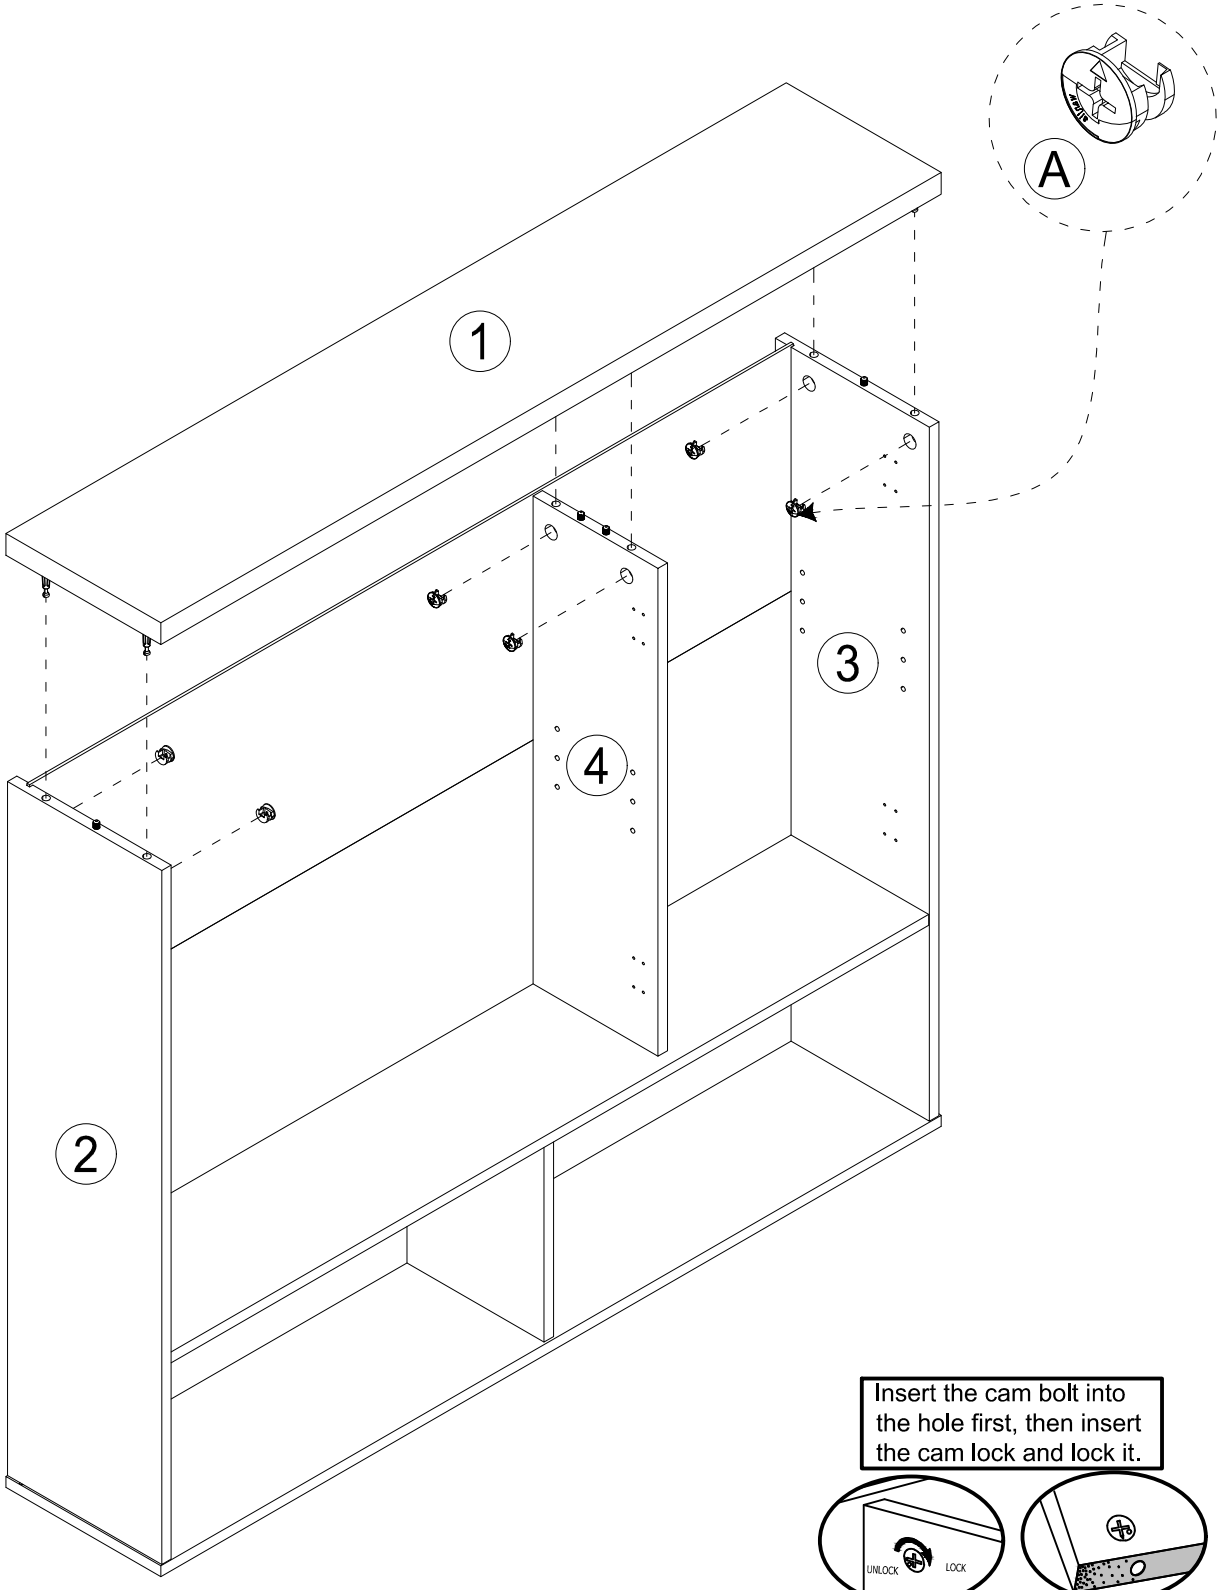



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Proper orientation of CAM LOCK

STEP11

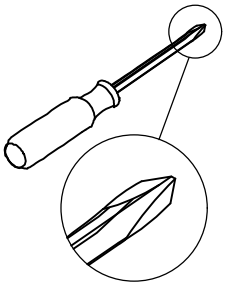


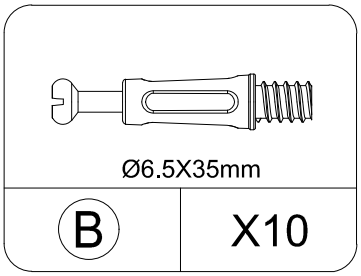


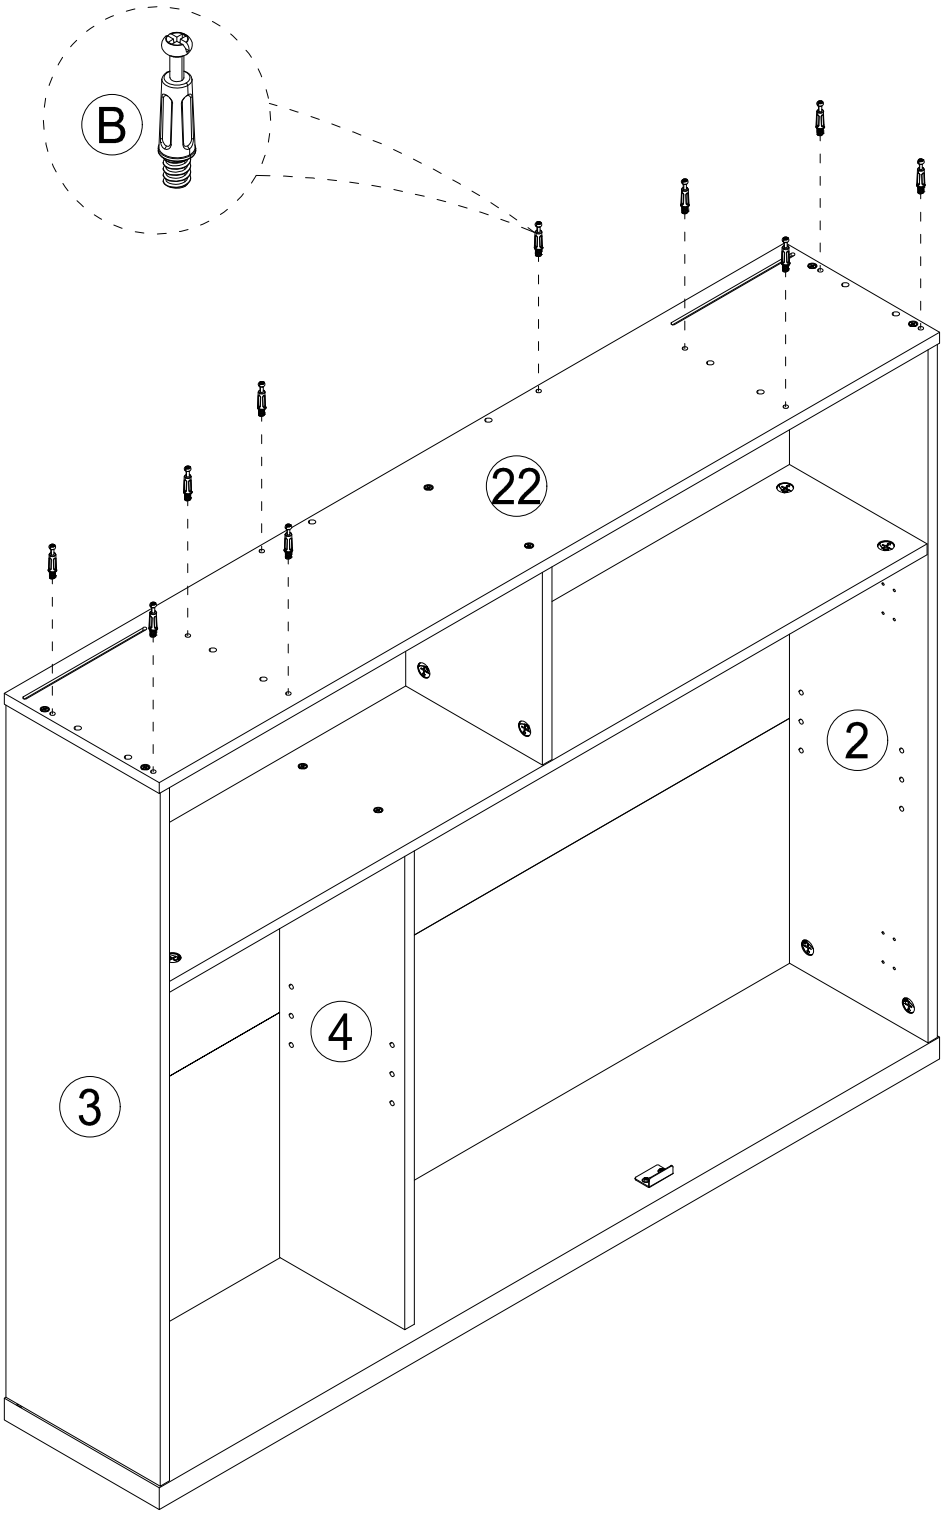


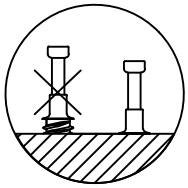



STEP12

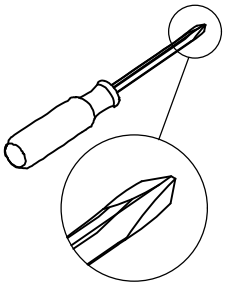


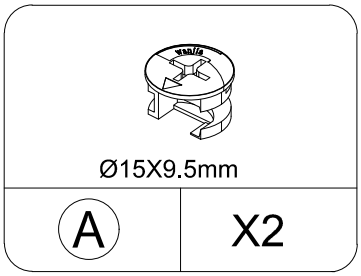


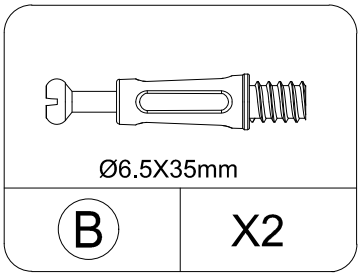


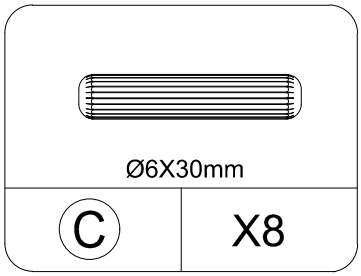

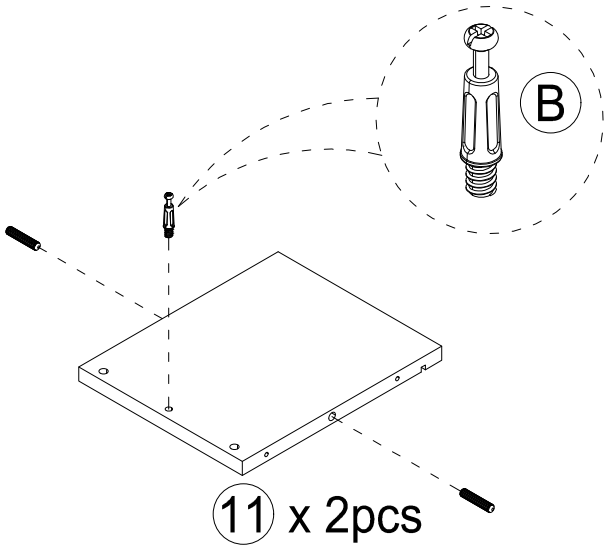

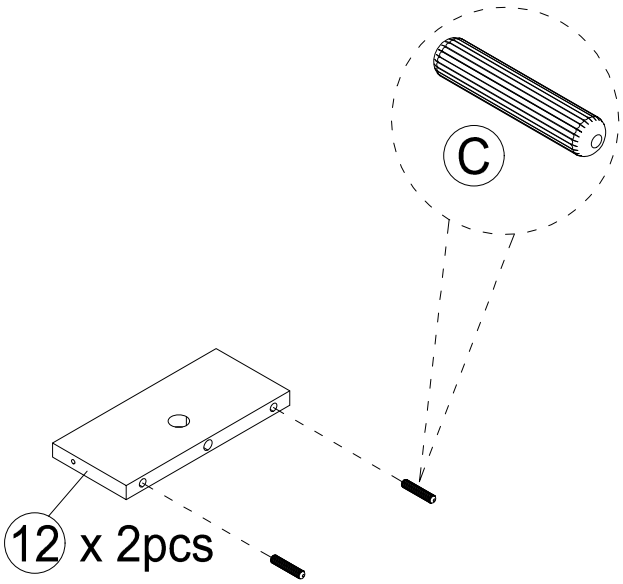


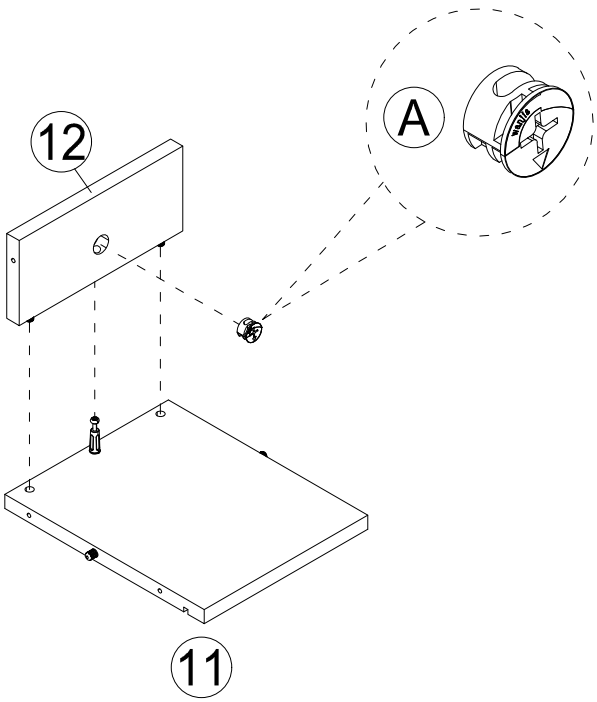

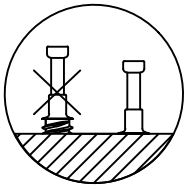


x 2


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

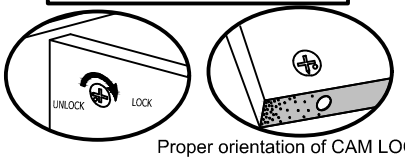

Proper orientation of CAM LOCK


STEP13

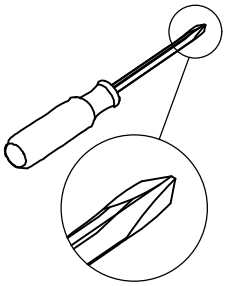

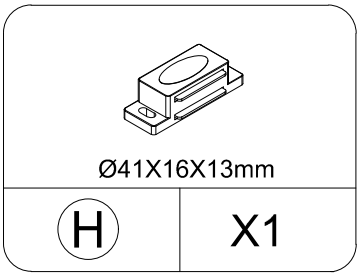


Ø41X16X13mm

H	X1

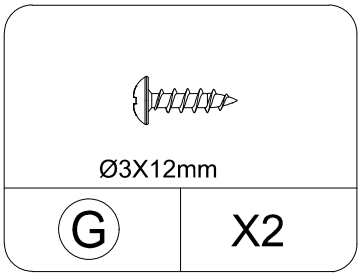


Ø3X12mm


G	X2

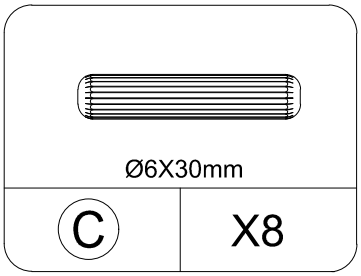

Ø6X30mm

C	X8

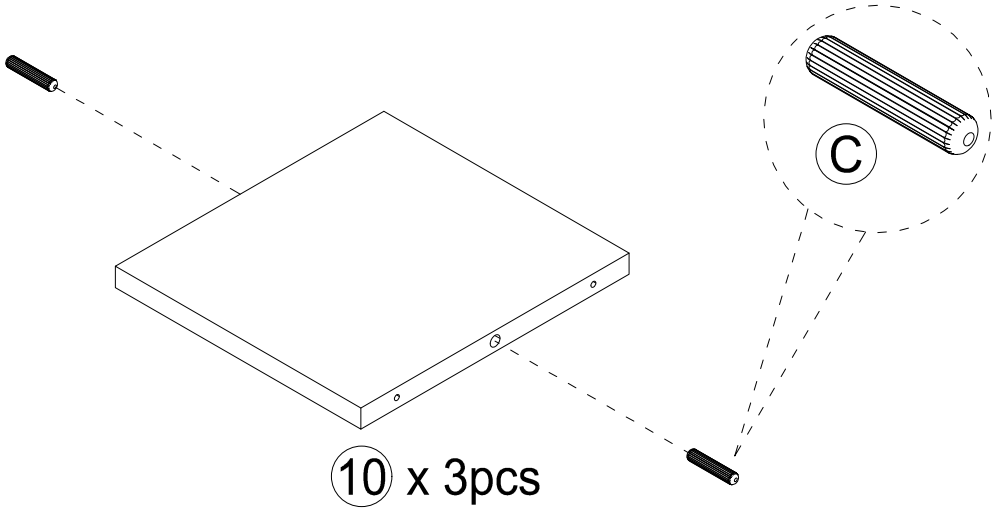


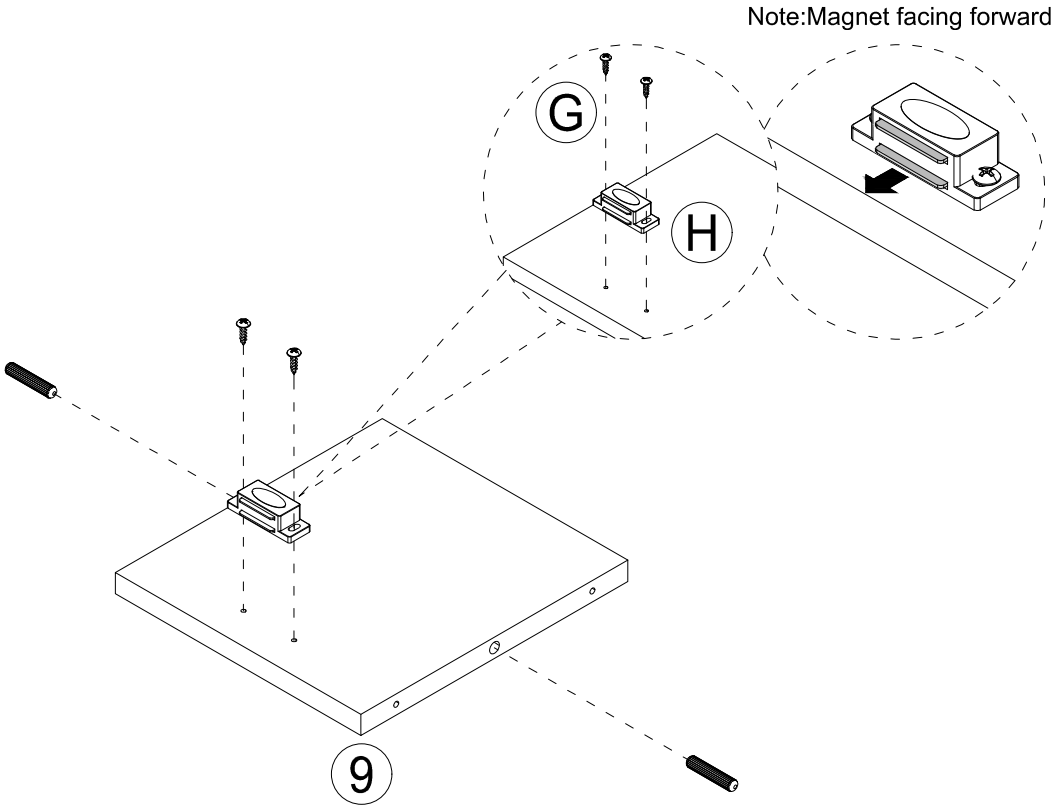

Installation instructions


There are two ways to install the product, and we'll indicate both methods at key steps. You can select the installation approach that best suits your needs.

Scheme 1

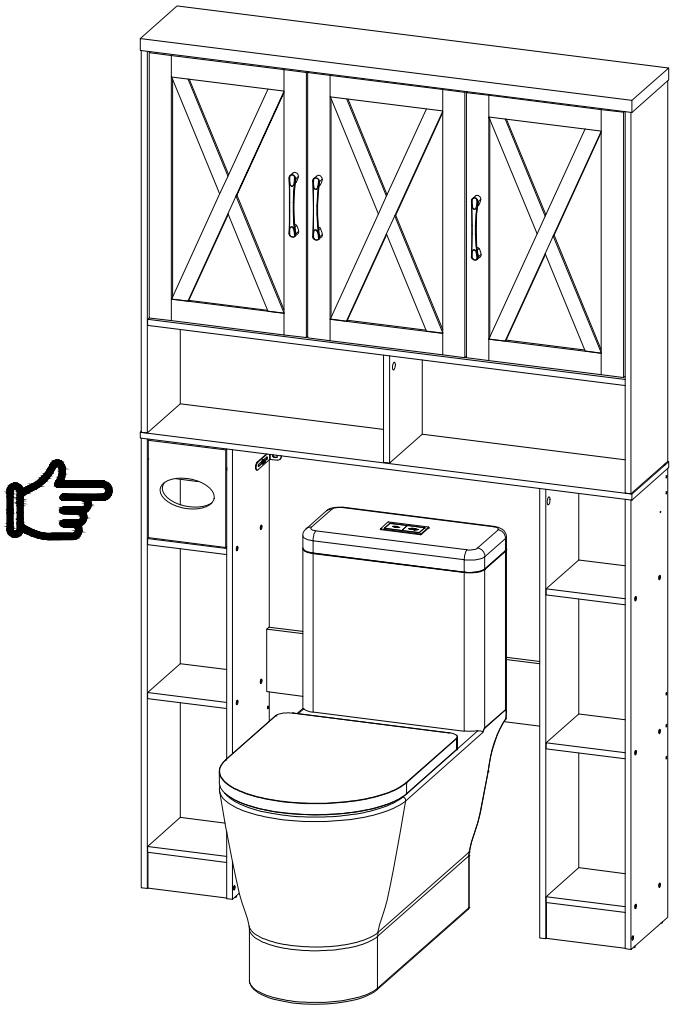



OR


Scheme 2

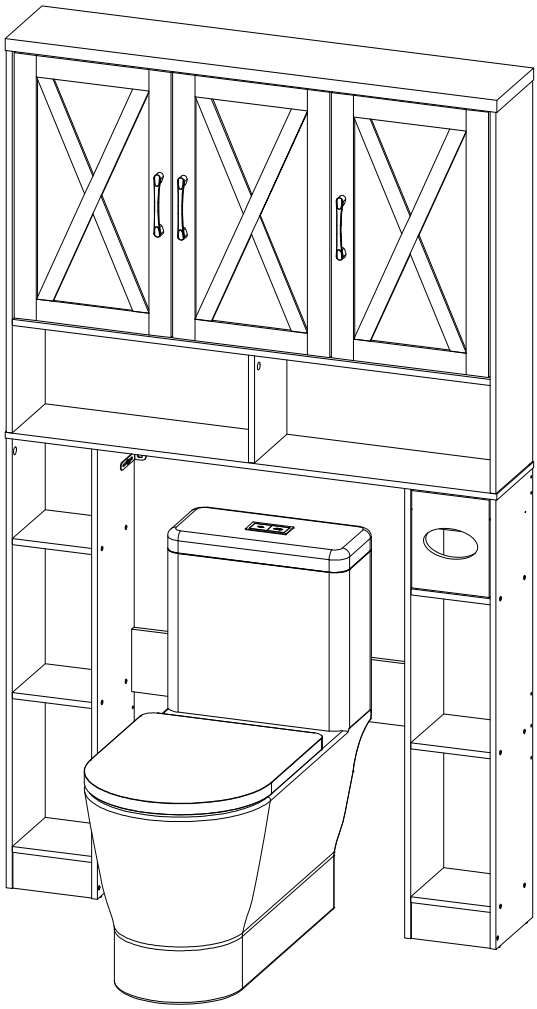


STEP14（Scheme 1）

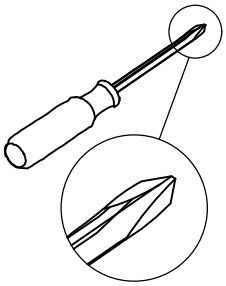

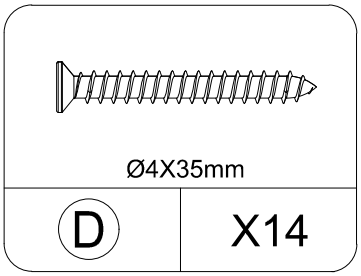


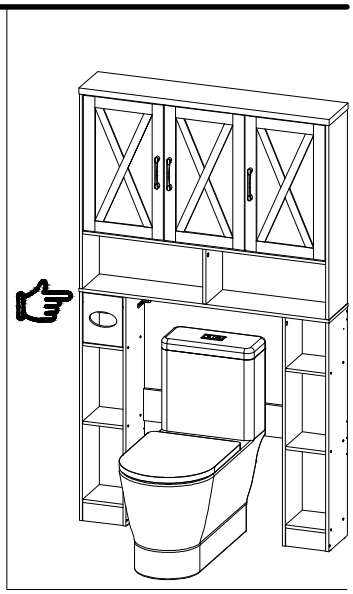



Scheme 1

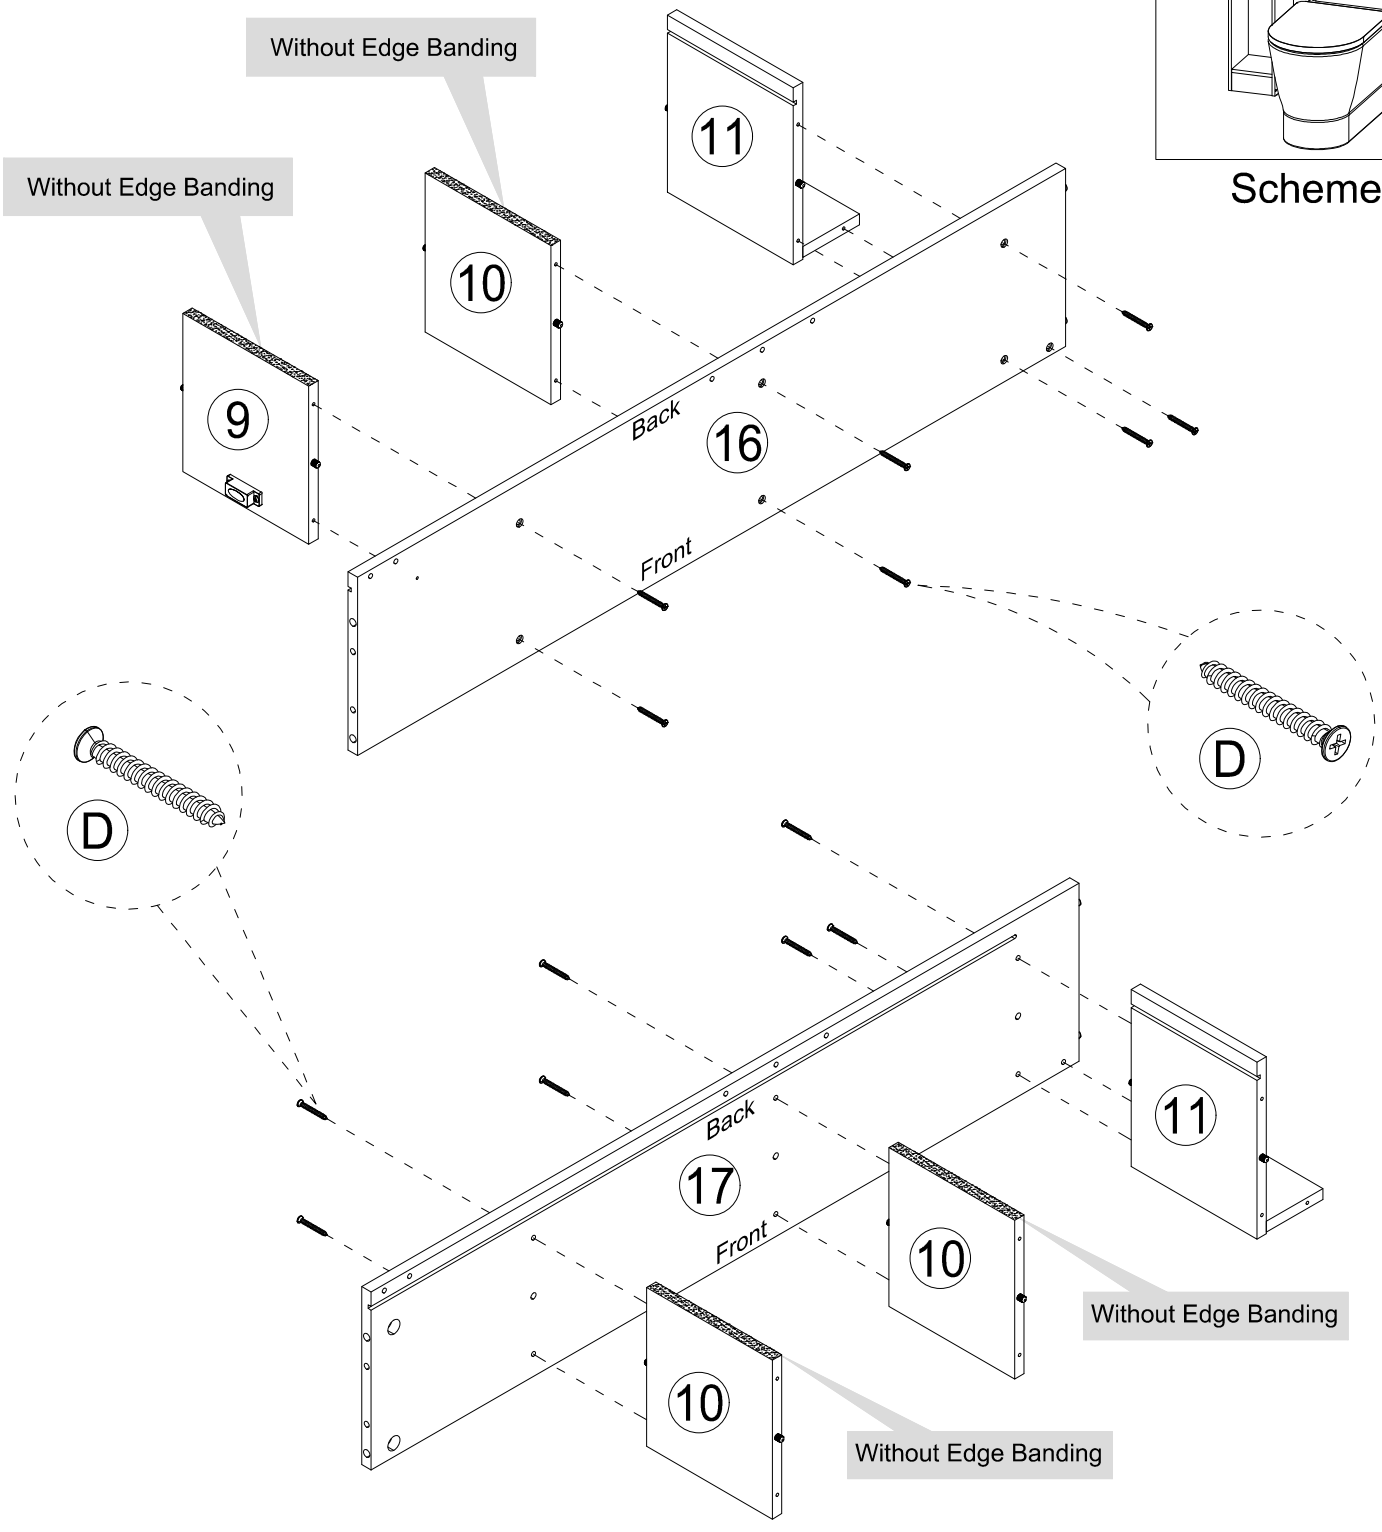


STEP14（Scheme 2）

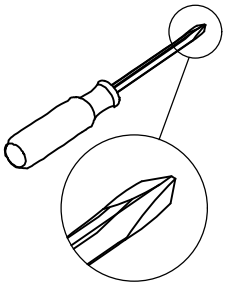


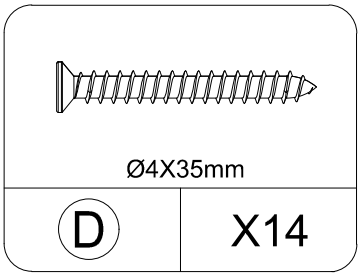


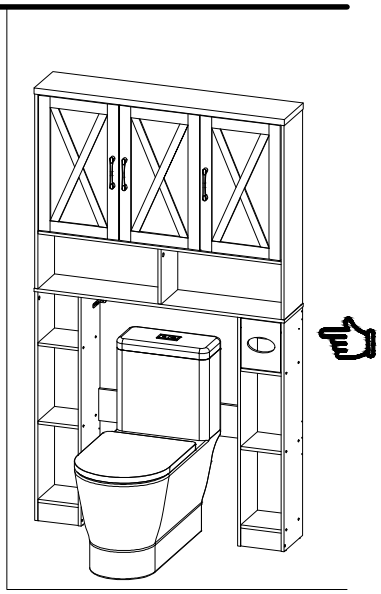


Scheme 2

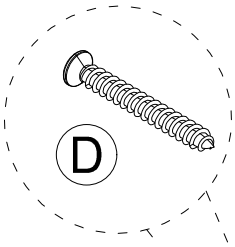


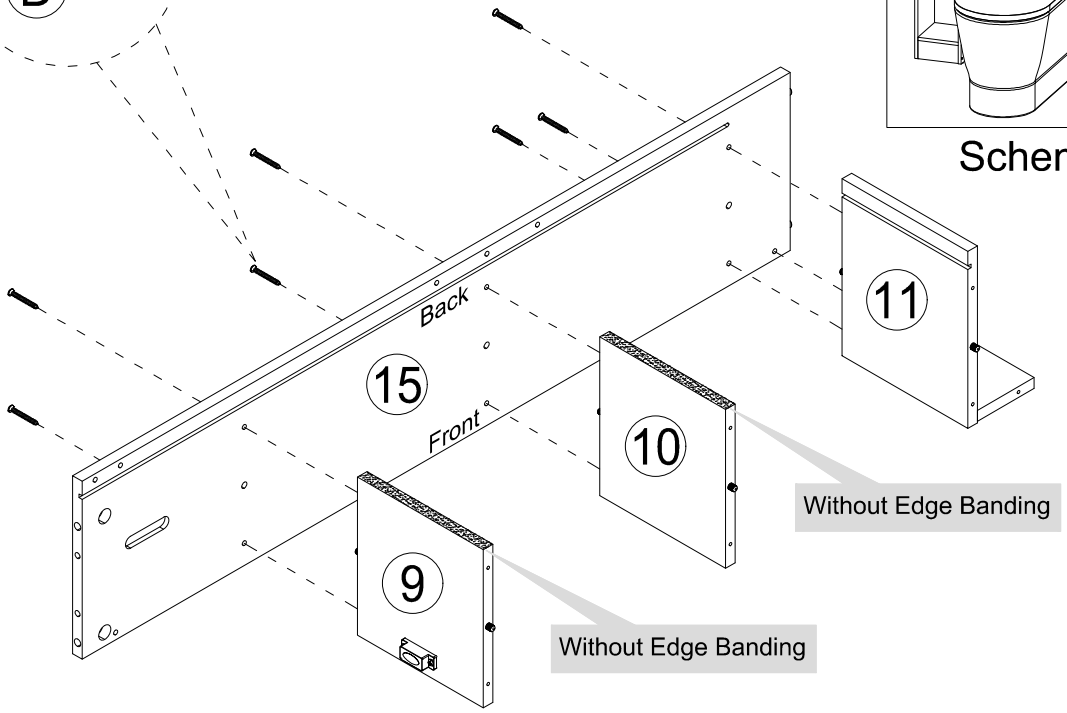


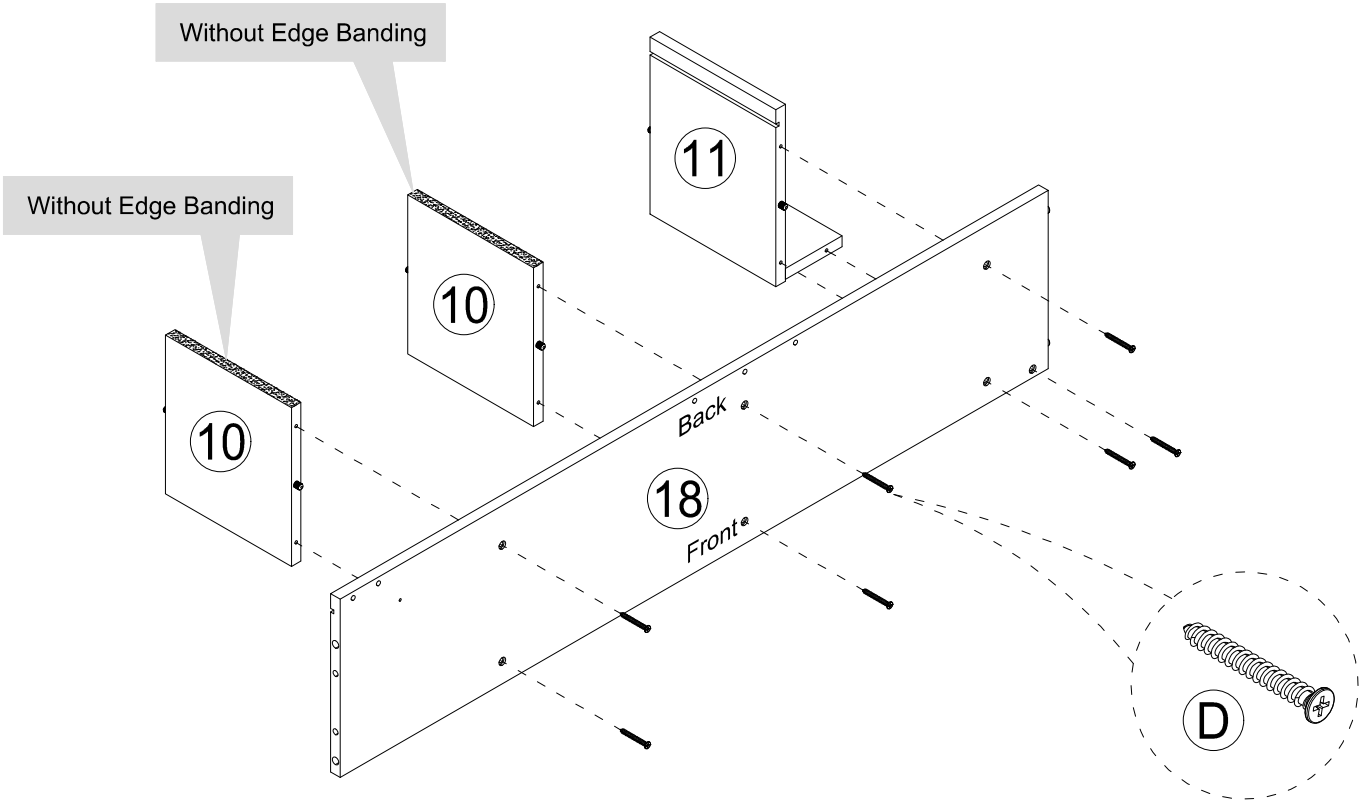


STEP15（Scheme 1）

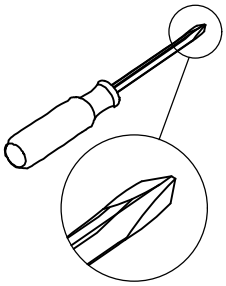

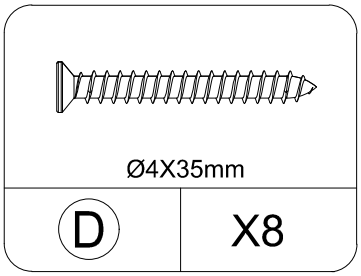


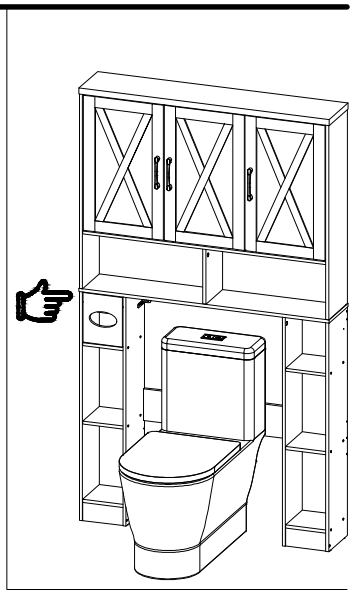


Scheme 1

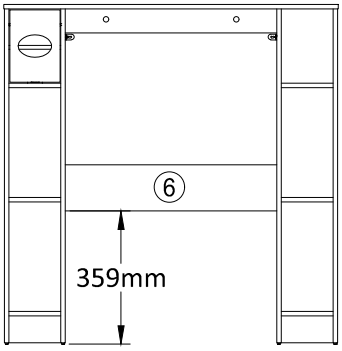


OR

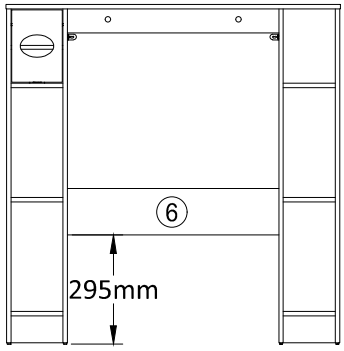



The height of part (6) can be adjusted according to the needs of the toilet, as shown in the figure

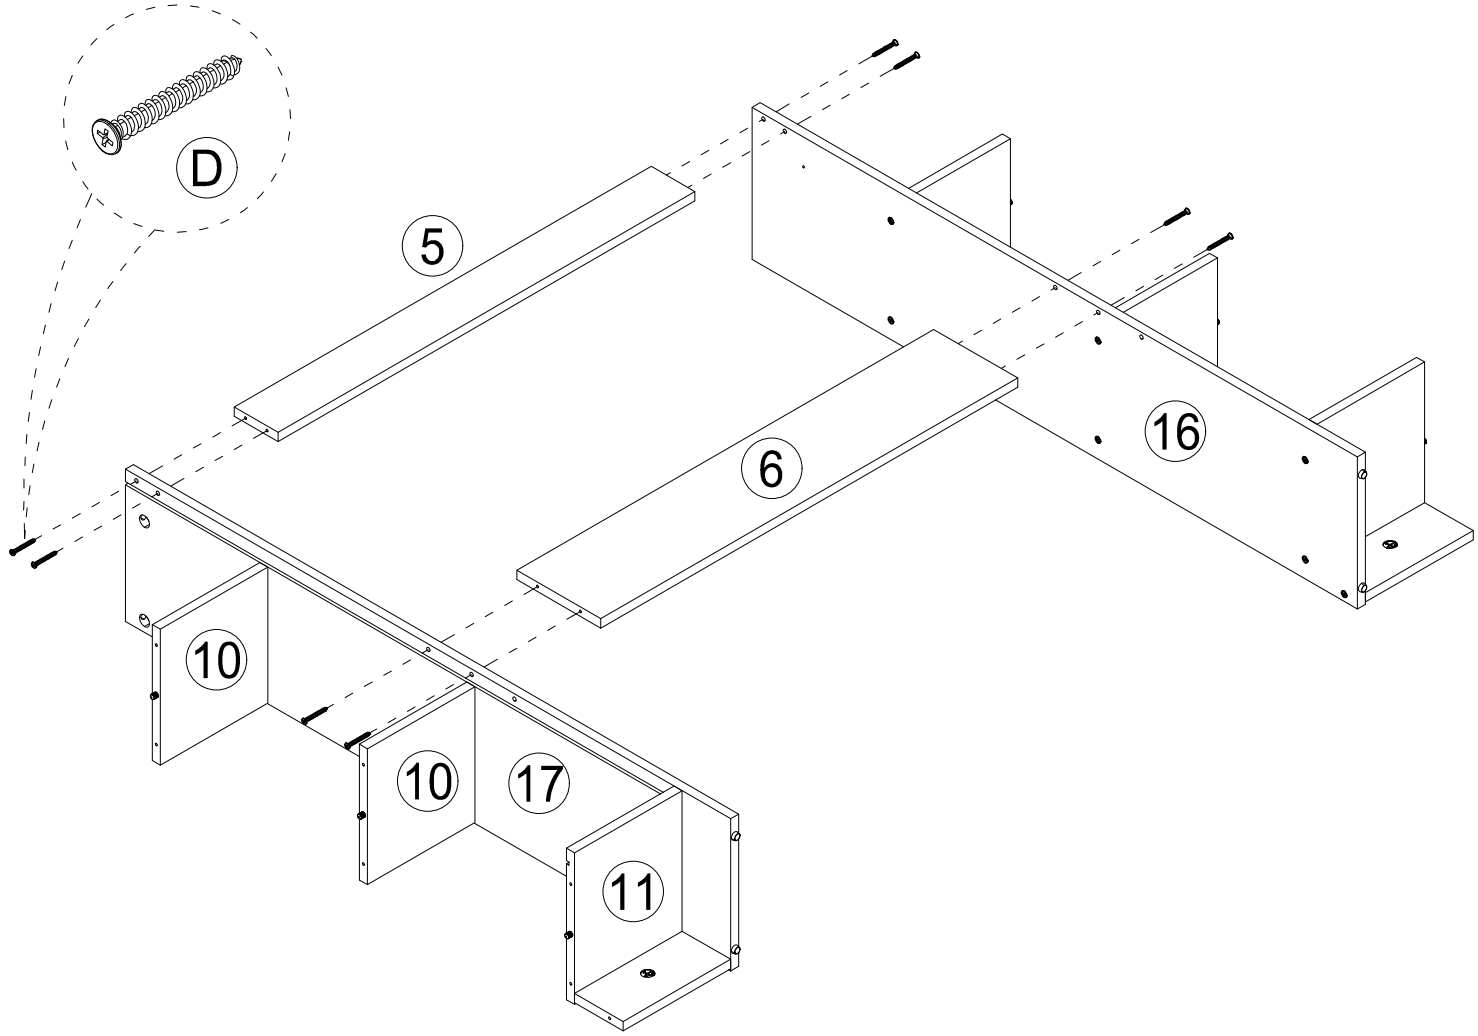


STEP15（Scheme 2）

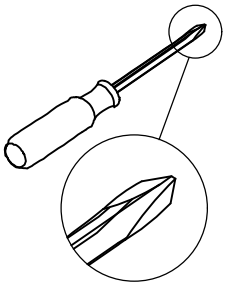

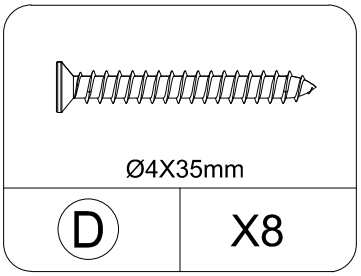


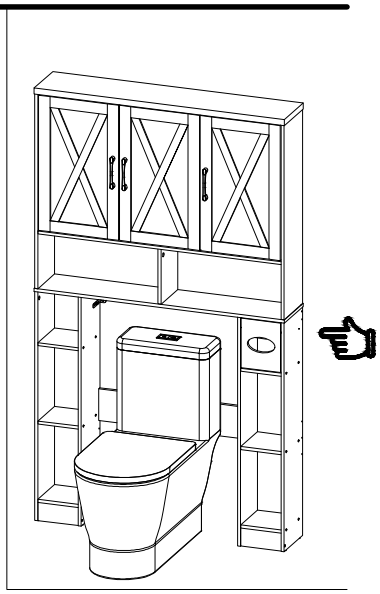


Scheme 2

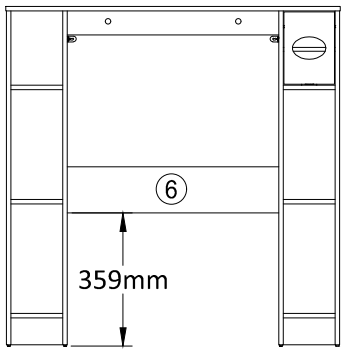


OR

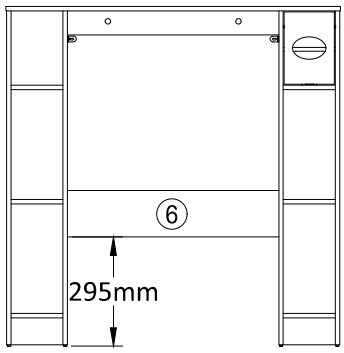



The height of part (6) can be adjusted according to the needs of the toilet, as shown in the figure

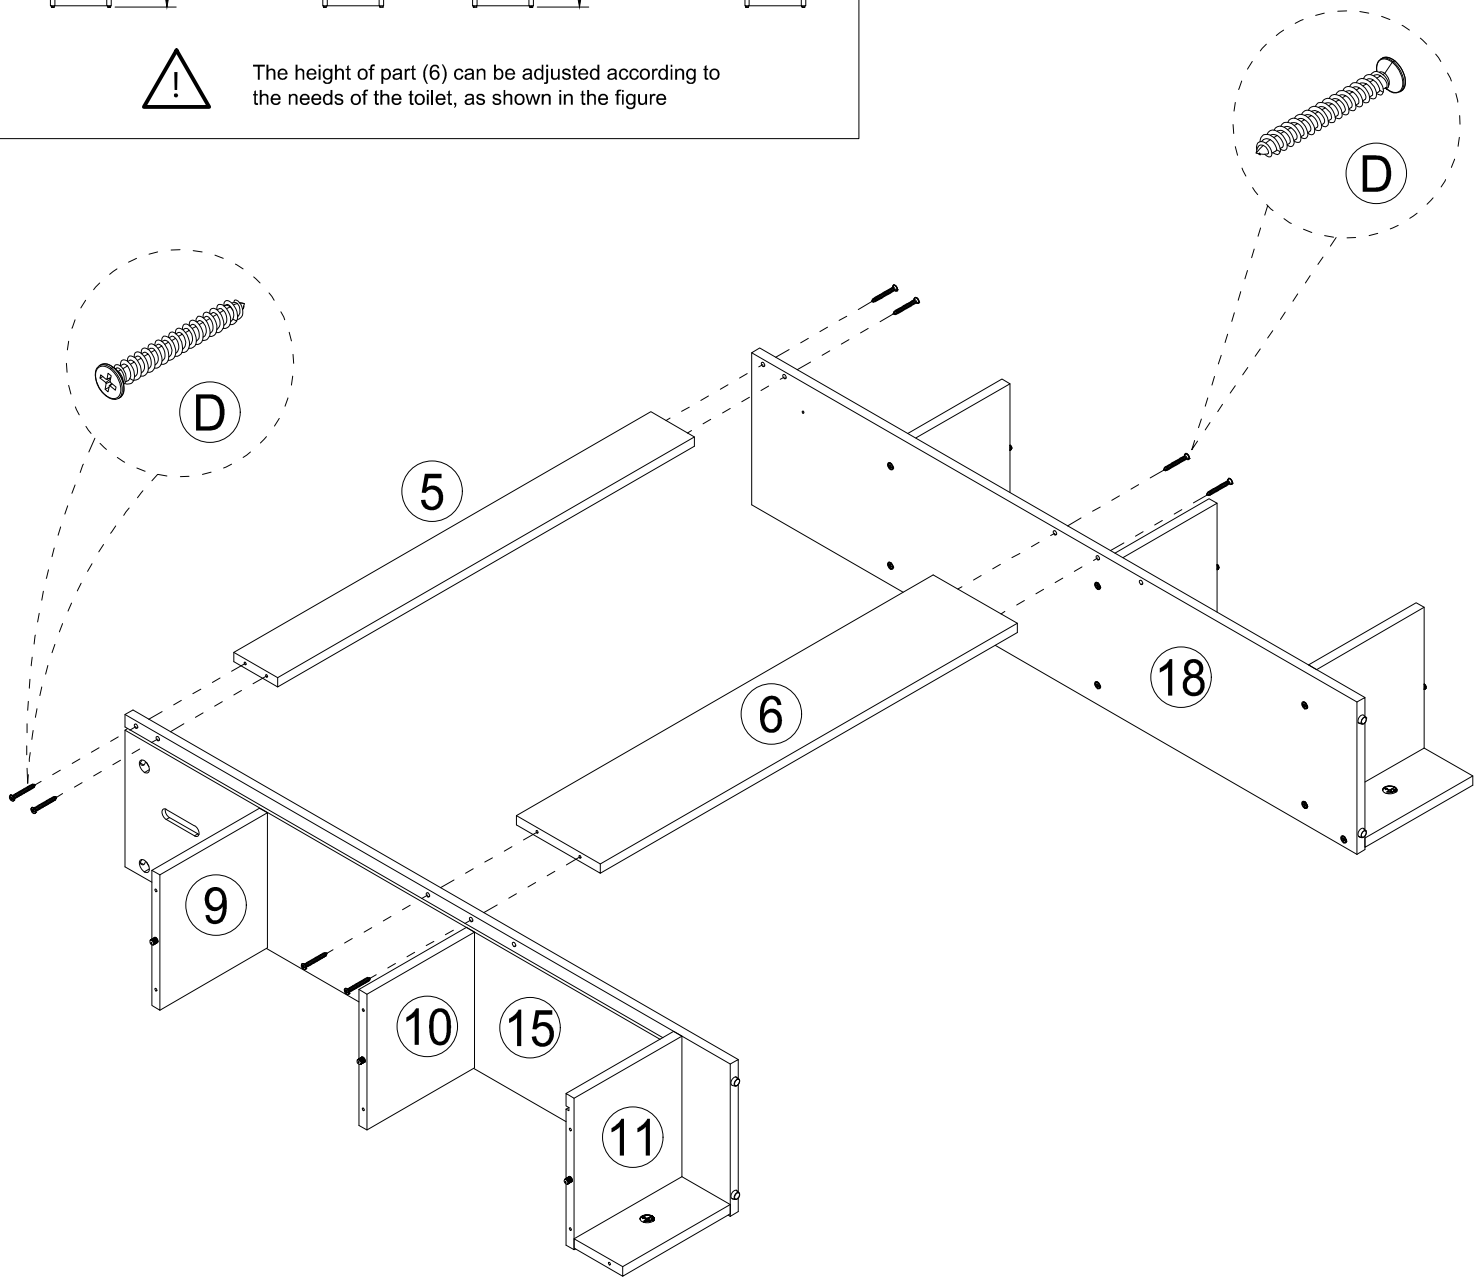


STEP16（Scheme 1）

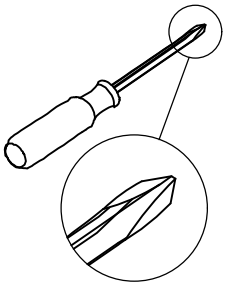


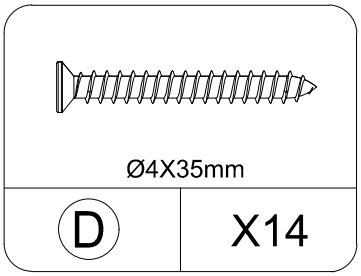

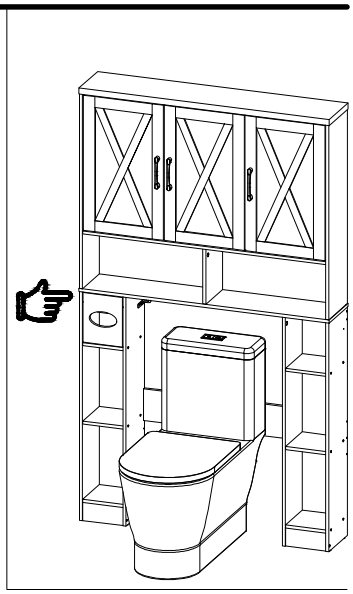



Scheme 1

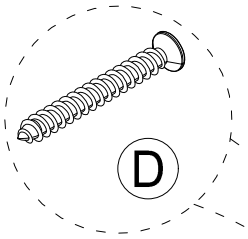


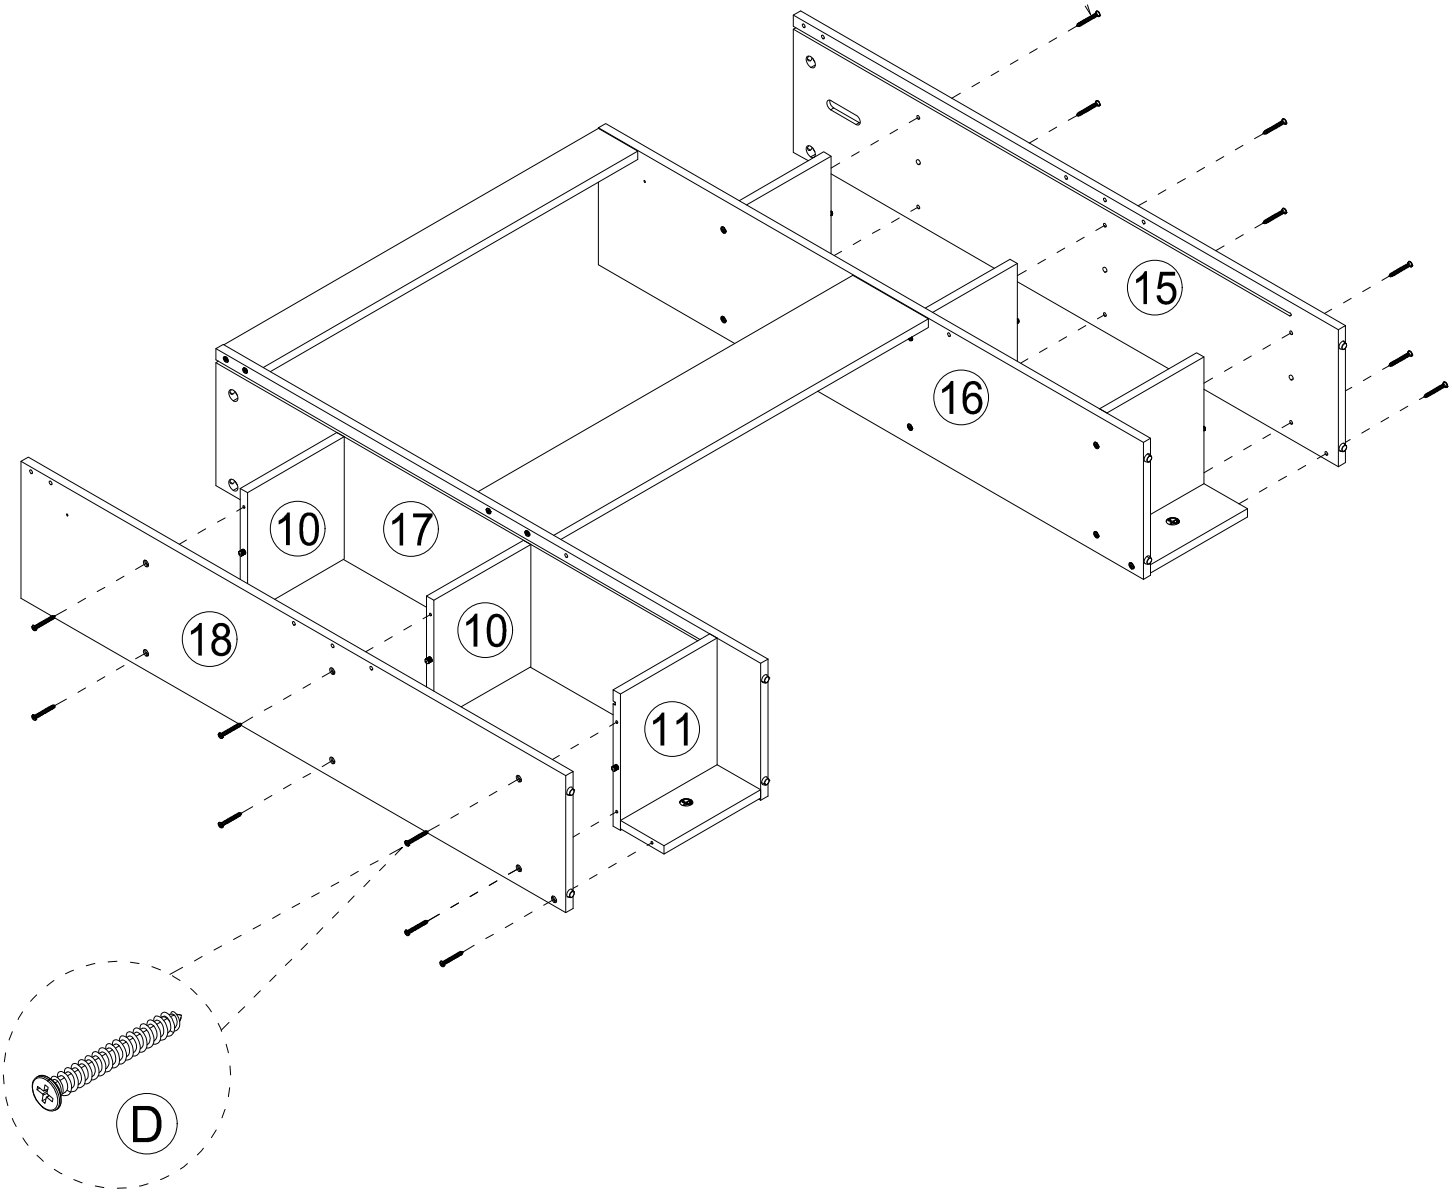


STEP16（Scheme 2）

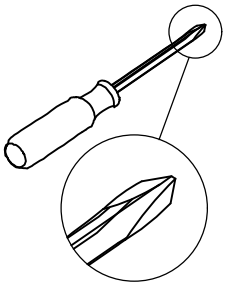


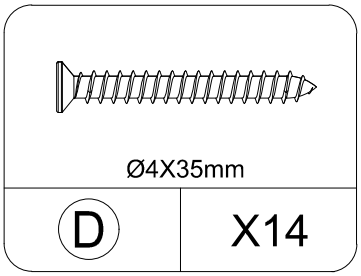

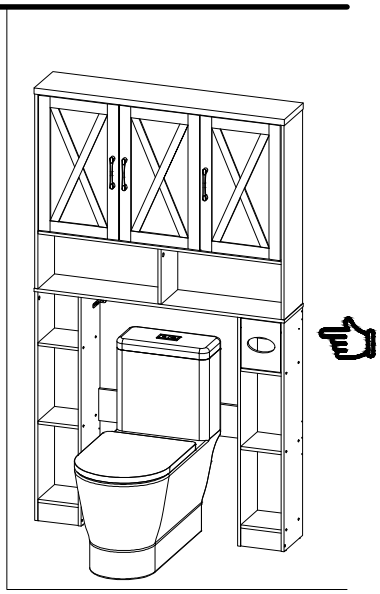


Scheme 2

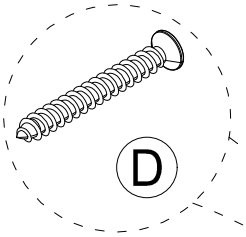


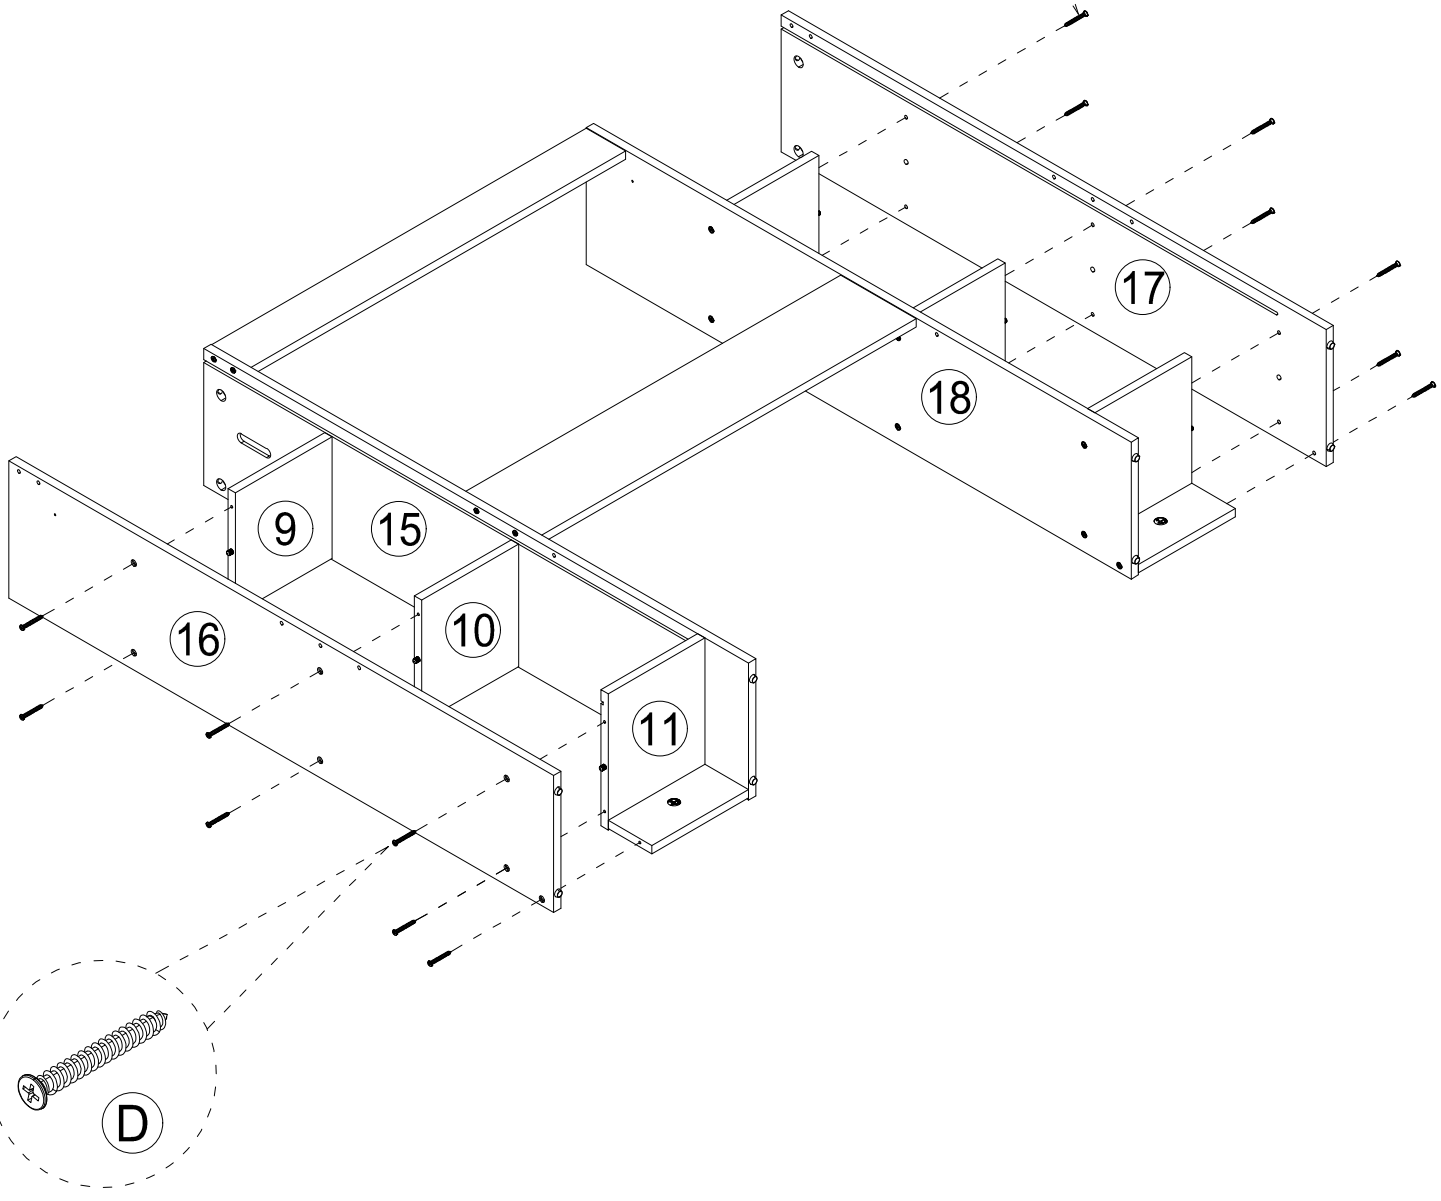


STEP17

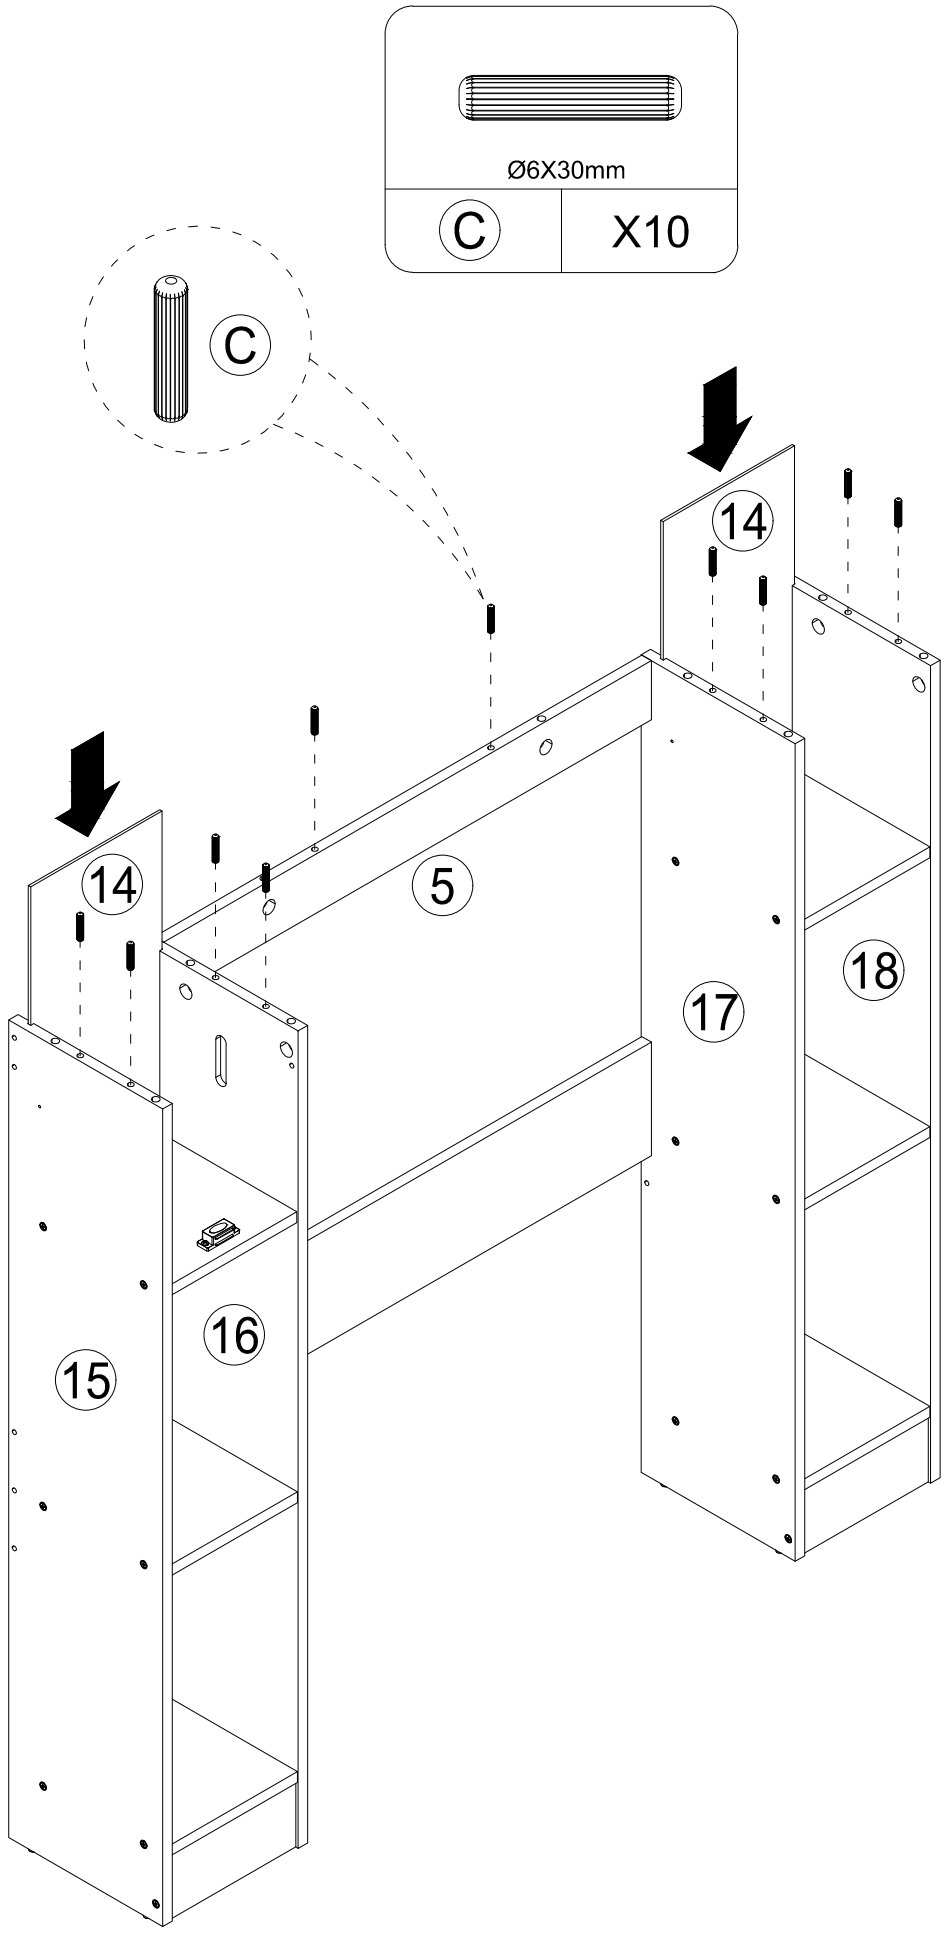

STEP18

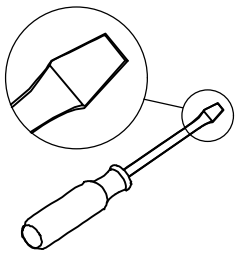




Ø15X9.5mm

A	X10


THIS STEP REQUIRES 2 PEOPLE

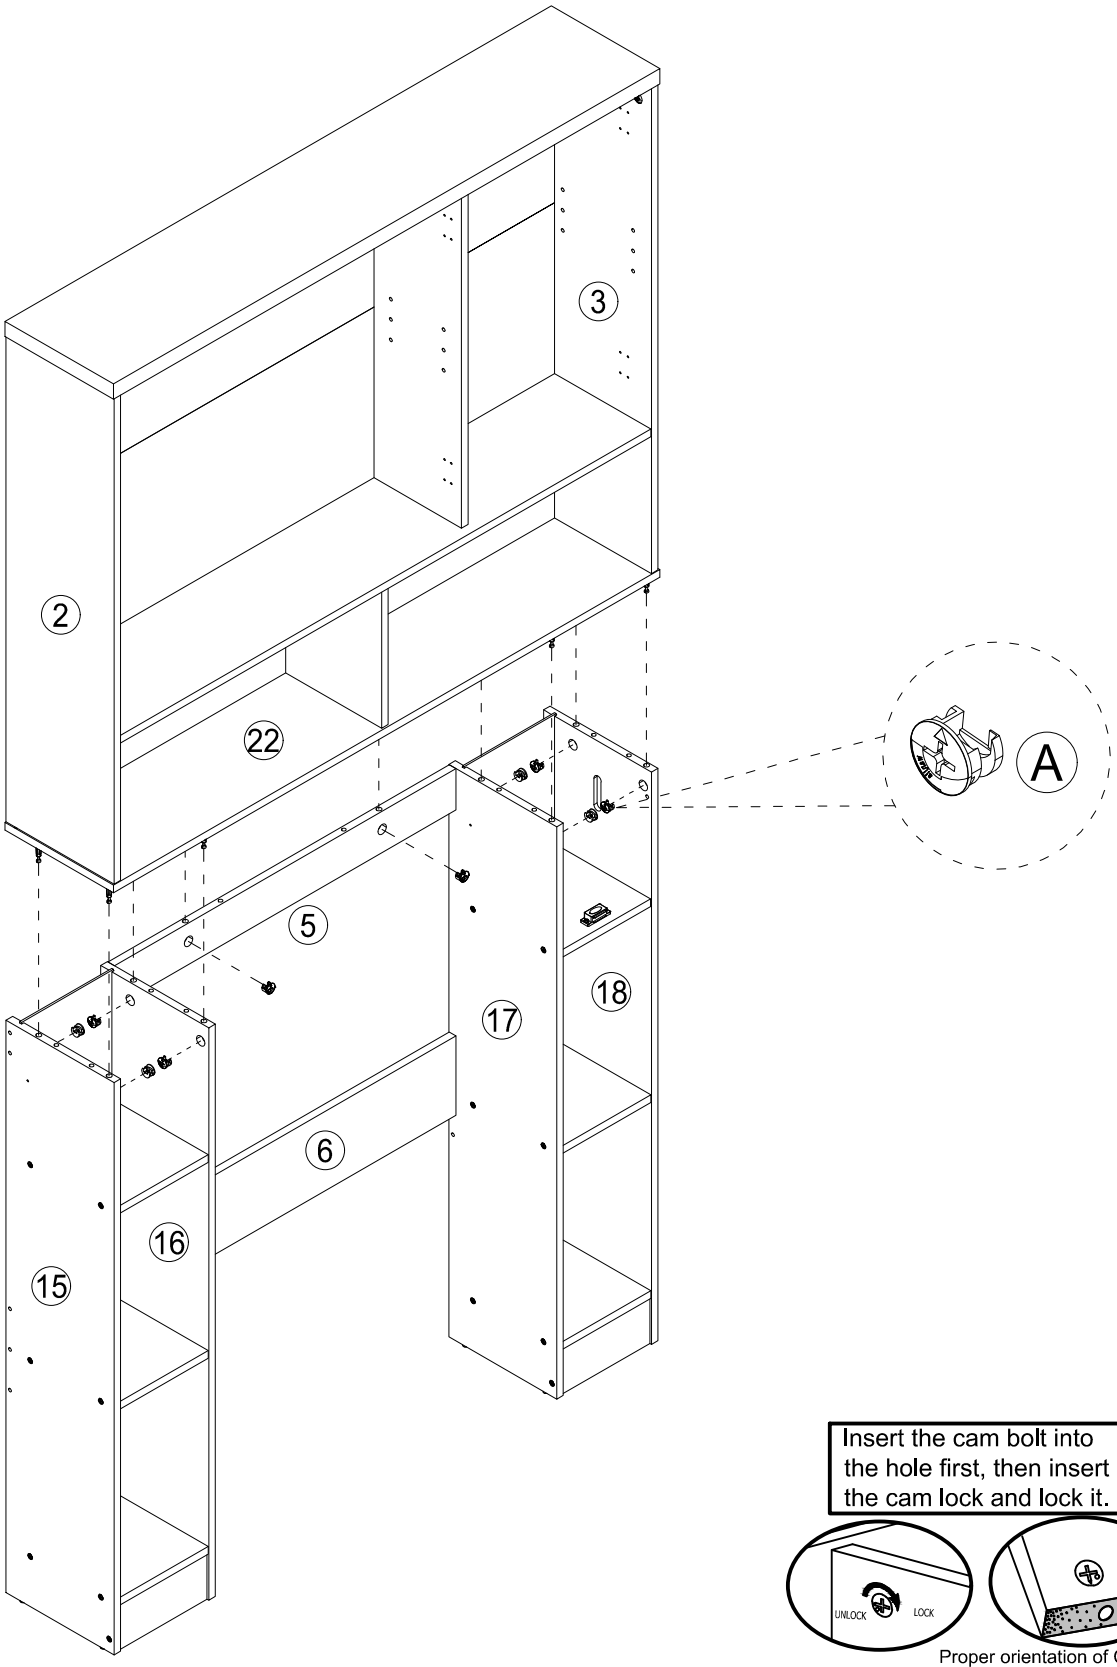

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

Proper orientation of CAM LOCK


STEP19

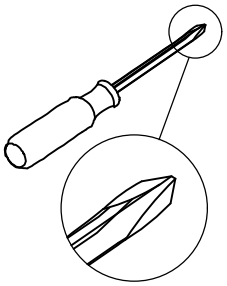


Ø3X10mm	
F	X6

39.5X12X1mm	
I	X1

43X8X9.5mm	
J	X2

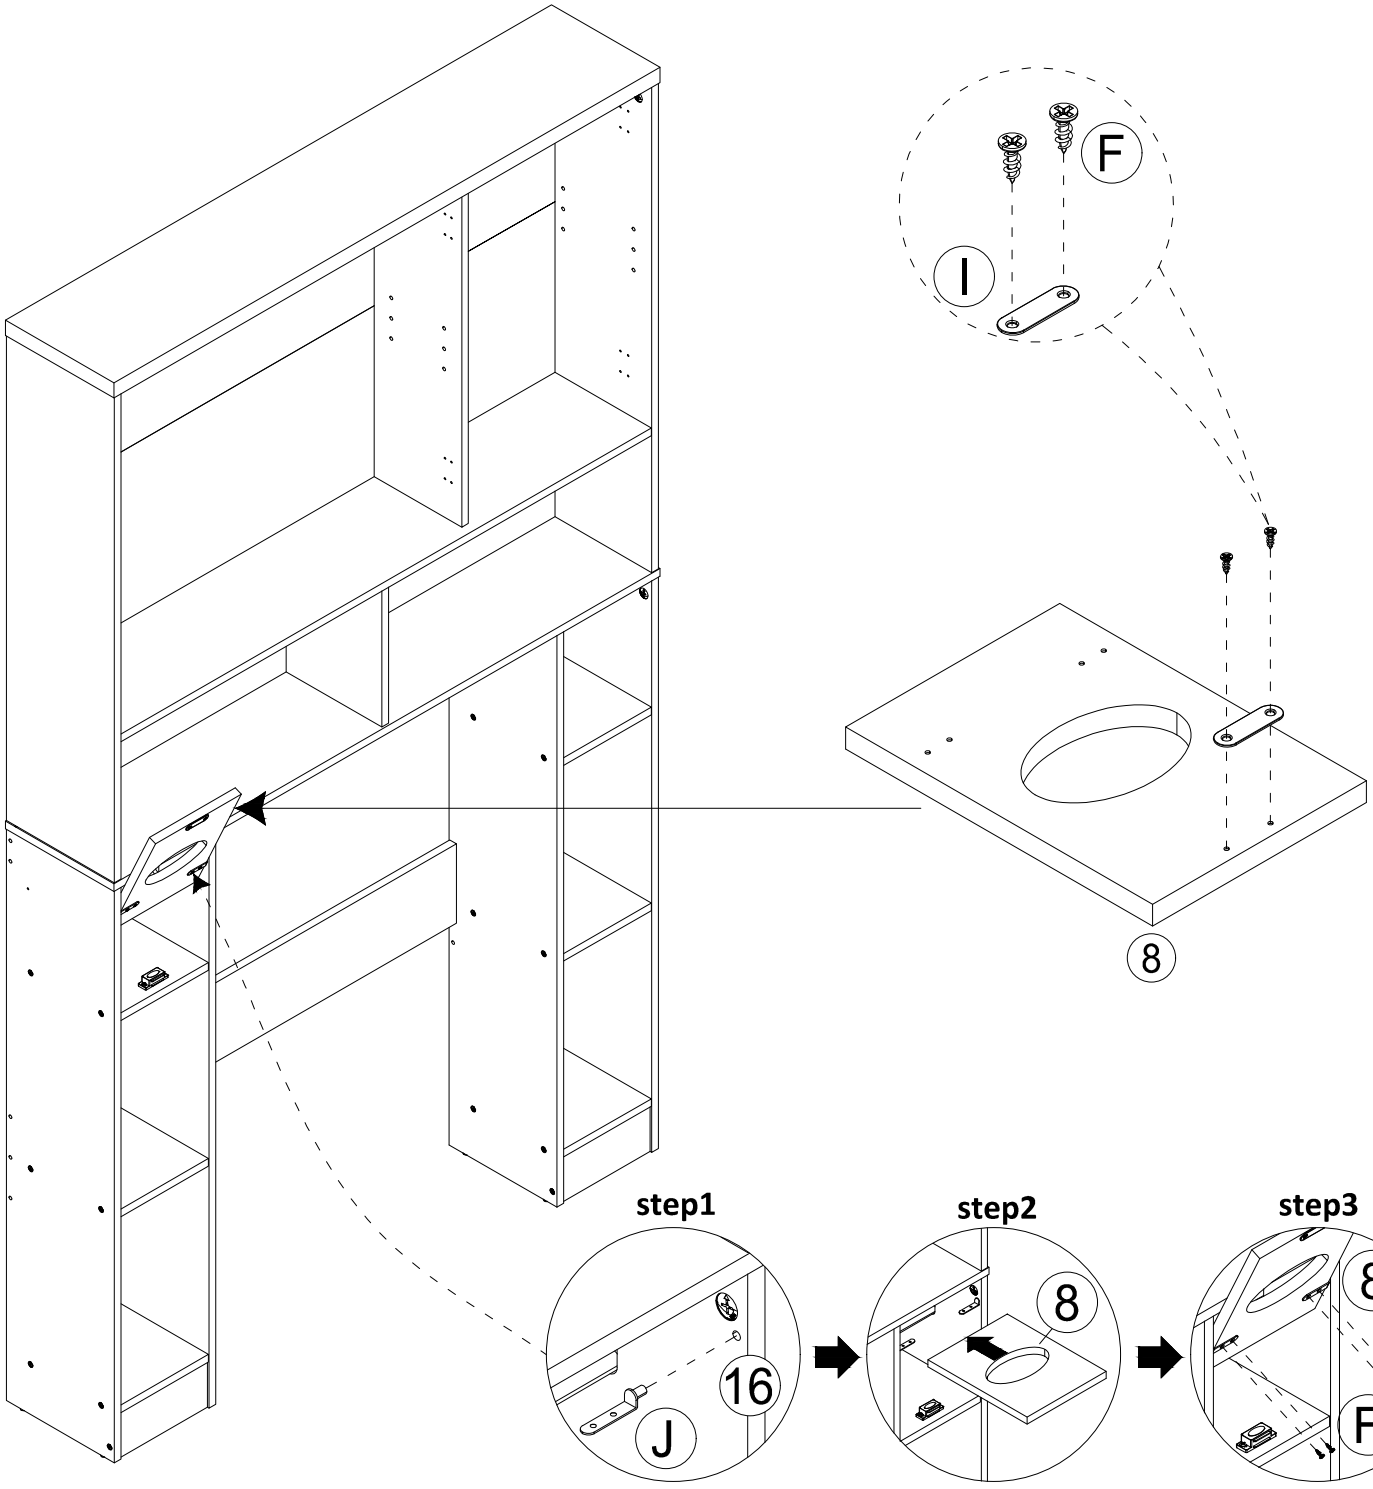

STEP20

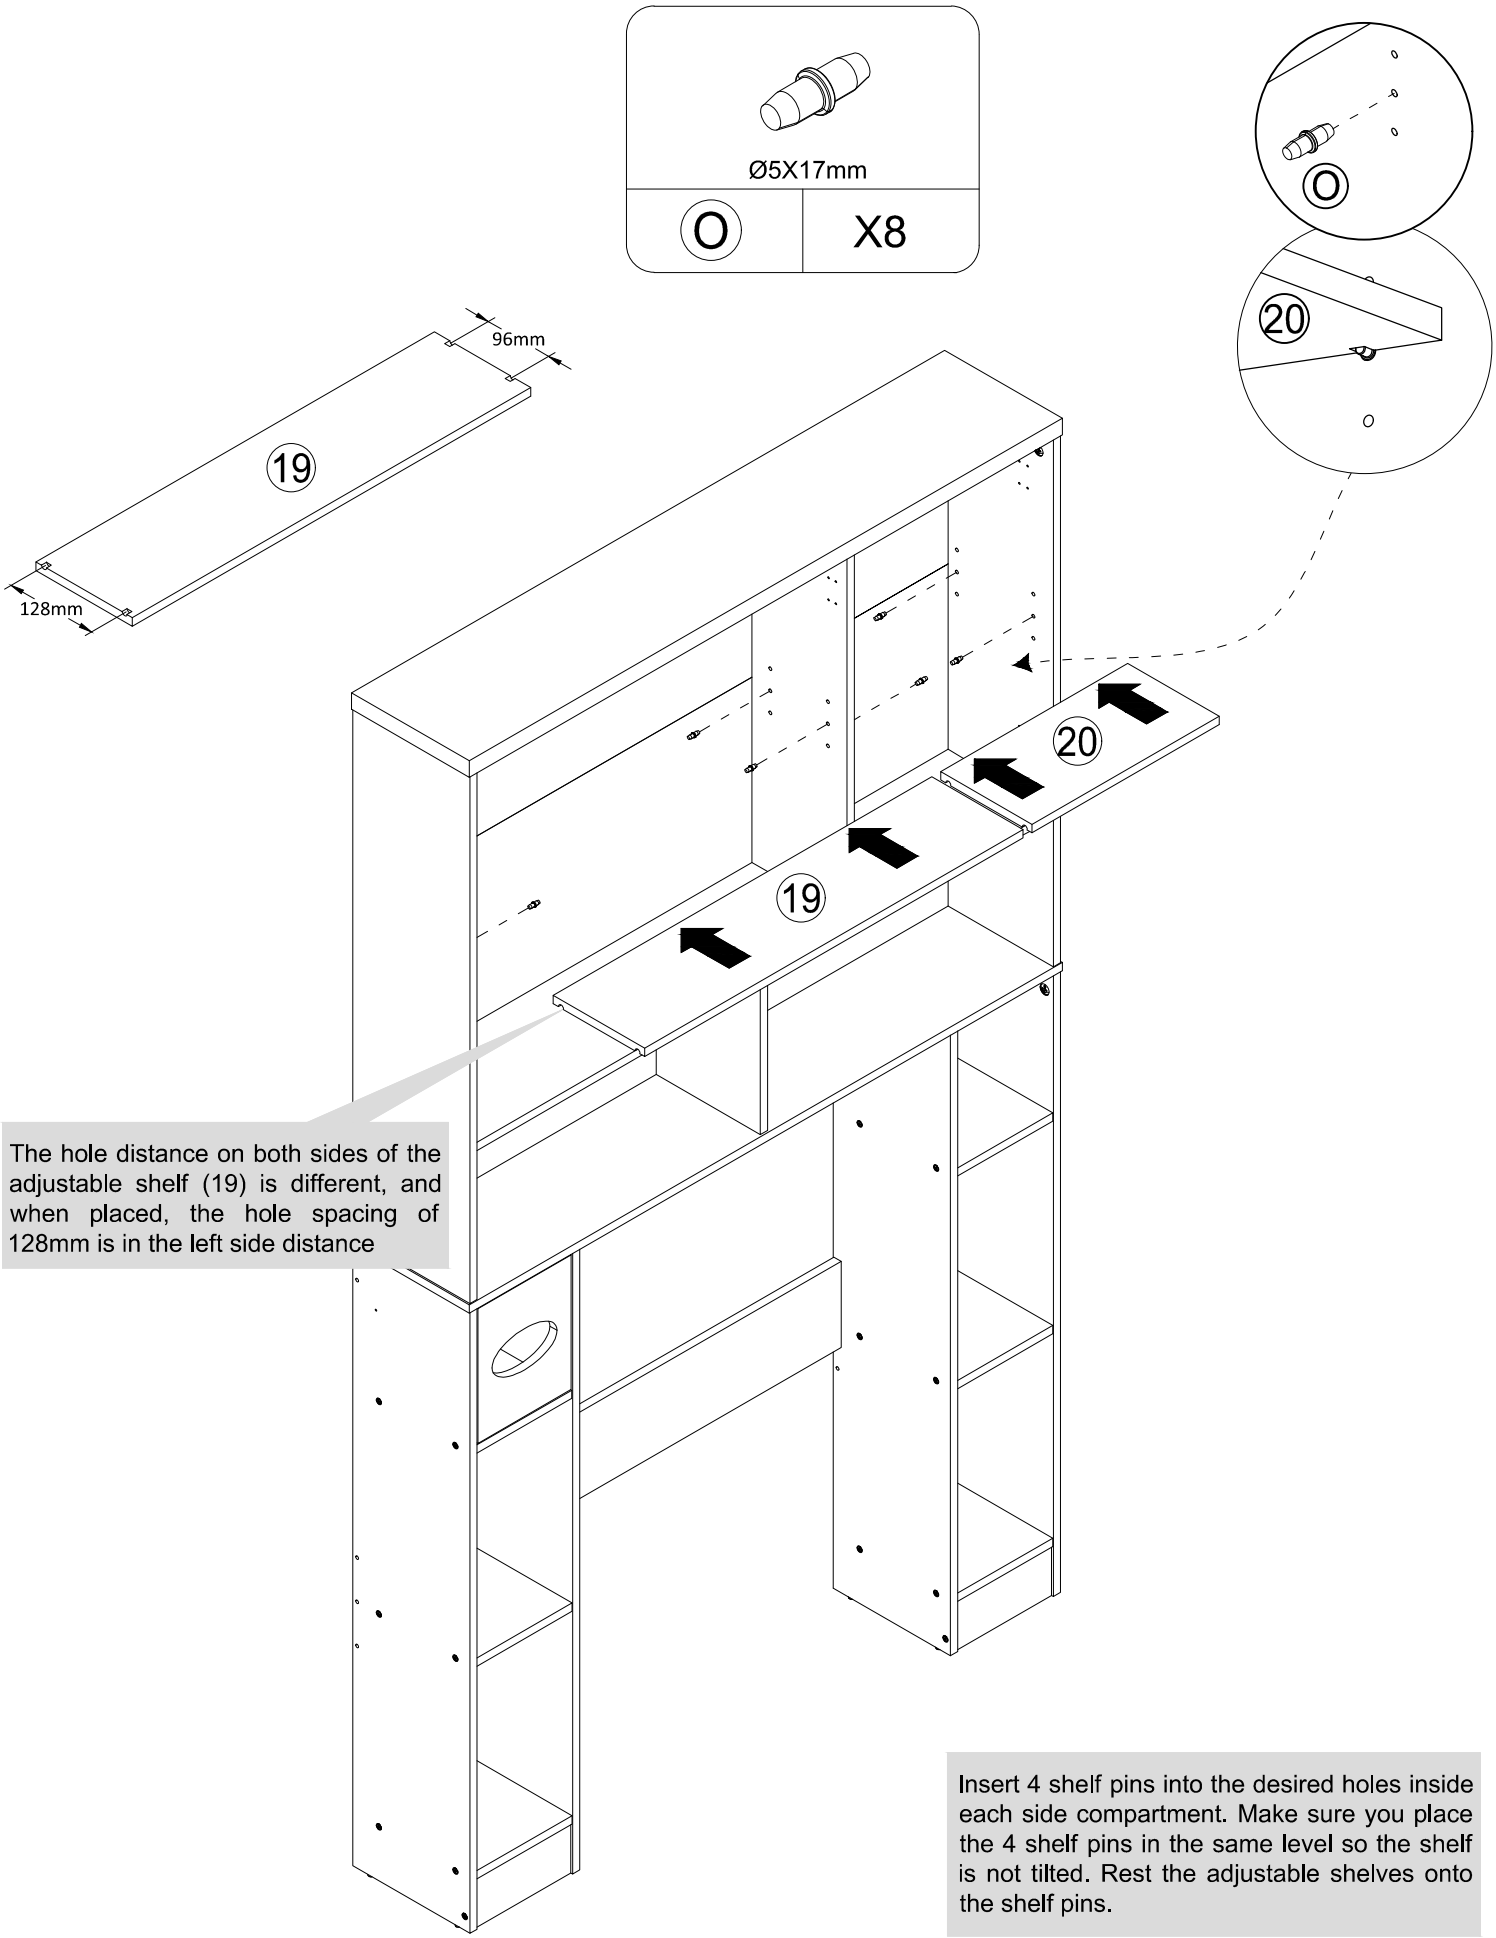


The hole distance on both sides of the adjustable shelf (19) is different, and when placed, the hole spacing of 128mm is in the left side distance

Insert 4 shelf pins into the desired holes inside each side compartment. Make sure you place the 4 shelf pins in the same level so the shelf is not tilted. Rest the adjustable shelves onto the shelf pins.


STEP21

Ø3.5X12mm		Ø25mm		M4X19mm		127X12X21mm	
E	X8	K	X4	M	X4	N	X2

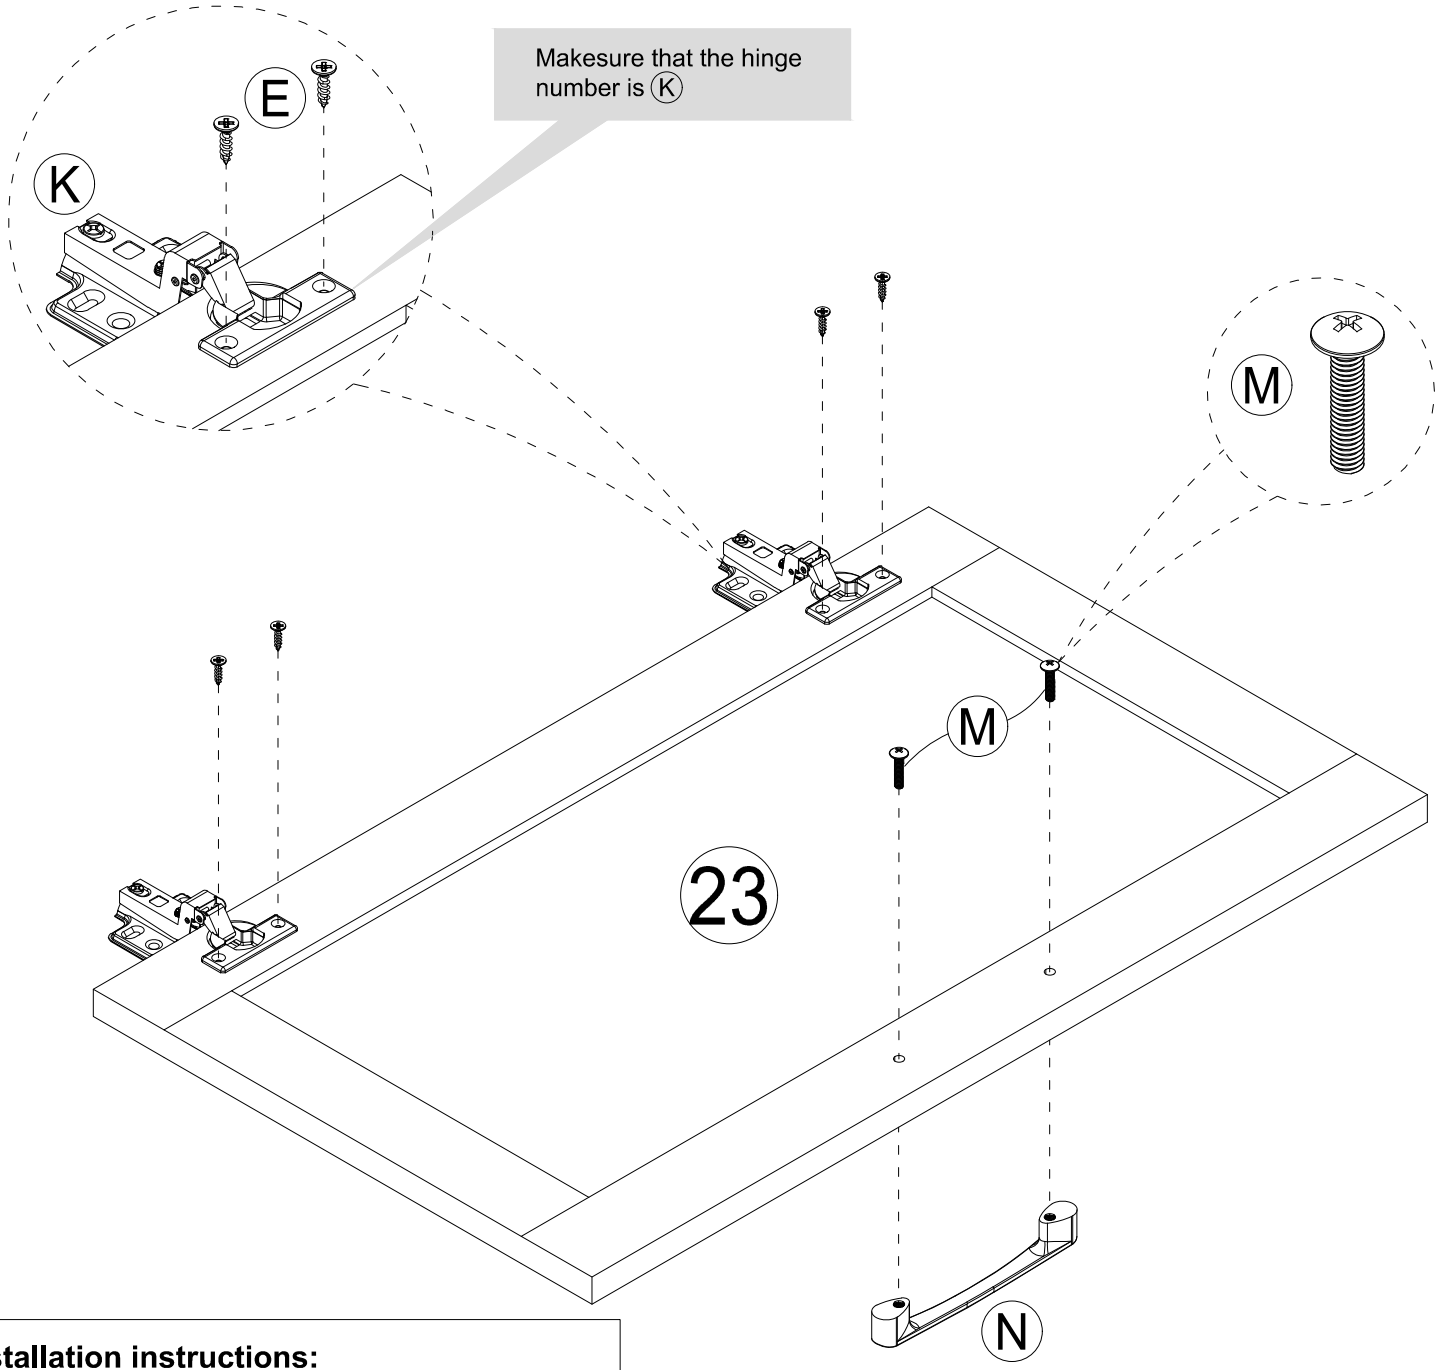

Installation instructions:

The position pointed by the arrow has different curvatures, so be sure to install according to the corresponding number shown in the step diagram

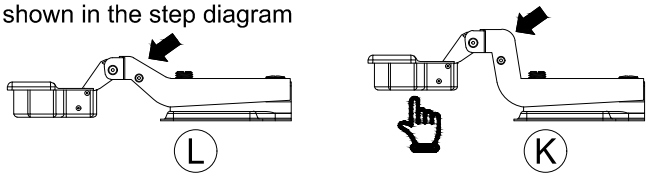



L The hinge curvature is relatively small

K The hinge has a relatively large curvature


x 2

STEP22

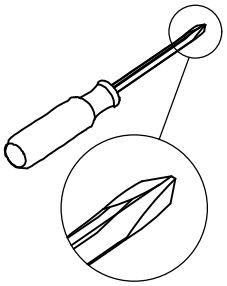

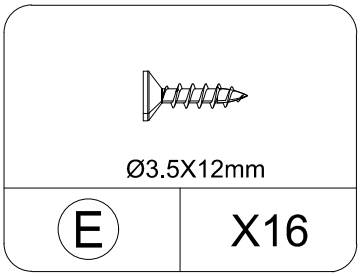


THIS STEP REQUIRES 2 PEOPLE

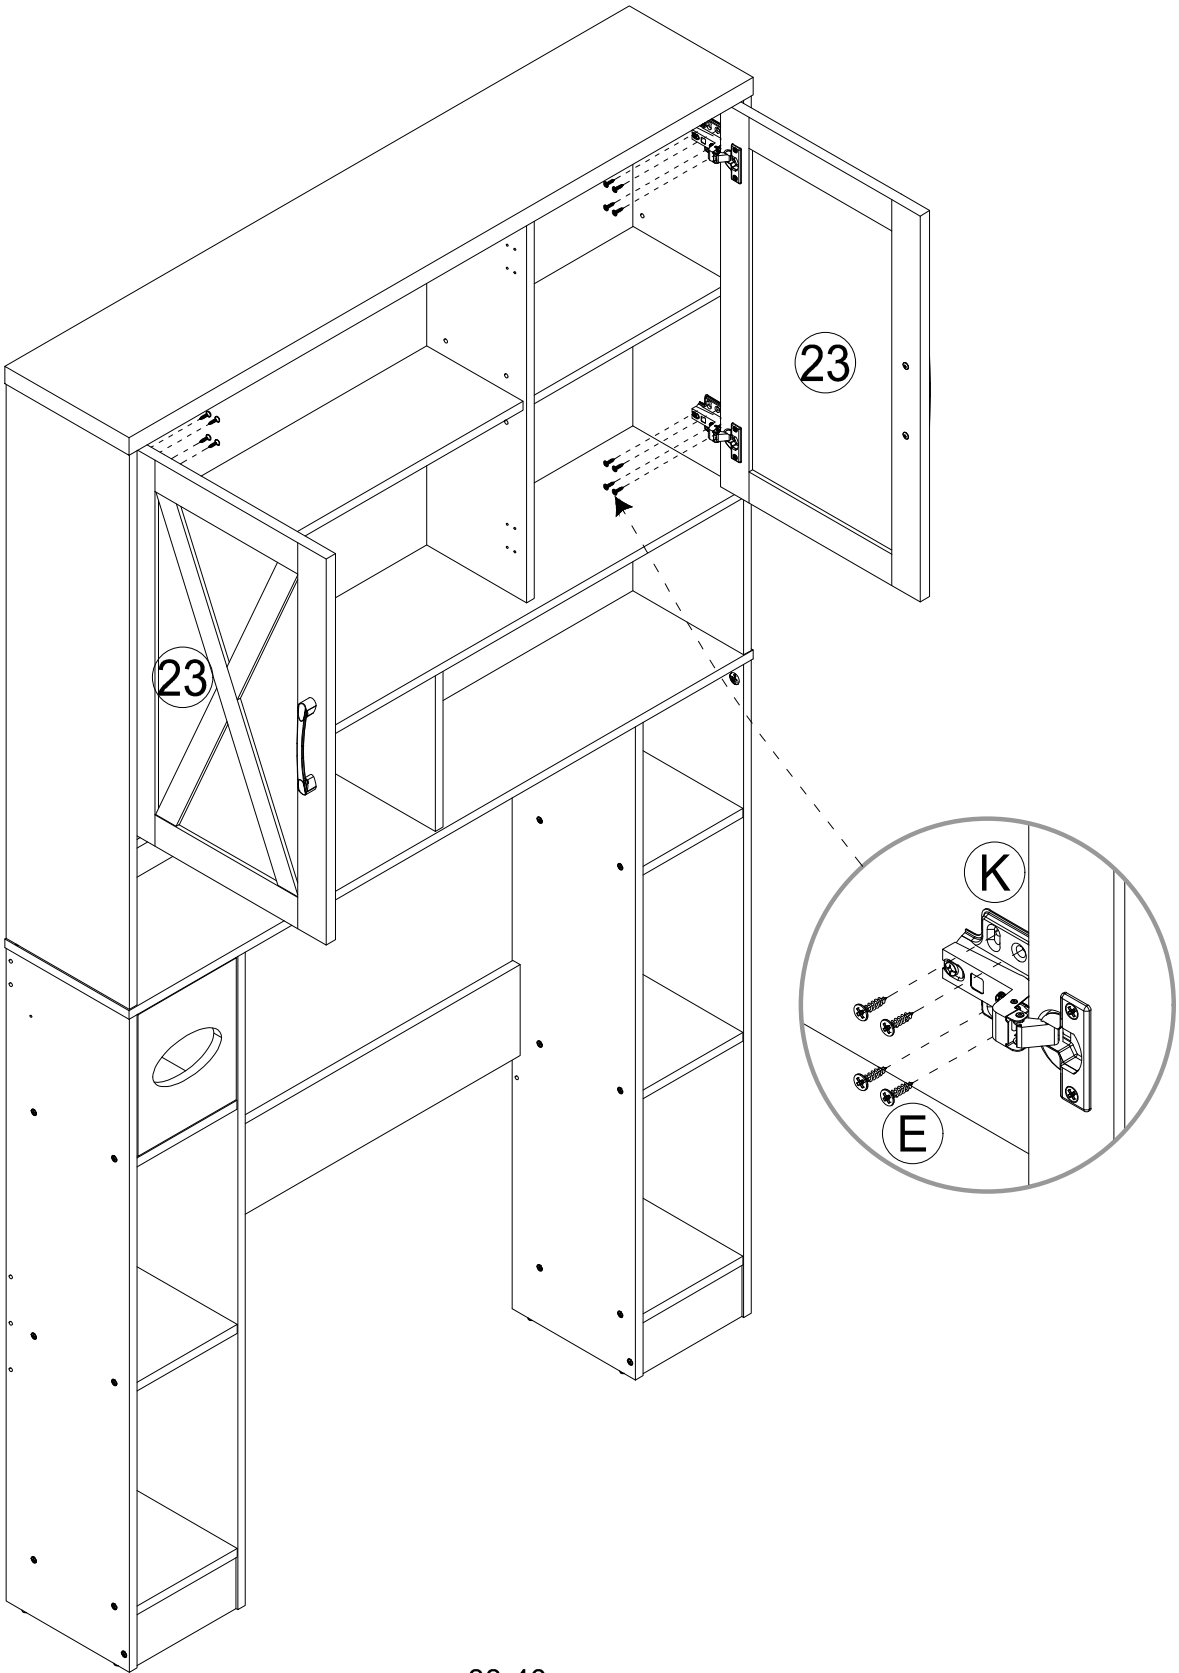


STEP23

Ø3.5X12mm		Ø25mm		M4X19mm		127X12X21mm	
E	X4	L	X2	M	X2	N	X1

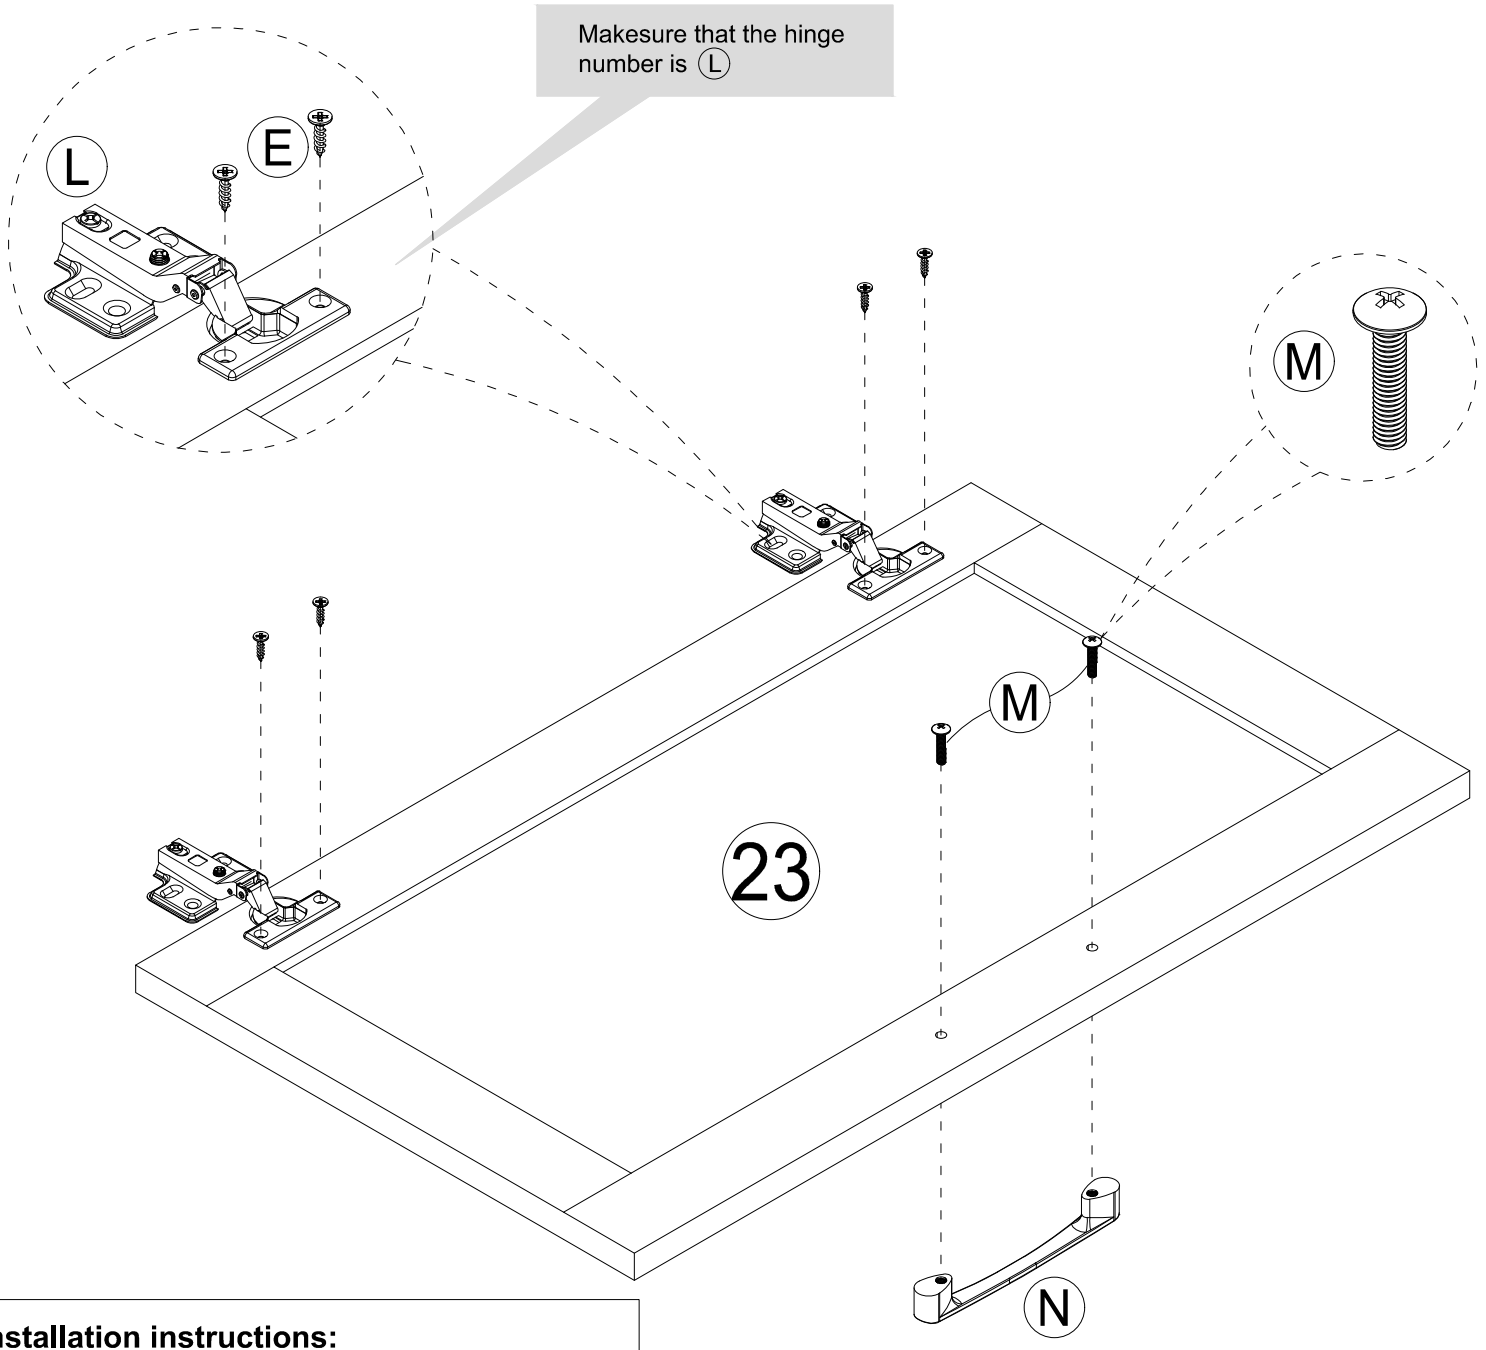


Installation instructions:

The position pointed by the arrow has different curvatures, so be sure to install according to the corresponding number shown in the step diagram

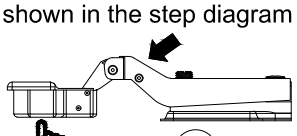



The hinge curvature is relatively small

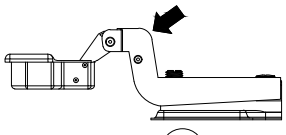


The hinge has a relatively large curvature

STEP24

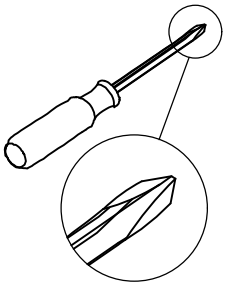

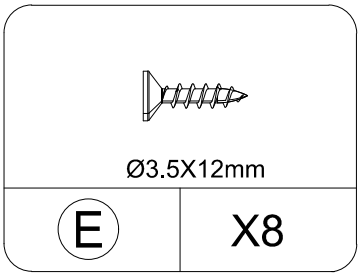



THIS STEP REQUIRES 2 PEOPLE

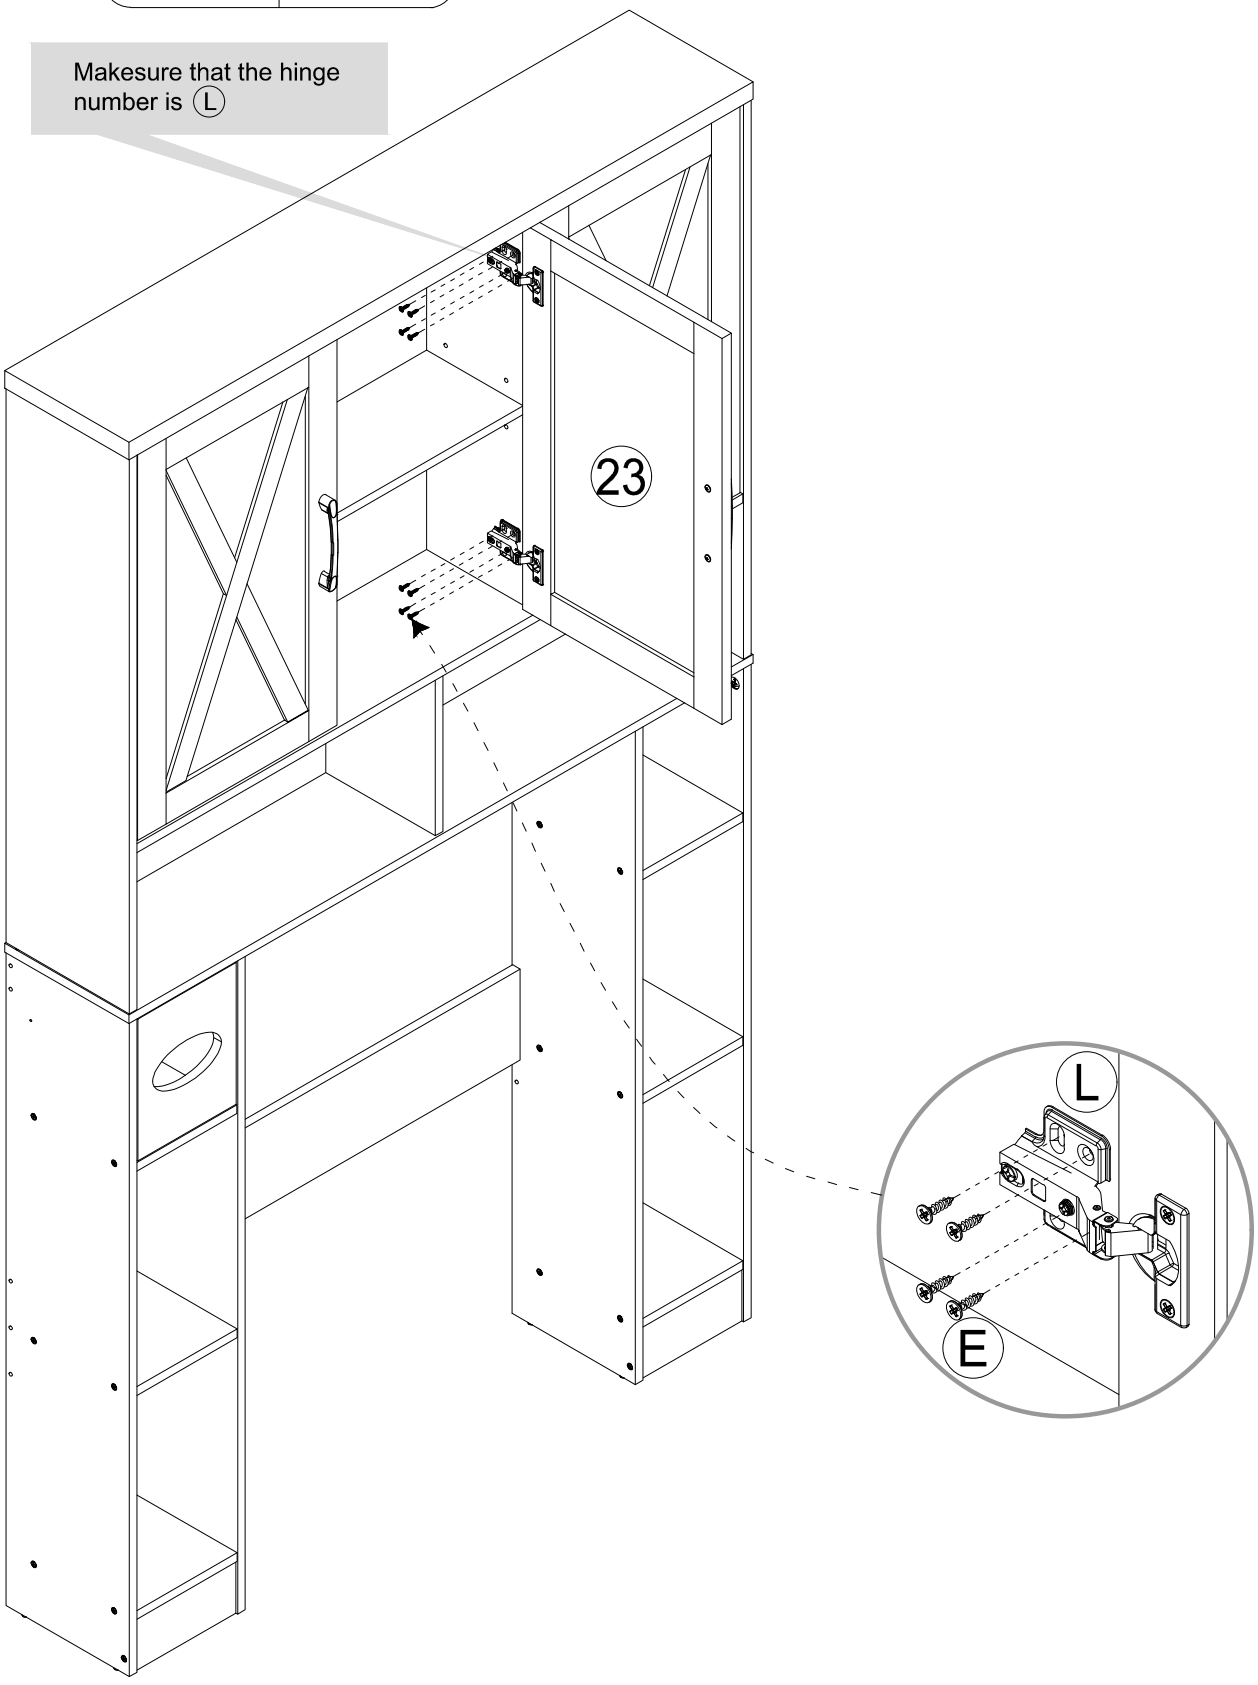


STEP25

SCHEMATIC DIAGRAM OF HINGE ADJUSTMENT DOOR PANEL GAP

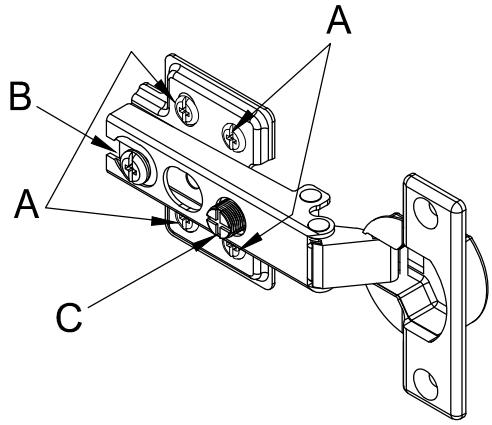


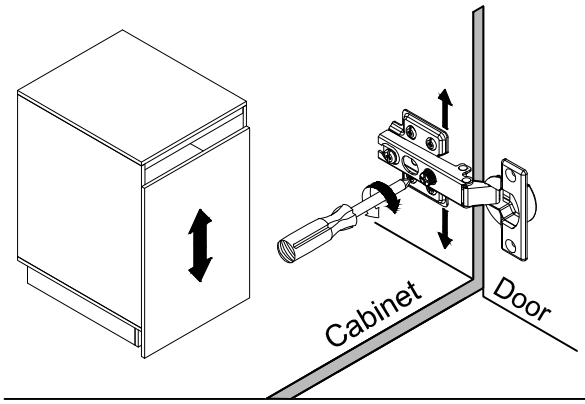

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

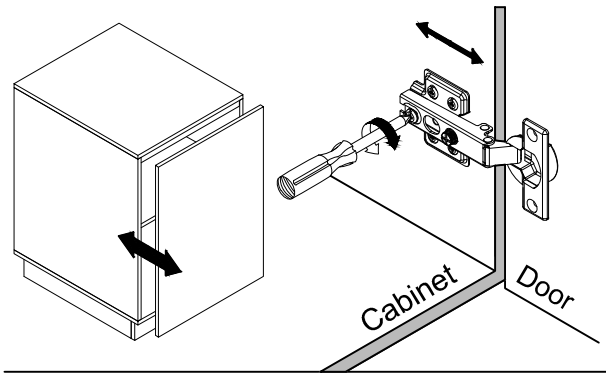


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

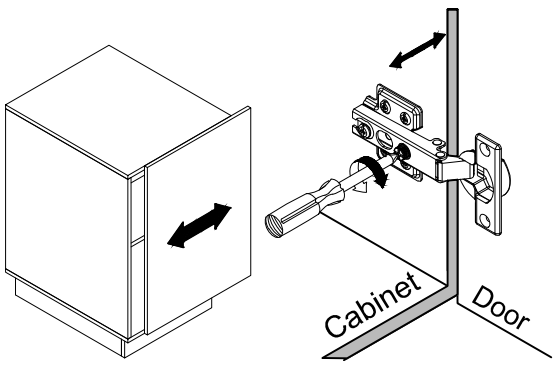



To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP26

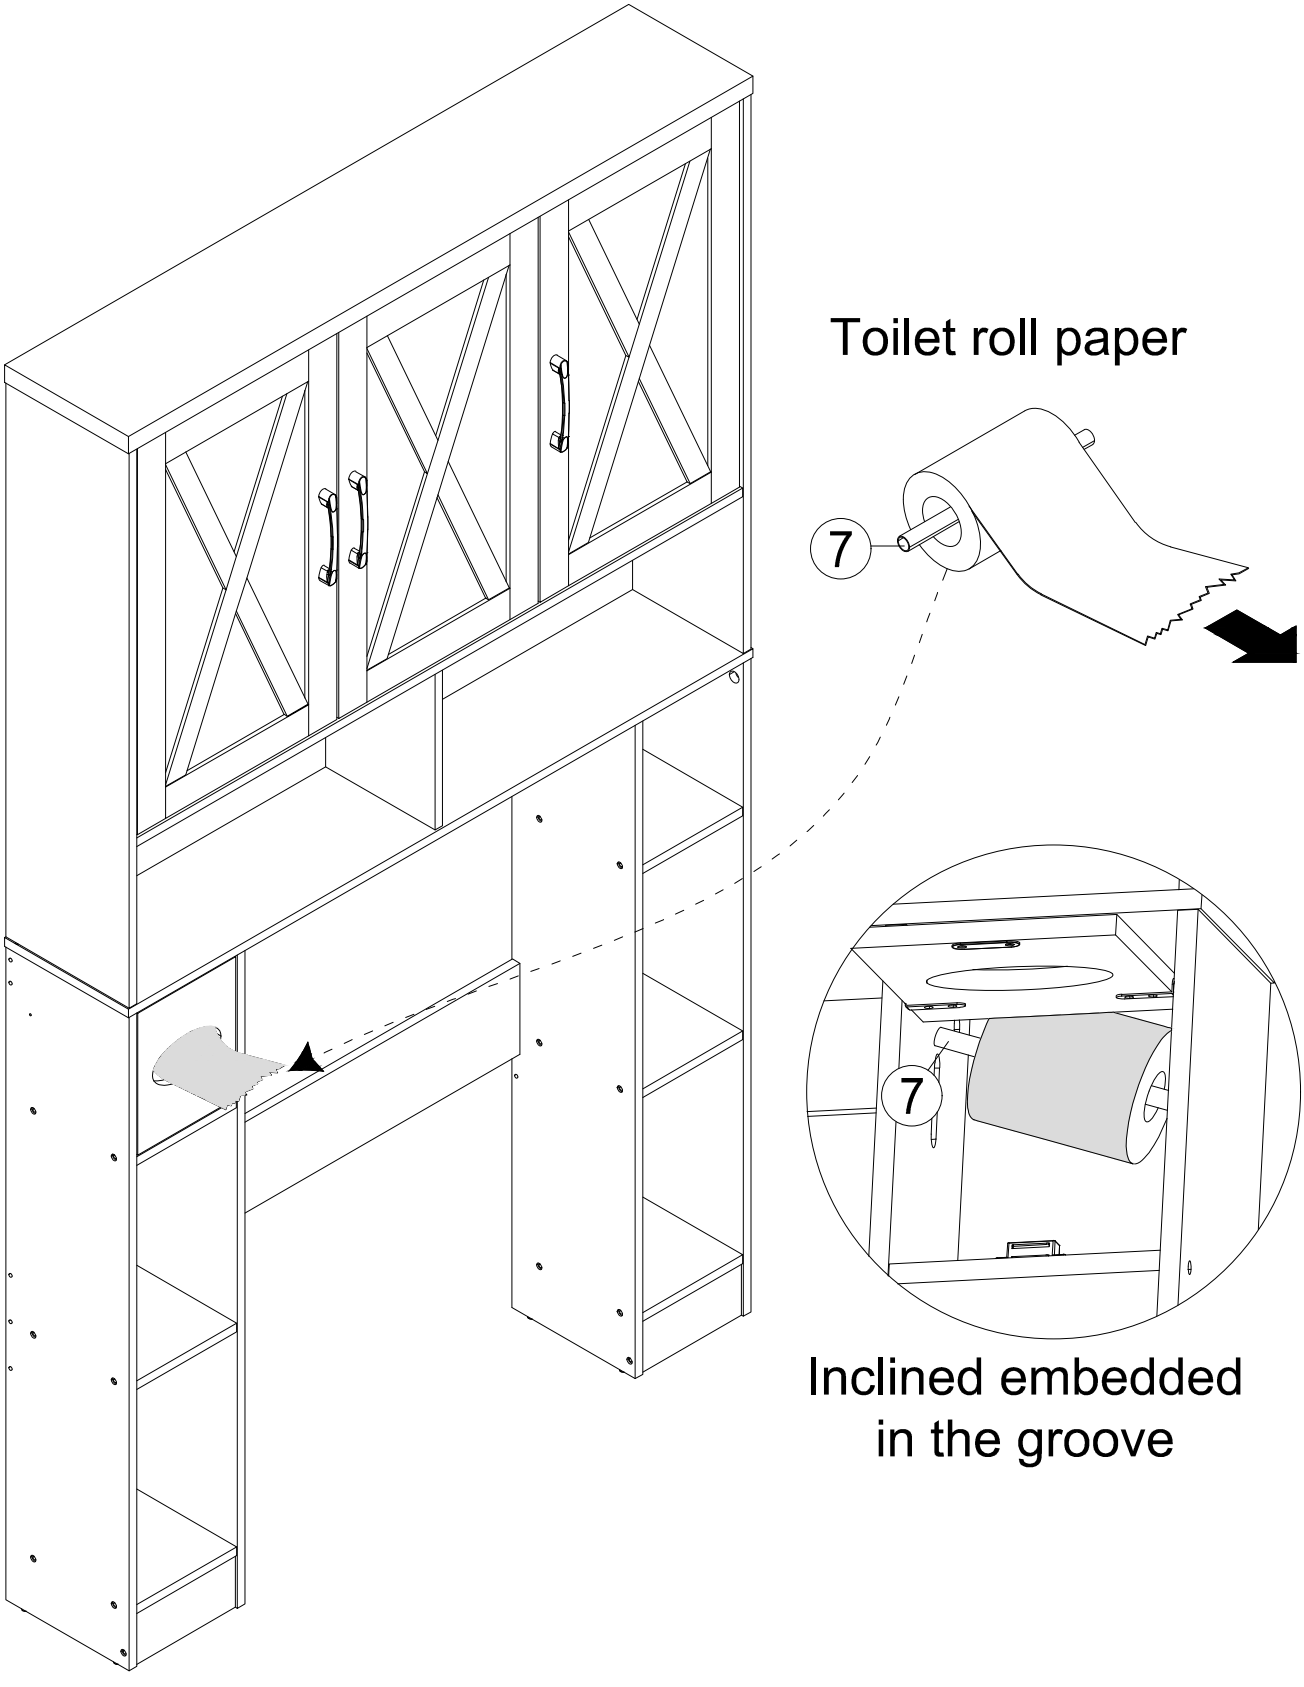


STEP27

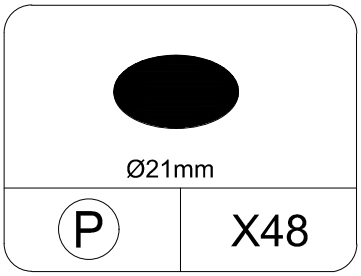
Ø21mm
P
X48

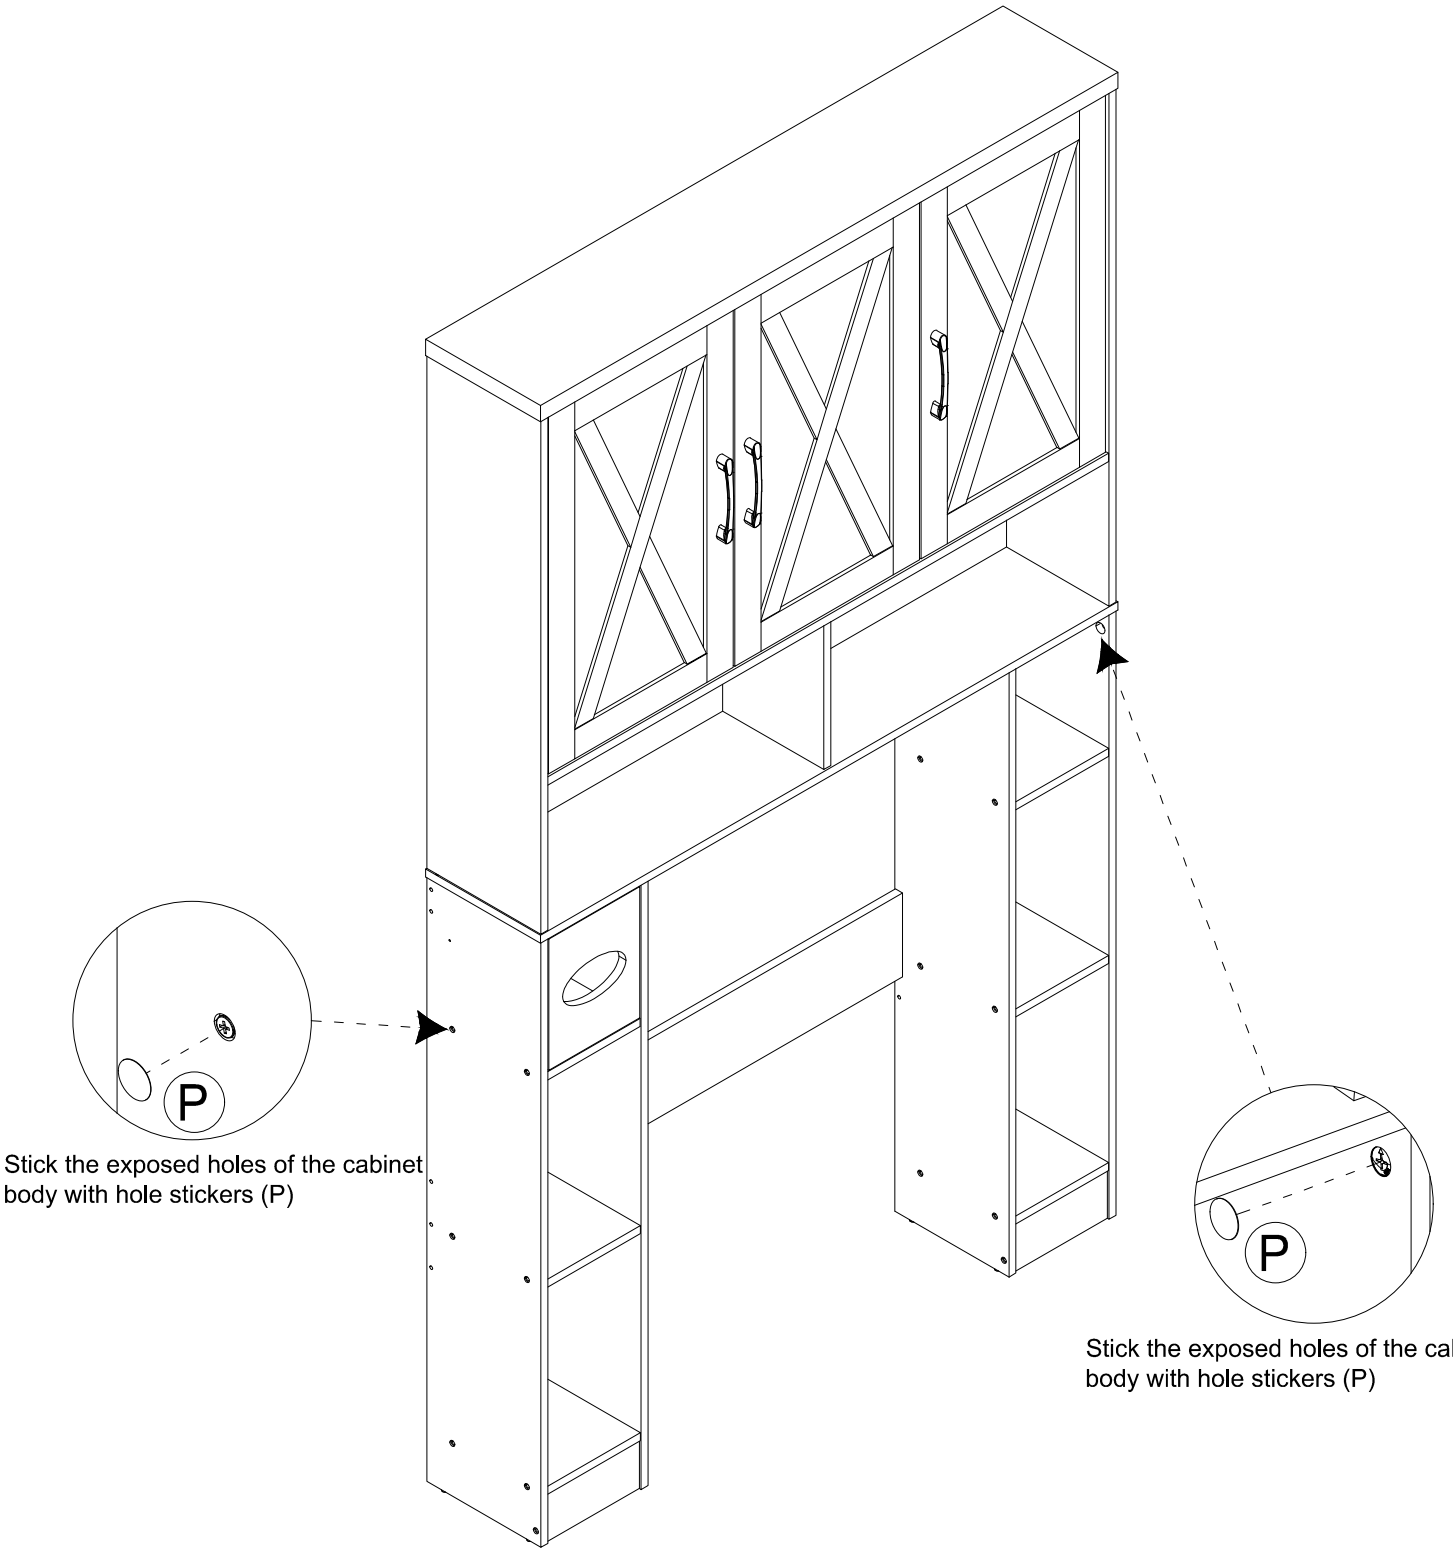
P
Stick the exposed holes of the cabinet body with hole stickers (P)
P
Stick the exposed holes of the cabinet body with hole stickers (P)


STEP28

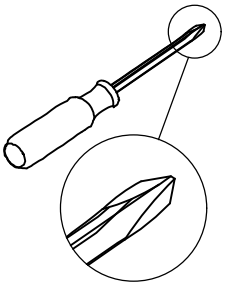

2pcs	2pcs	2pcs	2pcs
Ø4X40mm	Ø4X12mm	Ø8X29mm	73X15X24mm
R	X1 set		

1.Put the cabinet against the wall and mark the hole locked against the wall with a marker.




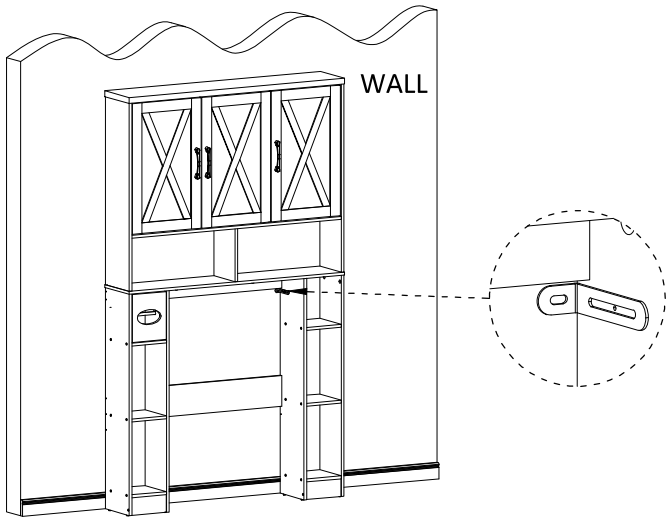

1

2.Use an electric drill to drill 2 holes with a diameter of Ø 6 and a depth of 45mm at the marked location.




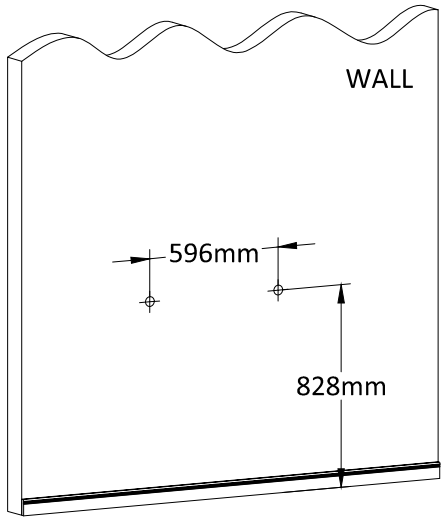

2

3.Place anchors (R) into the hole.




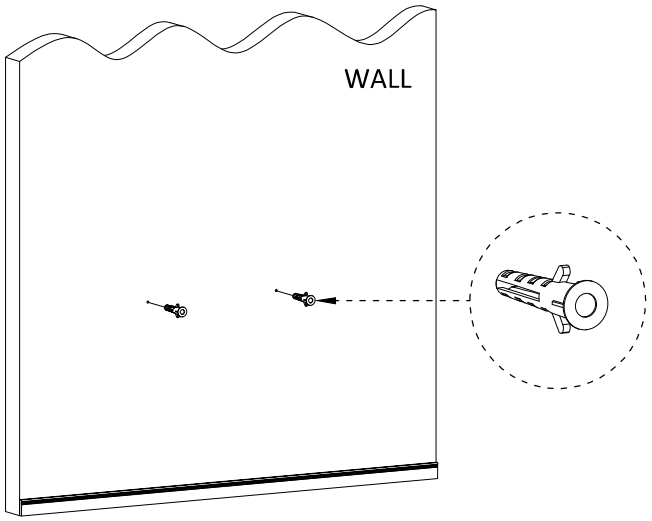

3

4.Push the shelf close to the wall, align it with the holes, and then tighten it with screws(R).



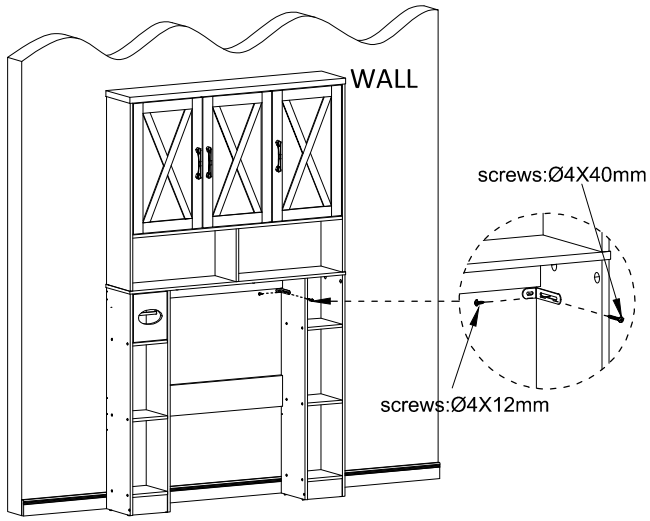

4

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:
- ALWAYS install tipover restraint provided.
- NEVER put a tv on this product.
- NEVER allow children to stand, climb or hang on drawers , doors , or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.
Do not remove !

⚠ ATTENTION




Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:
- TOUJOURS installer a retenue de basculement fournine.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout , de grimper ou de s'accrocher à des tiroirs , des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.
Ne pas enlever!

⚠ WARNUNG




Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:
- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen , Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes EtikettNicht.
Nicht entfernen !