

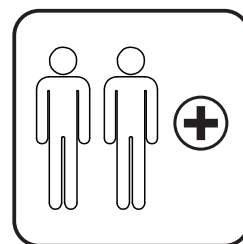
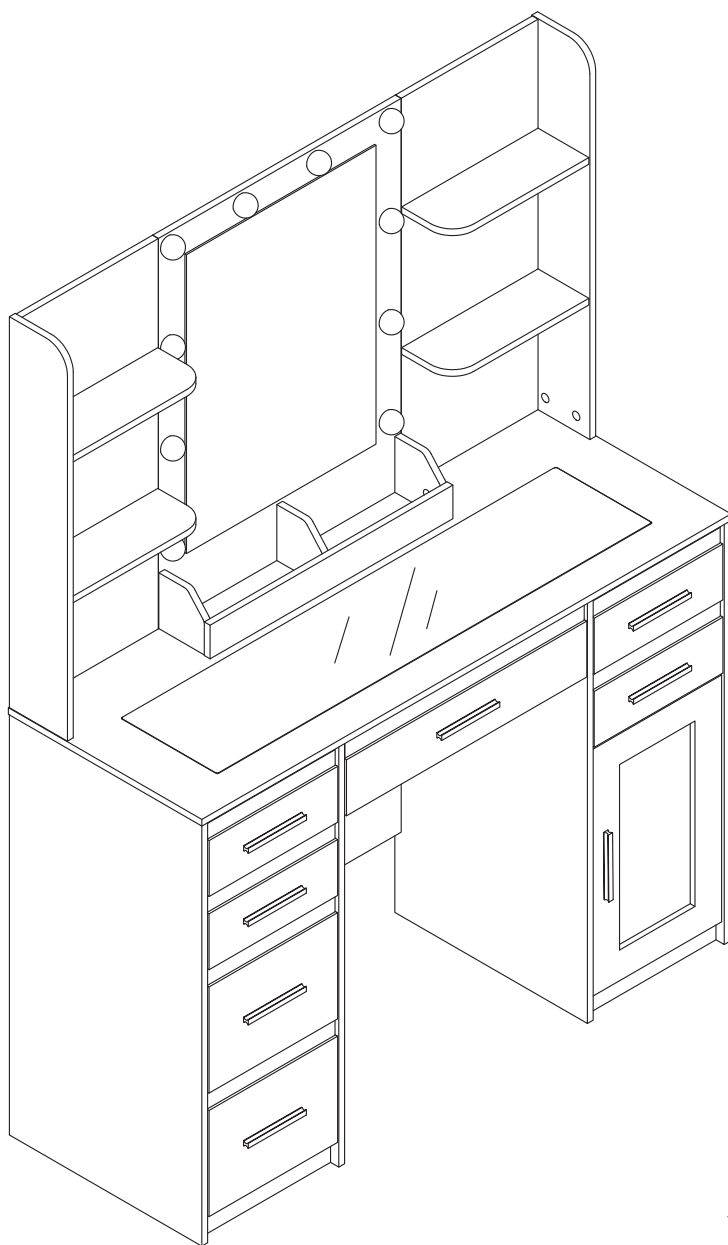


INSTRUCTION MANUAL


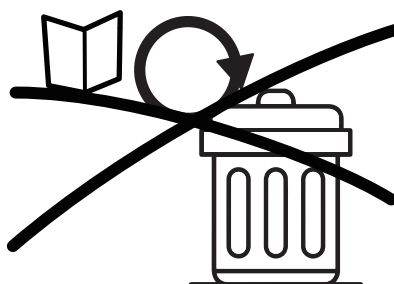


Size: 109.4*40*146.5cm

- Important, retain for future reference: read carefully
- Wichtig, für spätere nachschlage aufbewahren: sorgfältig lesen
- Importante, guardar para referencia futura: leer atentamente
- Importante, conservare per riferimenti futuri: leggere attentamente
- Important, à conserver pour référence future : lire attentivement

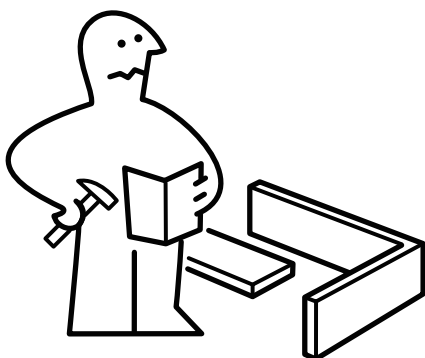

- Assemble on a flat, clean and soft surface.
- Auf einer flachen, sauberen und weichen Oberfläche zusammenbauen.
- Assembler sur une surface plate, propre et douce.
- Assemblare su una superficie piatta, pulita e morbida.
- Ensamblar sobre una superficie plana, limpia y suave.

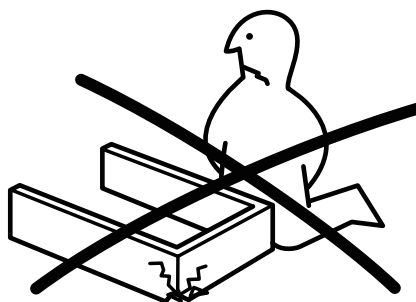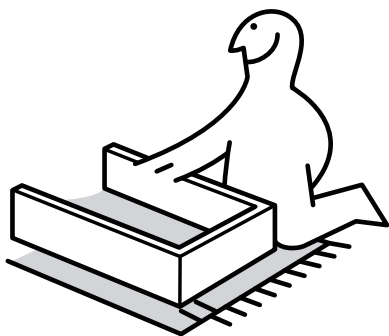


- Professional installation is highly recommended.
- Eine professionelle Installation wird dringend empfohlen.
- Une installation professionnelle est fortement recommandée.
- Si raccomanda vivamente l'installazione professionale.
- Se recomienda altamente la instalación profesional.





- Periodically check that all components are tightly secured.
- Überprüfen sie regelmäßig, dass alle komponenten fest gesichert sind.
- Vérifiez périodiquement que tous les composants sont bien fixés.
- Controllare periodicamente che tutti i componenti siano ben fissati.
- Verifique periódicamente que todos los componentes estén bien asegurados.



- It is recommended that multiple people assemble this product.
- Es wird empfohlen, dass mehrere Personen dieses Produkt zusammenbauen.
- Il est recommandé que plusieurs personnes assemblent ce produit.
- Si raccomanda che più persone assemblino questo prodotto.
- Se recomienda que varias personas ensamblen este producto.

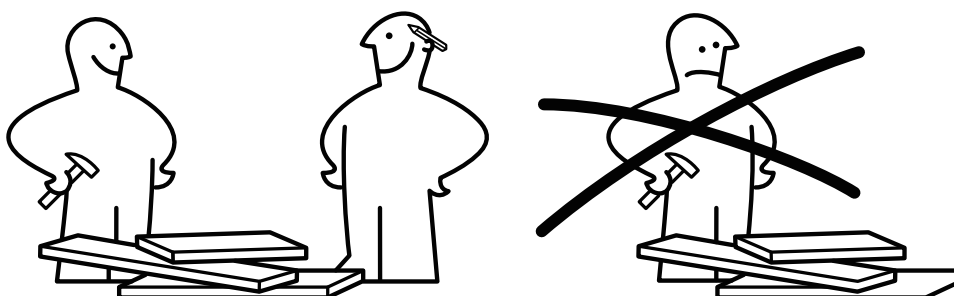

- Please have the following auxiliary tools ready:
- Bitte haben Sie die folgenden Hilfswerkzeuge bereit:
- Veuillez avoir les outils auxiliaires suivants à portée de main:
- Si prega di avere pronti i seguenti strumenti ausiliari:
- Por favor, tenga listos las siguientes herramientas auxiliares:

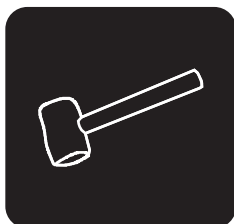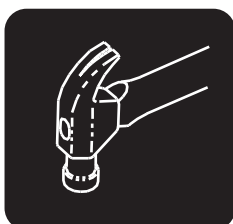


- Serious or fatal crushing injuries can occur due to furniture tip-over. Always secure this furniture to the wall with tip-over restraints.
- Schwere oder tödliche Quetschverletzungen können durch das Umkippen von Möbeln verursacht werden. Sichern Sie diese Möbel immer mit Kipp-Sicherungen an der Wand.
- Des blessures graves ou mortelles par écrasement peuvent survenir lors du basculement de meubles. Fixez toujours ces meubles au mur avec des dispositifs anti-basculement.
- Lesioni gravi o mortali da schiacciamento possono verificarsi a causa del ribaltamento dei mobili. Fissare sempre questi mobili alla parete con i sistemi antiribaltamento.
- Pueden ocurrir lesiones graves o fatales por aplastamiento por el volcamiento de muebles. Asegure siempre este mueble a la pared con dispositivos anti-vuelco.


- Never let children climb or hang on drawers, doors, or shelves.
- Lassen Sie Kinder niemals auf Schubladen, Türen oder Regalen klettern oder hängen.
- Ne laissez jamais les enfants grimper ou se suspendre aux tiroirs, portes ou étagères.
- Non permettere mai ai bambini di arrampicarsi o appendersi ai cassetti, alle porte o agli scaffali.
- Nunca permita que los niños trepen o se cuelguen de los cajones, puertas o estantes.

How to use furniture connector cam lock screw and fitting?

Eccentric wheel(A)




Dowel(B)




1

Use screwdriver to attach
dowel into pre-inserted nut

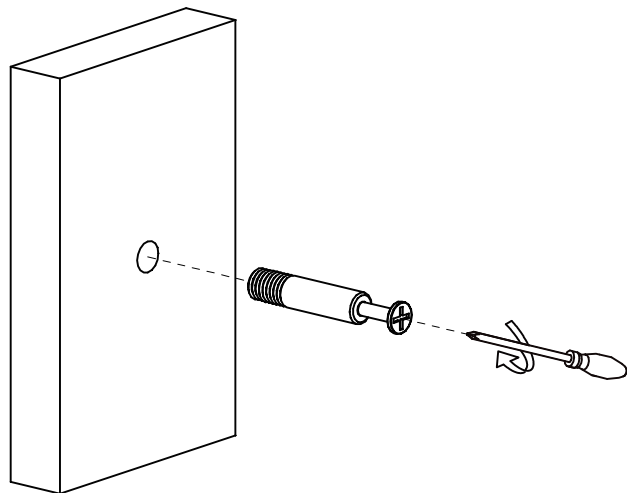


2

Step 1 completed

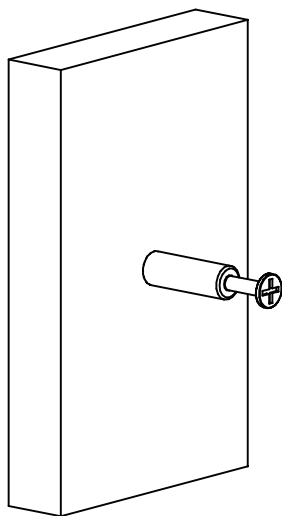


3

Attach dowel into hole on fitting board

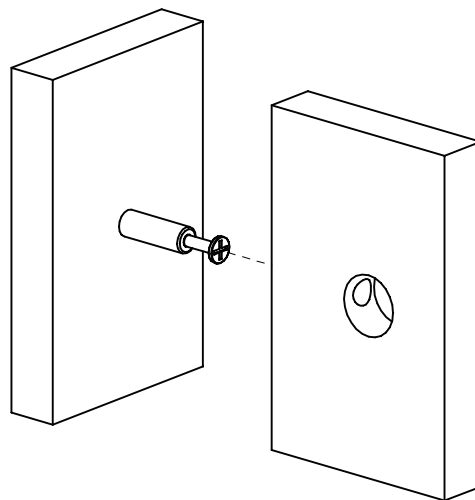


4


Put eccentric wheel (cam lock fitting) into hole

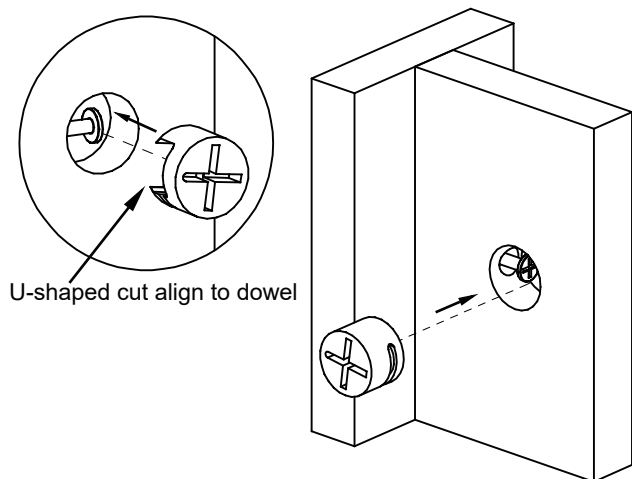

5

Tighten: Turn the eccentric wheel clockwise
Loosen: Turn it anticlockwise

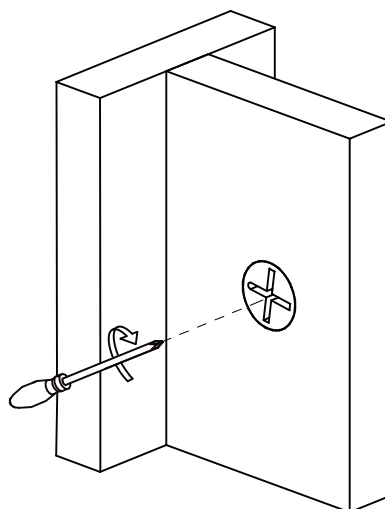





CL
x7
L300mm



CR
x7
L300mm

























DL
x7
L300mm



DR
x7
L300mm

























List Of Installation Parts

● Before installation, please check all parts for any missing components.

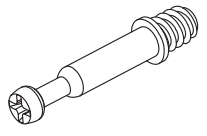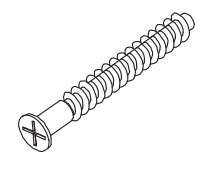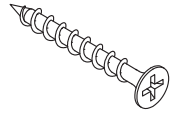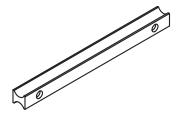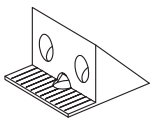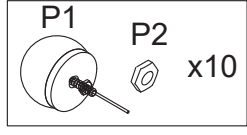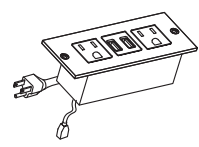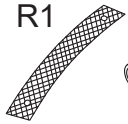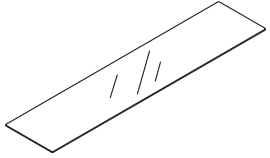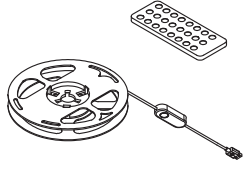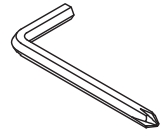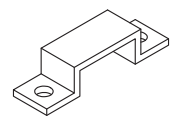A M6×35mm  88+2PCS	B M15×9mm  88+2PCS	C M6×30mm  21+2PCS	D M5×40mm  23+2PCS
E M3×12mm  92+2PCS	F M3.5×35mm  29+2PCS	G  8PCS	H M3×14mm  12+1PCS
J  12+1PCS	K M4×14mm  16+1PCS	L  2PCS	M CR  CL  DR  DL  7SETS
N  6PCS	P P1  P2  x10 P3  P4  1SET	Q  1PC	R R1  R2  R3  R4  2SETS
S  1PC	T  1PC	U  5PCS	V  1PC
W  17+1PCS	Y  1PC	Z  3PCS	

















List Of Installation Parts




● Before installation, please check all parts for any missing components.

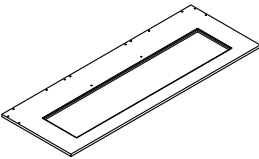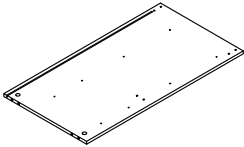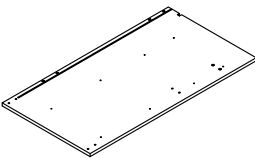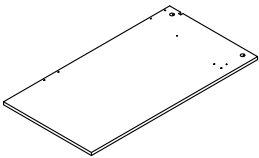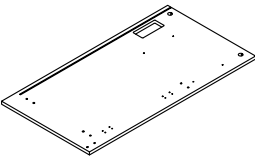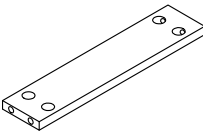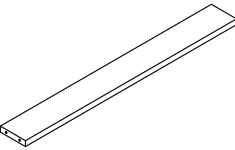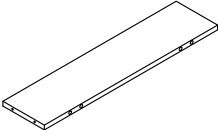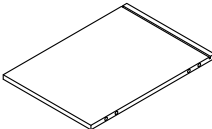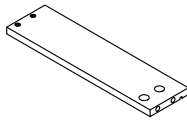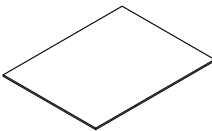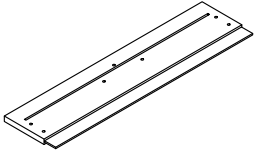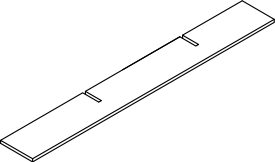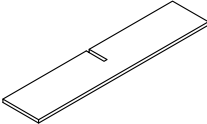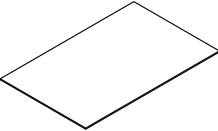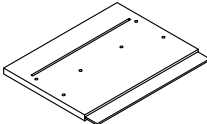1 1094x400x12mm  1PC	2 753x398x12mm  1PC	3 753x398x12mm  1PC	4 753x398x12mm  1PC
5 753x398x12mm  1PC	6 271x60x12mm  4PCS	7 502x60x12mm  1PC	8 120x502x12mm  1PC
9 120x502x12mm  1PC	10 271x383x12mm  1PC	11 266x100x12mm  4PCS	12 300x80x12mm  5PCS
13 300x80x12mm  5PCS	14 222x80x12mm  4PCS	15 230x295x3mm  6PCS	16 497x100x12mm  1PC
17 452x60x5mm  1PC	18 285x60x5mm  2PCS	19 453x80x12mm  1PC	20 287x50x12mm  1PC
21 461x295x3mm  1PC	22 266x190x12mm  2PCS	23 300x120x12mm  2PCS	24 300x120x12mm  2PCS










List Of Installation Parts

● Before installation, please check all parts for any missing components.

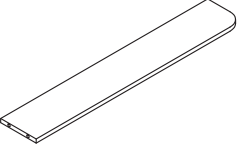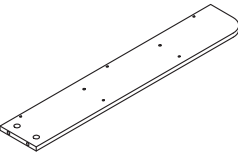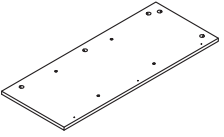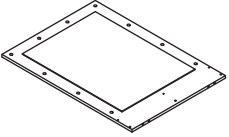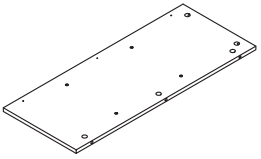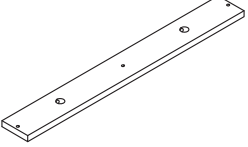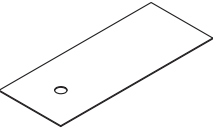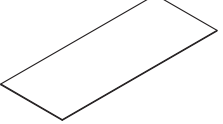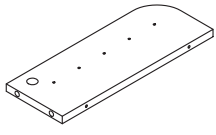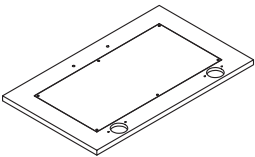25 222x120x12mm  2PCS	27 271x60x12mm  1PC	28 700x120x12mm  1PC	29 700x120x12mm  1PC
30 699x283x12mm  1PC	31 699x502x12mm  1PC	32 699x283x12mm  1PC	33 282x105x12mm  1PC
34 282x105x12mm  2PCS	35 60x502x12mm  1PC	36 100x95x12mm  2PCS	37 100x95x12mm  1PC
38 689x279x3mm  1PC	39 701x279x3mm  1PC	40 282x105x12mm  1PC	41 442x266x12mm  1PC

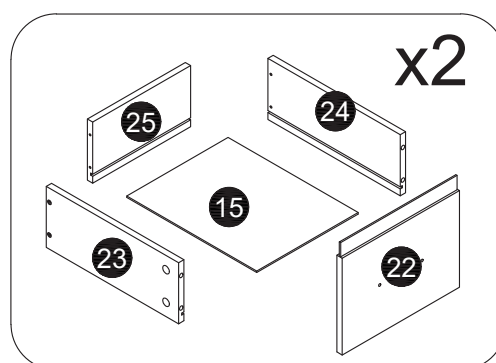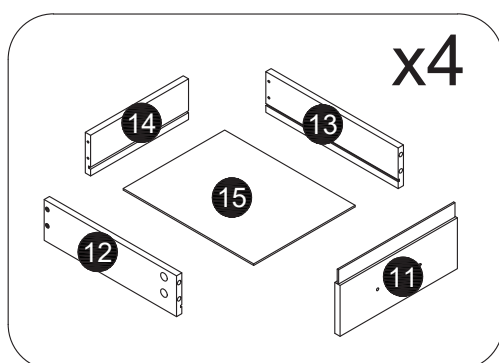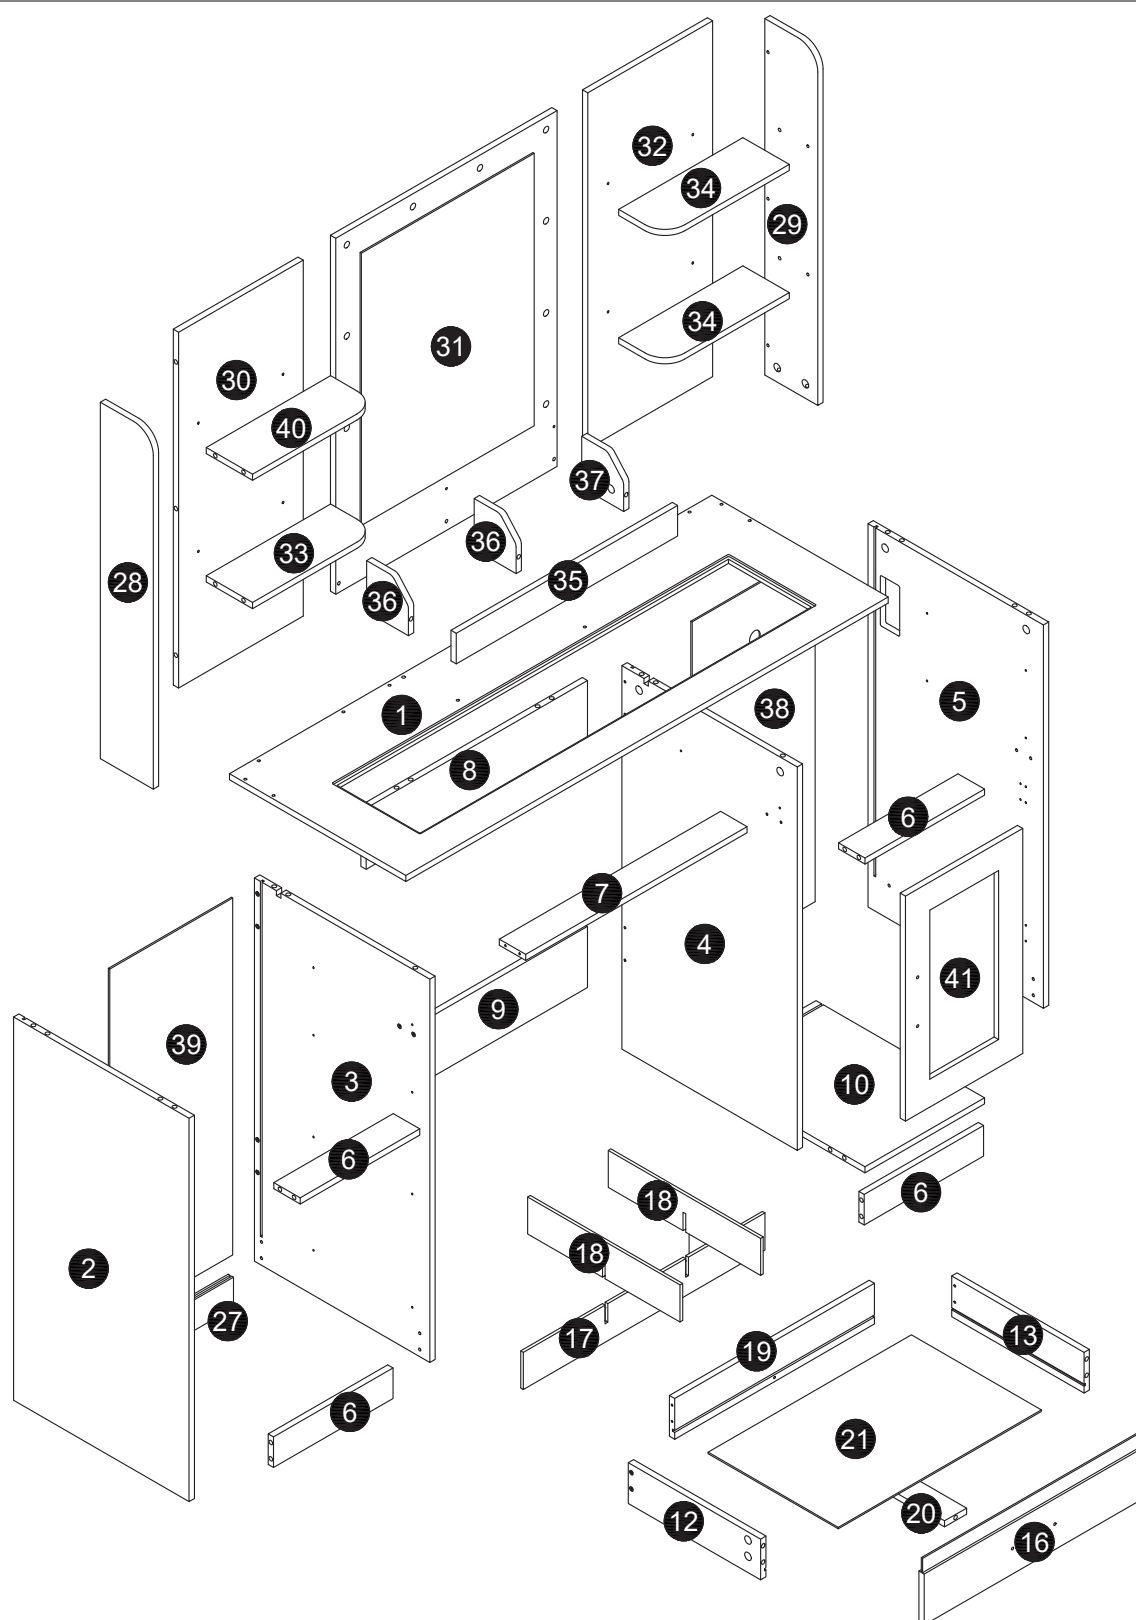


Step:1

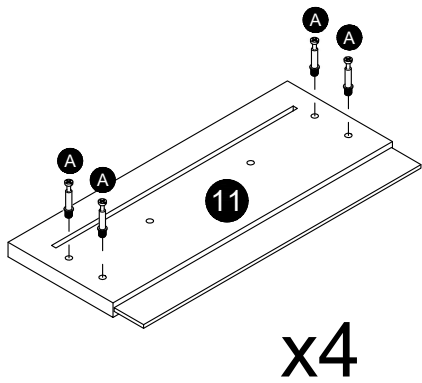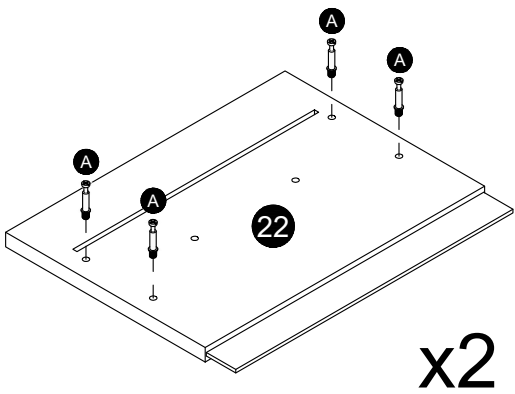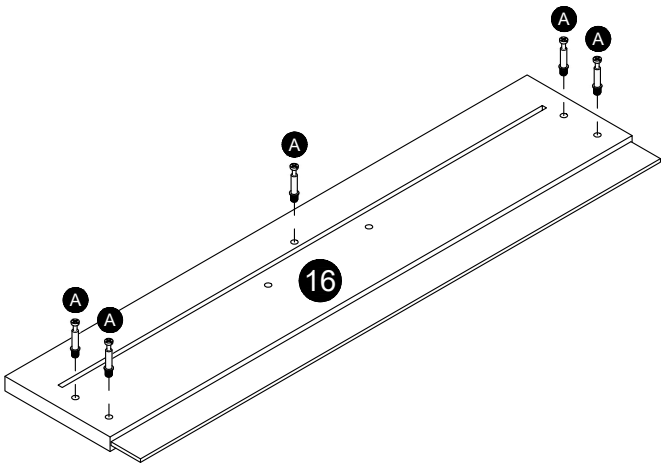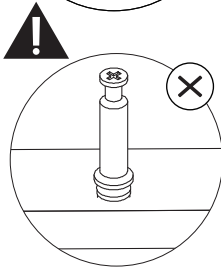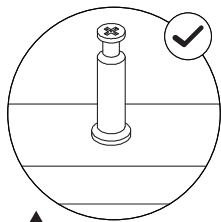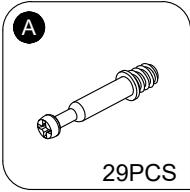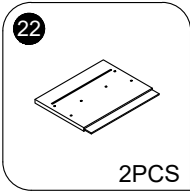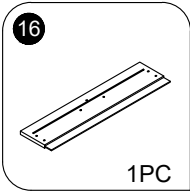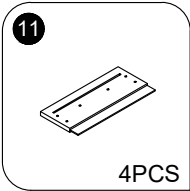


Step:2

12




5PCS

13




5PCS

20




1PC

23



2PCS

24







2PCS

B





M15×9mm




29PCS

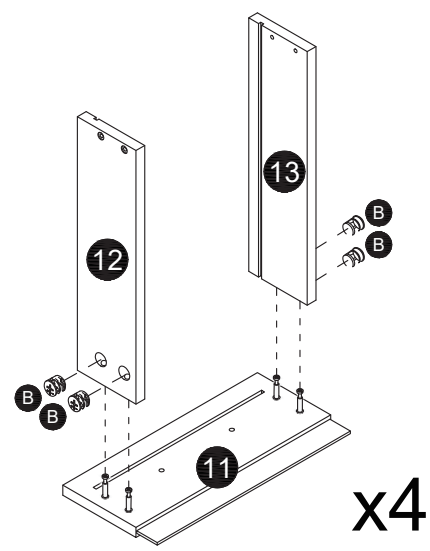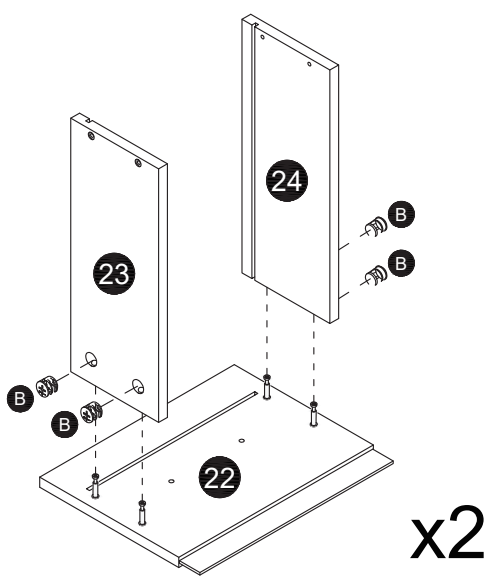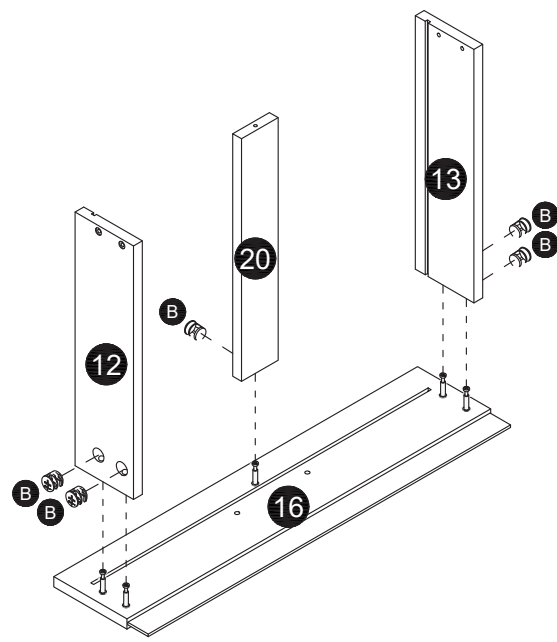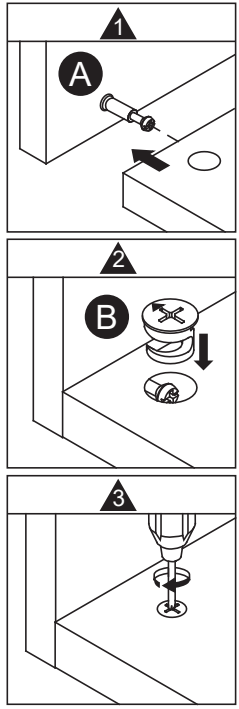

Step:3

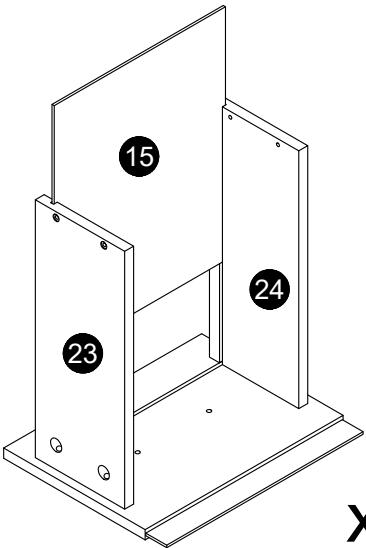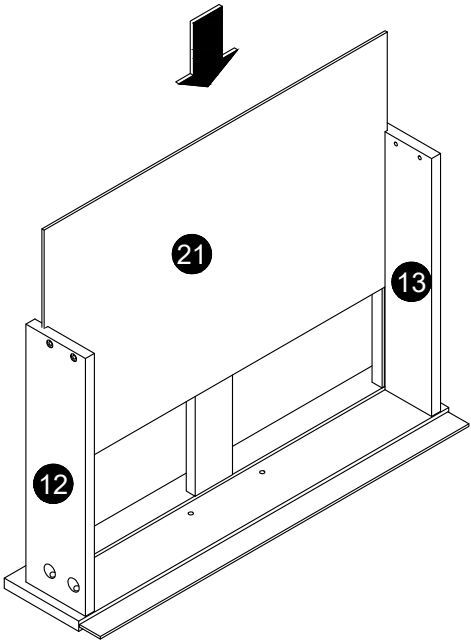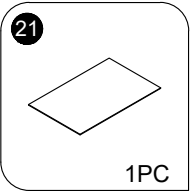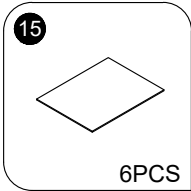


x2

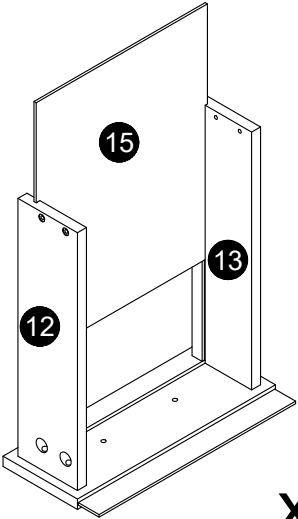

x4


Step:4

14




4PCS

19




1PC

25



2PCS

G



7PCS

K


M4×14mm






14PCS

F







M3.5×35mm














29PCS

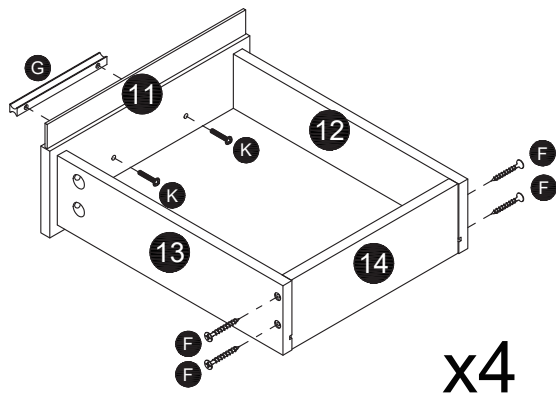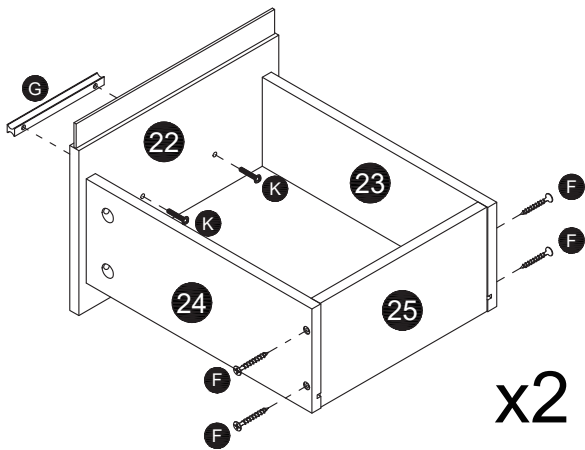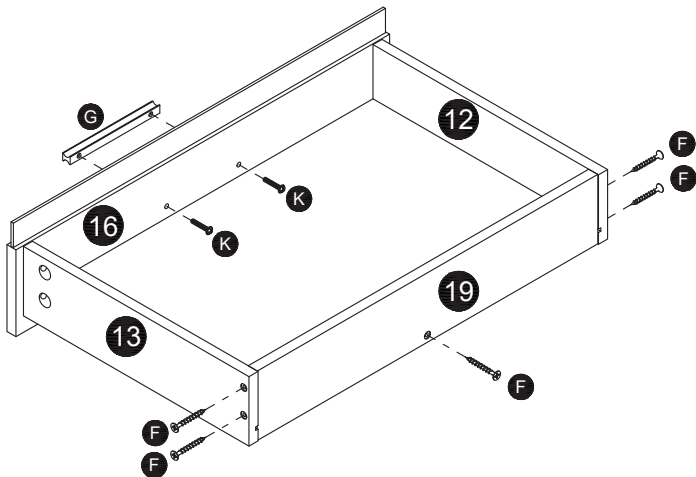






Step:5

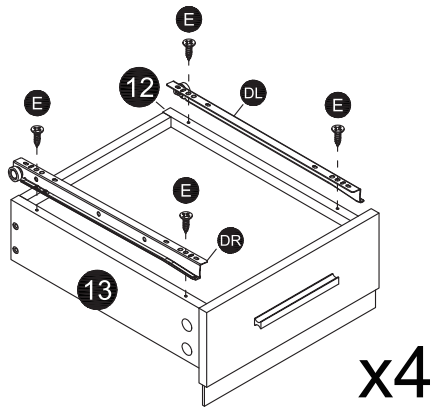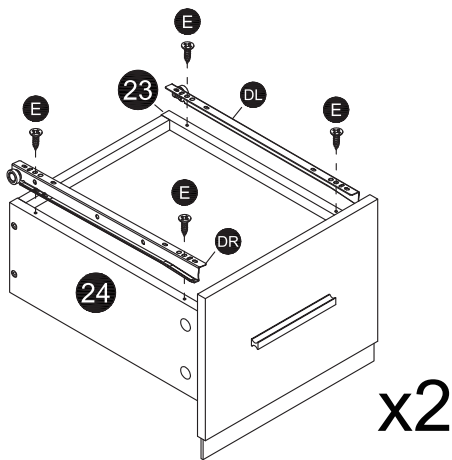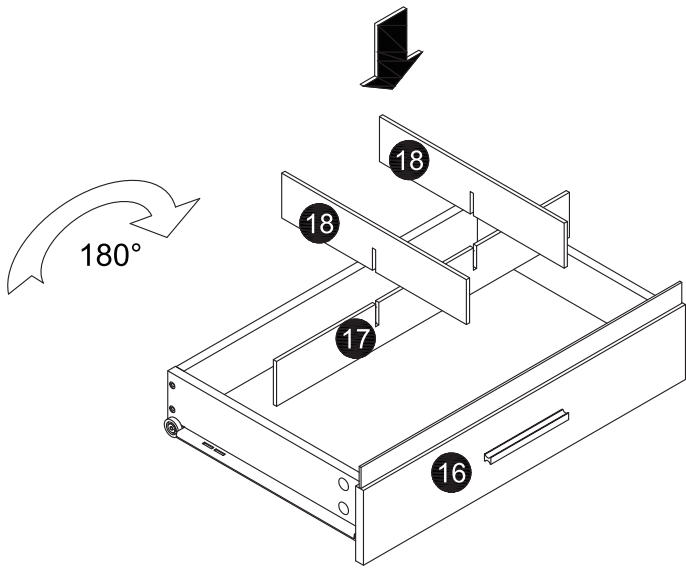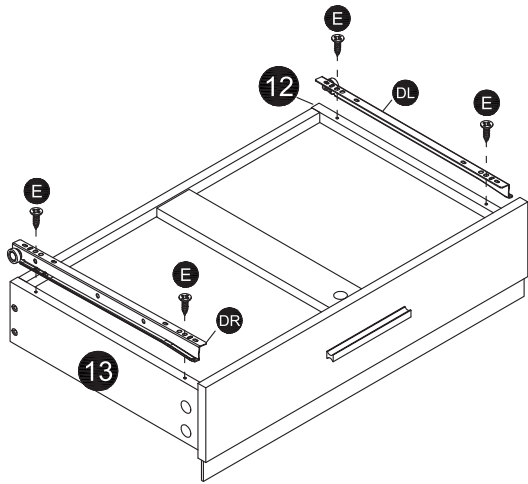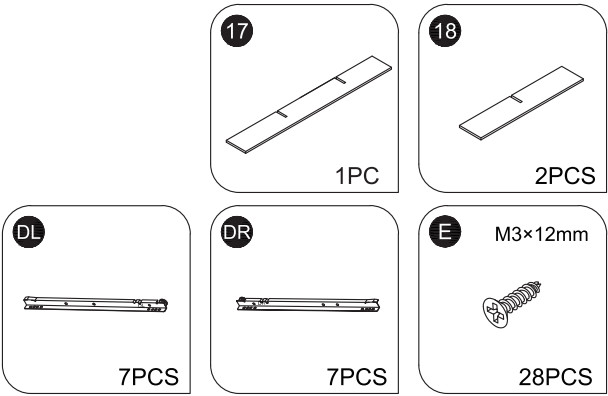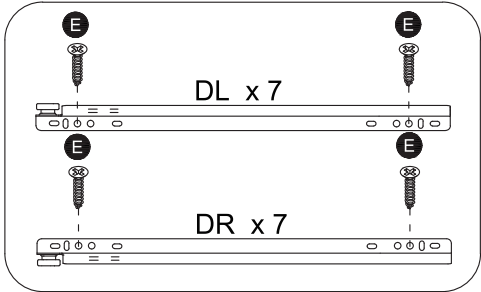

Step:6

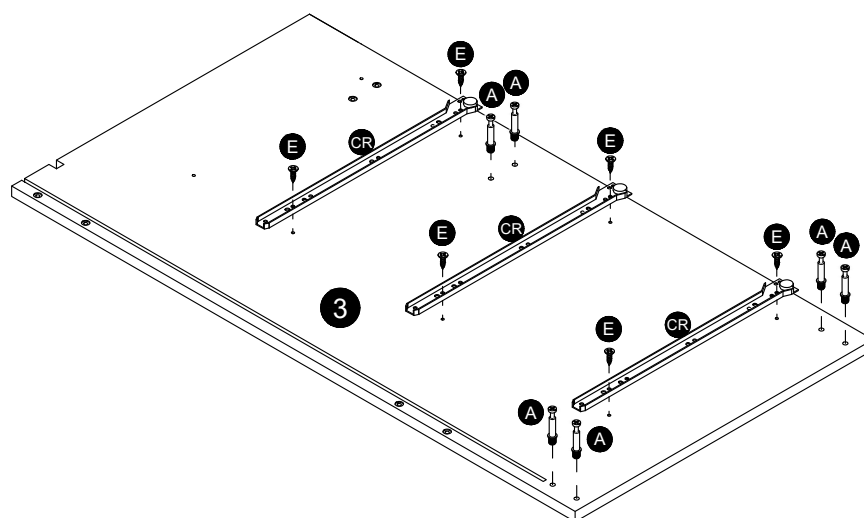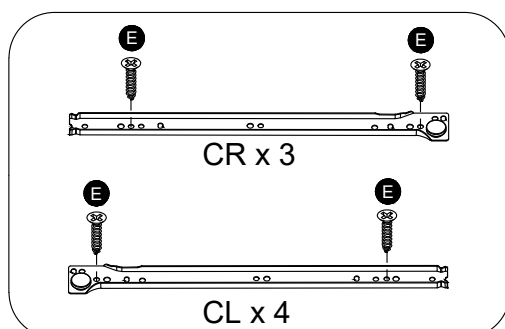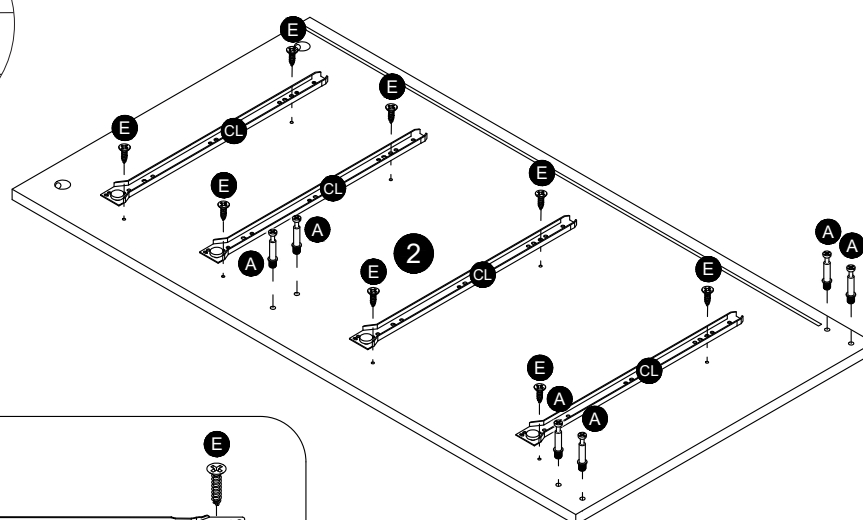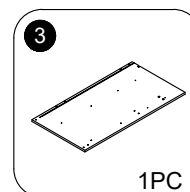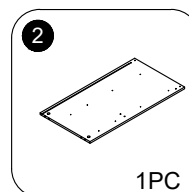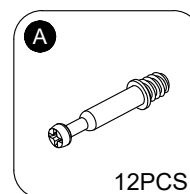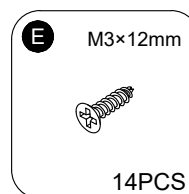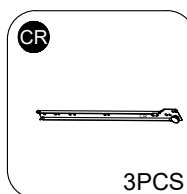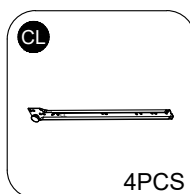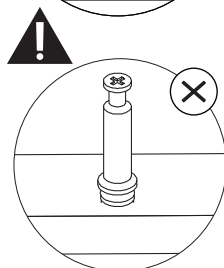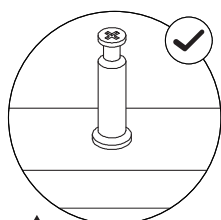

Step:7

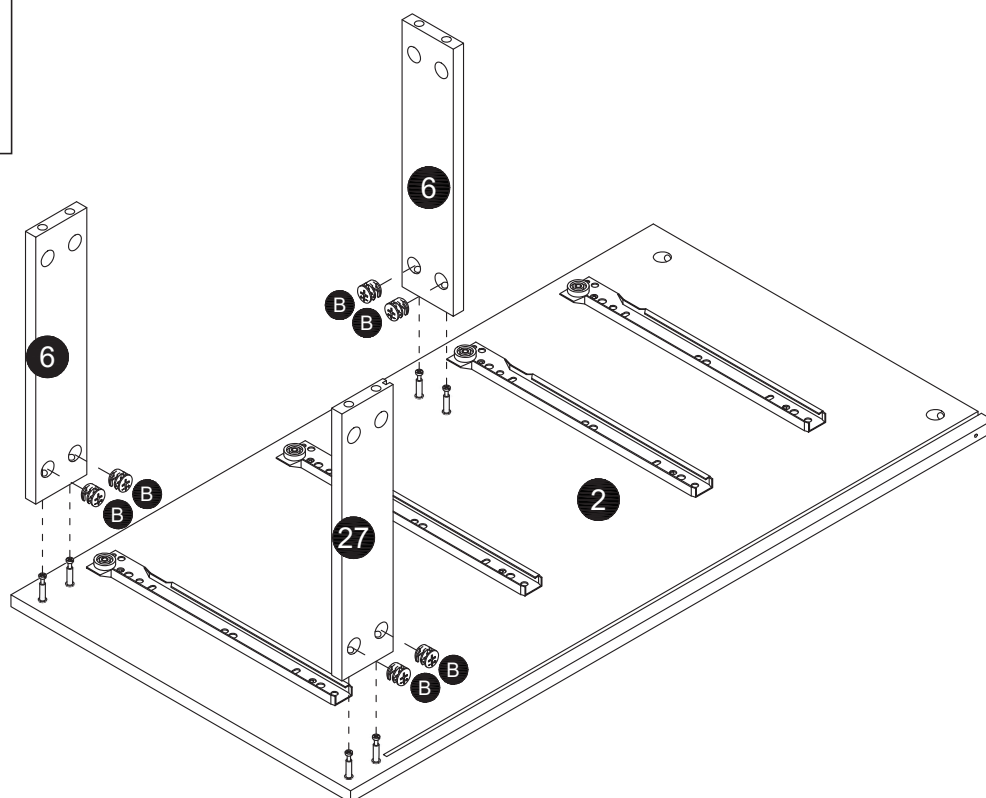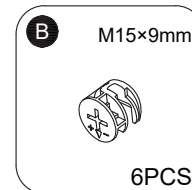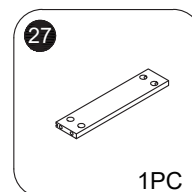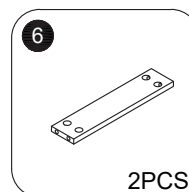
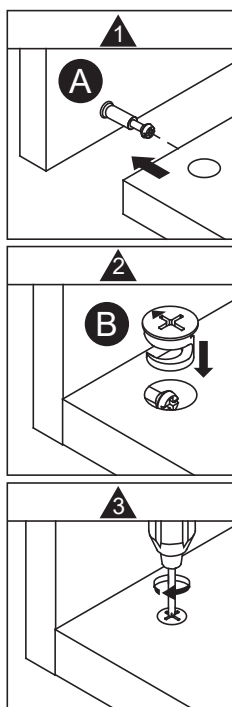


Step:8



B




6PCS

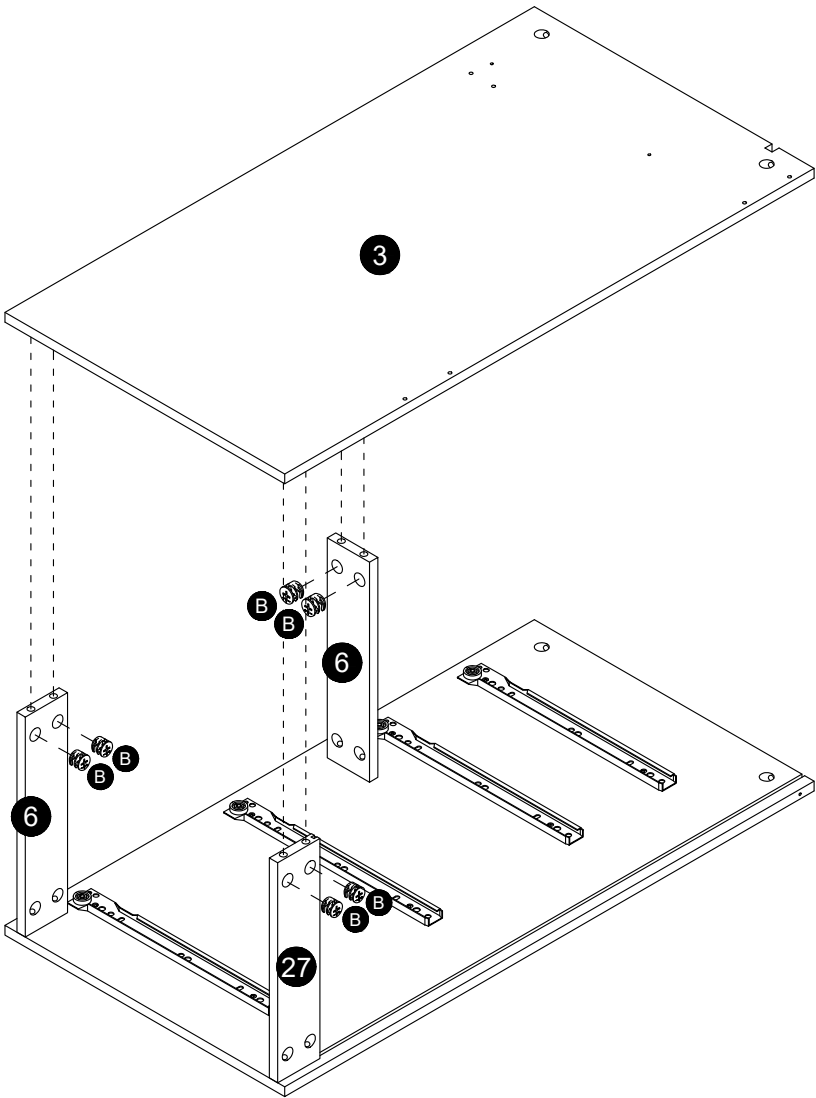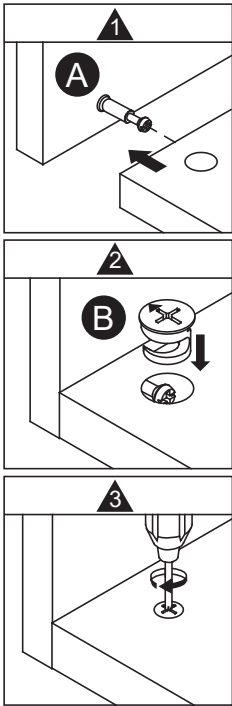












Step:9

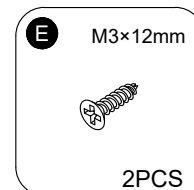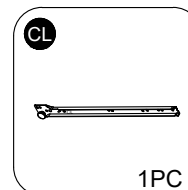




It is recommended that assembly is undertaken by at least 2 adults.
One man holds Board No.3 by hand.

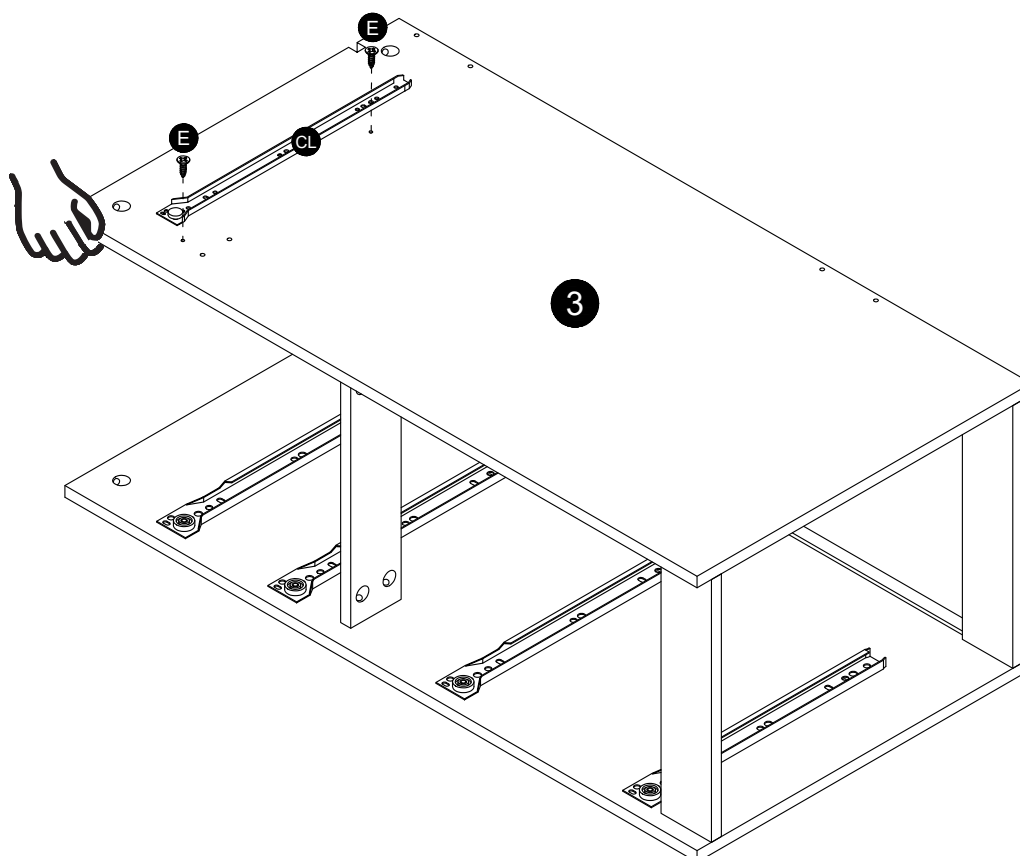




Step:10

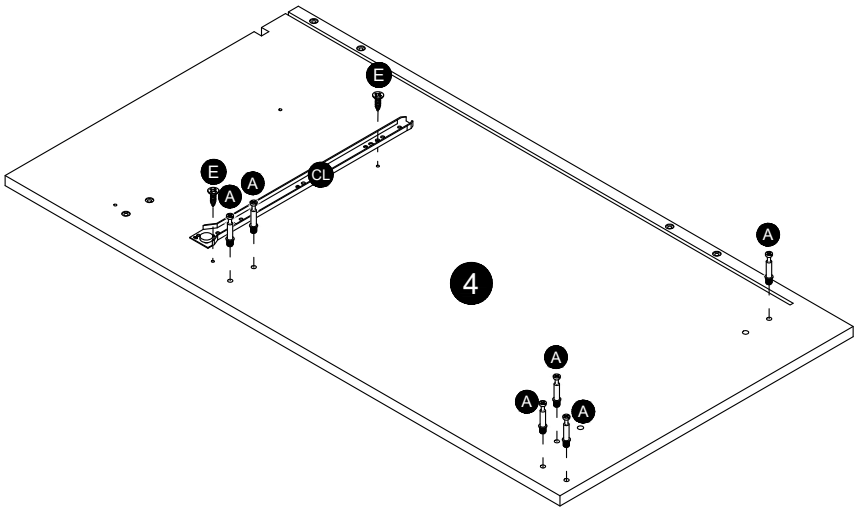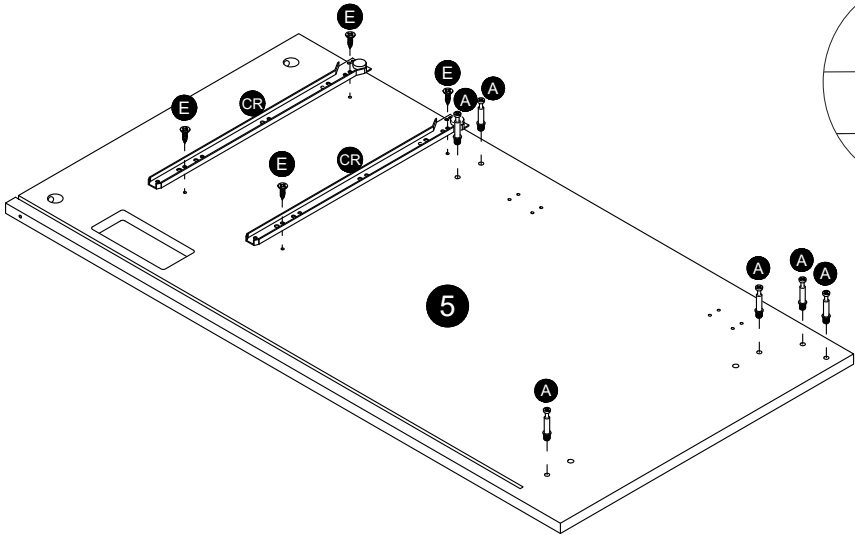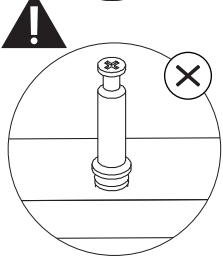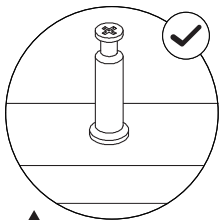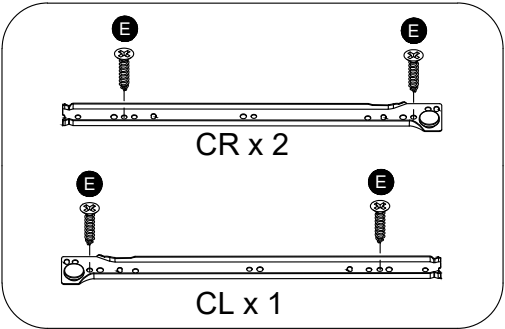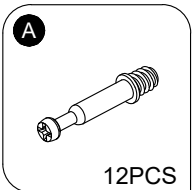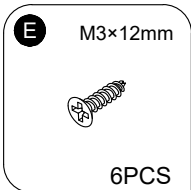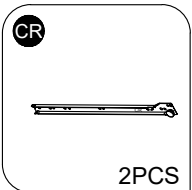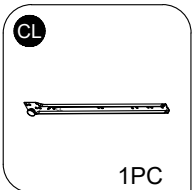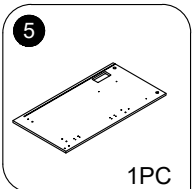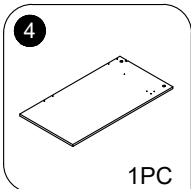




Step:11

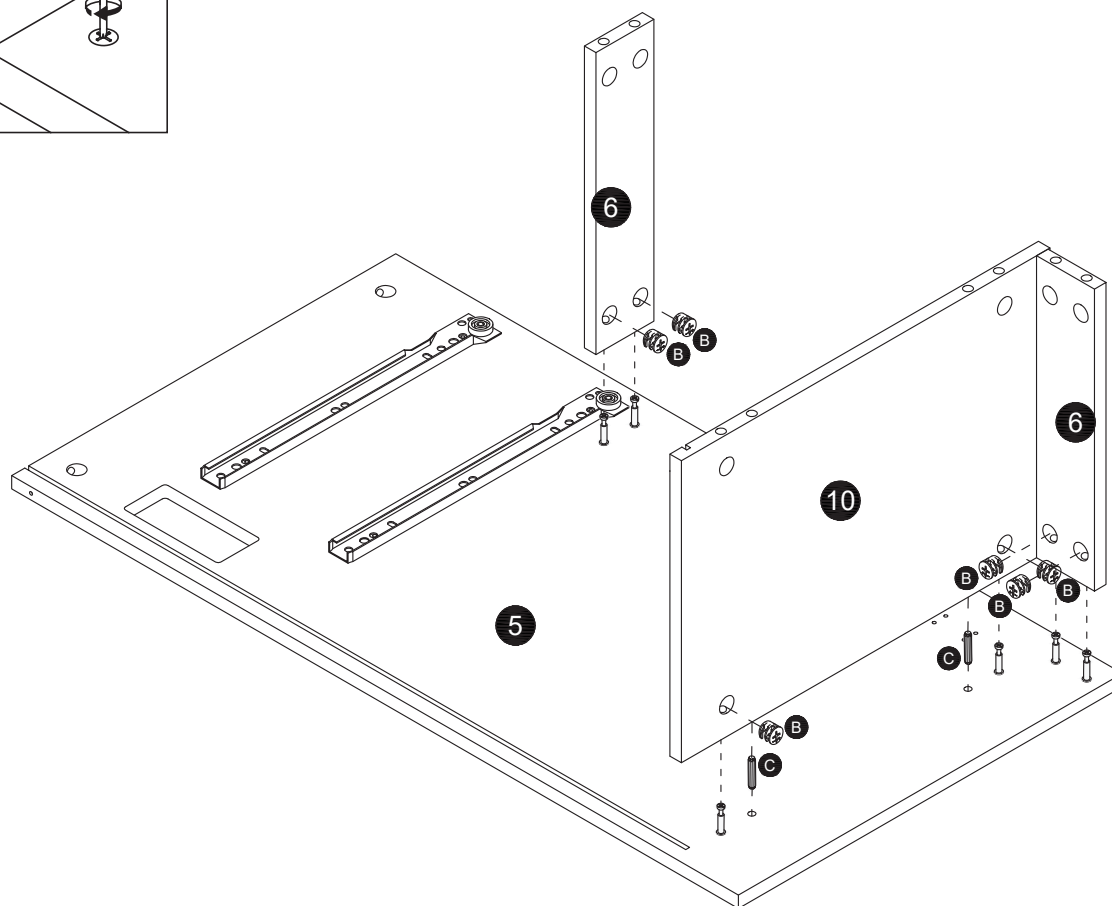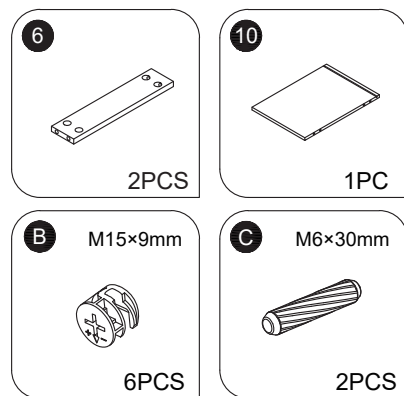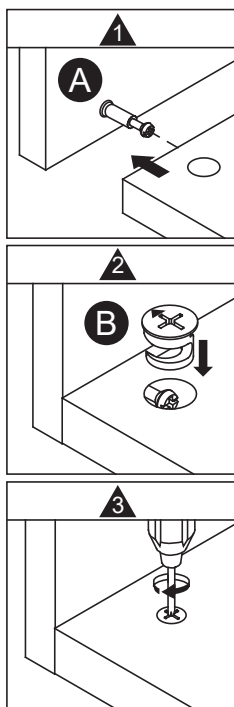


Step:12

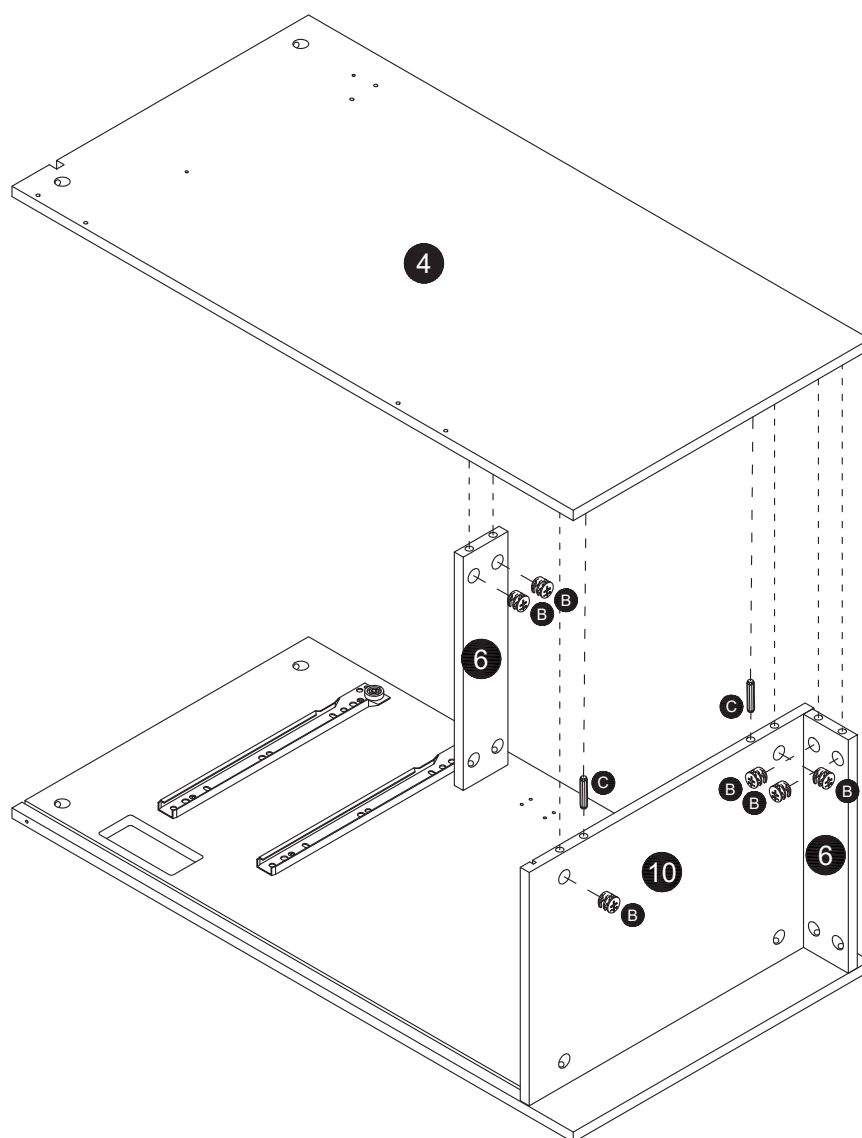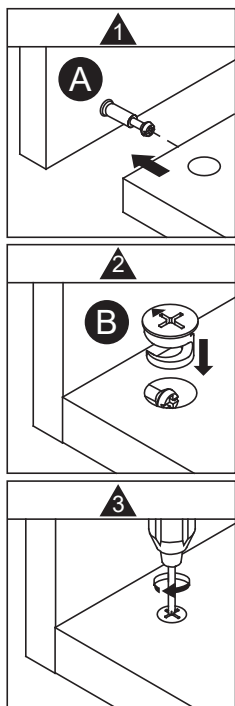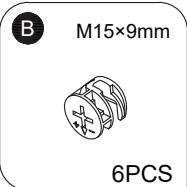





Step:13

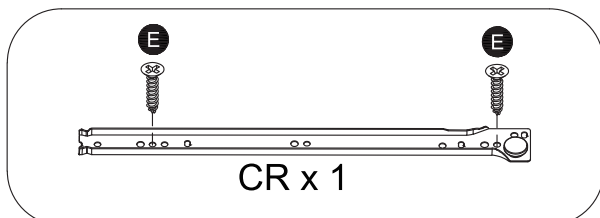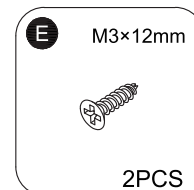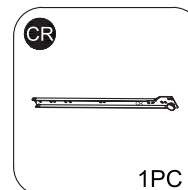


It is recommended that assembly is undertaken by at least 2 adults.
One man holds Board No.4 by hand.

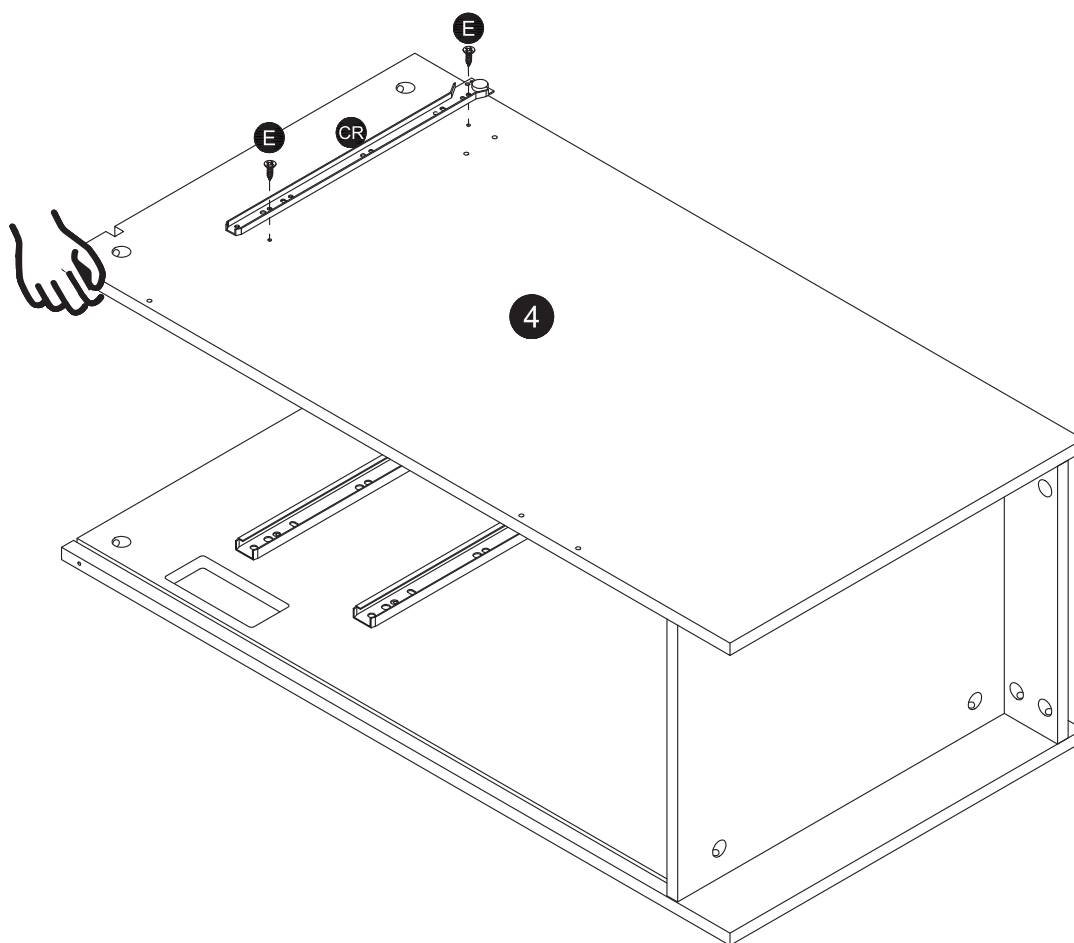





Step:14

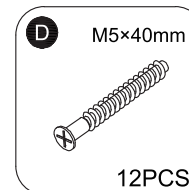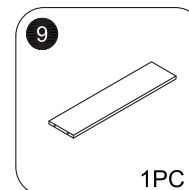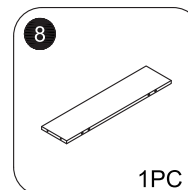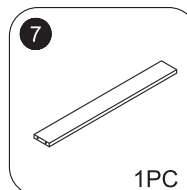





It is recommended that assembly is undertaken by at least 2 adults. Be careful to support the wooden board.

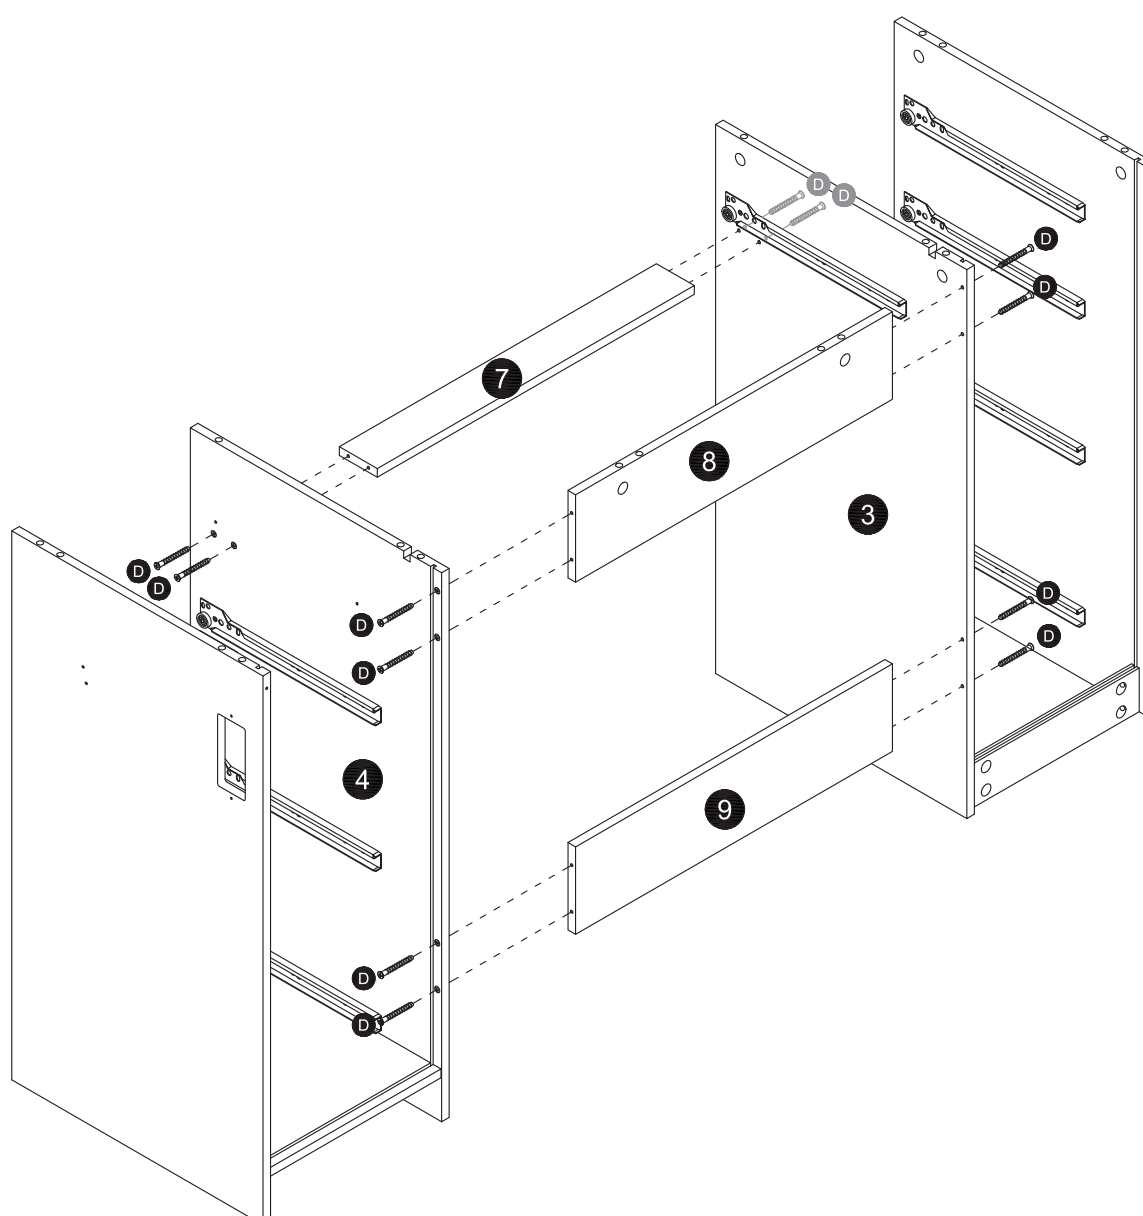




Step:15

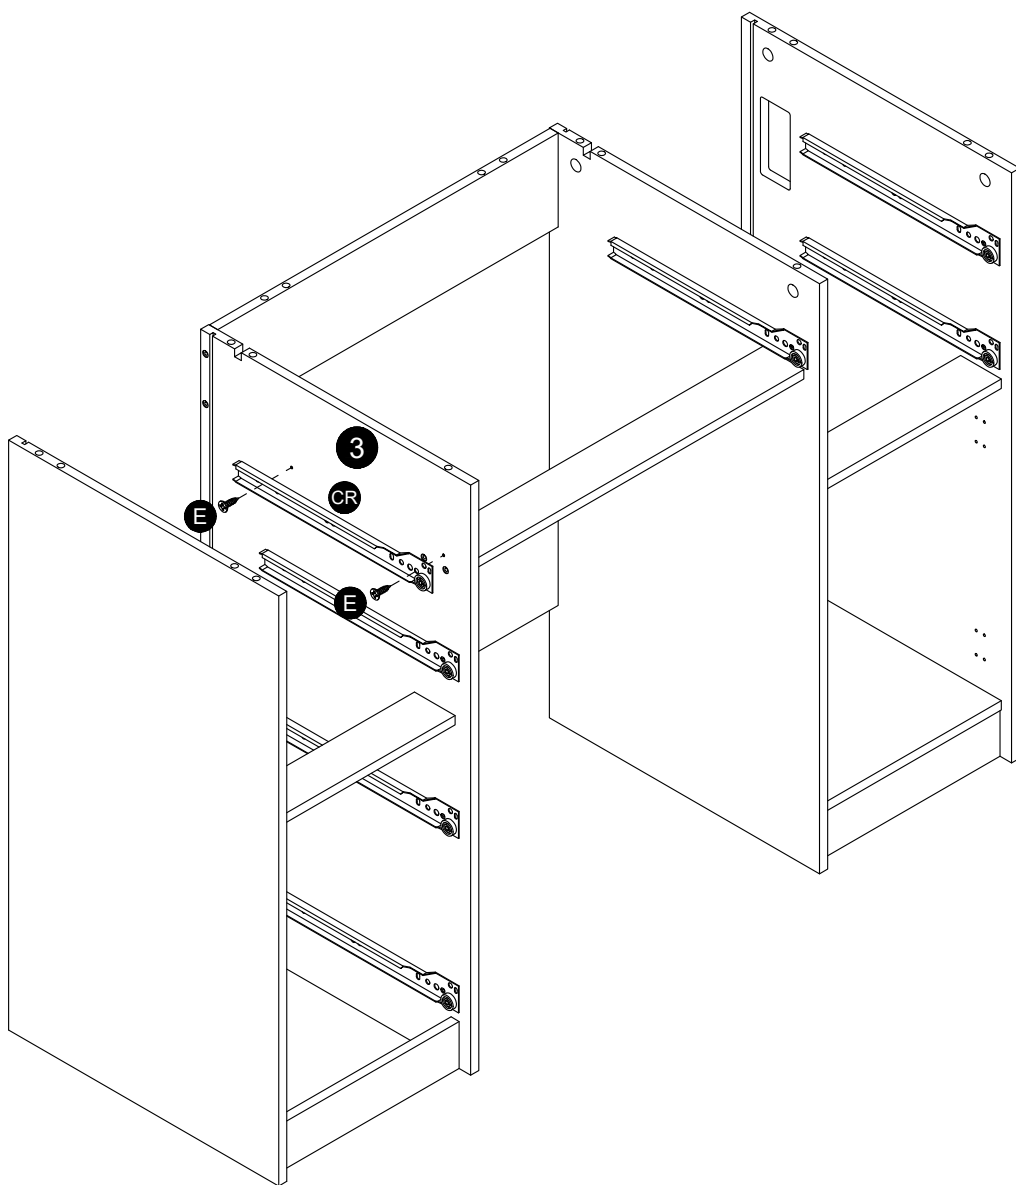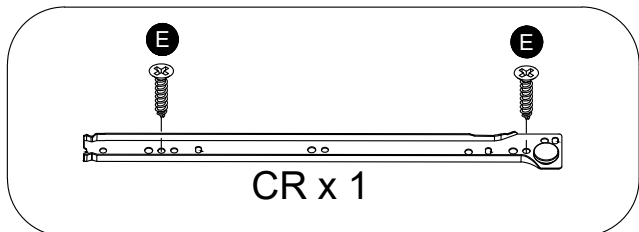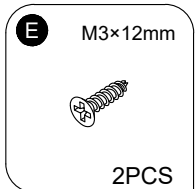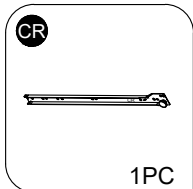















Step:16

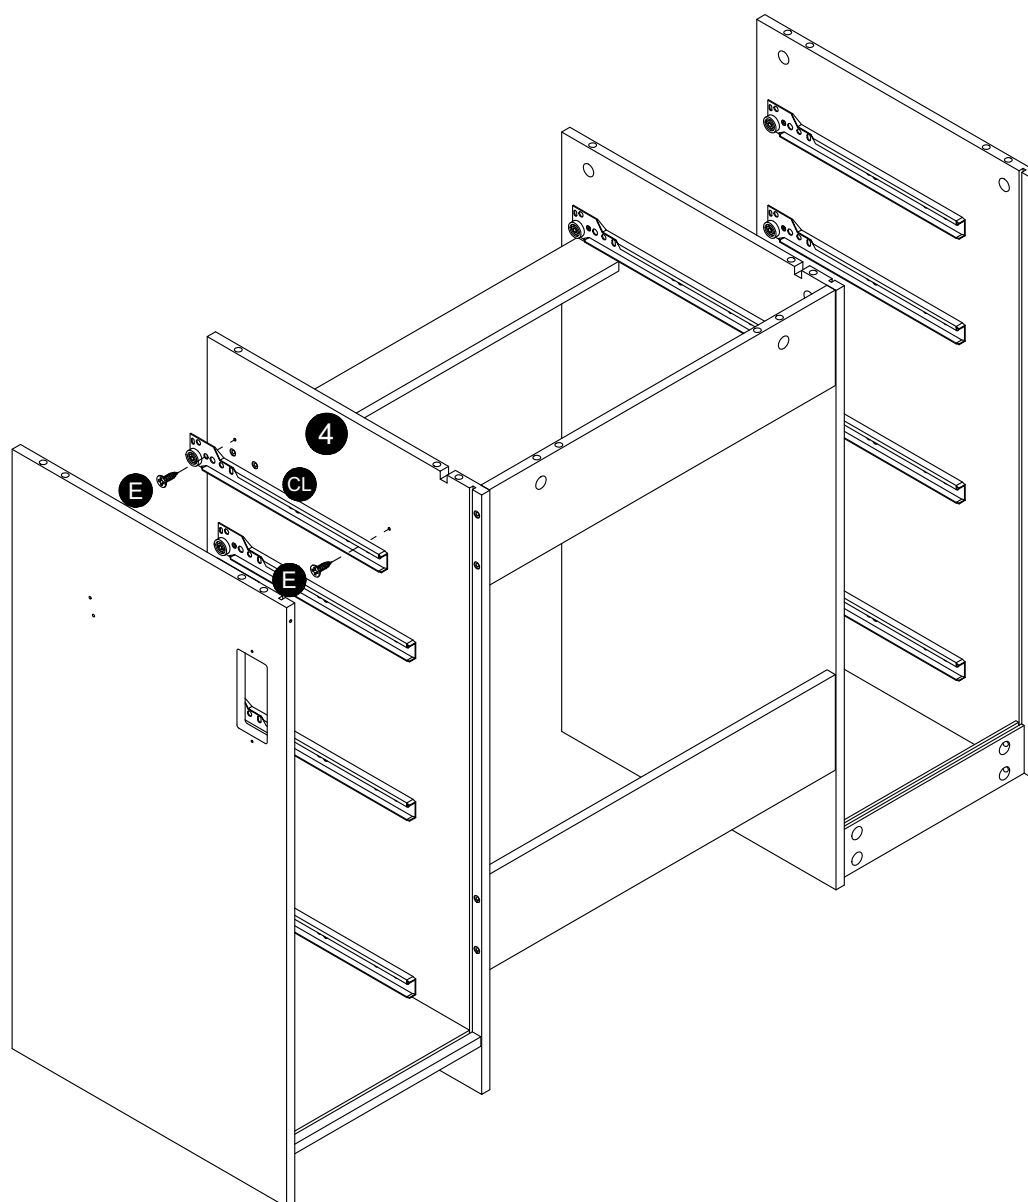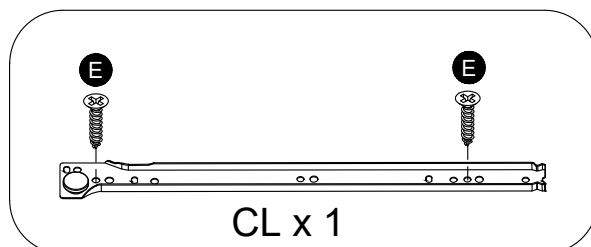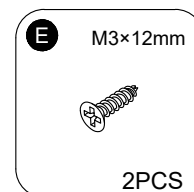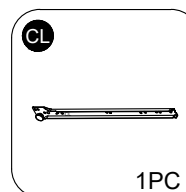





Step:17

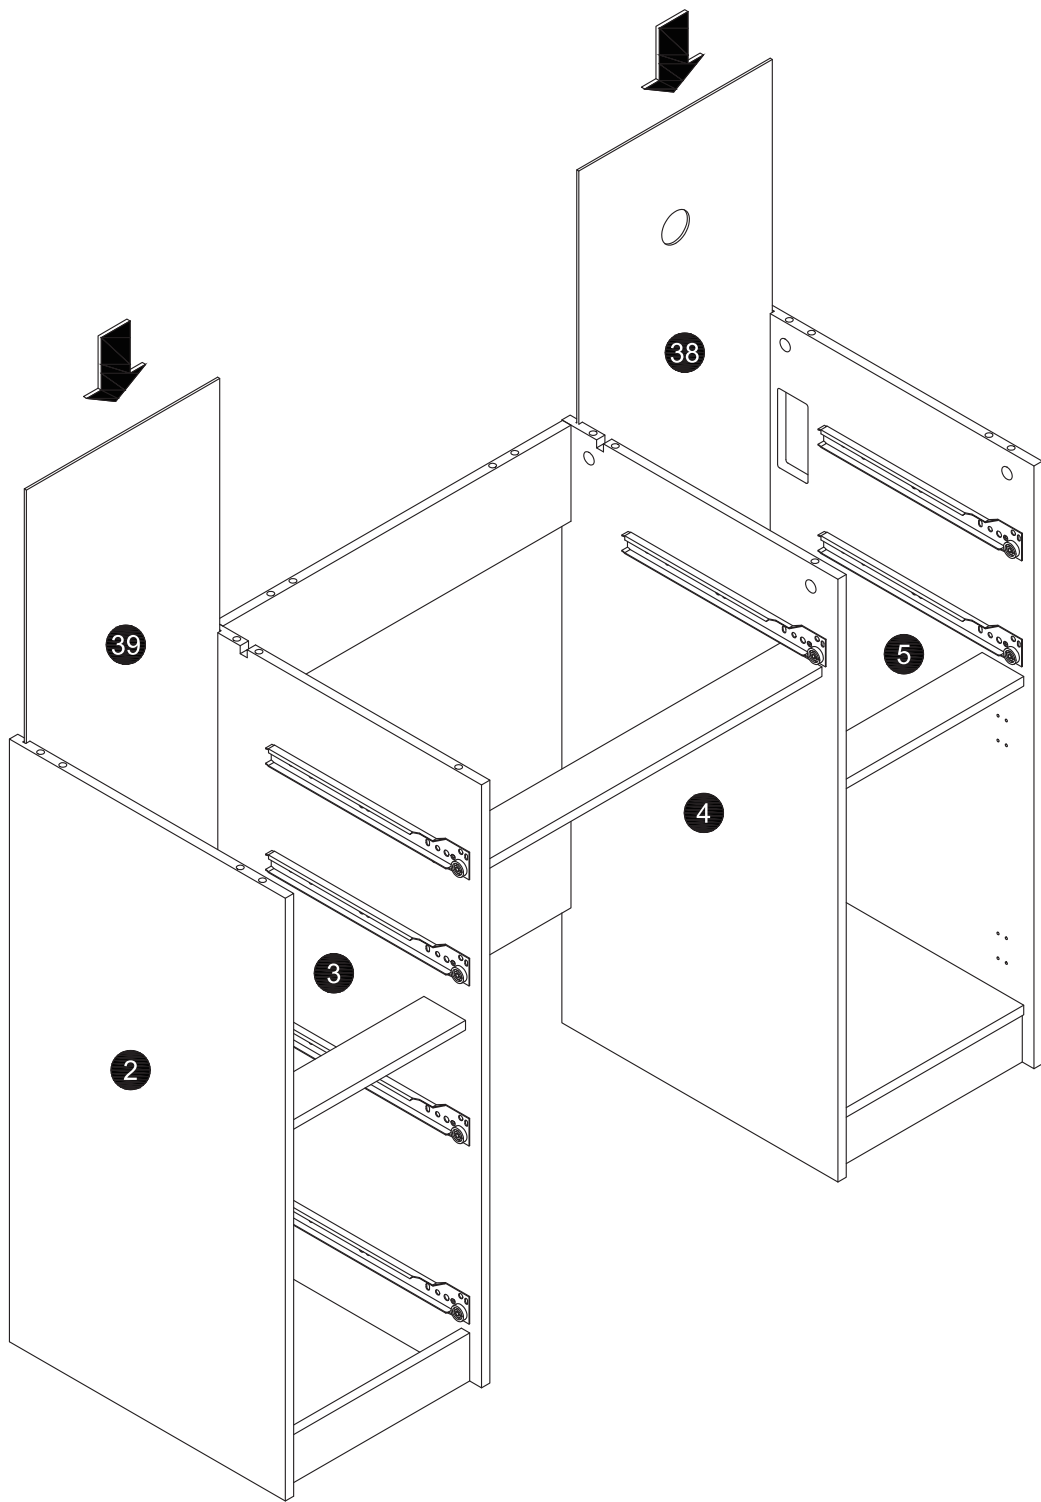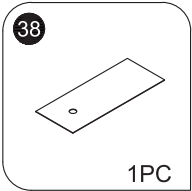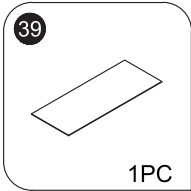





Step:18

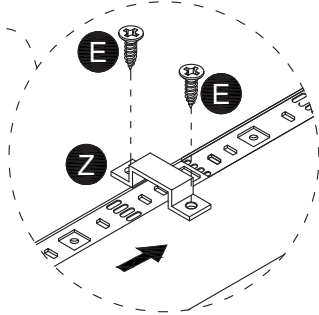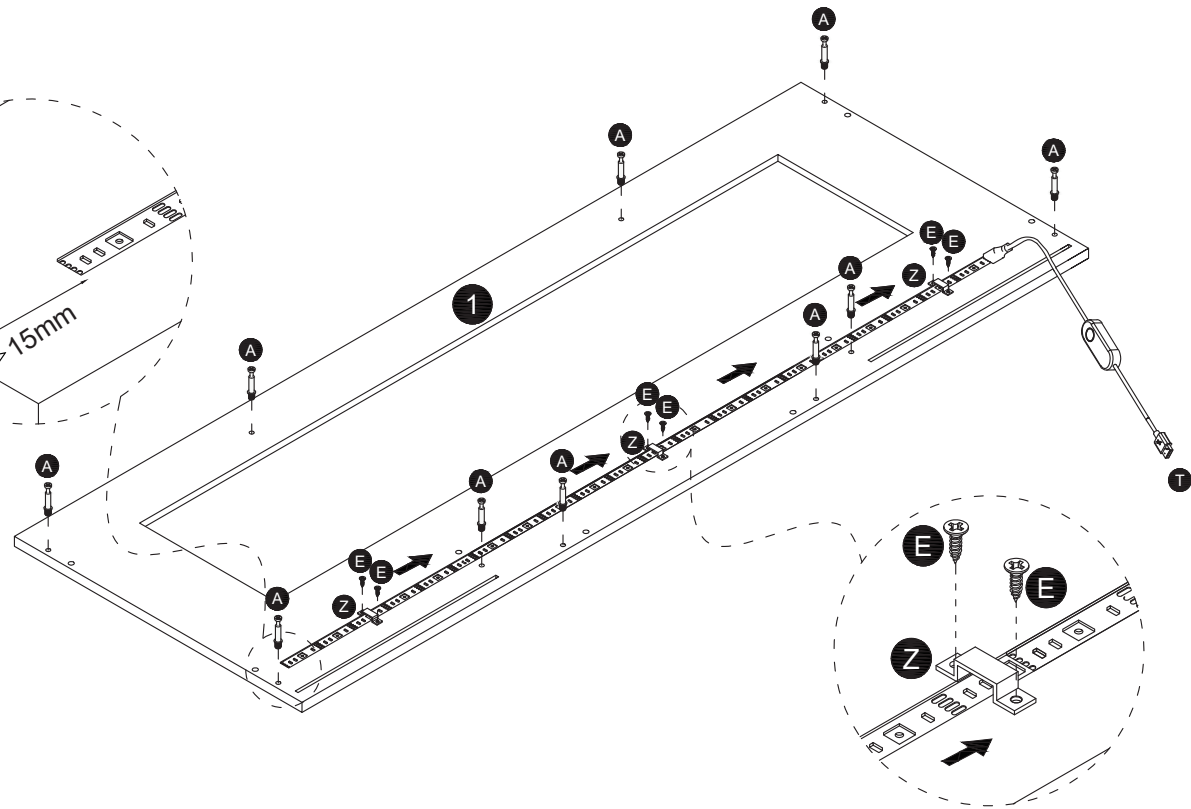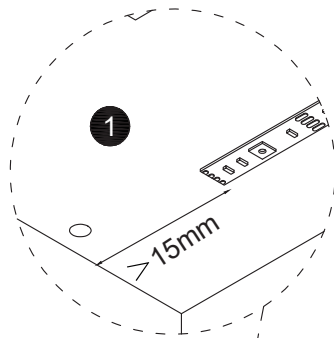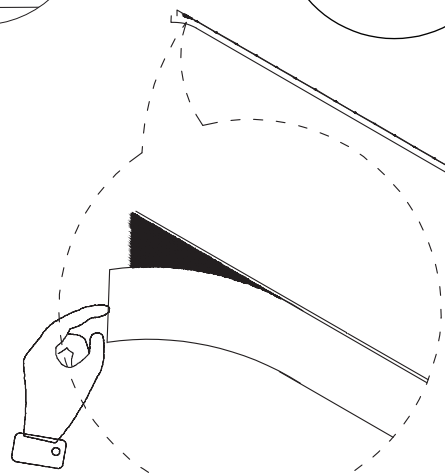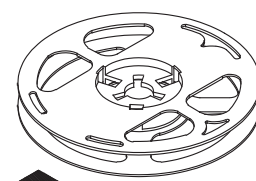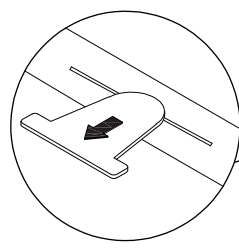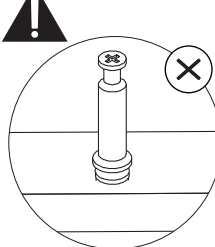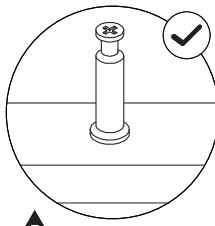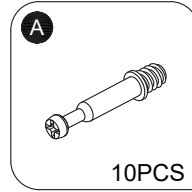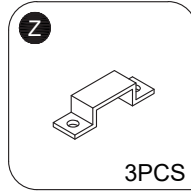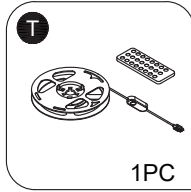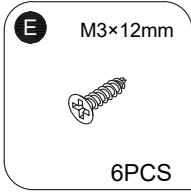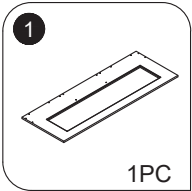









Step:19

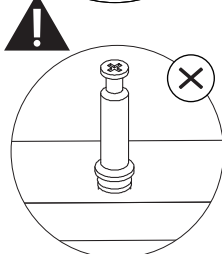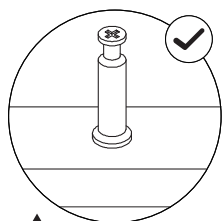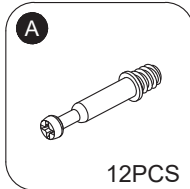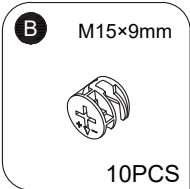









It is recommended that assembly is undertaken by at least 2 adults. Be careful to support the wooden board.

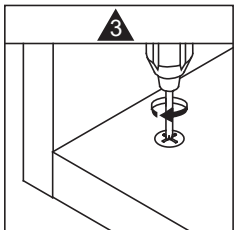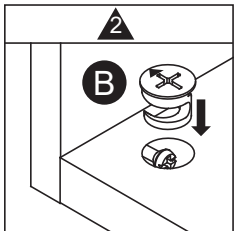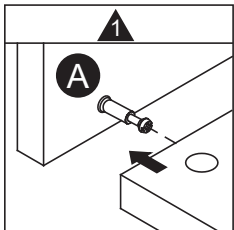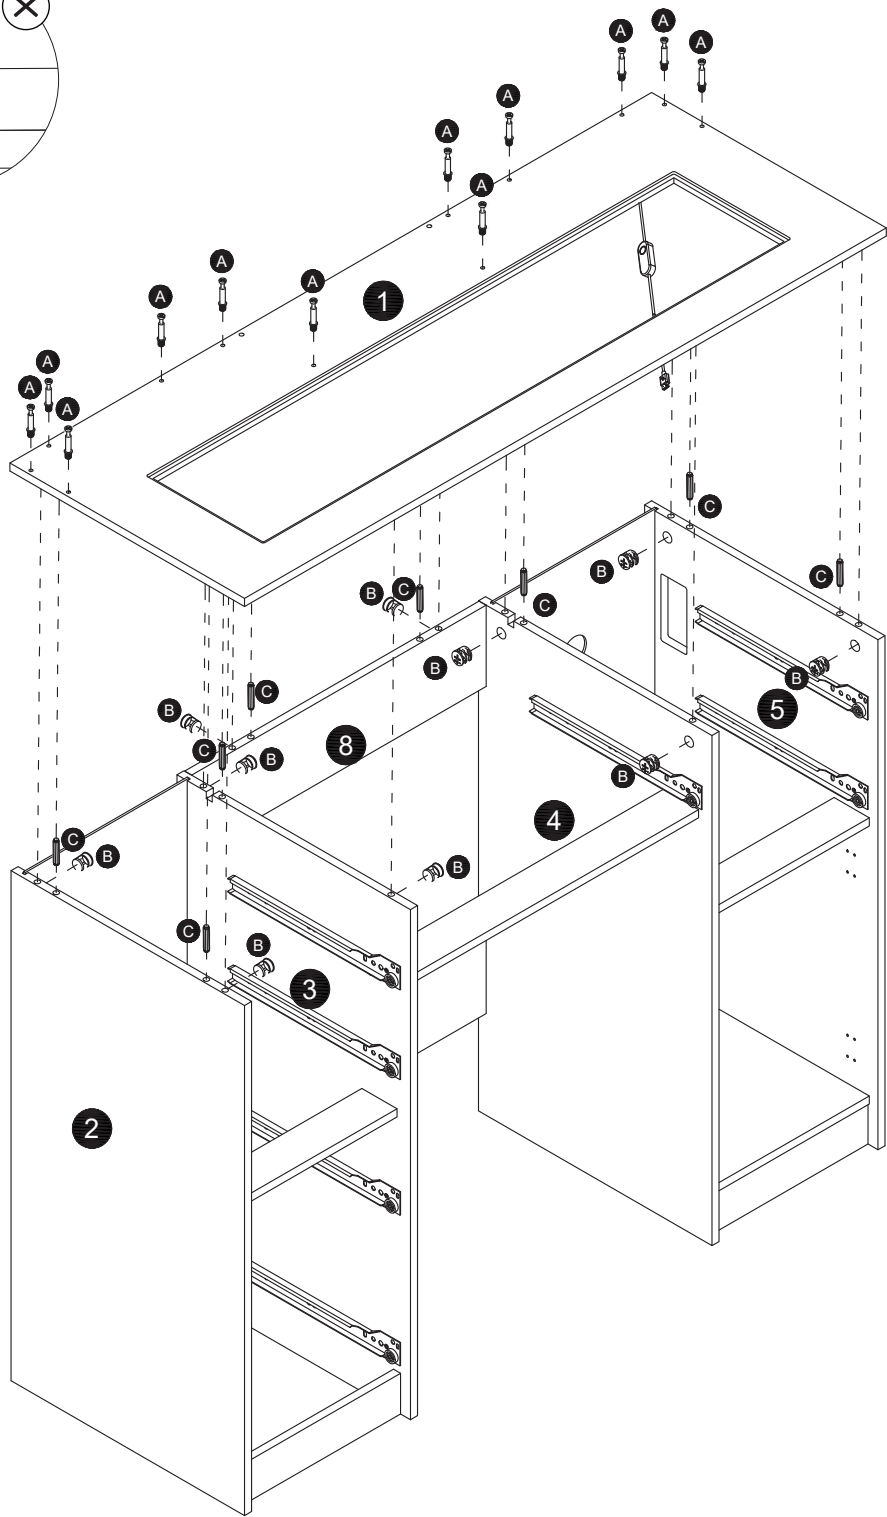








Step:20

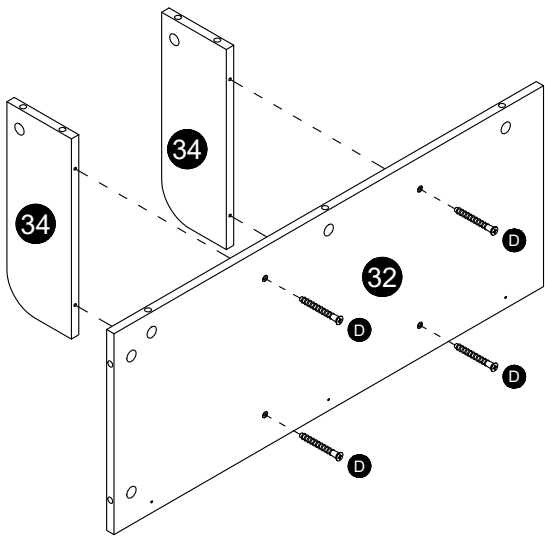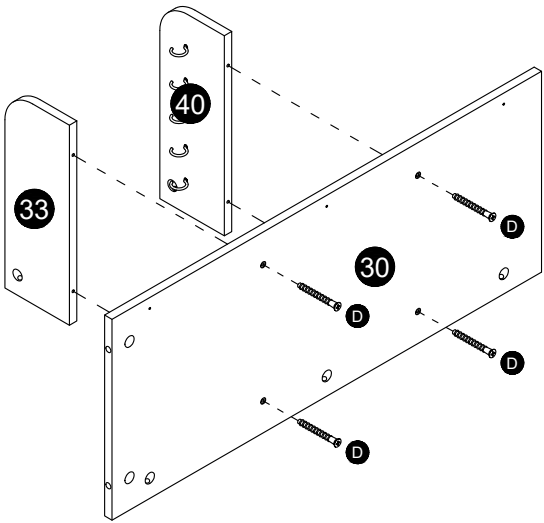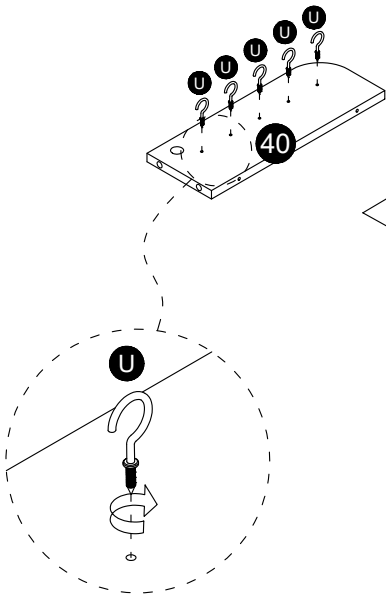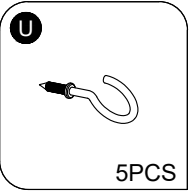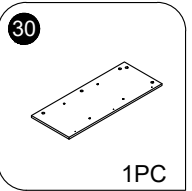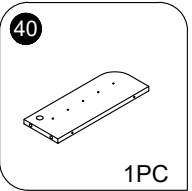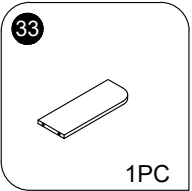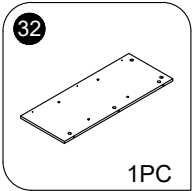









Step:21

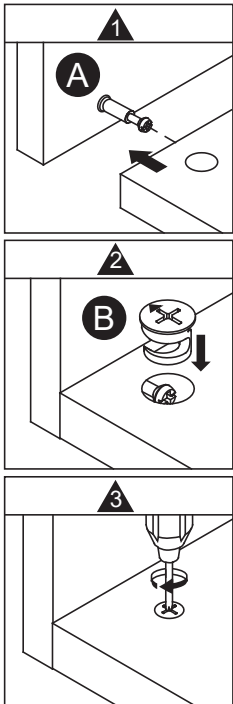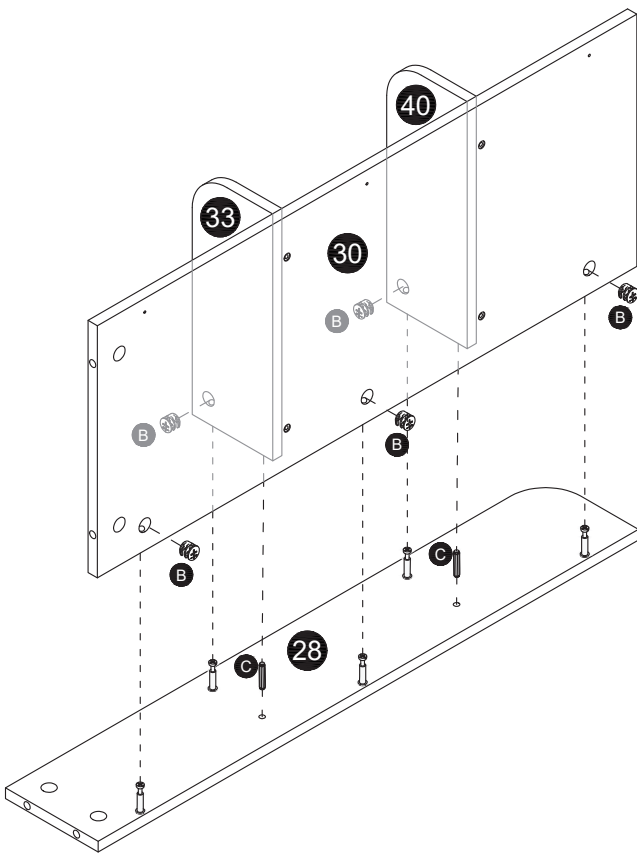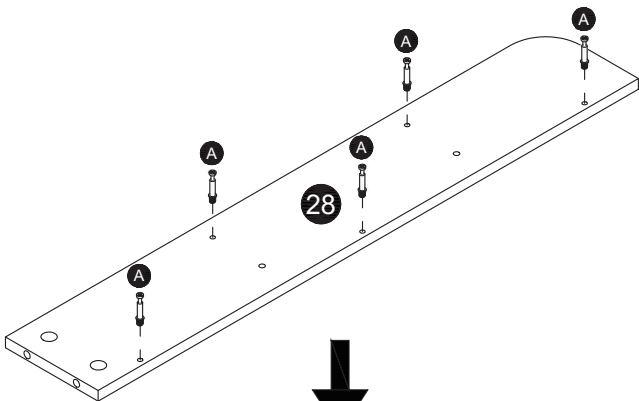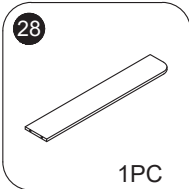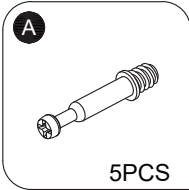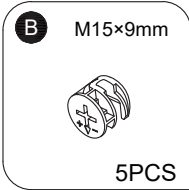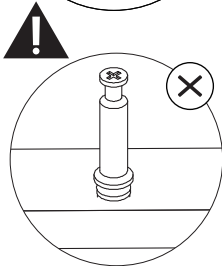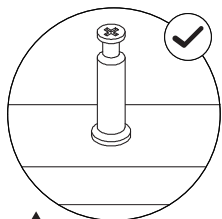




Step:22

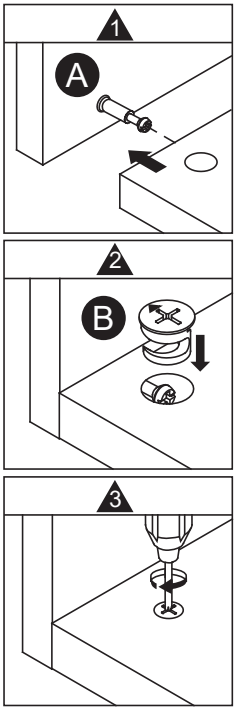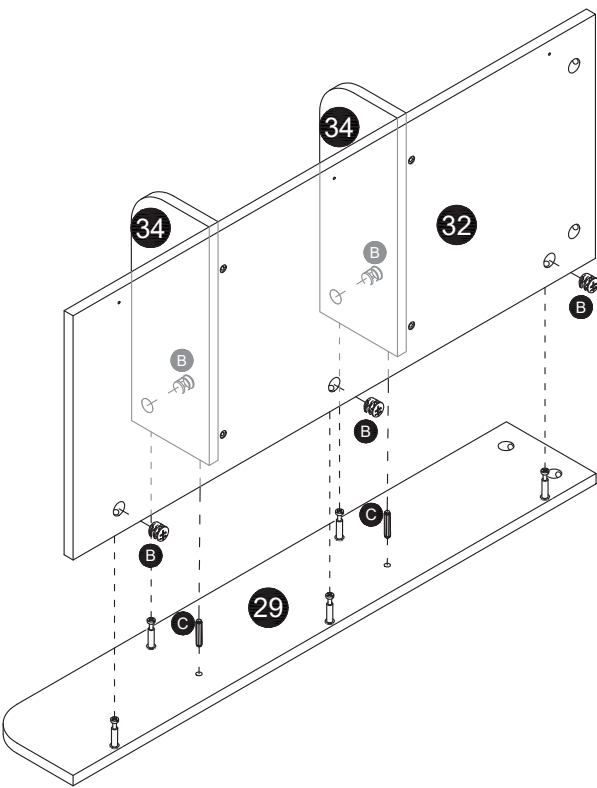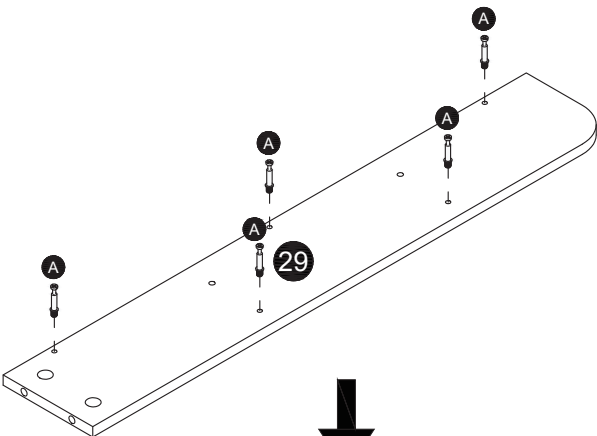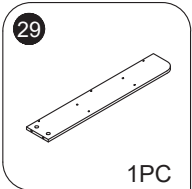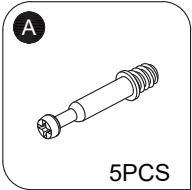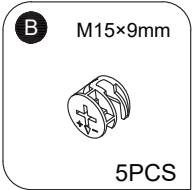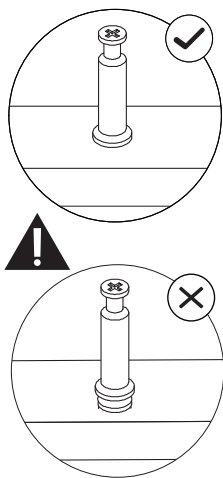


Step:23

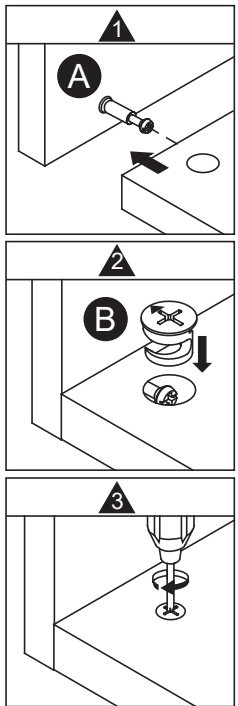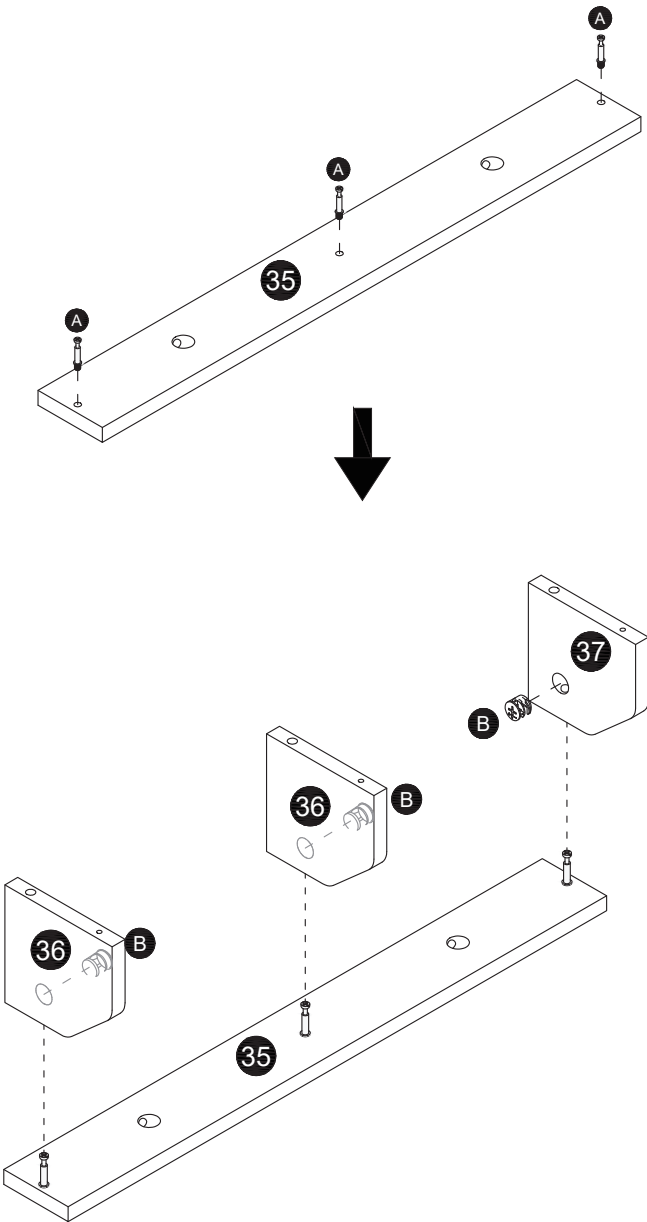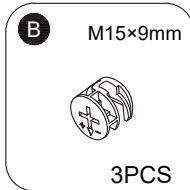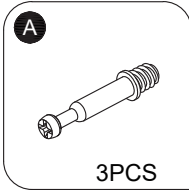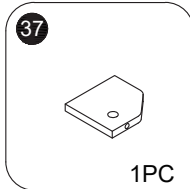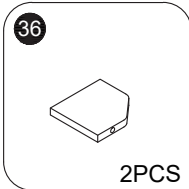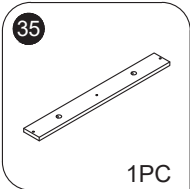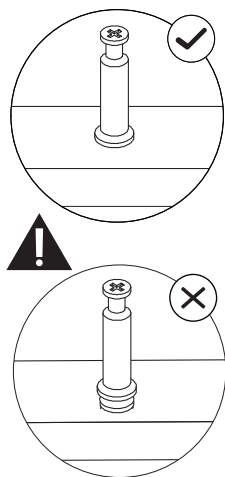

Step:24

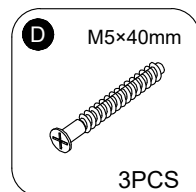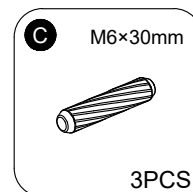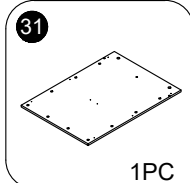

It is recommended that assembly is undertaken by at least 2 adults. Be careful to support the wooden board.

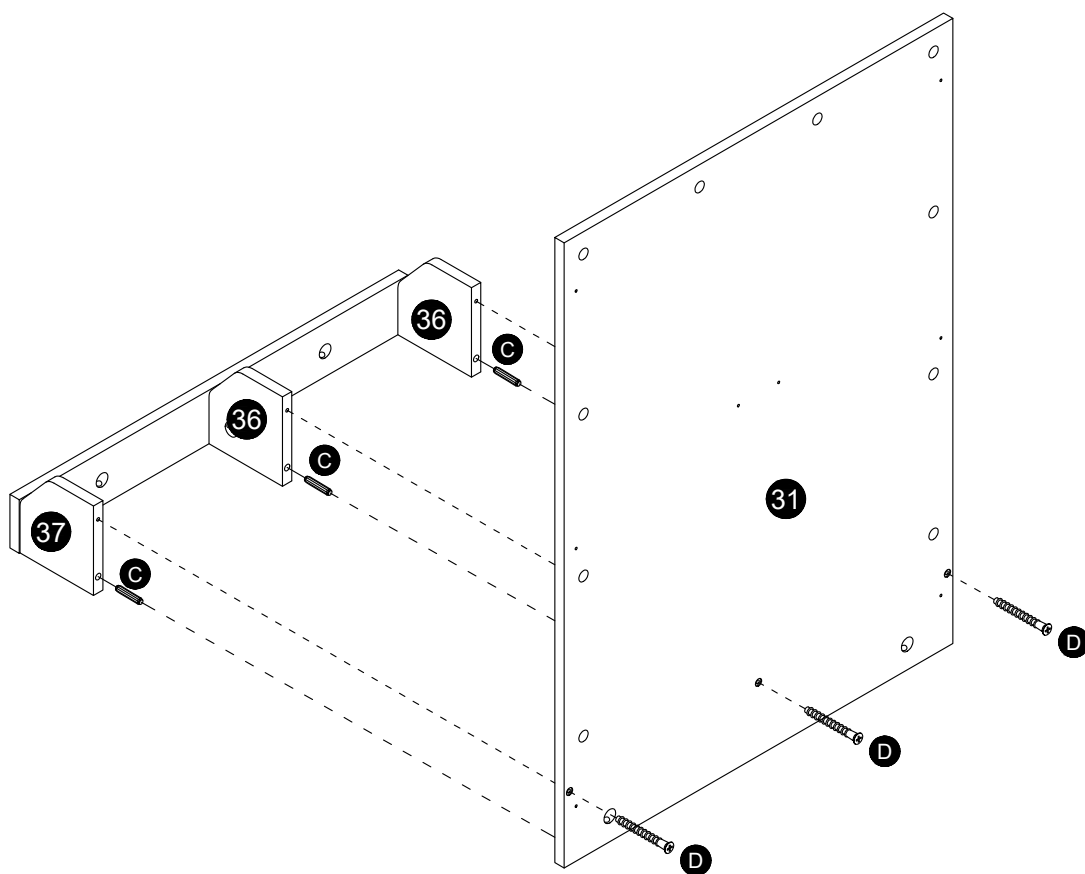




Step:25

B


M15×9mm





4PCS

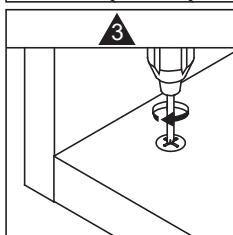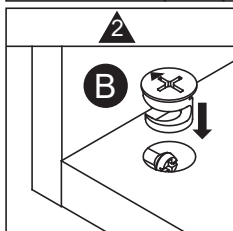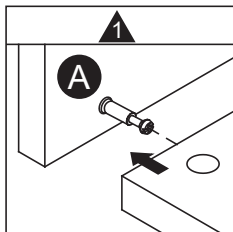


It is recommended that assembly is undertaken by at least 2 adults. Be careful to support the wooden board.

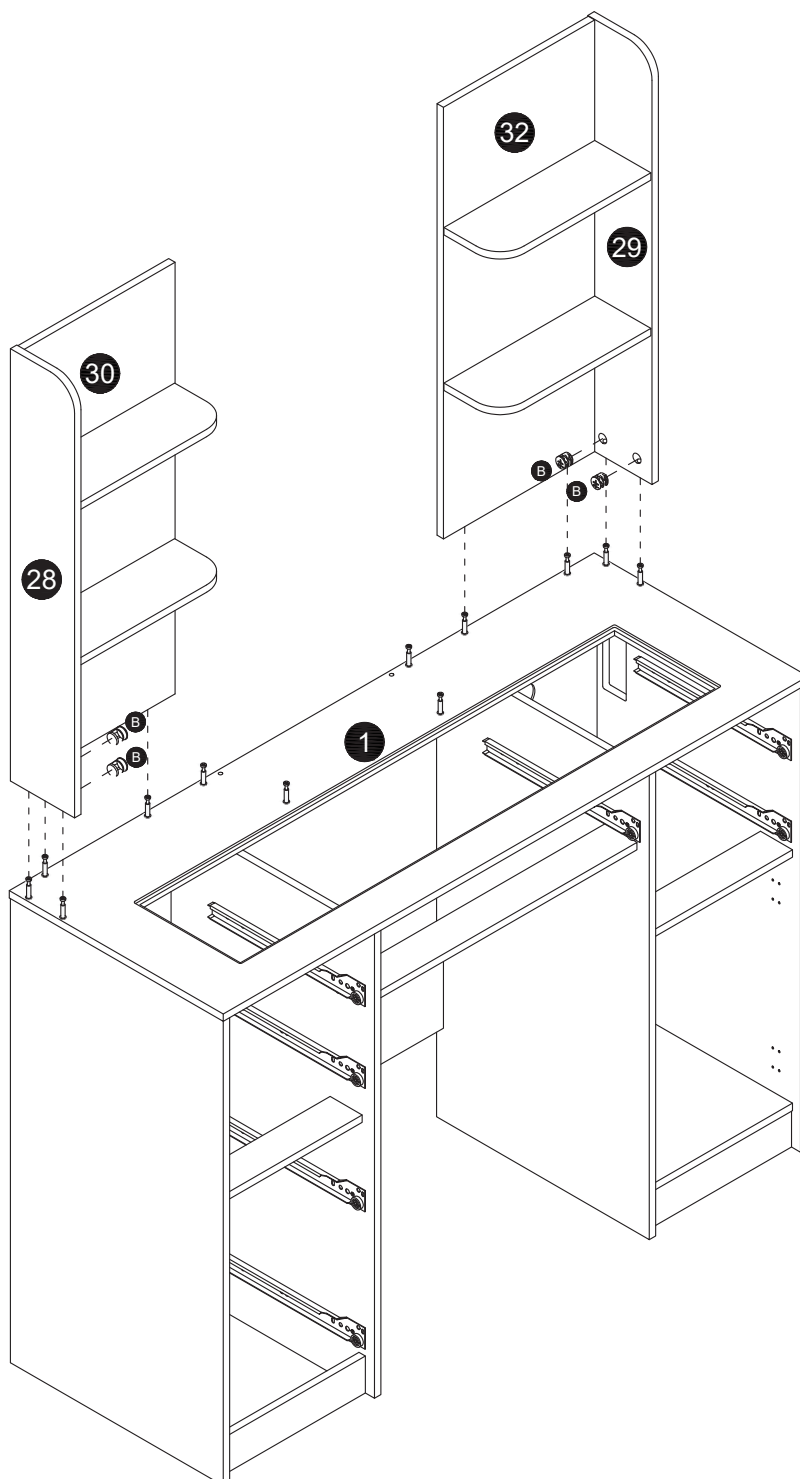

Step:26

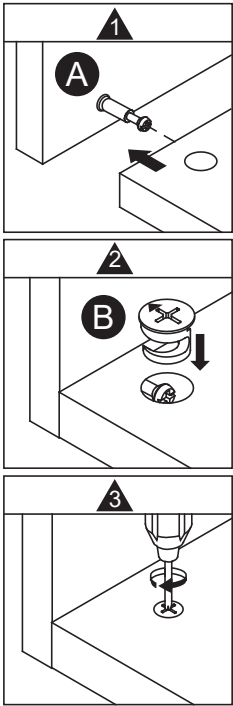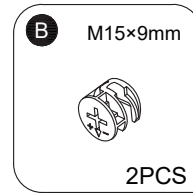

It is recommended that assembly is undertaken by at least 2 adults. Be careful to support the wooden board.

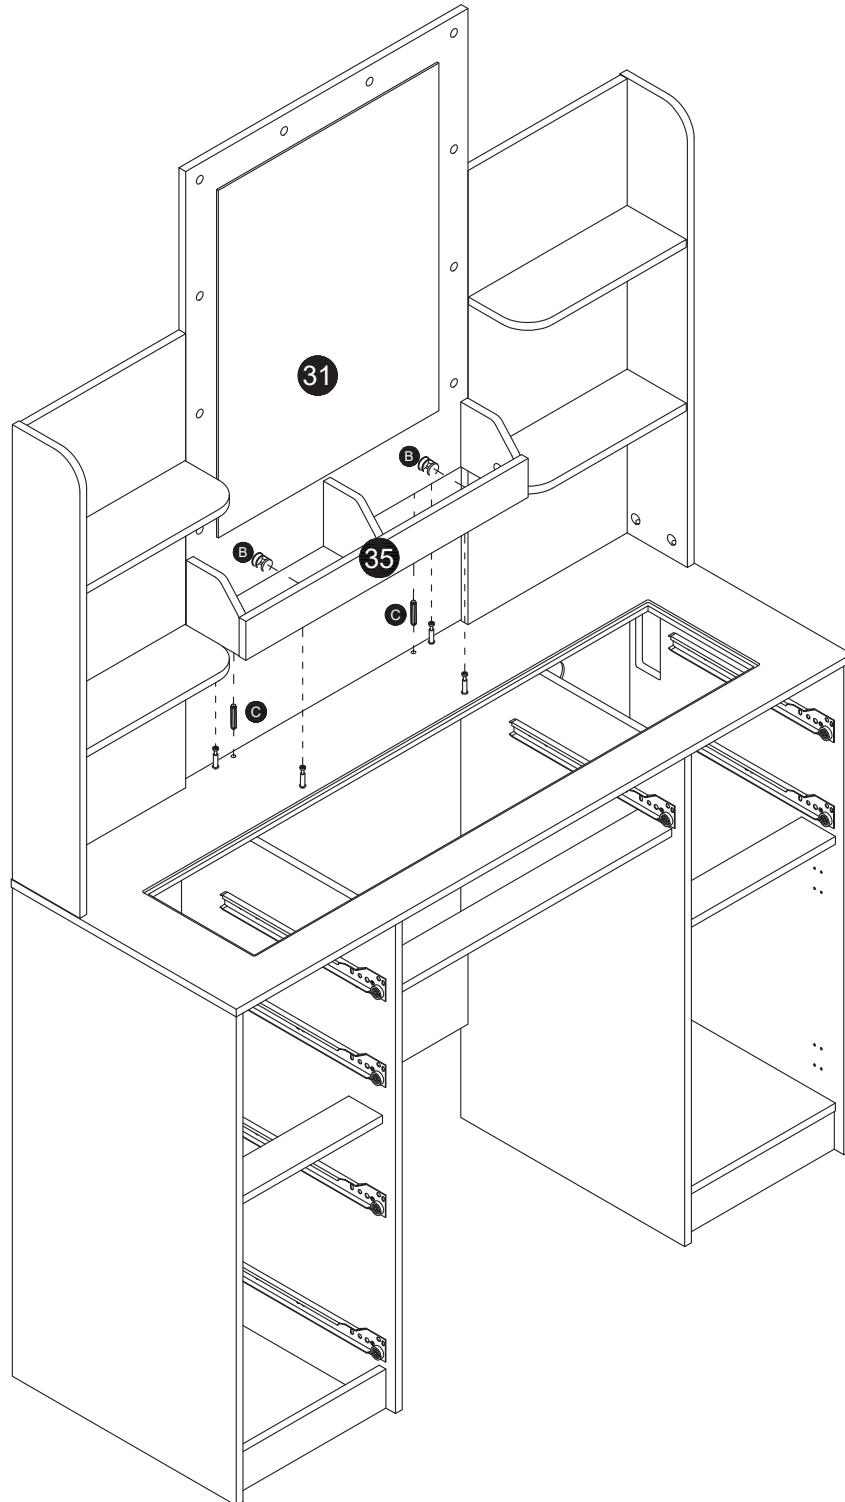

Step:27

B

M15×9mm



6PCS

E

M3×12mm





12PCS







N








6PCS

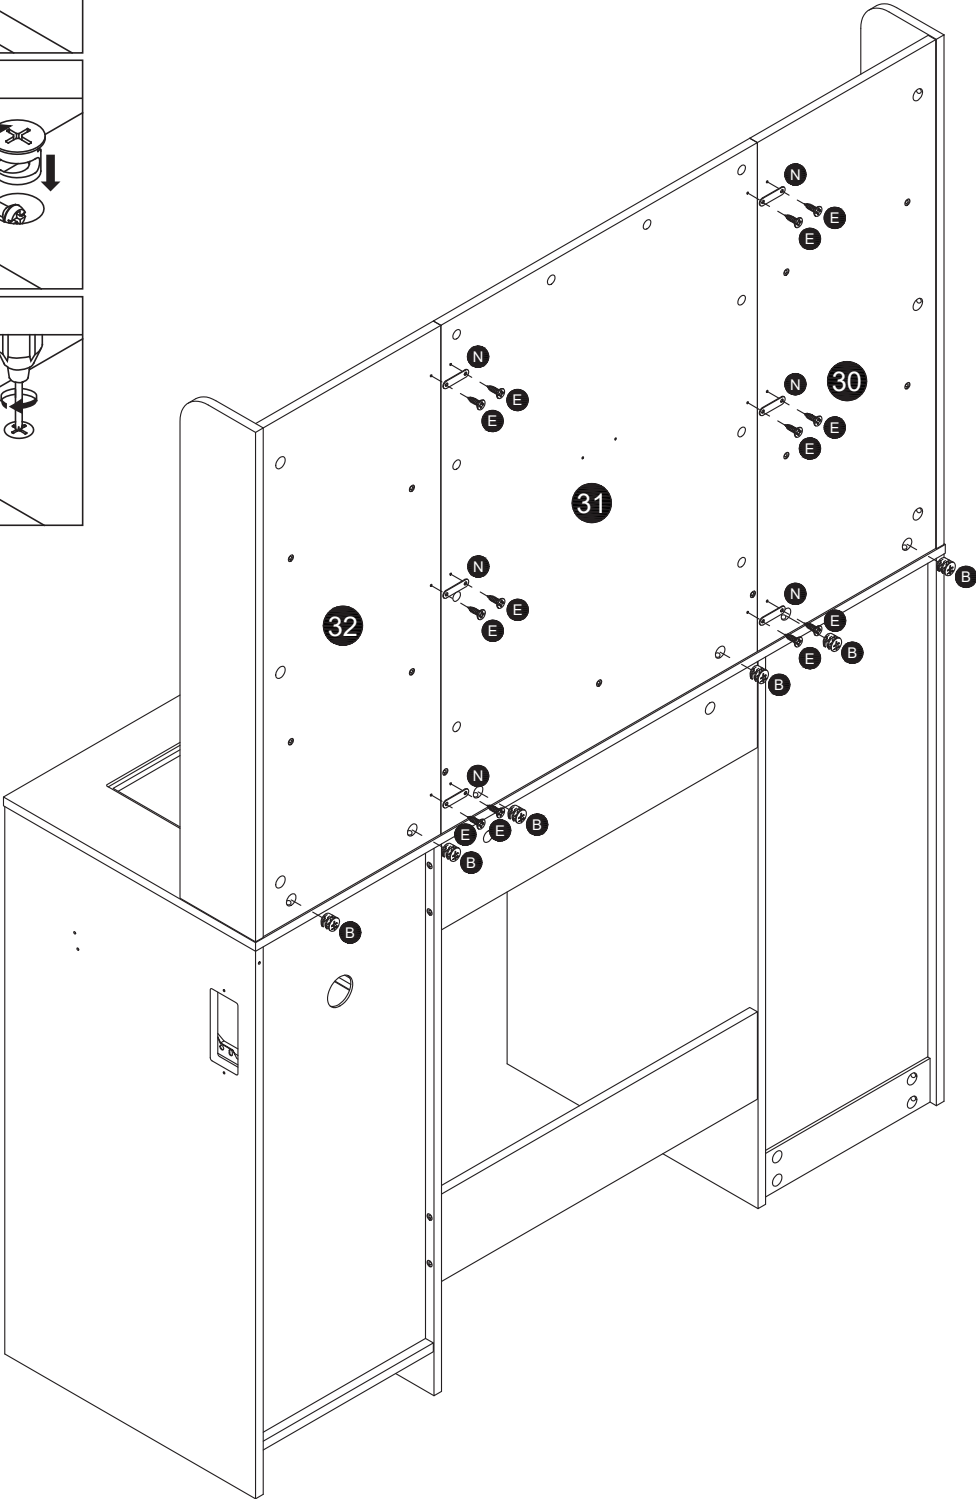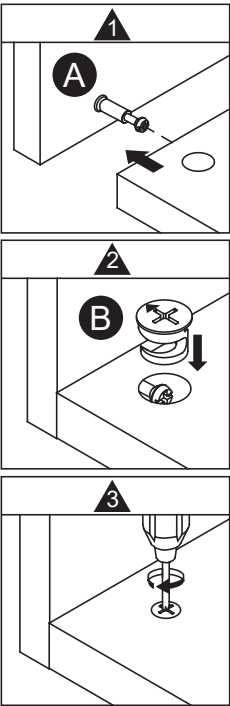








Step:28

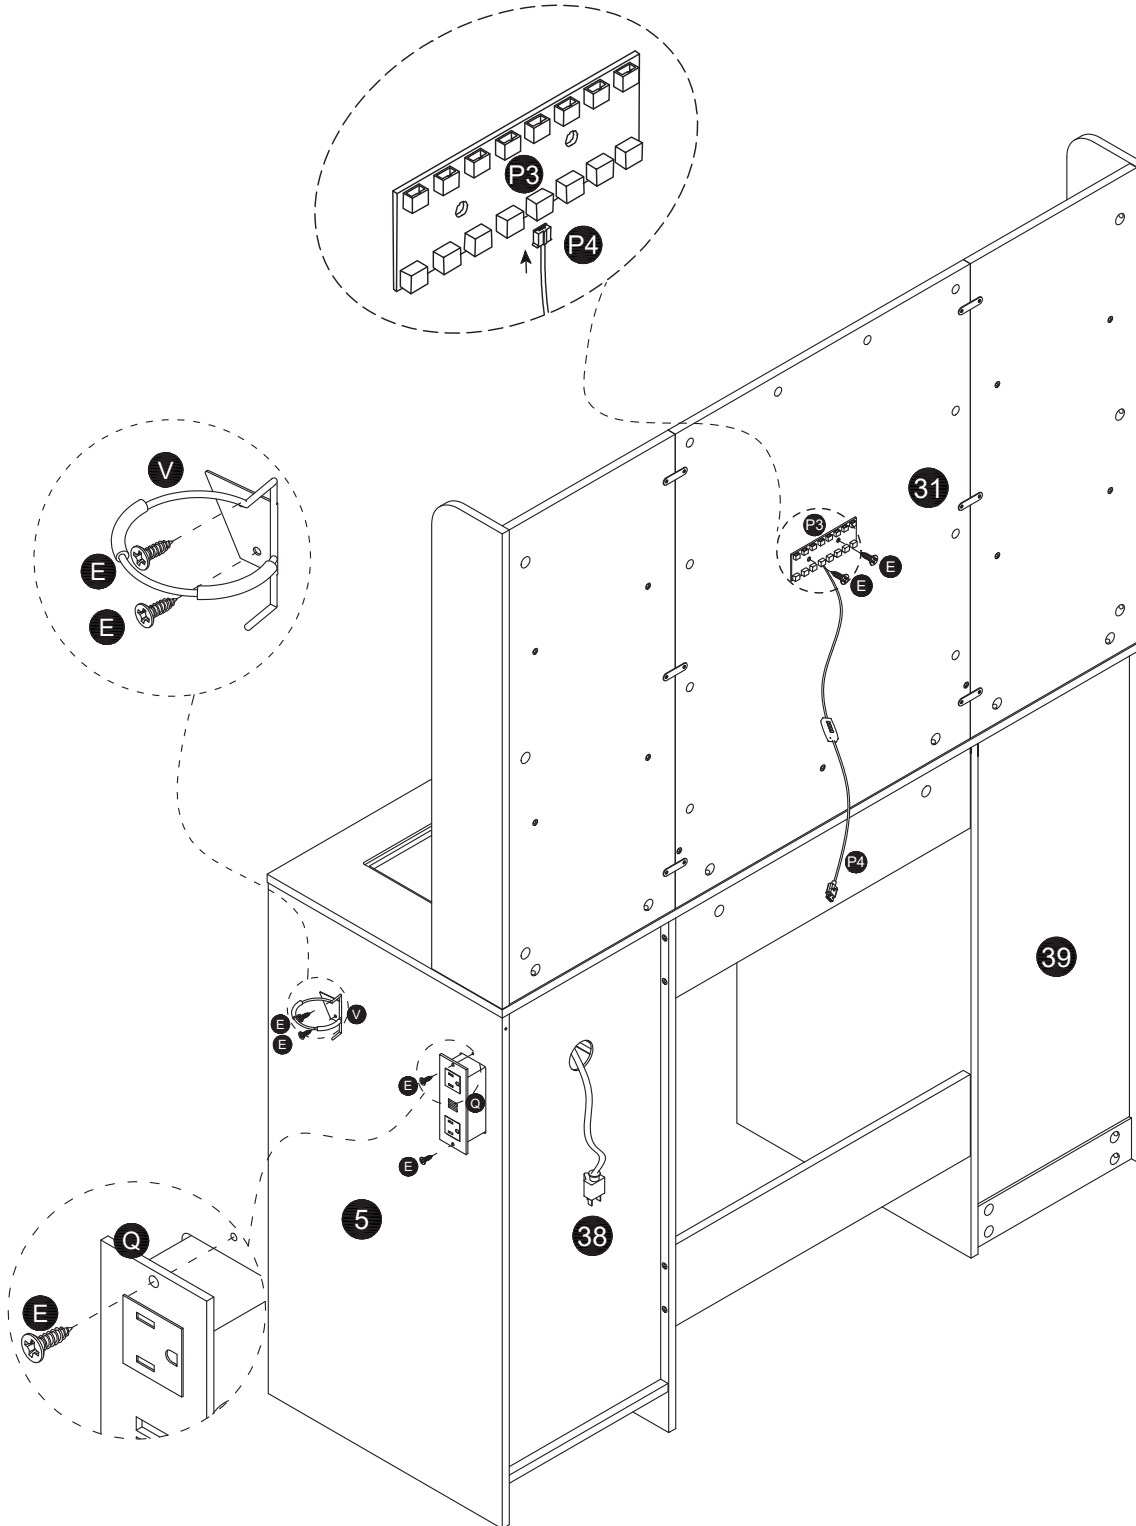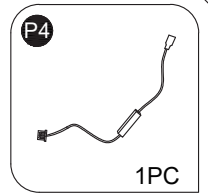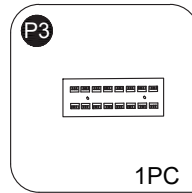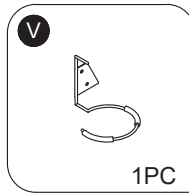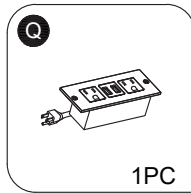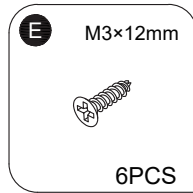

Step:29


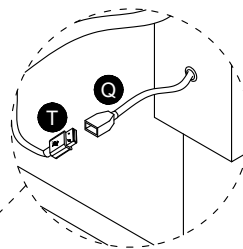
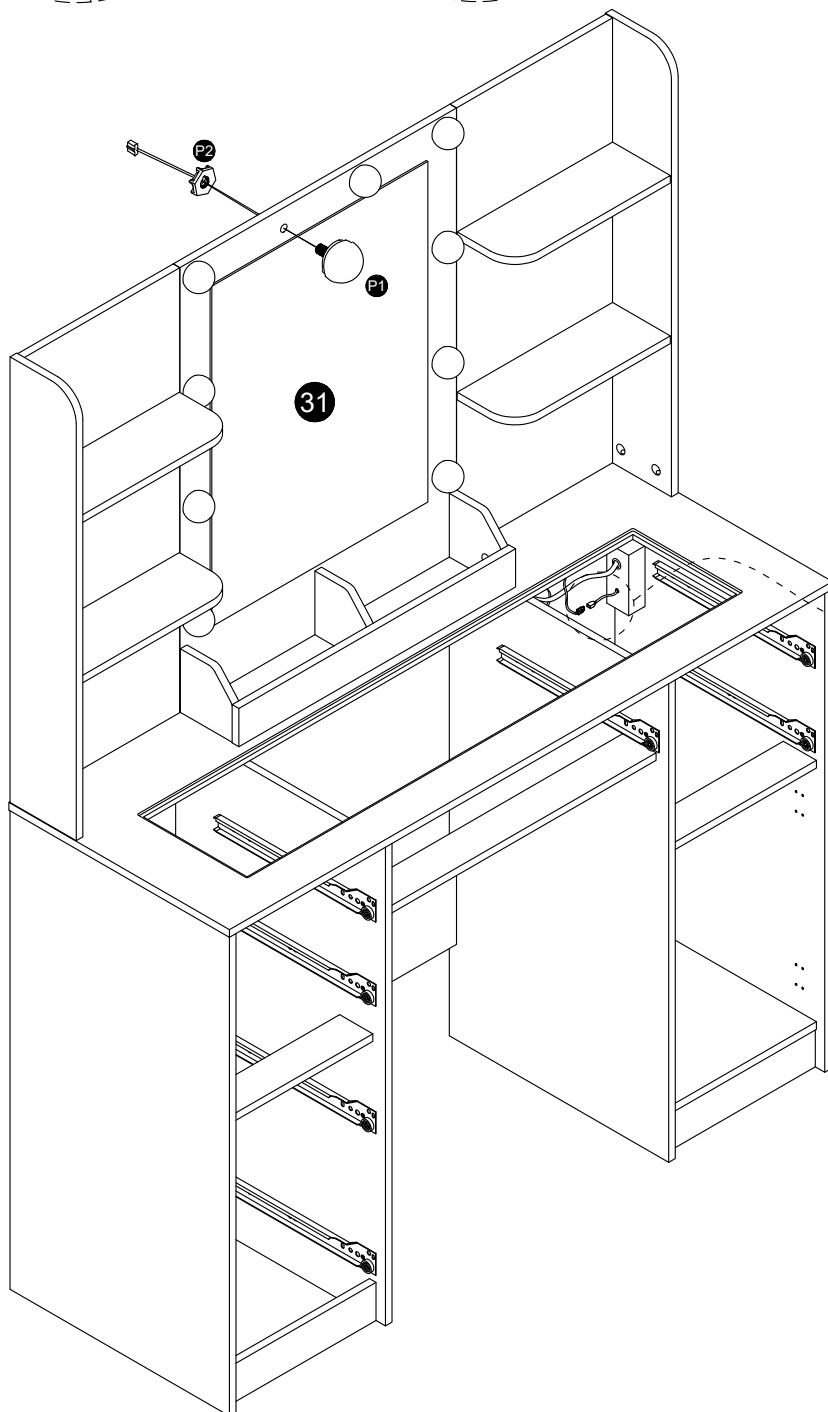
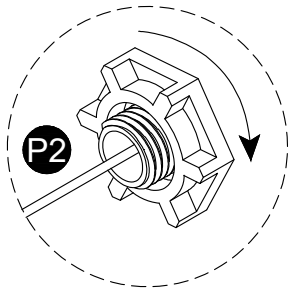
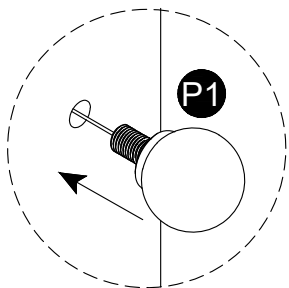
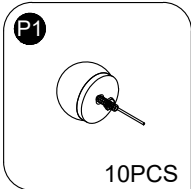


Step:30

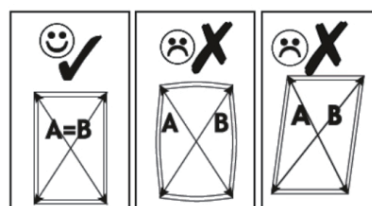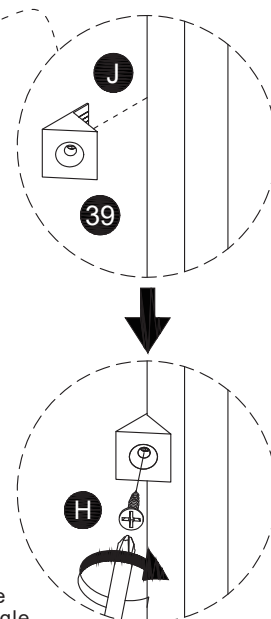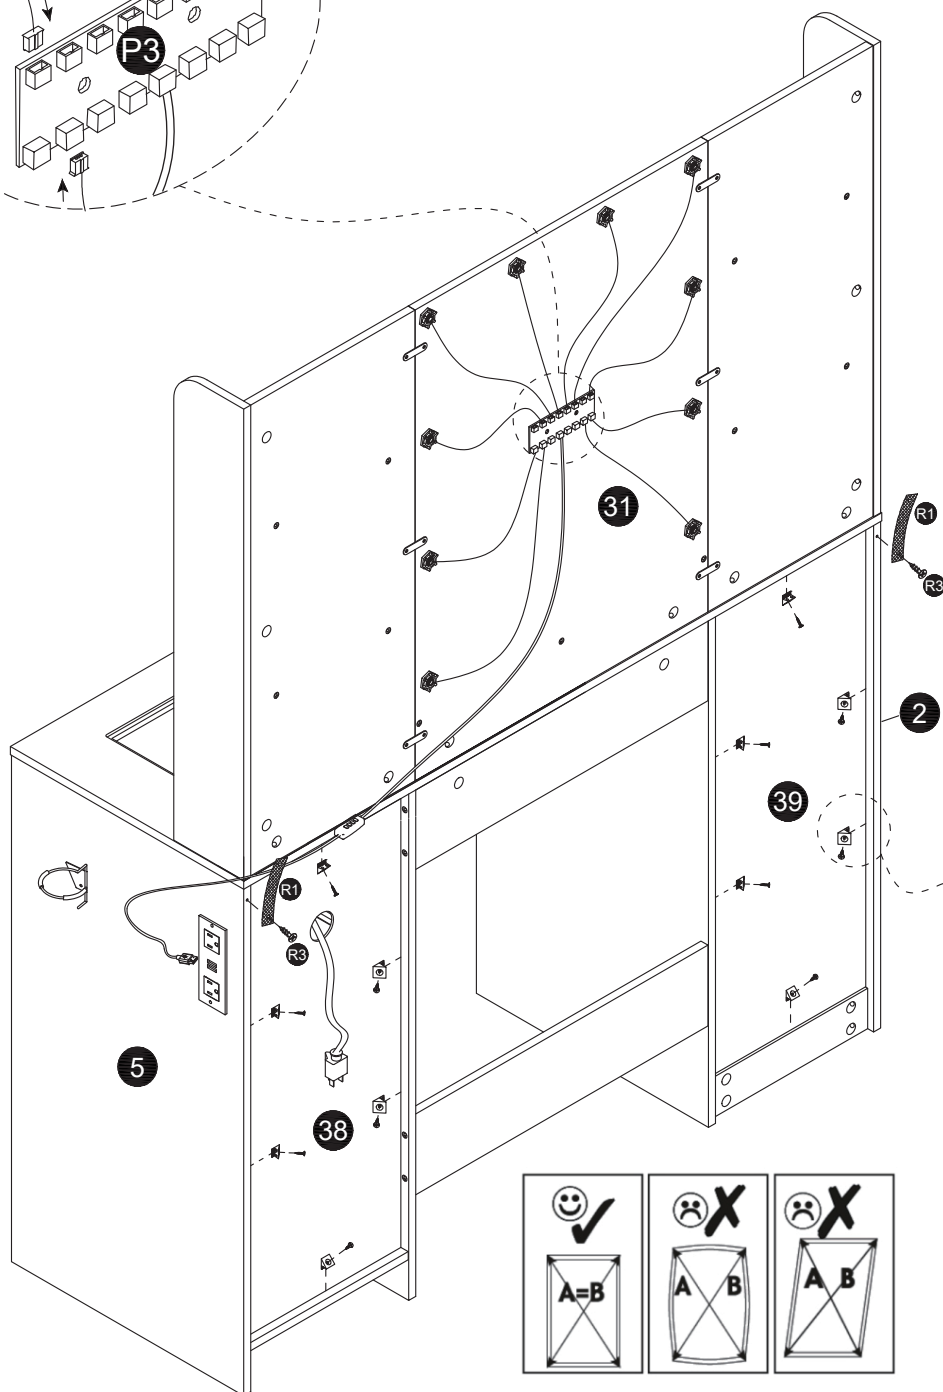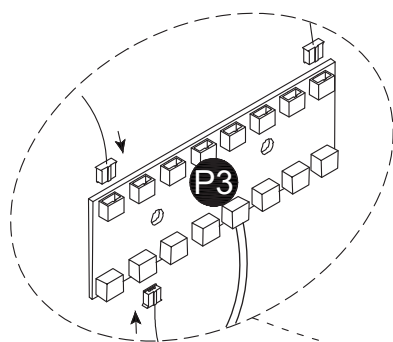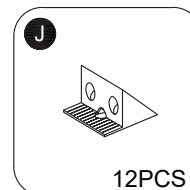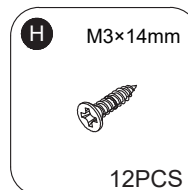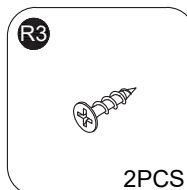


ATTENTION PLEASE
Please make sure the left and right doors are the same level and the backboard is right Angle before installing hardware D, **MUST** install hardware D to strengthen product stability




Step:31

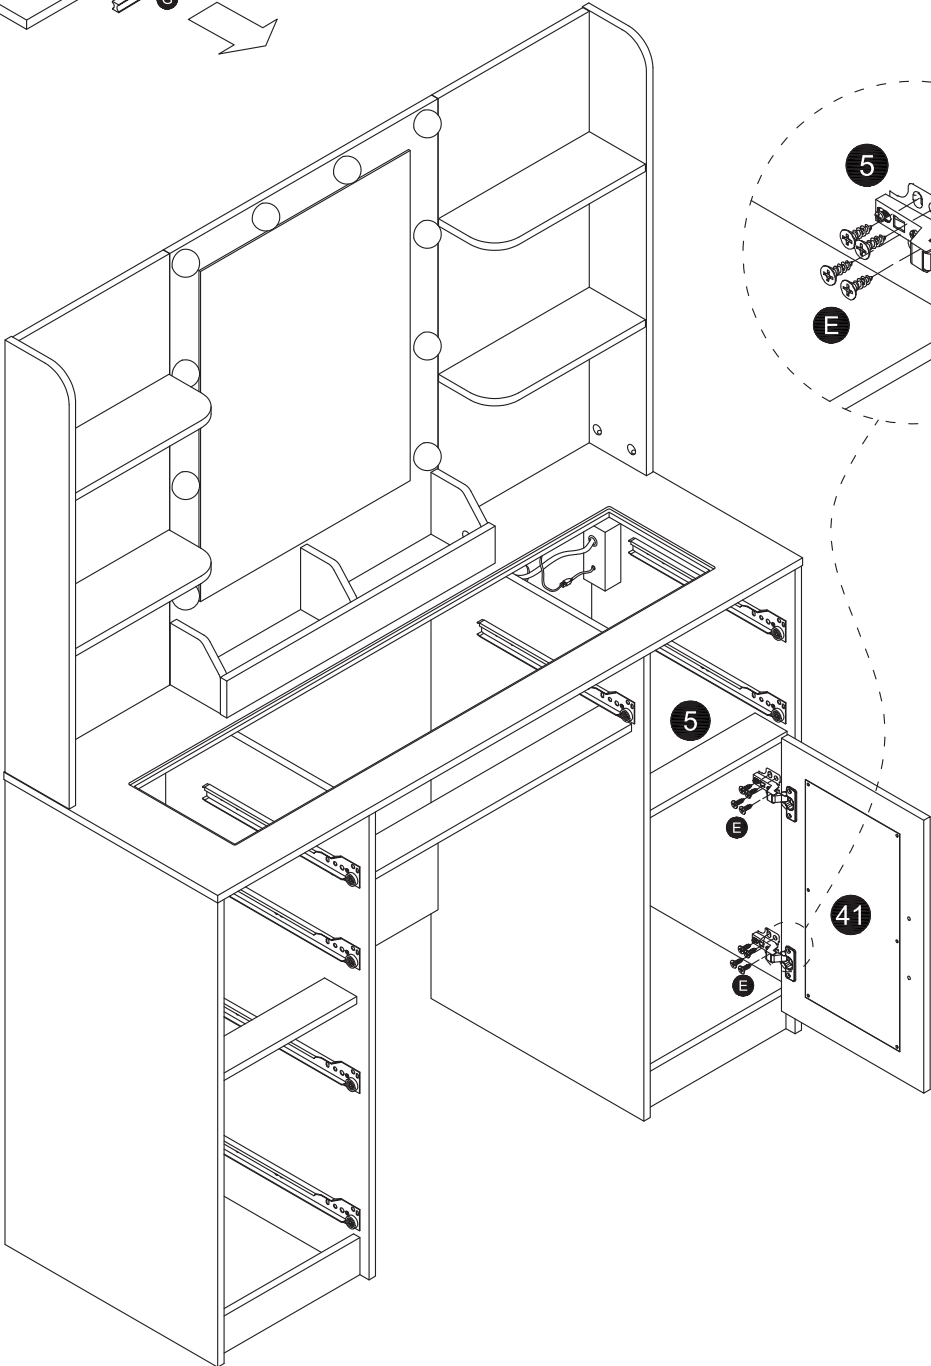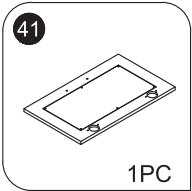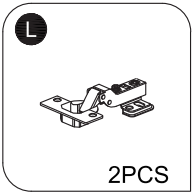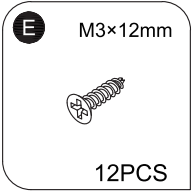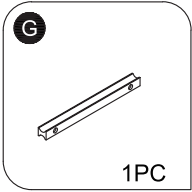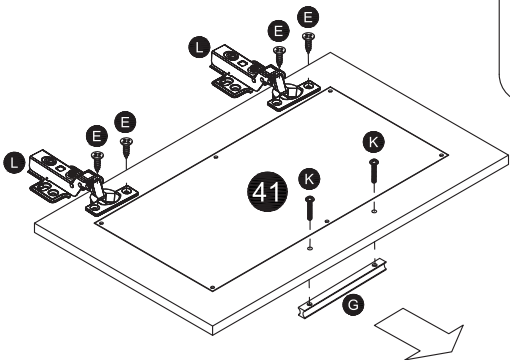




Step:32

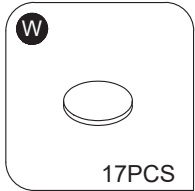


Note: Cover visible exposed accessory B with W sticker

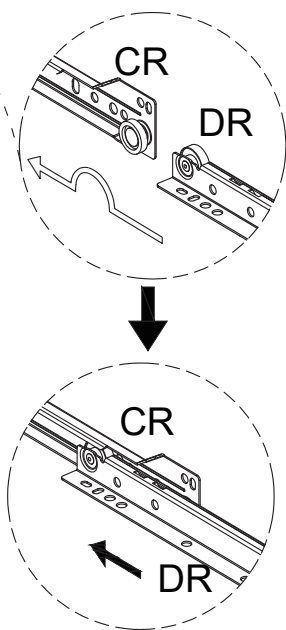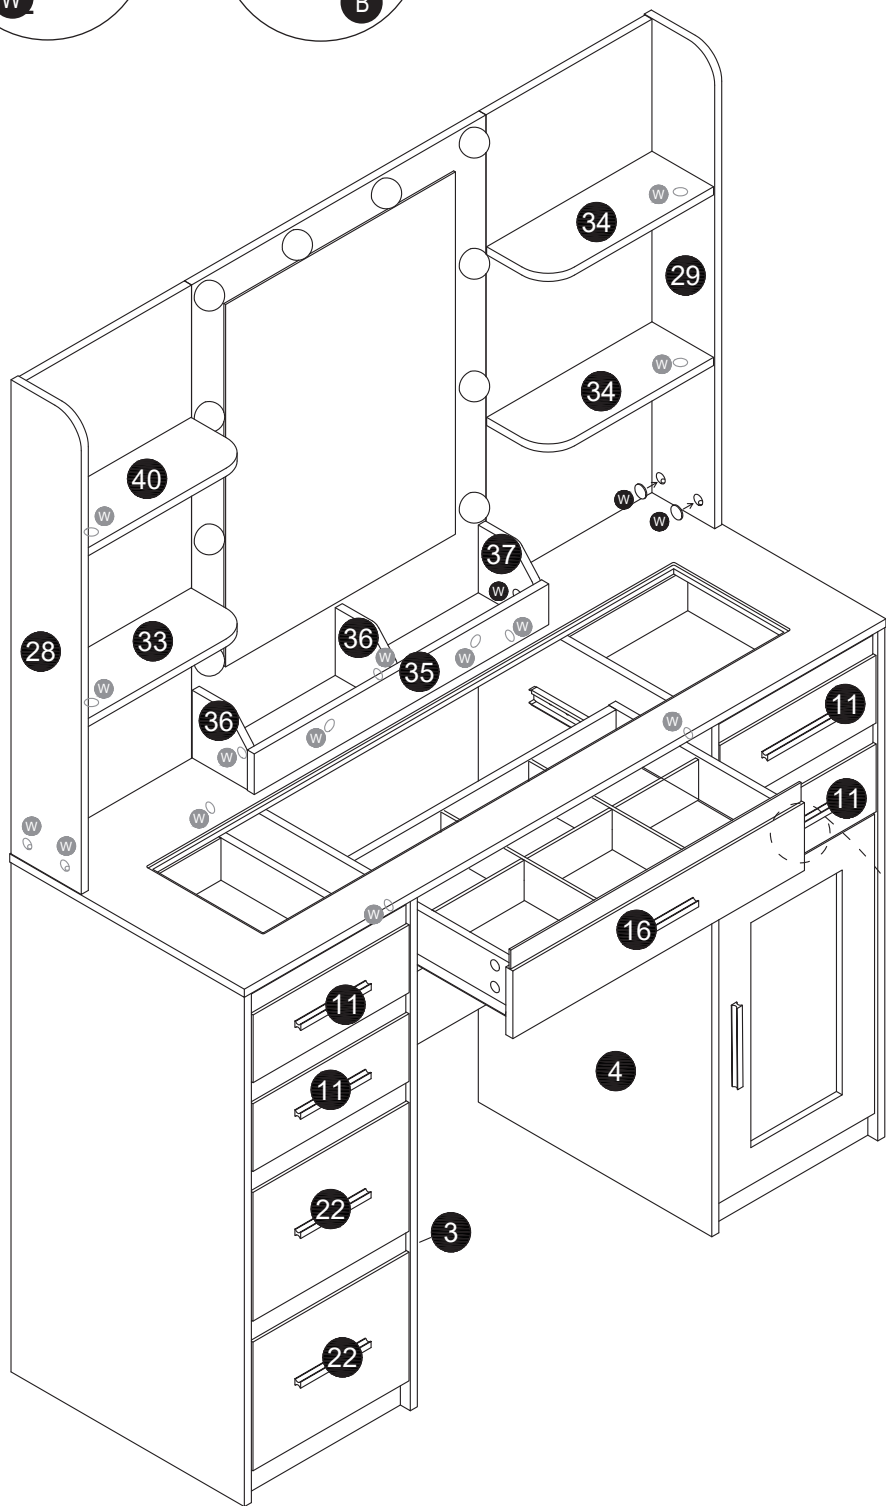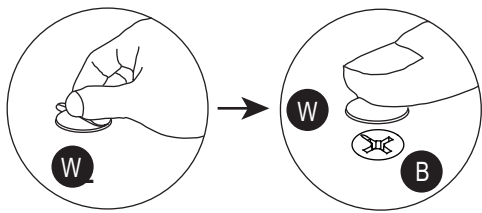

Step:33

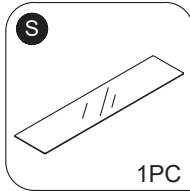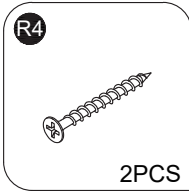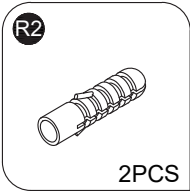

WALL

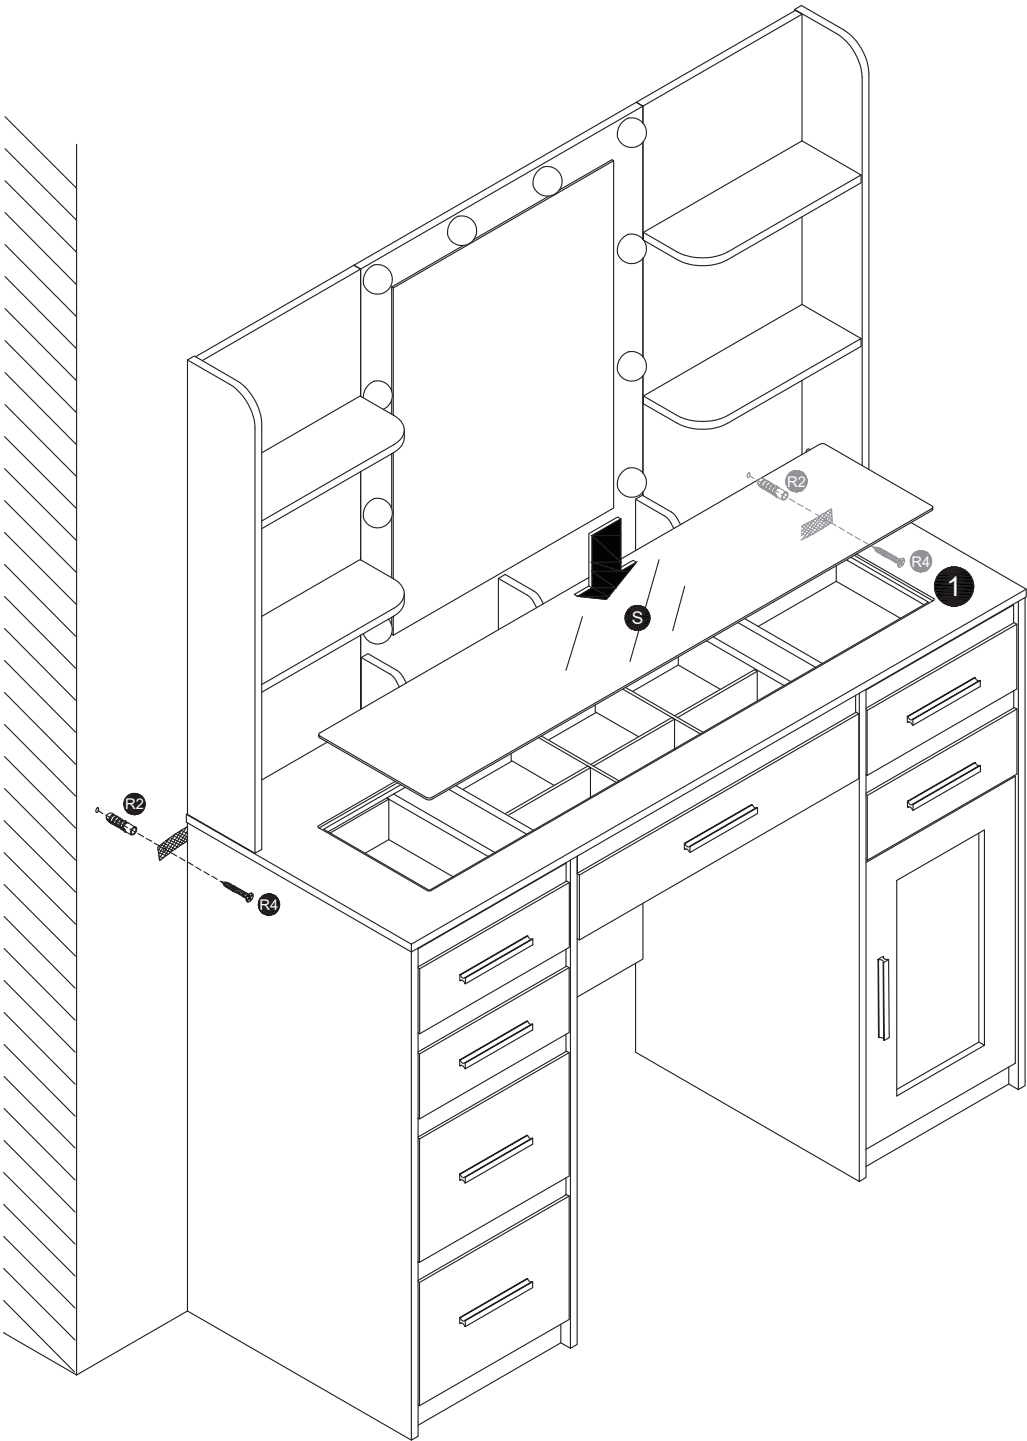

1

Wall

Mark the punching points on both sides.

2

Wall

Use an electric drill to drill holes at the marked places. Please use a drill bit with a diameter of 6 mm and a length of 30 mm.

3

Wall

R2 x 2