

☎ 626-679-3588
✉ service@getprohome.com
🌐 www.getprohome.com
📍 162 Atlantic St, Pomona, CA 91768

INSTALLATION VIDEO

INSTALLATION MANUAL

SHOWER DOOR



THANK YOU!

Dear Valued Customer,

Thanks to your kind support of GETPRO, we hope our product can improve the quality of your life.

As our valued customer, your comments and opinions are very important to us. If you have any concerns, questions, or comments, we hope that you will bring them to our attention.

Please keep the carton and packaging materials until your product is completely installed.

Feel free to contact us if you encounter any problems such as missing parts, or product defects during the installation process. We are happy to provide you with the most sincere service.

*Sincerely,
Service Team*

Important Note

Attention:

The Glass Shower doors include with anti-shatter film-on the reverse side of the certification printed logo.

See the Fig1 & Fig2

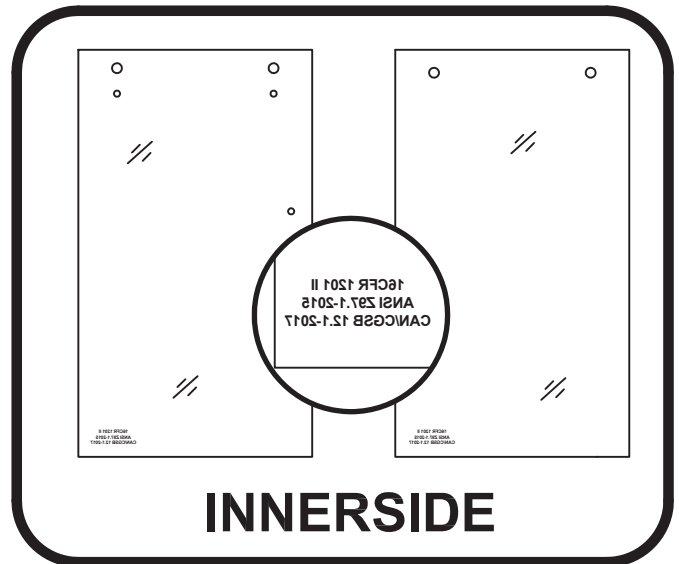


Fig 1




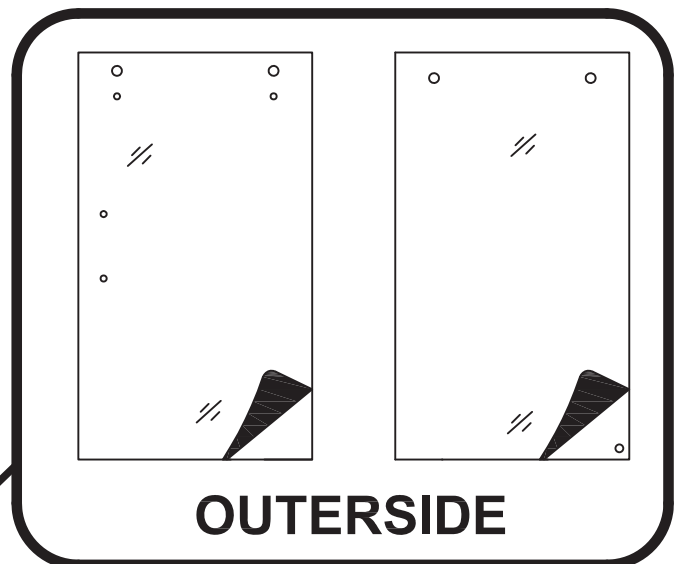


Fig 2

With anti-shatter film helps to hold glass in place in the event of breakage. So as to prevent the glass shatter will hurt the user. Allowing the panel to be carefully removed by a professional at a later date.

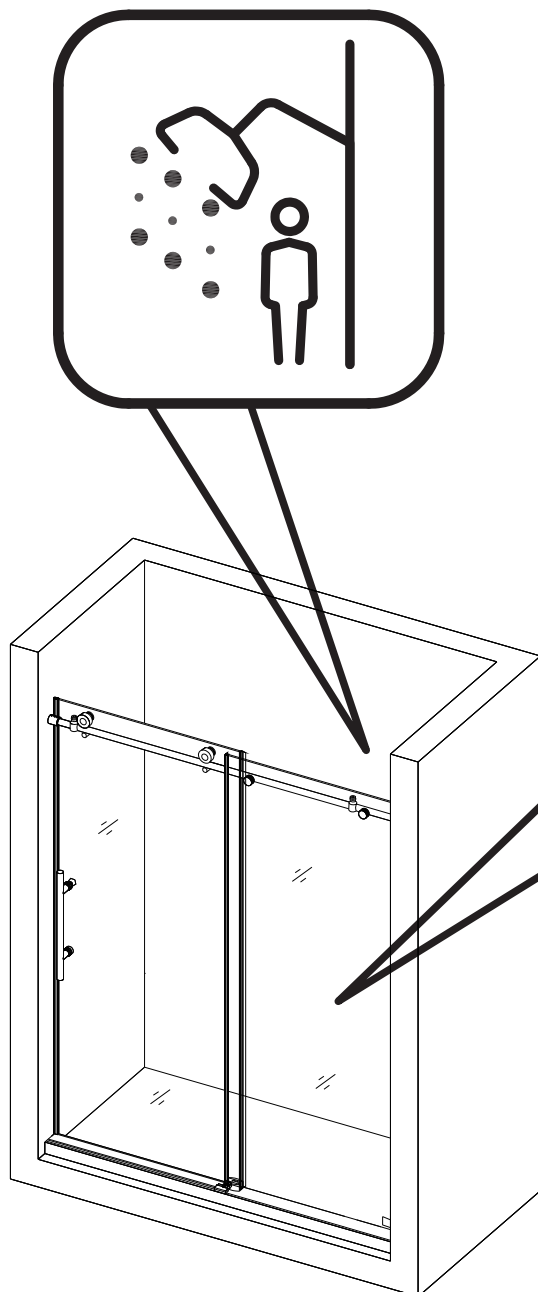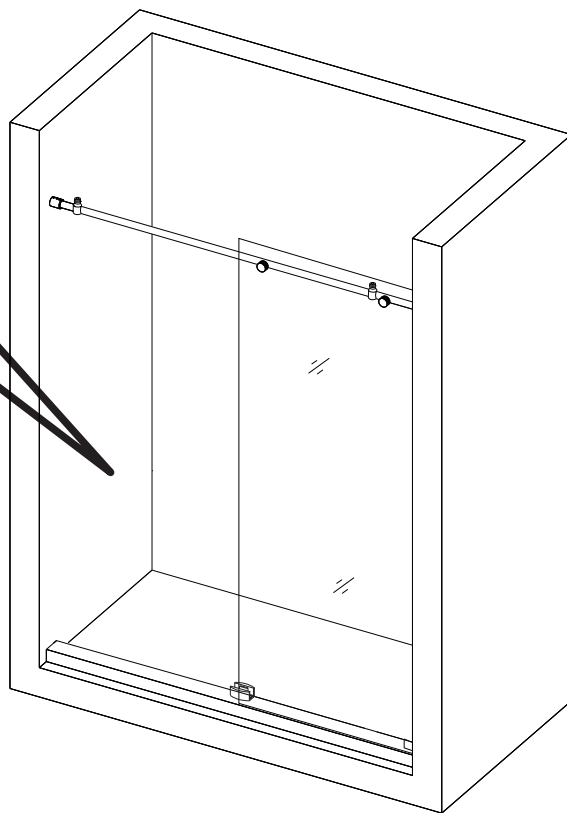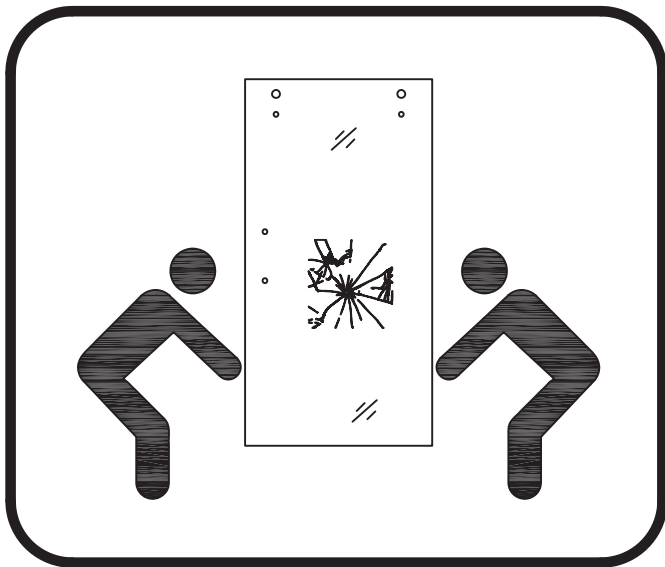

In the event of breakage please follow the steps below.

- 1. If someone is inside the shower, move the panel slowly out of the way and exit the bathroom as soon as possible. Do not allow anyone to re-enter bathroom until prepared to remove and dispose of broken panel.**
- 2. Utilize safety precautions such as a hard-hat, safety glasses, leather gloves, proper footwear and moving blankets to minimize risk of injury.**
- 3. It is recommended that two people assist in the removal of the panel. One person to hold panel steady, and the other to un-install the hardware. Then carefully remove glass from shower and lay flat on cardboard or plywood until it can be removed. Once laying flat, a razor knife or box cutter can be utilized to cut the film and remove in smaller pieces.**

PREPARATION


1. WE STRONGLY RECOMMEND THAT A LICENSED AND INSURED PROFESSIONAL CONTRACTOR TO INSTALL THIS PRODUCT INCLUDING THE ASSISTANCE OF A SECOND PERSON DURING INSTALLATION.
2. After opening all boxes and packages, read this introduction carefully. Check that all of the needed parts are included in the package by marking all the components on the "Detailed Diagram of Shower Door Components". Examine boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts, please contact our customer support department to be served immediately. Please note that We will not replace any damaged products or missing parts free of charge after 5 business days or if the product has been installed. Feel free to contact your local distributor if you have any questions.
VERY IMPORTANT: Please double check the glass corner and four edges of the glass door and fixed panel to make sure that all the glass are in perfect condition and without any breakage. Please do not try to install the shower door, if there is breakage to the glass corner.
3. Please note that you should consult your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and We are not responsible for code compliance standards for your project and will not accept any returns.
4. Prior to installation, ensure that the installation surface is leveled and solid and will be able to support the total weight of the unit. Also, make sure the walls are at the right angles. Irregular installation surface level or improper angle of side walls will result in serious problems during installation. Please, note that some adjustments and drilling might be necessary during the installation process.
5. **NOTE!** This door does not have out-of-plumb adjustment. Make sure your walls are at right angles.
6. This door requires a minimum 2 3/4" wide threshold, base or installation space. Please note that Step 6 calls for installation of the door to the wall using anchors. However, the manufacturer strongly recommends installing these heavy doors to the studs or to preinstalled 2" x 4" wood reinforcements behind the wall and attach the Wall brackets to it.

ATTENTION: THIS DOOR IS EXTREMELY HEAVY AND REQUIRES PROFESSIONAL INSTALLATION. INSTRUCTIONS ARE GIVEN FOR THE SHOWER DOOR INSTALLATION. PLEASE, FOLLOW THE SAME INSTRUCTIONS TO INSTALL THE GLASS DOOR. INSTRUCTIONS THAT, IF IGNORED, COULD RESULT IN DEATH OR SERIOUS PERSONAL INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.


TOOLS REQUIRED




Soft Cloth
or Blanket




Caulk



Tape
Measure



Pencil

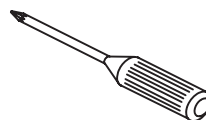

Phillips
Screwdriver




Drill Bit
=Ø8



Safety Glass




Level



Caulk Gun




Drill

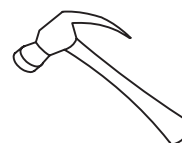

Hammer

OTHER TOOLS MAY BE REQUIRED







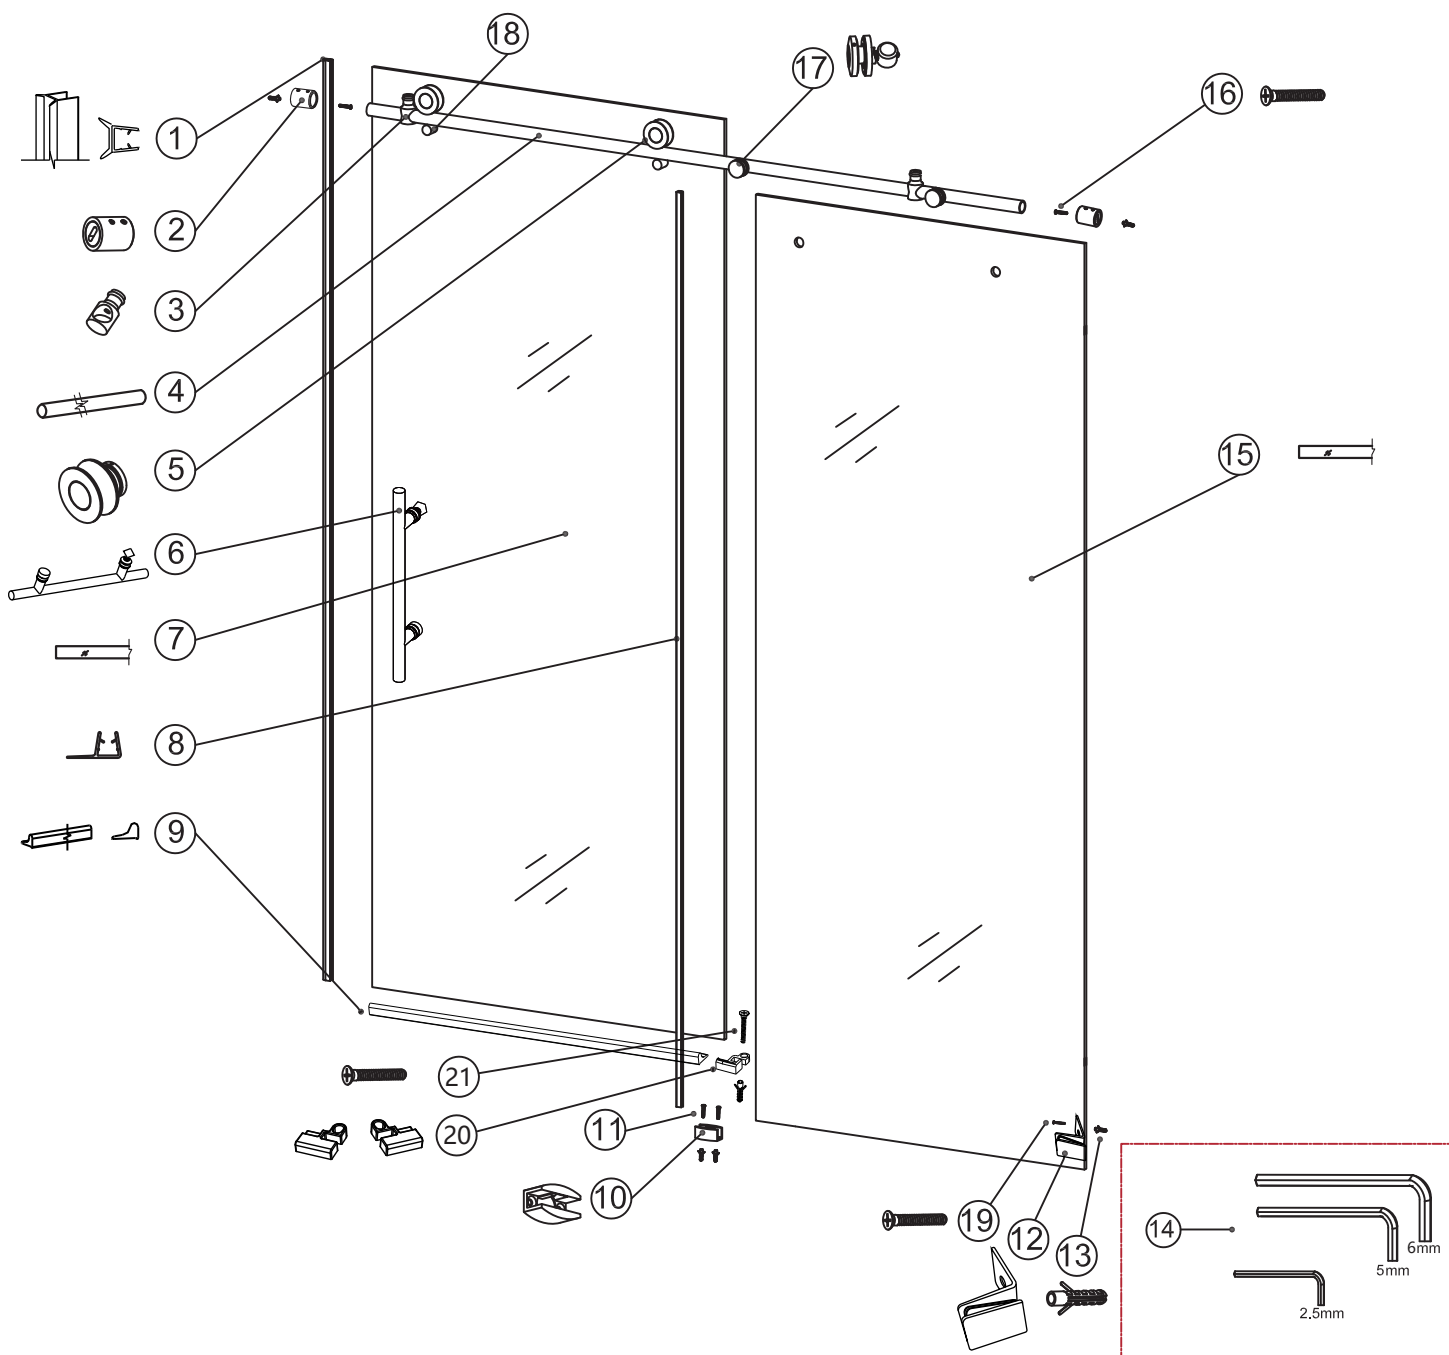

No.	Description	QTY	No.	Description	QTY
1.	Bumper Strip	1 pc	12.	Floor Mount Clamp	1 pc
2.	Guide Rail Bracket	2 pcs	13.	Wall Anchor (Corresponding to screw size)	7 pcs
3.	Glass Door Stopper	2 pcs	14.	Allen Key	3 pcs
4.	Upper Guide Rail	1 pc	15.	Fixed Glass	1 pc
5.	Roller	2 pcs	16.	Screw M5X40	2 pcs
6.	Handle	1 pc	17.	Glass Bracket	2 pcs
7.	Door Glass	1 pc	18.	Safety Pin	2 pcs
8.	Side Anti-Water Strip	2 pcs	19.	Screw M4.8X32	1 pc
9.	Anti-splash Threshold	1 pc	20.	Cover(optional)	2 pcs
10.	Guide Block	1 pc	21.	Screw M4X25	2 pcs
11.	Screw M4X30	2 pcs	22.		

TEAR OFF THE PROTECTIVE SOFT FILM ON THE GLASS WITH LABEL STICKERS BEFORE INSTALLATION

If there are no structural limitations in the shower room,
we recommend the installation as shown " ✓ " below

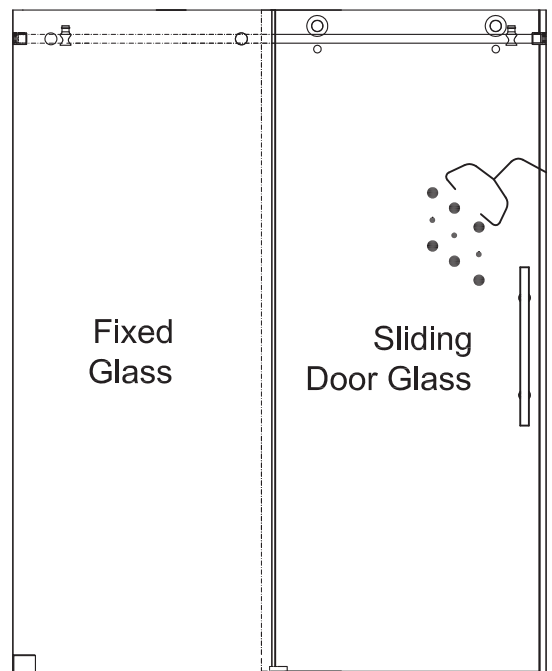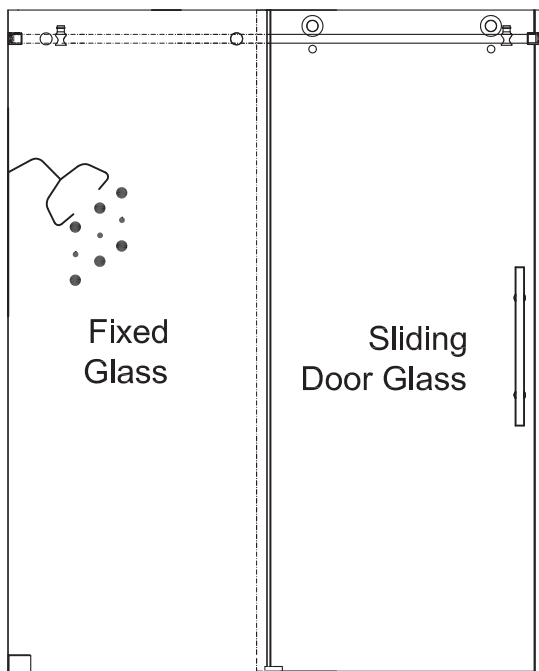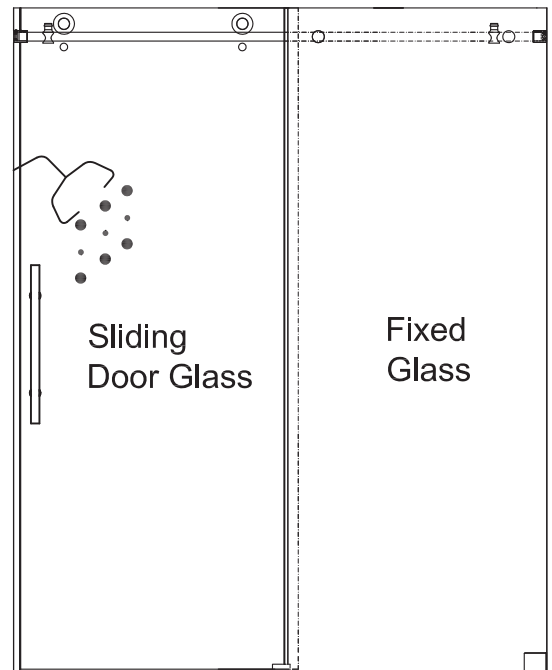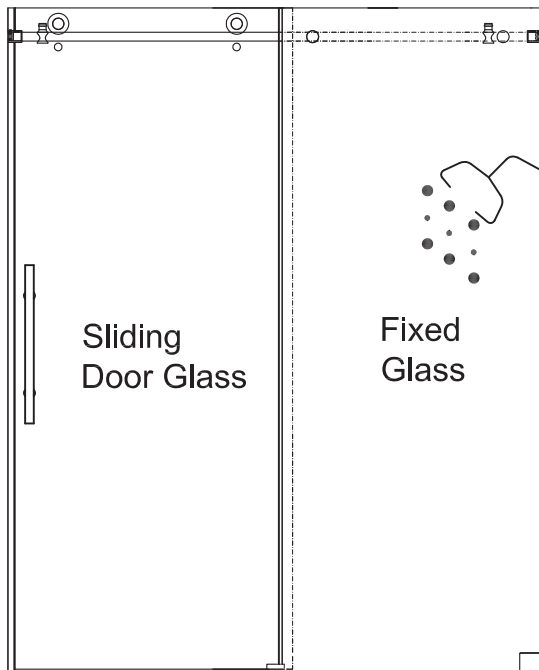

TIPS

01:

Open the packaging carefully and inspect all the necessary parts using detailed diagram and component list in your manual as a reference. Before discarding the carton, check for small hardware bags that tend to fall to the bottom of the box. If any parts are damaged or missing, please contact us for replacement.

02:

Retain these installation instructions for future use if in need.

1. Measure the distance between two finished walls. This distance is marked as W.

Please see Fig 1 for details:




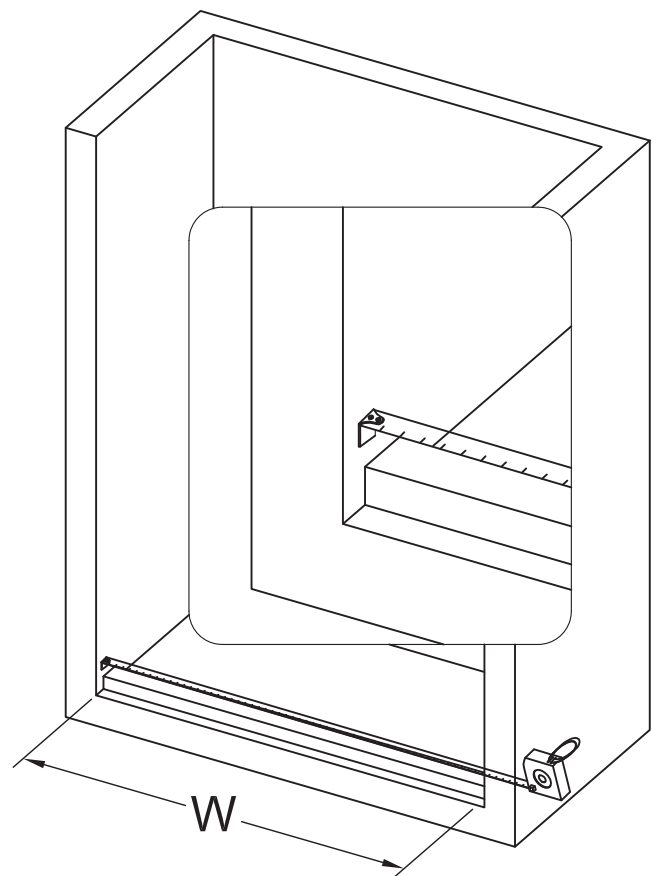


Fig 1

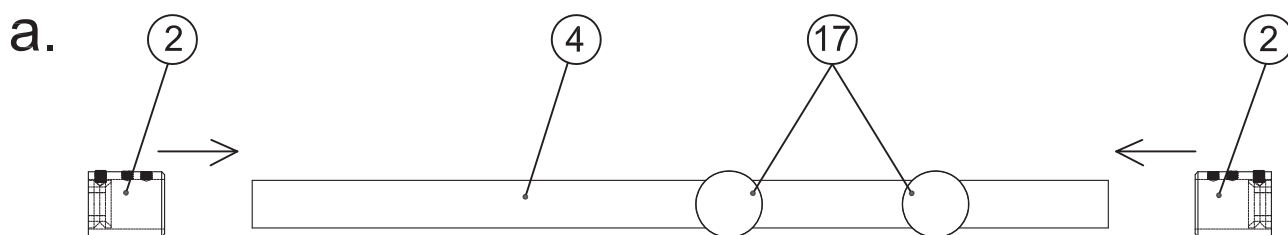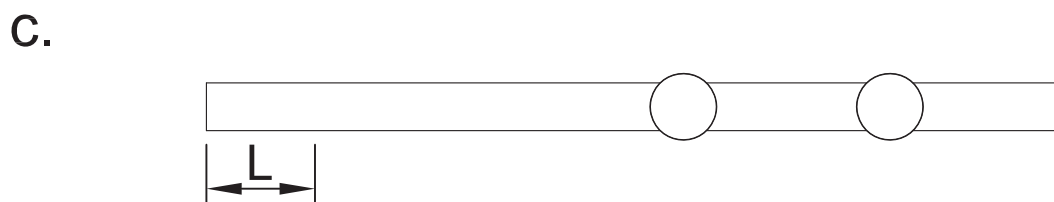

Note: The Glass Brackets(17) have been pre-installed to the Upper Guide Rail(4).

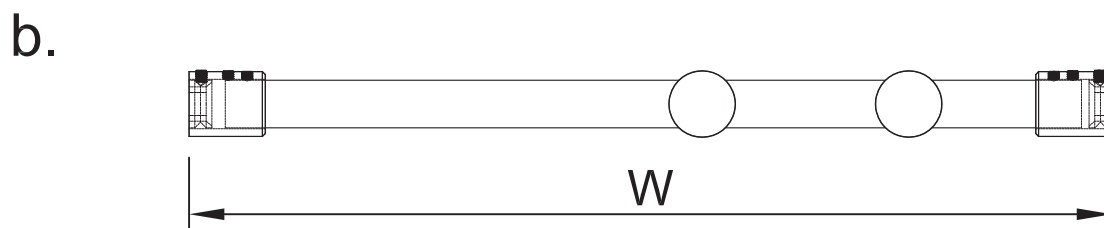

2. Your Upper Guide Rail (04) has been precut for your Shower model opening width, eg. 60" for shower width.

If W-width of your wall-to-wall opening is equal to the size of your Shower model, it is unnecessary to cut the Upper Guide Rail and you can continue to Step 3.

If W-width of your wall-to-wall opening is less than the size of your Shower model, you will need to cut the Upper Guide Rail from the end which is farther from the Glass brackets (17) holes.

The length to cut off will be L:

$L = \text{Shower model size} - W$
 $L = \text{Subtract } W \text{ from the size of your Shower model.}$

FOR EXAMPLE

If your wall opening $W=59"$. Your shower model is 60".

$L=60"-59"=1"$,

You have to cut 1" off from the rail.

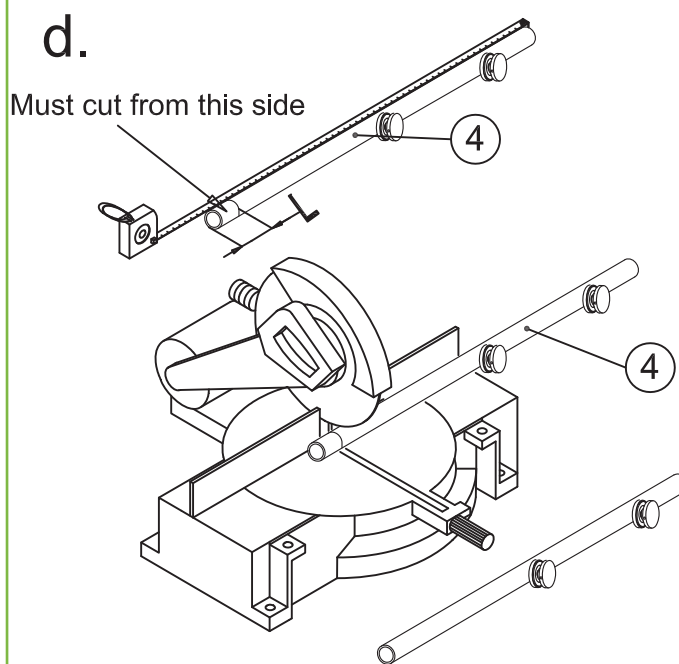


Fig 2

Please see Fig 2 for details

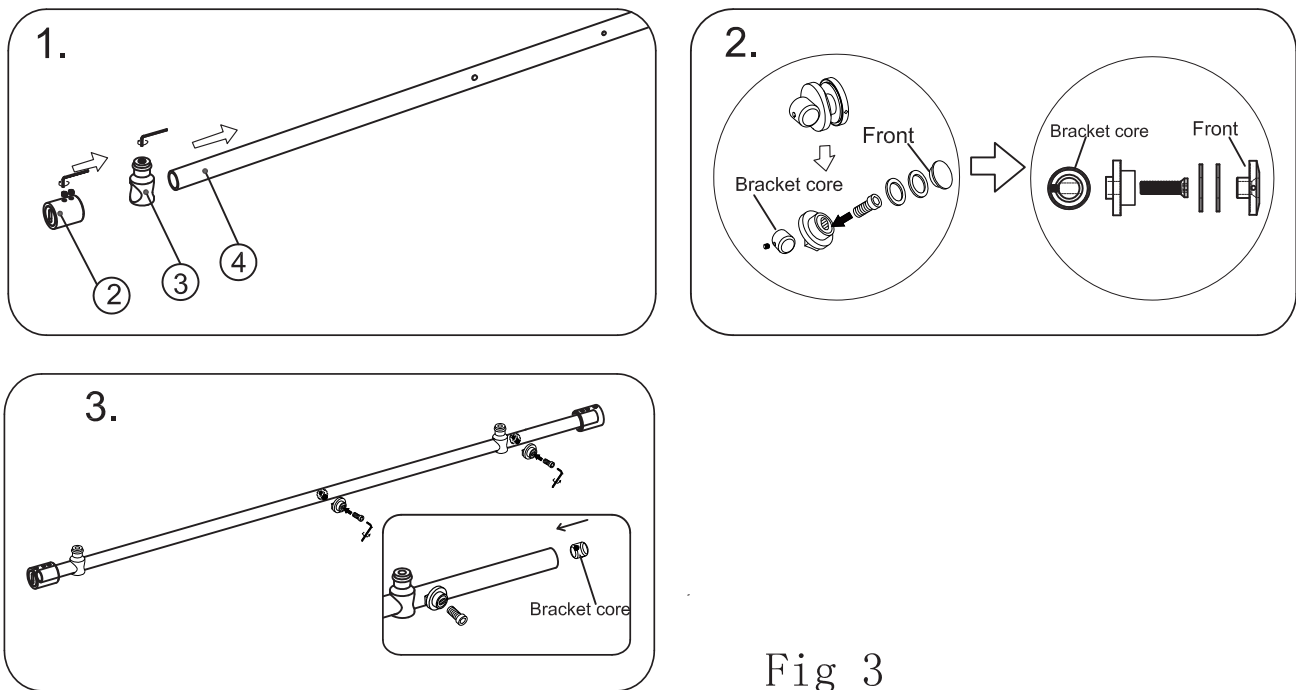


Fig 3

3. Use the Allen key (14) to loose the screw on the Guide Rail Bracket (02) and Glass Door Stopper (03). Slide the stopper and then the bracket to the Guide Rail (04), use the allen key to tighten the parts to the guide rail temporarily. Disassemble the Glass Bracket (17), insert the bracket core inside the guide rail tube, push it slowly to make the hole on the core match the hole on the tube, then lock the bracket back side with Allen Key(14) .

See Figure 3 for details.

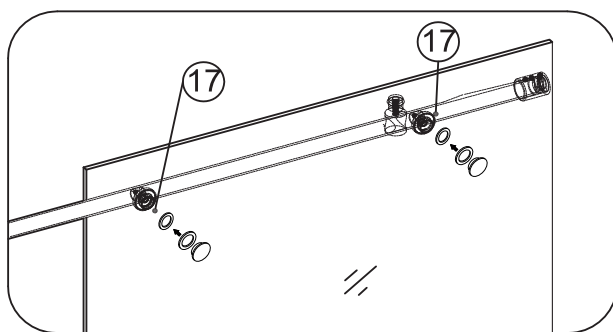


Fig 4

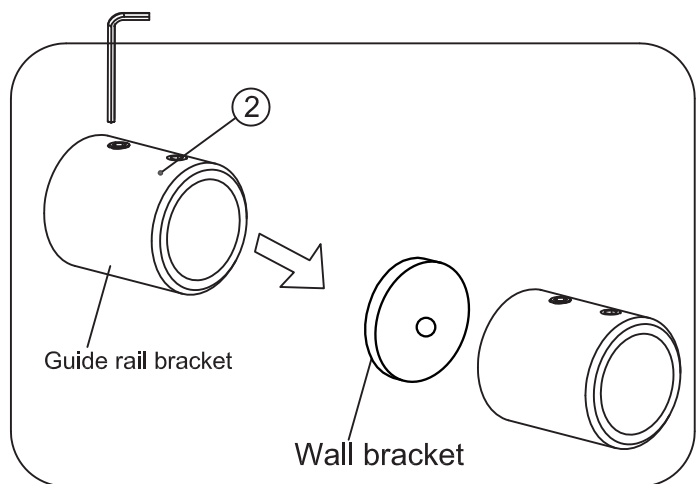


Fig 5

4. After finished installing the Upper Guide Rail(04), lock the glass bracket(17) so as to lock the Fixed Glass(15) to the Upper Guide Rail(04).

Please see Fig 4 for details





5.Install guide rail

1. Loosen the screw on Guide Rail Bracket (02), pull out the wall bracket.

Please see Fig 5 for details


6. Make a mark on a wall perpendicular to the ground at a height of 72.84 inches, then drill holes in the determined position and apply silicone into the holes, insert the Wall anchors (13) for the Guide Rail Bracket.

Mount the Wall Bracket of the Guide Rail Bracket (2) to the wall by using the Screw M5X40 (16). The other side of the Guide Rail bracket (2) is installed in the same way.

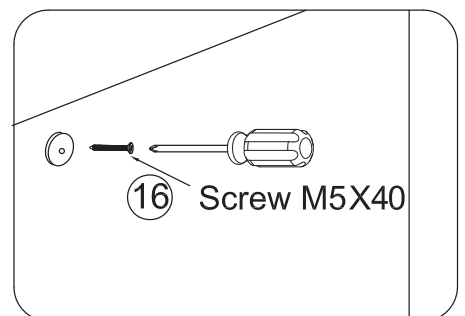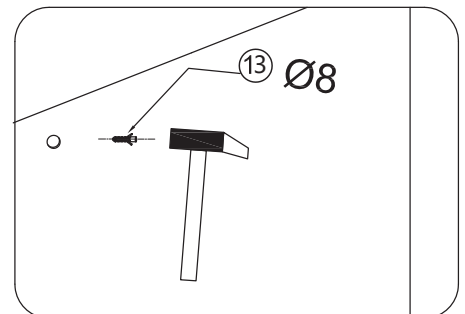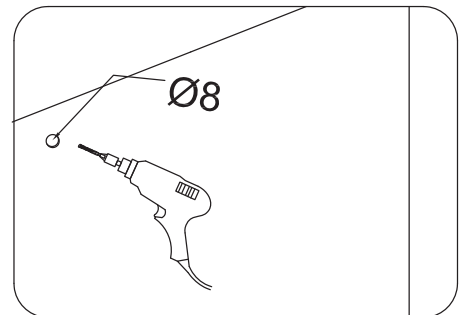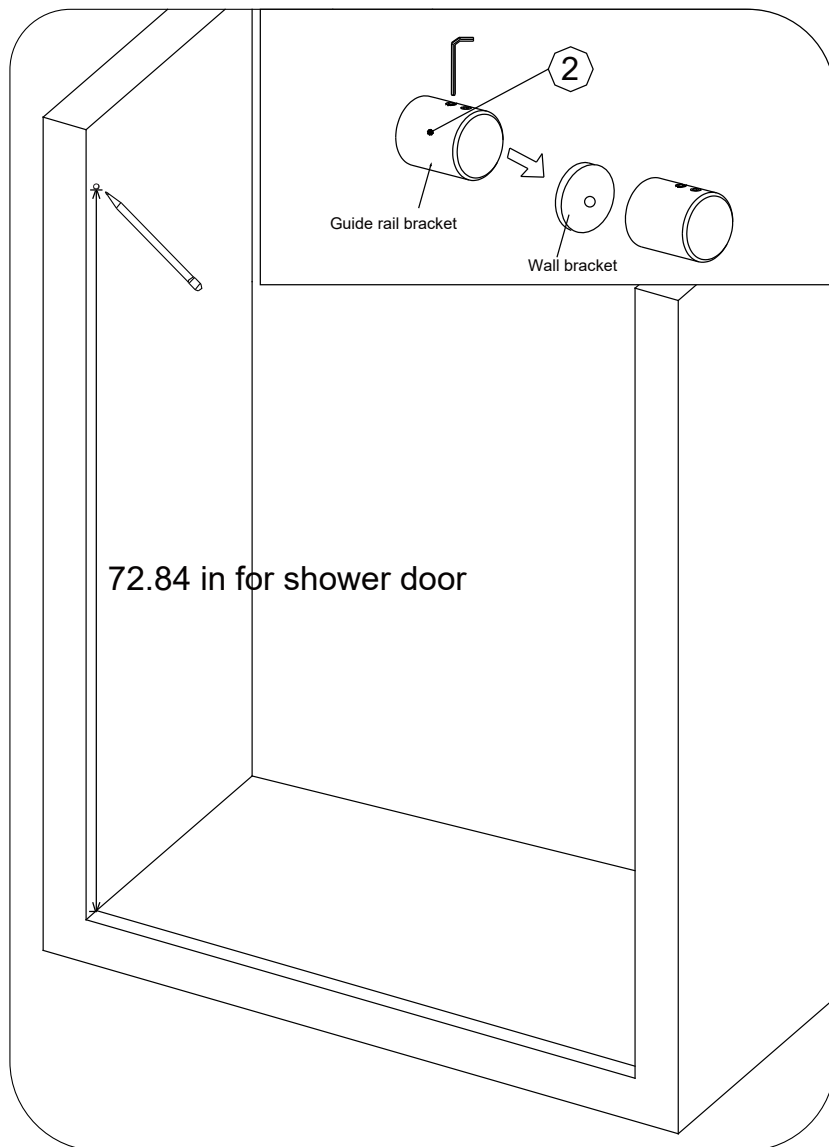

Tips: The other wall bracket is installed in the same way

7. Slide the guide rail bracket (02) to the two end sides of the guide rail, fixed the guide rail bracket to the wall bracket with hexagon spanner(14).Please see Fig 6 for details

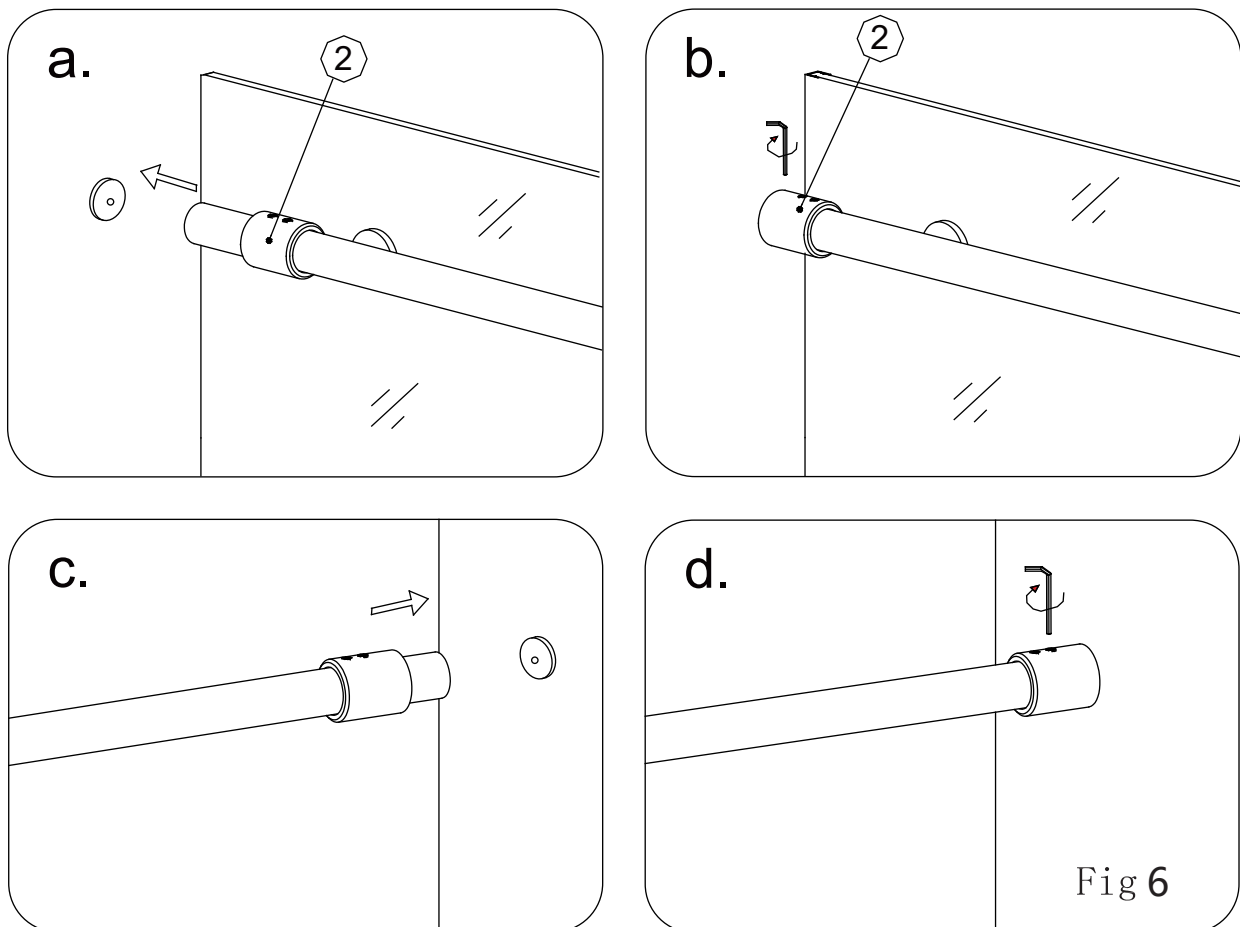

Tips:

1. the other side of the guide rail and guide rail bracket are installed in the same way.

8. Install Fixed Glass

1. Install Side Anti-Water Strip (8) on the side of Fixed Glass (15).
2. Disassemble the Floor Mount Clamp (12) and install the Floor clamp under the Fixed Glass (15).
3. Place the Fixed glass to the wall, level it and draw holes on the shower base/threshold through the holes on the Floor Mount Clamp (12).

Please see Fig 7 for details

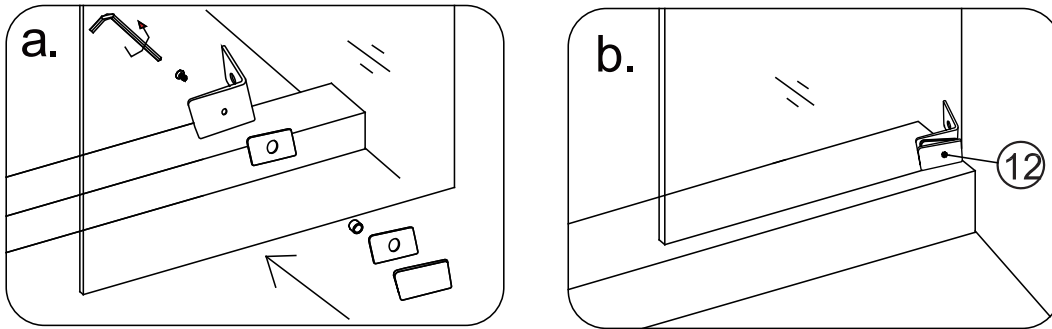


Fig7

9. Use drill bit to drill holes on the shower base/threshold and knock in Wall Anchors (13), then lock the Fixed glass to the wall by Philip's Screw M4.8*32(19).

Please see Fig 8 for details

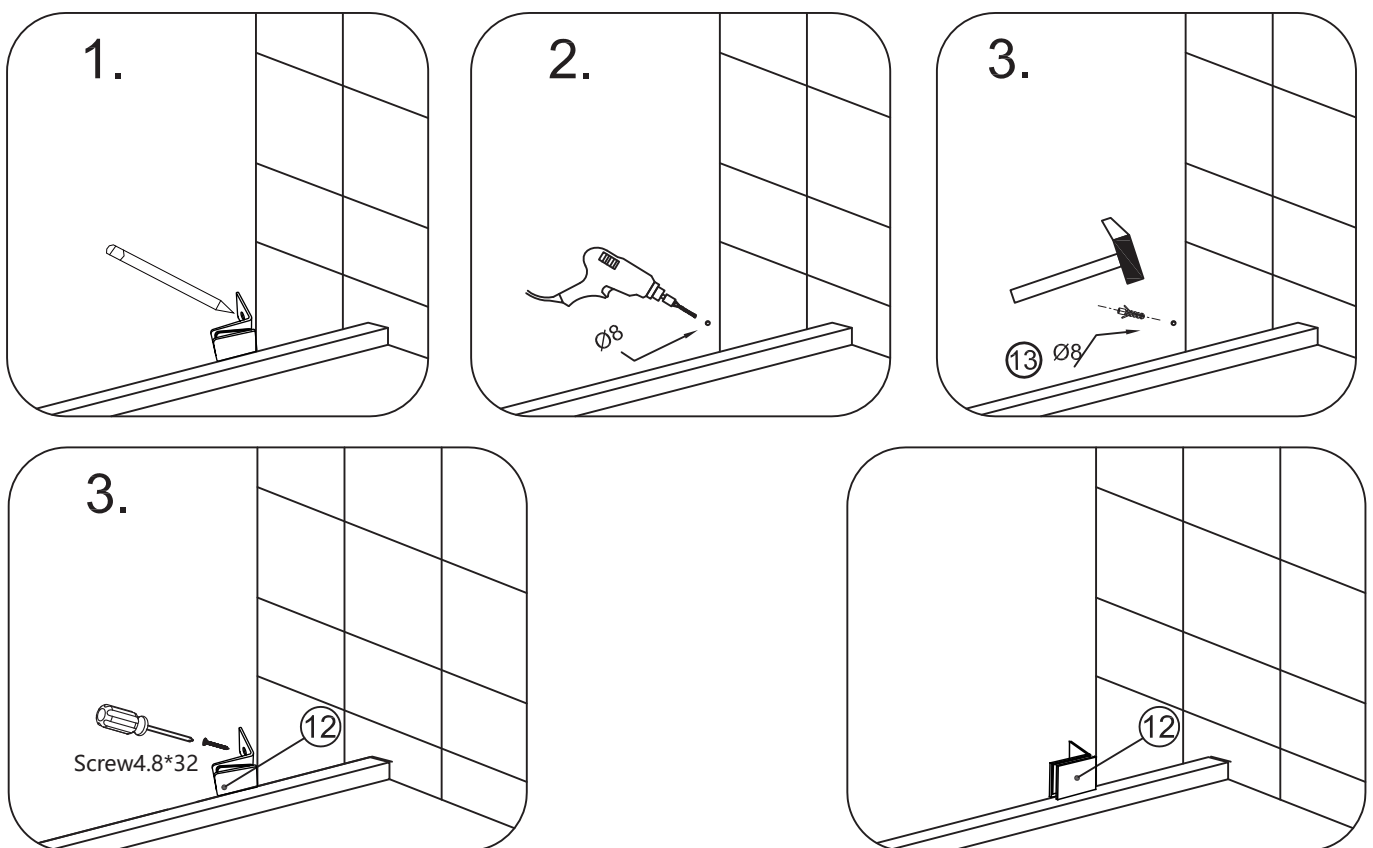


Fig8

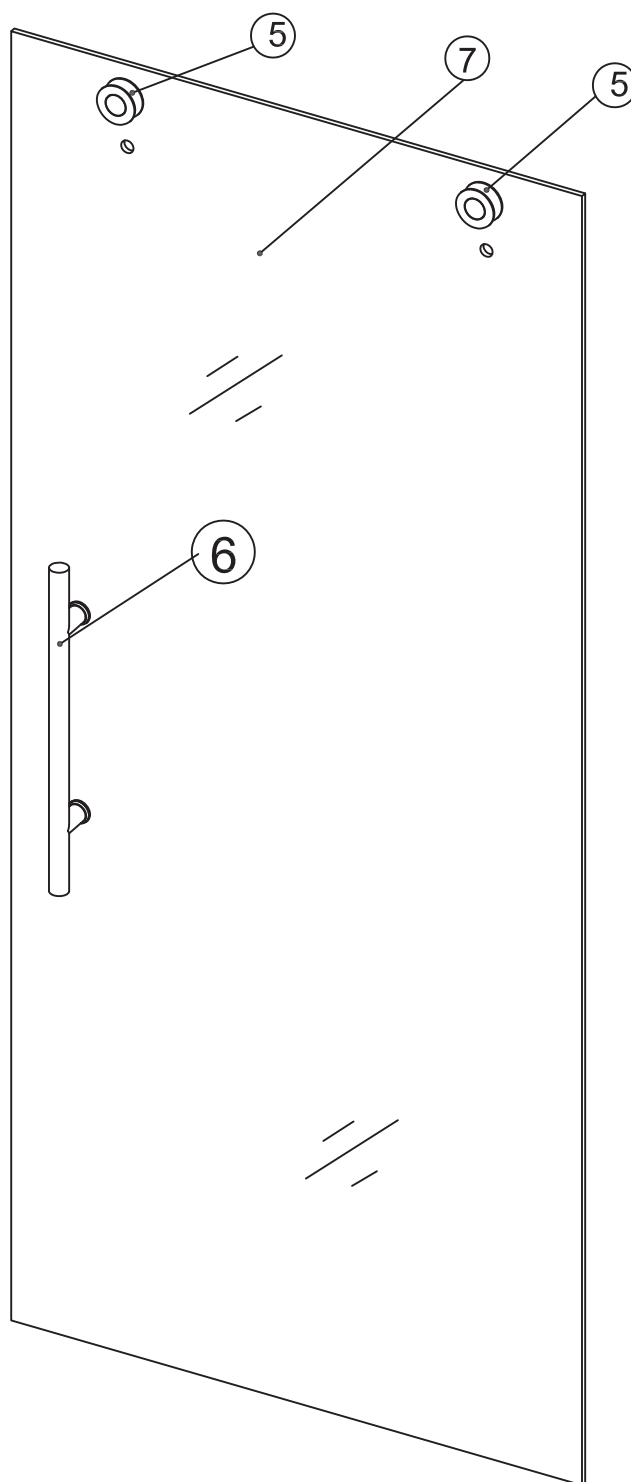
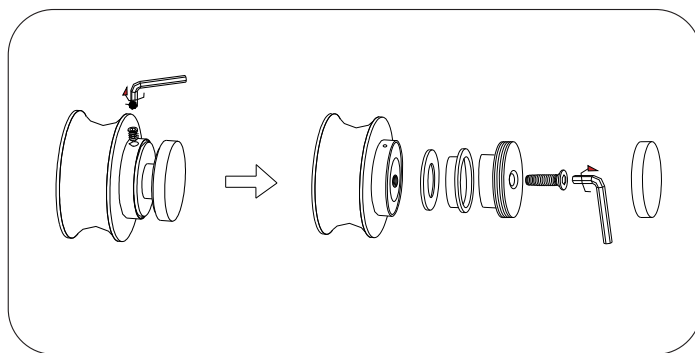
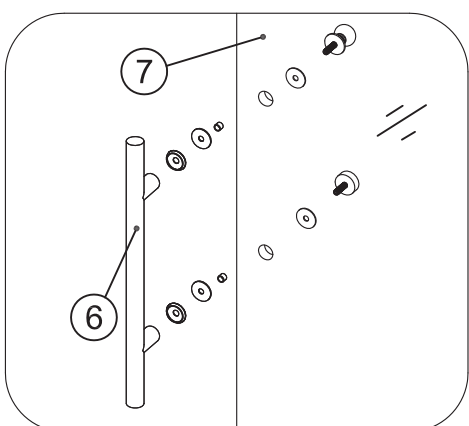
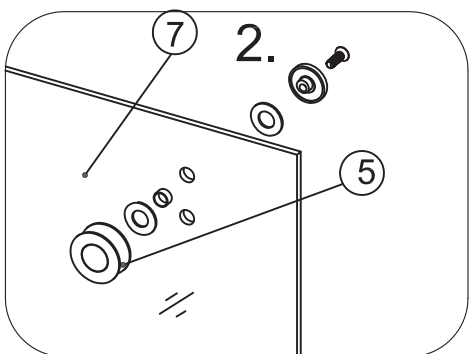
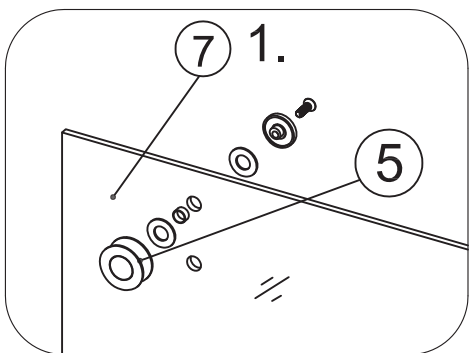


Fig 9

10. Install Door Glass

1. Install Rollers (05)

2. Install Handle (06)

Please see Fig 9 for details

11. Rise the Door Glass(7) to make rollers hang to the top guide rail and place the glass bottom side to the Guide Block (10) slowly. Make sure that the Glass Door (07) will slide in the guide block, outline the drilling position, install the guide block to the shower base/threshold.

Please see Fig 10 for details






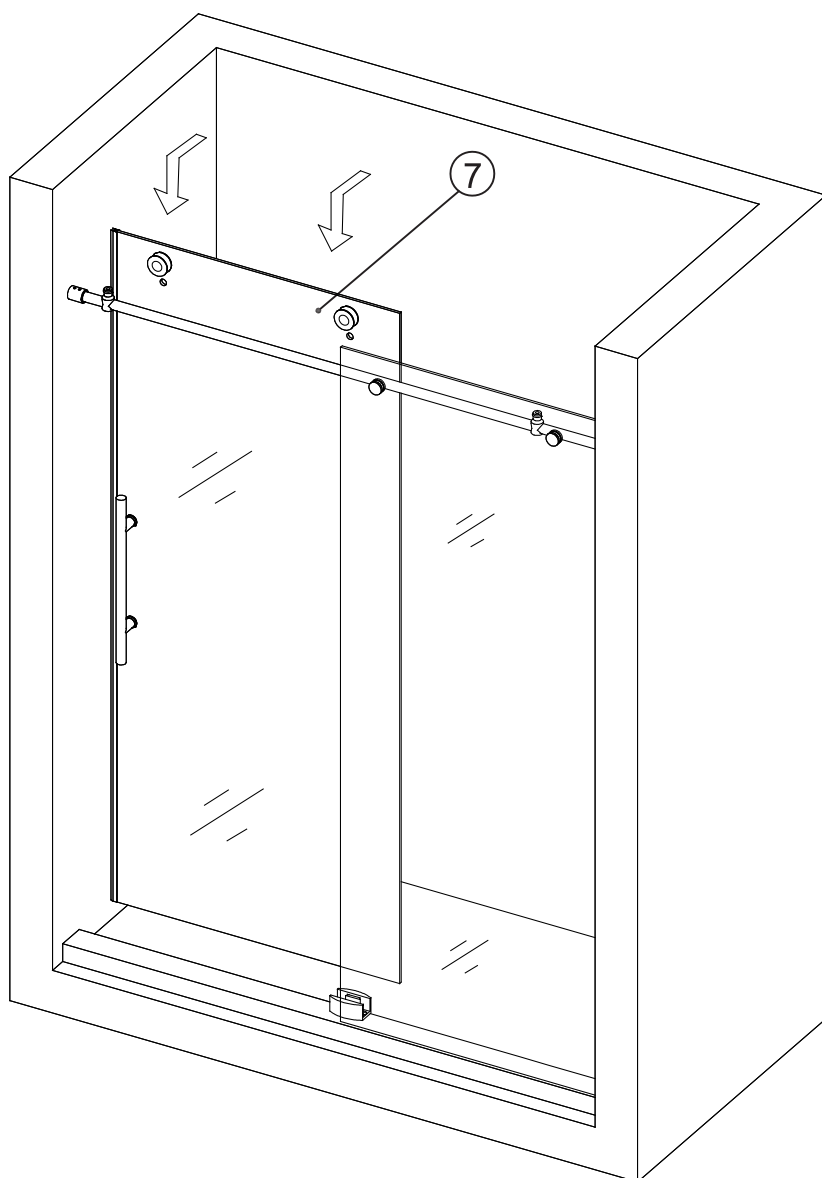


Fig 10

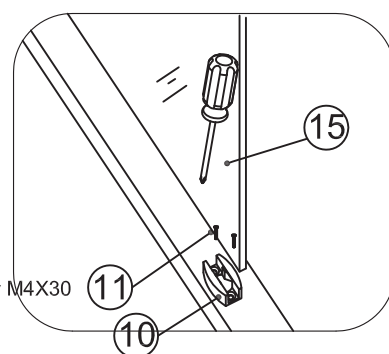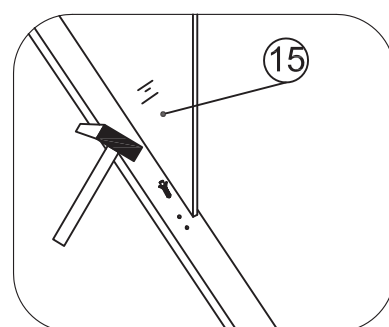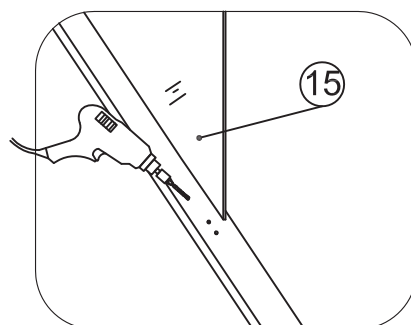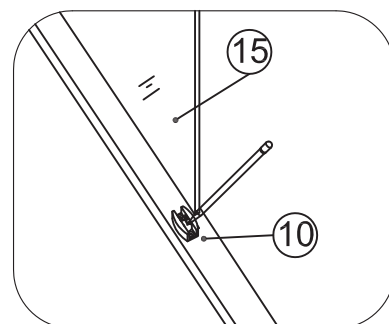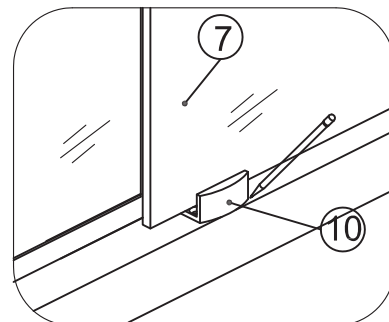

Screw M4X30

12. Install the Anti-Splash Threshold (9) in front of the Glass Door (7), and then put the Cover (20) with slot on head of the Anti-splash threshold (9), so it corresponds to the end of the Stationary Glass and inserts the Stationary Glass into the slot.

Mark down the predrilled holes, drill the holes with drill bit, put the wall anchor (13). Use M4x25 Screw (21) to install the Cover (20) at the drilling position then put silicone sealant to the bottom of the Anti-splash threshold (9), secure it to the floor.

Please see Fig 11 for details

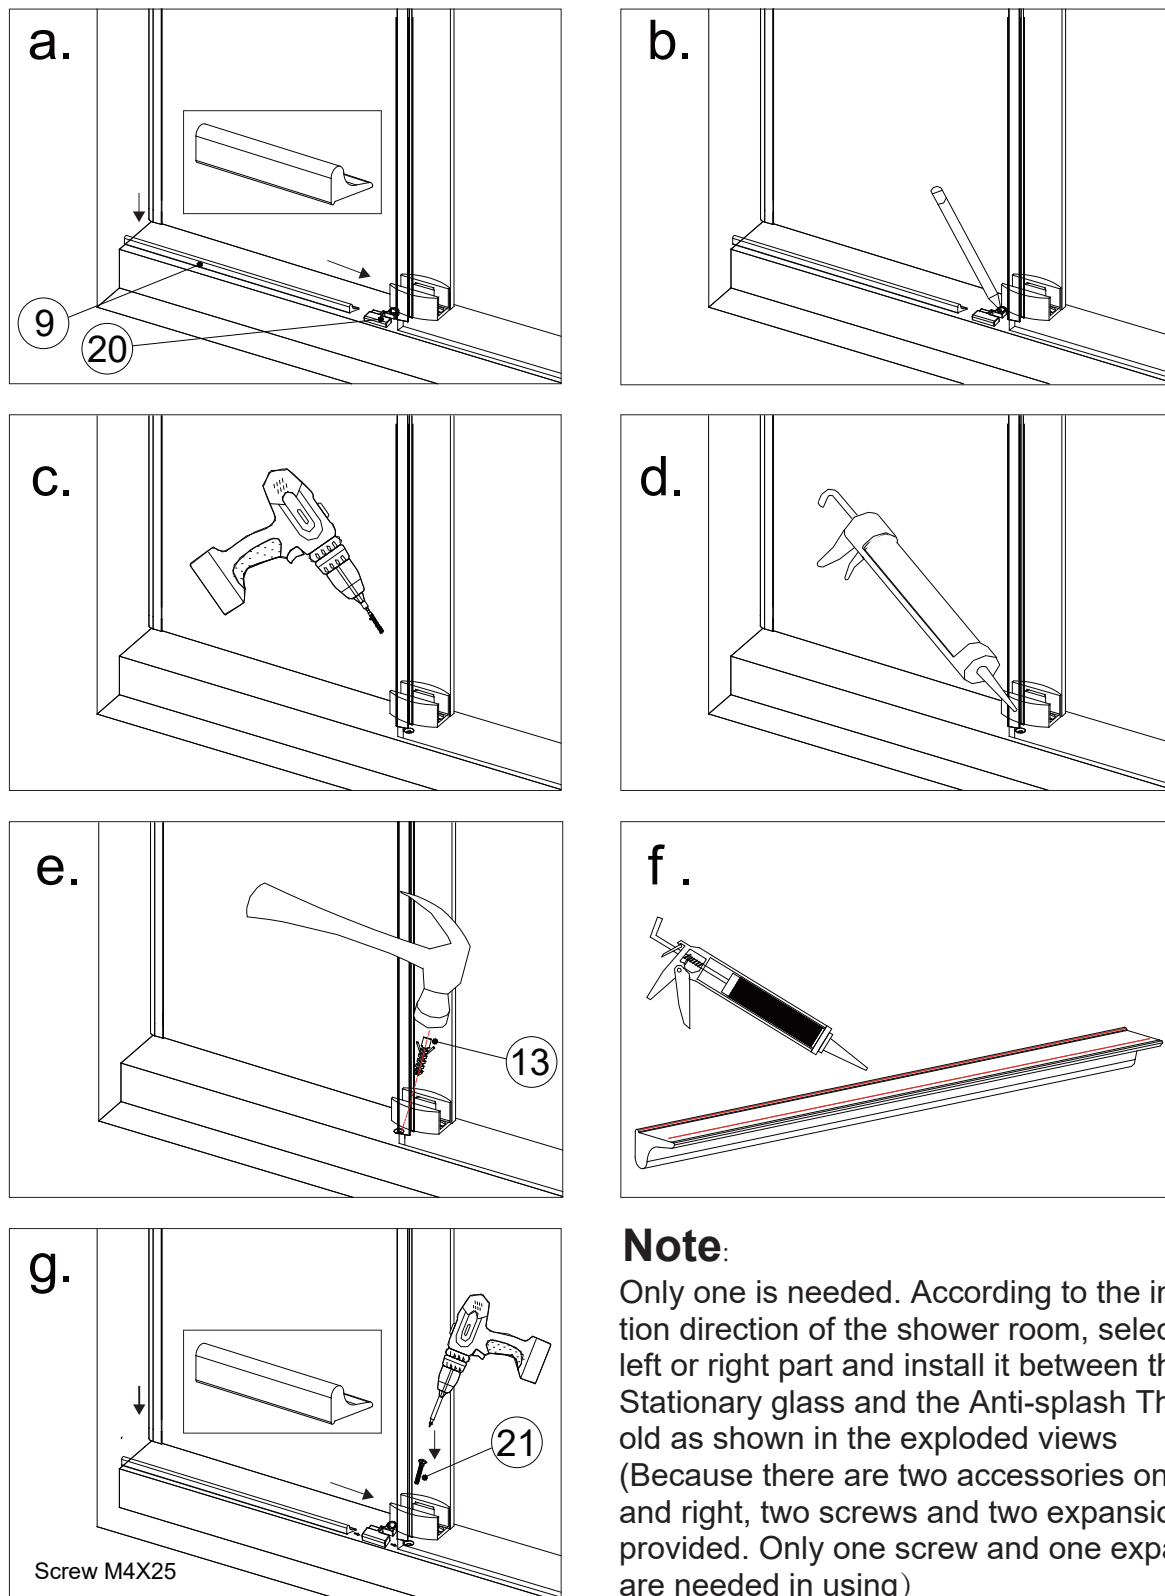


Fig 11

13. Install strips

Please see Fig 12 for details

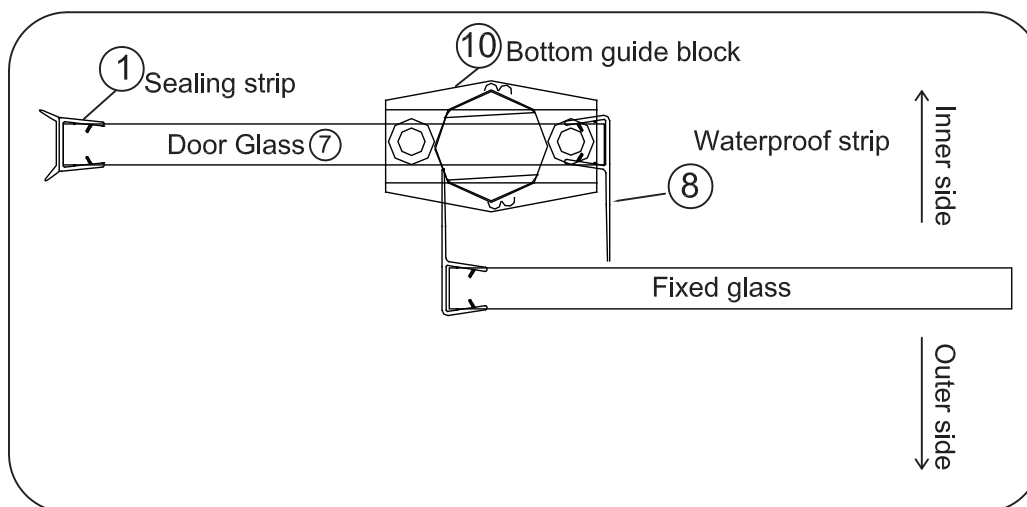


Fig 12

14. Install the safety pin

1. Make sure that the Glass Door with Rollers hangs to the Upper Guide Rail (04), and the glass bottom is inside the Guide Block (10), now adjust glass to vertical and then lock the Safety Pin (18).

Please see Fig 13 for details

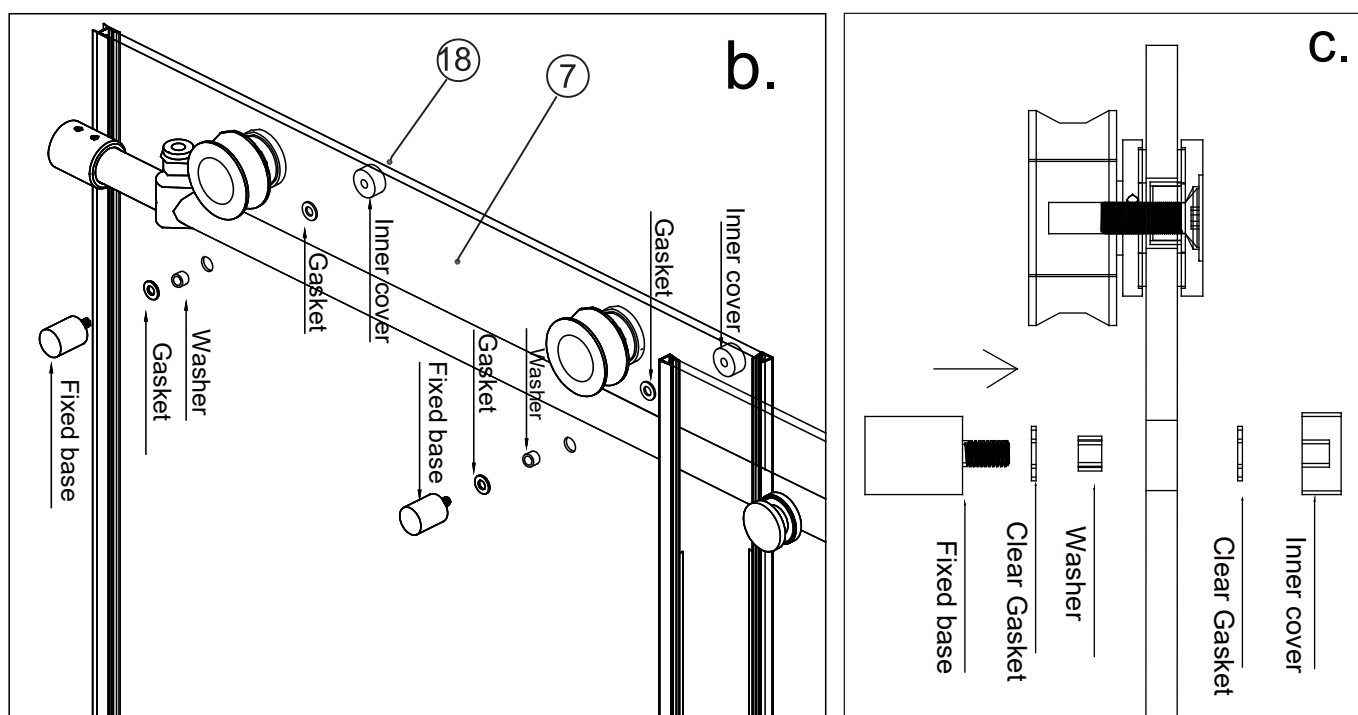


Fig 13

Please make sure that the glass door especially the door corners will not hit the walls when closed and opened

16. Install the anti-splash threshold

Put the Anti-splash Threshold (09) in front of the Door Glass (07) on the shower base/threshold, seal it to the shower base/threshold with silicone.

Please see Fig 15 for details

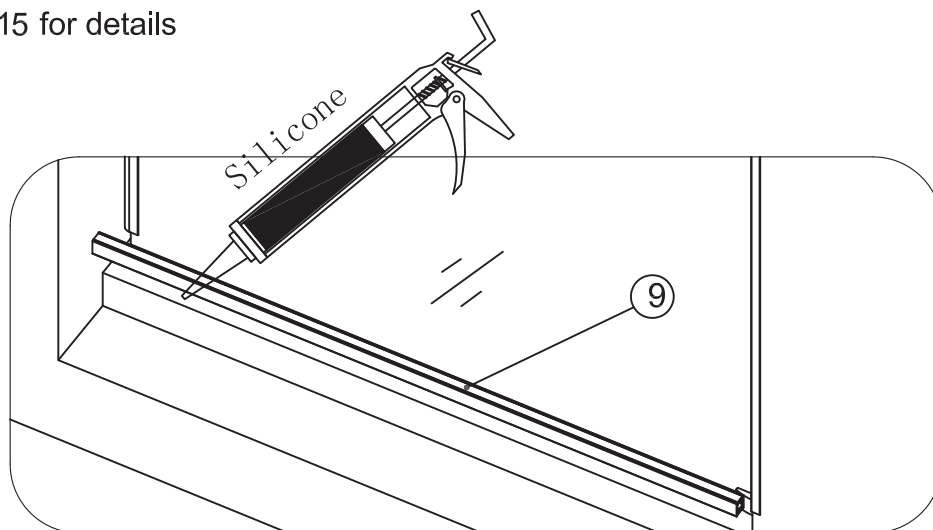


Fig 15

17. Apply the sealant on the seams between the bottom sealing strip and the shower base/threshold; and between the Fixed glass and wall.

Please see Fig 16 for details

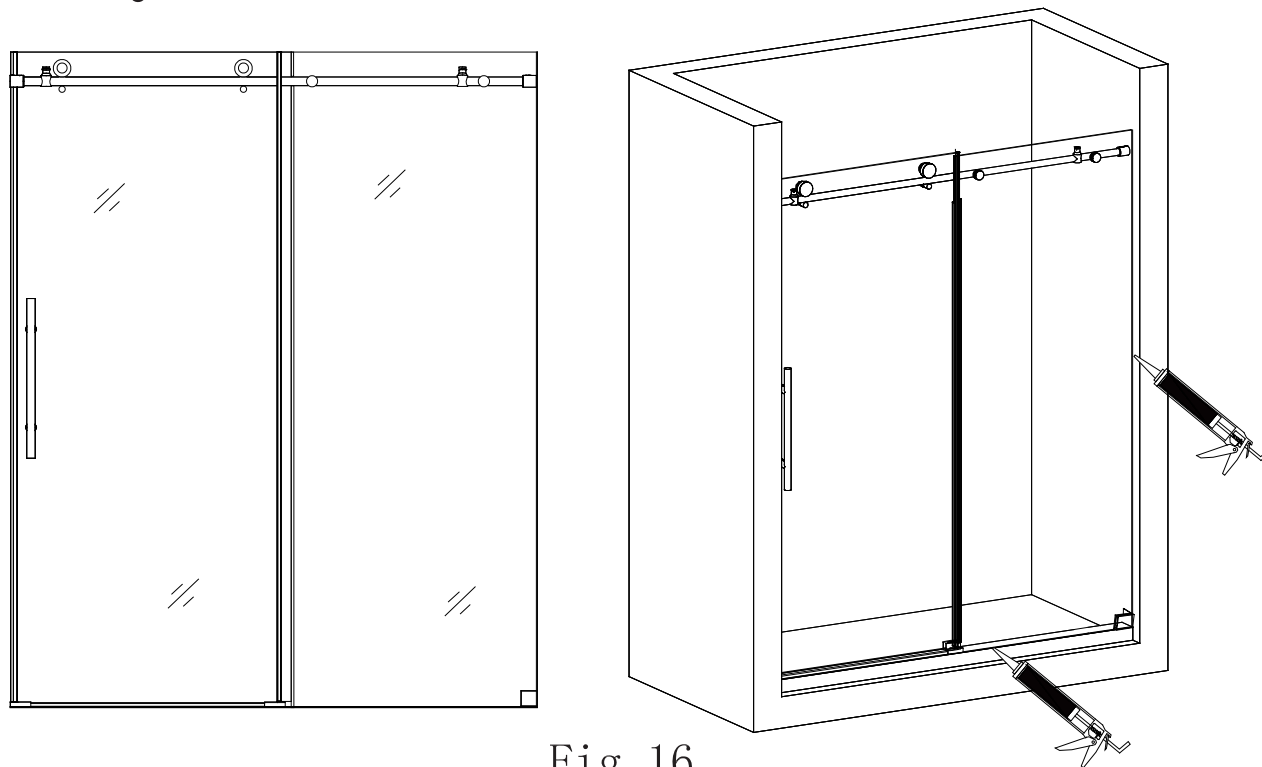


Fig 16

IMPORTANT:

MUST ALLOW SILICONE TO DRY FOR 24 HOURS BEFORE STARTING USING THE SHOWER ENCLOSURE

CARE & MAINTENANCE



The golden rules for care

NOTE: Use warm soapy water and a soft damp cloth to keep the glass clean. Wipe dry with a clean cloth. Glass cleaner can be used if required. Scourers, abrasives and chemical cleaners can damage the glass and pattern, and should not be used.

In hard water areas, insoluble lime salts may be deposited on the glass. If this is allowed to build up it becomes increasingly difficult to remove and looks unsightly. Regular cleaning will minimize this effect.

- ☒ Do not attempt to cut the glass.
 - ☒ Do not strike the glass with hard or pointed items.
 - ☒ Regularly check moving parts such as rollers and hinges to ensure they are secure and adjusted correctly. Tighten and adjust where required. Also check all sealed joints to ensure seal has not deteriorated. Re-seal if required.
-

WARRANTY

LIMITED MANUFACTURER'S WARRANTY

- All parts and finishes of GETPRO products are warranted to the original consumer purchaser to be free from defects in material and workmanship for a period of two to five years [depending on the product and model: please check the product listing or email us at service@getprohome.com if you are unsure after the date of original retail purchase. Proof of the original purchase is required to obtain a remedy under this limited warranty.
- GETPRO recommends using a certified professional for all installation and repair of kitchen and bathroom fixtures.
- GETPRO will replace, free of charge, during the warranty period any part or finish that proves defective in material and/ or workmanship under normal installation, use and service. Replacement parts may be obtained by emailing us at service@getprohome.com
- This warranty is extensive in that it covers replacement of all defective parts and even finish, but these are the only two things that are covered. Labor charges and/or damage incurred in installation, repair, or replacement as well as any other kind of loss or damages are excluded.
- Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to GETPRO for all warranty claims. This is the exclusive warranty by GETPRO, which does not make any other warranty of any kind including the implied warranty of Merchant ability. This warranty excludes all industrial, commercial and business usage whose purchasers are hereby extended a one-year limited warranty from the date at purchase, with all other terms of this warranty applying except the duration of the warranty.

NO ATTEMPT TO ALTER, MODIFY, OR AMEND THIS WARRANTY SHALL BE EFFECTIVE UNLESS AUTHORIZED IN WRITING BY AN OFFICER OF GETPRO

 service@getprohome.com

WHAT IS NOT COVERED UNDER THIS LIMITED WARRANTY

- Normal wear and tear, spills of food, liquid, grease accumulations or cosmetic damage.
- Damage due to accidents, misuse, physical force improper installation or operation, mishandling, neglect, fire, heat, water, humidity, liquids, insect infestation, or other intrusion.
- Products that have been repaired, altered or modified by anyone other than GETPRO or its authorized service representative.
- Damage caused by use of non-GETPRO accessories or misapplication Products whose serial numbers have been removed altered or rendered illegible.
- Products purchased, shipped from, used or serviced outside the United States. Canada and Mexico.
- Damage caused by acts of nature such as, but not limited to, lightning damage.
- Products returned without valid proof of purchase.
- Consumable parts such as light bulbs, metal, and charcoal filters.
- Any party's willful misconduct, negligence, misuse, abuse, accidents, neglect, improper operation, failure to maintain, improper or negligent installation, tampering, failure to follow operating instructions, mishandling, unauthorized service (including self-performed "fixing" or exploration of the product's internal workings).
- Use of corrosive or abrasive cleaning products.
- Cosmetic damages including scratches, dents, chips and other damage, unless such damage results from defects in materials and workmanship and is reported to GETPRO within 3 calendar days of delivery.
- Use of the Product in anything other than its normal customary and intended manner.
- A failure to comply with any applicable state, local city or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations.
- In no event shall GETPRO have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures or objects around the product.

HOME SERVICES



INSTALLATION VIDEO

Missing Part or Defective?

Please Contact the Customer Service Team

✉ service@getprohome.com

☎ 626 679 3588