


# 27 SLOT FILE CABINET

## INSTALLATION INSTRUCTIONS AND PROCEDURES

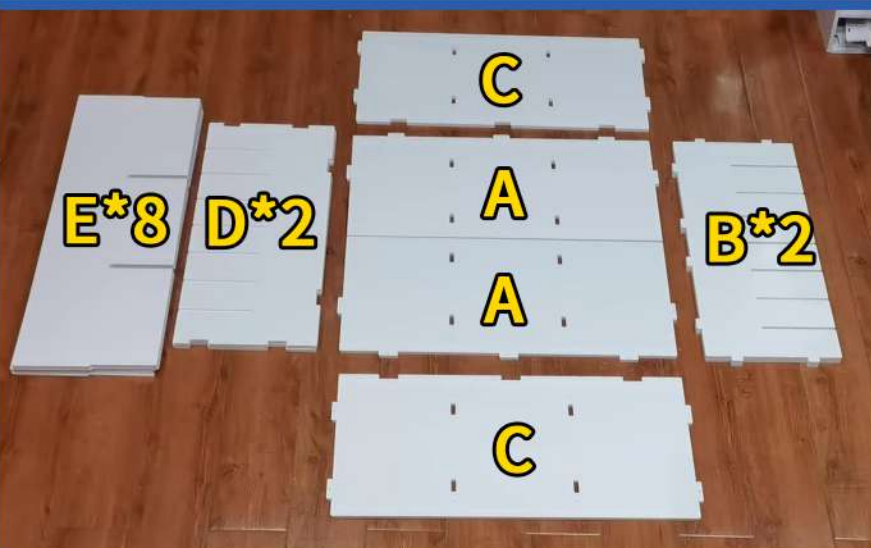

1 TWO A-PLATES

2 TWO B-PLATES

3 TWO C-PLATES

4 TWO D-PLATES

5 E-PLATE EIGHT



1.TWO PLATES A MERGE INTO ONE MAIN BODY AND INSTALL A PIECE OF BOARD B ON IT



2.INSTALL ANOTHER BOARD B



3.INSTALL A C BOARD UNDER THE MAIN BODY



4.INSTALL A C BOARD ON THE MAIN BODY



5.FLIP 90 DEGREES OVER THE MAIN BODY AND INSTALL A D BOARD



6.FIND THE HOLES ON THE LEFT AND RIGHT SIDES OF THE D BOARD AND SCREW ON THE FIXED



7.FLIP 180 DEGREES AND REPEAT STEPS 4 AND 5



8.LAY THE PRODUCT FLAT AND INSTALL SEVEN D-PLATES



9.PUT THE PRODUCT UPRIGHT AND PASTE ANTI-SKID PAD AND THEN FIND THE FOUR HOLES ON THE SCREW FIXED