
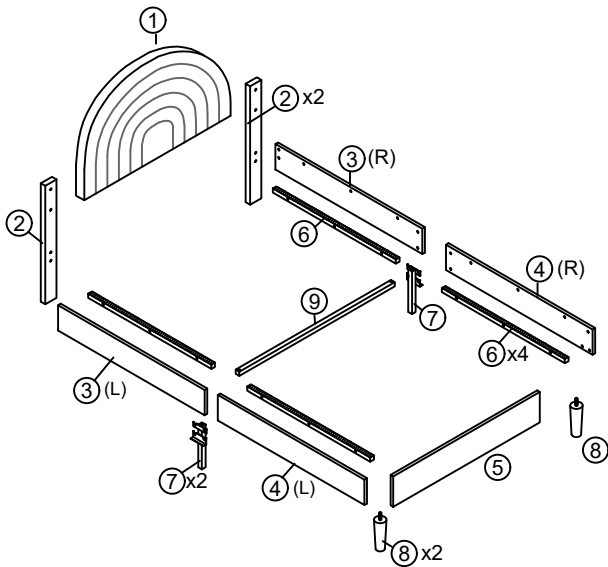



# ASSEMBLY INSTRUCTION

## Upholstered Bed :3ft

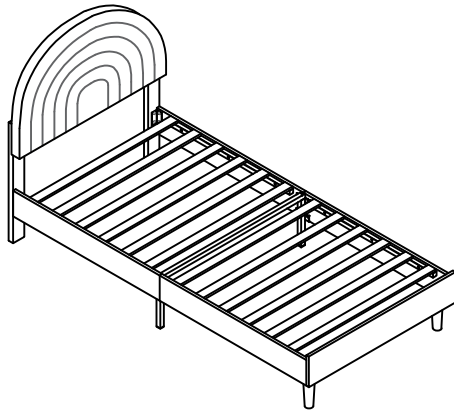

### TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish

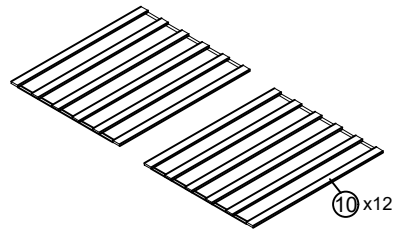




Parts List			Hardware List		
NO	ITEM	QTY	NO	ITEM	QTY
1	Head board	1	A	Allen Key 	1
2	Head board legs	2	B	Bolts (M8x45mm) 	4
3	Siderails	2	D	Bolts (M8x18mm) 	28
4	Siderails	2	E	Bolts (M8x40mm) 	14
5	Foot board	1	F	"7" Connector 	2
6	Side rails support bar	4	G	Metal Corner 	2
7	Side rails support legs	2	H	Little "7" Connector 	2
8	Bed legs	2	I	Screw nut 	2
9	Cross bar	1			
10	Slats	12			

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

## Step 1 x2

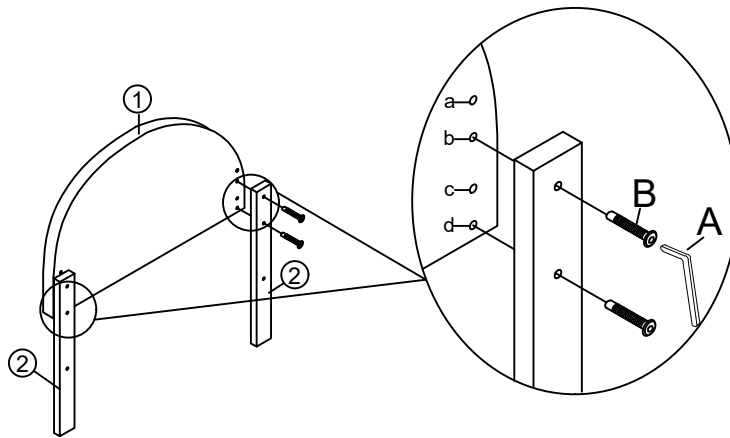
Fix the side headboard ② to the headboard ① with Bolts B by using Allen key A, you can chose the hole a and c, or b and d.





A Allen Key	B Bolts x 4
	 M8X45mm

## Step 2 x2

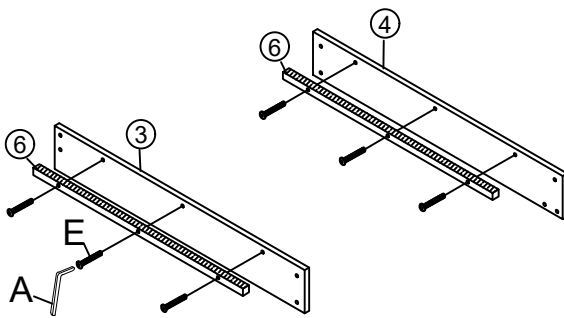
Connect to Siderail support bar ⑥ Siderails ③ and ④ with Bolts E by using Allen key A.





Allen Key	E Bolts x 12
	 M8X40mm

## Step 3 x2

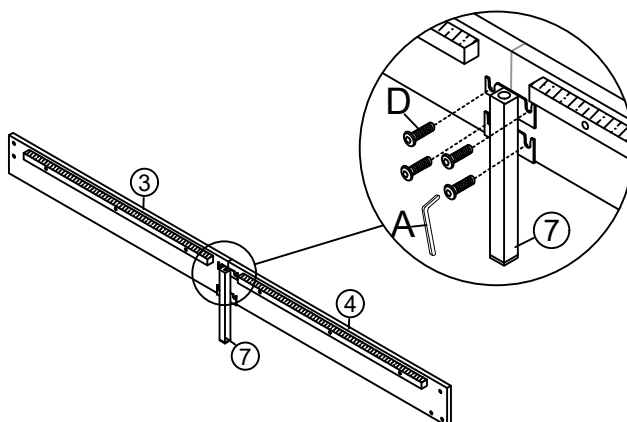
Fix the side rails support leg ⑦ to the assembled side rail with Bolts D by using Allen key A.



Allen Key	D Bolts x 8
	 M8X18mm

## Step 4 x2


Fix the assembled side rail to the Headboard legs ② with Bolts D and "7" Connector F by using Allen key A.

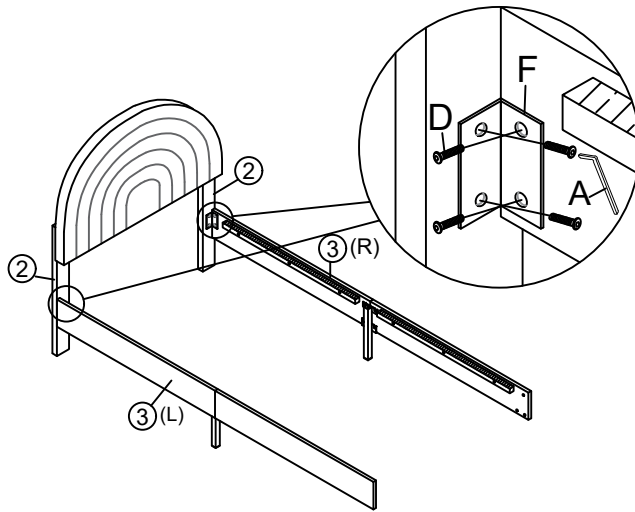

Allen Key	D Bolts x 8	F "7" Connectorx 2
	 M8X18mm	

## Step 5 x2


Fix the Siderails to the footboard ⑤ with Metal corner G, Little "7"Connector H and Bolt D by using Allen key A.

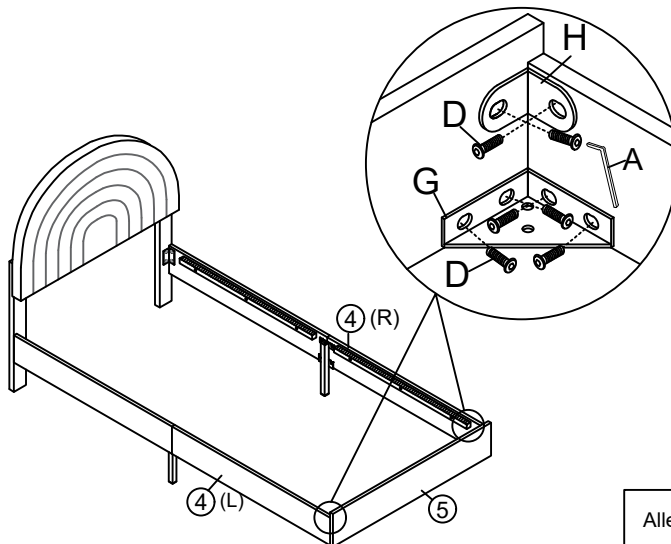

Allen Key	D Bolts x 12	H Little "7"Connectorx 2	G Metal Cornerx 2
	 M8X18mm		

## Step 6x2


Fix the legs ⑧ to the Metal corner G with Screw nut I. Please choose to install the bed legs near the inner hole.

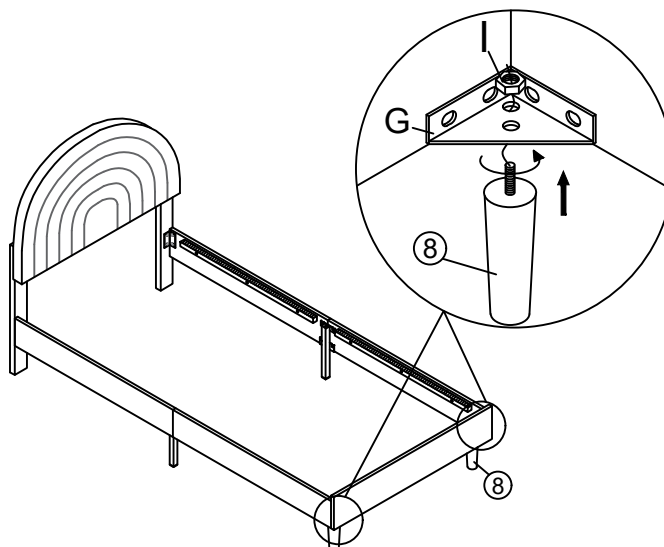



I Screw nut x 2
 M8

## Step 7

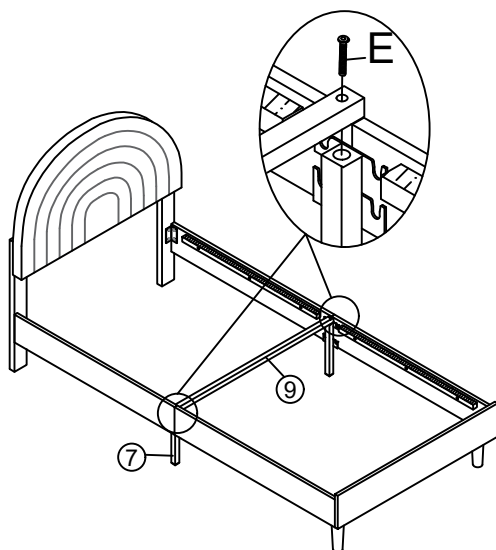Fix the cross bar⑨to the side rails support legs⑦ with Bolts E by using Allen key A



Allen Key	E Bolts x 2
	 M8X40mm

## Step 8

Fix the slats⑩to the side support bar⑥, then assemble is finished, now please tighten all hardware and enjoy the bed.

