

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

-   • Not for commercial use. For residential use only.
-   • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-   • Do not put hot items directly on furniture surface.
-   • Do not clean furniture with harsh cleansers or polish.
-   • Do not place furniture under direct sunlight.
-   • Do not place furniture near heating or cooling vents.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • Do not place furniture outside . For indoor use only.
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Children should not climb or jump on the furniture.
-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

KING BED


Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%. If you encounter these issues, such as if the holes cannot be aligned or some parts cannot be installed, please check if the screws are used correctly and adjust the tightness of the screws.



WARNING !

STRANGGULATION HAZARD

NEVER place bed near windows where cords from blinds or drapes may strangle a child.
NEVER suspend strings over bed.
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.
ALWAYS follow assembly instructions.
Not intended for children under the age of six. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child.
NEVER use bed for child under the age of six.
The mattress must be appropriately sized for the bed. If the mattress is undersized dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate






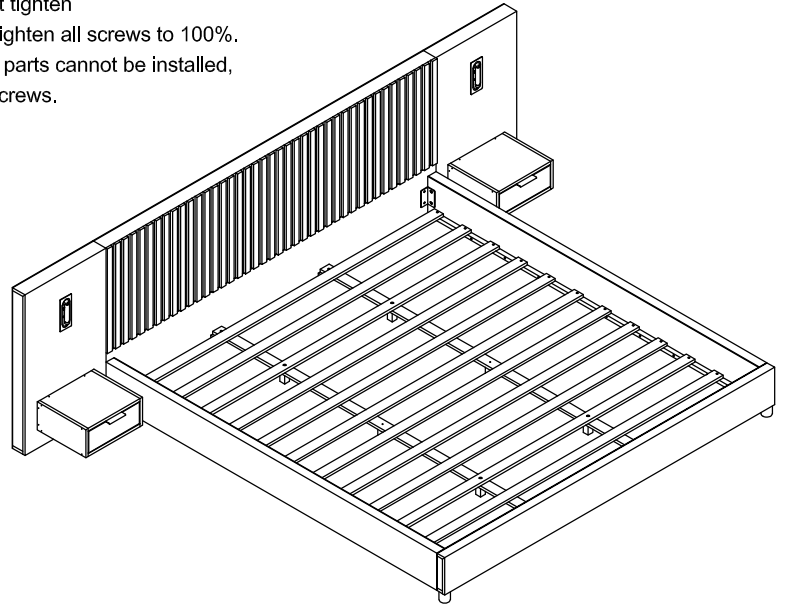


CAUTION: This King Bed is NOT a TOY.




Keep your child / children at bay in the process of assembly.

For turning the King Bed and to prevent damage to the King Bed 02 persons may be needed to execute this action.

PART LIST (N769P457039/Hardware in this SKU)

A	Left Headboard 	1pc	H	Side cabinet 1 	2pcs
B	Right Headboard 	1pc	I	Side cabinet 2 	2pcs
C	Middle Headboard 	1pc	O	Bottom drawers 	2pcs
D	Top panel 	1pc	S	Side rail 	2pcs
F	Bottom panel 	1pc			

PART LIST (N769P457040)


E	Bottom Headboard 	1pc	P	Wood bar 	4pcs
G	Top & bottom cabinet 	4pcs	Q	Legs 	2pcs
J	Back cabinet 	2pcs	R	Support leg 	6pcs
K	Front drawers 	2pcs	T	Footboard 	1pc
L	Back drawers 	2pcs	U	Slats 1 	2pcs
M	Left drawers 	2pcs	V	Slats 2 	10pcs
N	Right drawers 	2pcs	W	Support slats 	2pcs

Hardware (Each of the above hardware including extra 1 pc)

Label	Picture	Description	Q.ty
①		Allen wrench	1
②		Three in one bolts	8 + 1
③		Three in one locks	8 + 1
④		Bolt ØM6 x 70mm	8 + 1
⑤		Bolt ØM6 x 50mm	4 + 1
⑥		Bolt ØM6 x 35mm	22 + 1
⑦		Bolt ØM6 x 20mm	16 + 1
⑧		Vis Ø4 x 50mm	40 + 1
⑨		Vis Ø4 x 30mm	28 + 1
⑩		Vis Ø3 x 12mm	4 + 1
⑪		Vis Ø4 x 15mm	38 + 1
⑫		Cross Barrel Nut Plastic	40 + 1
⑬		Handle	2
⑭		Pate L	4
⑮		LED	1

Assembly Preparation

Before Beginning Assembly

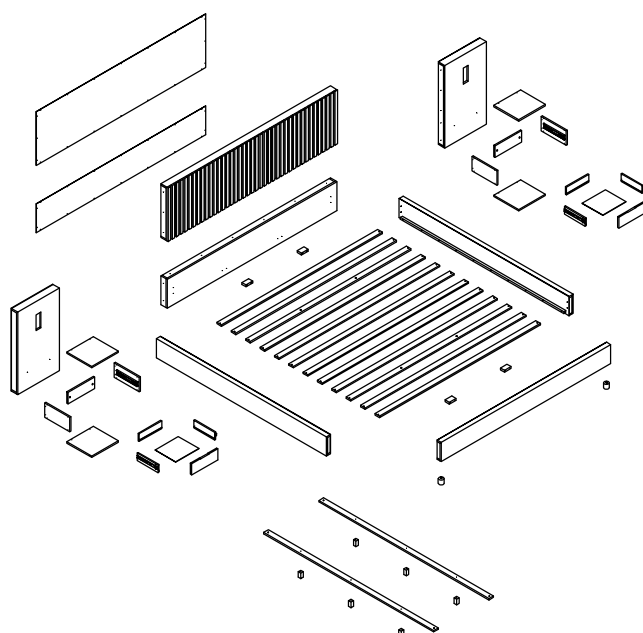

	*8+1		*22+1		*4+1
	*8+1		*16+1		*38+1
	*8+1		*40+1		*40+1
	*4+1		*28+1		



- Read instruction, cover to cover.



- Have 2 adults on hand for assembly.



- Do not assemble on flooring or carpet.




- Assemble on a clean non-marring surface (packing foam).



- Save all packaging until finished.


Assembly Preparation

Overview

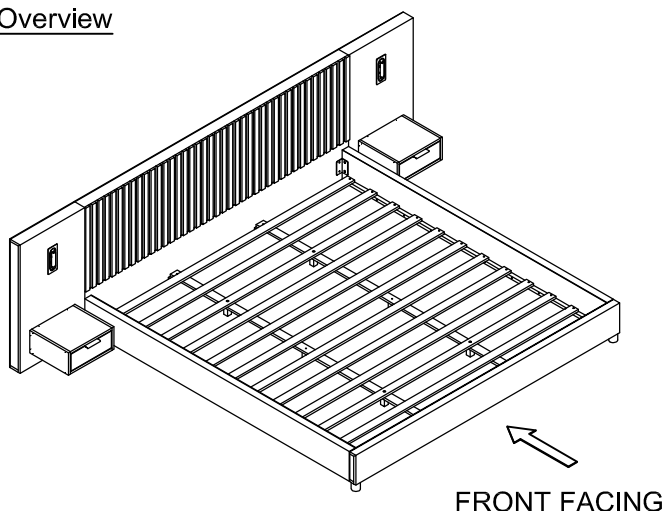


This King Bed has multiple parts and may require up to 1 hour to assemble.
To give you an overview of the King Bed parts, the above picture is to help you put the various parts into perspective.
Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1:

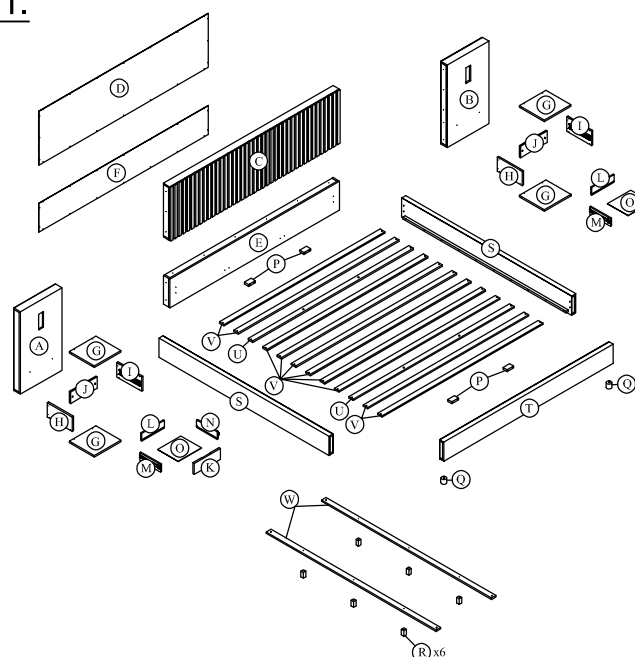


Unpack and place all part on a clean, non-marring surface .

Step 2:

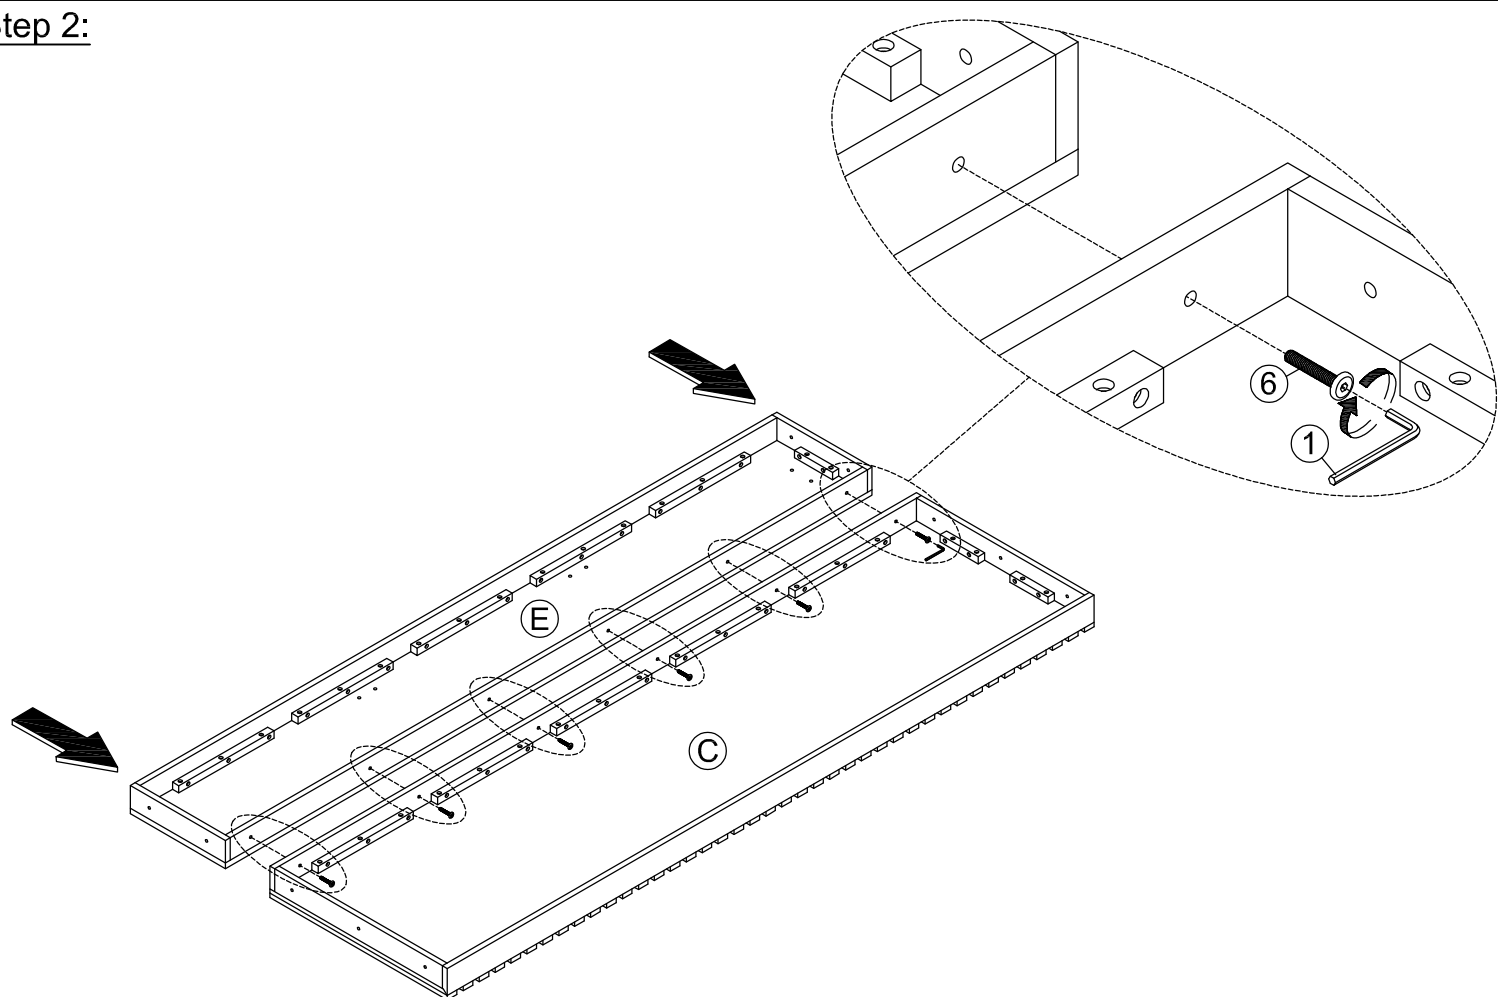


-Attach bottom headboard (E) to middle headboard (C) using Bolt $\varnothing$ M6 x 35mm (6) , Allen wrench (1)

Step 3:

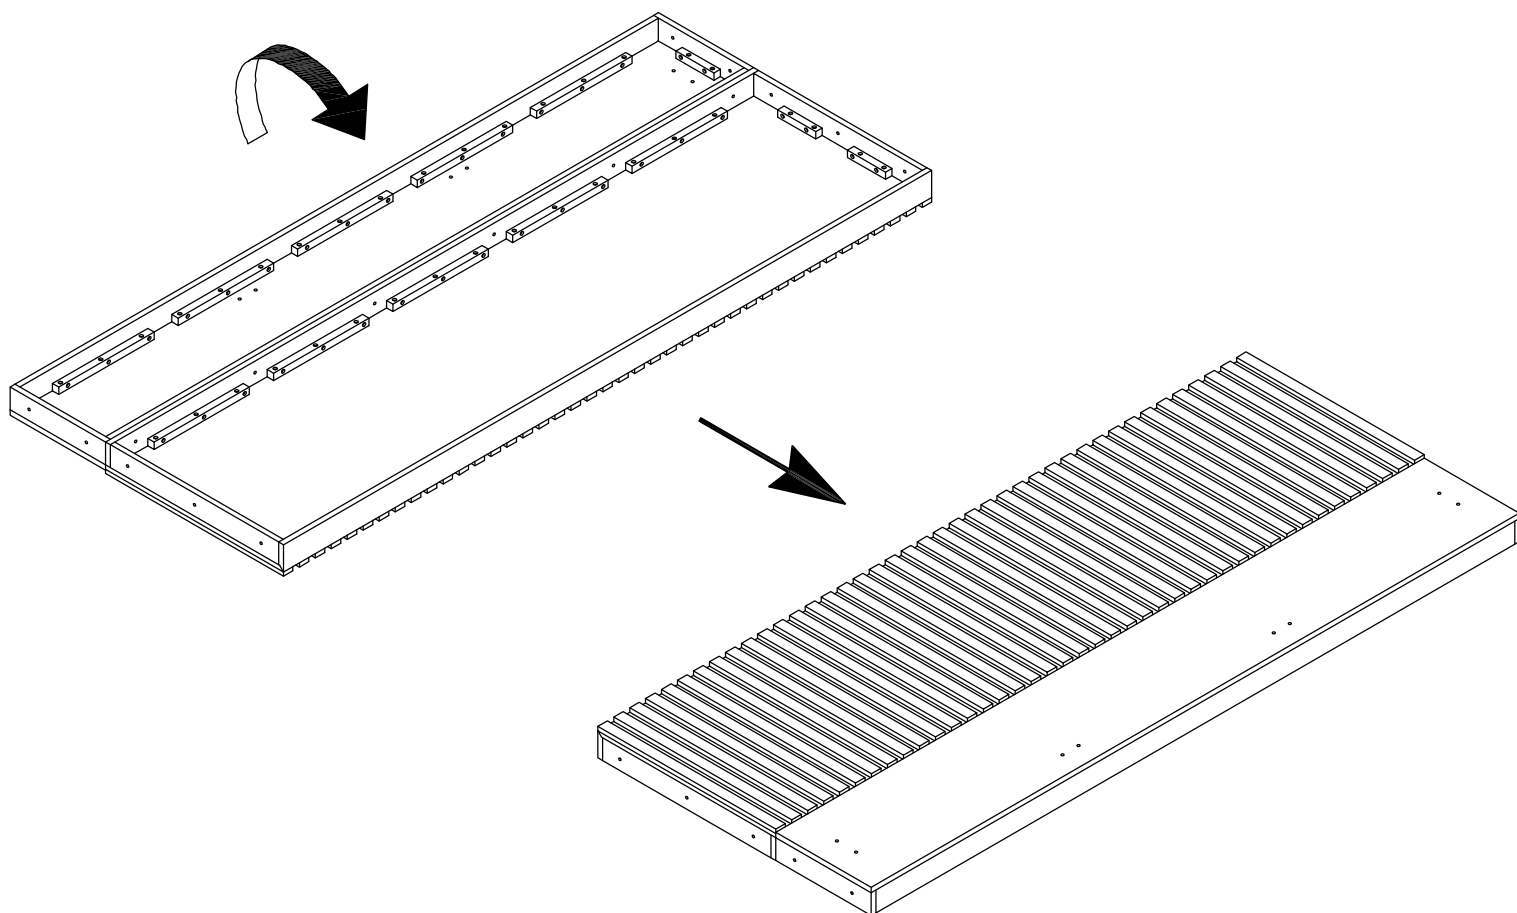

-Flip bottom headboard (E) & middle headboard (C) headboard over as shown in the illustration.


Step 4:

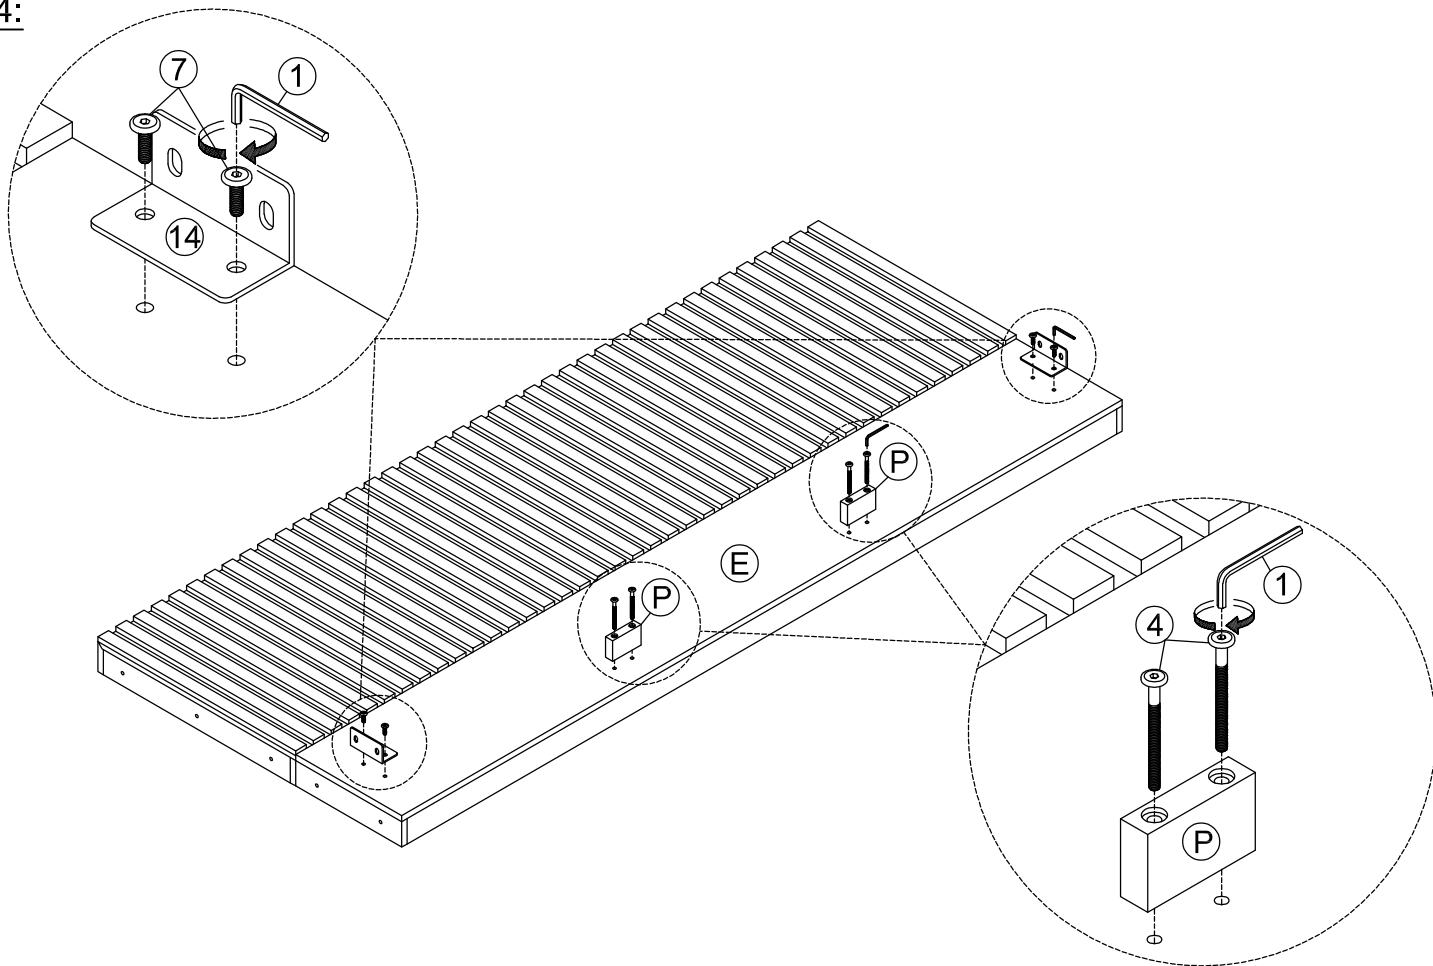

-Attach wood bar (P) to bottom headboard (E) using Bolt ØM6 x 70mm (4) , Allen wrench (1)


-Attach Pate L (14) to bottom headboard (E) using Bolt ØM6 x 20mm (7) , Allen wrench (1)

Step 5:

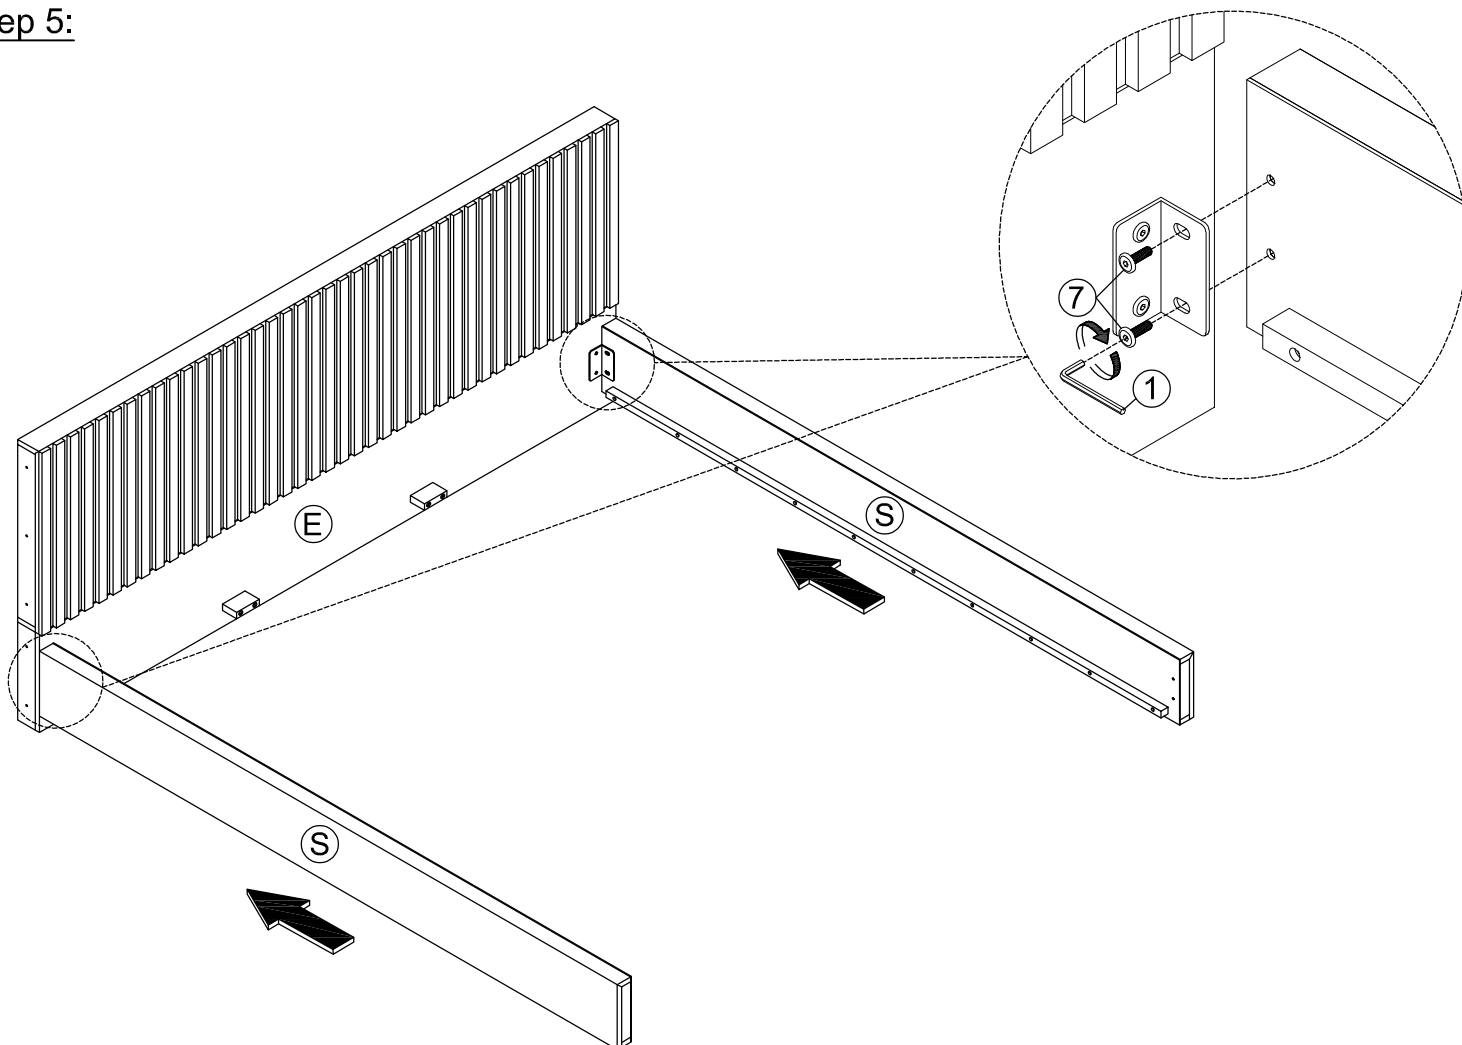


-Attach side rail (S) to bottom headboard (E) using Bolt ØM6 x 20mm (7) , Allen wrench (1)

Step 6:

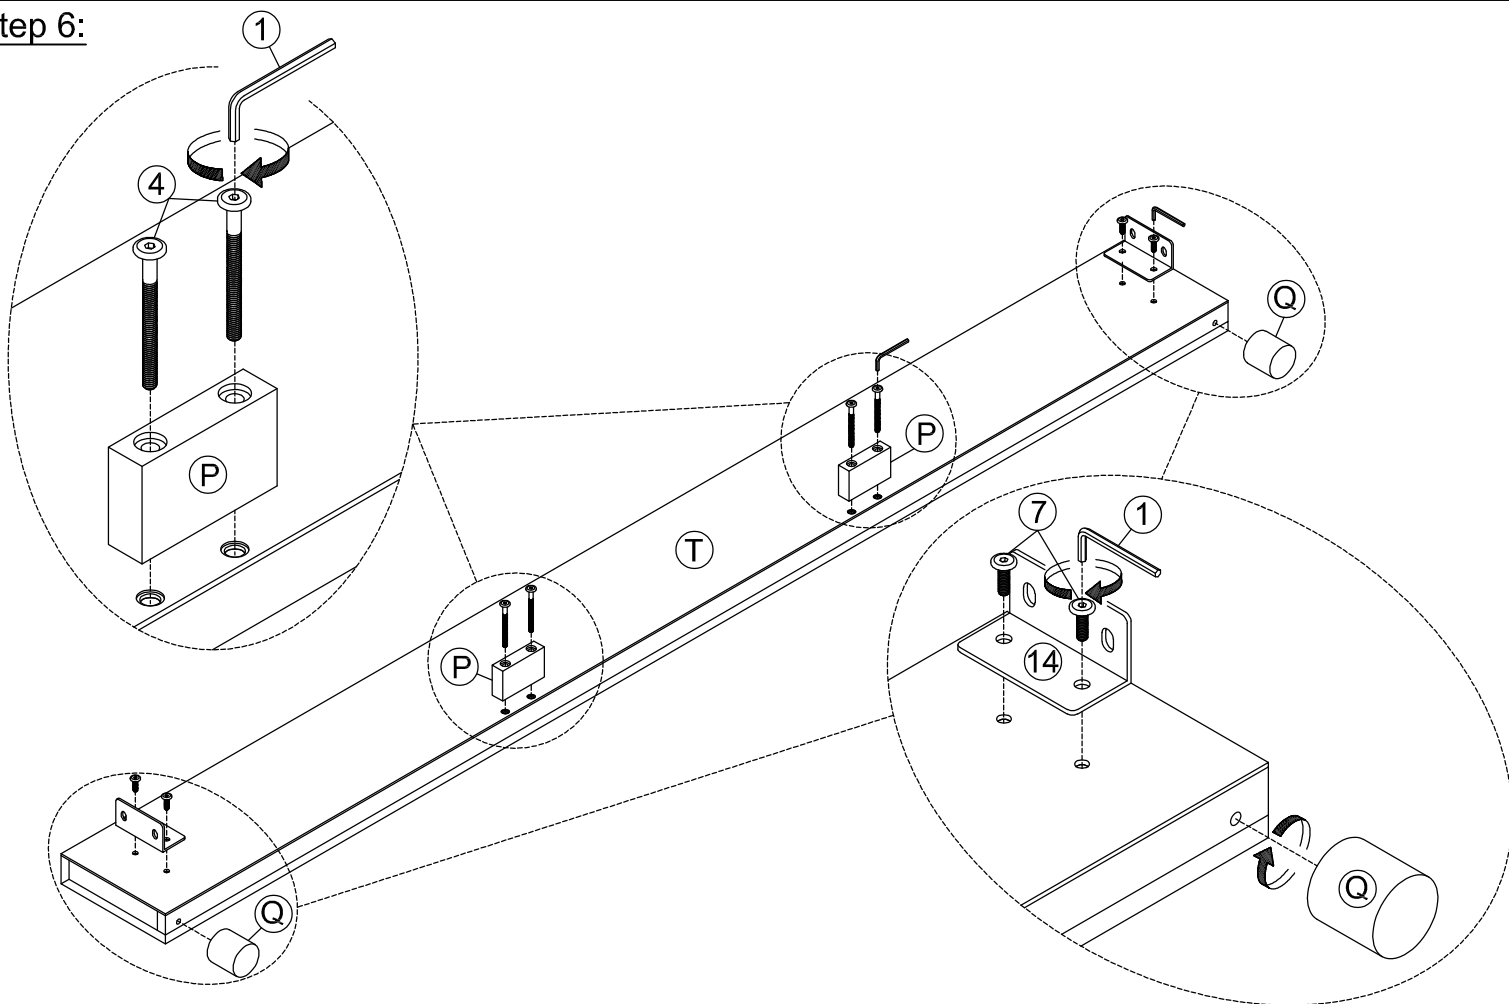


- Attach wood bar (P) to the footboard (T) using Bolt $\varnothing$ M6 x 70mm (4) , Allen wrench (1)
- Attach Plate L (14) to the footboard (T) using Bolt $\varnothing$ M6 x 20mm (7) , Allen wrench (1)
- Attach legs (Q) to the footboard (T)

Step 7:

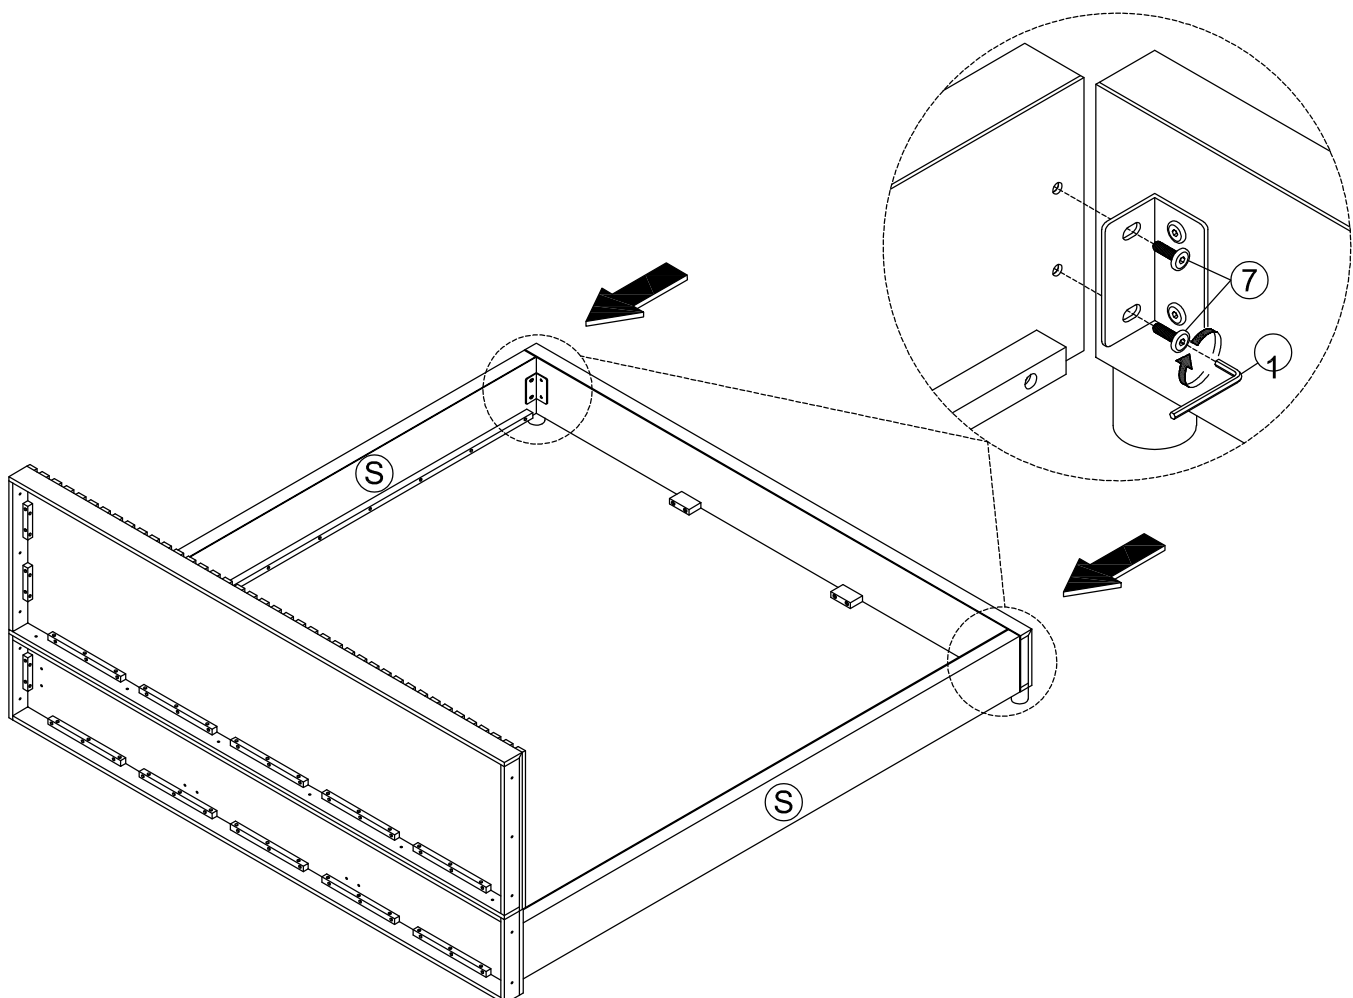

- Attach side rail (S) to bottom headboard (E) using Bolt $\varnothing$ M6 x 20mm (7) , Allen wrench (1)


Step 8:

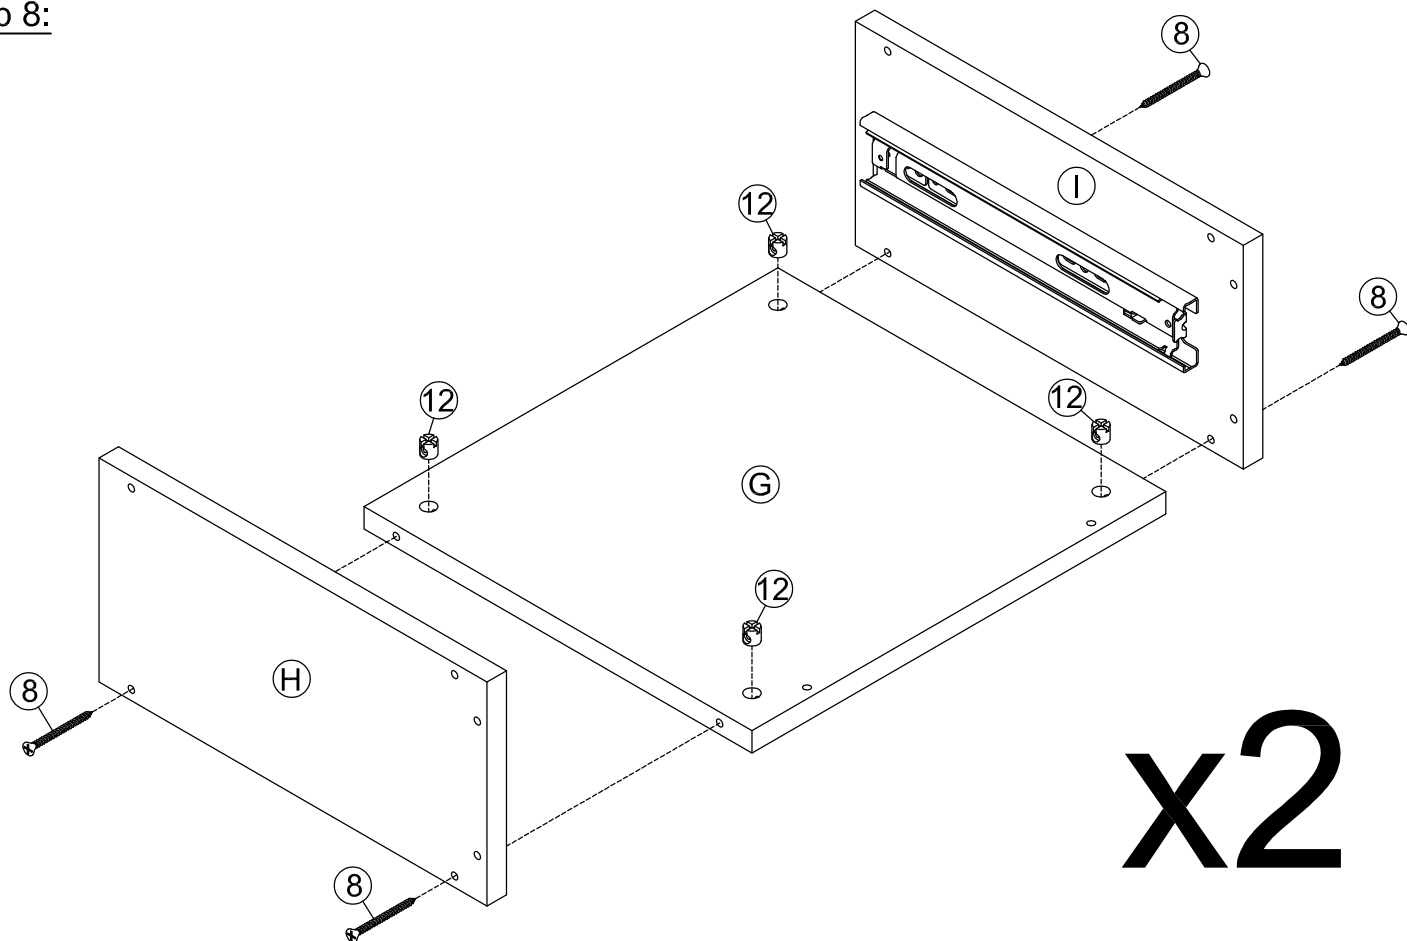

x2

-Attach side cabinet 1 (H) & side cabinet 2 (I) to top & bottom cabinet (G) using Vis Ø4 x 50mm (8), Cross Barrel Nut Plastic (12)


Step 9:

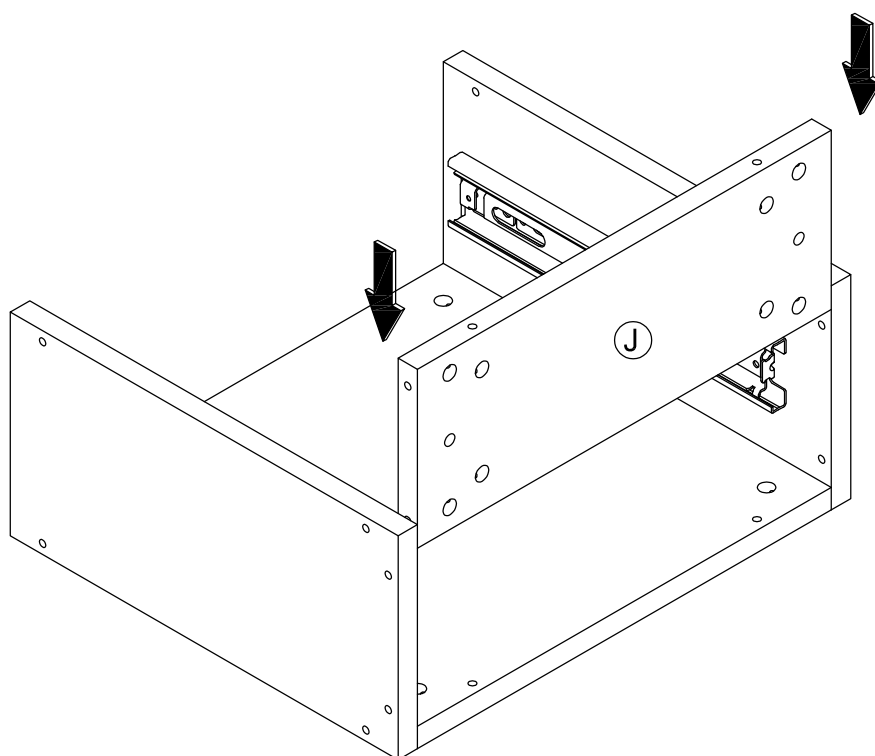

x2


-Attach side cabinet 1 (H) & side cabinet 2 (I) to back cabinet (J)

Step 10:

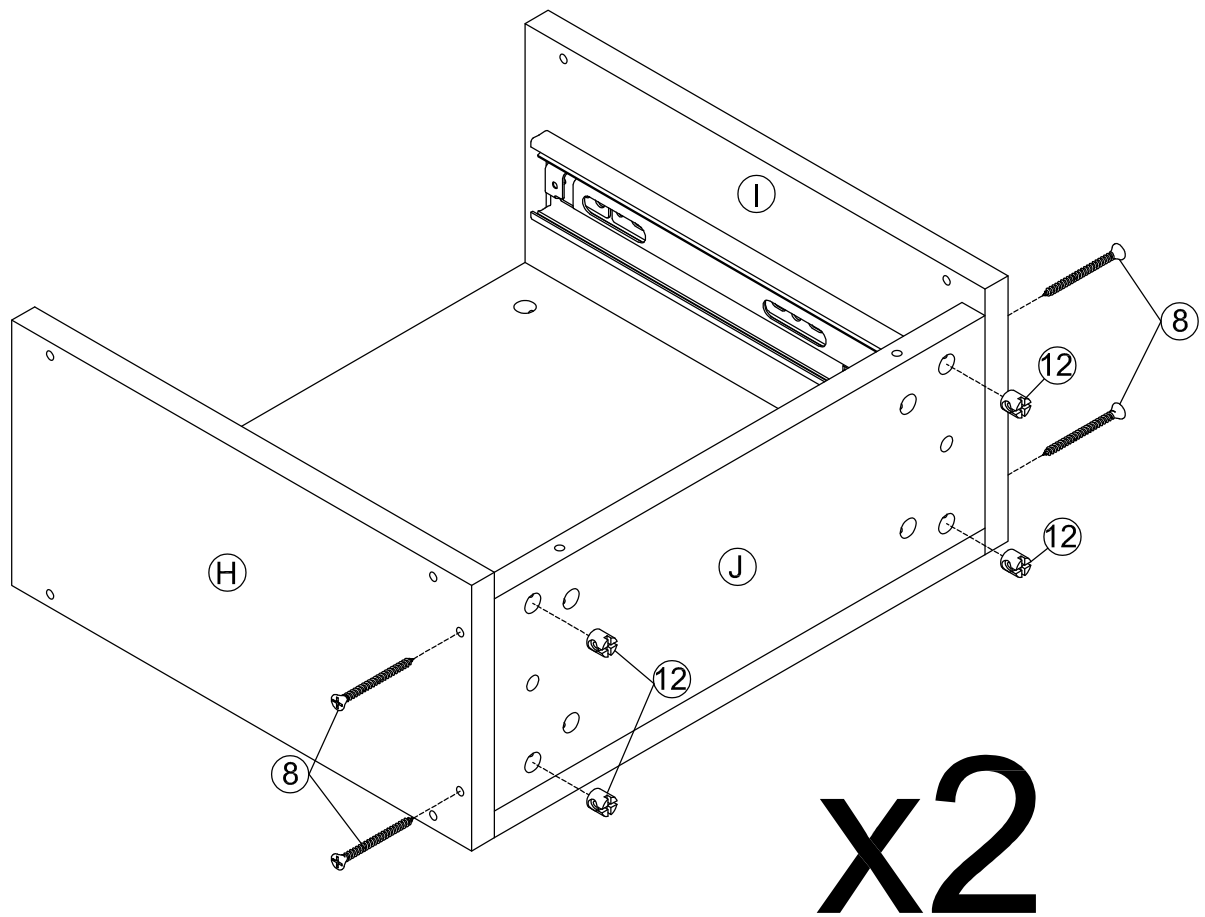


-Attach side cabinet 1 (H) & side cabinet 2 (I) to back cabinet (J) using Vis Ø4 x 50mm (8), Cross Barrel Nut Plastic (12)

Step 11:

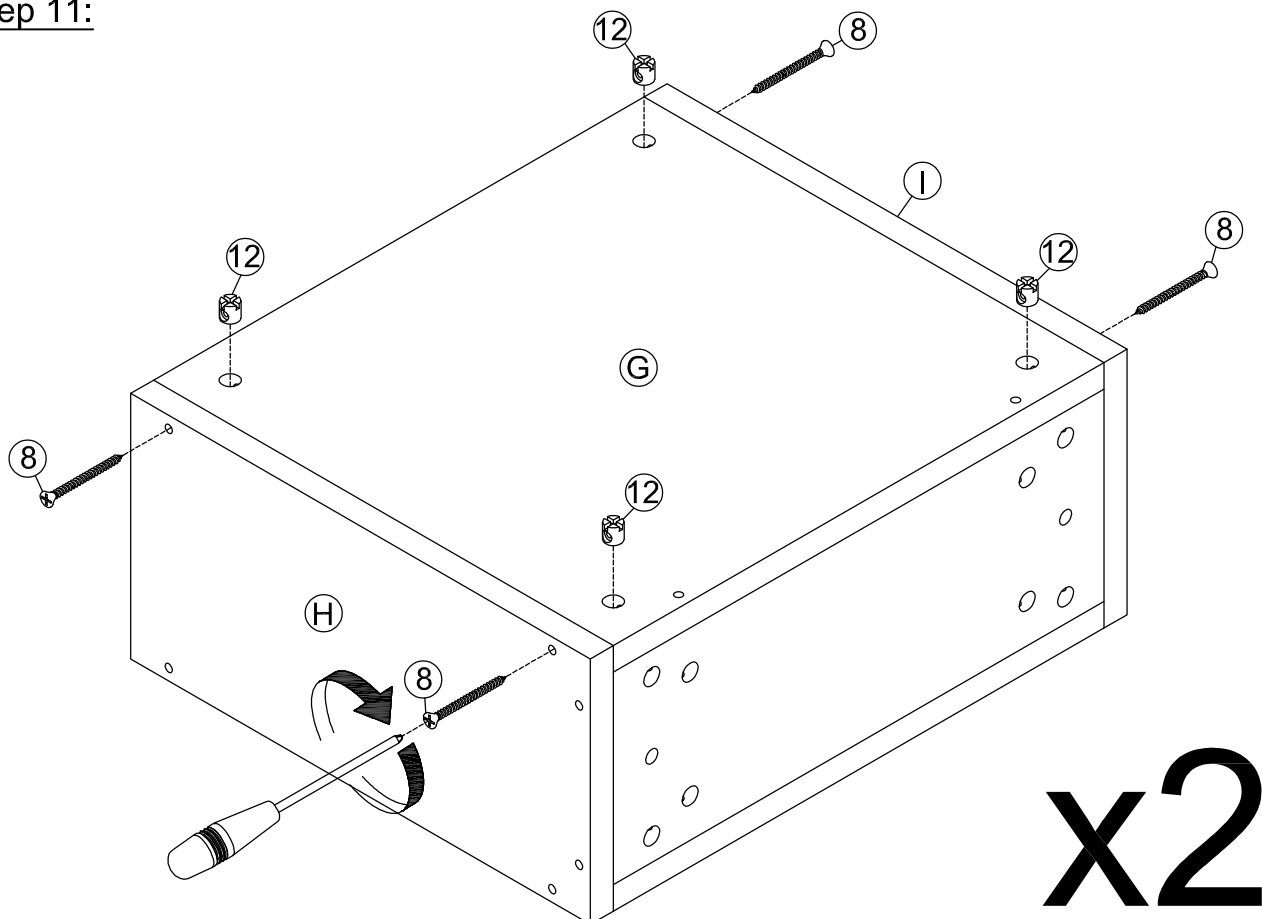

-Attach side cabinet 1 (H) & side cabinet 2 (I) to top & bottom cabinet (G) using Vis Ø4 x 50mm (8), Cross Barrel Nut Plastic (12)


Step 12:

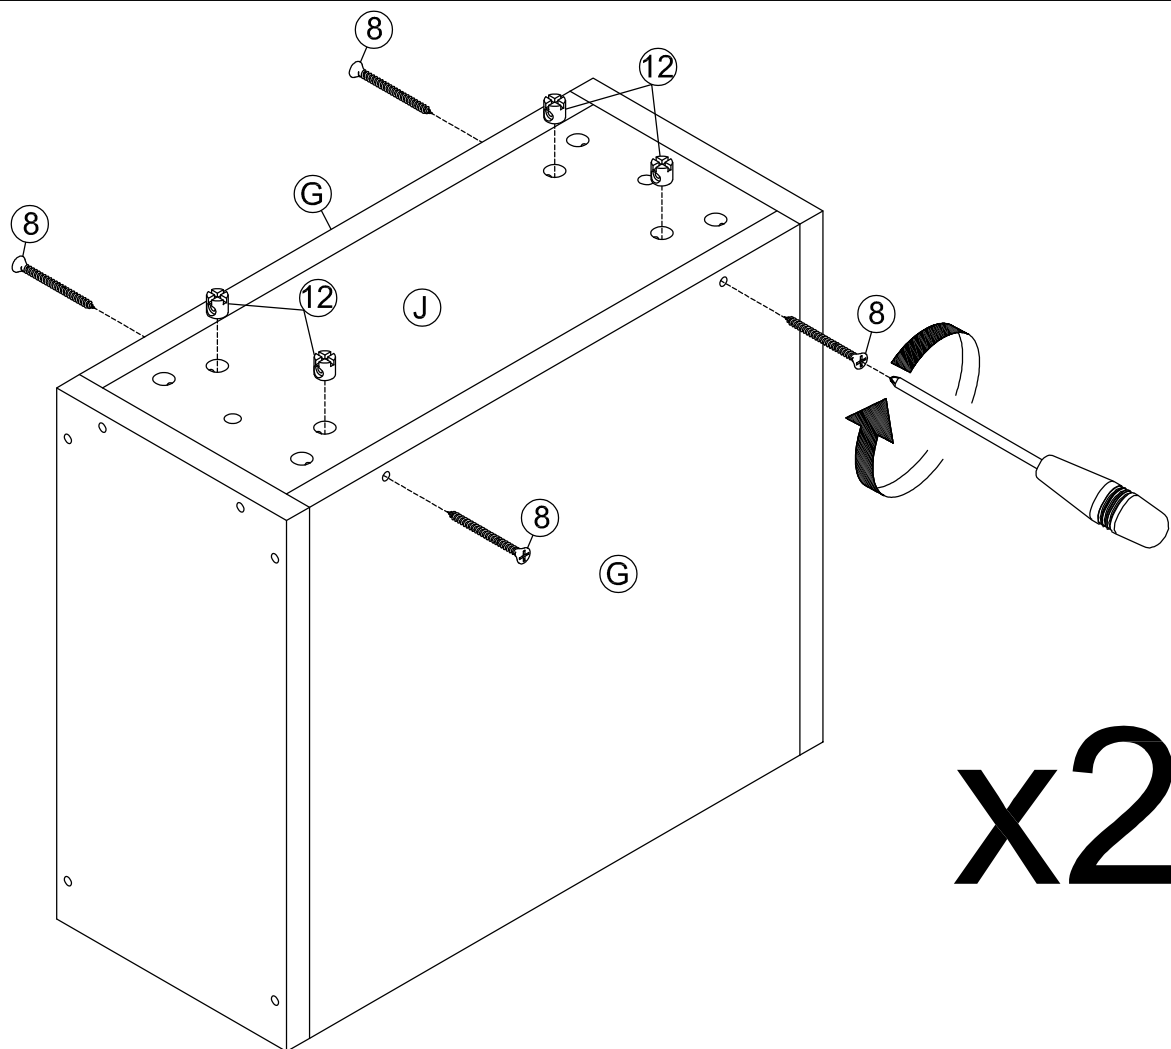

x2


- Using Vis Ø4 x 50mm (8), Cross Barrel Nut Plastic (12) connect top & bottom cabinet (G) & back cabinet (J)

Step 13:

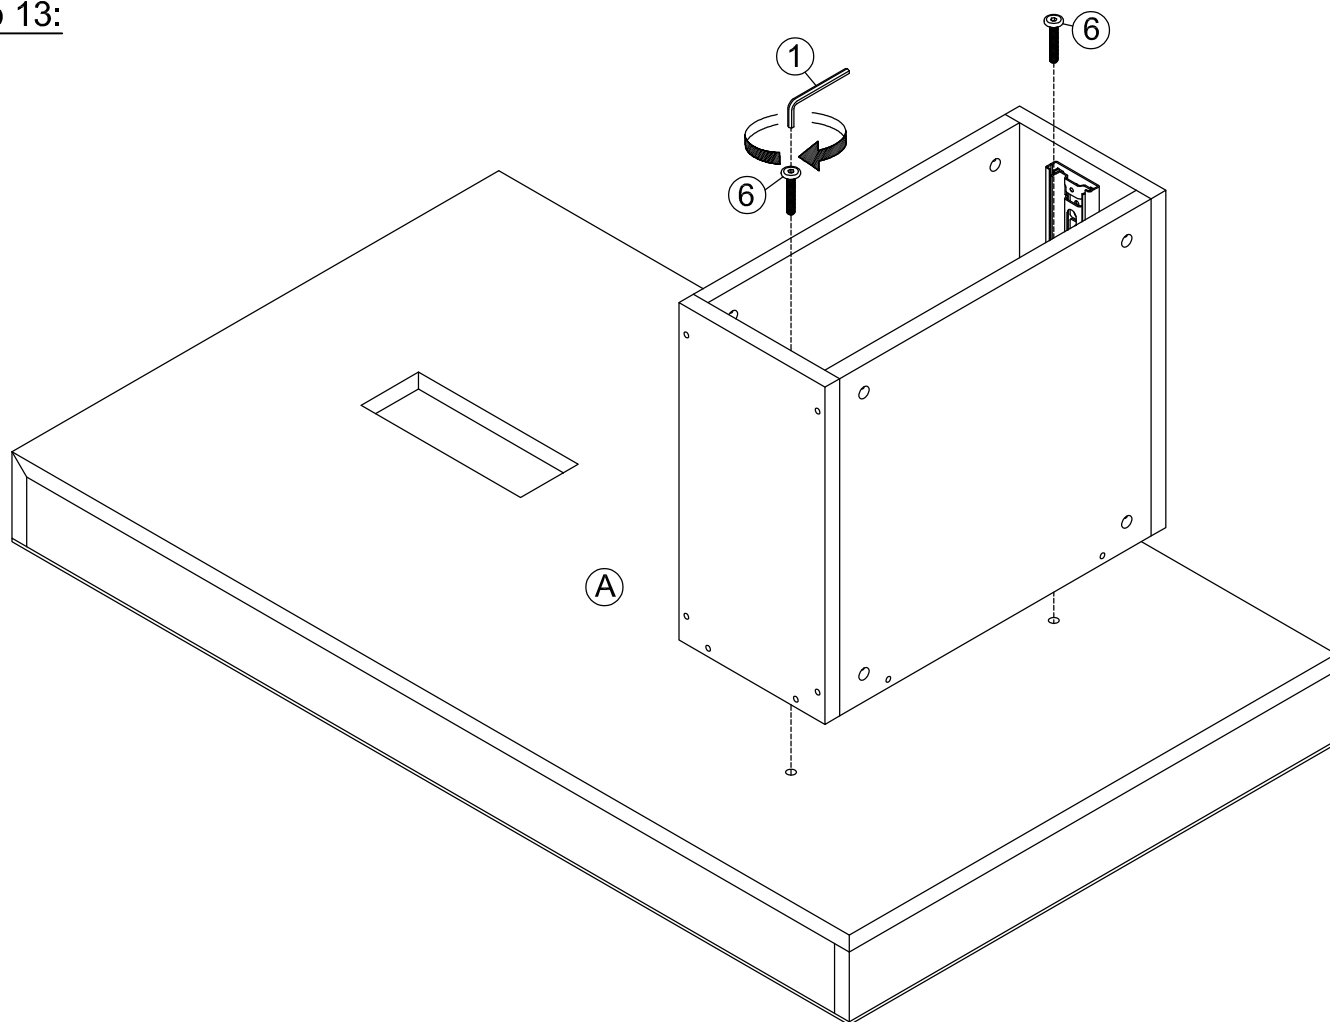


- Attach back cabinet (J) to left headboard (A) using Bolt ØM6 x 35mm (6), Allen wrench (1)

Step 14:

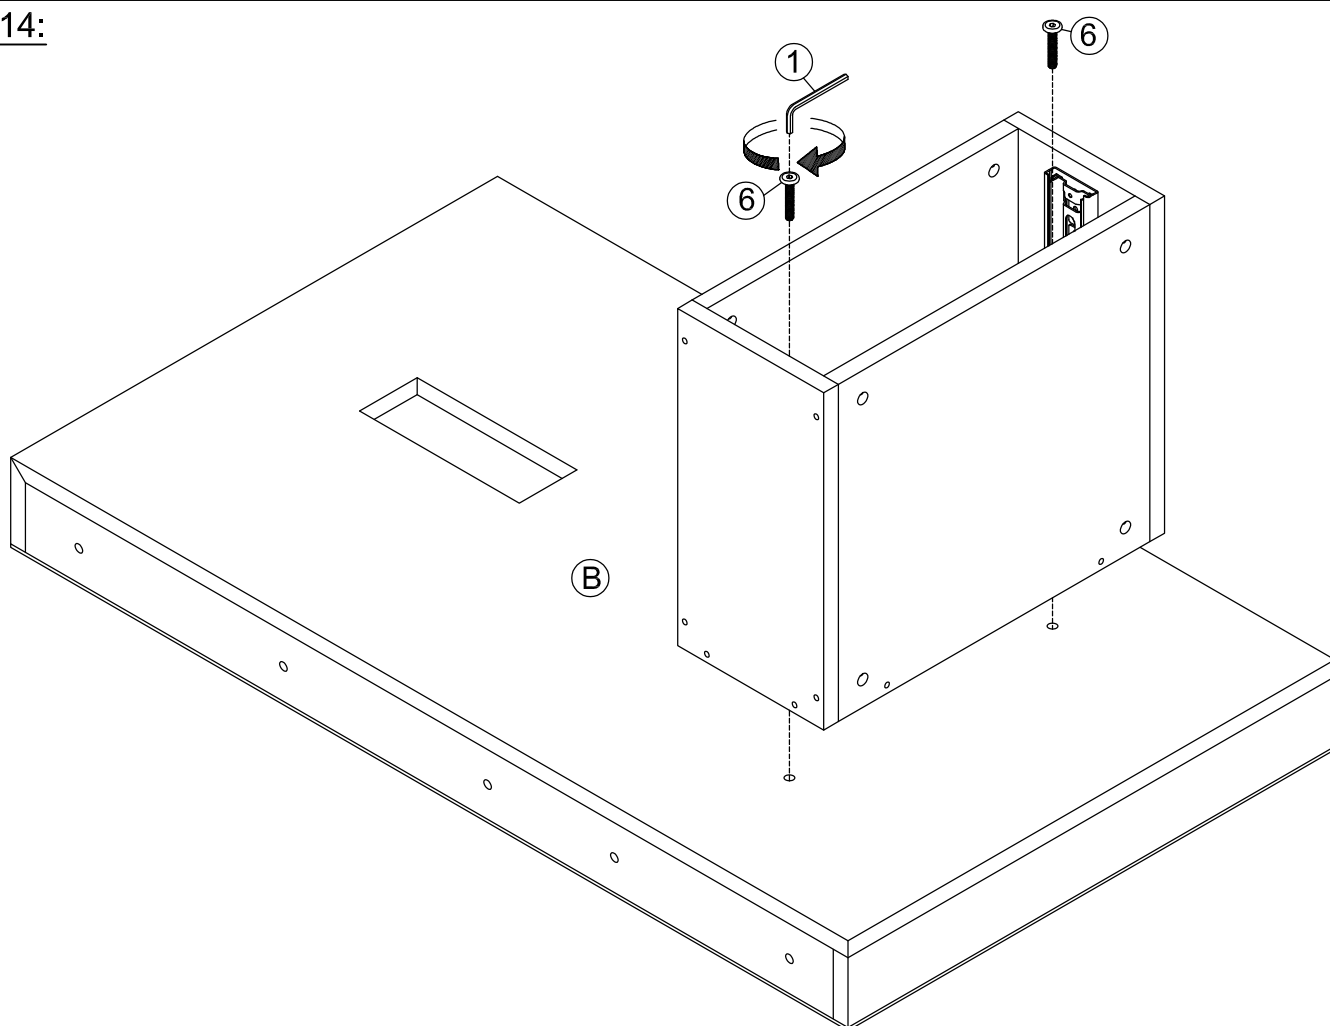


-Attach back cabinet (J) to right headboard (B) using Bolt $\varnothing$ M6 x 35mm (6) , Allen wrench (1)

Step 15:

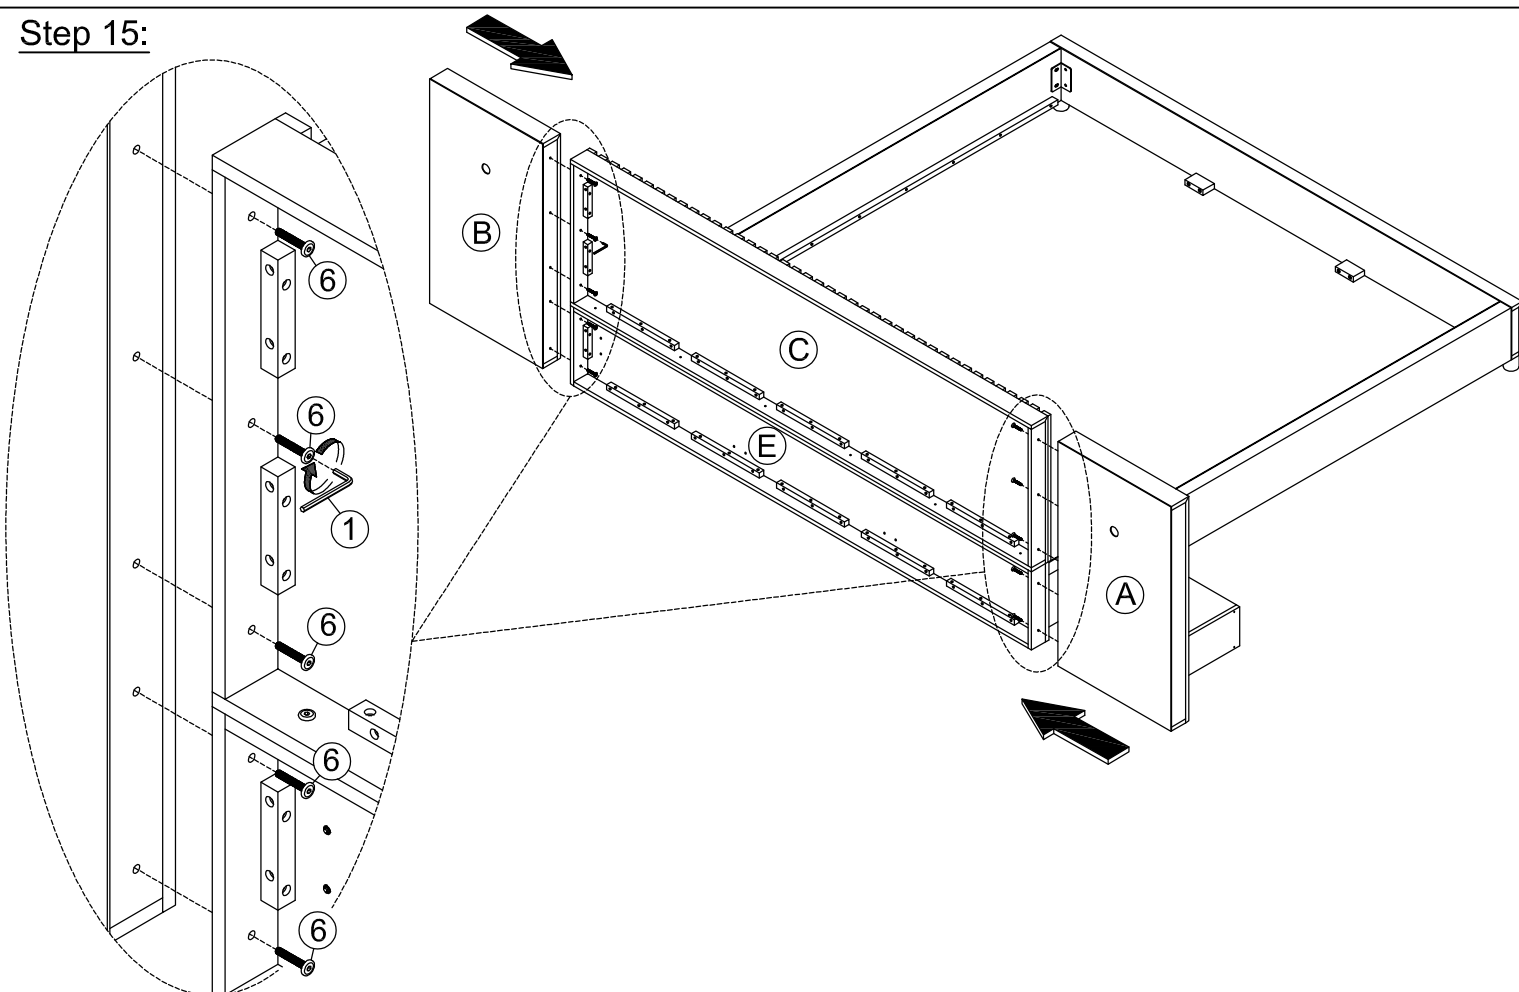


-Attach left headboard (A) & right headboard (B) to middle headboard (C) , bottom headboard (E) using bolt $\varnothing$ M6 x 35mm (6) & Allen wrench (1)

Step 16:

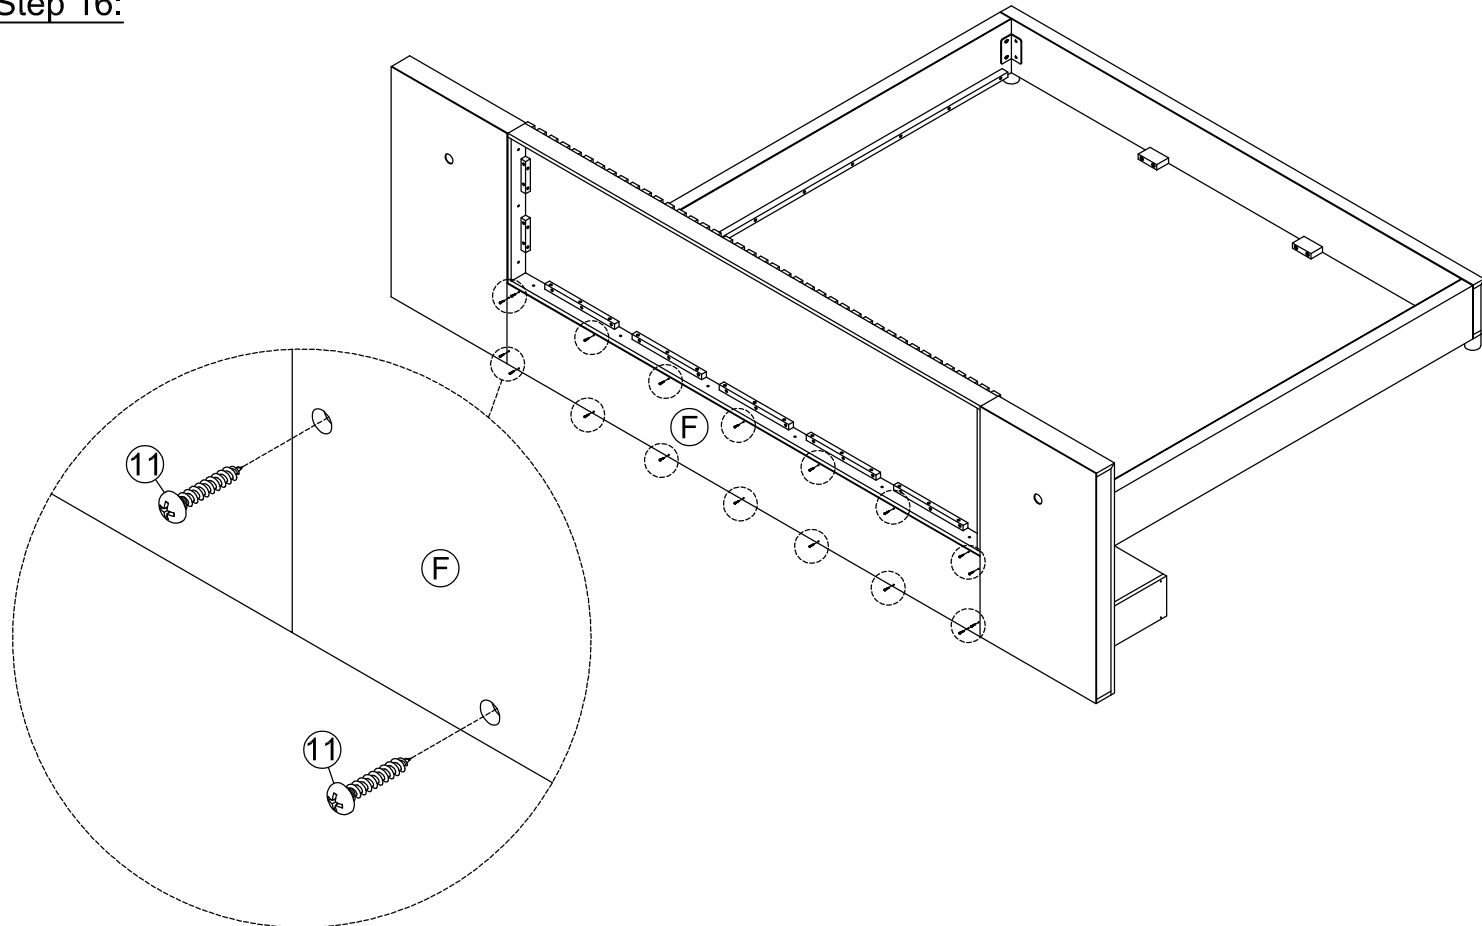

-Attach bottom panel (F) to bottom headboard (E) using Vis Ø4 x 15mm (11)


Step 17:

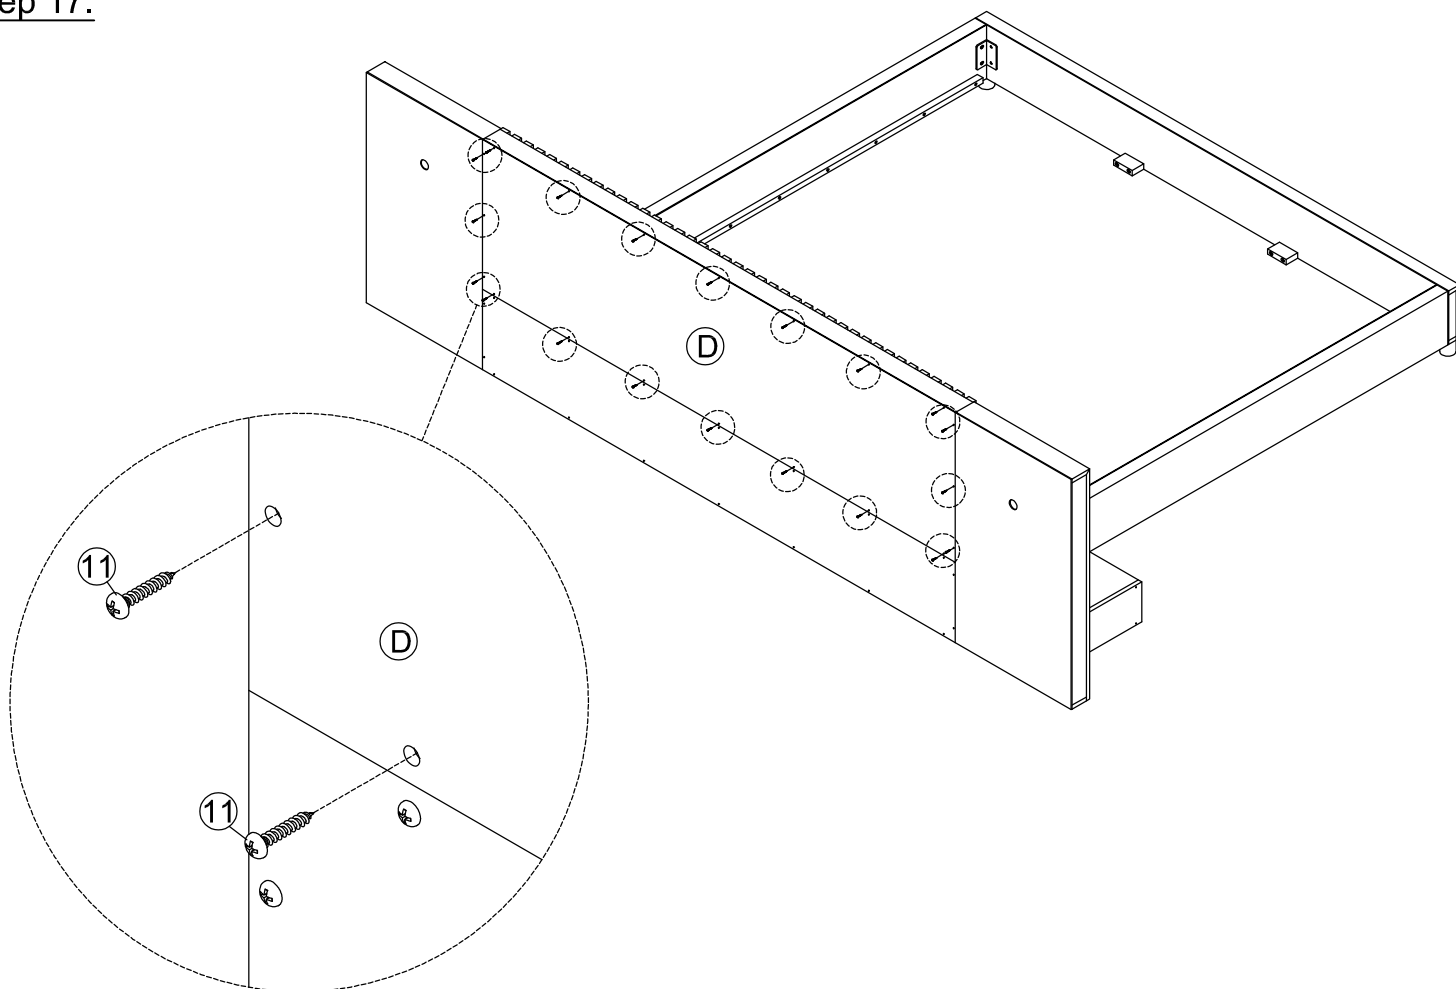

-Attach bottom panel (F) to bottom headboard (E) using Vis Ø4 x 15mm (11)


Step 18:

x2

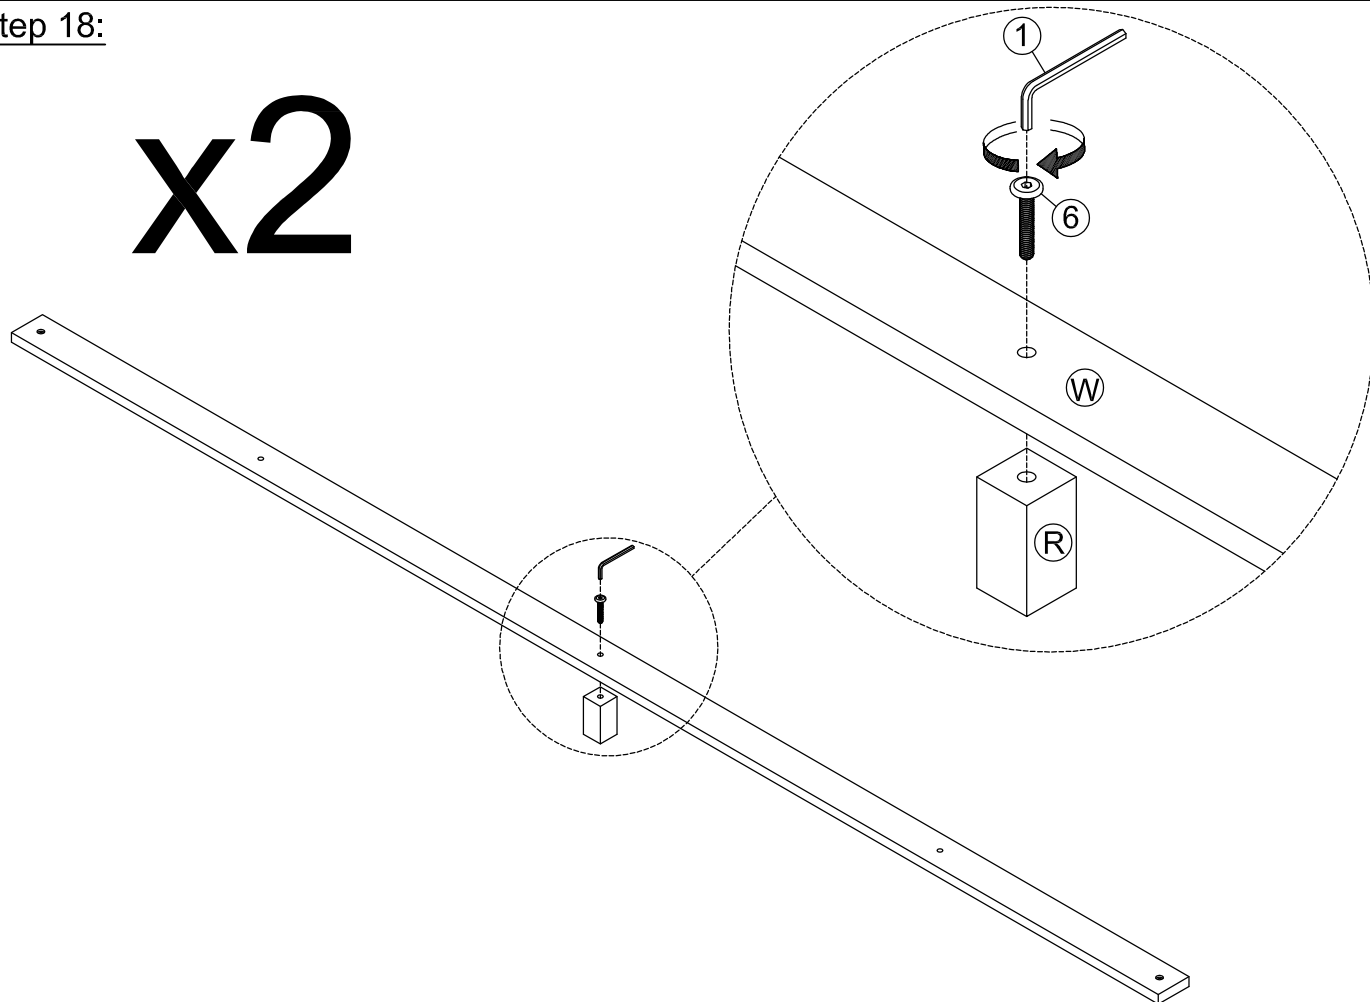


-Attach Support leg (R) to support slats (W) using Bolt ØM6 x 35mm (6), Allen wrench (1)

Step 19:

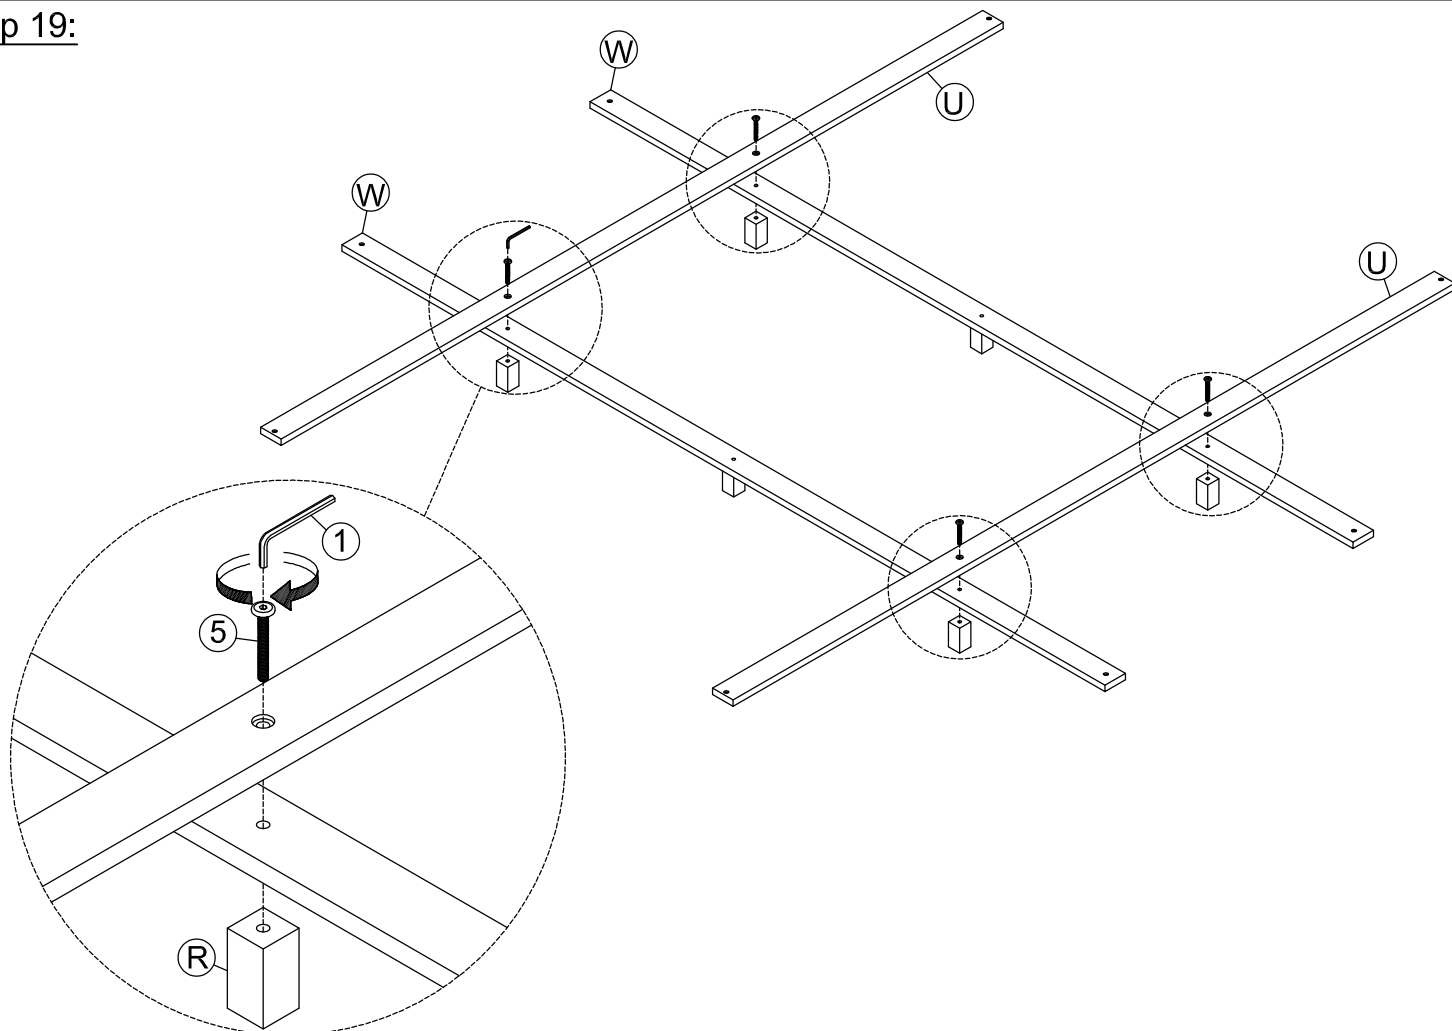


-Attach Support leg (R) to support slats (W) using Bolt ØM6 x 35mm (6), Allen wrench (1)

Step 20:

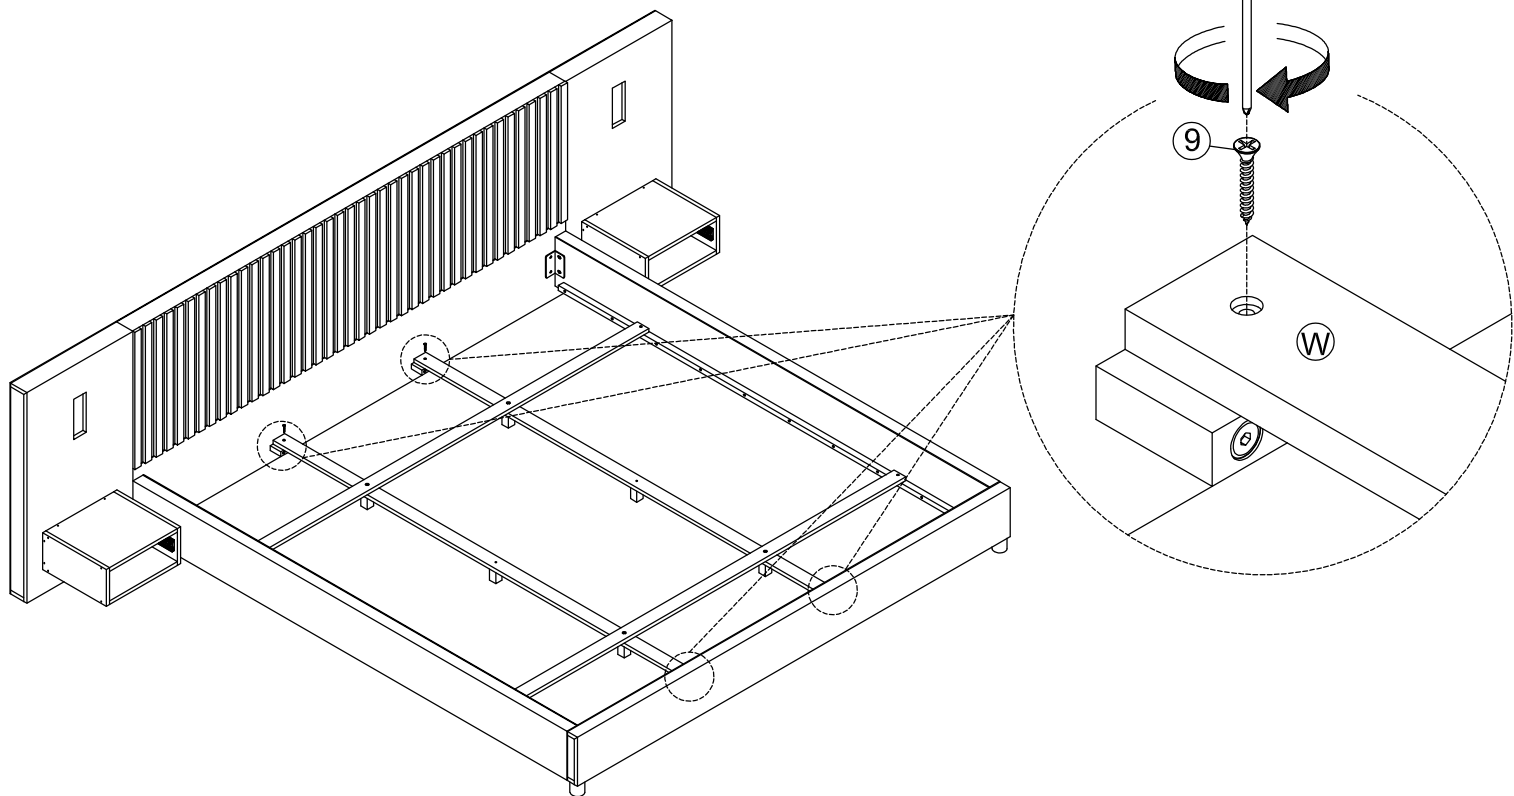

-Attach support slats (W) to wood bar (P) using Vis Ø4 x 30mm (9)

Step 21:

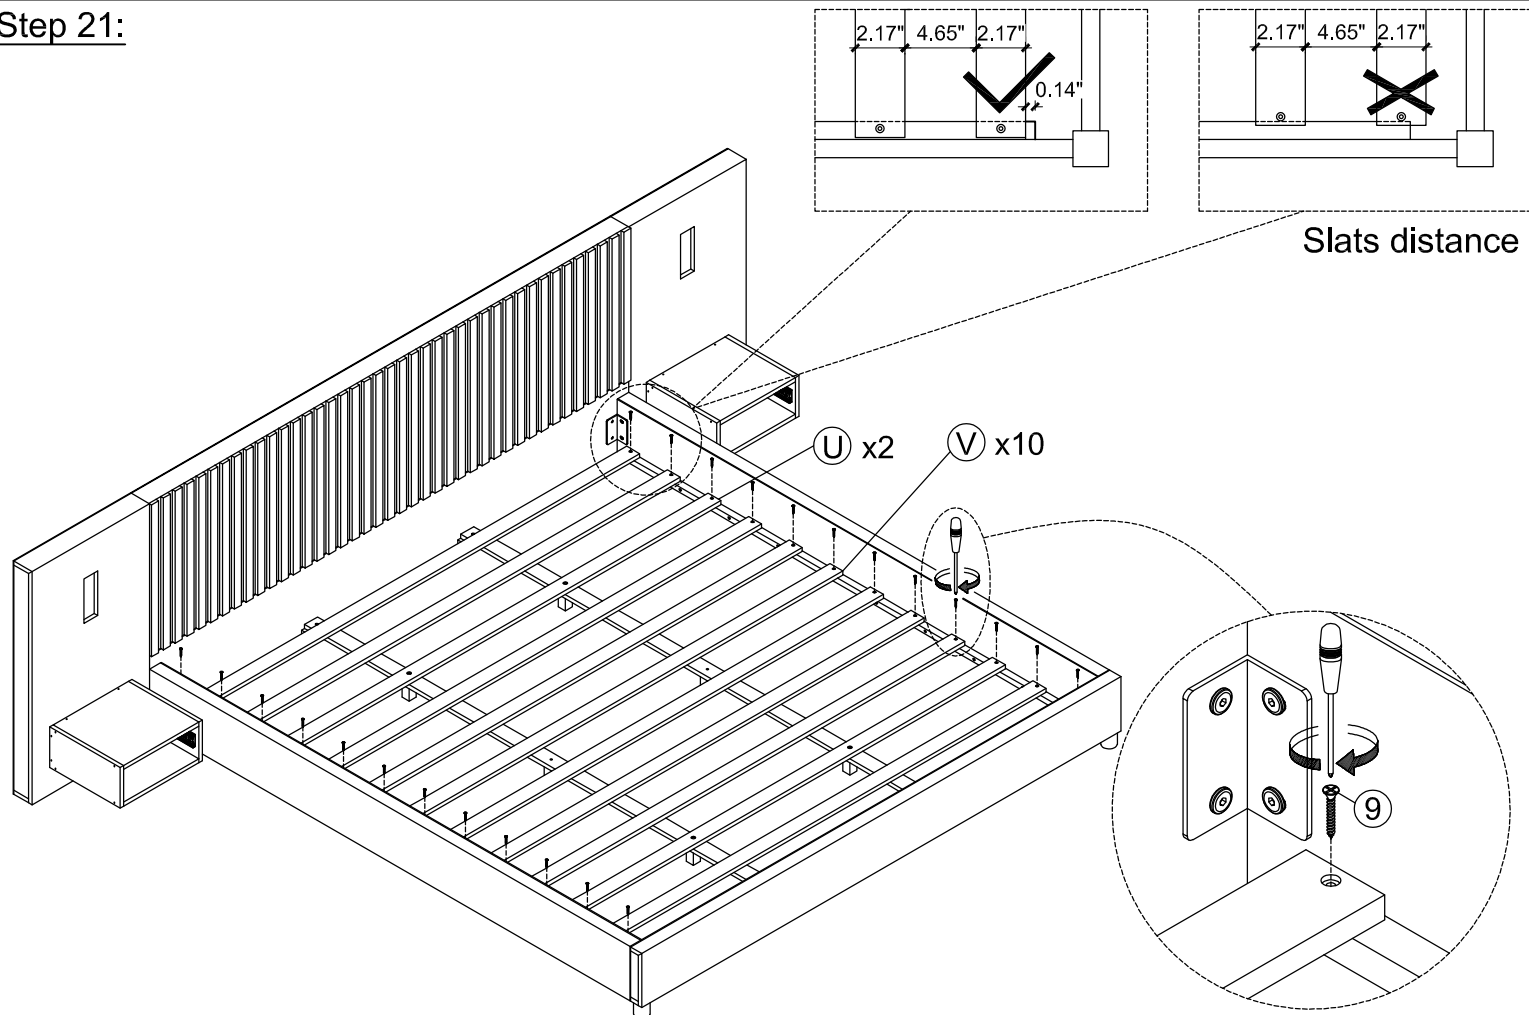


Slats distance

U x2 V x10


-Attach slats 1 (U) & slats 2 (V) to side rail (S) using Vis Ø4 x 30mm (9)

Step 22:

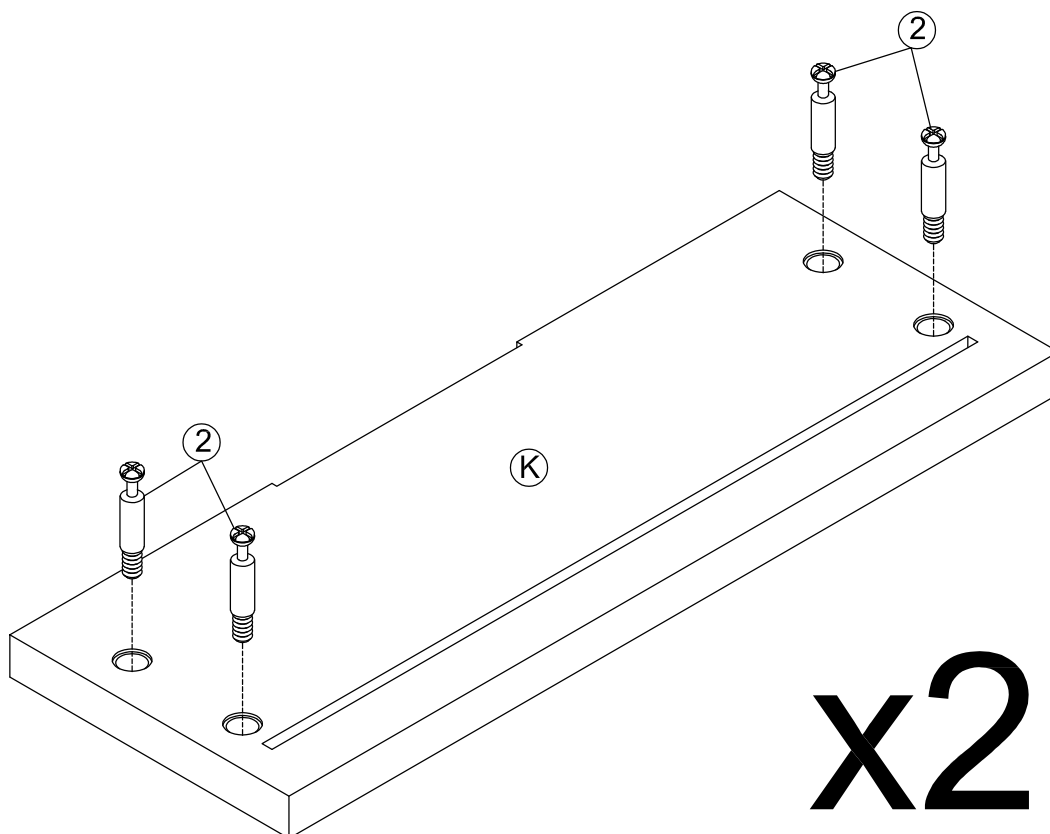


-Attach Three in one bolts (2) to front drawers K

Step 23:

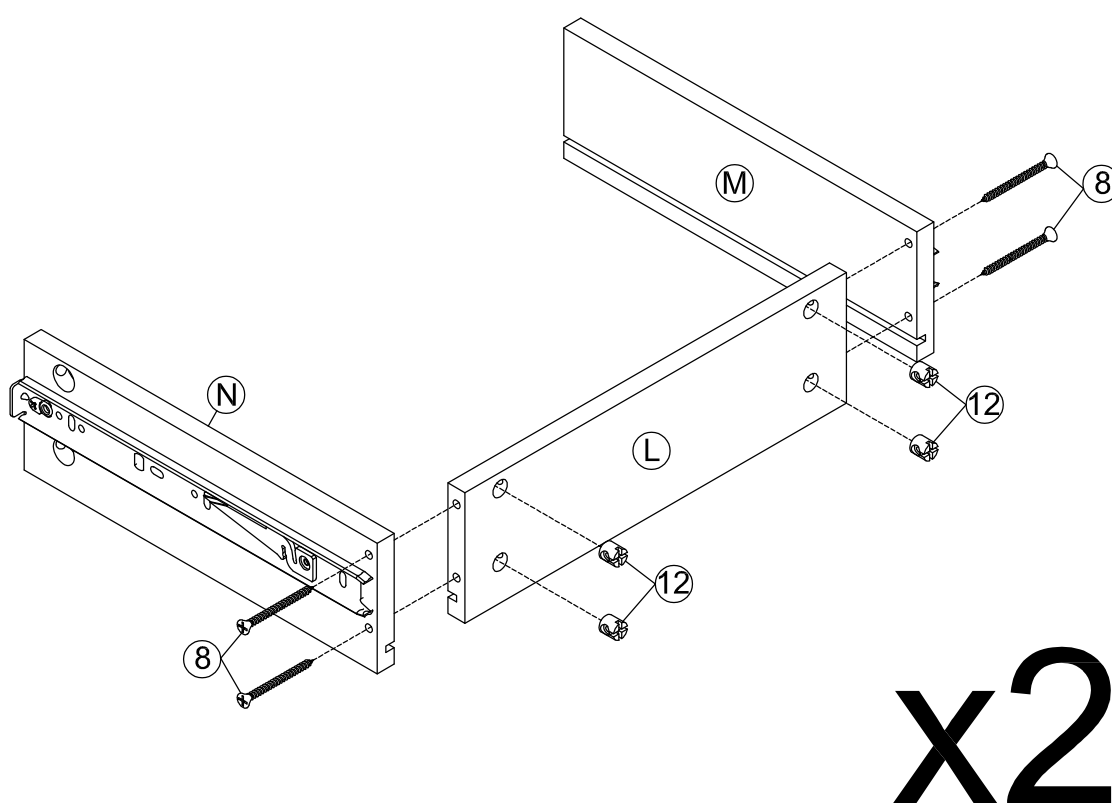

-Attach back drawers (L) to left drawers (M) & right drawers (N) using Vis Ø4 x 50mm (8) , Cross Barrel Nut Plastic (12)


Step 24:

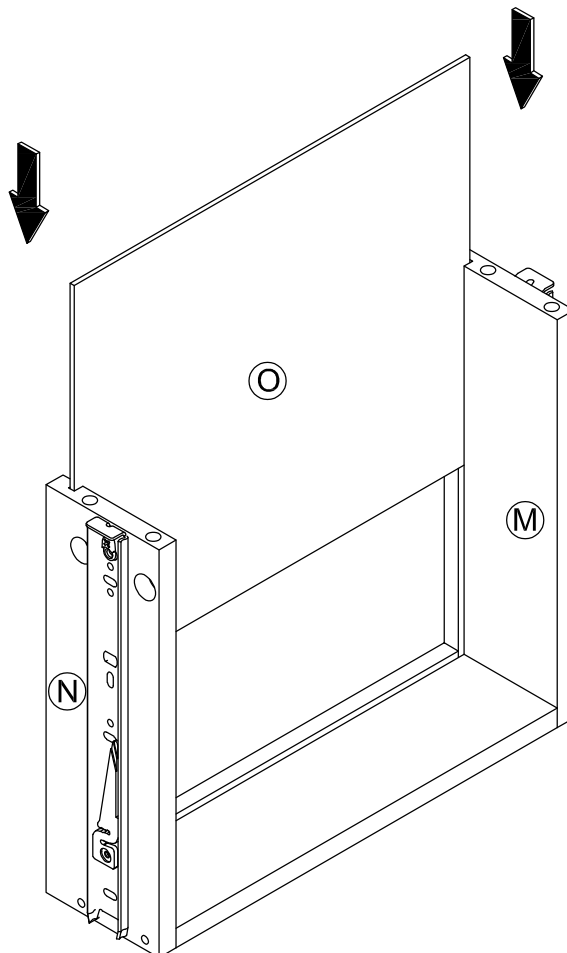

x2

-Attach bottom drawers (O) to left drawers (M) & right drawers (N)


Step 25:

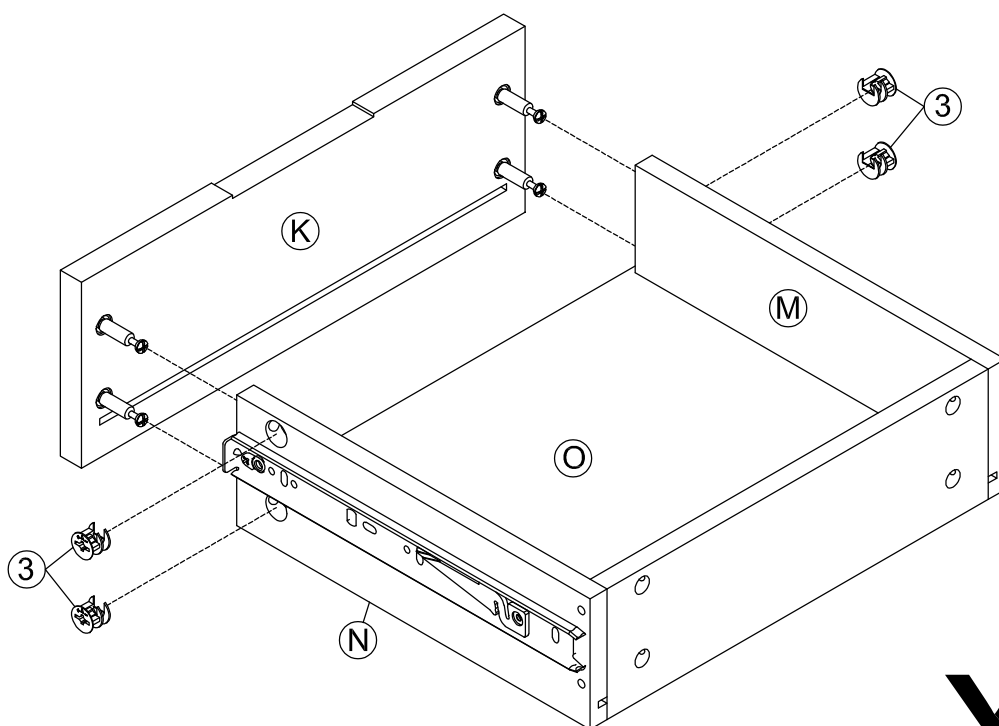

x2

-Attach front drawers (K) to left drawers (M) & right drawers (N) using Three in one locks (3)


Step 26:

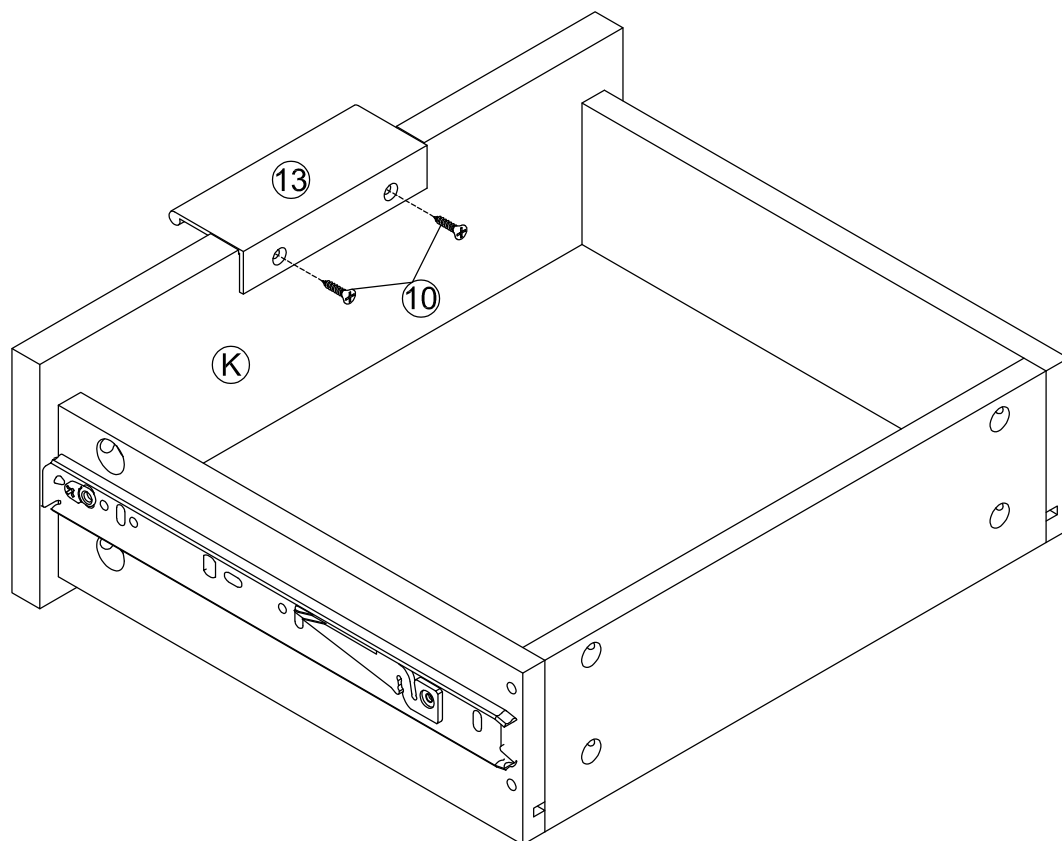

x2


-Attach handle ⑬ to front drawers (K) using Vis Ø3 x 12mm ⑩

Step 27:

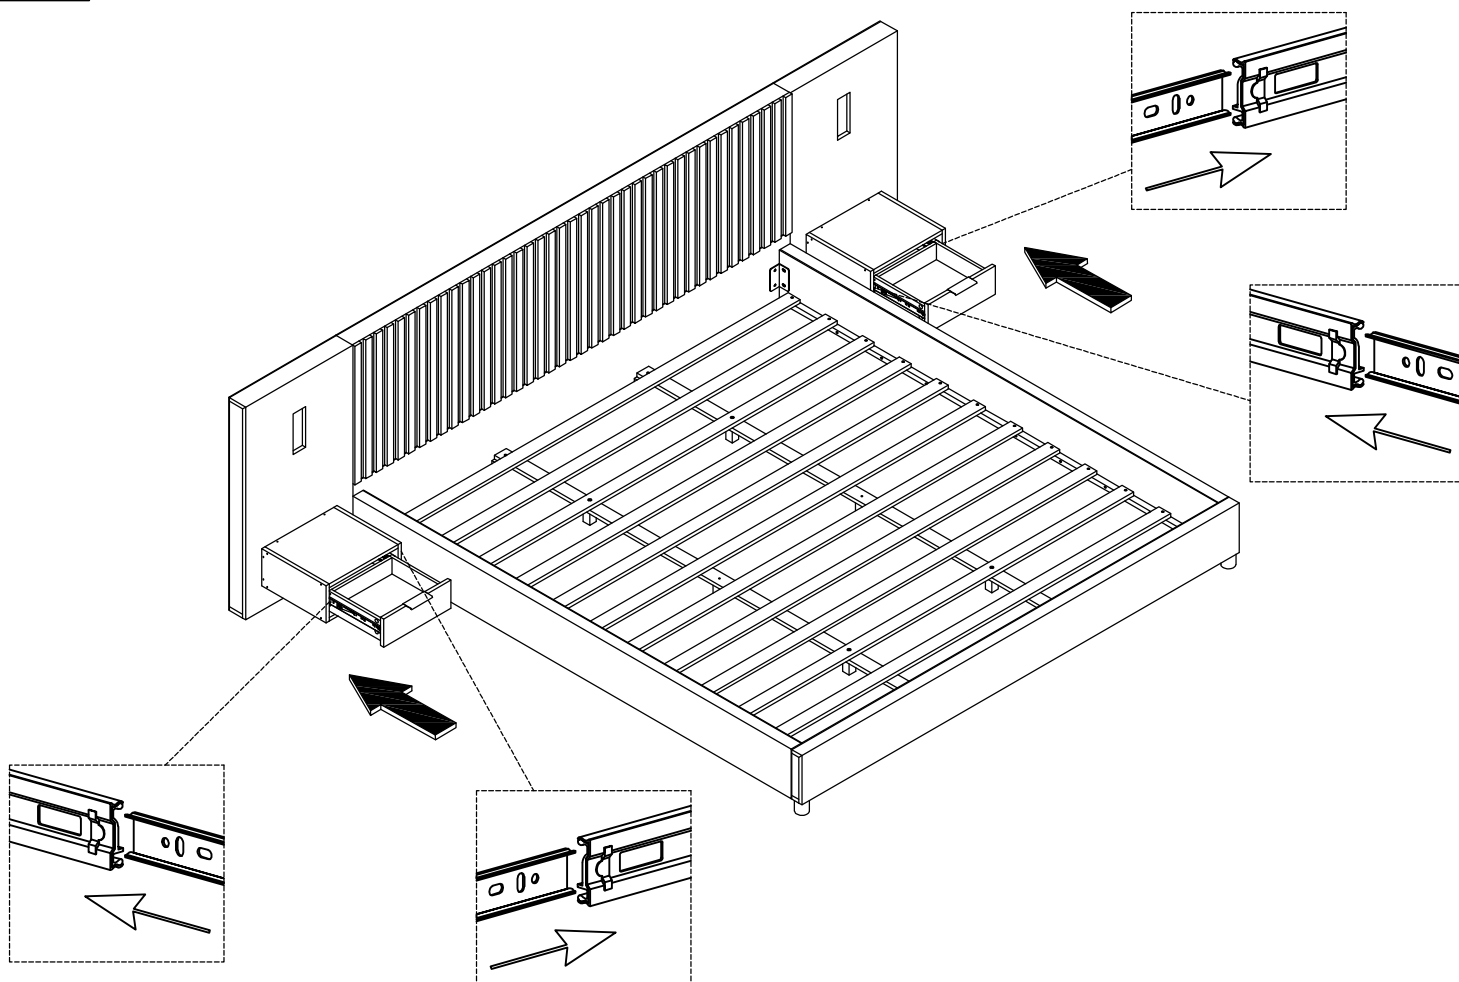


- Attach left drawers (M) & right drawers (N) to side cabinet 1 (H) & side cabinet 2 (I)


Step 28:

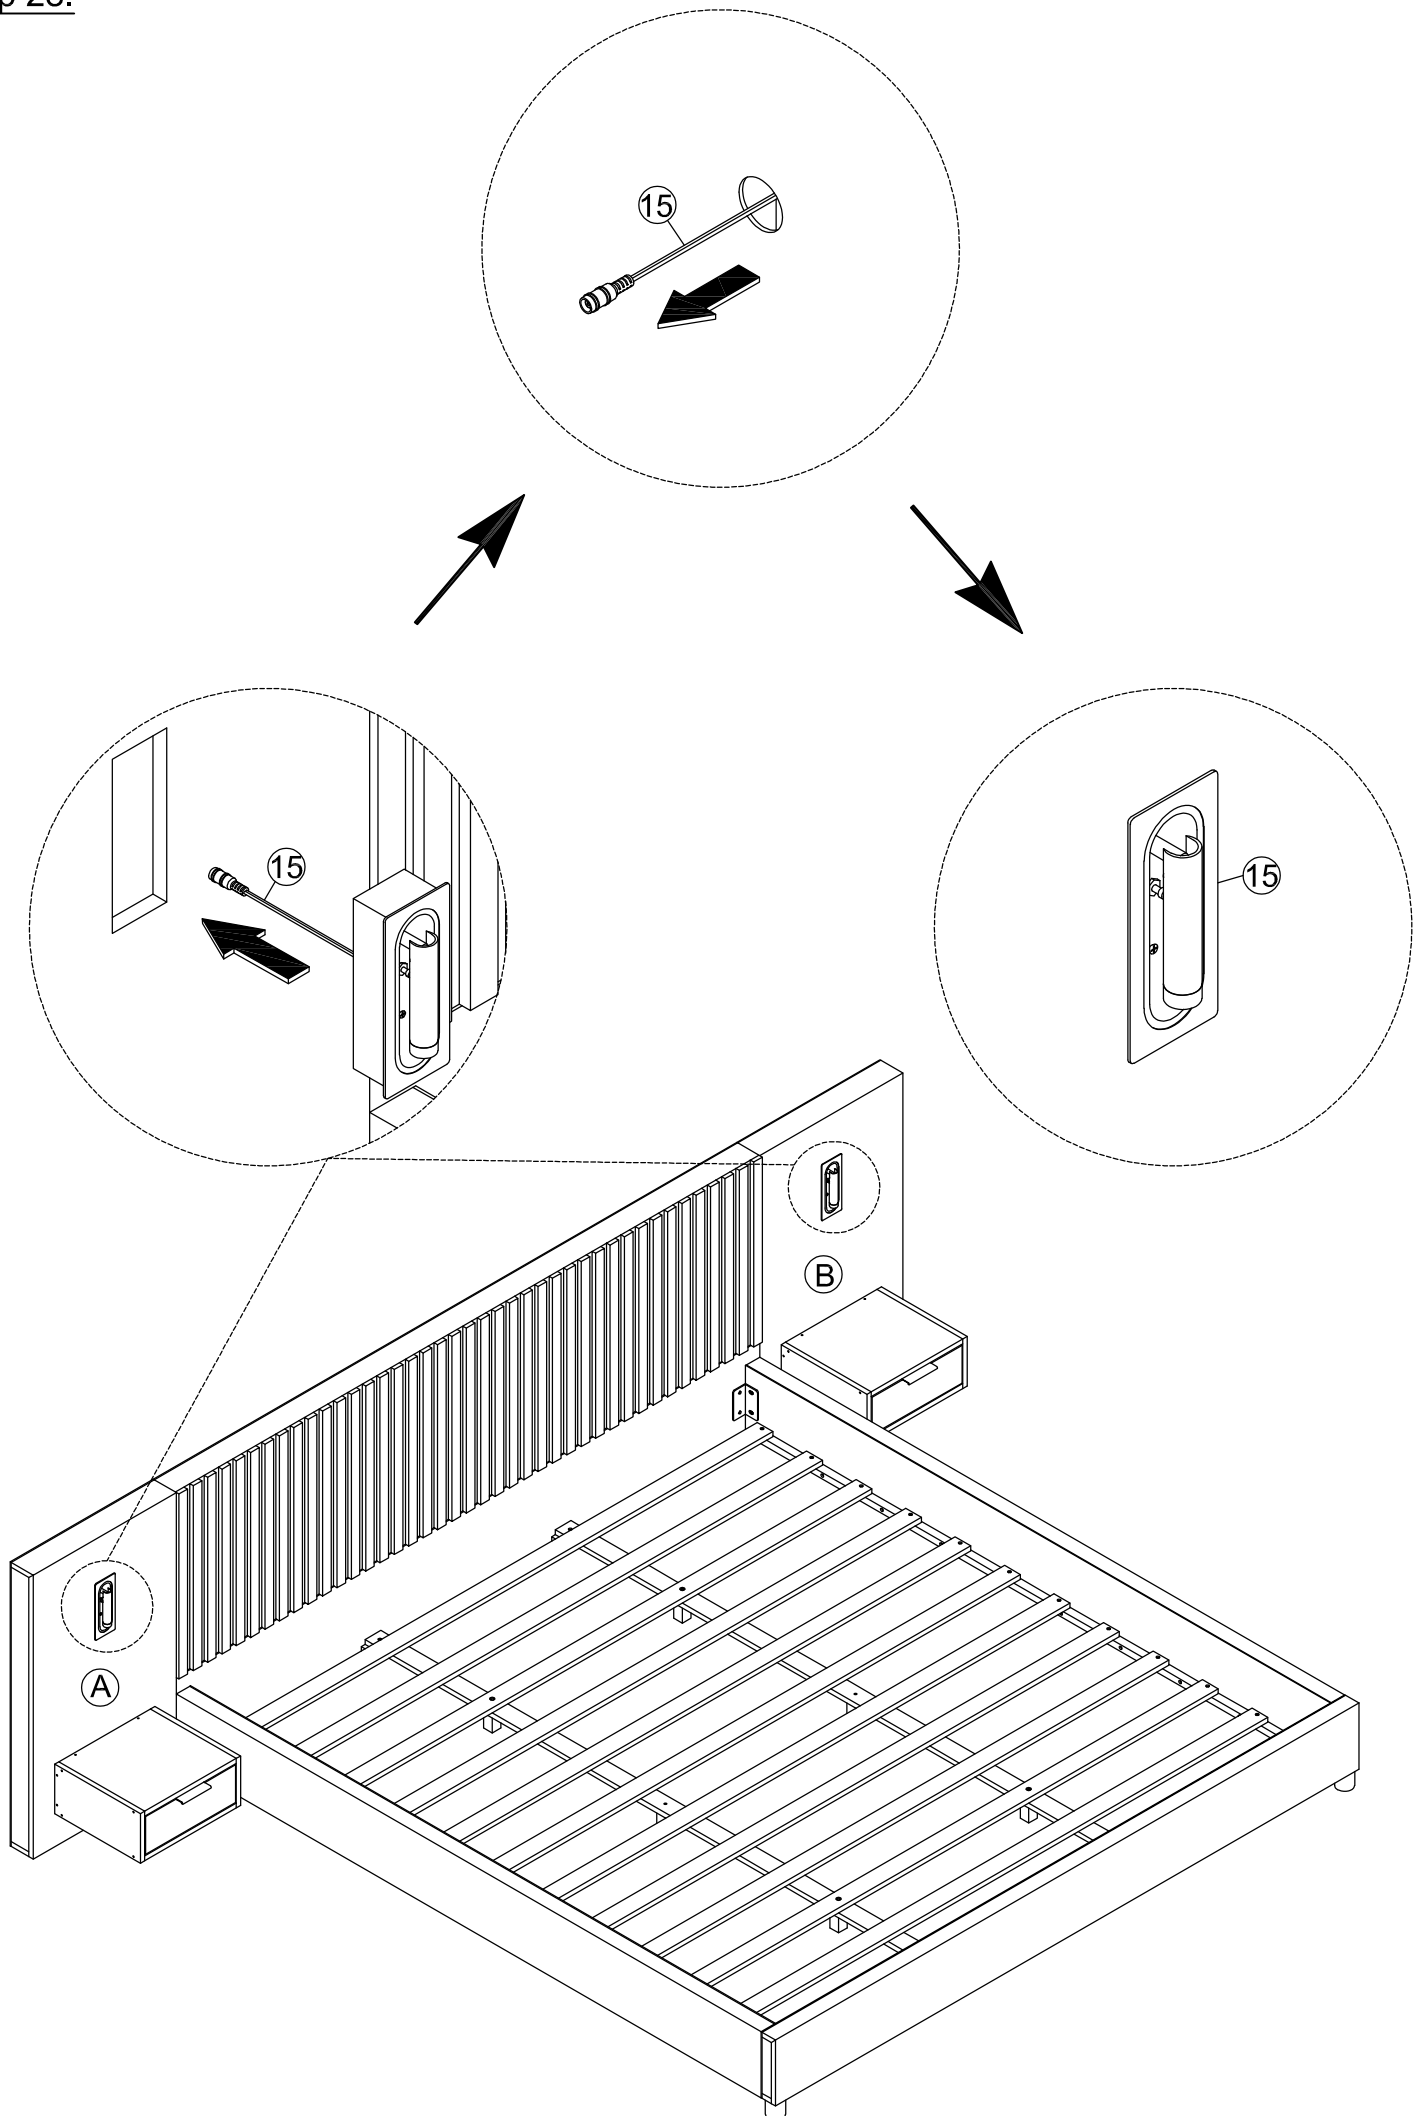

-Attach LED (15) to left headboard A & right headboard B

Step 29:

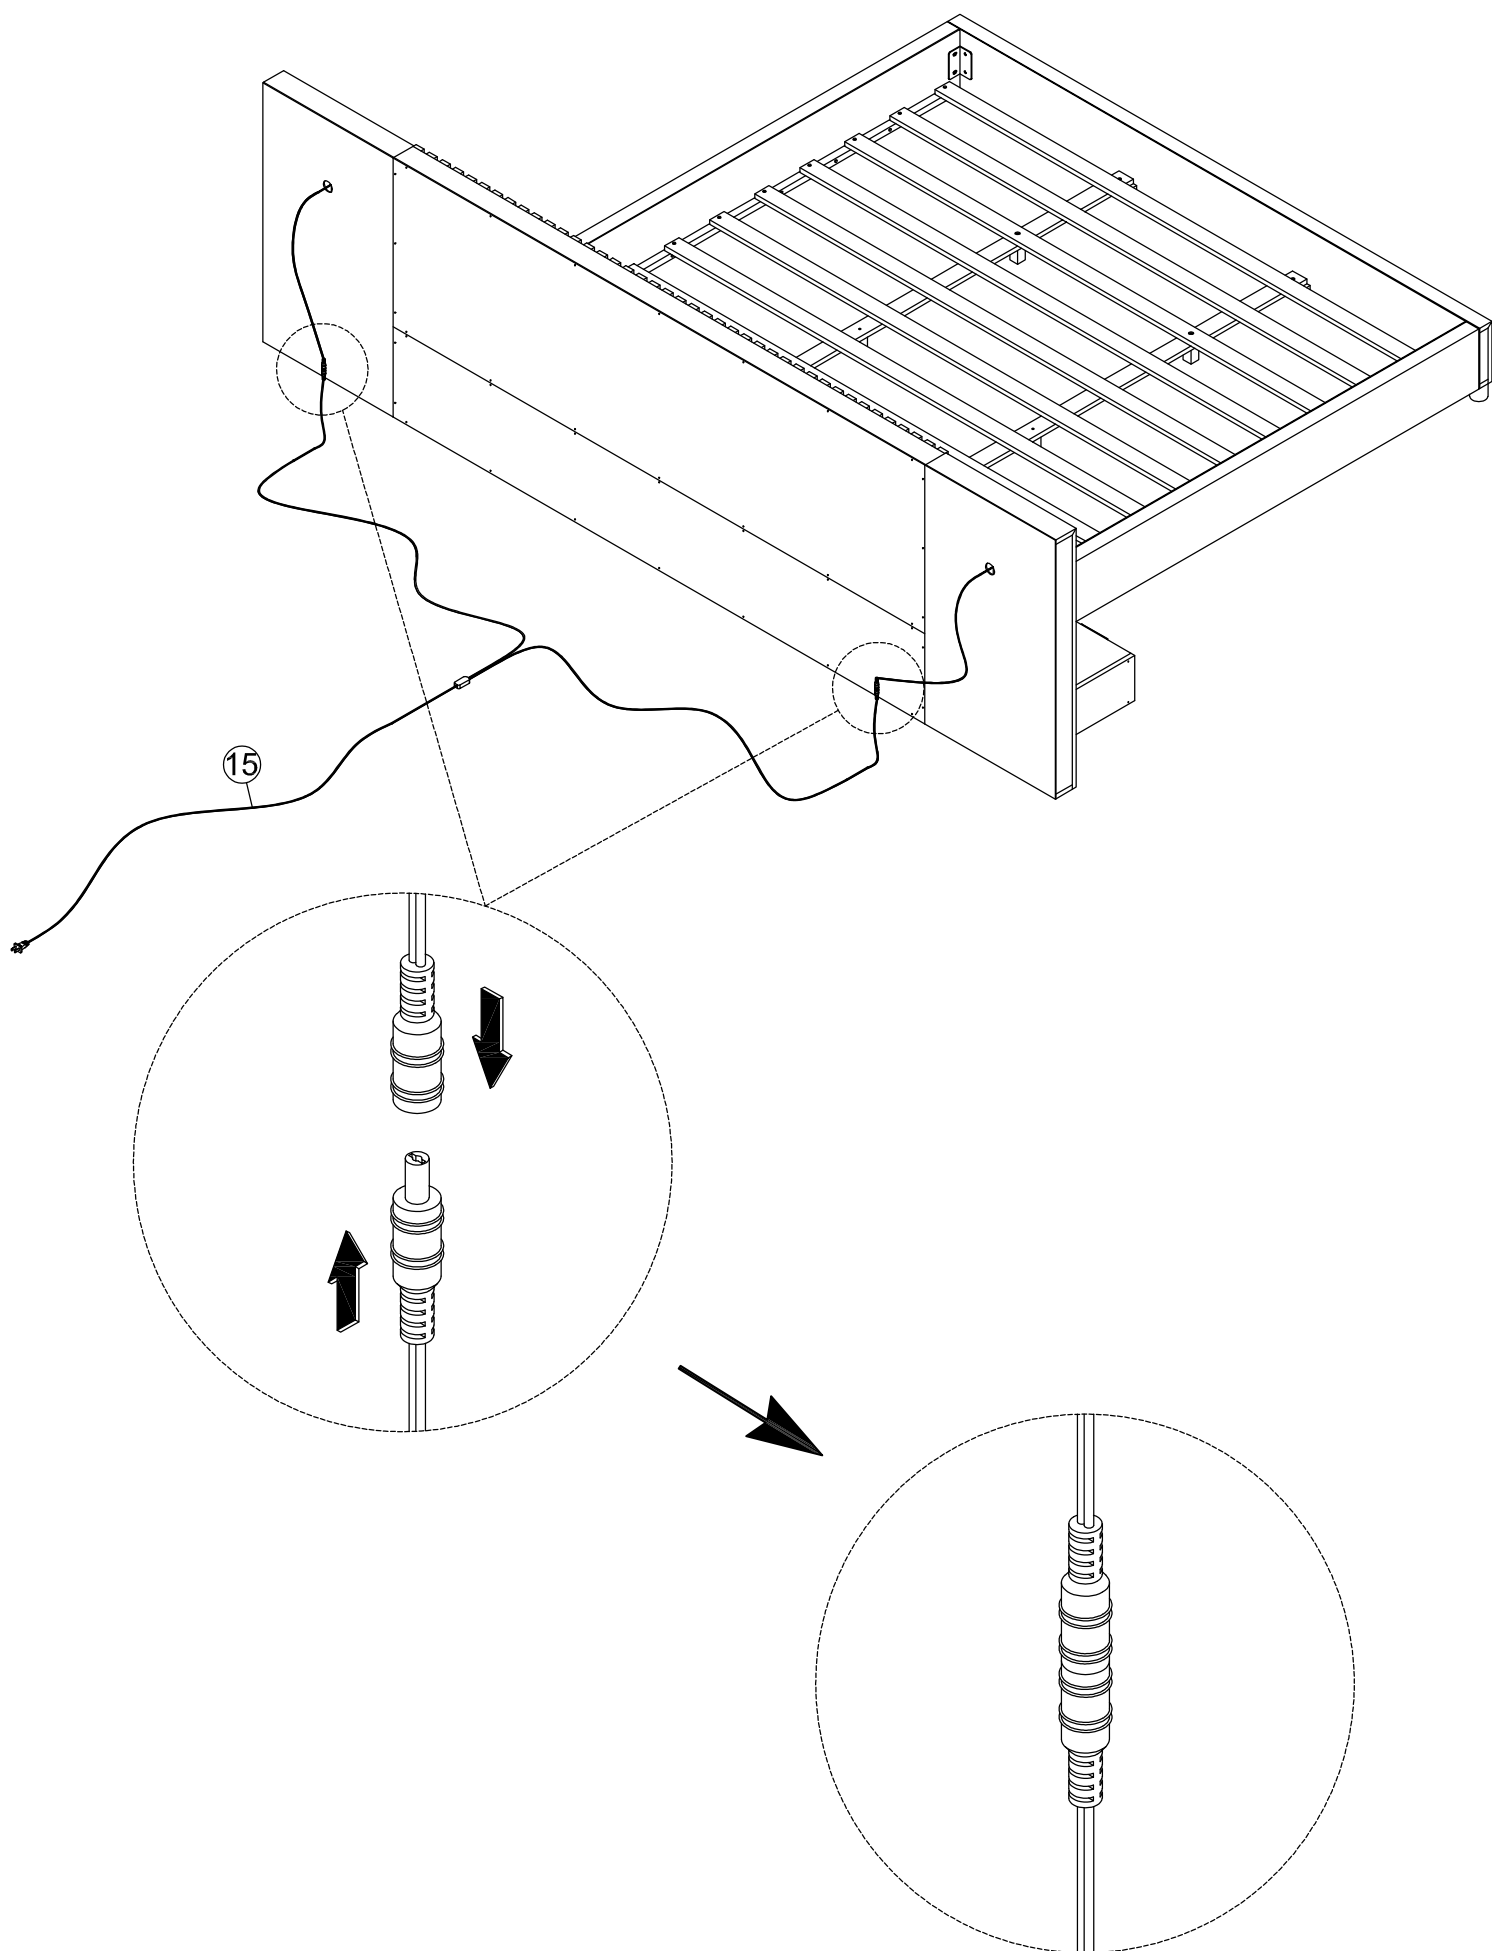

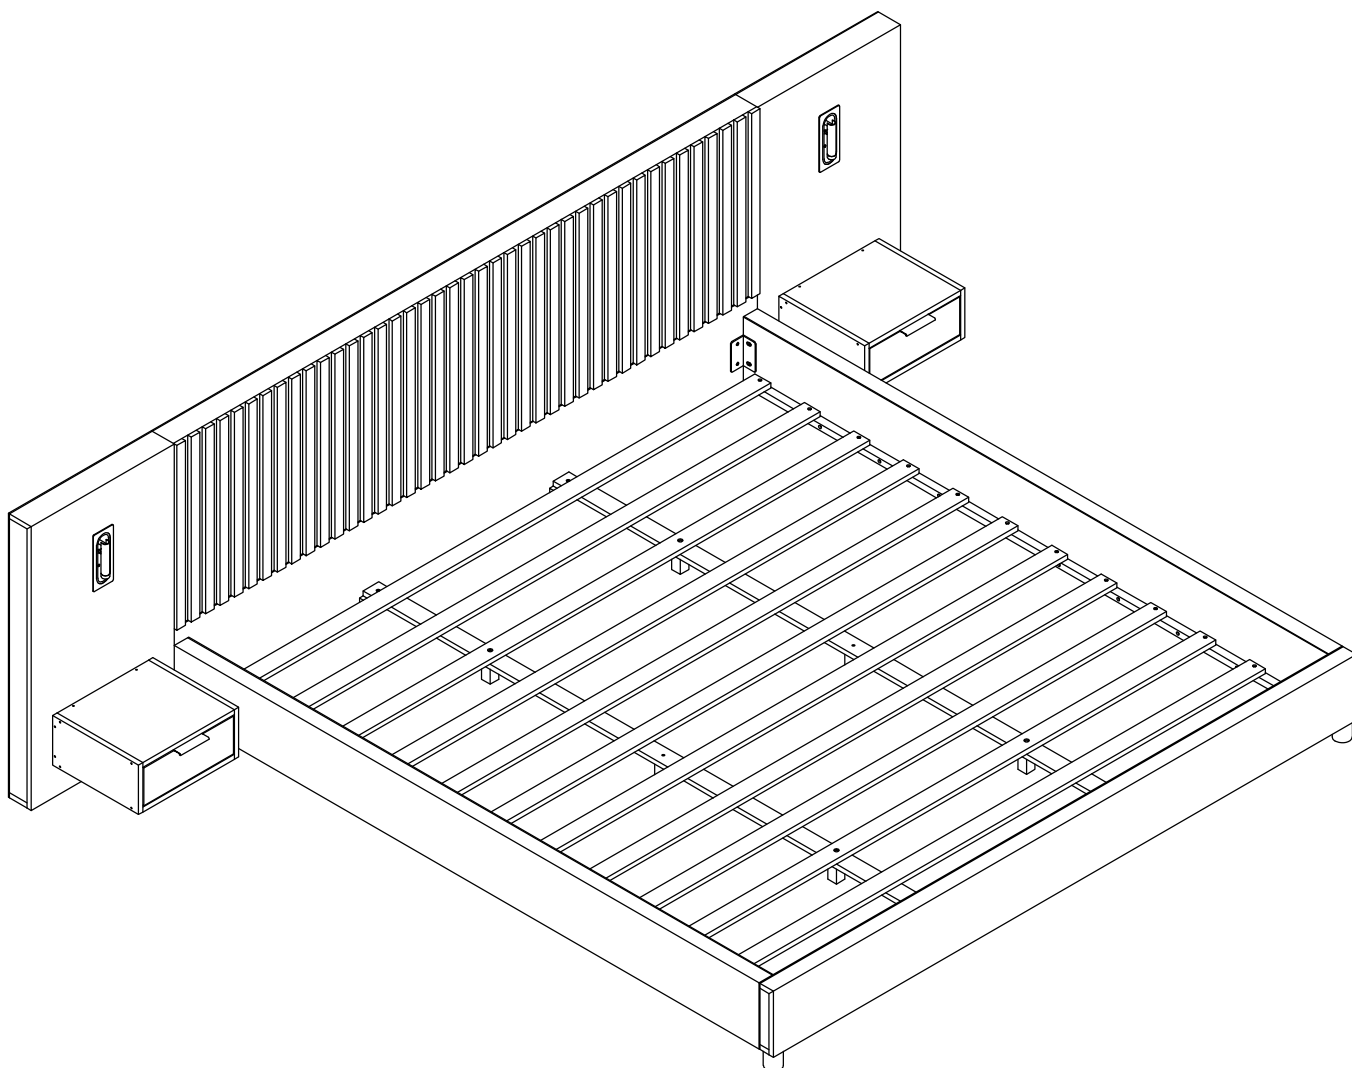

Inspect the Bed and make sure all parts are adequately connected.
Adjust the Levelers to desired height to avoid wobbles.
Your bed is ready for use.

CARE INSTRUCTIONS:

Hardware may loosen overtime. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.